
Assembly Instructions

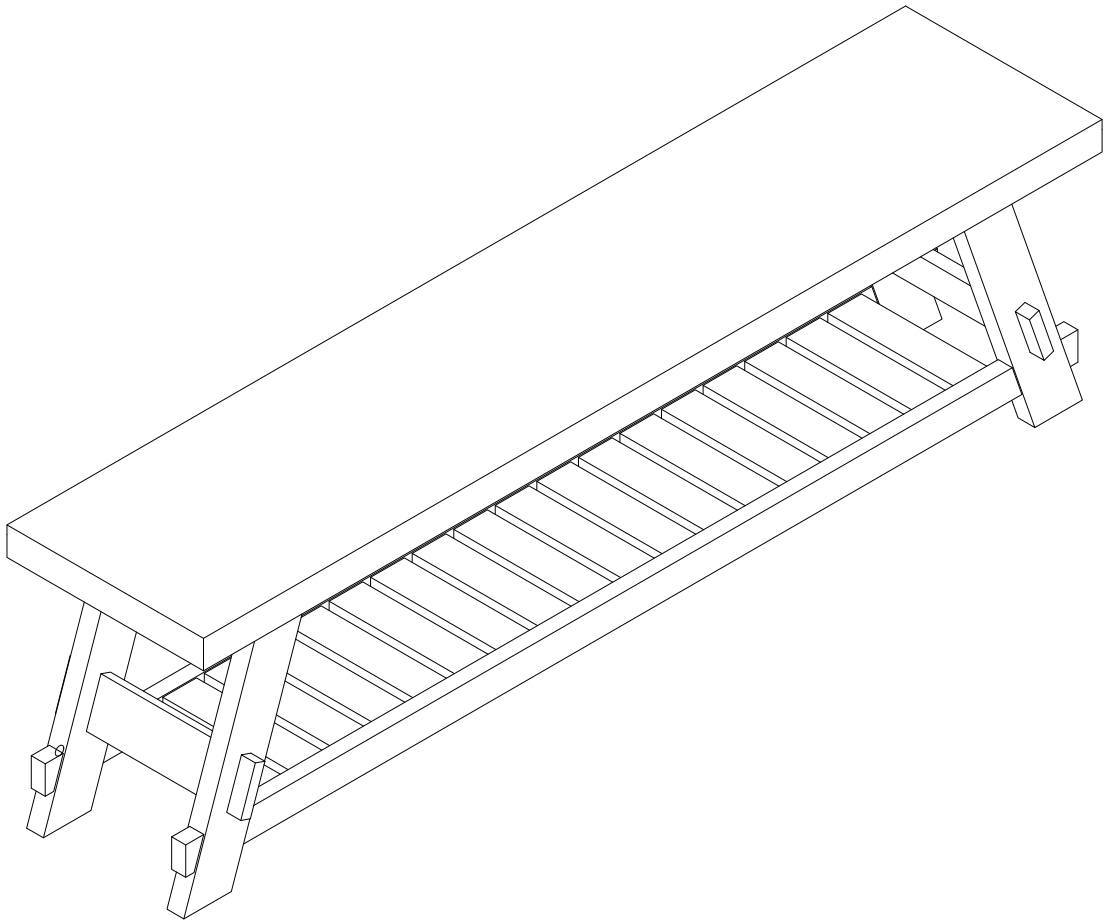


Side Chair

Model No.
HOGA-QQ0010

Contact Us


We're here to help you.

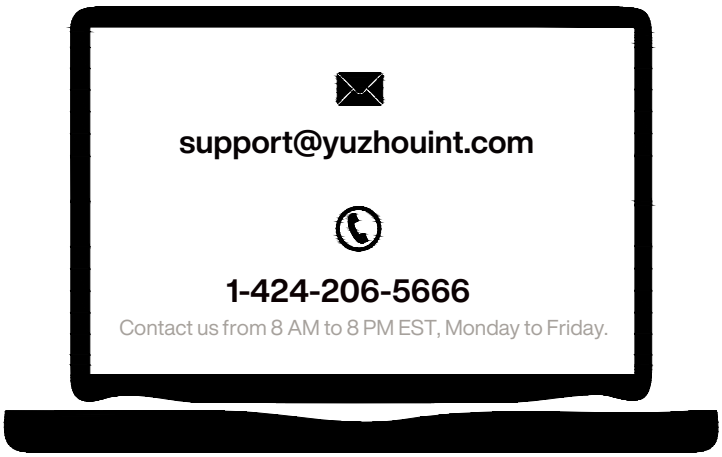


Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

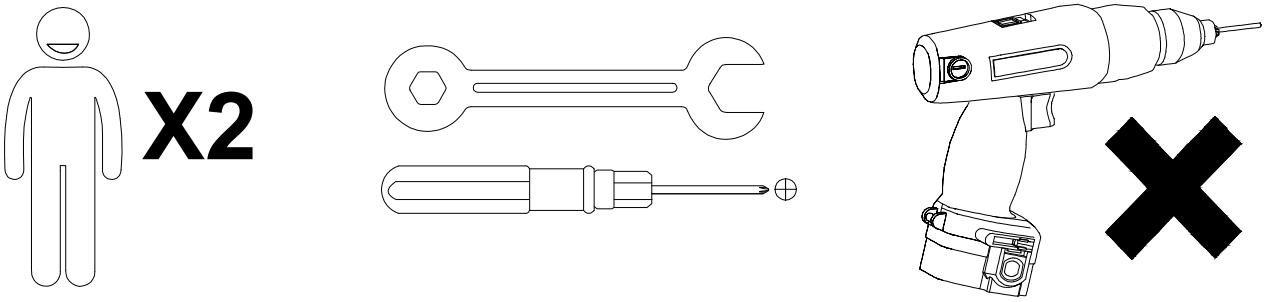



We recommend using hand tools for assembly.
If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

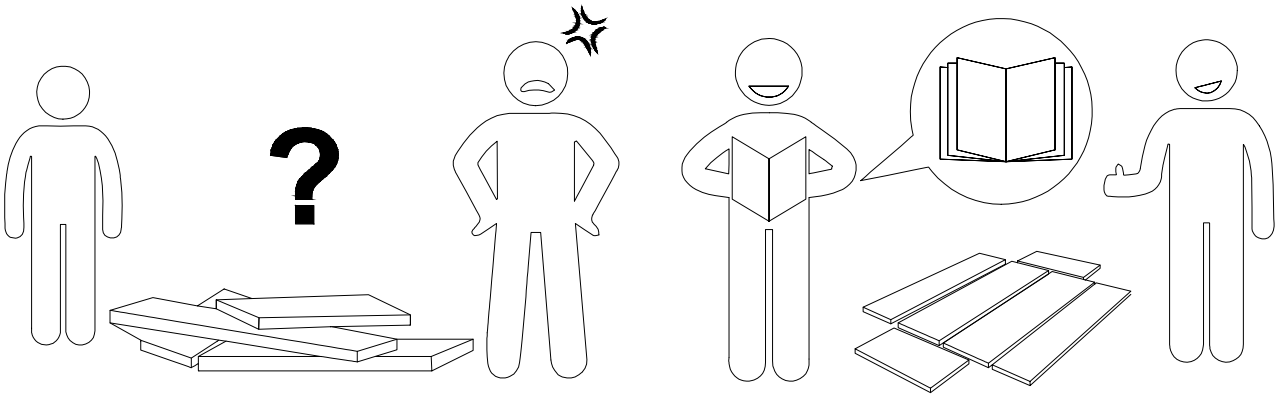


AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

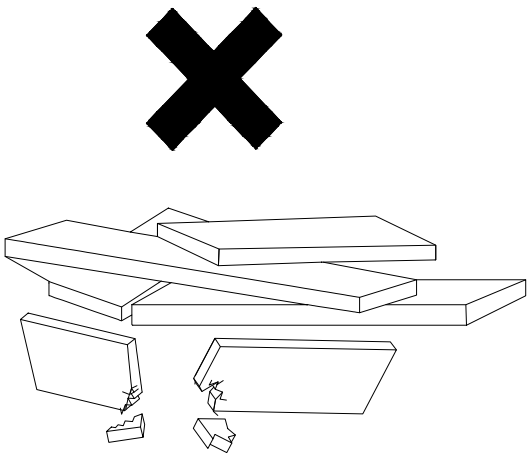






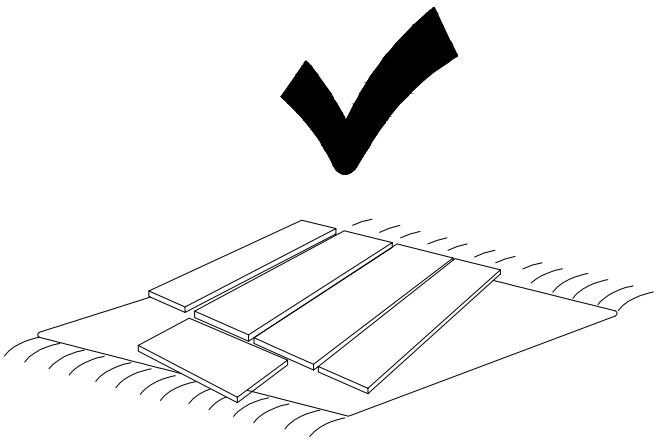


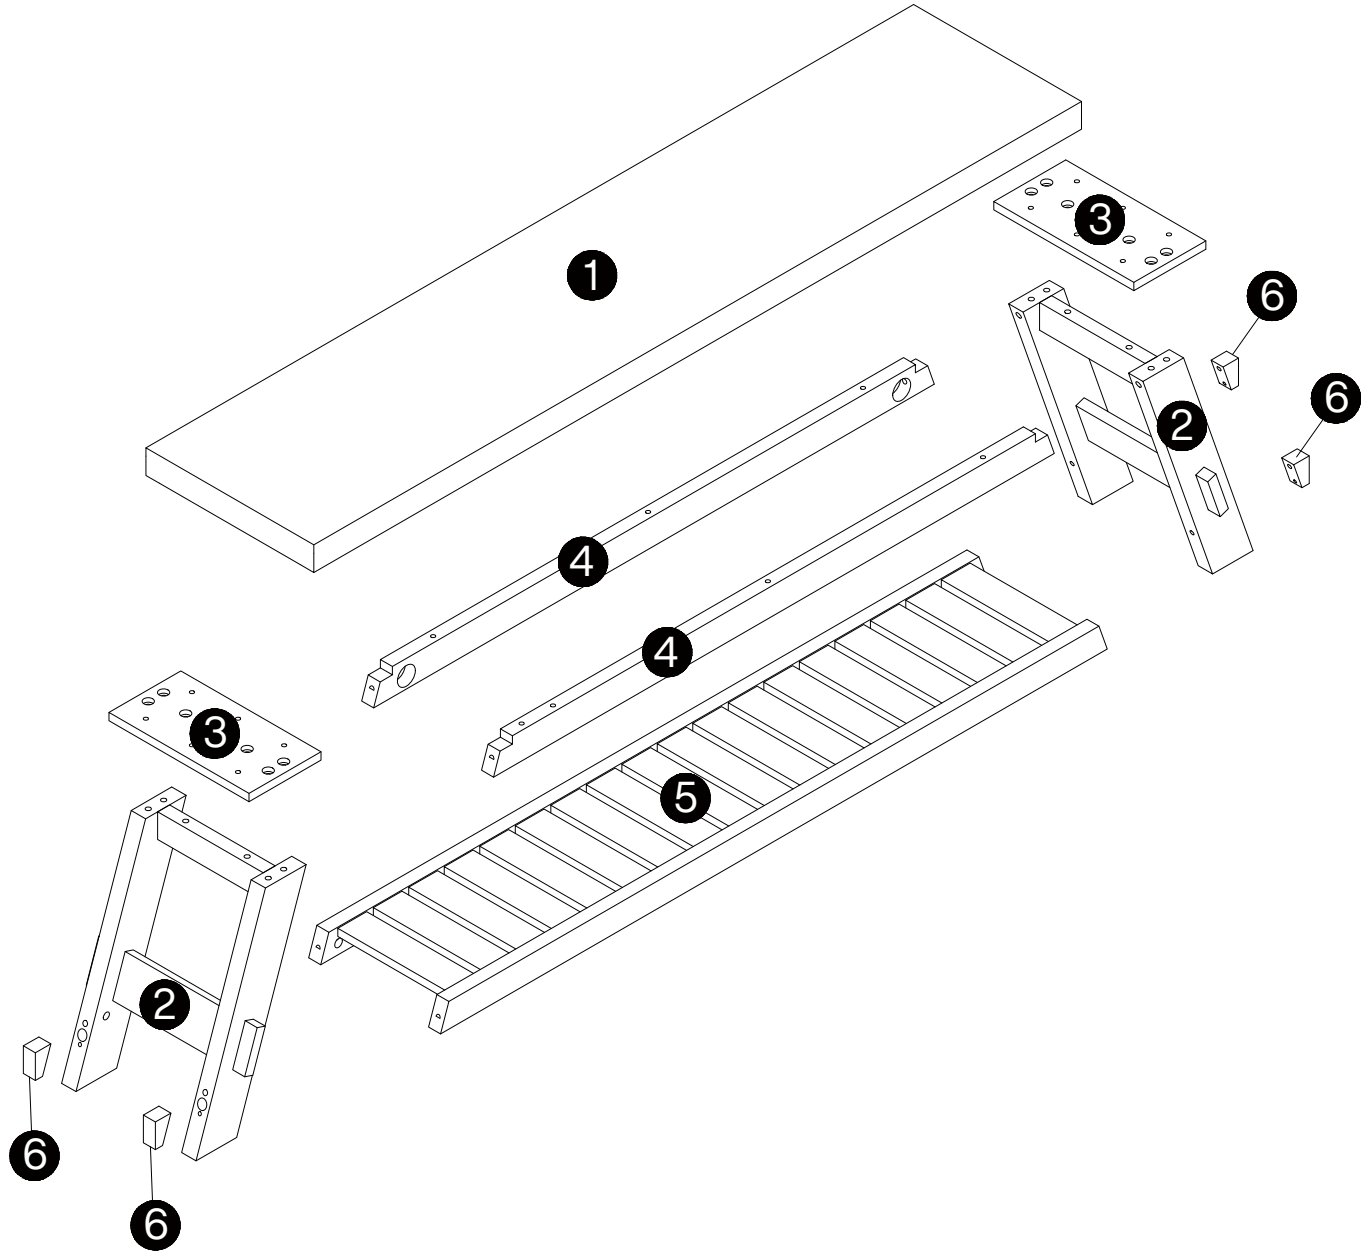




⚠ Caution




Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.





Parts List

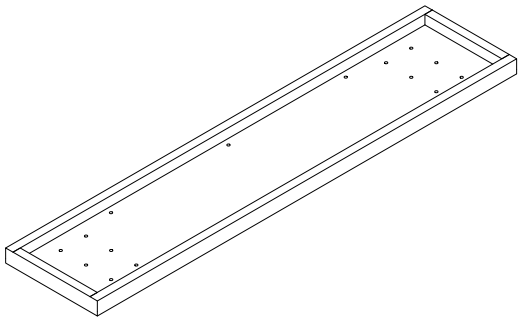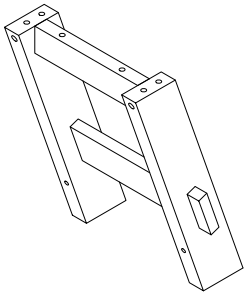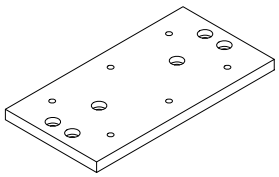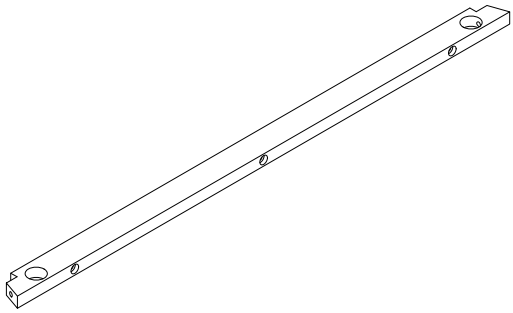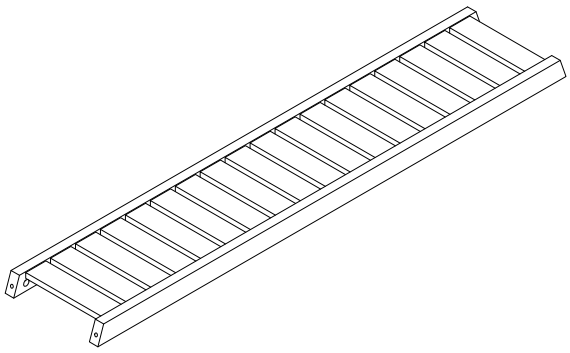❶  1 pc	❷  2 pcs
❸  2 pcs	❹  2 pcs
❺  1 pc	❻  4 pcs

Hardware List

A	B	C	D	E	F
					
Ø6x35mm	Ø6x35mm	M6x15mm	M6x25mm	M6x55mm	M6x100mm
4 pcs	4 pcs	12 pcs	12 pcs	6 pcs	4 pcs

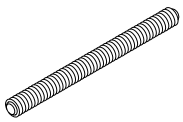
G	H	I	J	K	L
					
Ø 16	Ø 11	Ø6x30mm	M8x80mm	M8	M8
22 pcs	18 pcs	4 pcs	4 pcs	4 pcs	4 pcs


M	N	O	P	Q	R
					
M8	Ø44	M6x15mm	M14	M4	
4 pcs	4 pcs	4 pcs	1 pc	1 pc	1 pc

S					
					
Ø20mm					
14 pc					


Installation of Cams and Pins

Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

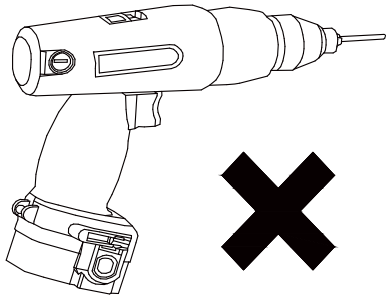

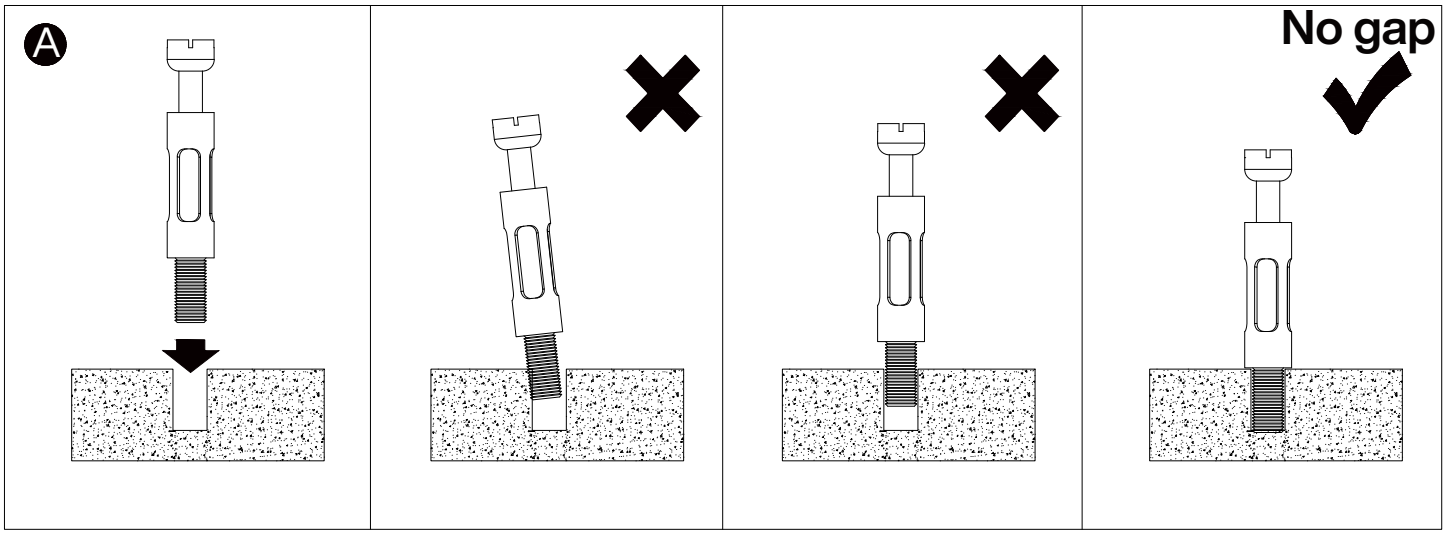


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins.Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

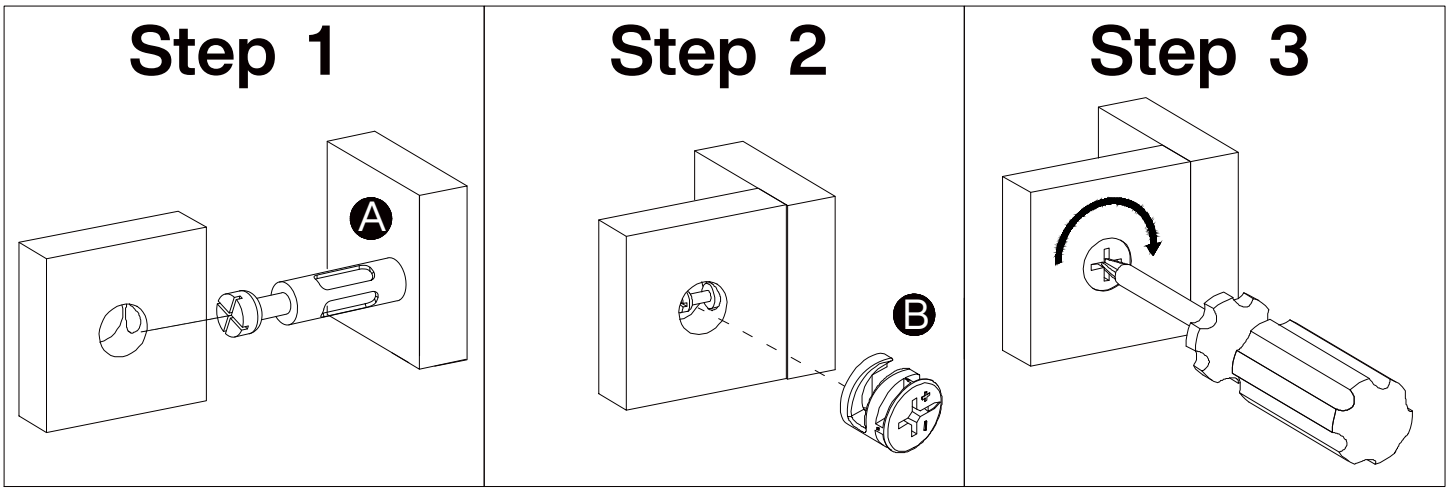


1

G	H	C	Q
Ø 16	Ø 11	M6x15mm	M4
12 pcs	12 pcs	12 pcs	1 pc

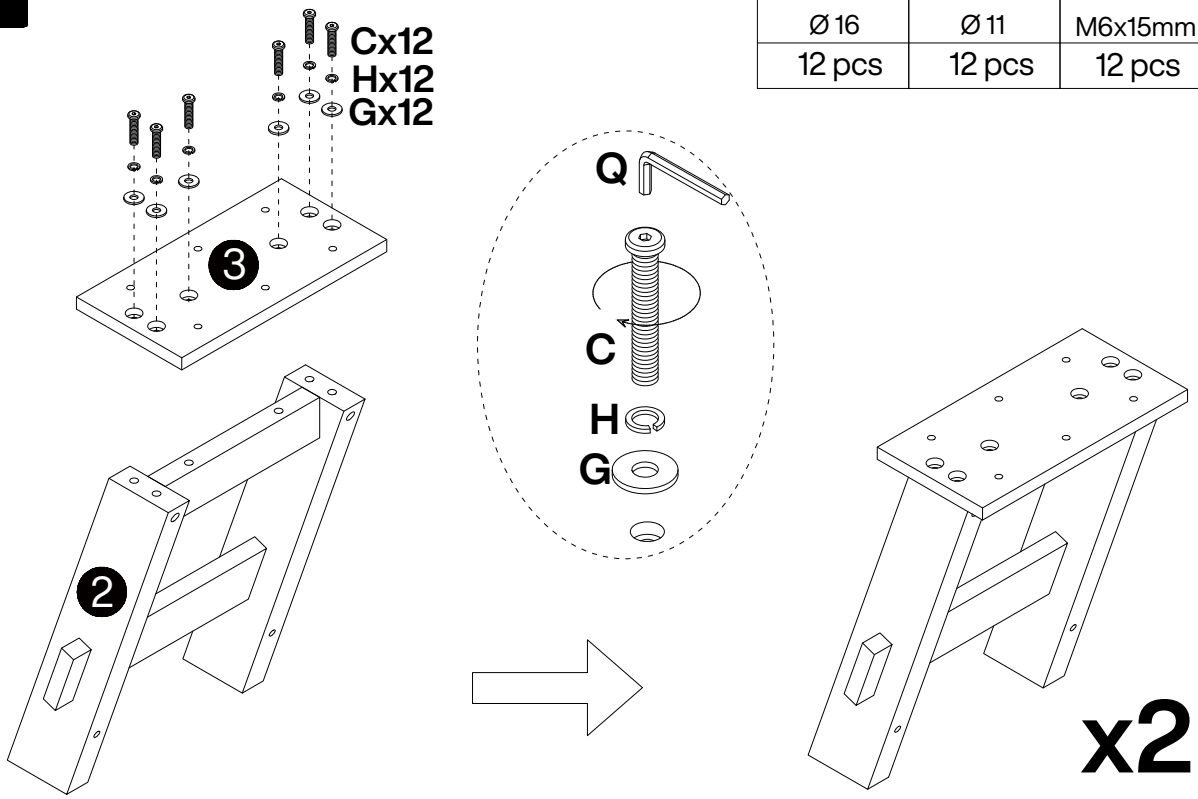


2


J
M8x80mm
4 pcs

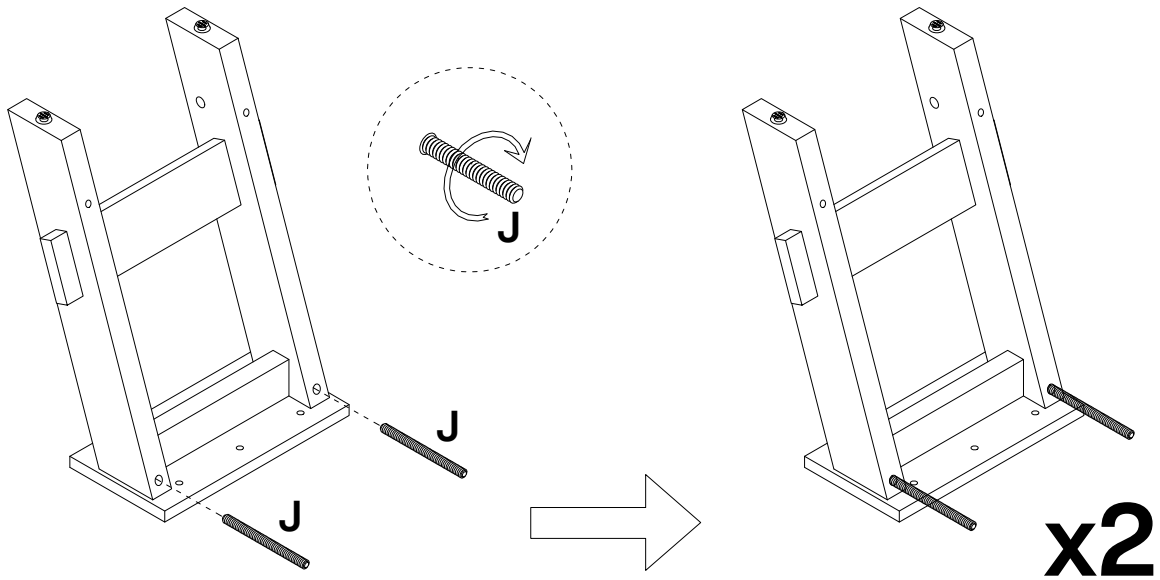


3

K	L	M	P
			
M8	M8	M8	M14
4 pcs	4 pcs	4 pcs	1 pc

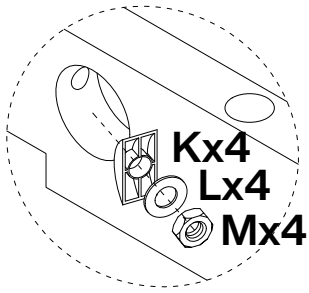


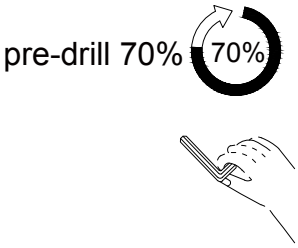


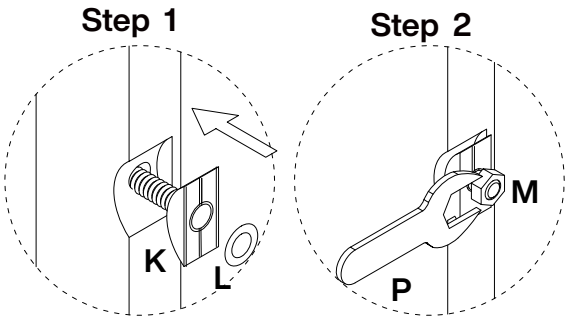

4


G	F	O	R
			
Ø 16	M6x100mm	M6x15mm	
4 pcs	4 pcs	4 pcs	1 pc

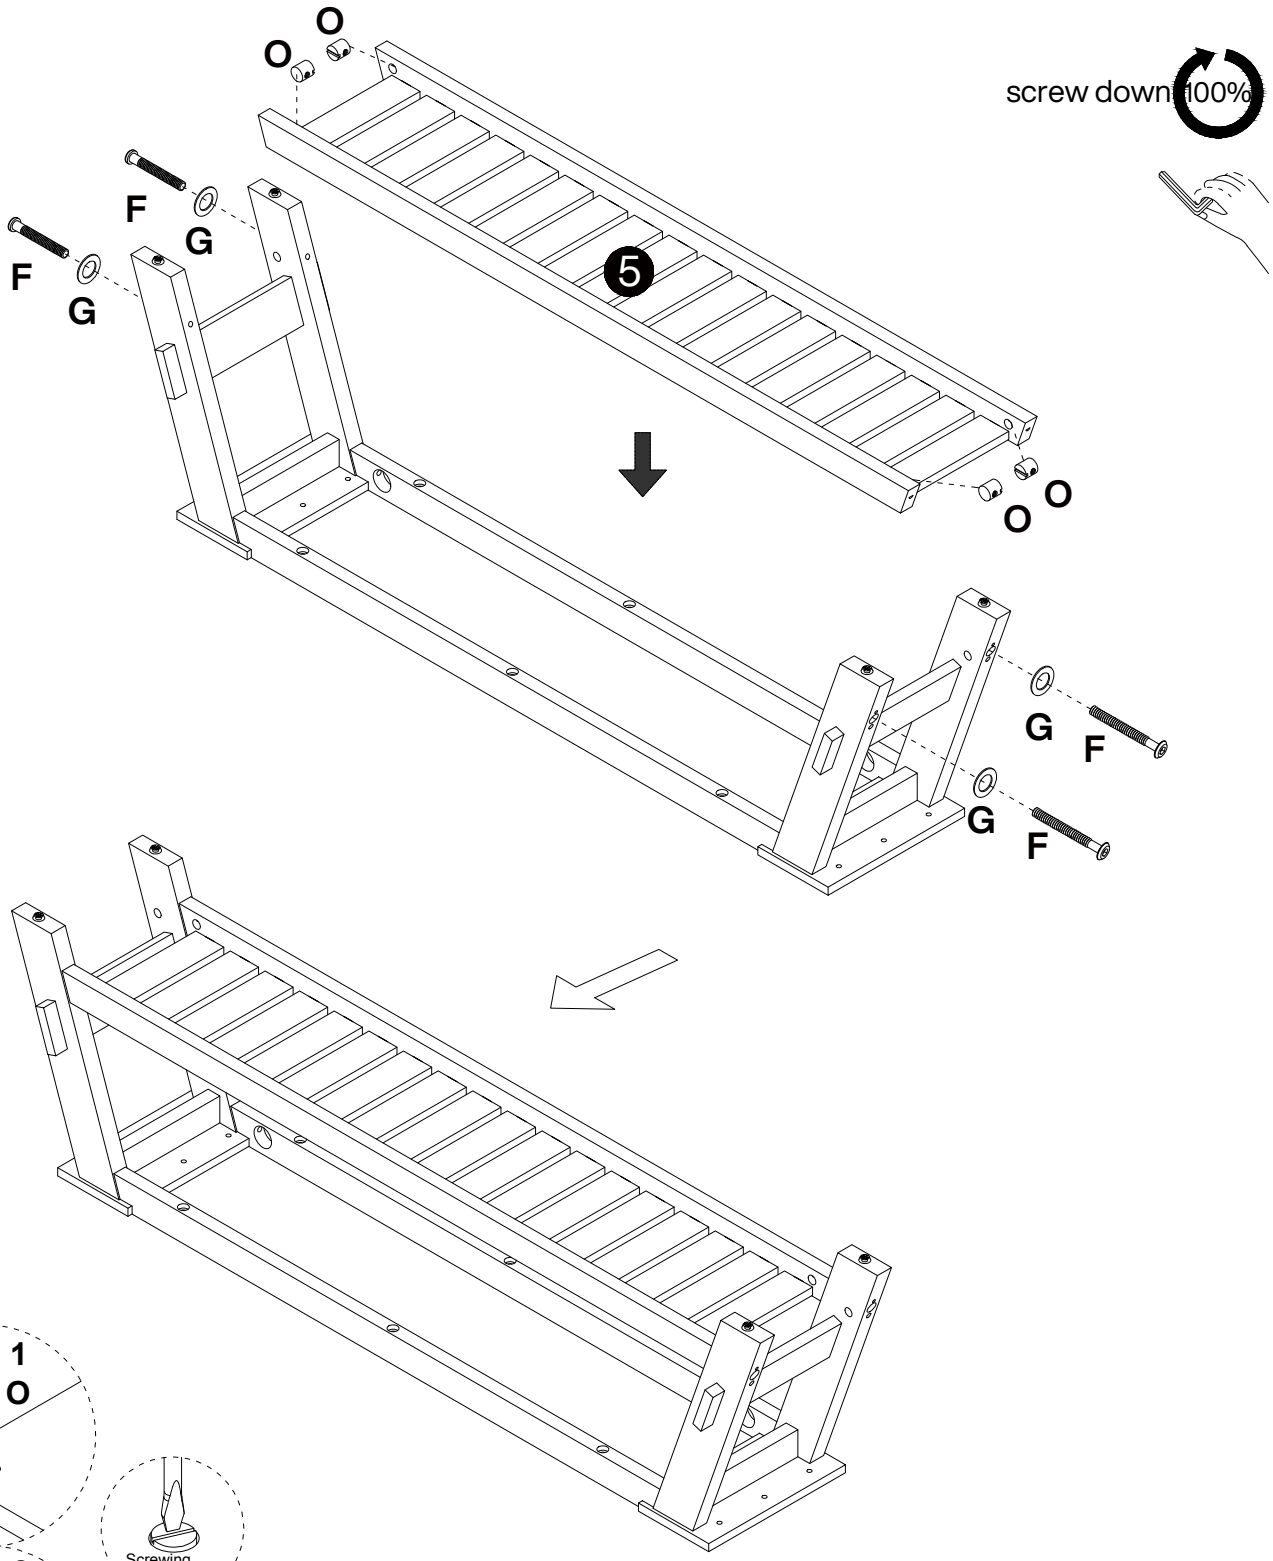


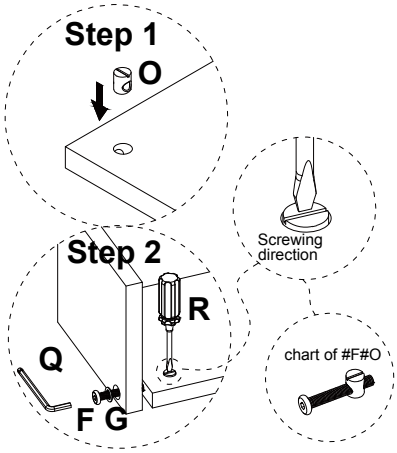



Step 1: Insert #O into the hole.
Step 2: Using a screwdriver, rotate #O until its groove aligns with #F. Lock in place by turning #F clockwise.

5


A	I
	
M6x35mm	Ø6x30mm
4 pcs	4 pcs

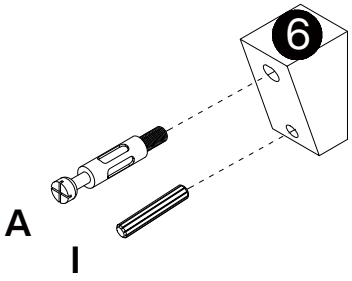


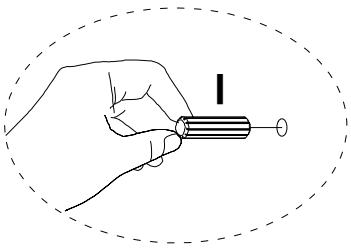

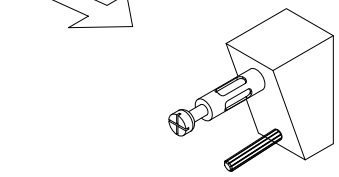

x4

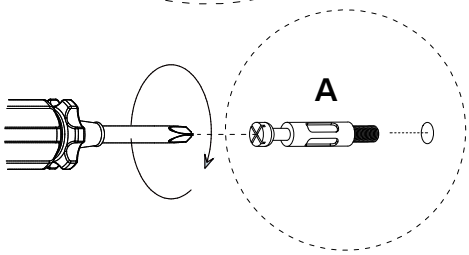


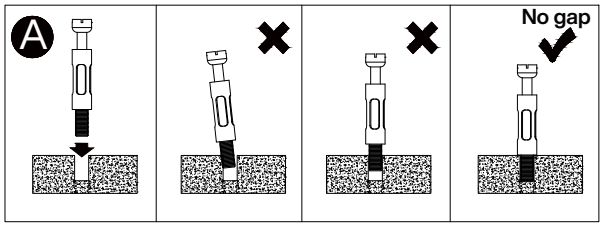

6

B


Ø15x12mm
4 pcs

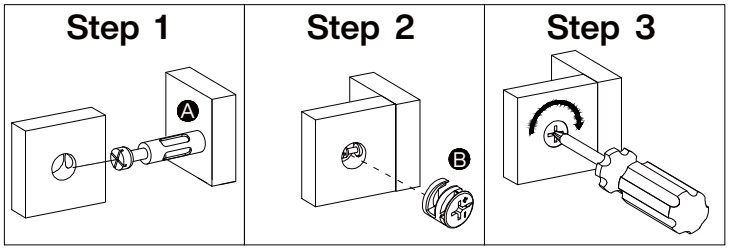

7

D

M6x25mm
12 pcs

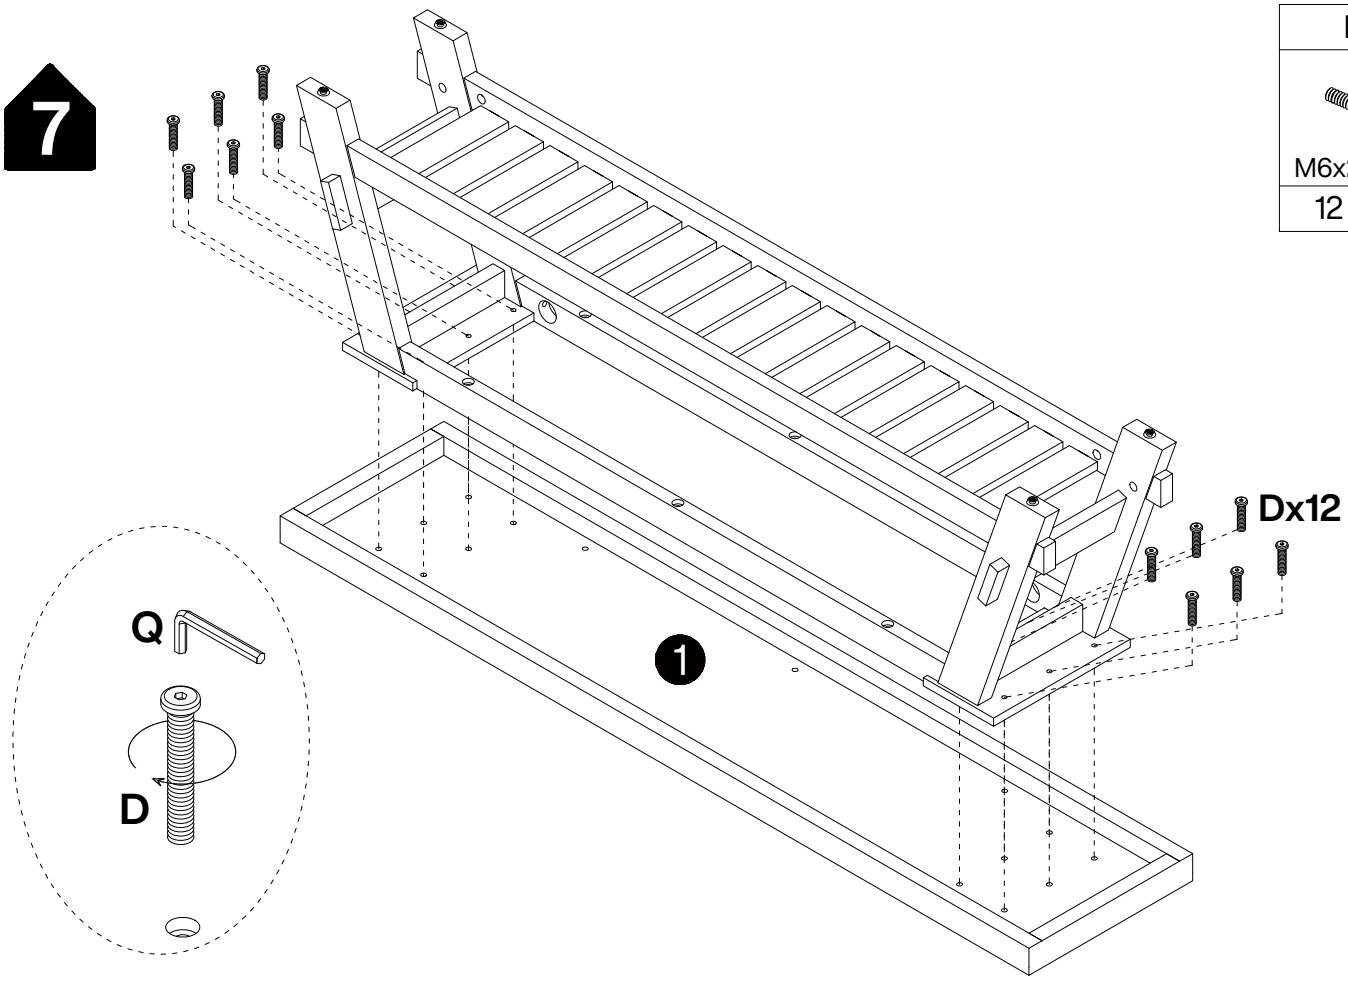



8


G	H	E
		
Ø 16	Ø 11	M6x55mm
6 pcs	6 pcs	6 pcs


9

N	S
	
Ø44mm	Ø20mm
4 pcs	14 pcs

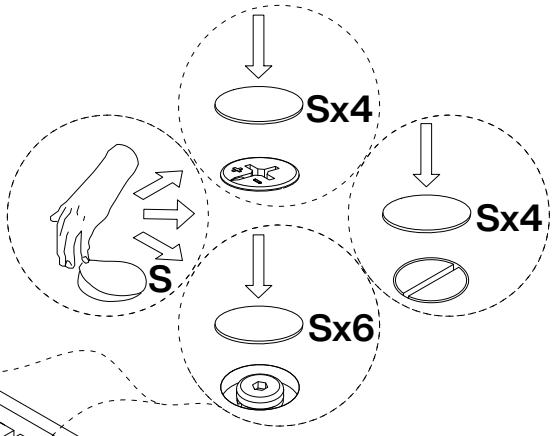

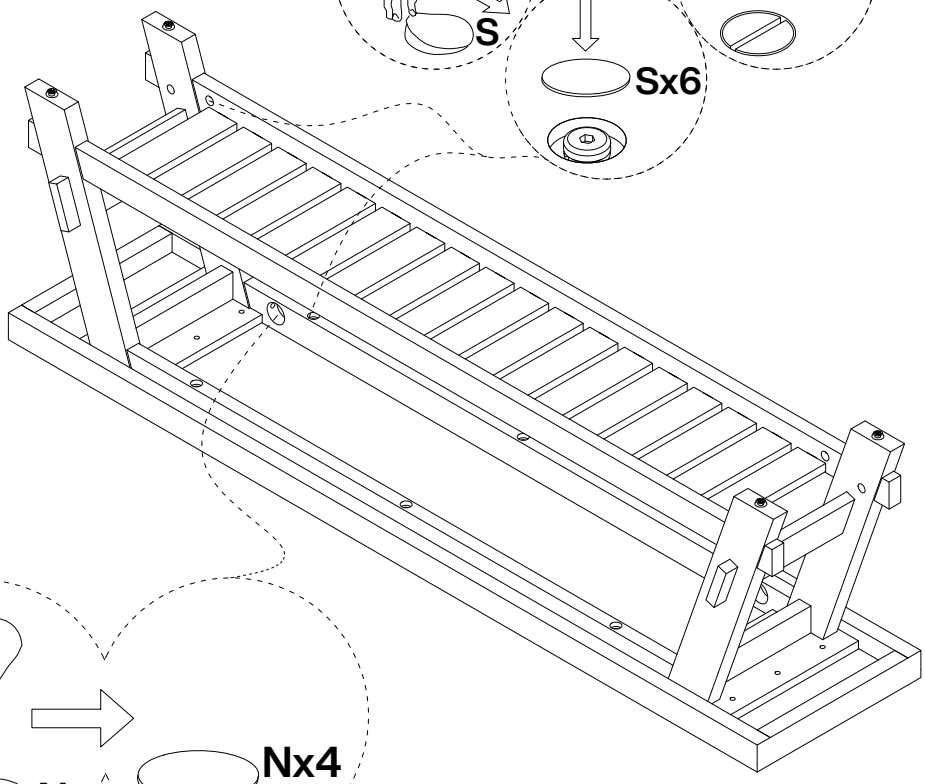


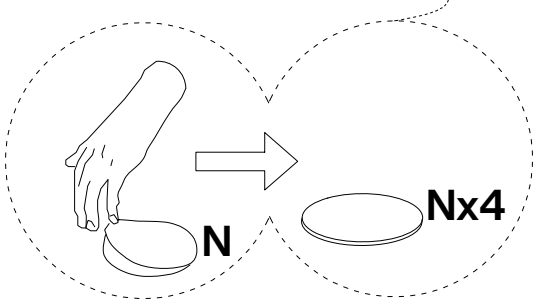


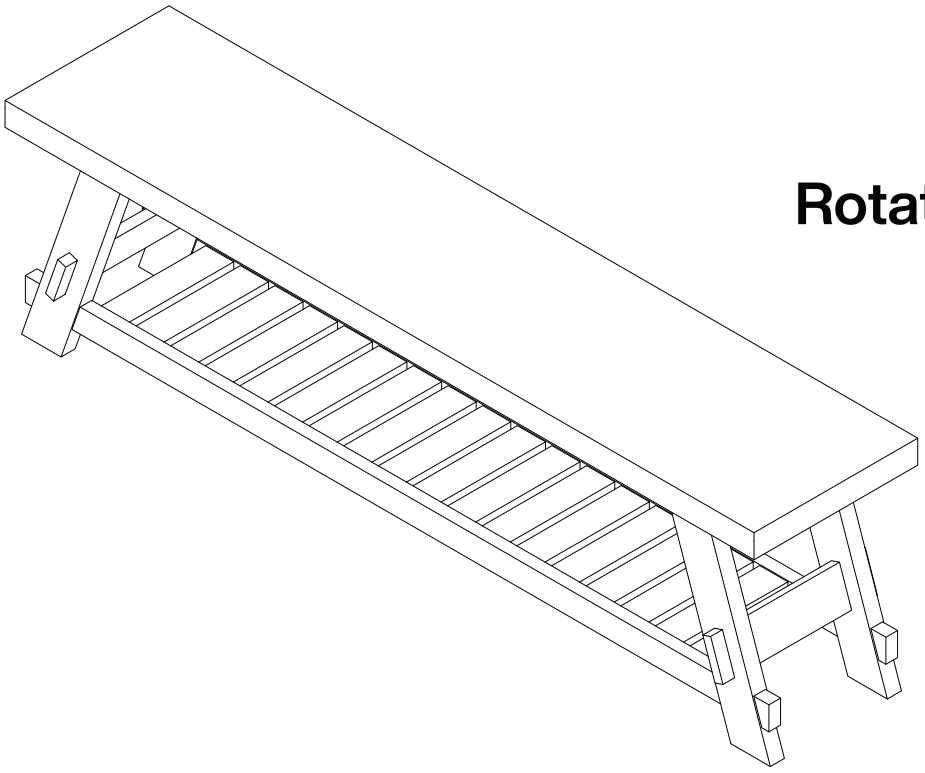

Rotate 180°

Thank you for your support!

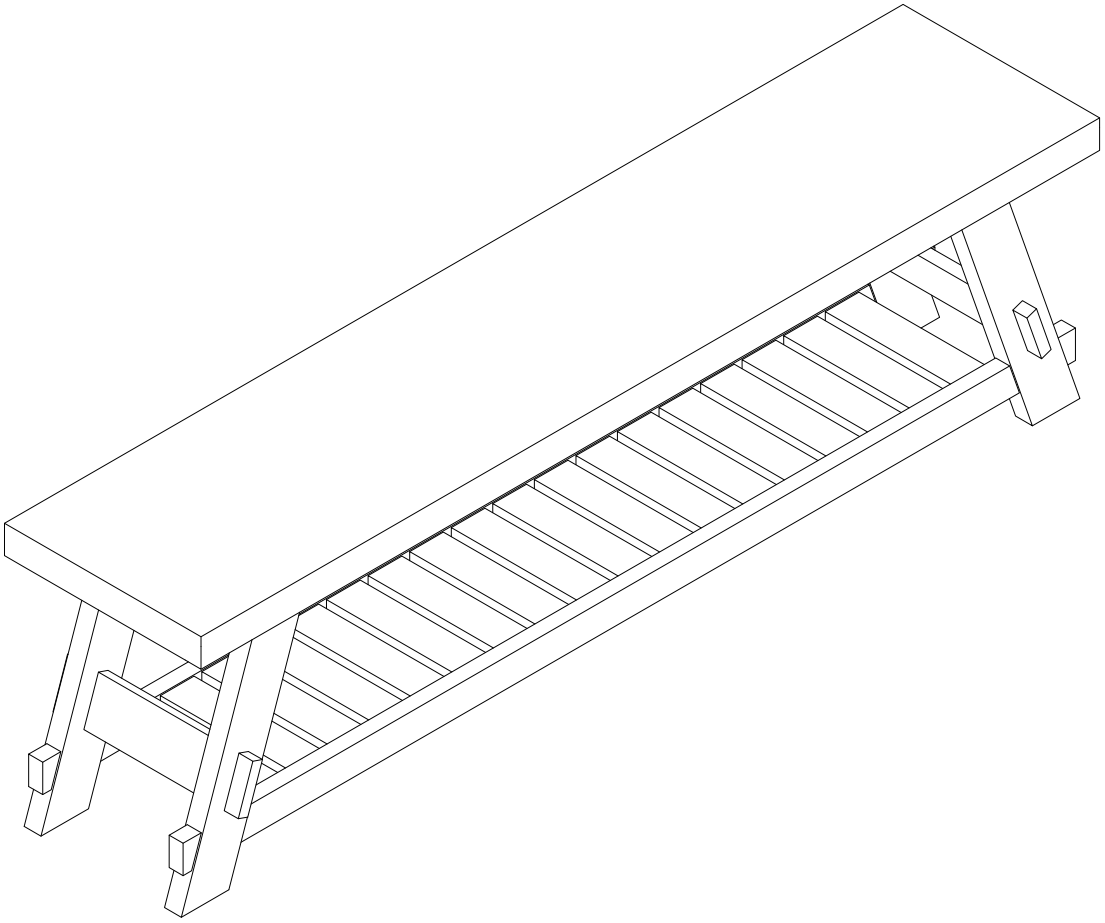

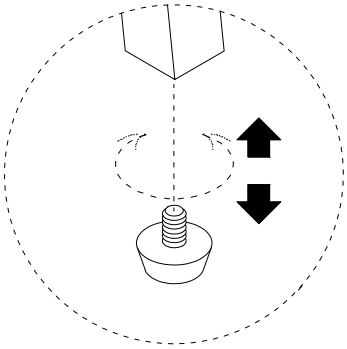

When it is not level on the ground, please adjust here.