

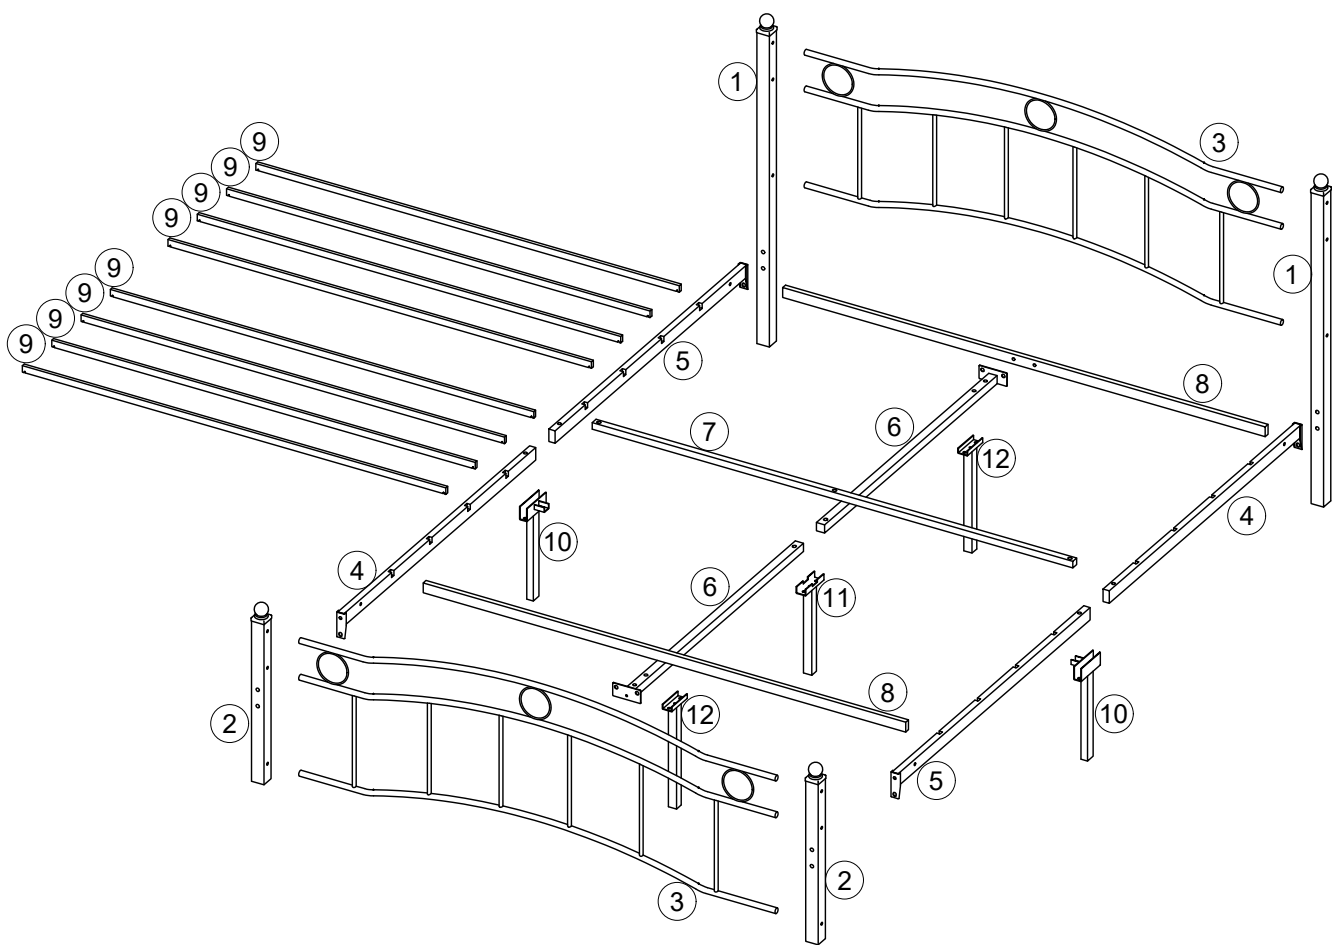
ASSEMBLY INSTRUCTION

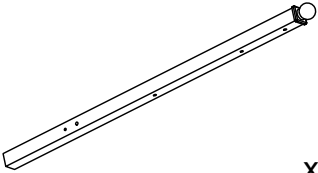
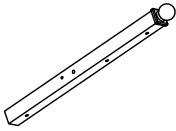
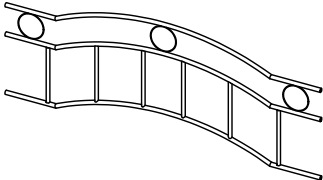
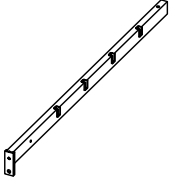
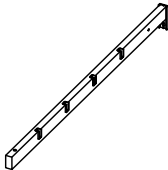
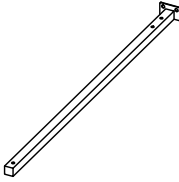




N761P334216





NOTE:

Please do not completely tighten all the hardware until the entire assembly is completed!




①  x 2	②  x 2	③  x 2
④  x 2	⑤  x 2	⑥  x 2
⑦  x 1	⑧  x 2	⑨  x 8
⑩  x 2	⑪  x 1	⑫  x 2

A	x 4	B	x 4	C	x 12	D	x 4	E	x 8
									
M6×30 mm		M6×40 mm		M6×50 mm		M8×15 mm		M8×35 mm	
F	x 8	G	x 1	H	x 4	I	x 2	J	x 1
									
M8×50 mm		M8×55 mm		M6×17 mm		4 mm		5 mm	


Step 1

H	x 2	A	x 2	F	x 2
					
M6×17 mm		M6×30 mm		M8×50 mm	

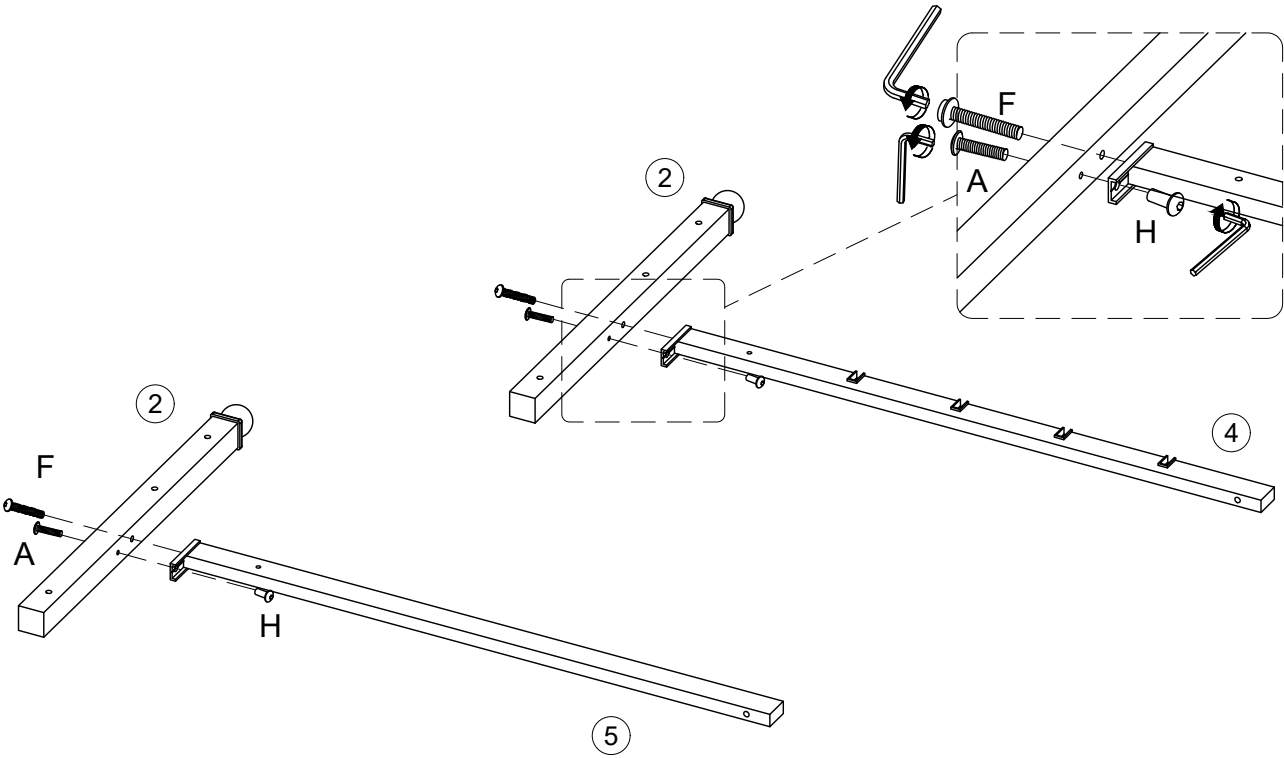

Step 2


E	x 4
	
M8×35 mm	

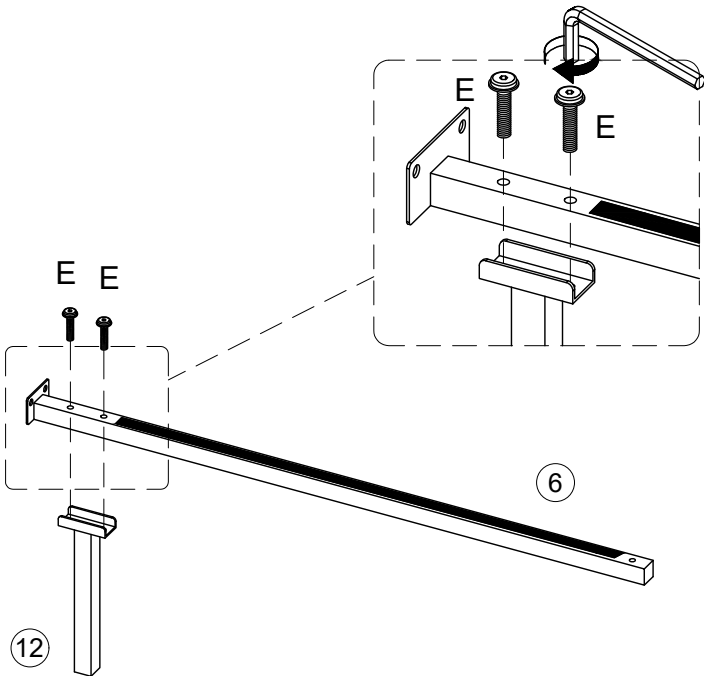

x 2

Step 3

D	x 4
 M8×15 mm	

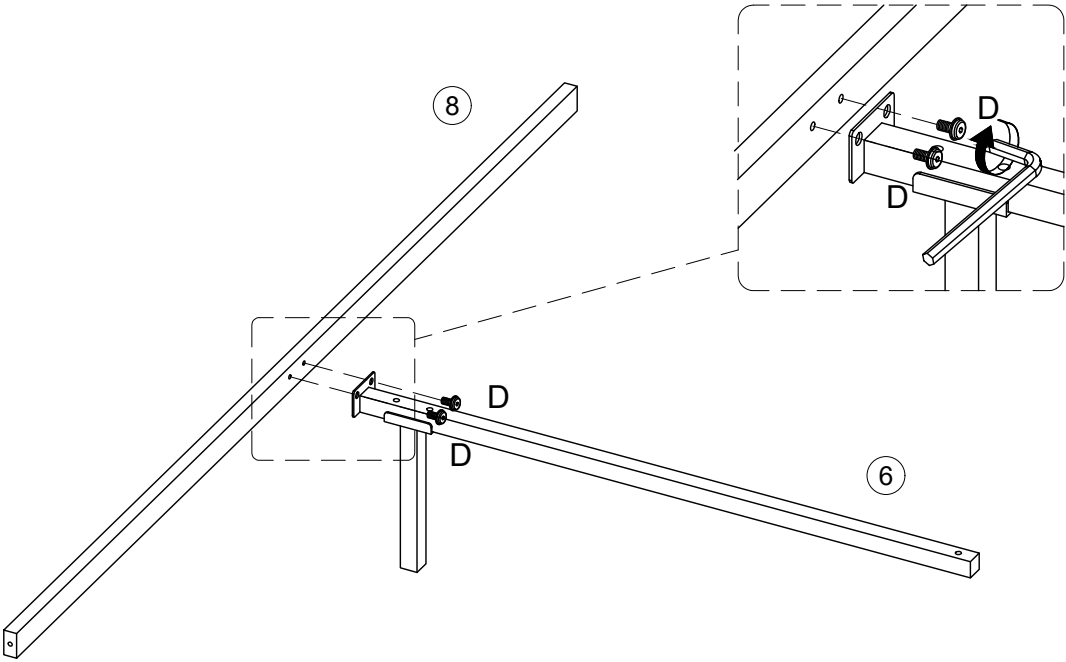


x 2

Step 4


C	x 6	B	x 2
 M6×50 mm		 M6×40 mm	

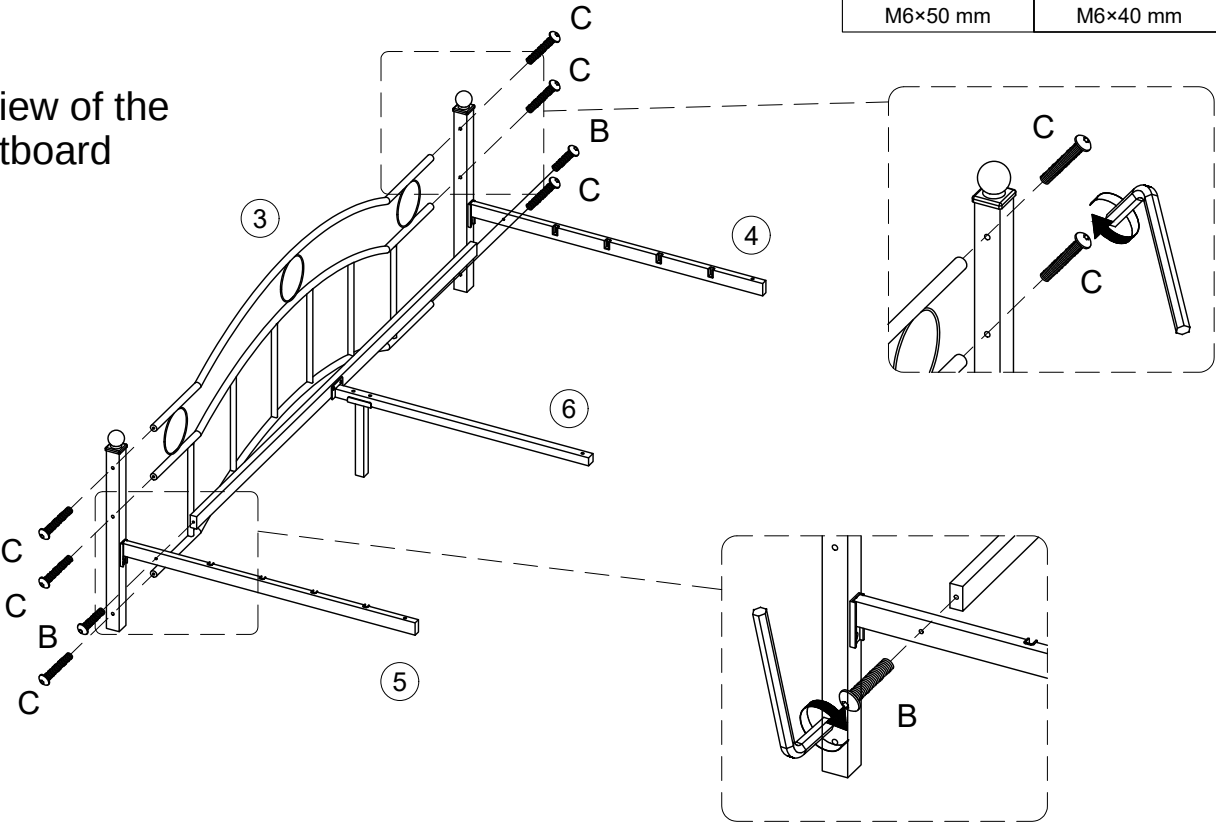Front view of the
footboard



Step 5


H	x 2	A	x 2	F	x 2
					
M6×17 mm		M6×30 mm		M8×50 mm	

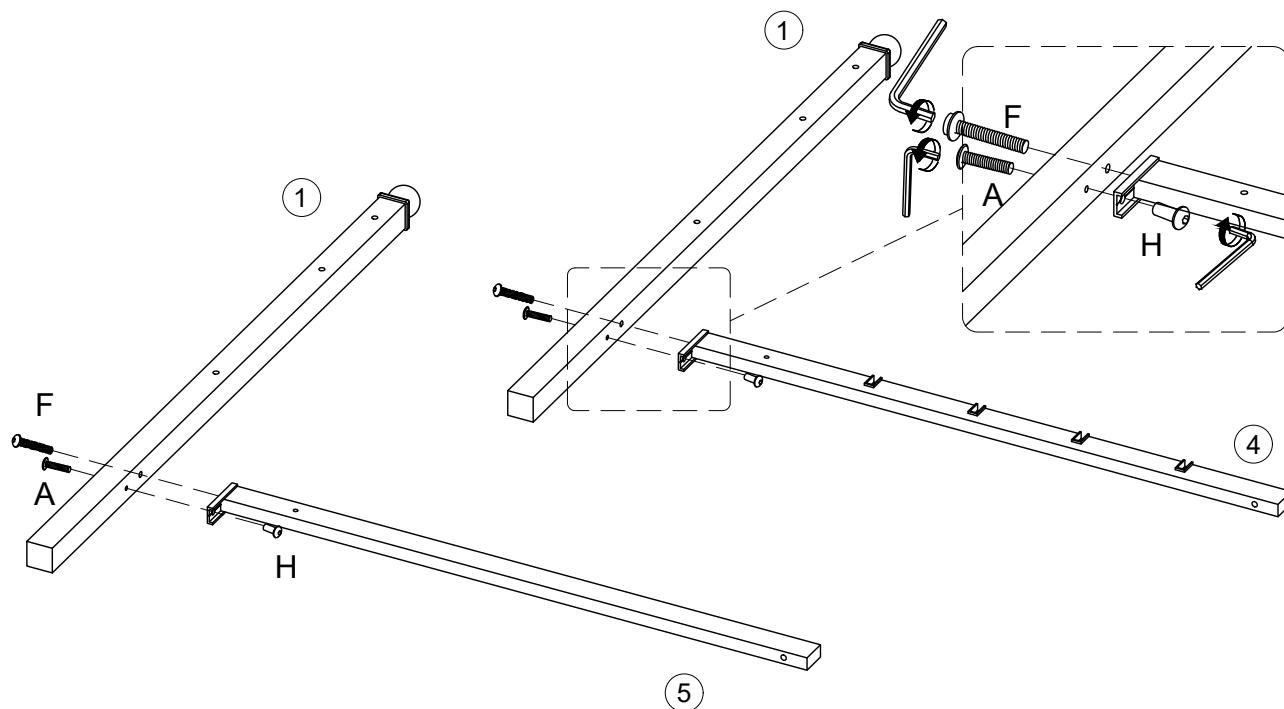

Step 6


C	x 6	B	x 2
			
M6×50 mm		M6×40 mm	

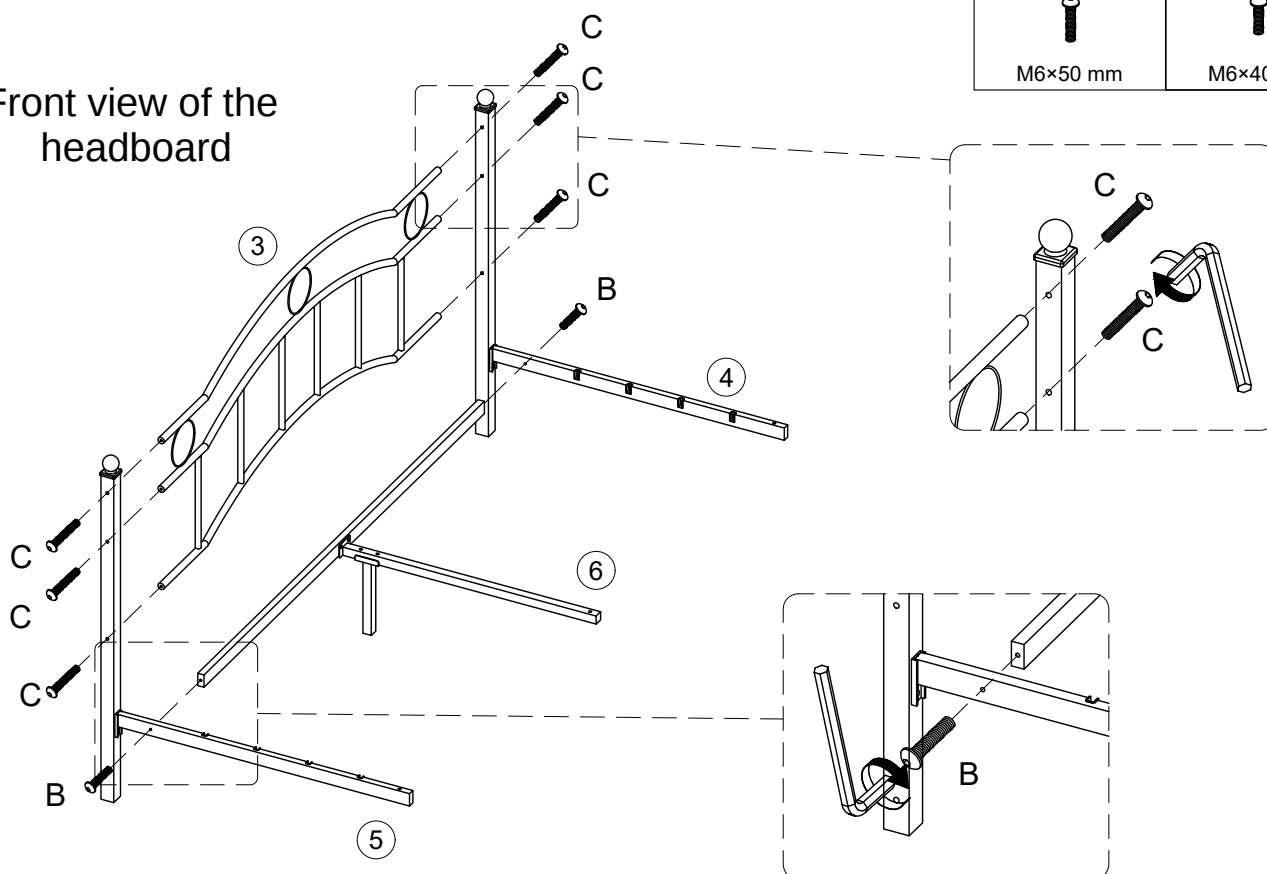Front view of the headboard




Step 7

F	x 4	E	x 2
			
M8×50 mm		M8×35 mm	

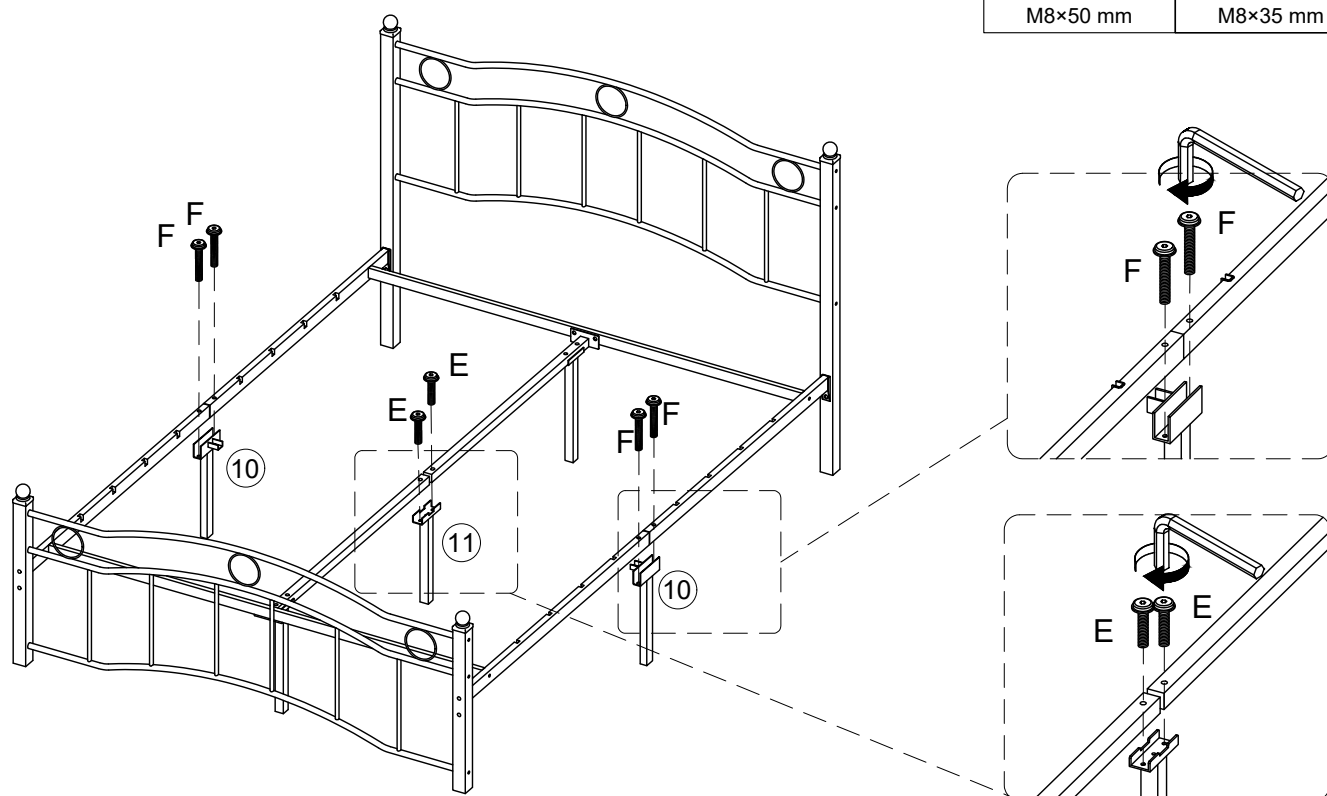


Step 8

G	x 1	E	x 2
			
M8×55 mm		M8×35 mm	

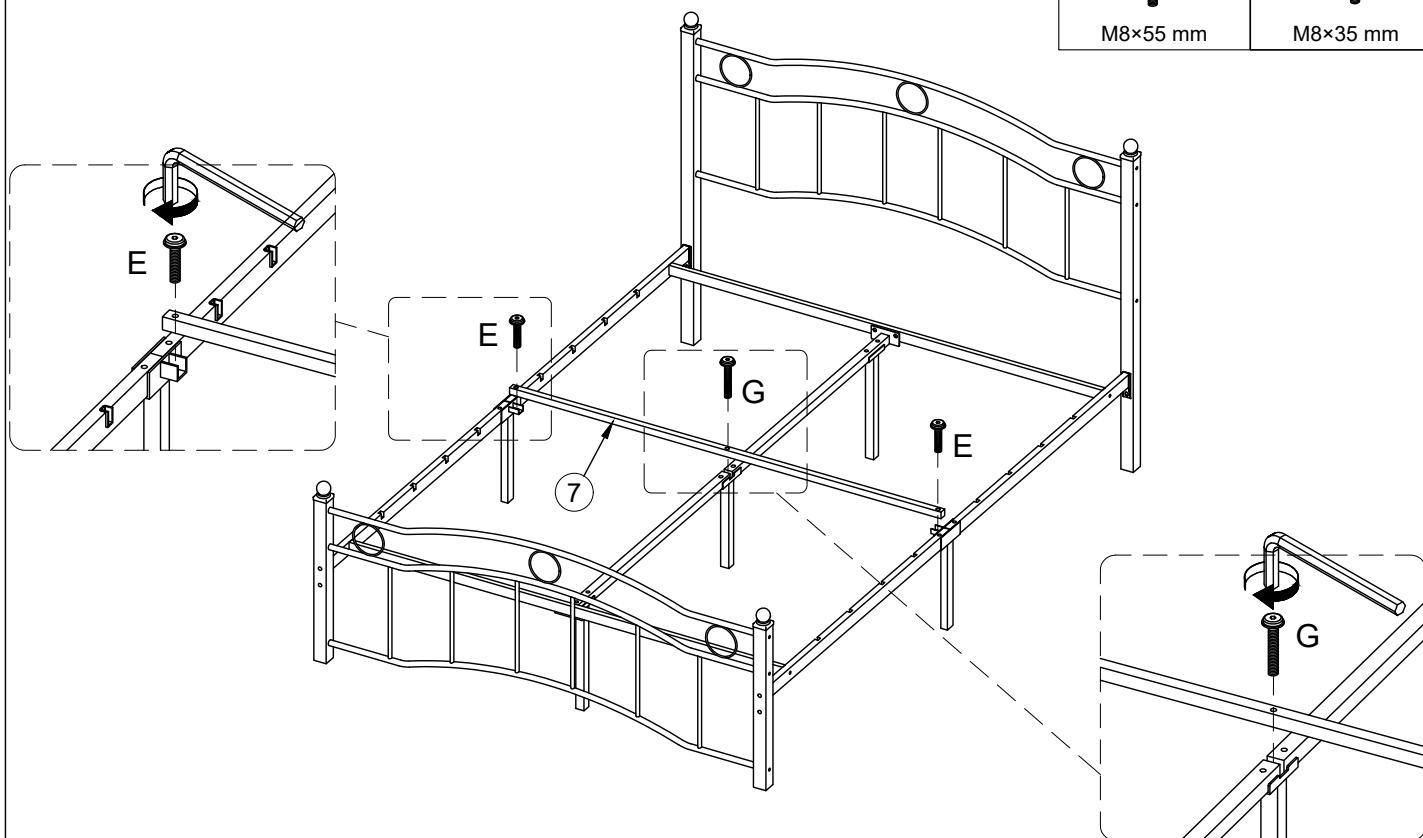

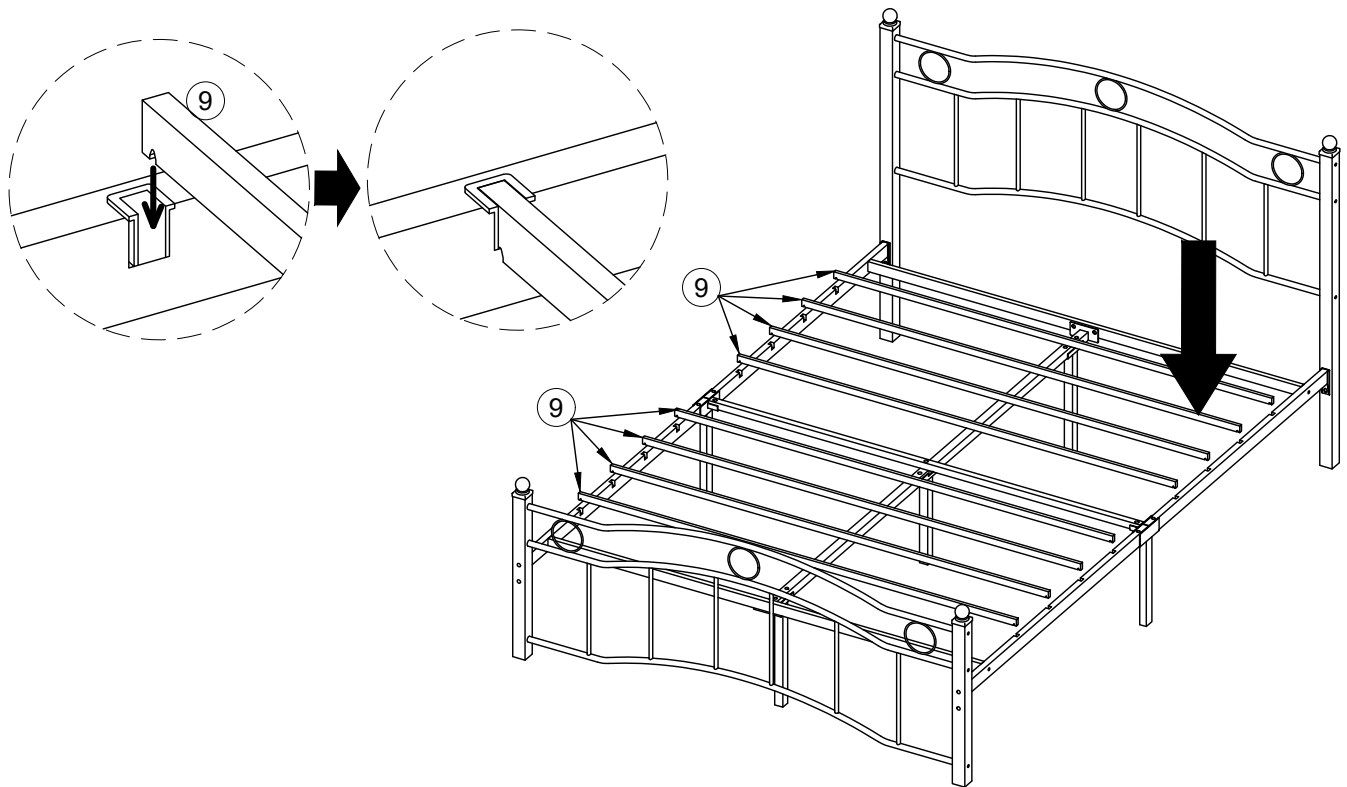Step 9



Step 10

