

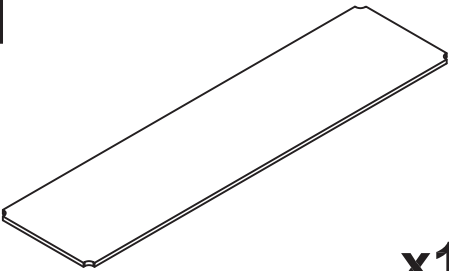
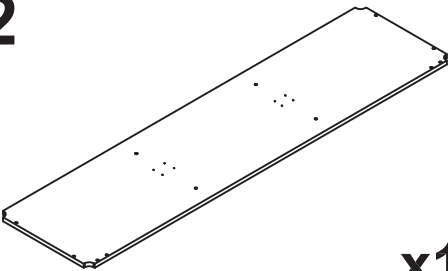
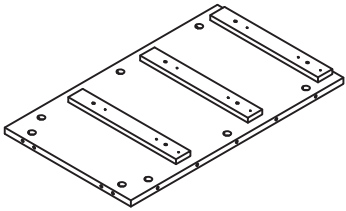
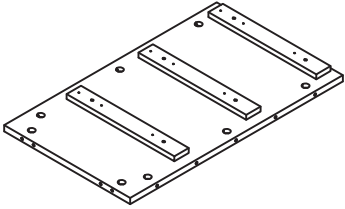
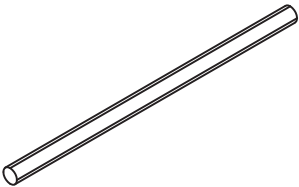
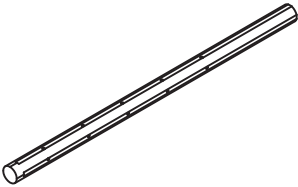
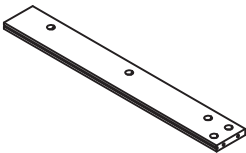
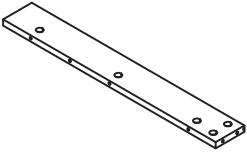
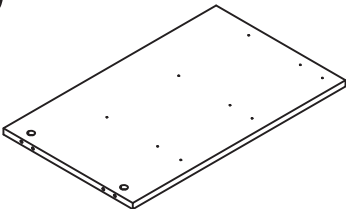
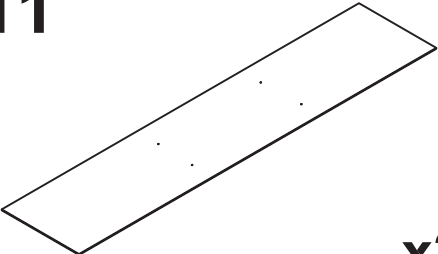
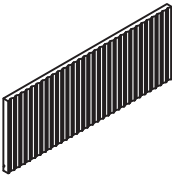
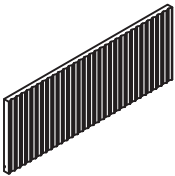
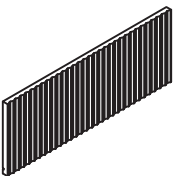
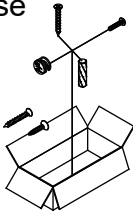
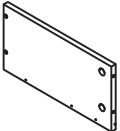
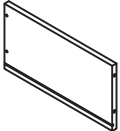
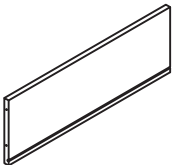
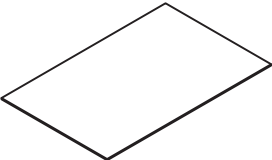













Installation instruction



1  x1	2  x1	3  x1
4  x1	6  x2	7  x2
8  x1	9  x1	10  x2
11  x2	12  x2	13  x3
14  x3	15  x3	AccessoryCase  x1
16  x9	17  x9	18  x9
18  x9		

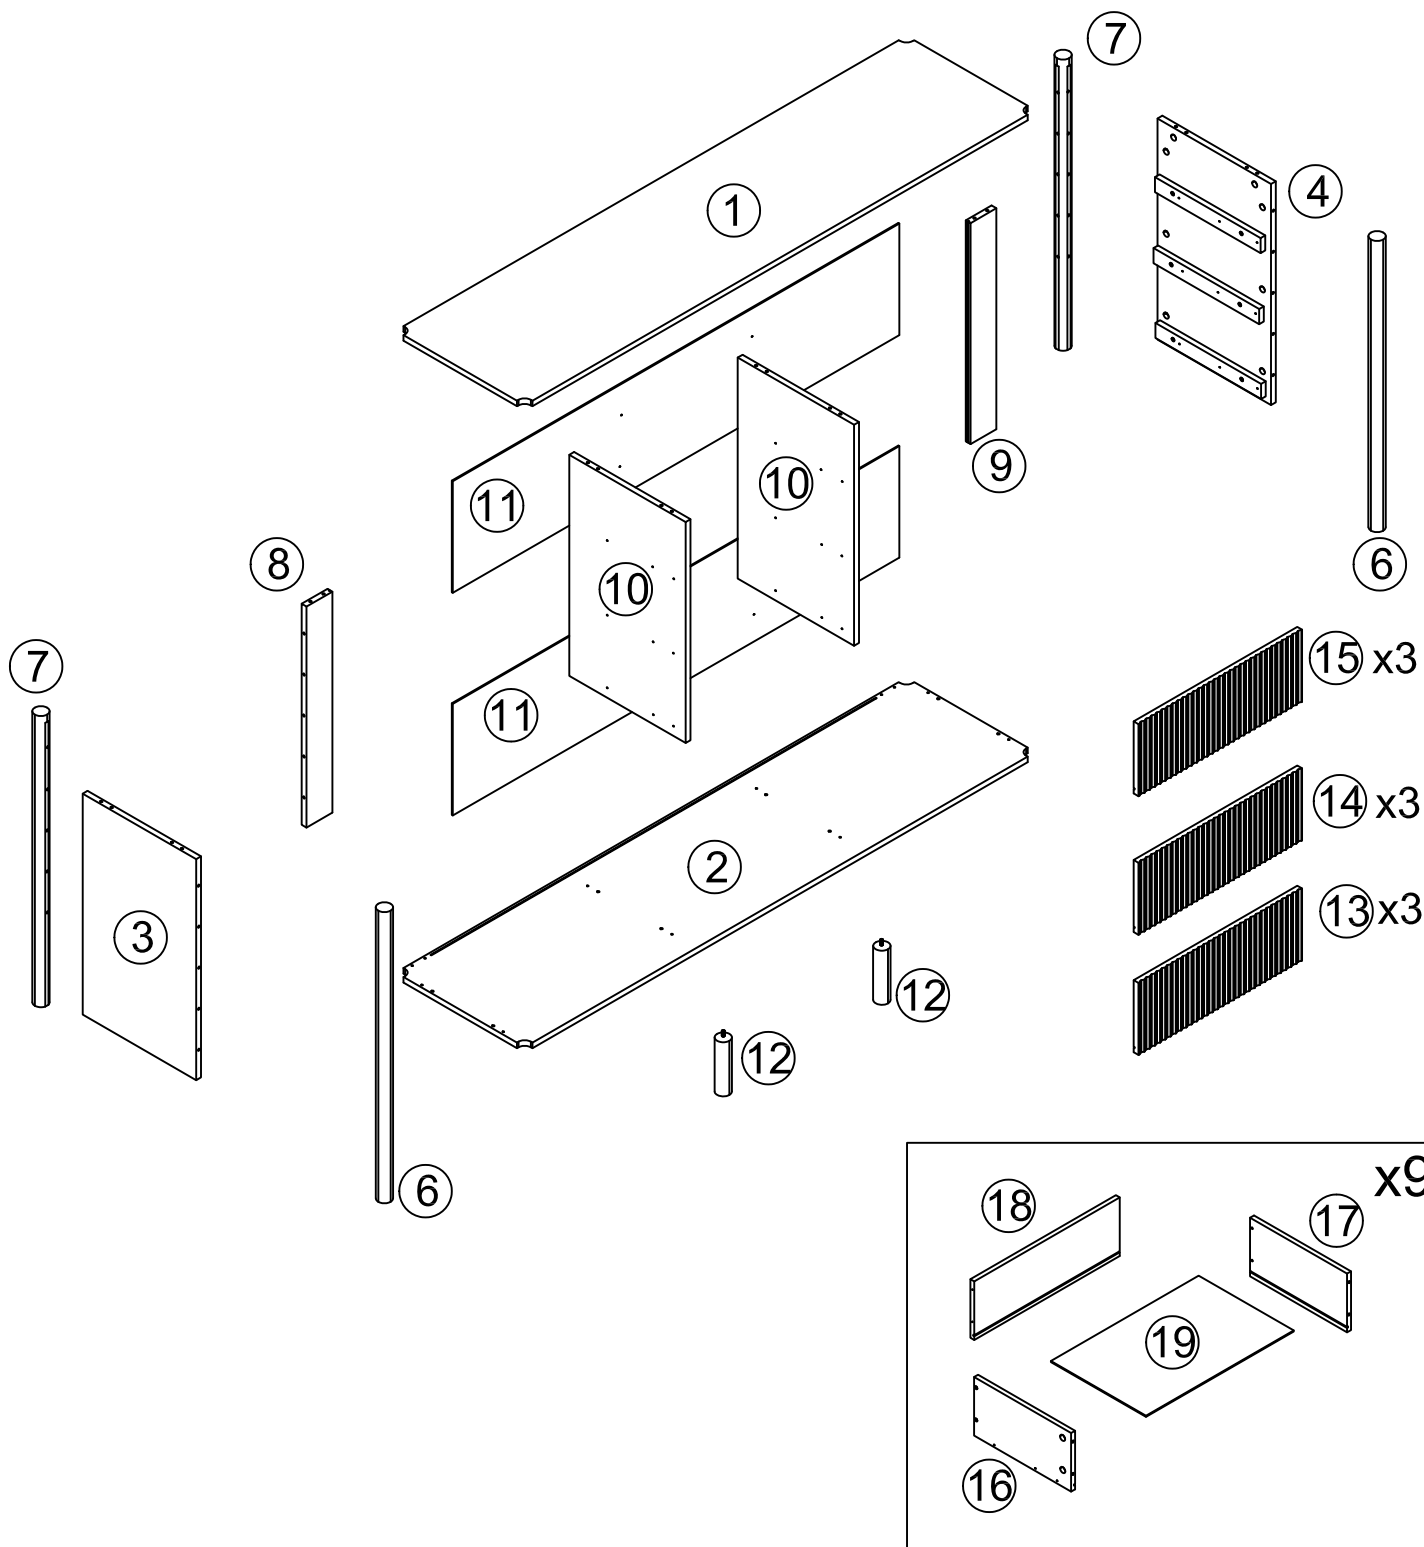




STEP 1

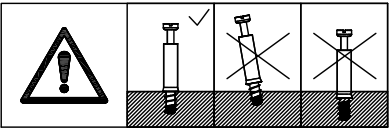




x2

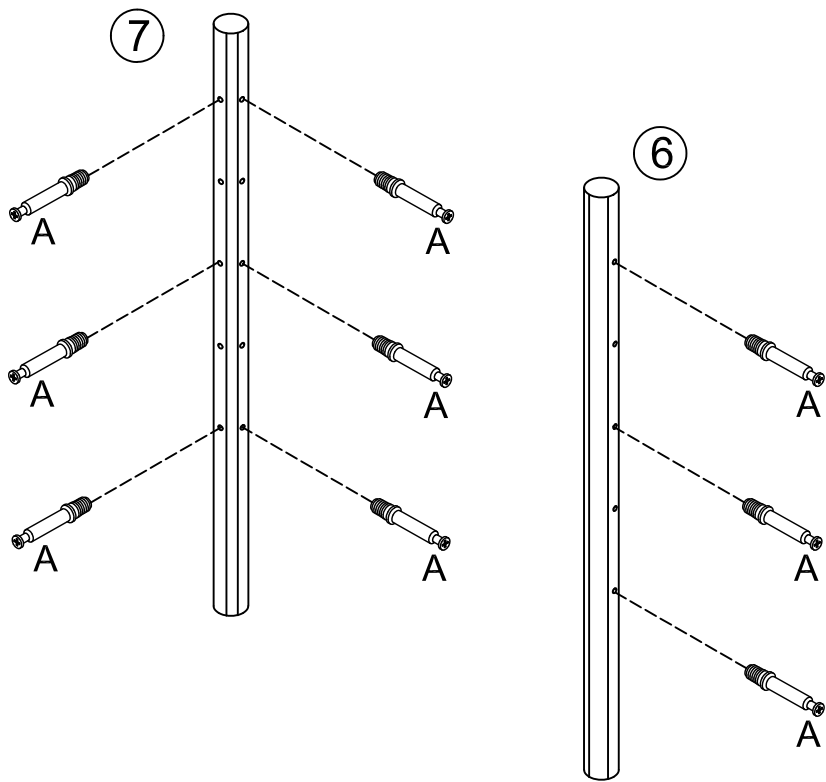








STEP 2

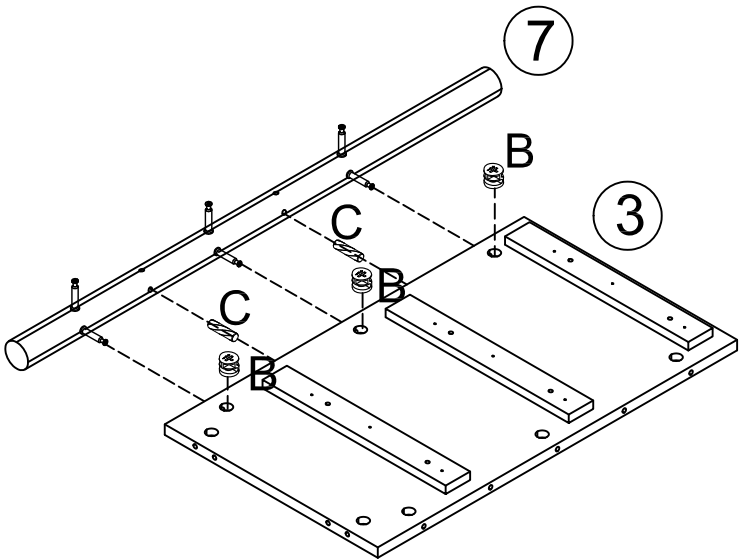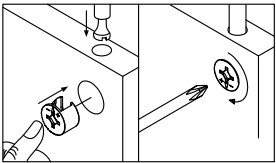





STEP 3

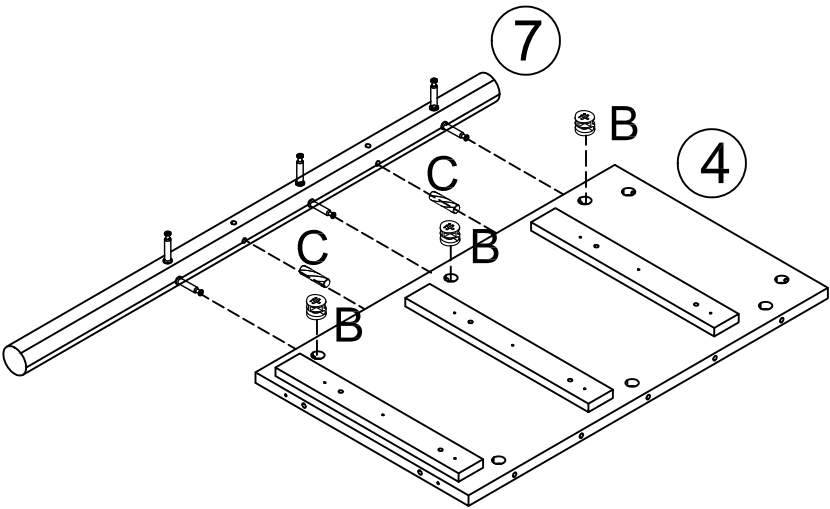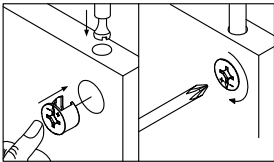

STEP 4

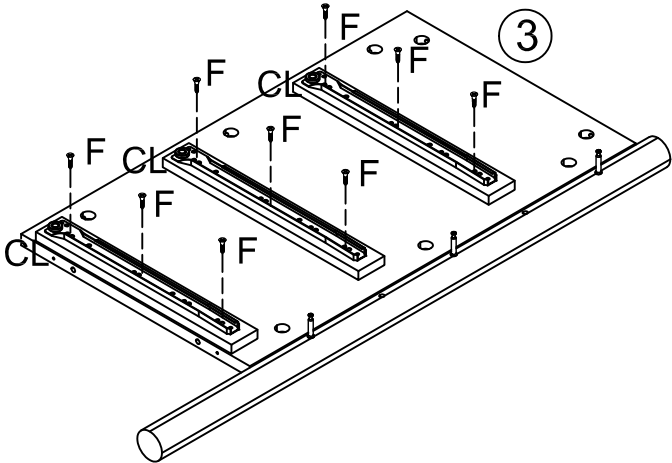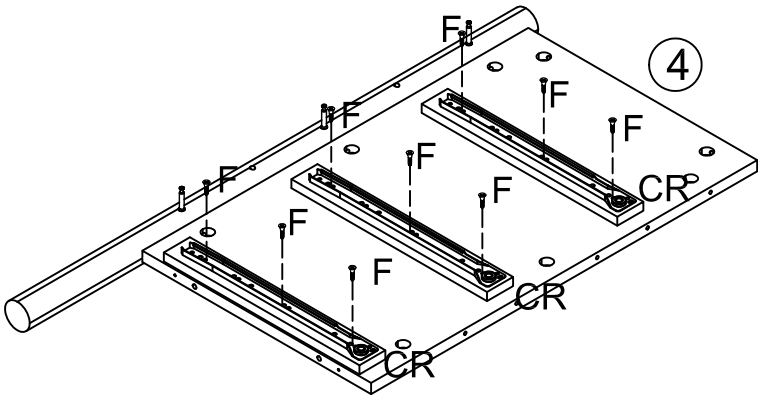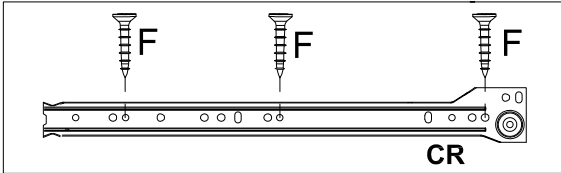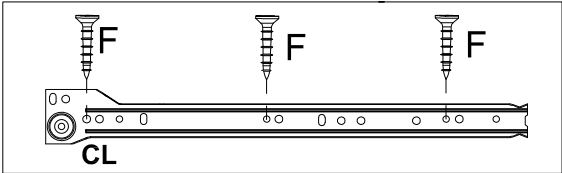

STEP 5

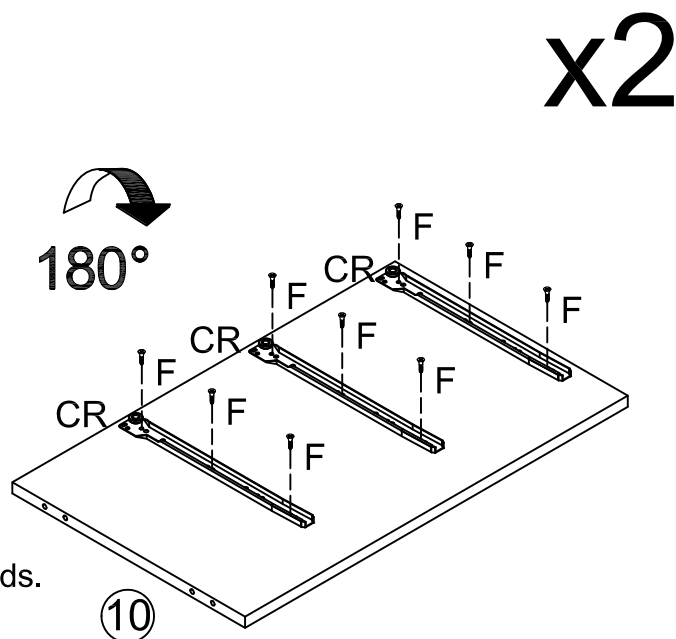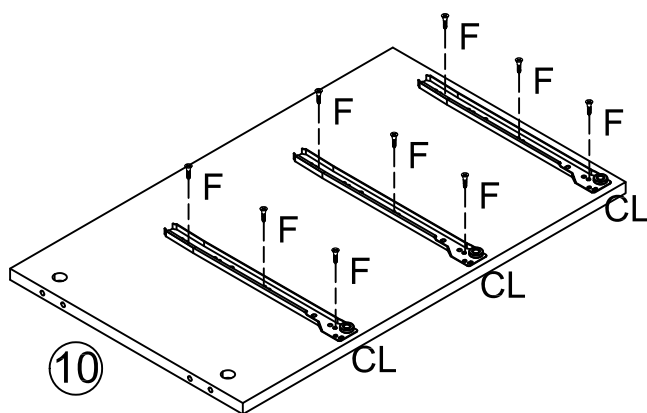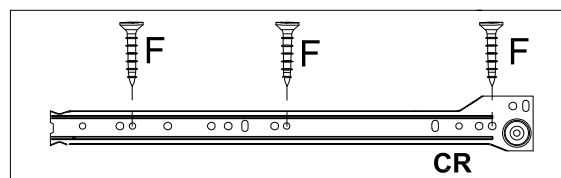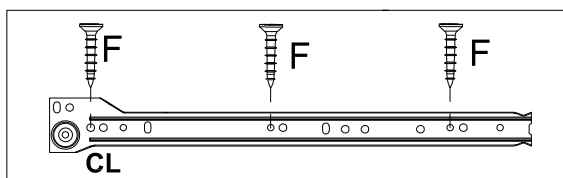


x2

The product only includes two piece each of the 10 boards.
The arrows indicate a 180° flip, with no other meanings.




Fx36

M3 x 12 mm







CL x6



CR x6

STEP 6

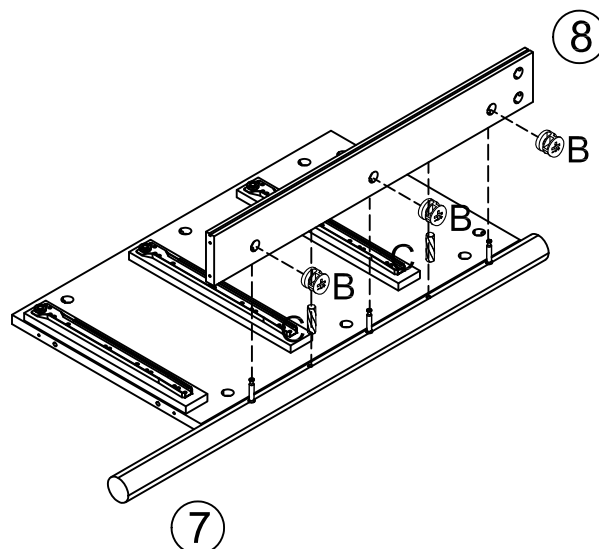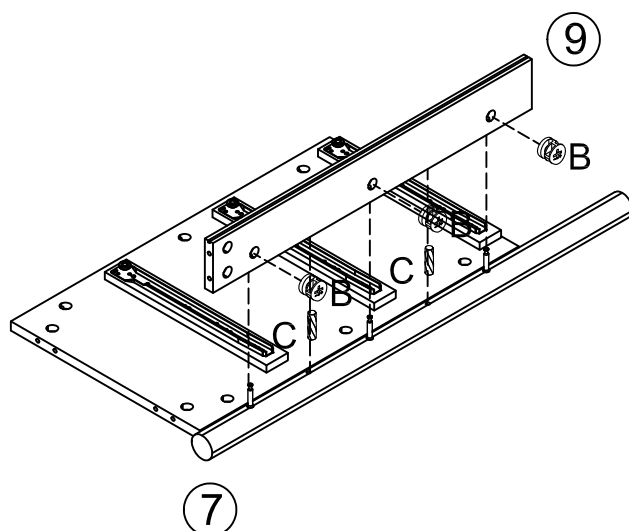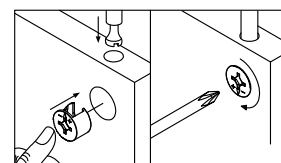




Cx4

M6 x 30 mm







B x6


STEP 7

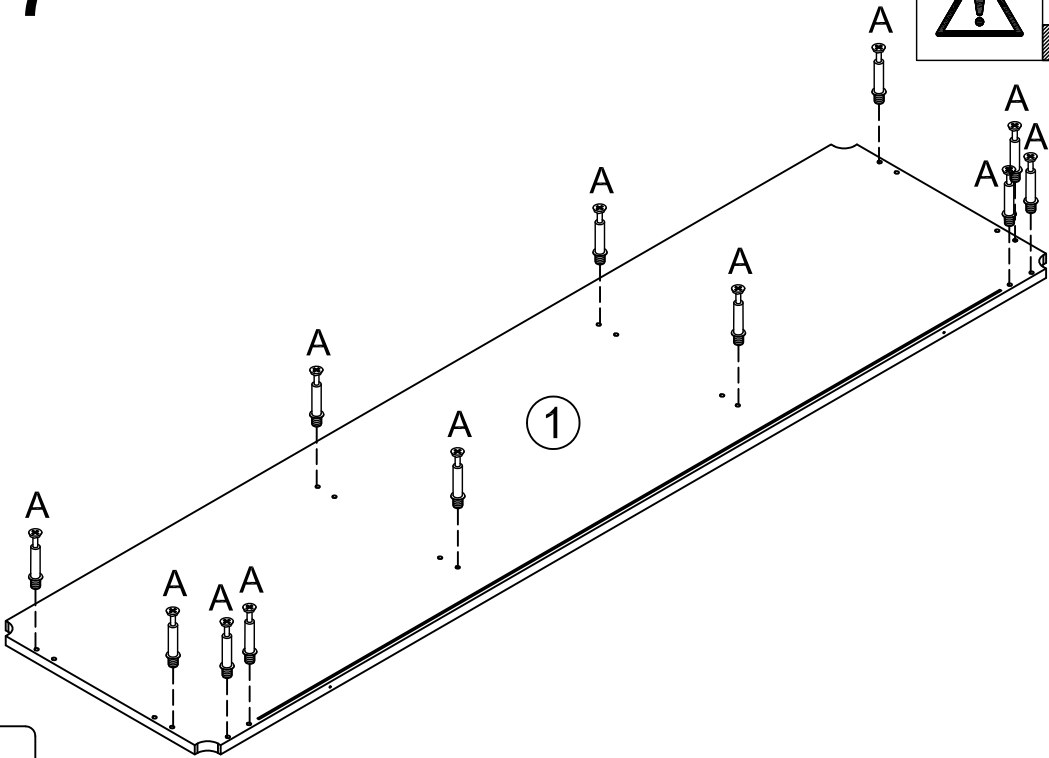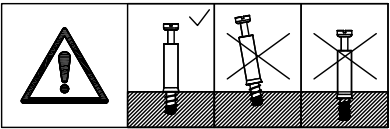



STEP 8

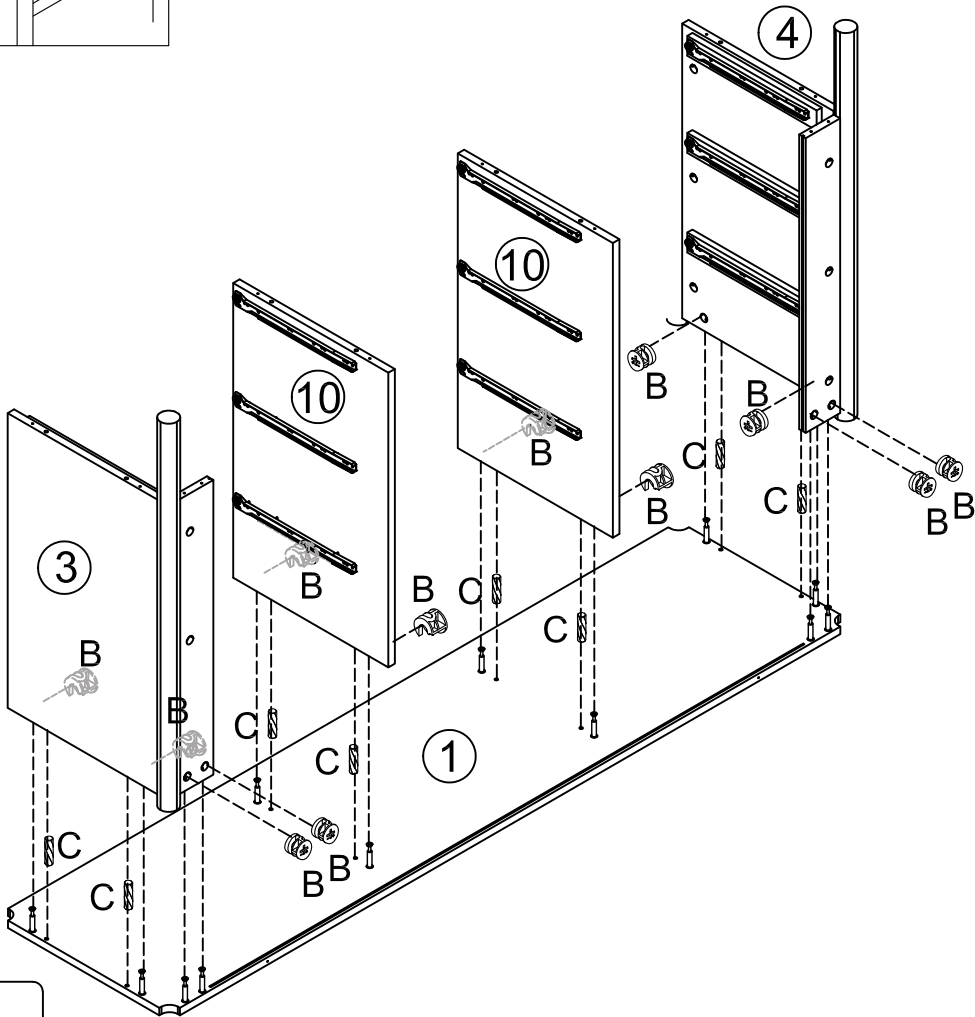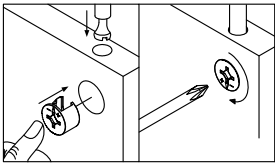

STEP 9

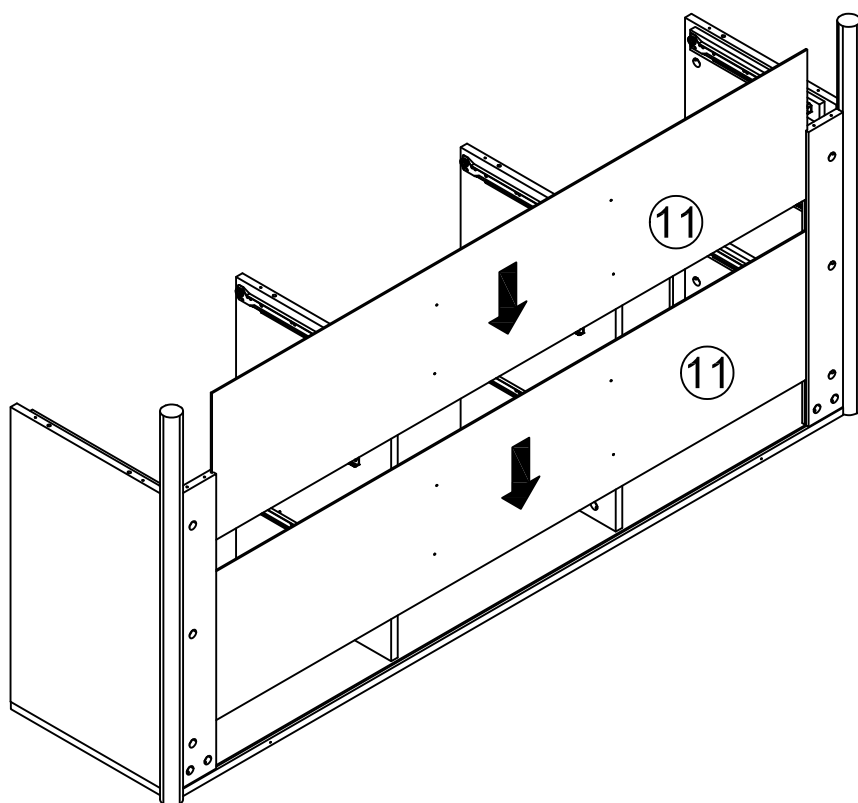

STEP 10

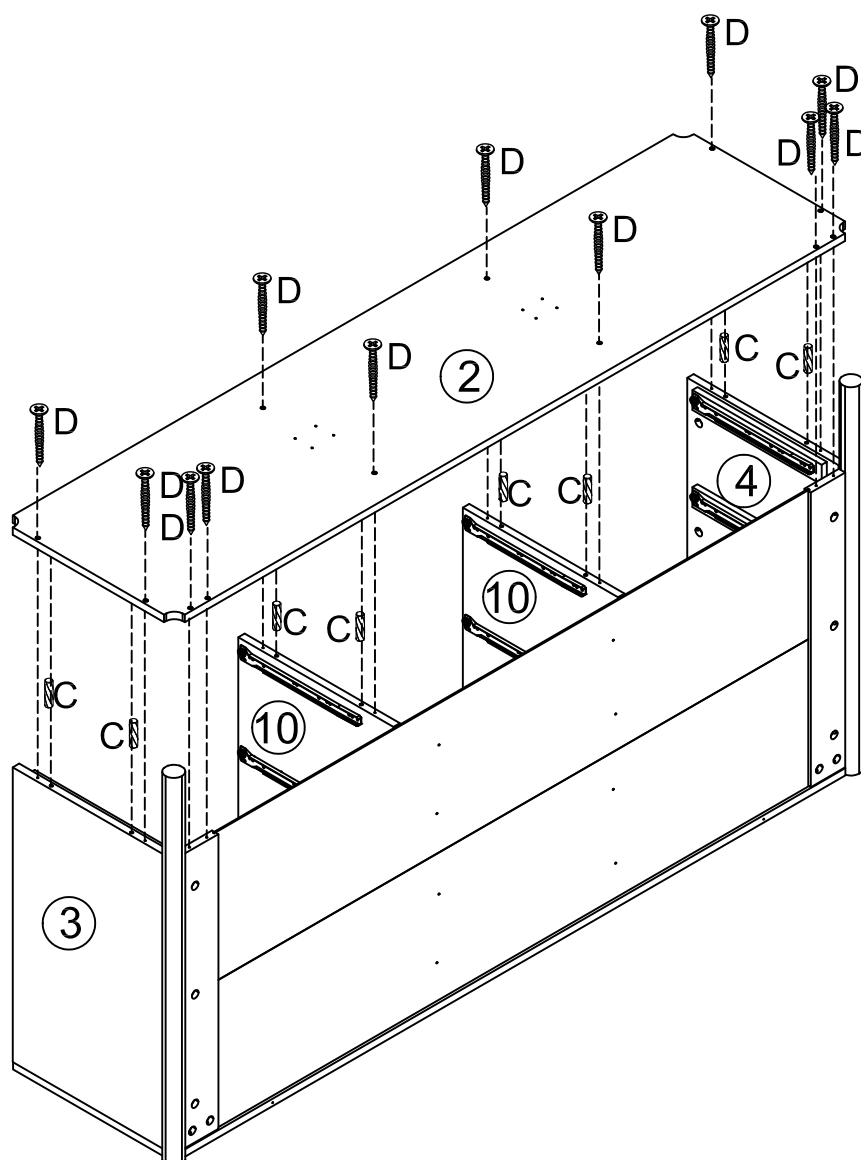

Cx8


M6 x 30 mm



D x12

M4 x 35 mm

STEP 11

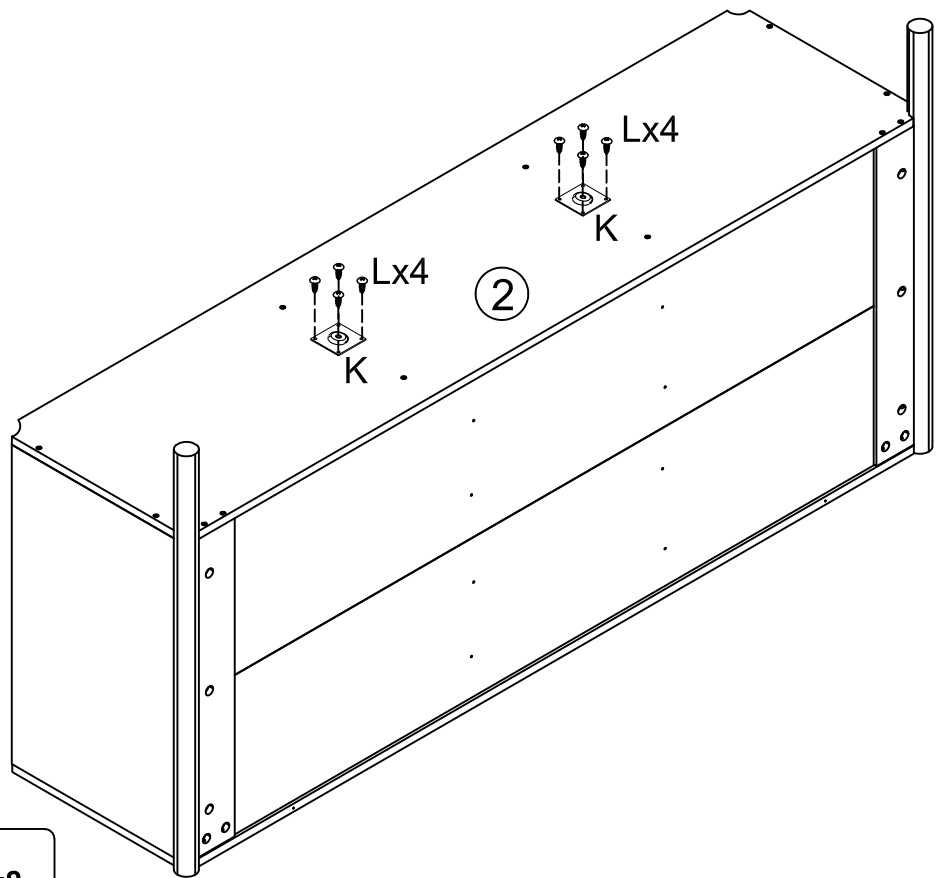


Kx2



L x8




M4 x 14 mm

STEP 12

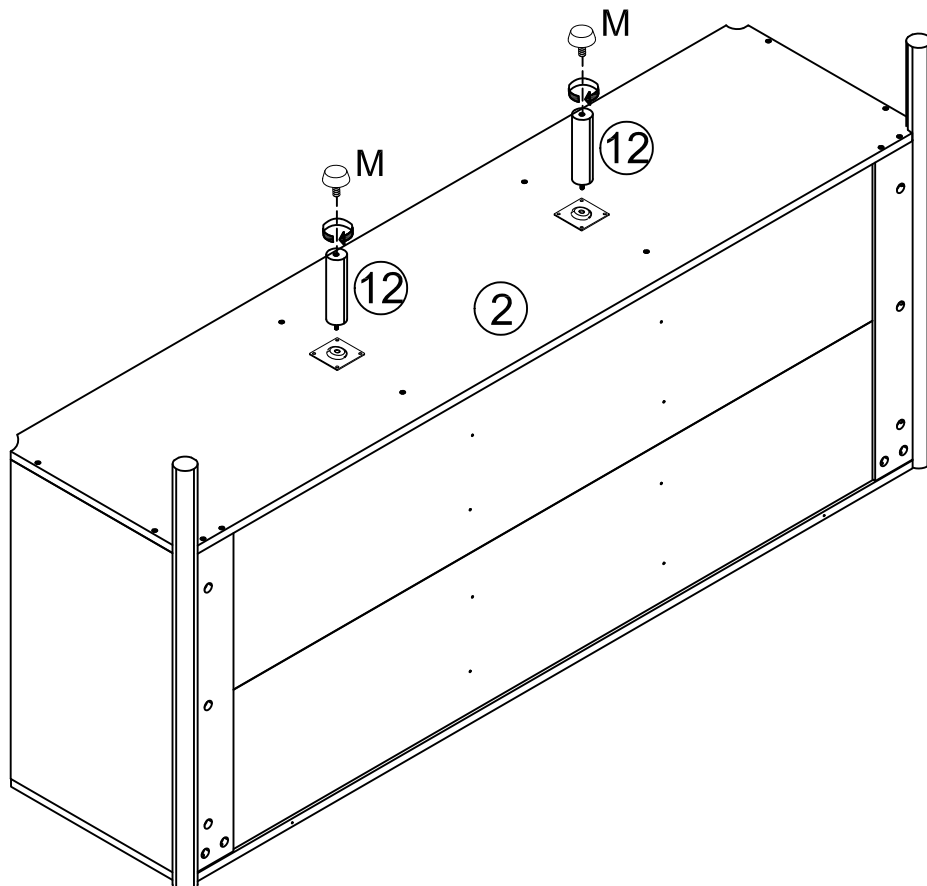

Mx2

STEP 13

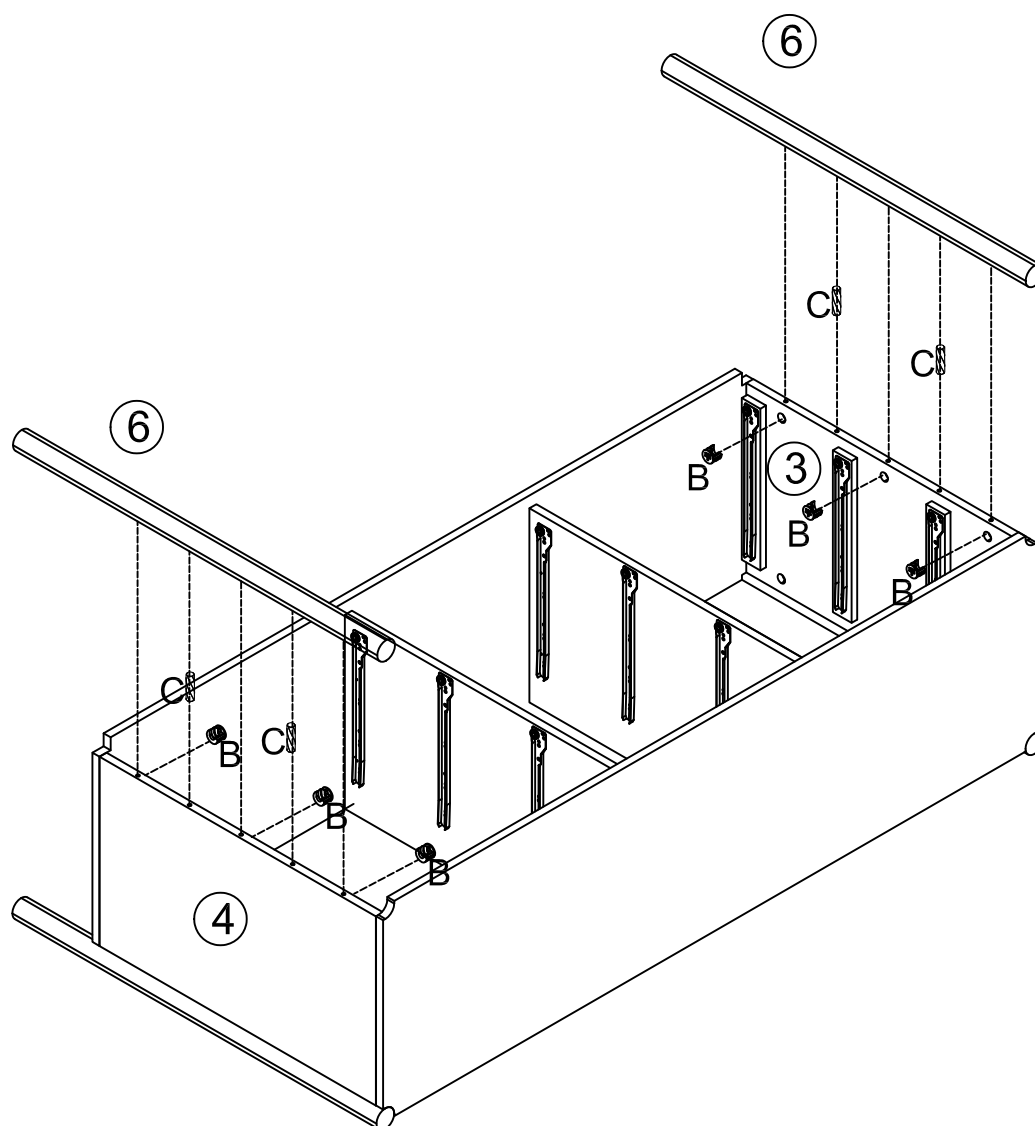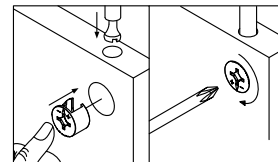


Cx4

M6 x 30 mm













B x6


STEP 14

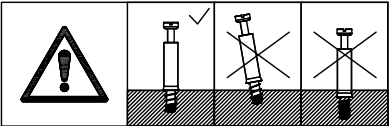








x3

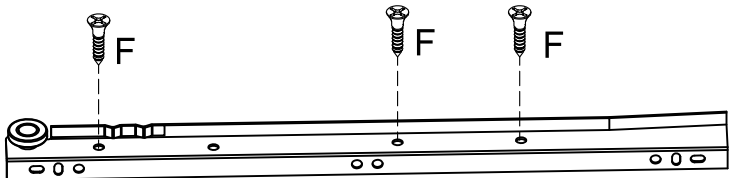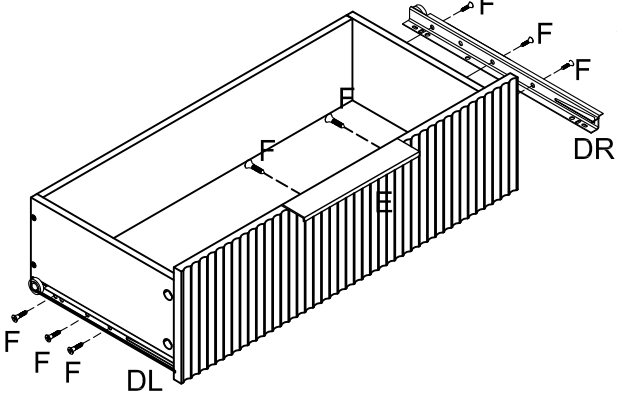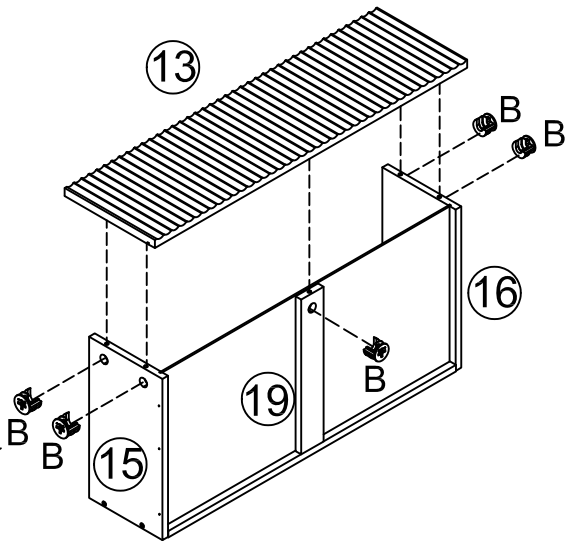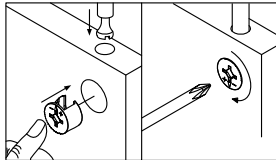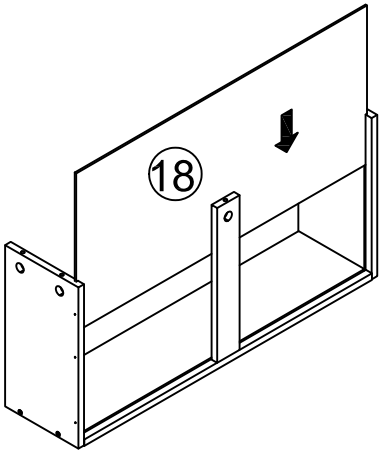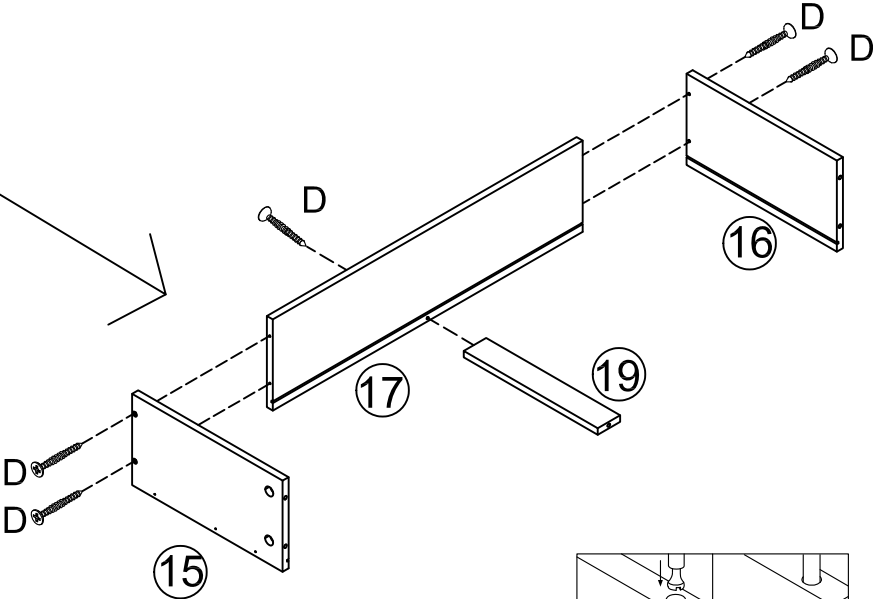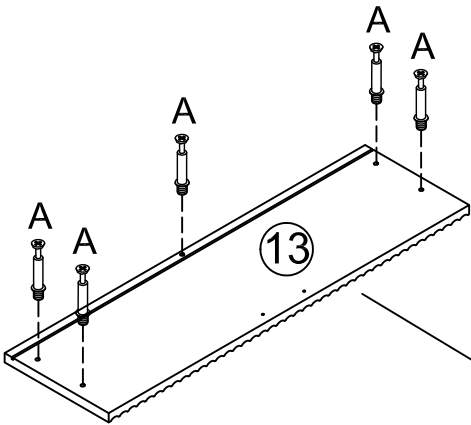

STEP 15

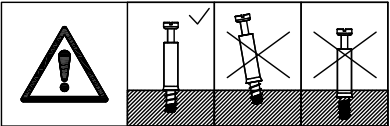

x3

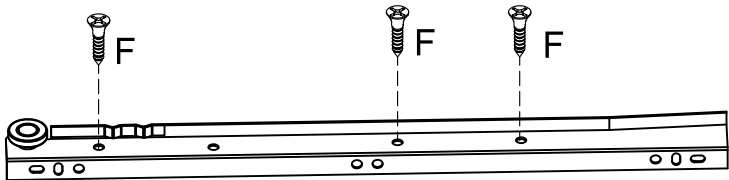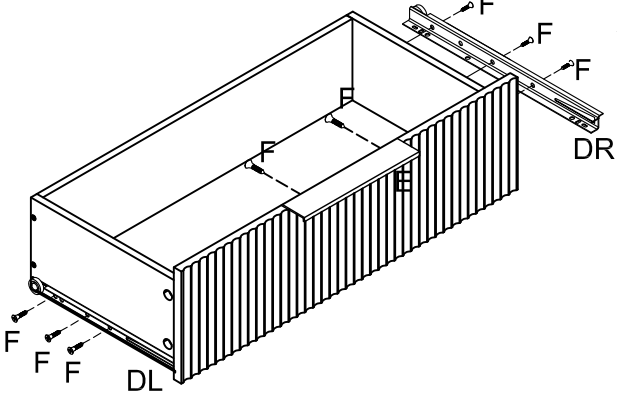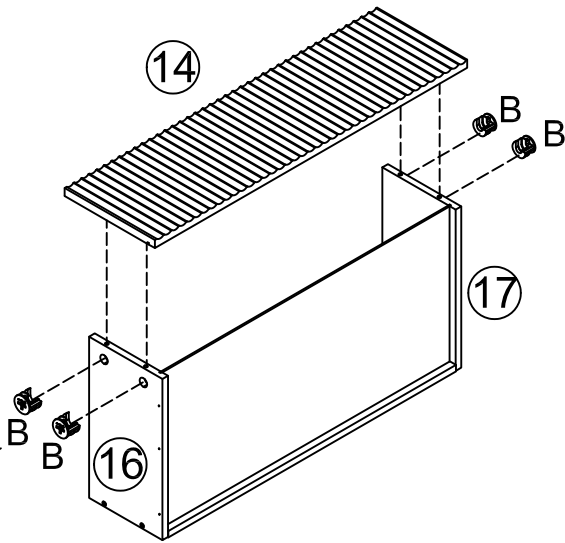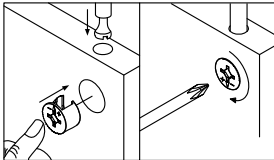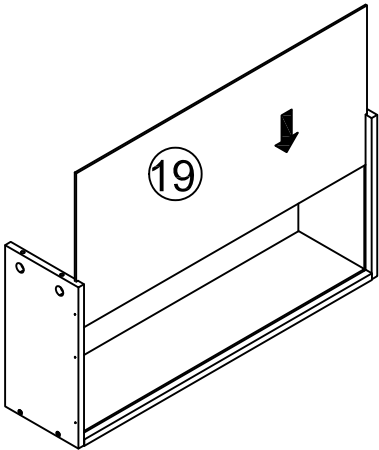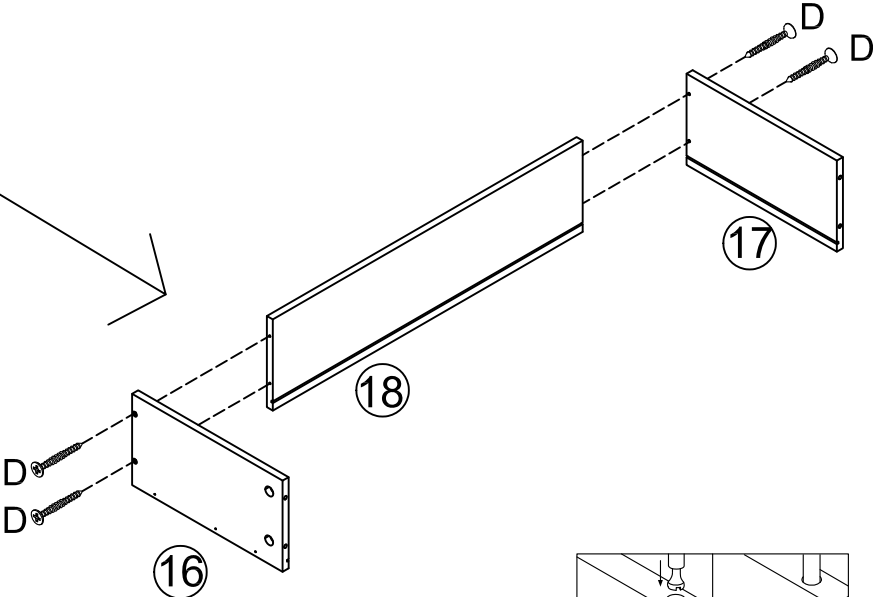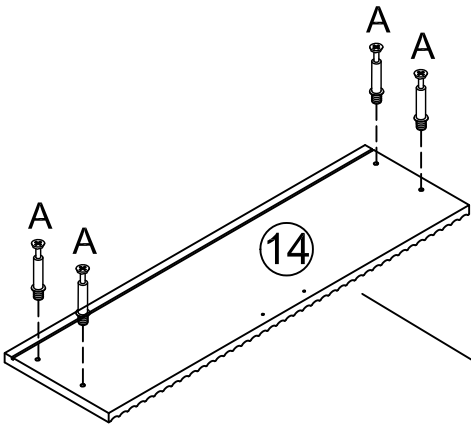

E x3



D x12
M4 x 35 mm




B x12




A x12



F x24
M3 x 12 mm




DLx3











DRx3

STEP 16

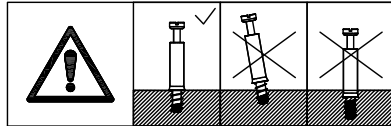


x3

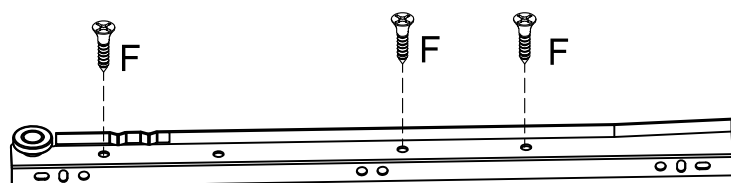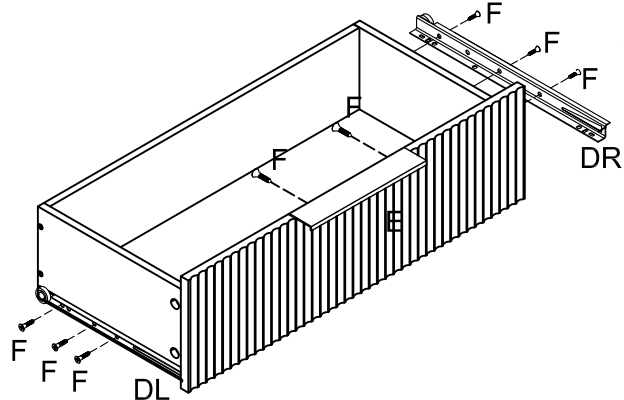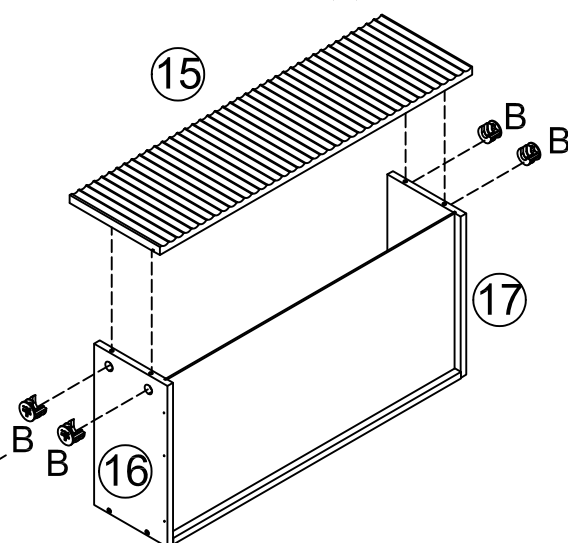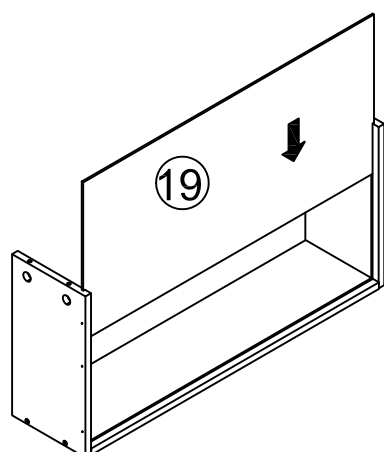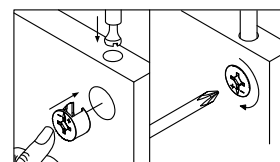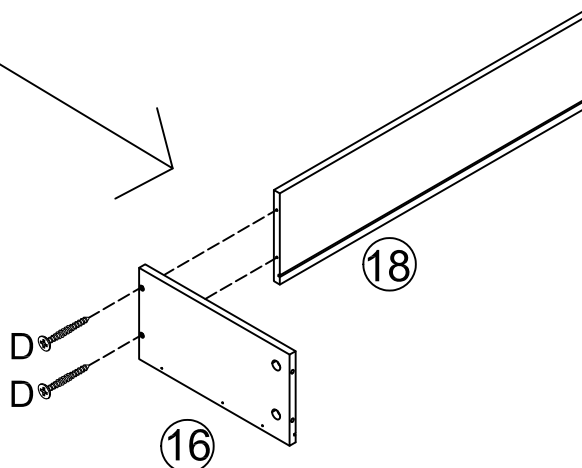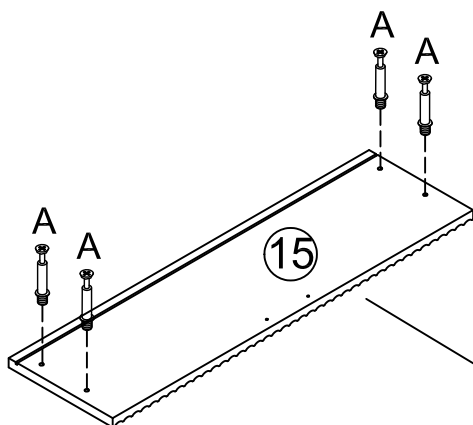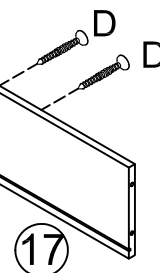

D x12
M4 x 35 mm




B x12



A x12



F x24
M3 x 12 mm



DLx3







DRx3

STEP 17

Fix the anti-tipping device J on Part 1 with the short screws firstly.

Drill holes on the wall where it is placed, and then use the long screw and expansion screw I. The installation location is as shown in the figure below.

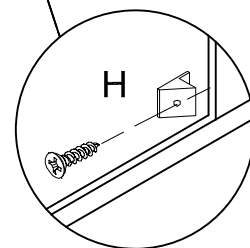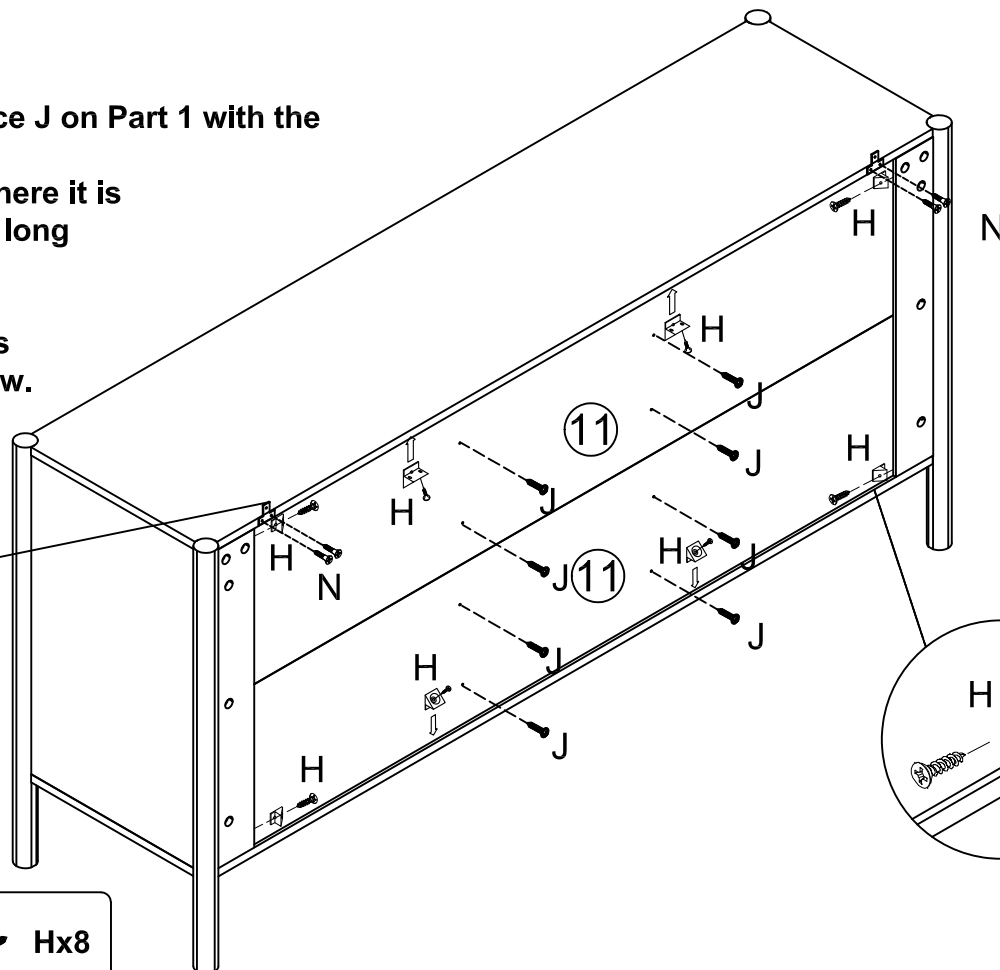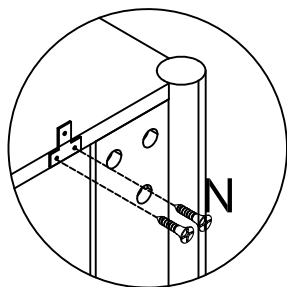

Nx2




Jx8

M2.5 x 12 mm



Hx8

STEP 18

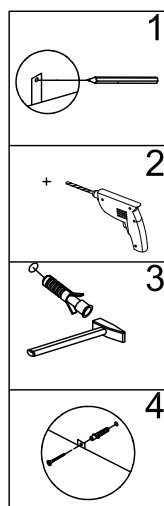

WALL

N D

13

13

13

14


14

14

15

15

15



Nx2



Dx2

M4 x 35 mm

