



Installation Manual of Trim Kit

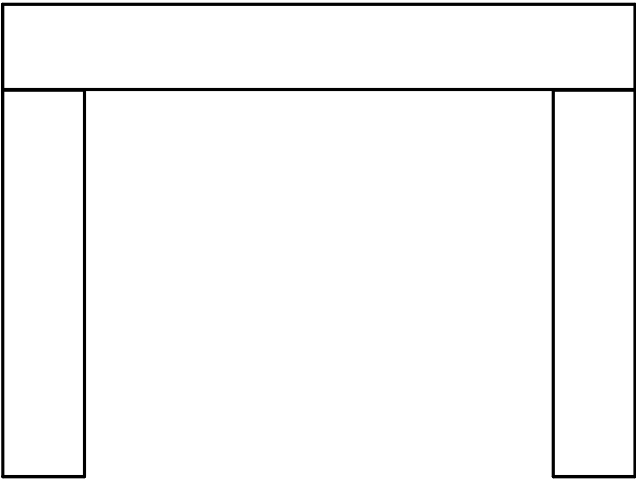

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.


1.PRODUCT DIMENSIONS

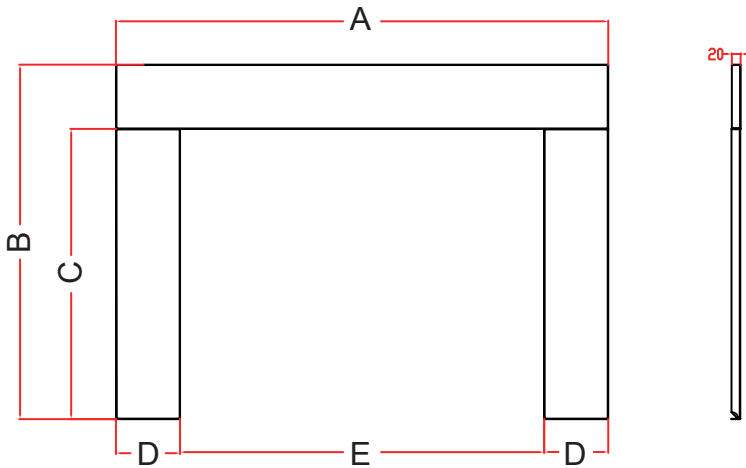

Unit	A	B	C	D	E
mm	1002	750	602	147.5	707
inches	39.4	29.5	23.7	5.8	27.8
mm	1065	750	602	147.5	770
inches	41.9	29.5	23.7	5.8	30.3
mm	1132	816	668	147.5	837
inches	44.5	32.1	26.3	5.8	33.0
mm	1132	653	505	147.5	837
inches	44.5	25.7	19.9	5.8	33.0
mm	1243	816	668	147.5	948
inches	48.9	32.1	26.3	5.8	37.3
mm	1318	816	668	147.5	1023
inches	51.9	32.1	26.3	5.8	40.3


2.PARTS LIST

A.

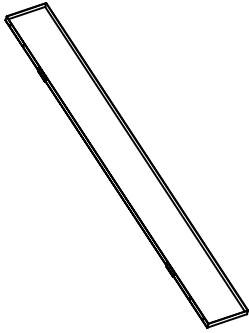


Top Panel(1PC)

B.

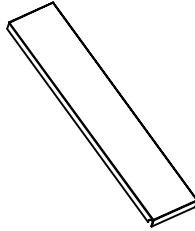


Right Panel(1PC)

C.

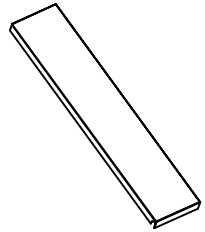

Left Panel(1PC)

D.

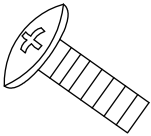


Screw M4*8(4Pcs)

E.



Spring Washer(4Pcs)


F.

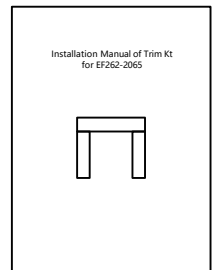

Manual(1PC)


2.INSTALLATION

Tools Required

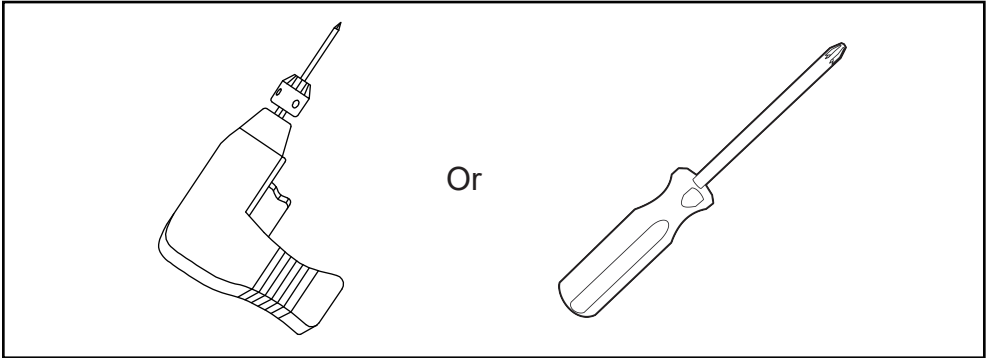

STEP 1


Use four screws to secure the top panel to the left and right side panels.

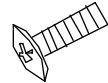

M4*8 X 4 pcs




Spring Washer
(4pcs)

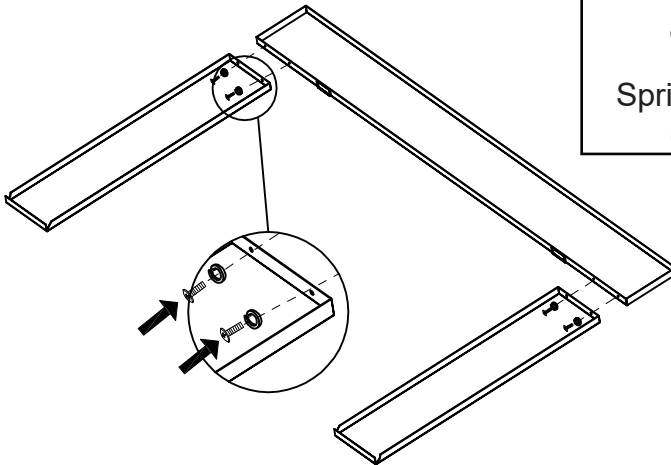

STEP 2

Load the assembled Trim from the top and attach the magnet to the top of the Fireplace.

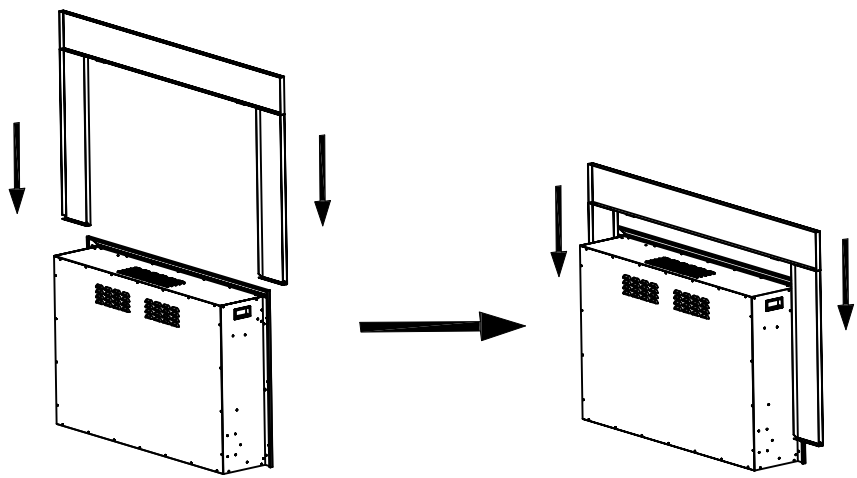

Finish Installation

