



SHOE CABINET

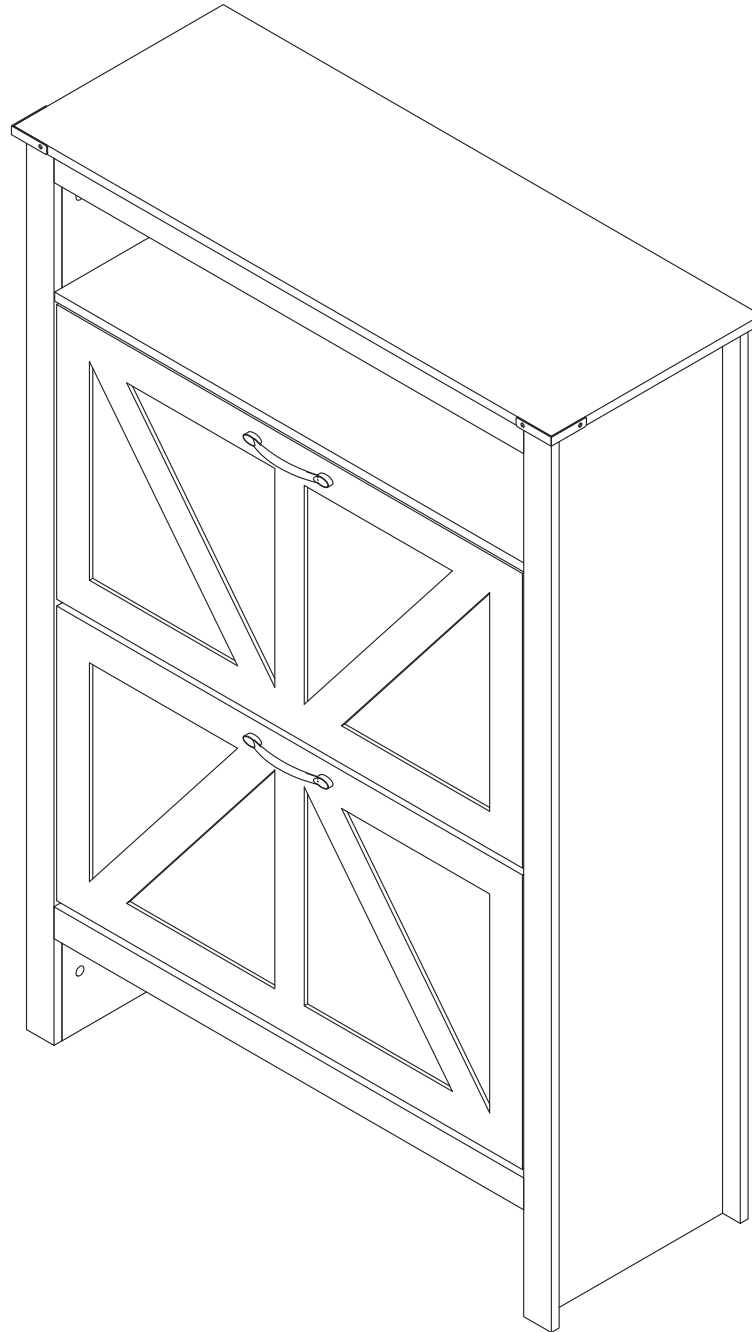



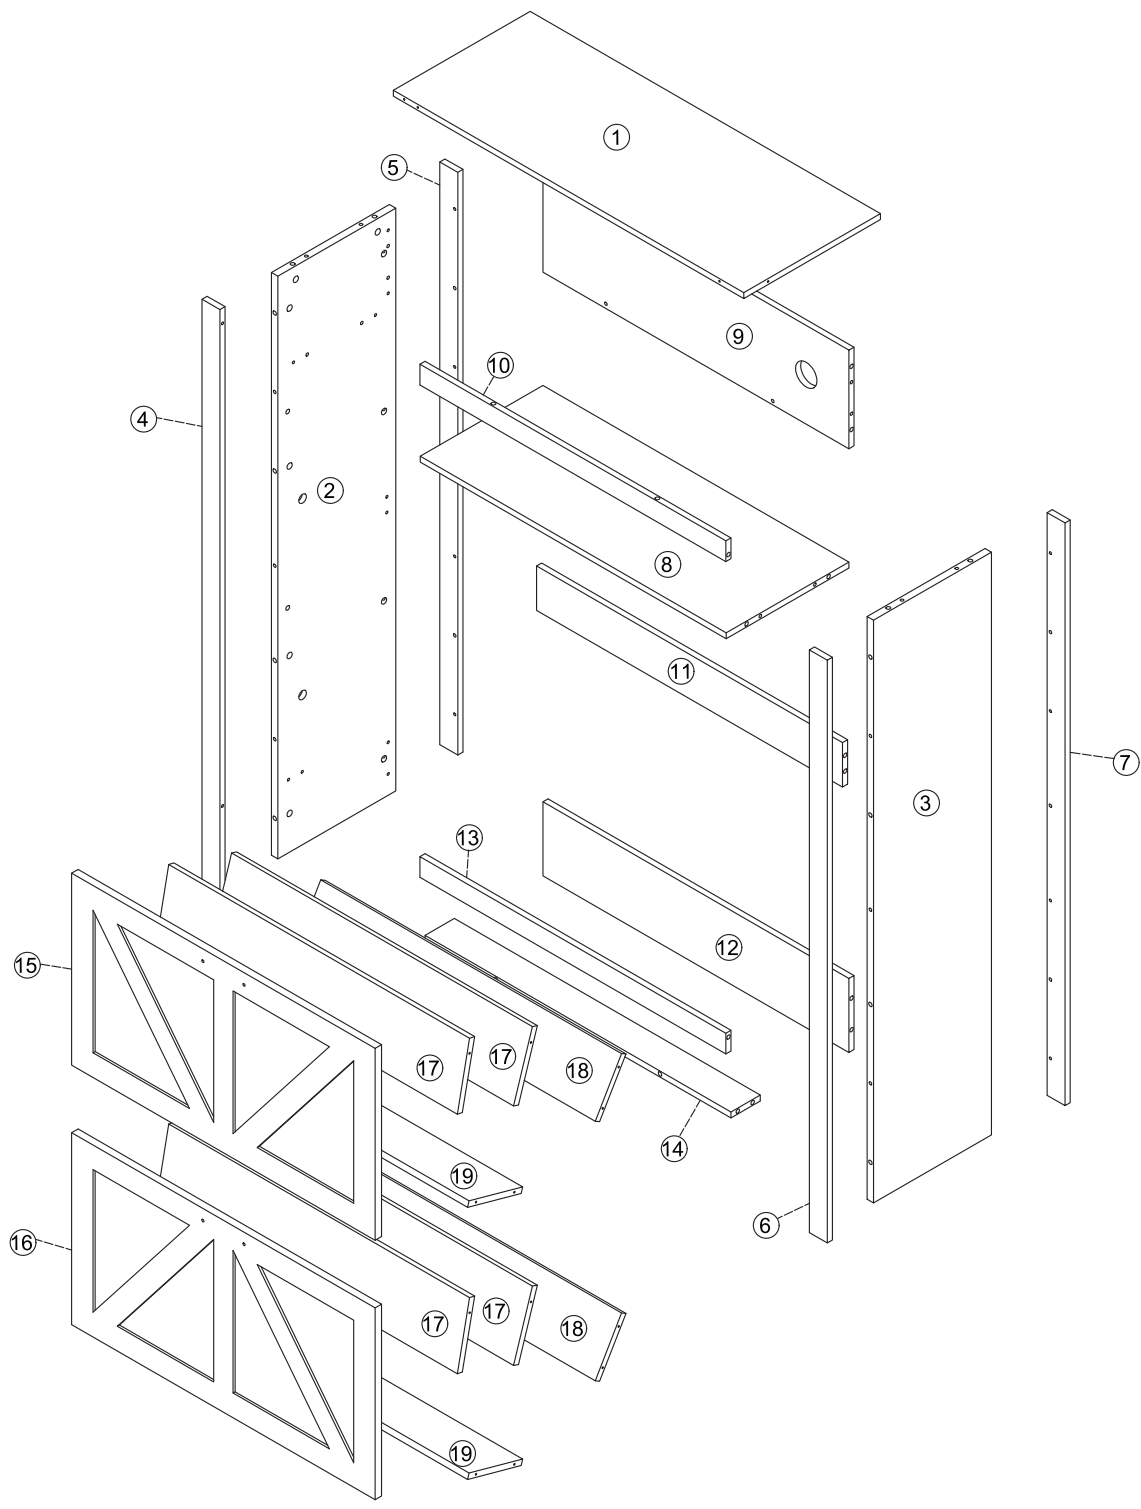



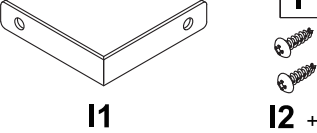

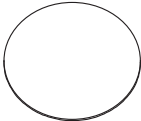




Any questions please contact us.

EXPLODED DRAWING:






PARTS:

 <div>A X50₊₄</div>	 <div>B X50₊₄</div>	 <div>C X20₊₃</div>
 <div>D1 D2 D3 D4</div> <div>D X2</div>	 <div>E X40₊₄ M4x14</div>	 <div>F1 F2₊₁</div> <div>F X2</div>
 <div>G X1</div>	 <div>H X4₊₁</div>	 <div>I1 I2₊₁</div> <div>I X2</div>
 <div>J1 J2 J3 J4</div> <div>J X2</div>	 <div>K X34₊₄</div>	 <div>L X1</div>

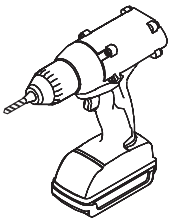

REMARK:


MINIFIX POSITION

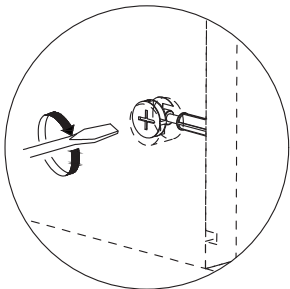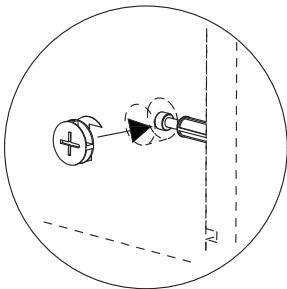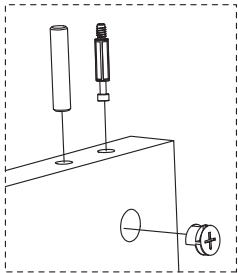

1.



REMARK:

Please do not screw **A** too deep or too shallow.


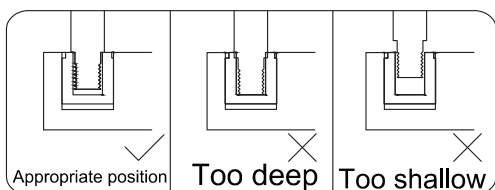


REMARK :




Put a blanket under the board to avoid scratch or damage.

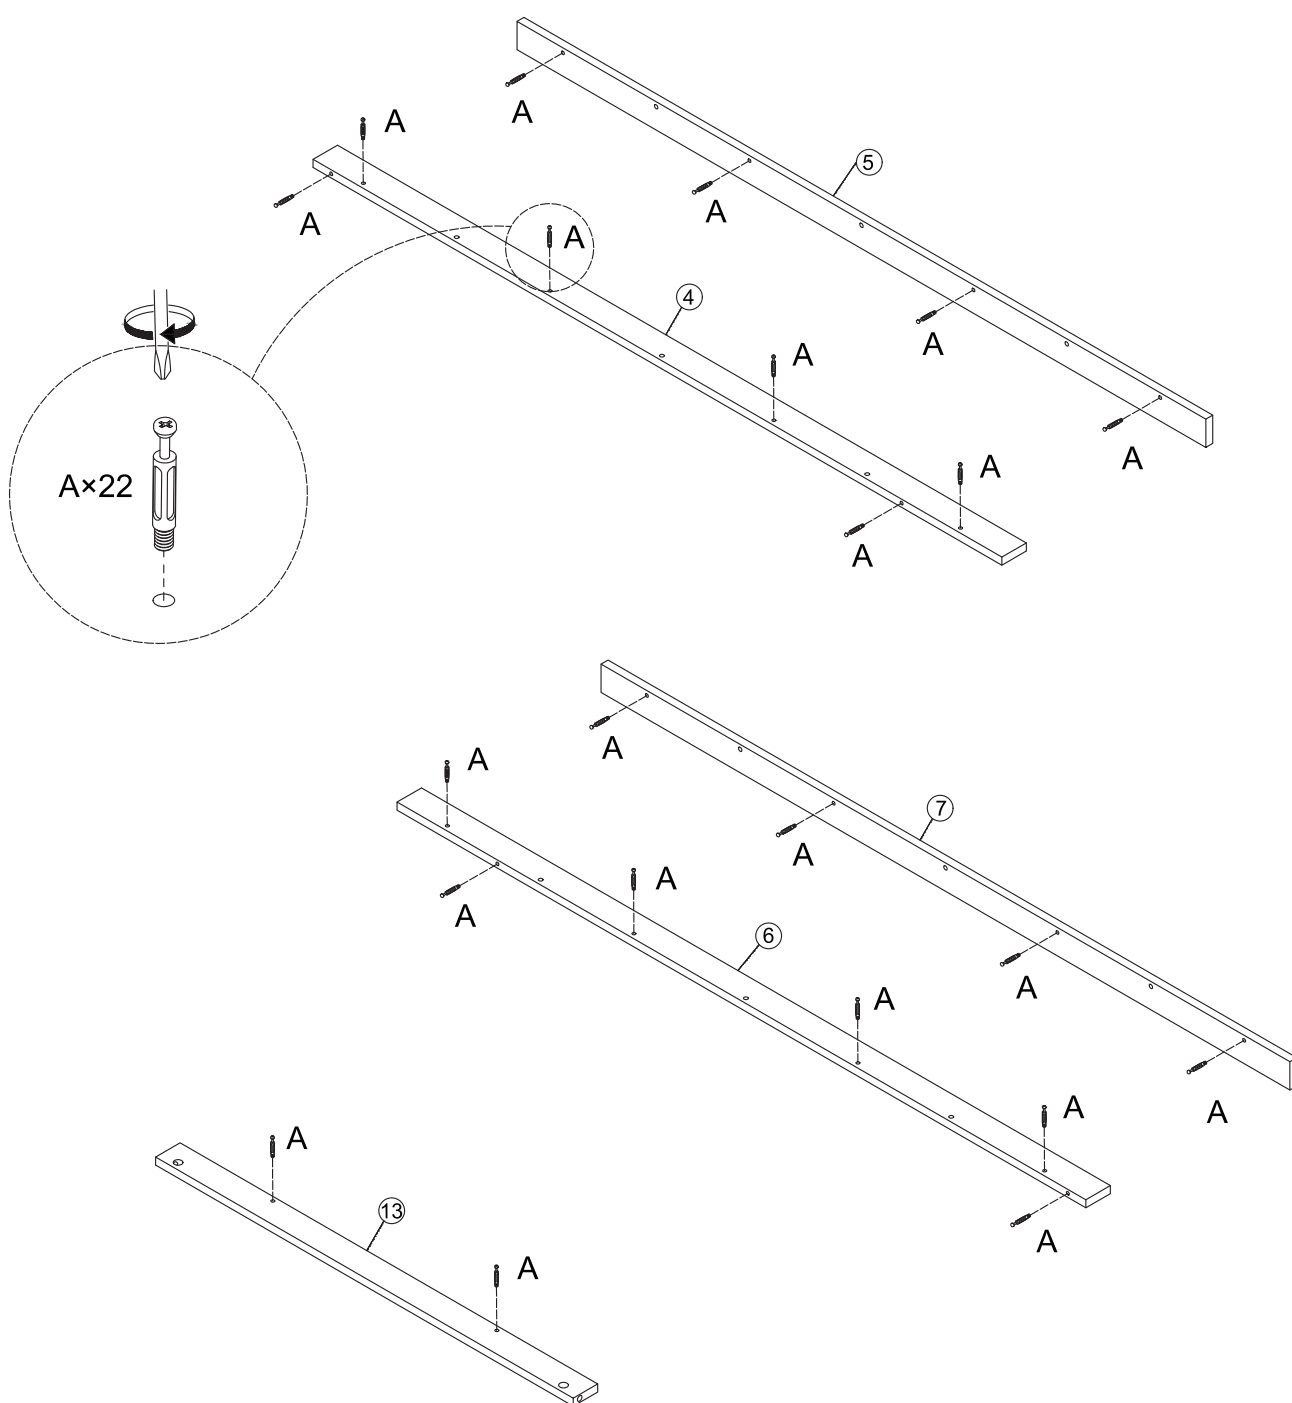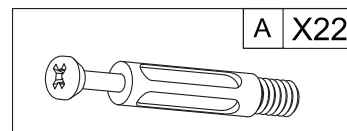



2.

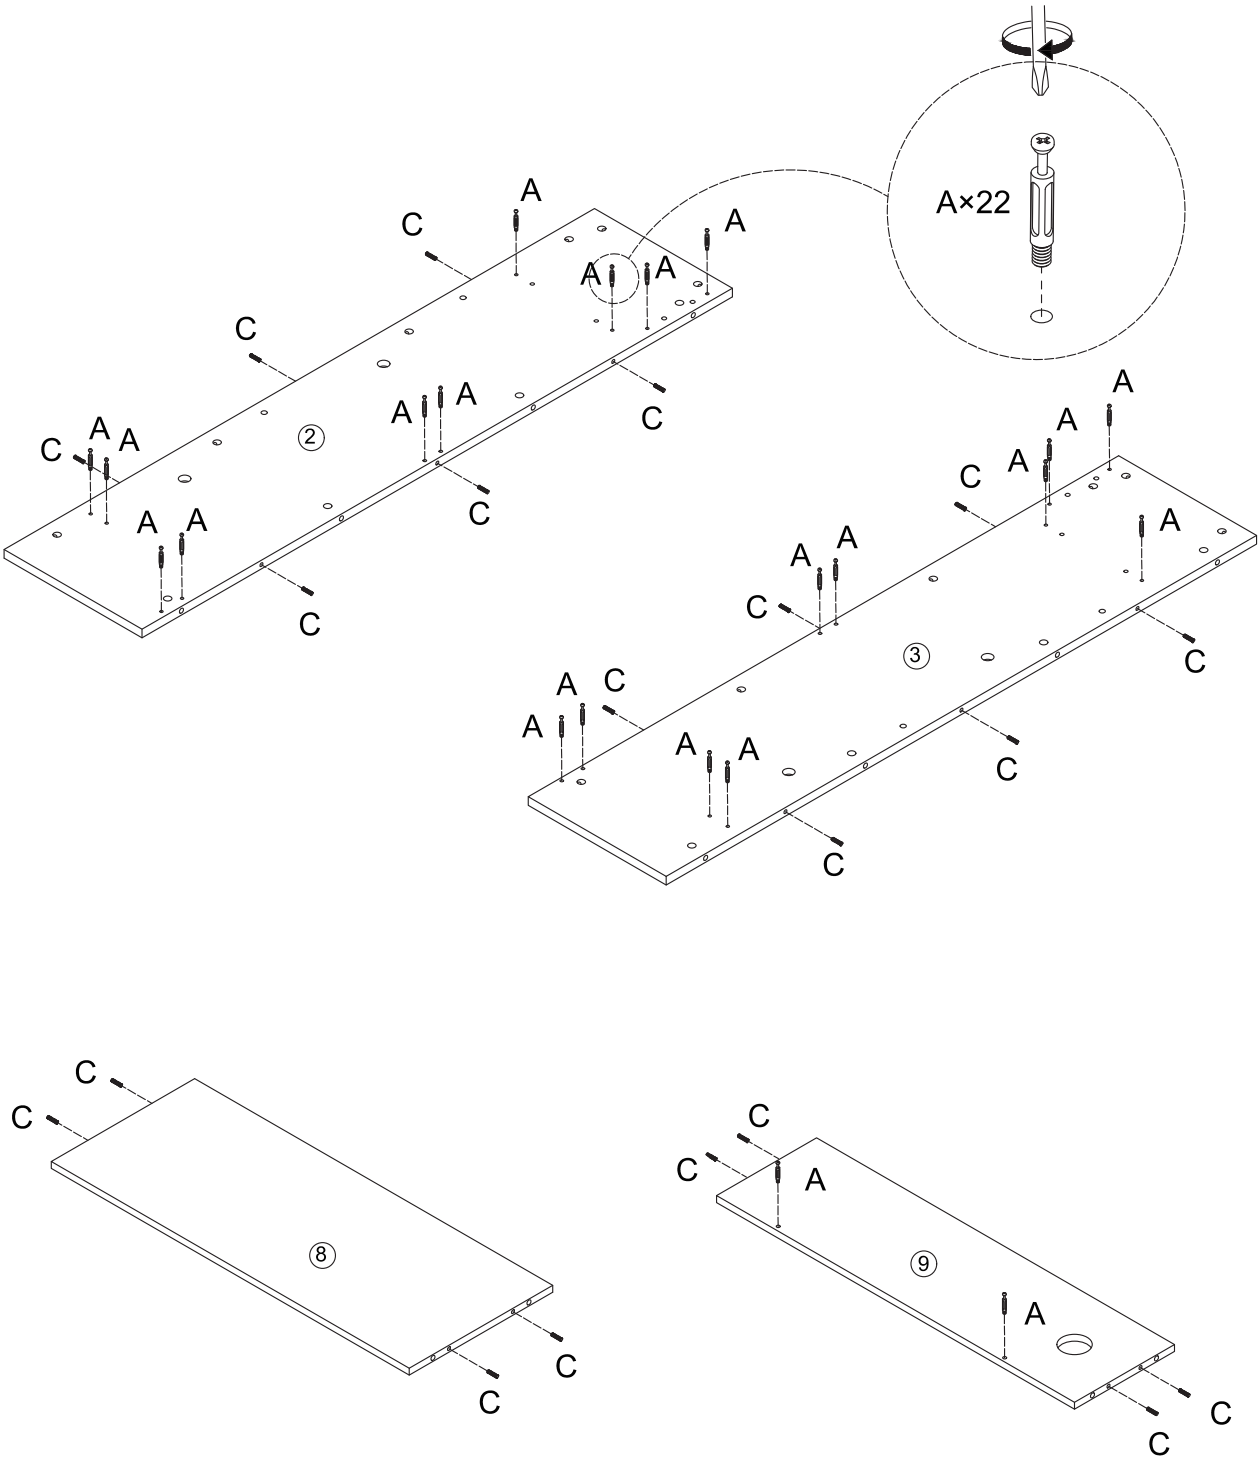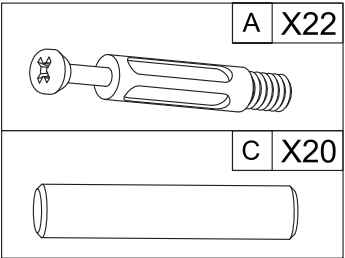



3.

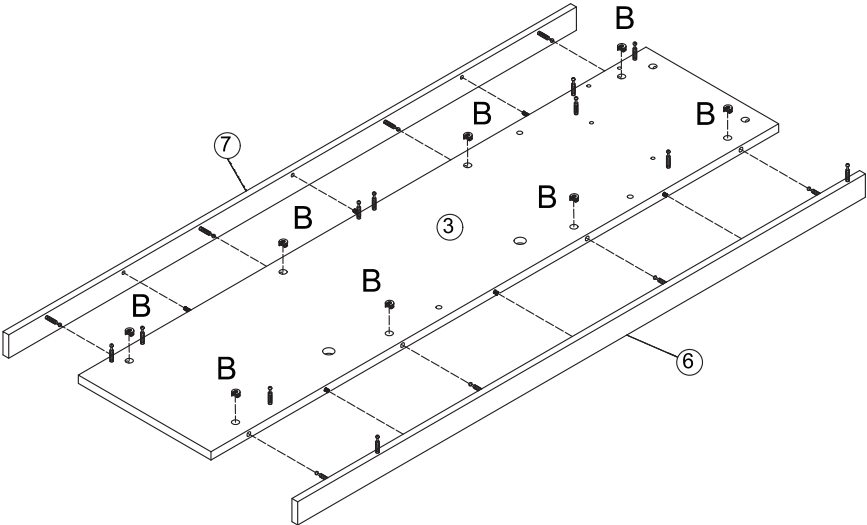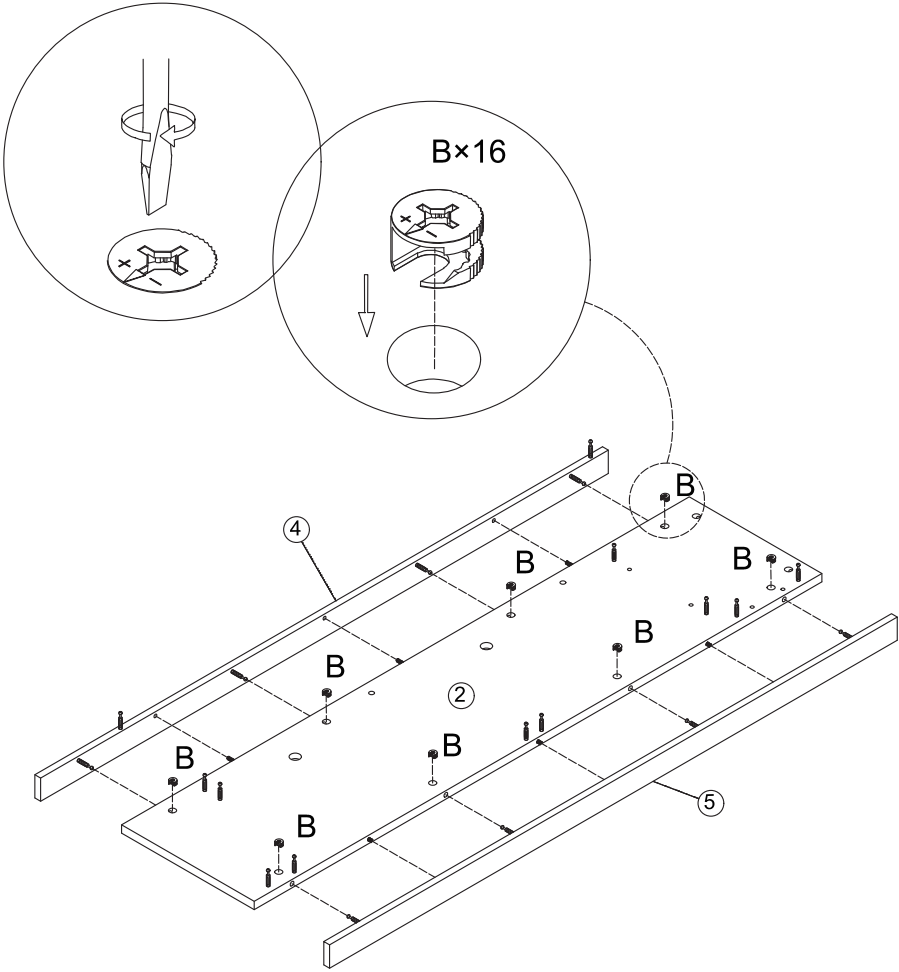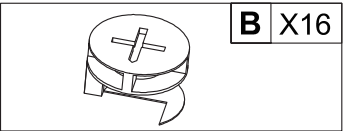




4.

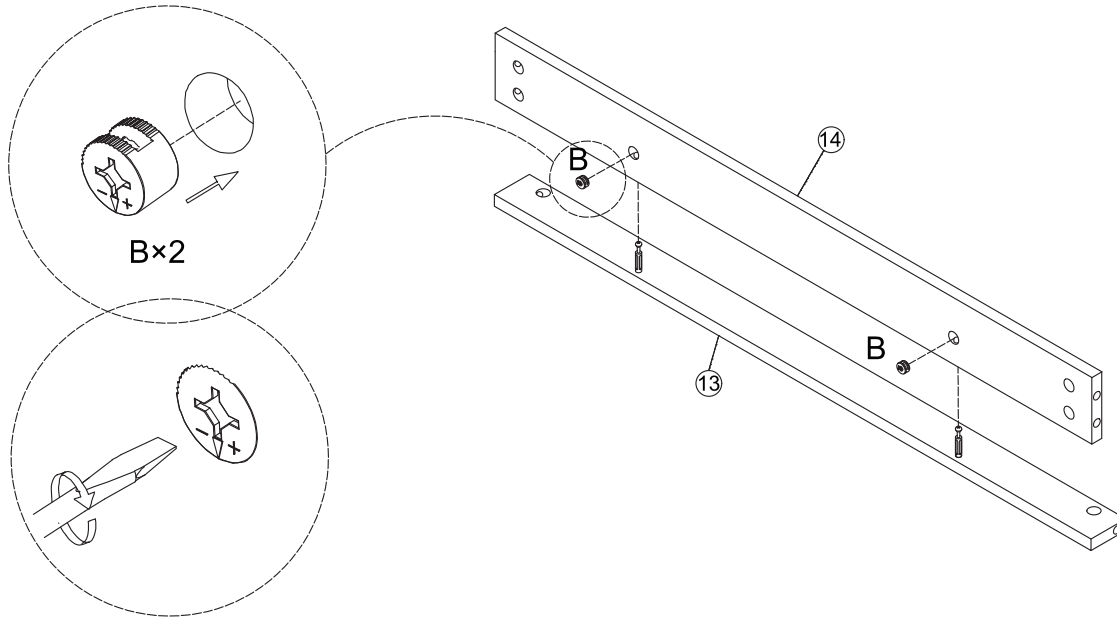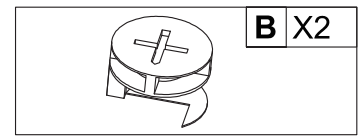




5.

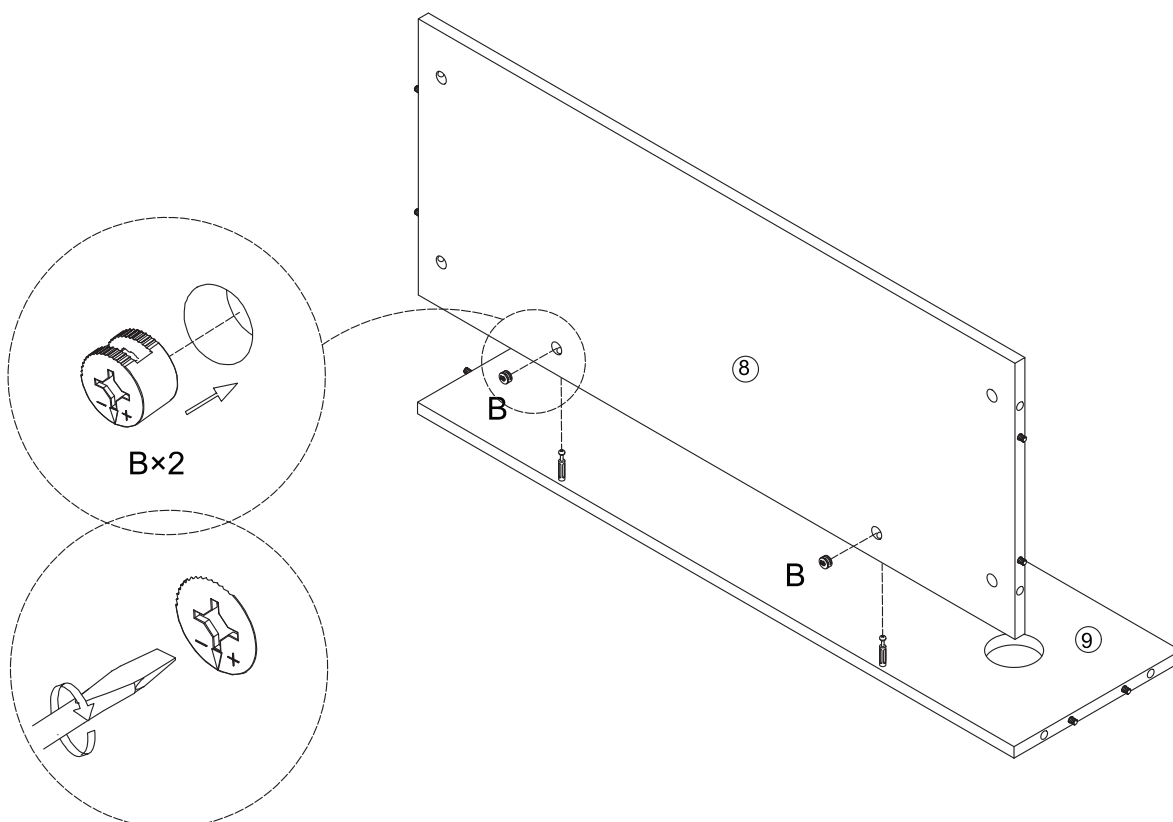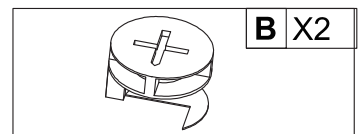



6.

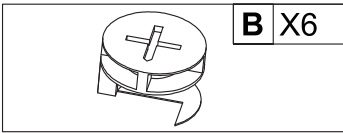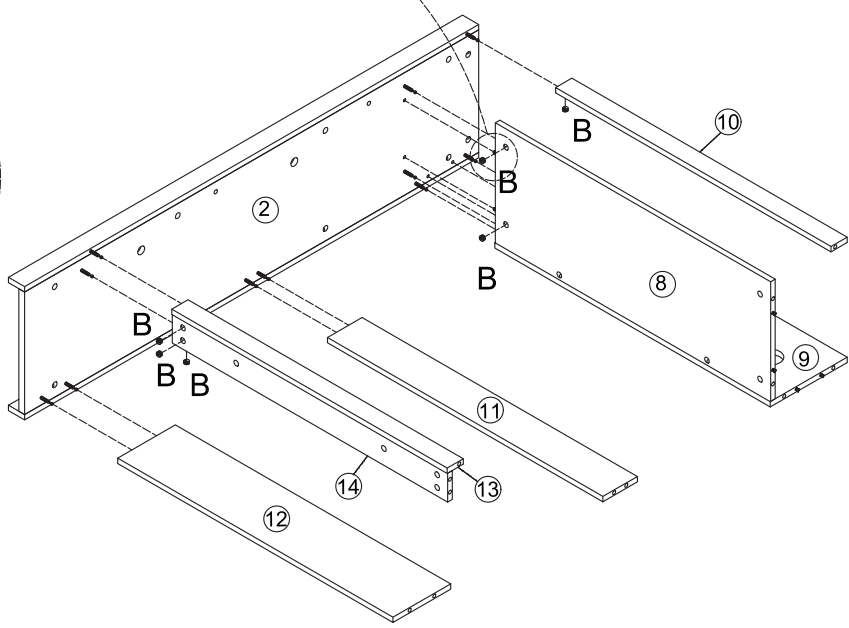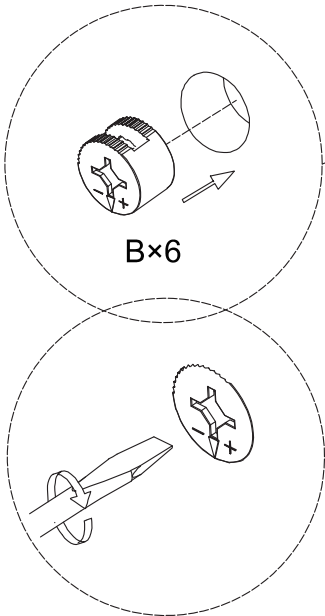



7.

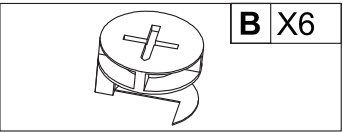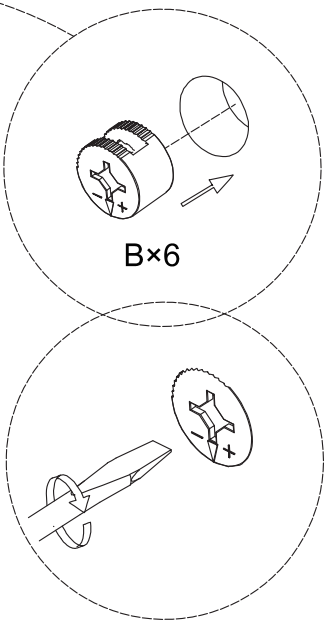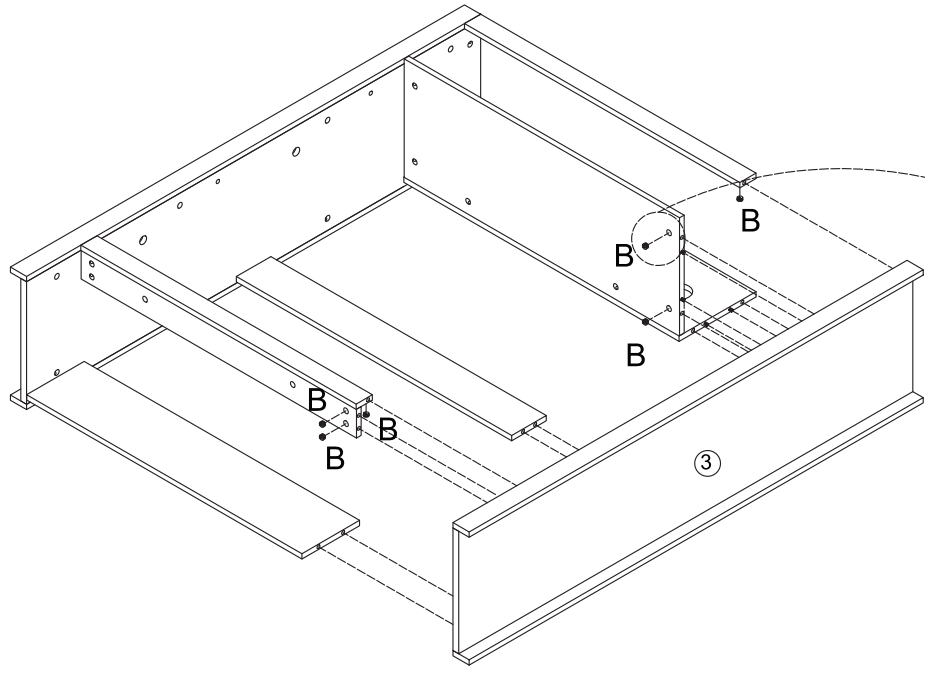

8.

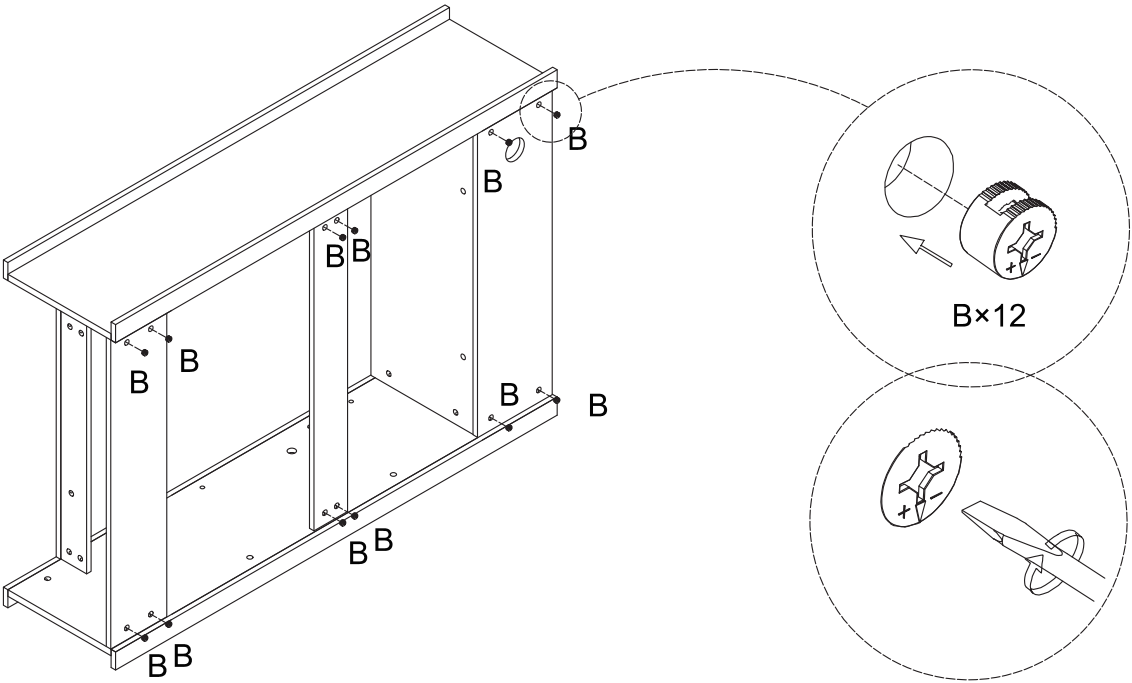
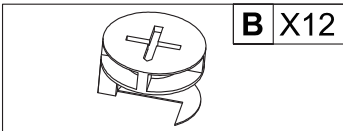


9.

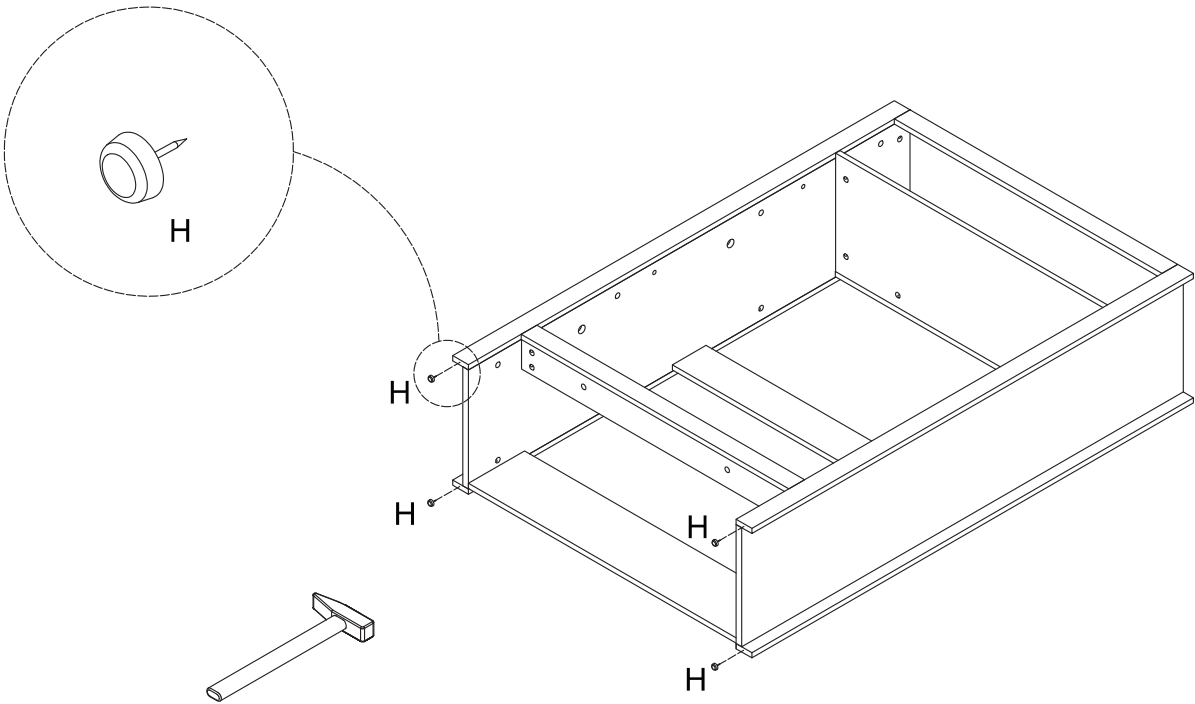
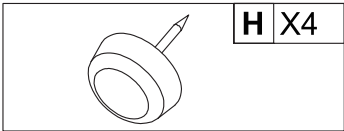


Need to bring your own hammer



10.

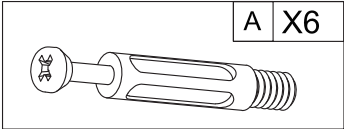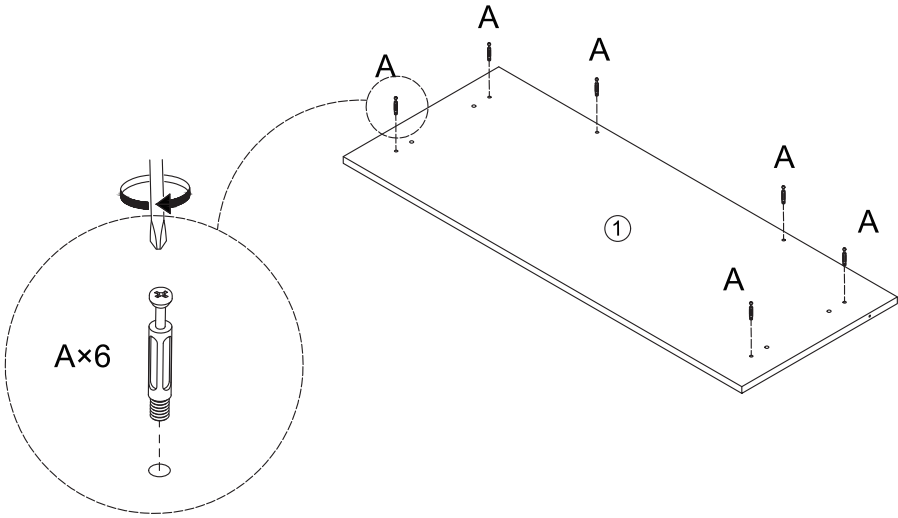

11.

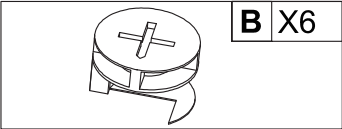
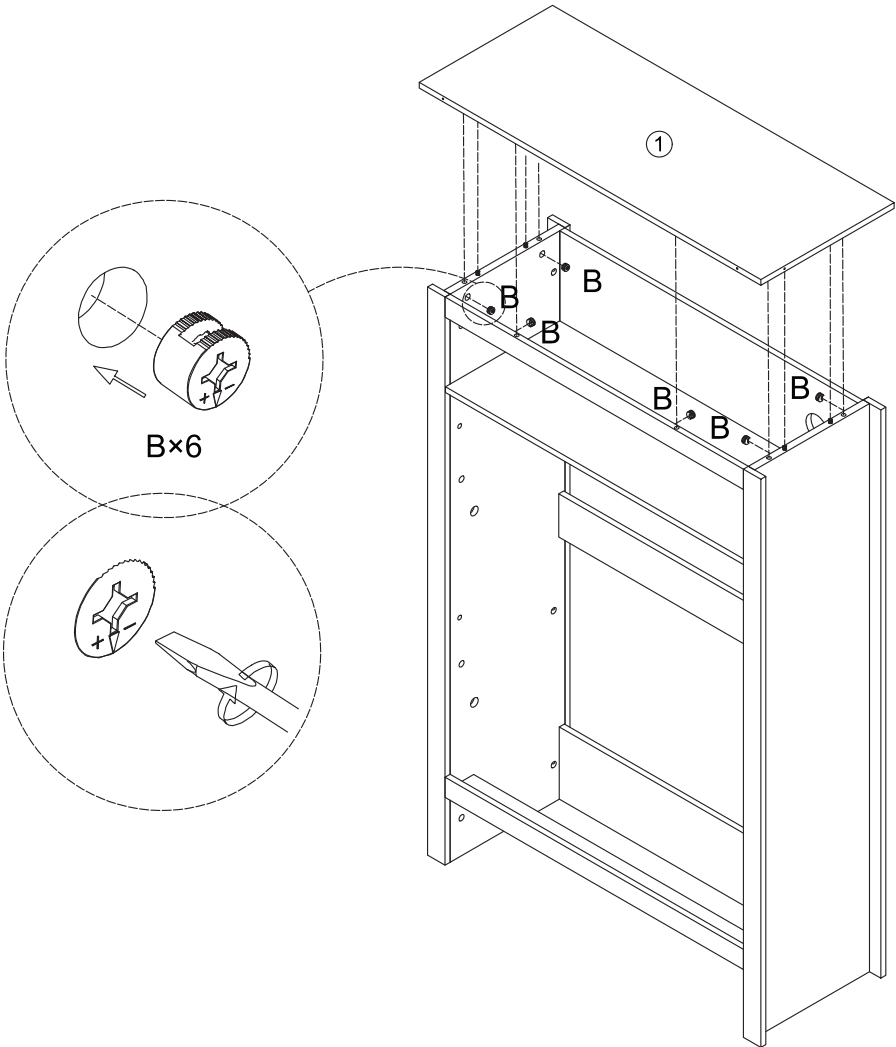


12.

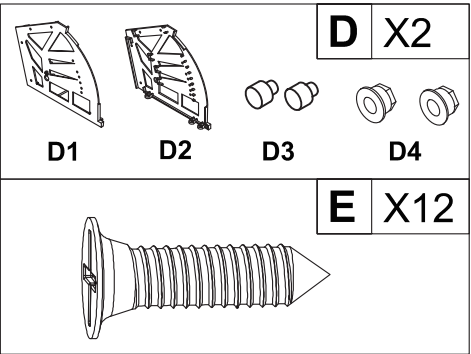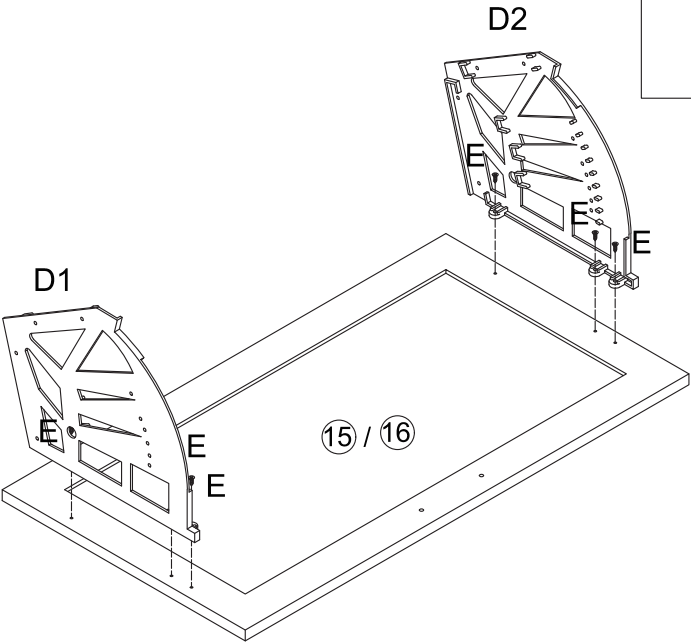



x2

13.

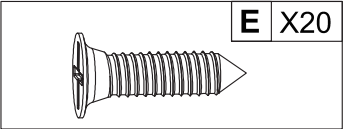
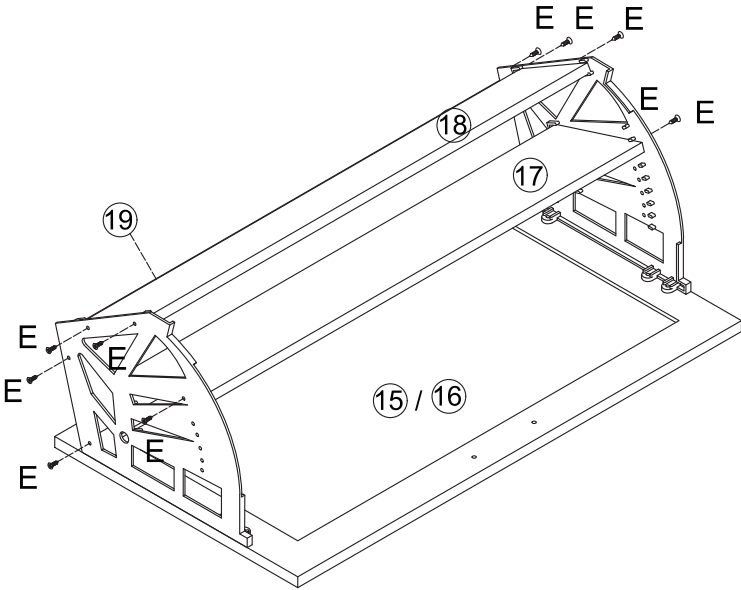


x2

14.

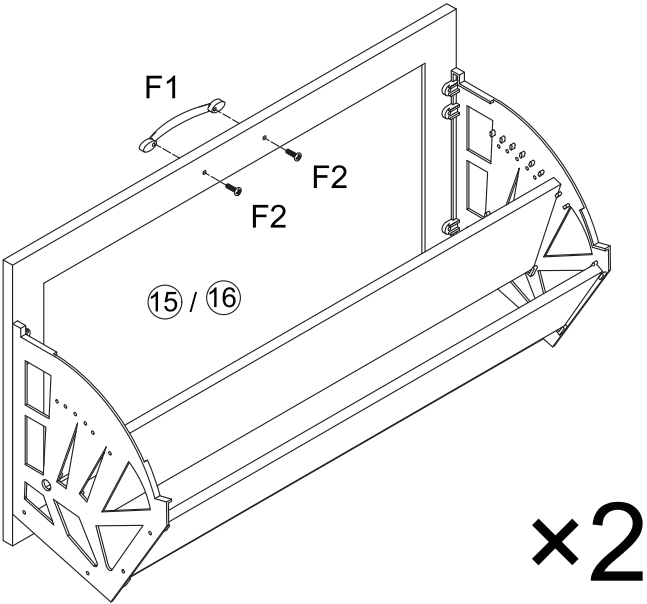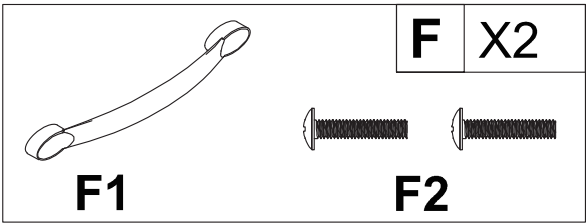



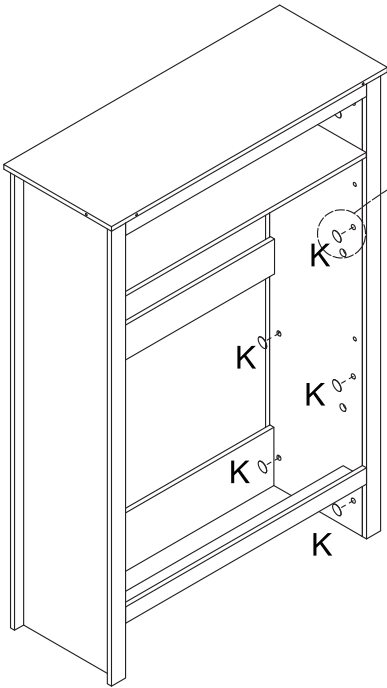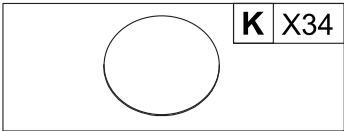

15.




Using Cover-up Sticker K *34 to cover the exposed part of Screws.

16.




D

X2




E

X4

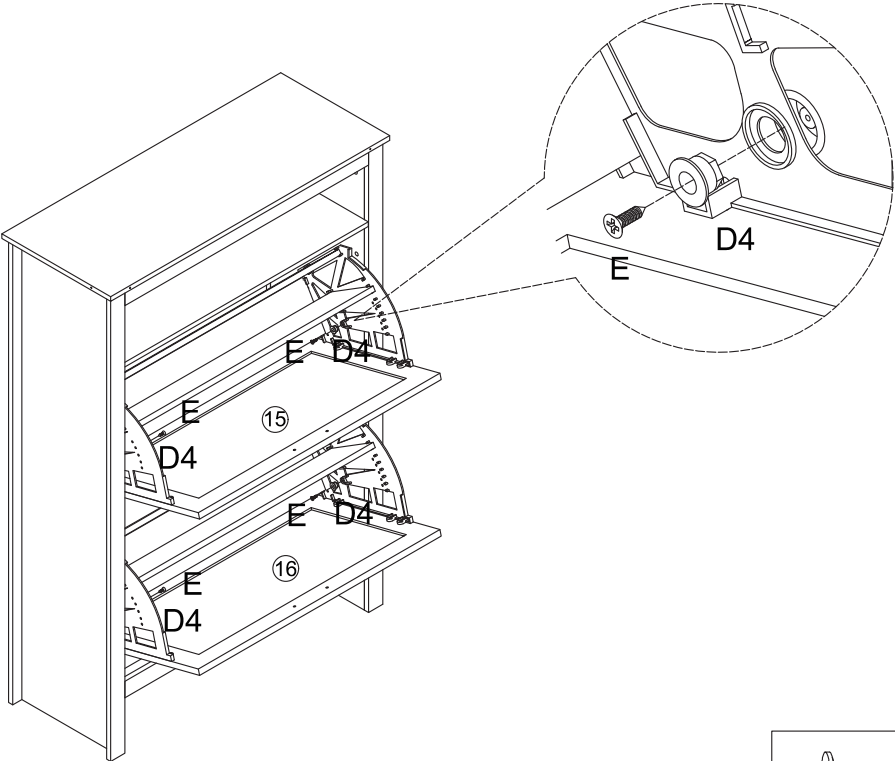


17.





E

X4


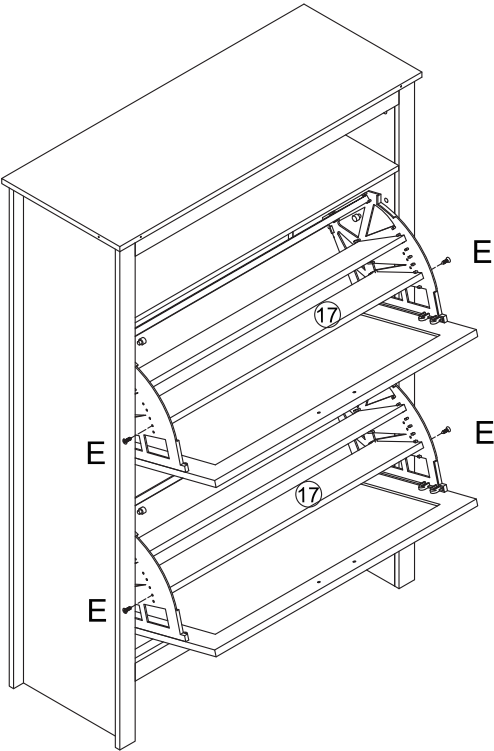


18.

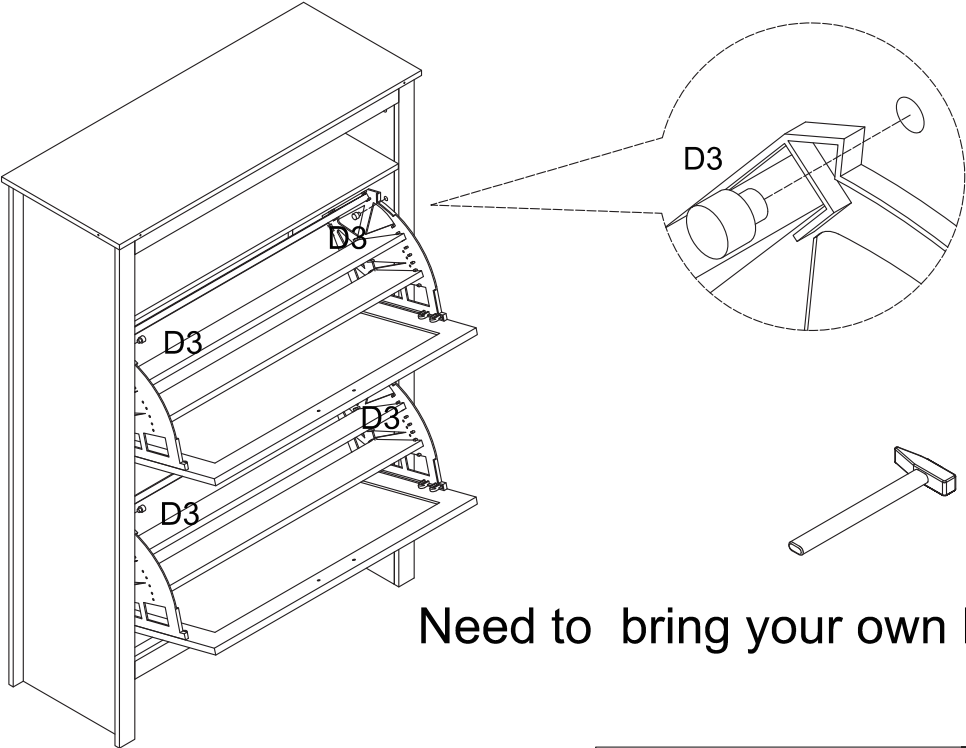
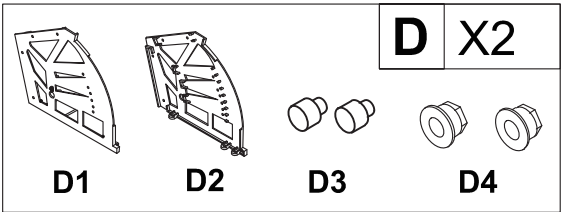


Need to bring your own hammer

19.

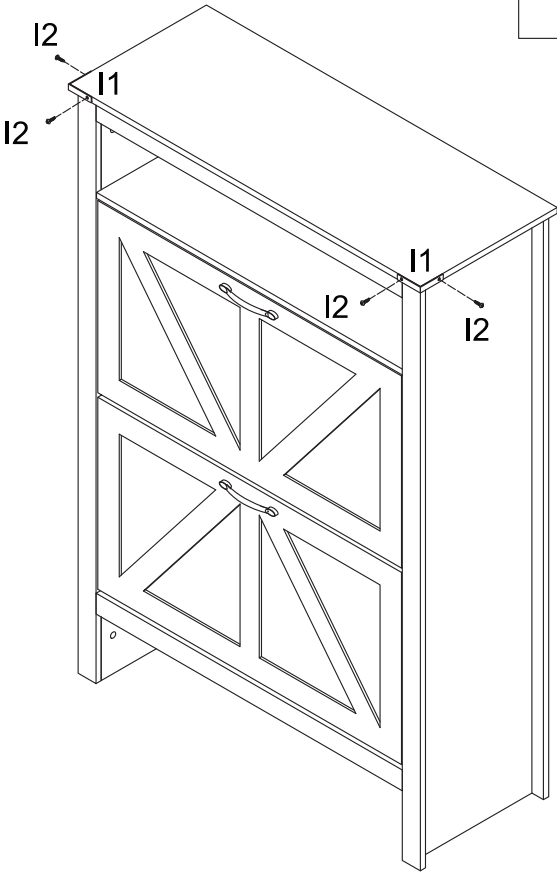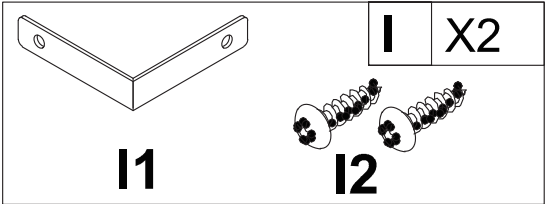





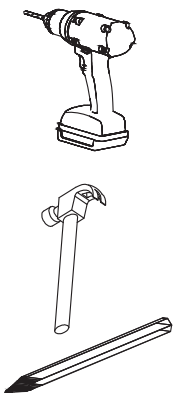
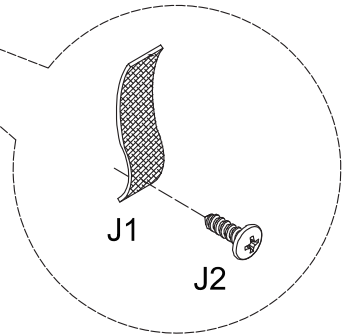
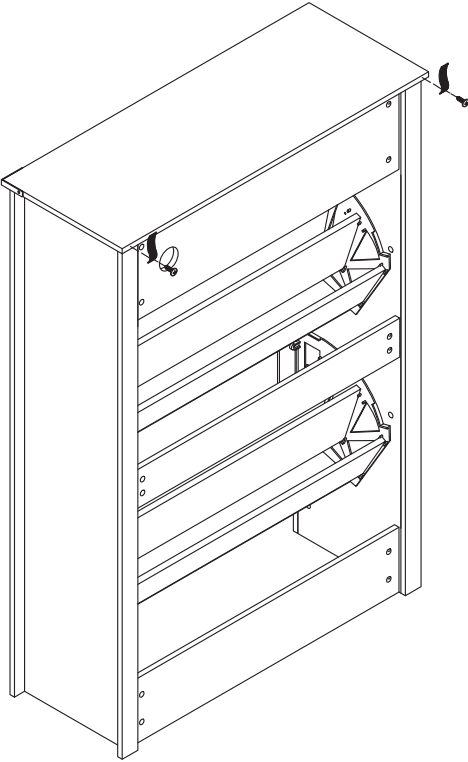
20.

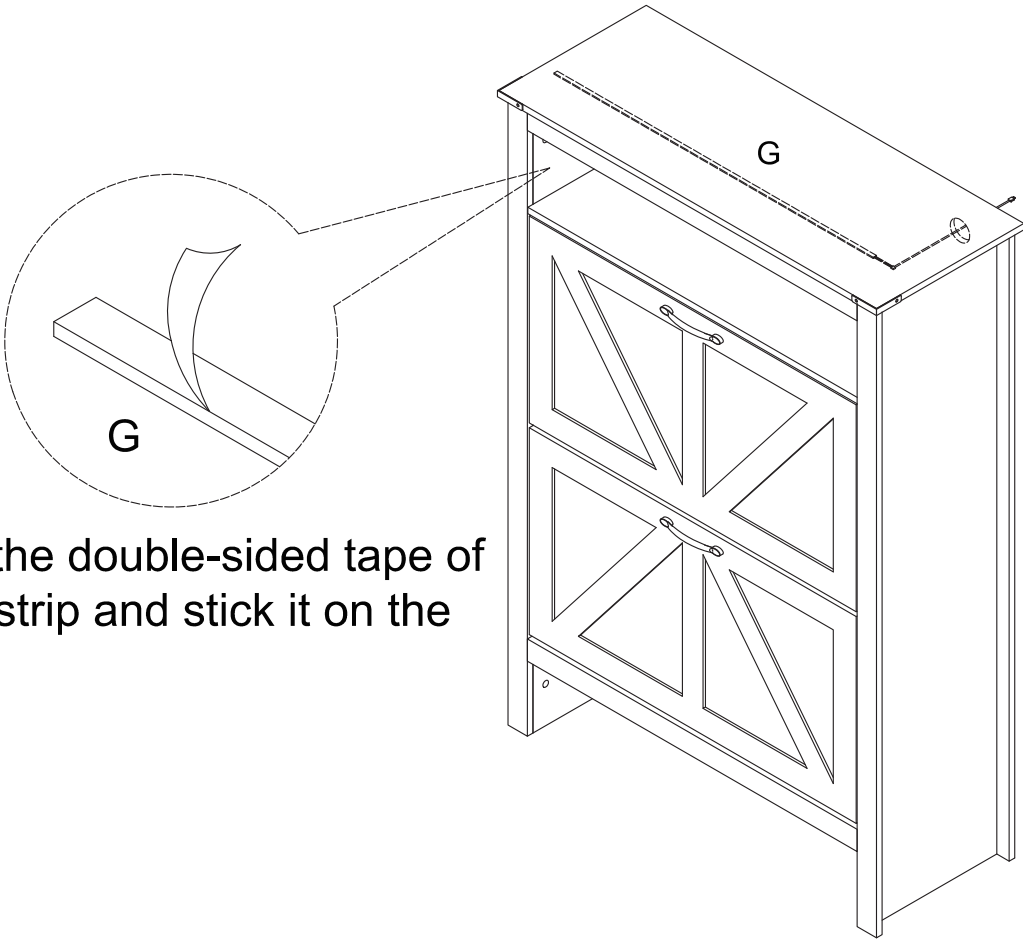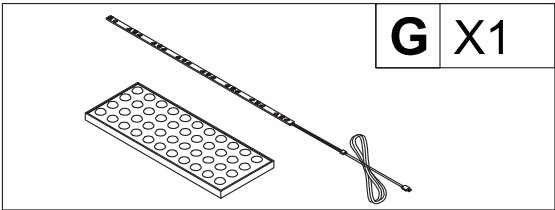


Tear off the double-sided tape of the light strip and stick it on the board;

21.

J		X2	
			
J1	J2	J3	J4




WALL




I x2

WALL +
drilling hole
Ø6x30mm




II x2

WALL



J3

III x2

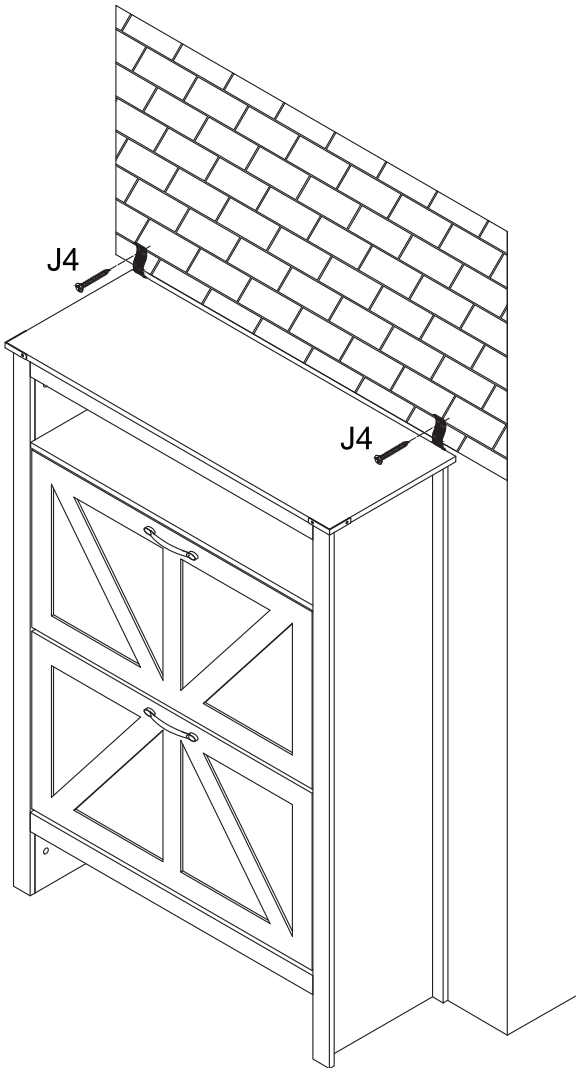

AFTER-SALE SERVICE

If you have any suggestions for our products or find that the products have quality problems, please contact us first, our after-sales team will reply you within 24 hours, and we will do our best to give you solutions until you are satisfied.

Guaranteed Customer Service

Your shopping experience is very important to us!
Feel unsatisfied? **Contact us!**
Have any questions? **Contact us!**

Wanna share your experience with our products?
Share your pictures with us.

Any suggestions? **Contact us!**
We gotcha back!