


DIY CLOCK

INSTRUCTION GUIDE




STEP 1

Plan the location of the clock. Fix the provided hanger to the wall by using hammer or a heavy object.

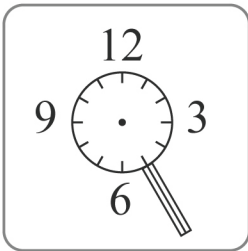


STEP 2

Cover the clock with auxiliary scale, using the scale and hanger as centre point, to position the acrylic hour and minute ornaments on the wall by peeling the double-sided tapes.

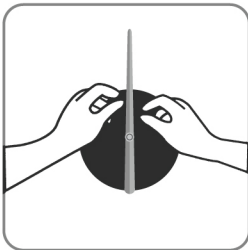


STEP 3

Assemble the clock mechanism by fixing clock hands carefully. Press the clock hands gently with both hands into the centre of the clock mechanism and aim them at 12 o'clock.

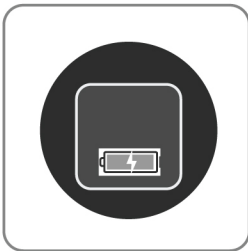


STEP 4

Adjust the clock mechanism to the correct time and install the battery.

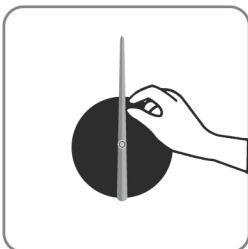

STEP 5

Place the clock on the wall and align them accordingly.

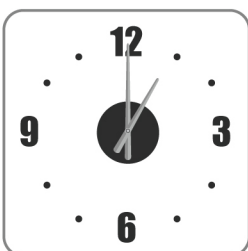

STEP 6

Well done! You can start enjoying the wall clock art now !