
# ASSEMBLY INSTRUCTION

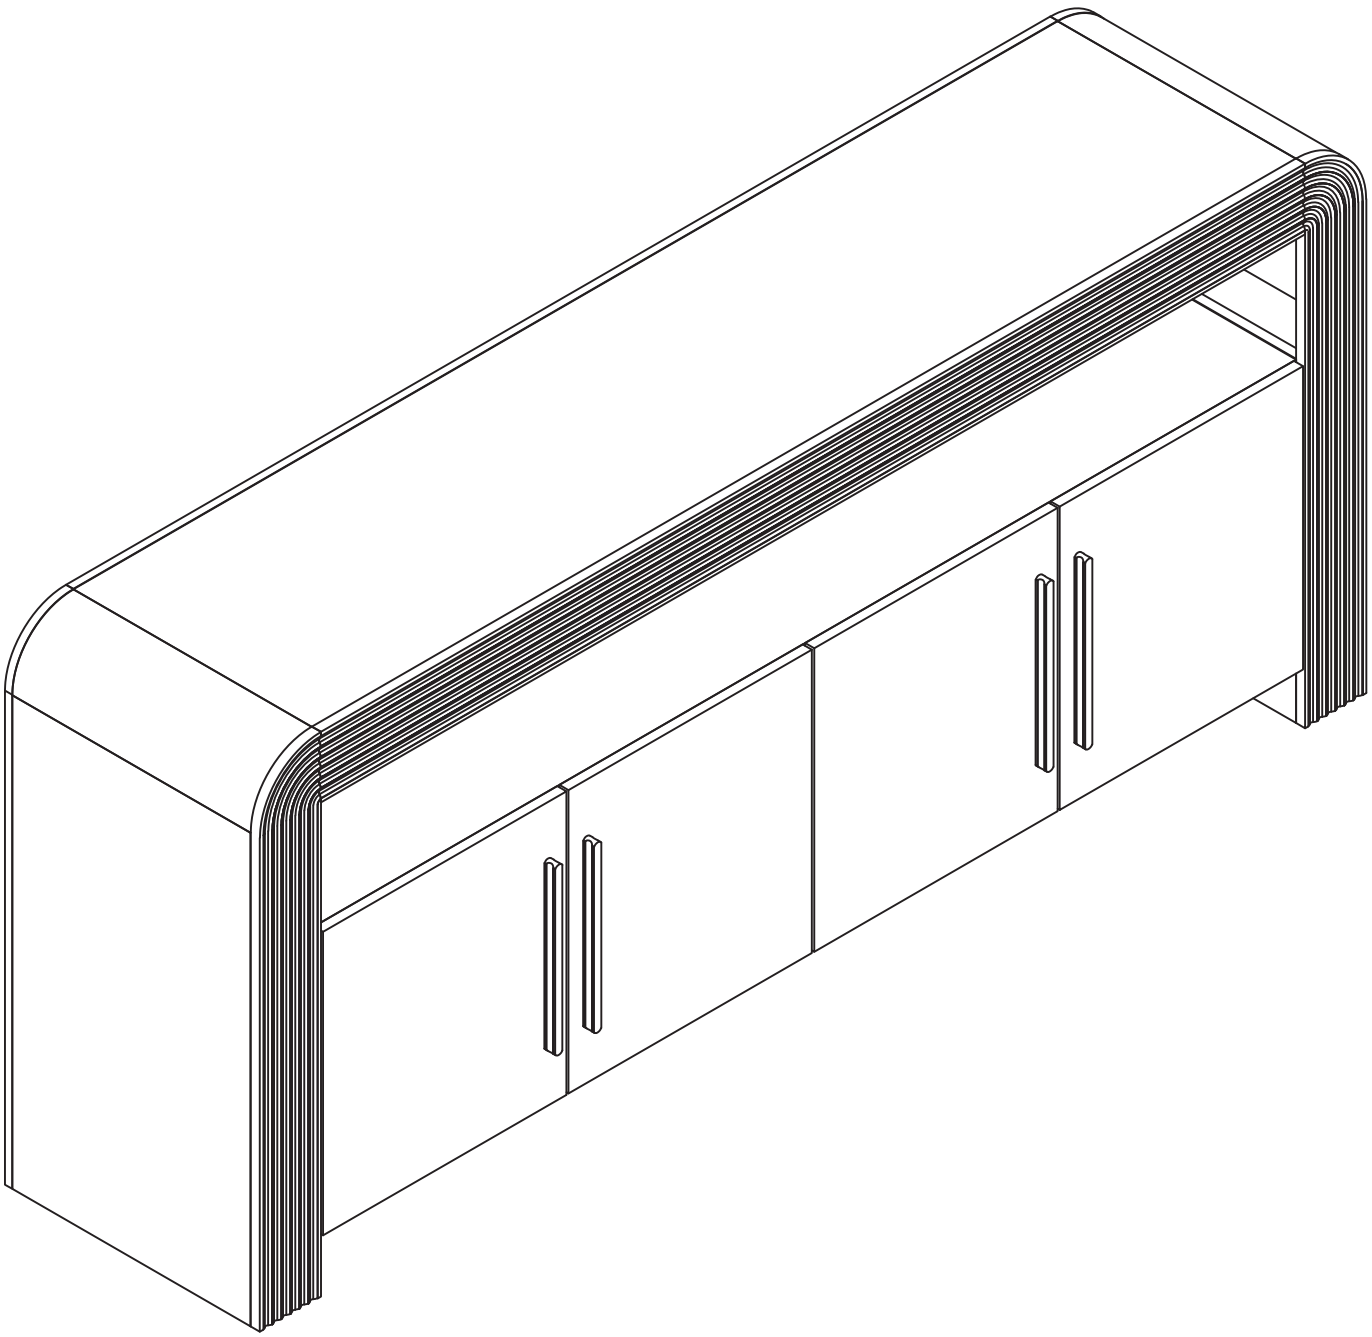

# INTRODUCTION

Thank you for choosing our product. To ensure a smooth and successful installation, please read this manual carefully before you begin. Keep it in a safe place for future reference.

Should you have any questions or require assistance during setup, our customer support team is here to help.  For faster and more accurate support, we encourage you to include a short video and a brief description of the issue you're encountering—this will allow us to assist you more effectively.

## PRECAUTIONS

1. Contents of the Package

The package includes multiple components and accessories, each clearly labeled with a letter or number. Please verify all parts are present before use and keep them out of reach of children to prevent accidents.

2. Installation Surface

To avoid scratching or damaging the product, please assemble it on a clean, soft surface, such as a carpet or piece of cardboard.

3. Stability During Assembly

To avoid instability or damage, it is recommended to assemble the product in its final location, and do not move it until assembly is fully completed.

4. Tool Usage


We recommend using the tools provided in the package. If you choose to use a power tool, please set it to a low power and torque setting to avoid damage.


## IMPORTANT:


Please follow the installation steps in the order shown in this manual. Improper installation may result in difficulties during assembly or damage to the product and its components.

## Need more help?

Our online customer service team is always ready to assist.

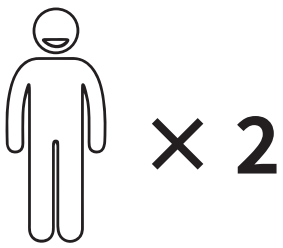

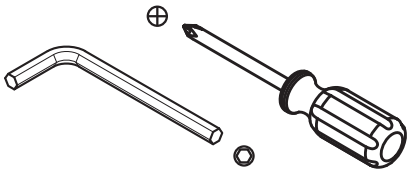


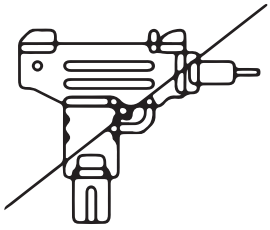


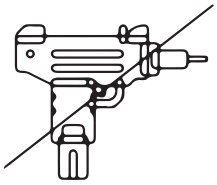
## Before You Begin


Two people are recommended for the assembly.
Use the included tools.
If using a power tool,use low power and torque.


# Installation of Eccentric Unit
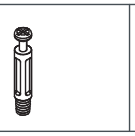
| | |
|---|---|
|  | Bolt |


| | |
|---|---|
|  | Connecting piece |



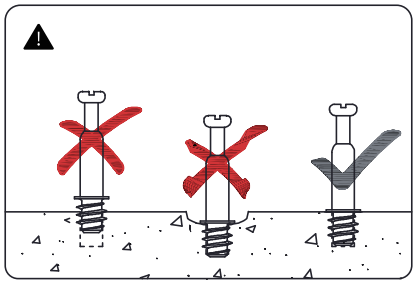


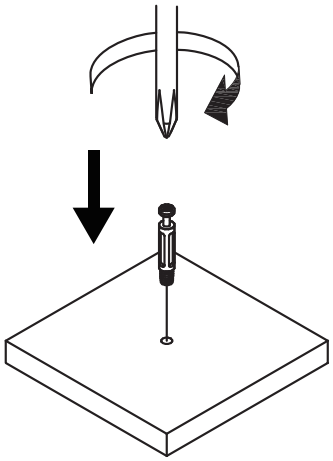


1

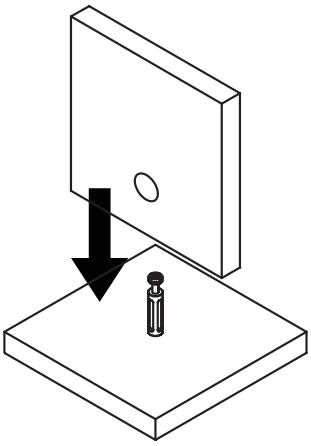

2

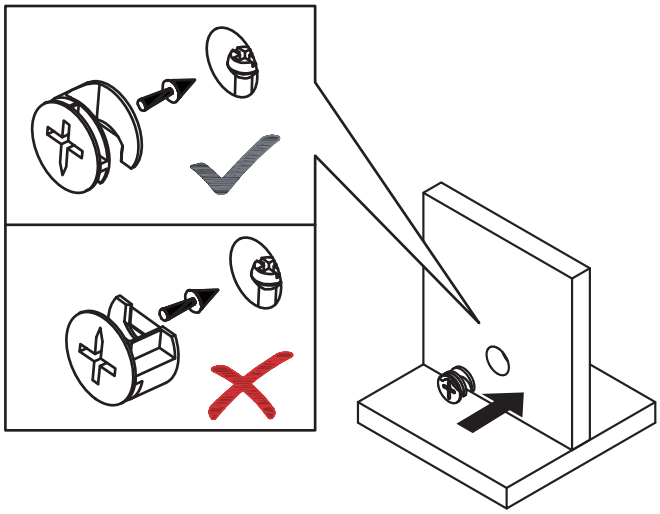


3

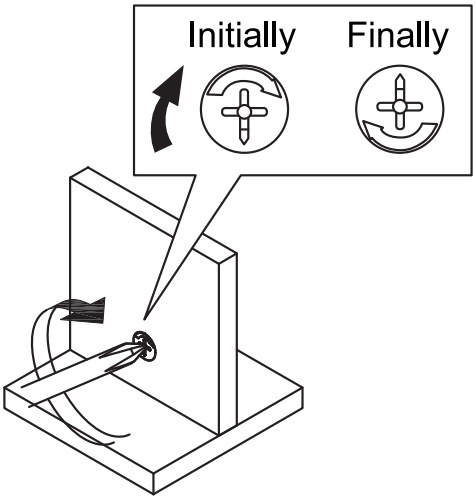




4


**NOTE:** When inserting the cam lock, ensure the open slot of the cam lock faces the cam screw entry.

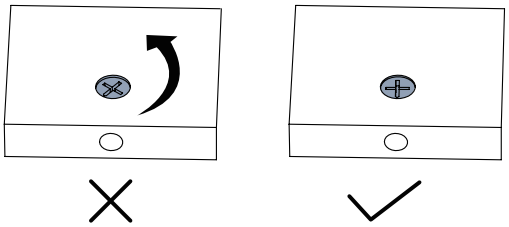

- To tighten, turn the cam lock clockwise until the arrow points away from the connected panel.
- To loosen, turn the cam lock counterclockwise.

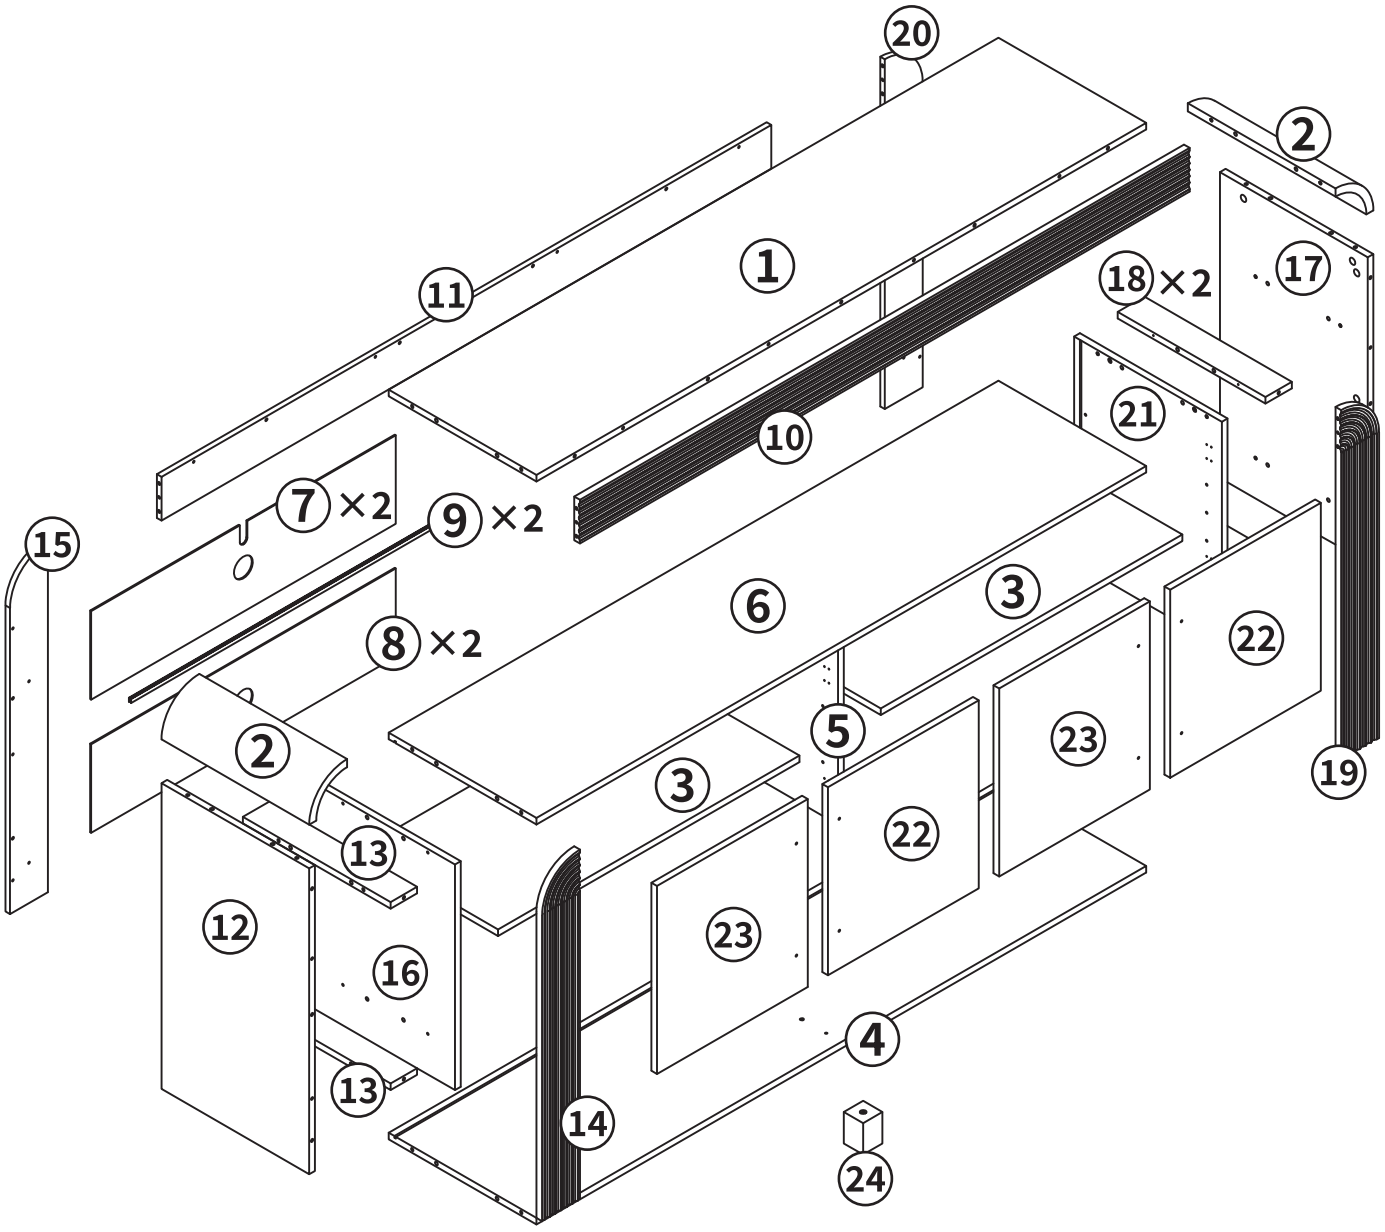
20
2
1
11
18 ×2
17
10
21
7 ×2
9 ×2
15
6
3
8 ×2
22
5
2
23
19
3
13
22
12
23
16
4
13
14
24

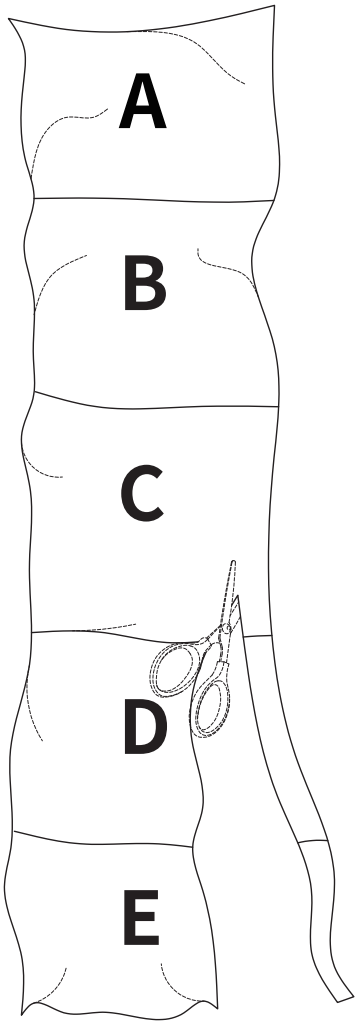
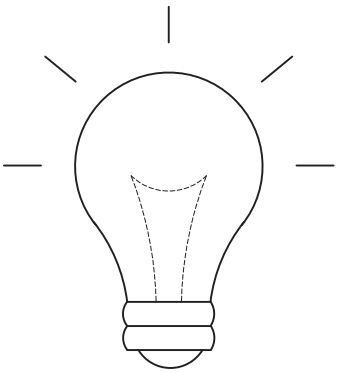
# friendly reminder

To avoid confusion during assembly, please do not open all hardware bags at once.
Some screws may look similar, so please follow these steps:















**Check** each bag against the parts list to confirm the type and quantity match before use.

**Open** each bag **only** when prompted by the corresponding installation step.


This will keep your hardware organized and make assembly smoother.

## Package Contents: Hardware

*Please count and verify all parts before assembly.*
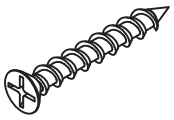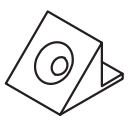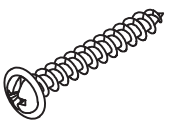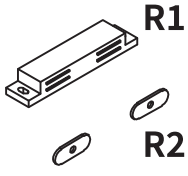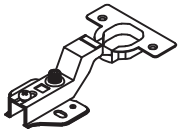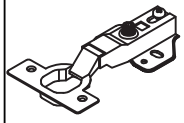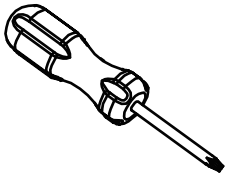
| A×49+2 | B×49+2 | C×20+2 | D×24+2 | E×8+2 | F×36+2 | G×4 | H×1 |
|---|---|---|---|---|---|---|---|
|  Ø15X9.5mm |  Ø6X28mm |  Ø6X30mm |  Ø4X35mm |  M4X20mm |  Ø8X30mm |  275X11X17mm |  |
| **I×20+2** | **J×24+2** | **K×49+2** | **L×2+2** | **M×2+2** | **N×2** | **O×2+2** | **P×1+2** |
|  |  Ø3X16mm |  Ø20mm |  Ø4X15mm |  Ø4X35mm |  |  |  Ø6X29mm |
| **Q×48+2** | **R×2** | **S×4+2** | **T×4** | **U×4** | **V×8+2** | | |
|  Ø4X14mm |  R1 R2 |  Ø3X12mm |  |  |  |  | |

## 1

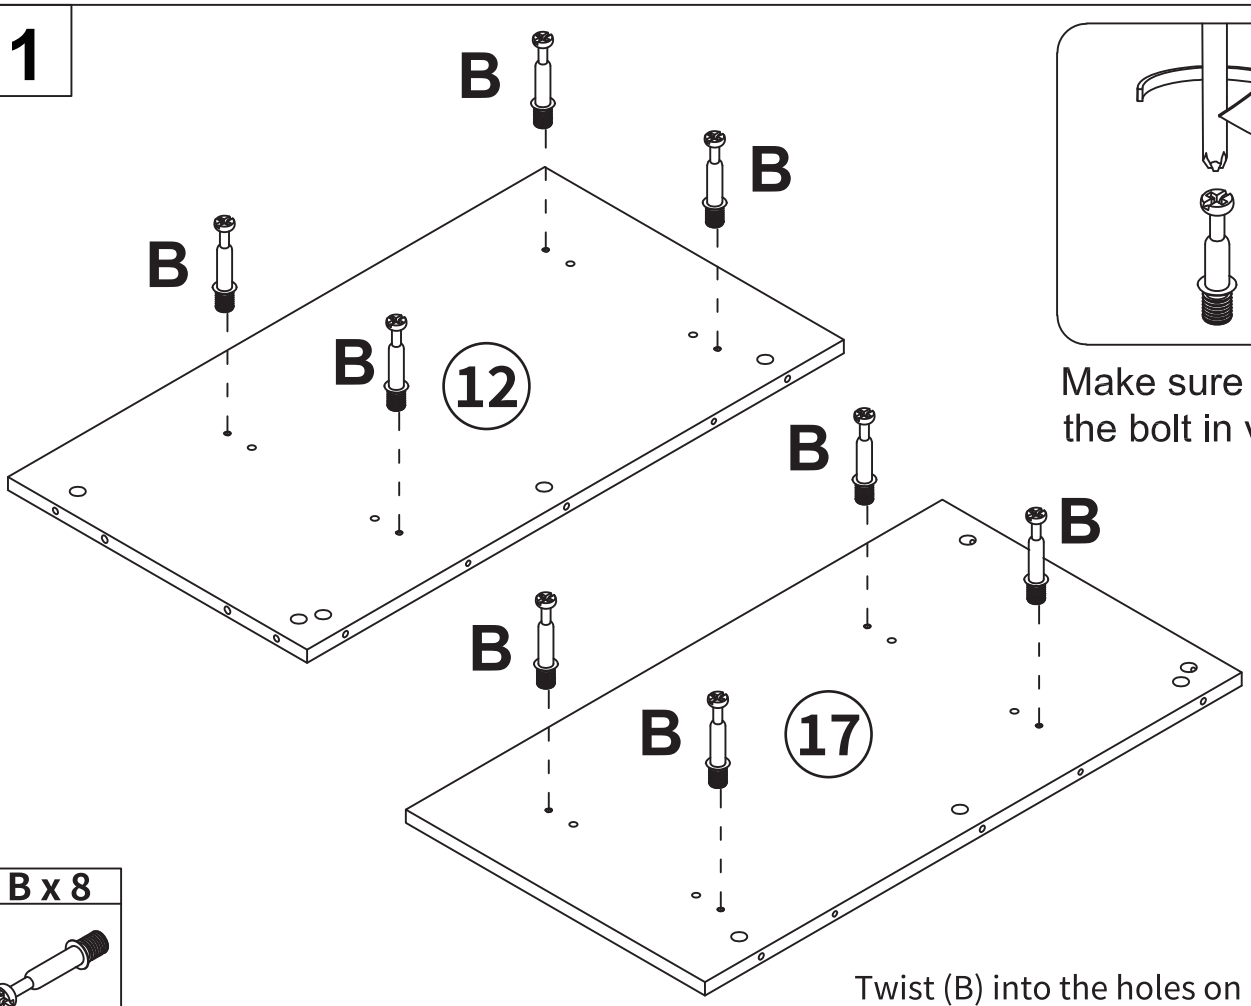






Make sure to screw the bolt in vertically.


**B x 8**



Twist (B) into the holes on (12) (17).

## 2

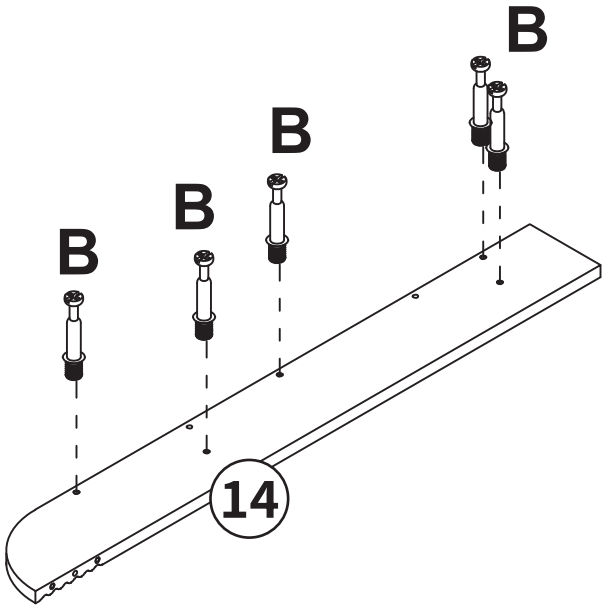

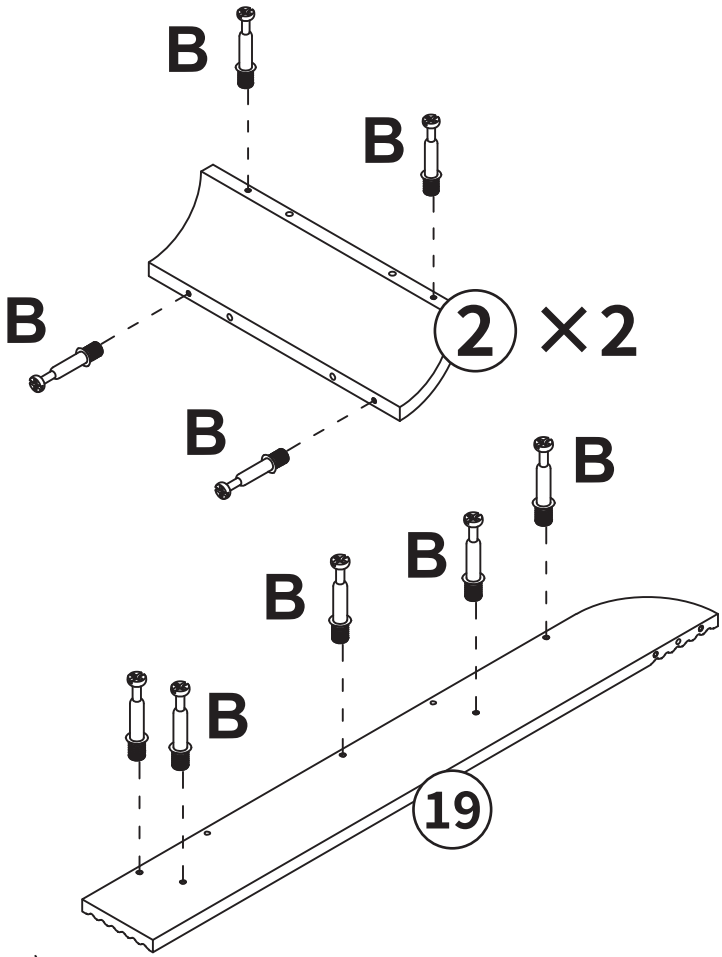





**B x 18**



Twist (B) into the holes on (2) (14) (19).


## 3

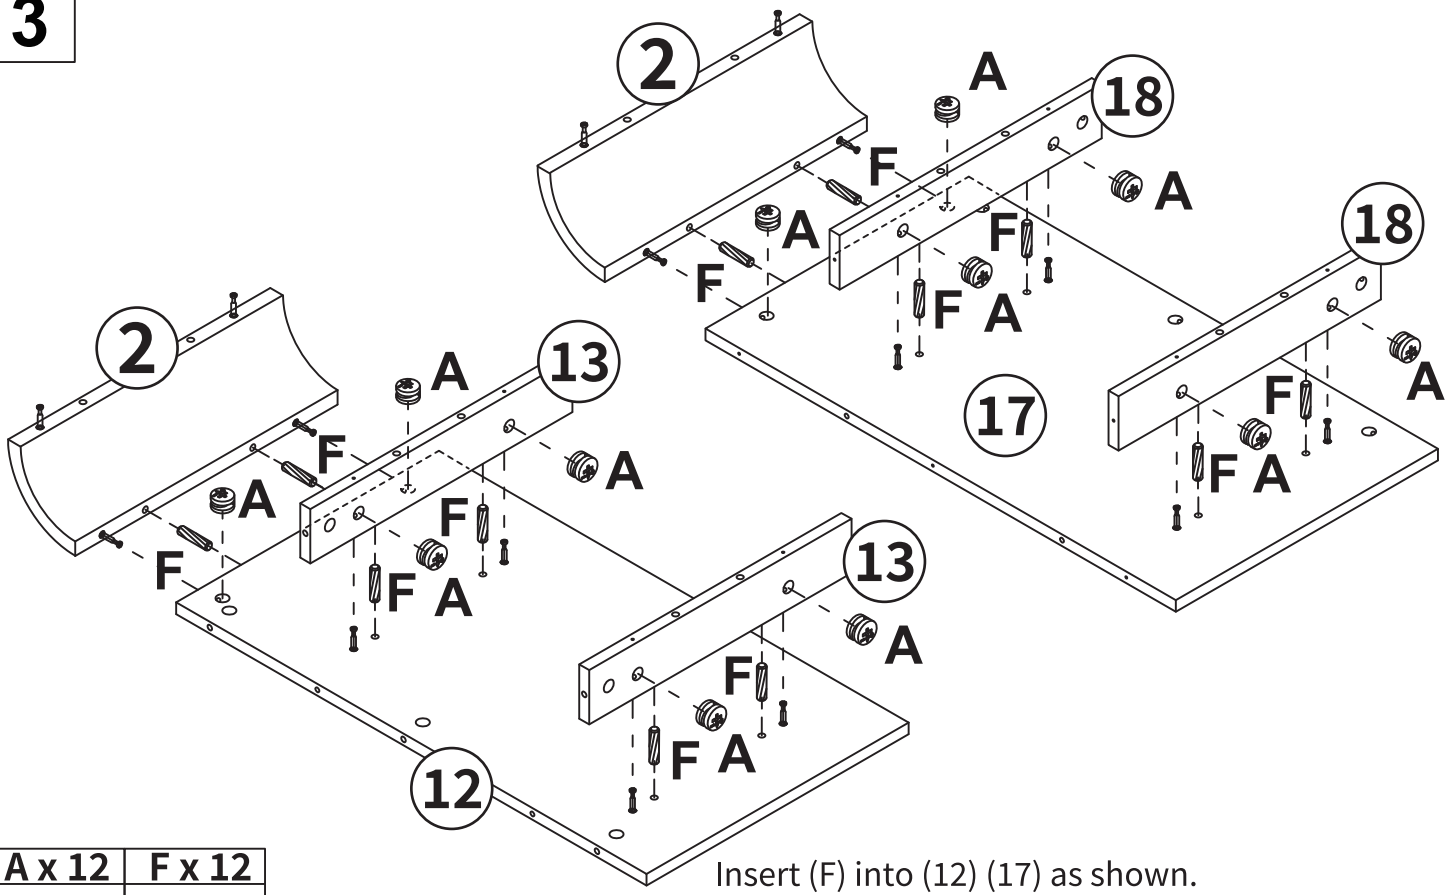



| A x 12 | F x 12 |
|---|---|
|  |  Ø8X30mm |

Insert (F) into (12) (17) as shown.
Connect two (2) to (12) (17), then secure with (A).
Connect two (13) to (12), then secure with (A).
Connect two (18) to (17), then secure with (A).


## 4

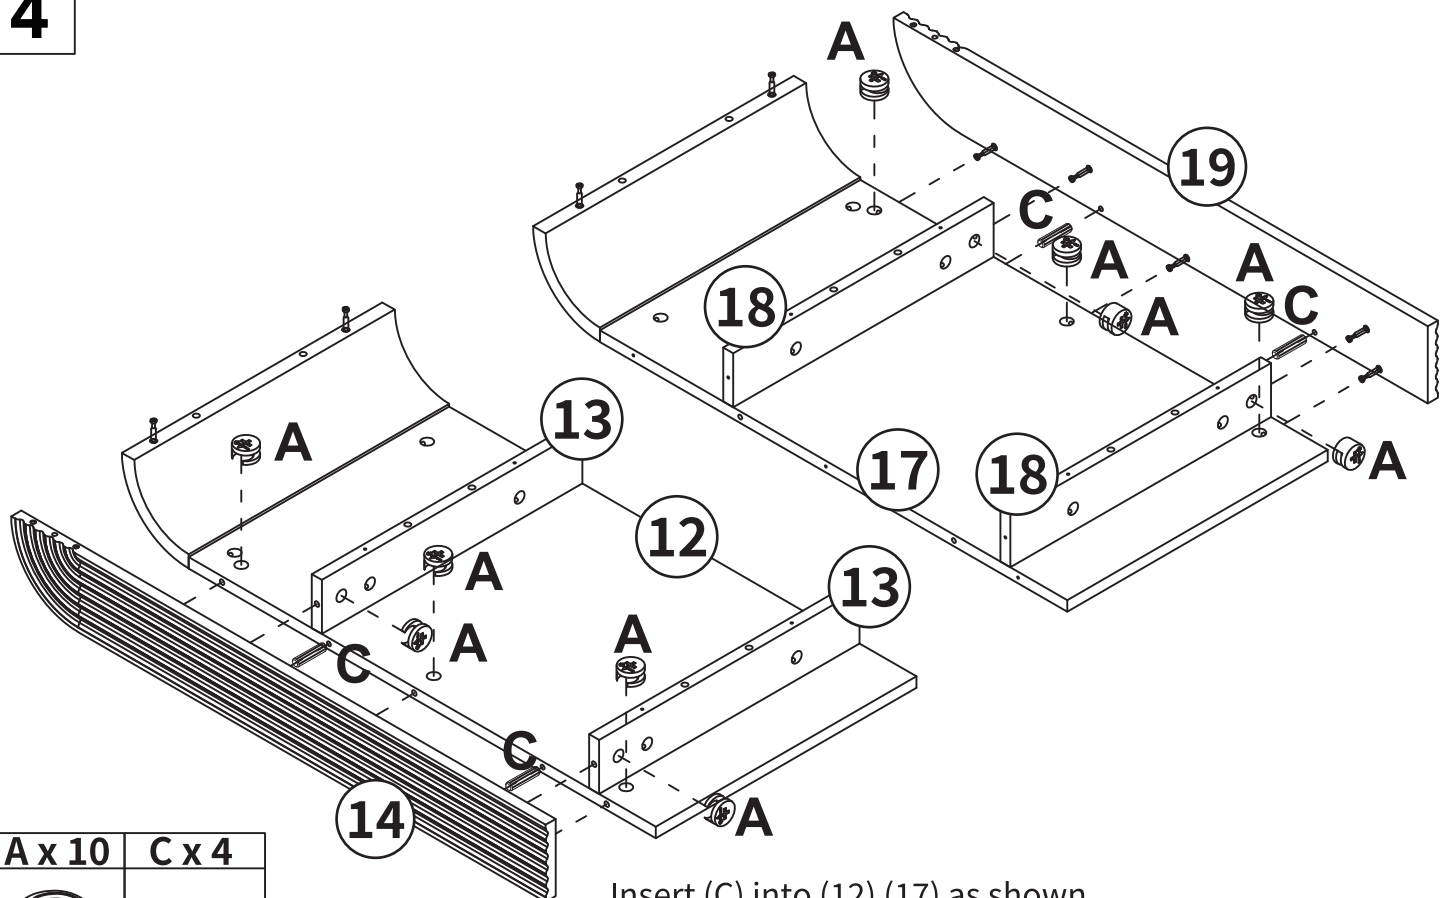


| A x 10 | C x 4 |
|---|---|
|  |  Ø6X30mm |

Insert (C) into (12) (17) as shown.
Connect (14) to (12) and two (13), then secure with (A).
Connect (19) to (17) and two (18), then secure with (A).


## 5

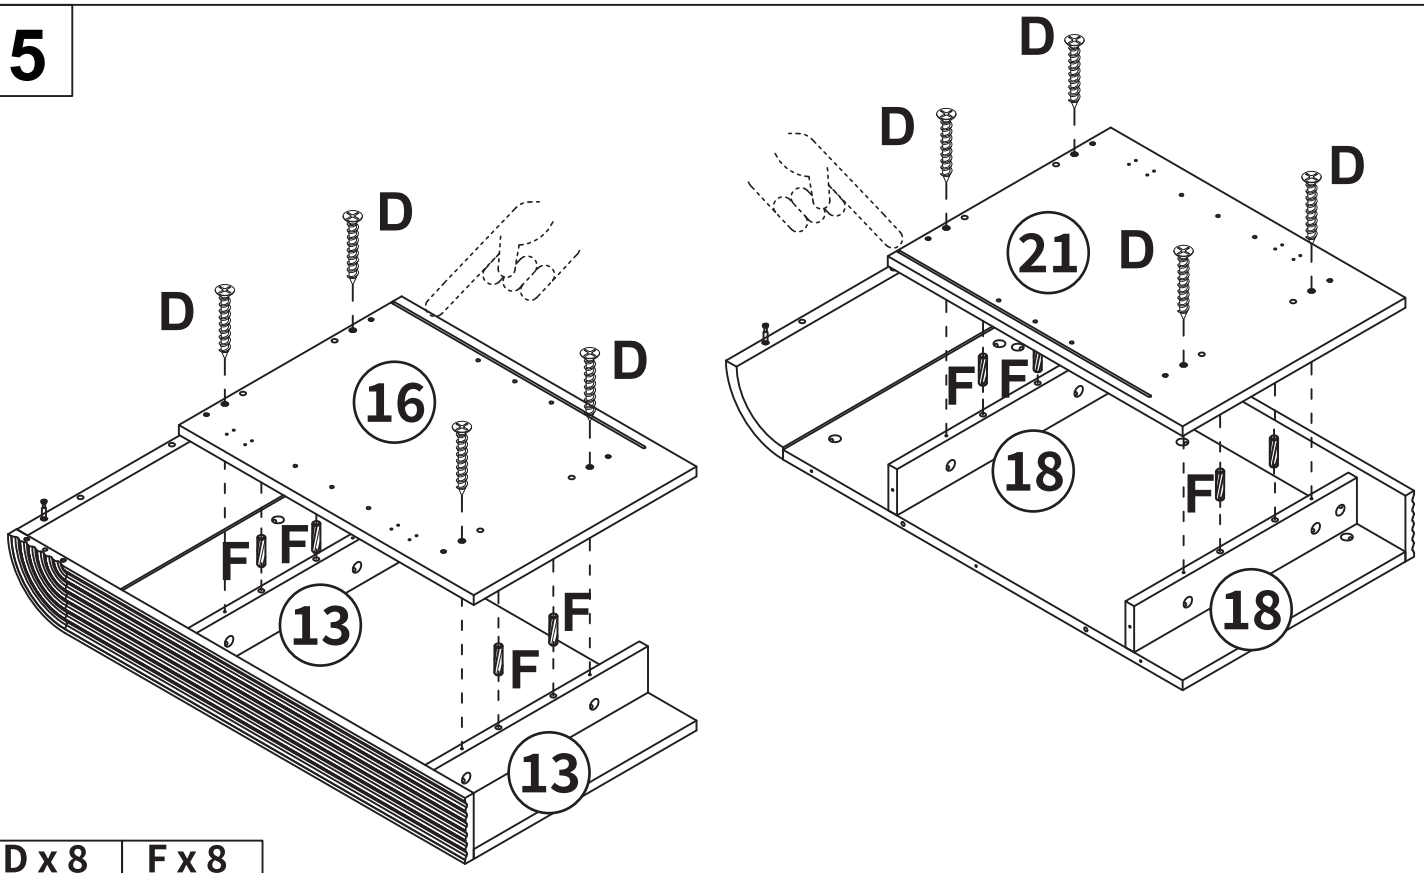


| D x 8 | F x 8 |
|---|---|
| Ø4X35mm | Ø8X30mm |

Insert (F) into two (13) and two (18) as shown.
Twist (D) through (16) into two (13).
Twist (D) through (21) into two (18).


## 6

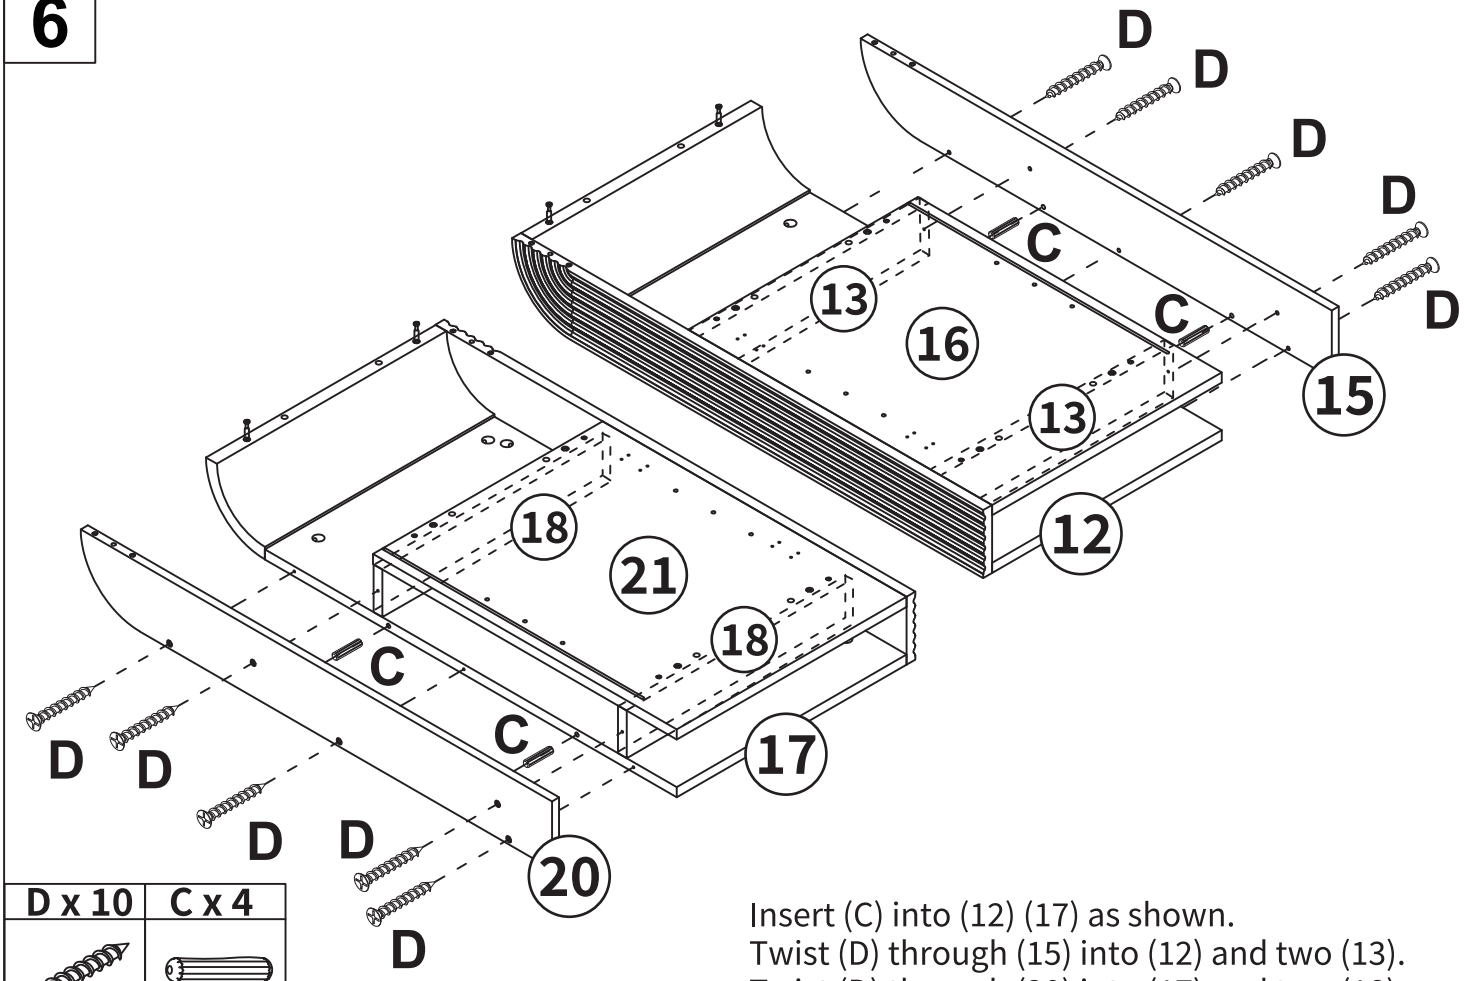


| D x 10 | C x 4 |
|---|---|
| Ø4X35mm | Ø6X30mm |

Insert (C) into (12) (17) as shown.
Twist (D) through (15) into (12) and two (13).
Twist (D) through (20) into (17) and two (18).

## 7

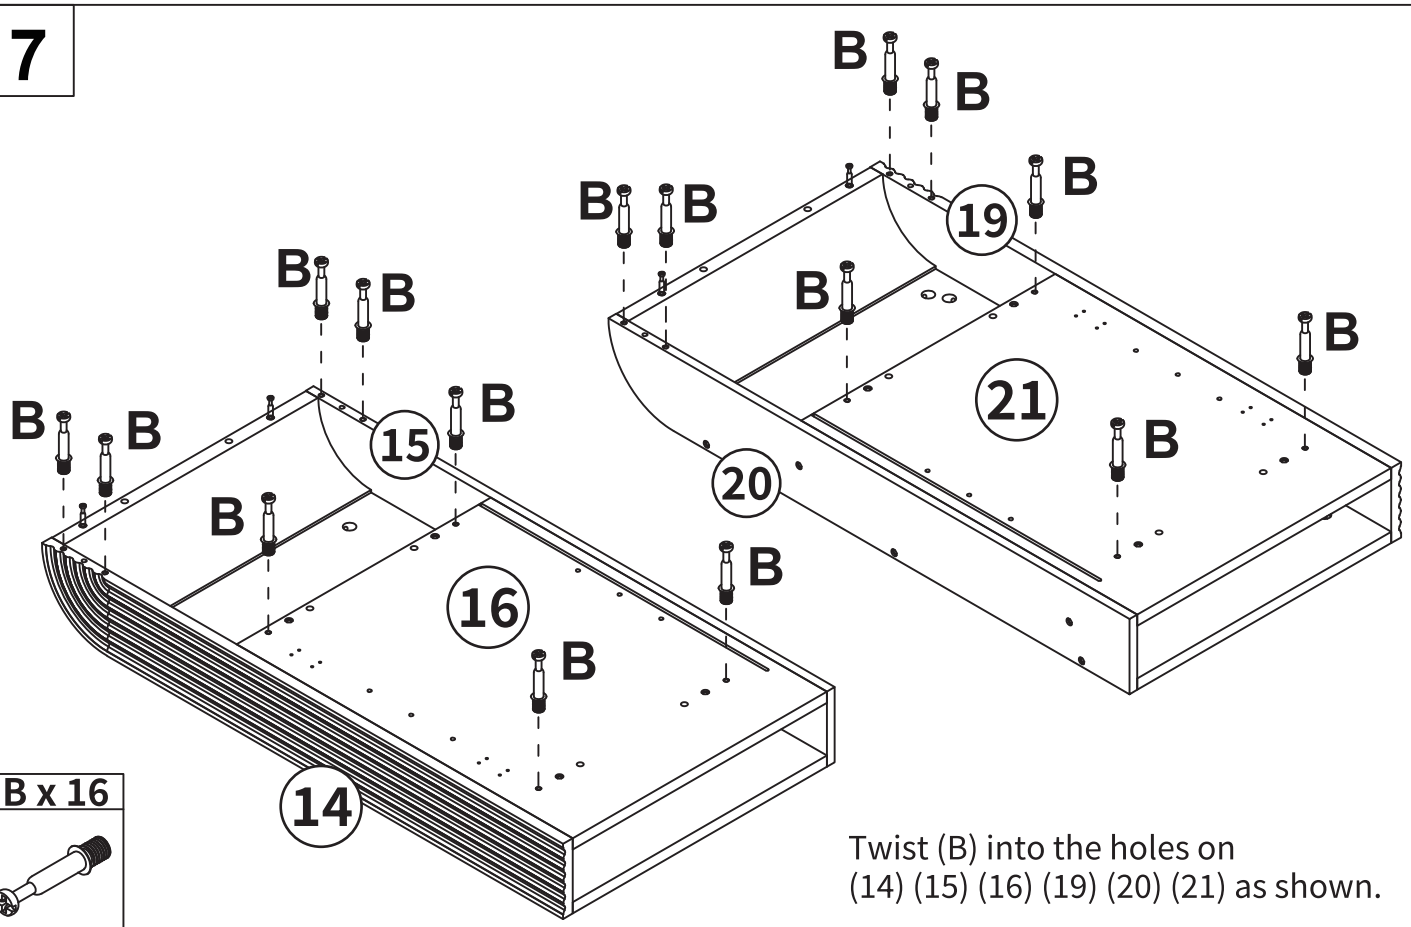



| B x 16 |
| --- |
|  |

Twist (B) into the holes on
(14) (15) (16) (19) (20) (21) as shown.

## 8




Separate (R) into (R1) and (R2).
Use (R1) for this step.





| N x 2 | R x 2 |
| --- | --- |
|  |   |

| B x 7 | J x 4 | L x 2 |
| --- | --- | --- |
|  |  Ø3X16mm |  Ø4X15mm |

Twist (B) into (6) (10) as shown.
Twist (L) through two (N) into (6).
Twist (J) through two (R1) into (6).


## 9

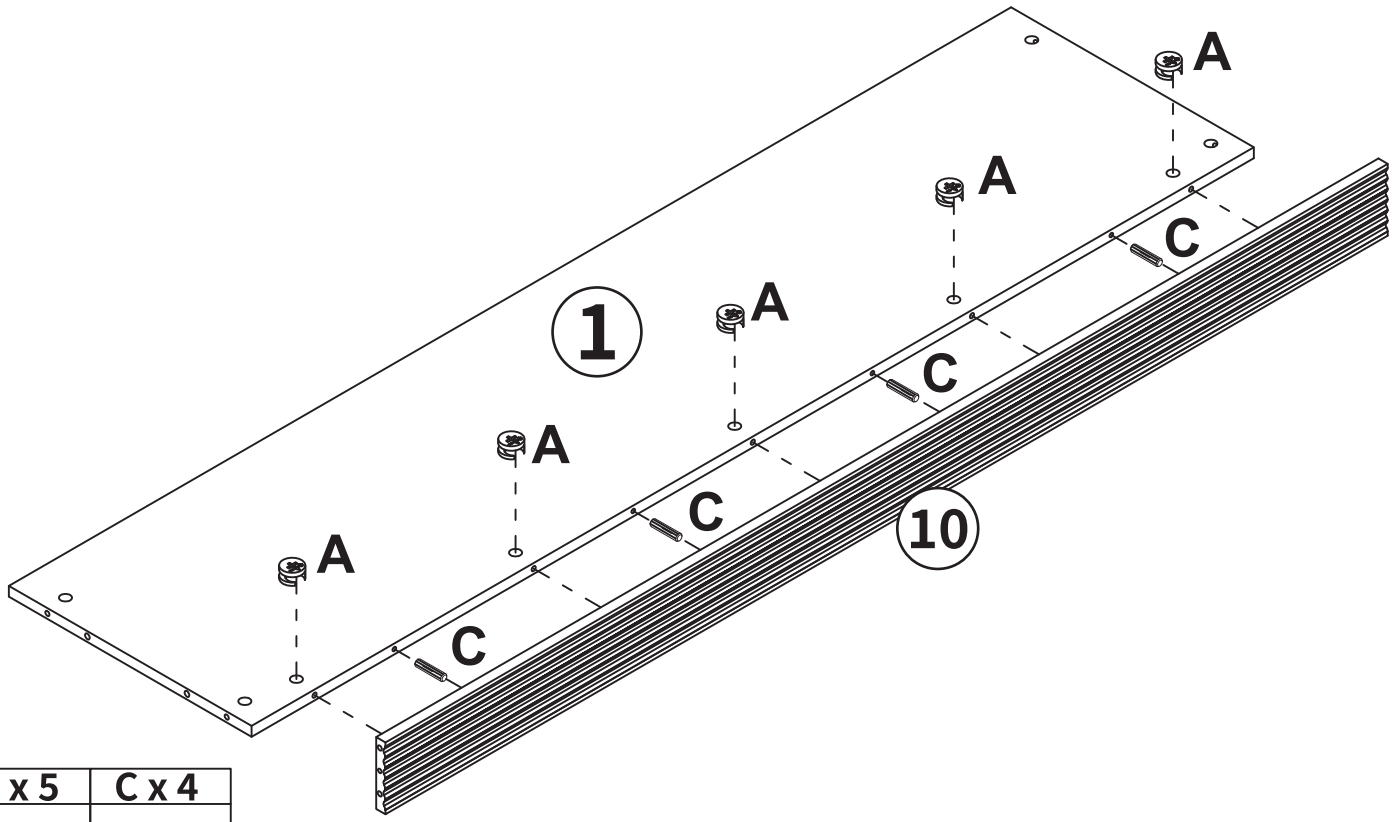


| A x 5 | C x 4 |
|---|---|
|  |  Ø6X30mm |

Insert (C) into (1).
Connect (10) to (1), then secure with (A).


## 10

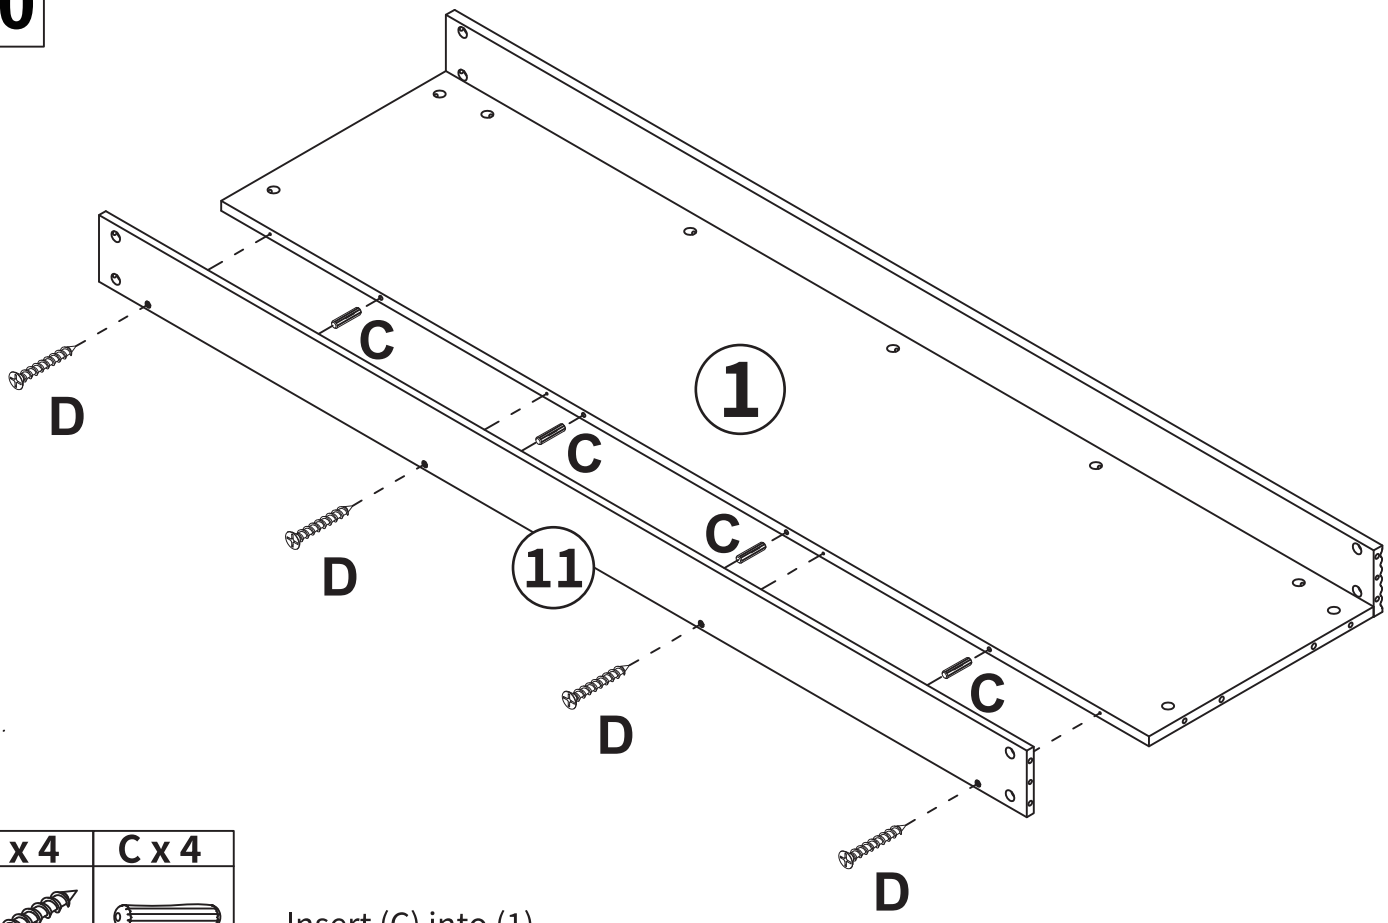


| D x 4 | C x 4 |
|---|---|
|  Ø4X35mm |  Ø6X30mm |

Insert (C) into (1).
Twist (D) through (11) into (1) to connect them.

## 11

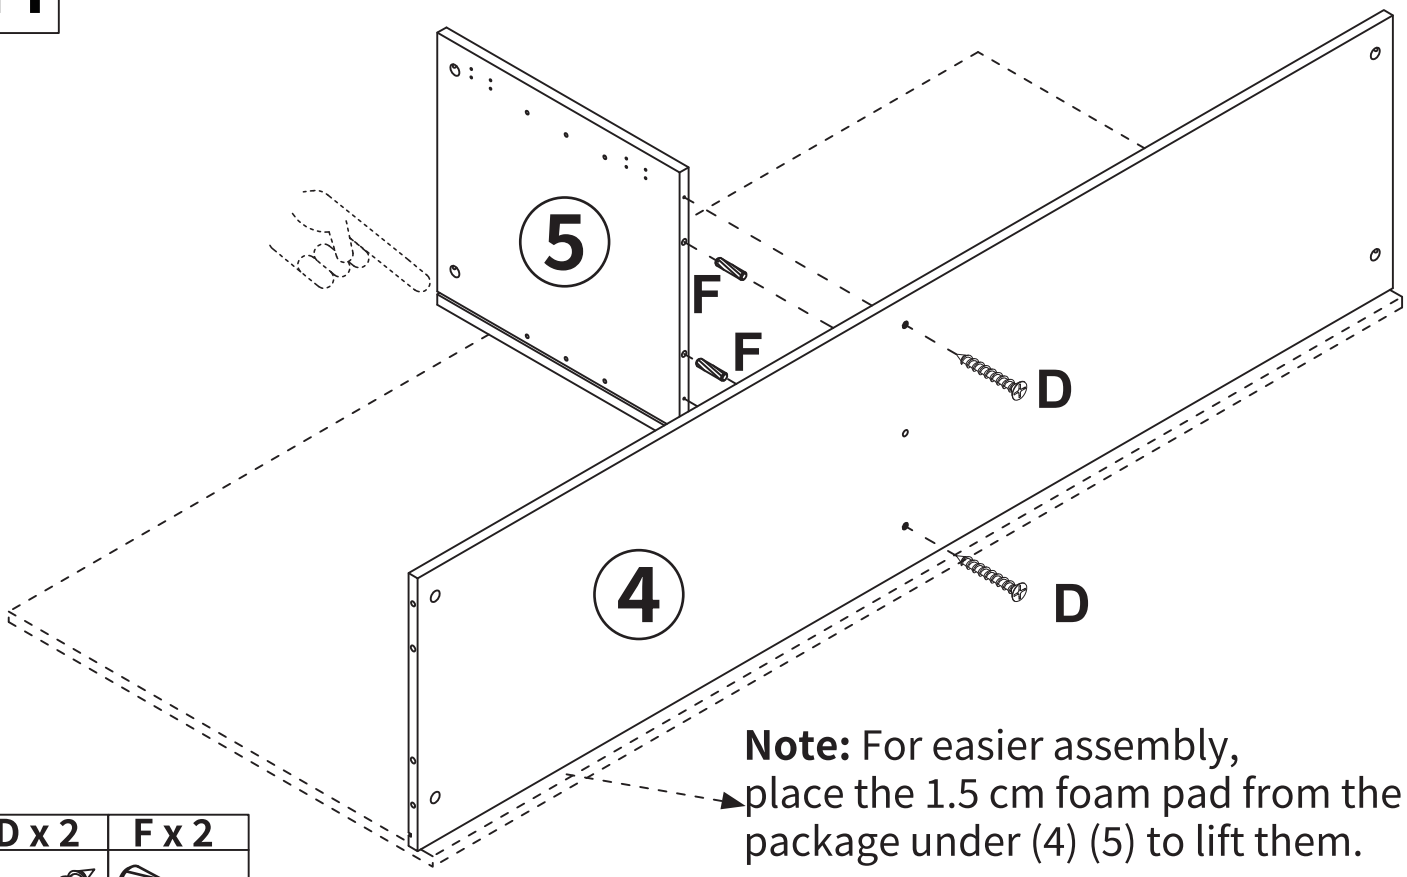



**Note:** For easier assembly, place the 1.5 cm foam pad from the package under (4) (5) to lift them.

| D x 2 | F x 2 |
|---|---|
| Ø4X35mm | Ø8X30mm |

Insert (F) into (5).
Connect (5) to (4), then secure with (D).


## 12

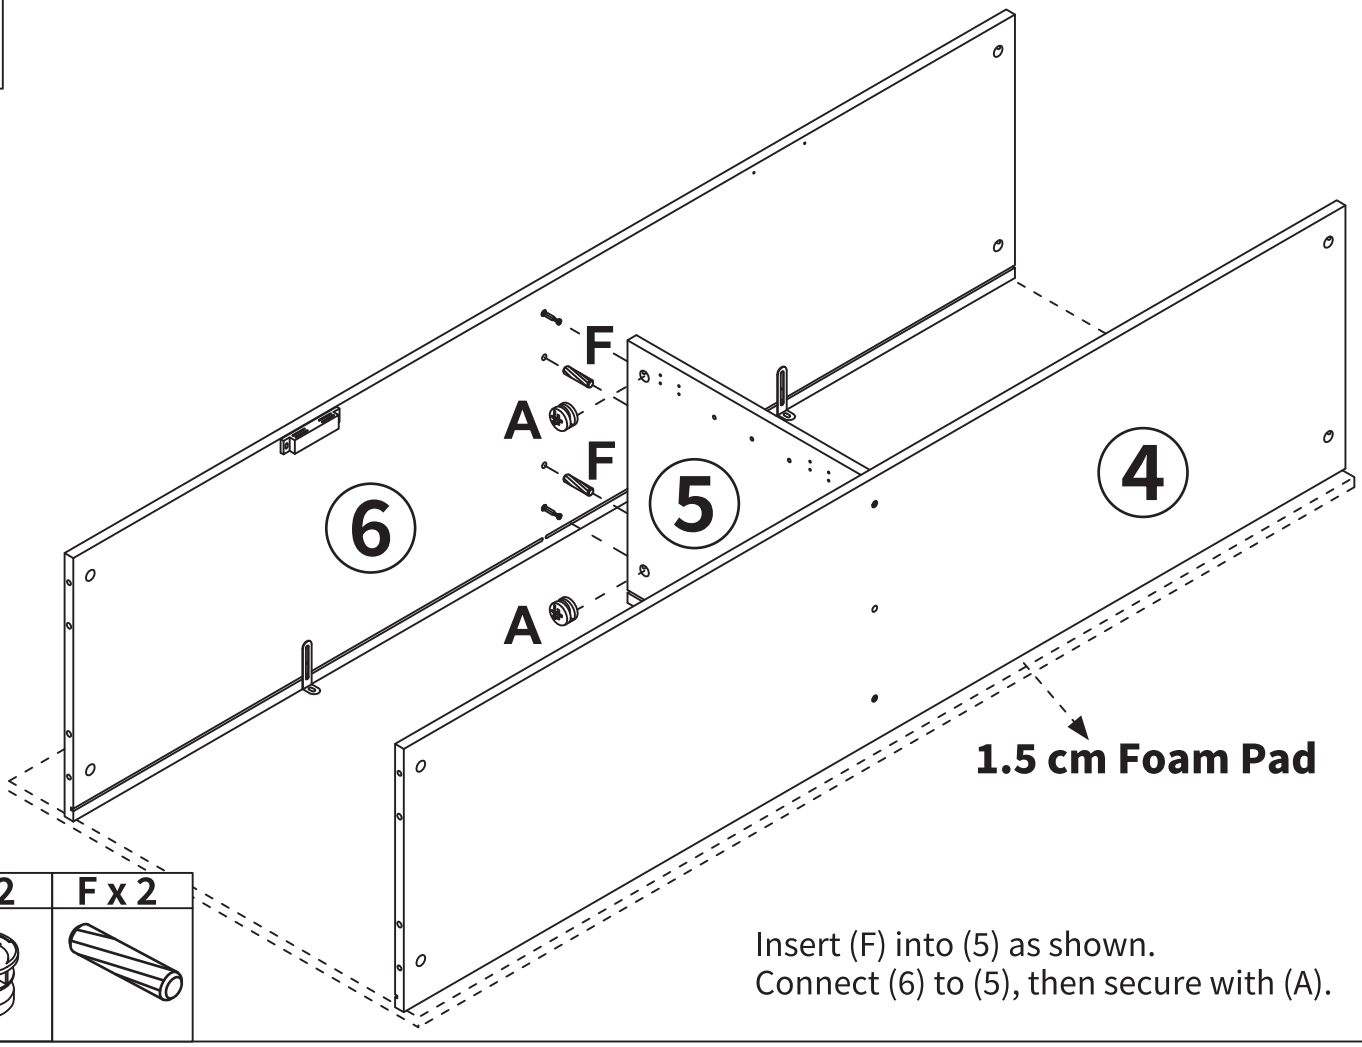



| A x 2 | F x 2 |
|---|---|
| | |

Insert (F) into (5) as shown.
Connect (6) to (5), then secure with (A).

## 13

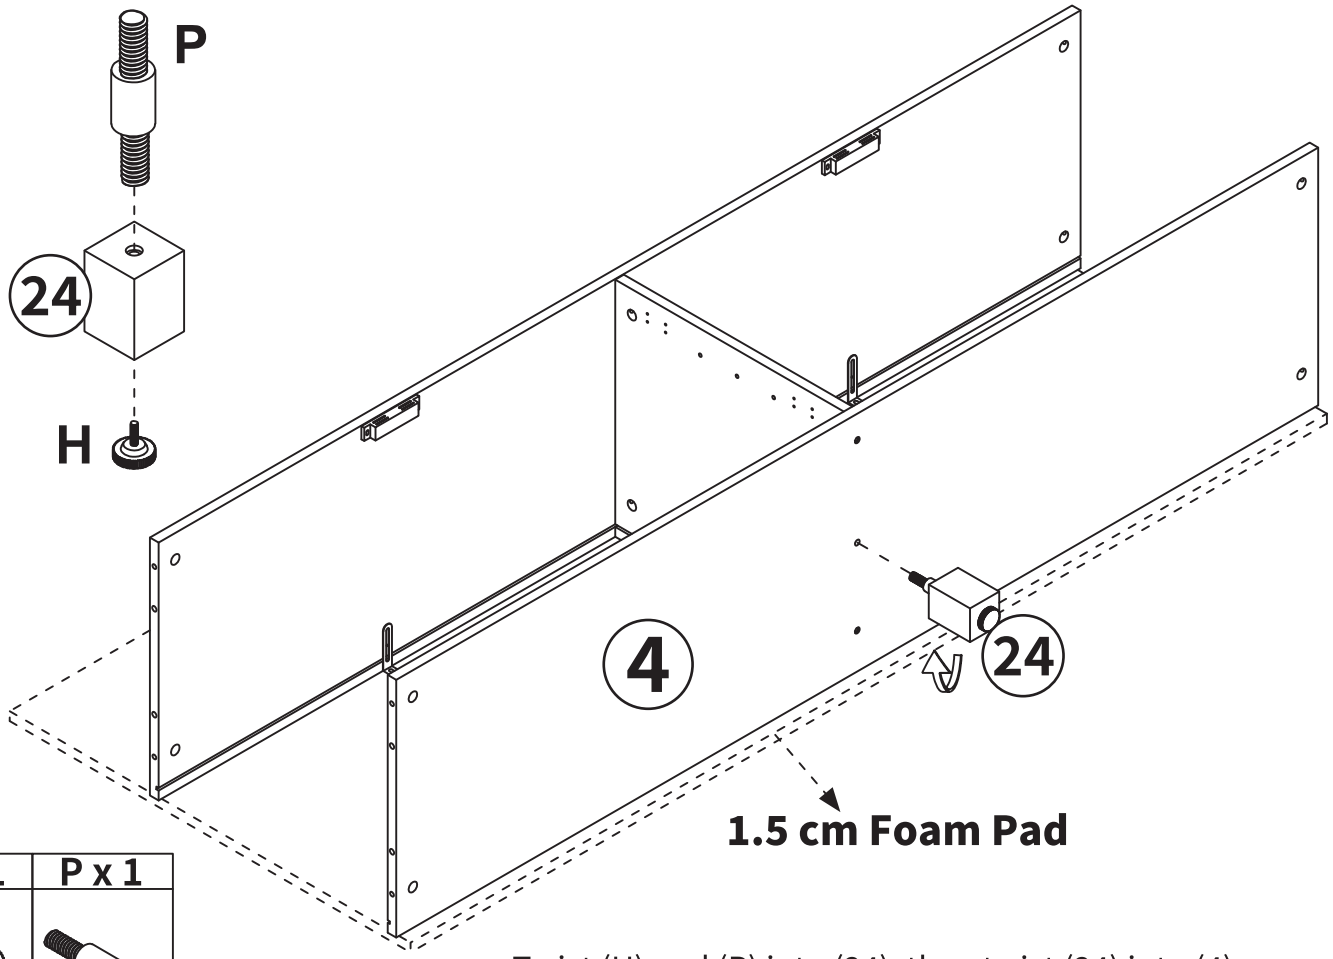



| H x 1 | P x 1 |
|---|---|
|  |  |

Twist (H) and (P) into (24), then twist (24) into (4).


## 14

Please ensure the insert board is fully fitted into the grooves.
If insertion is not smooth, gently adjust by pushing from the front or back until the board is fully seated.

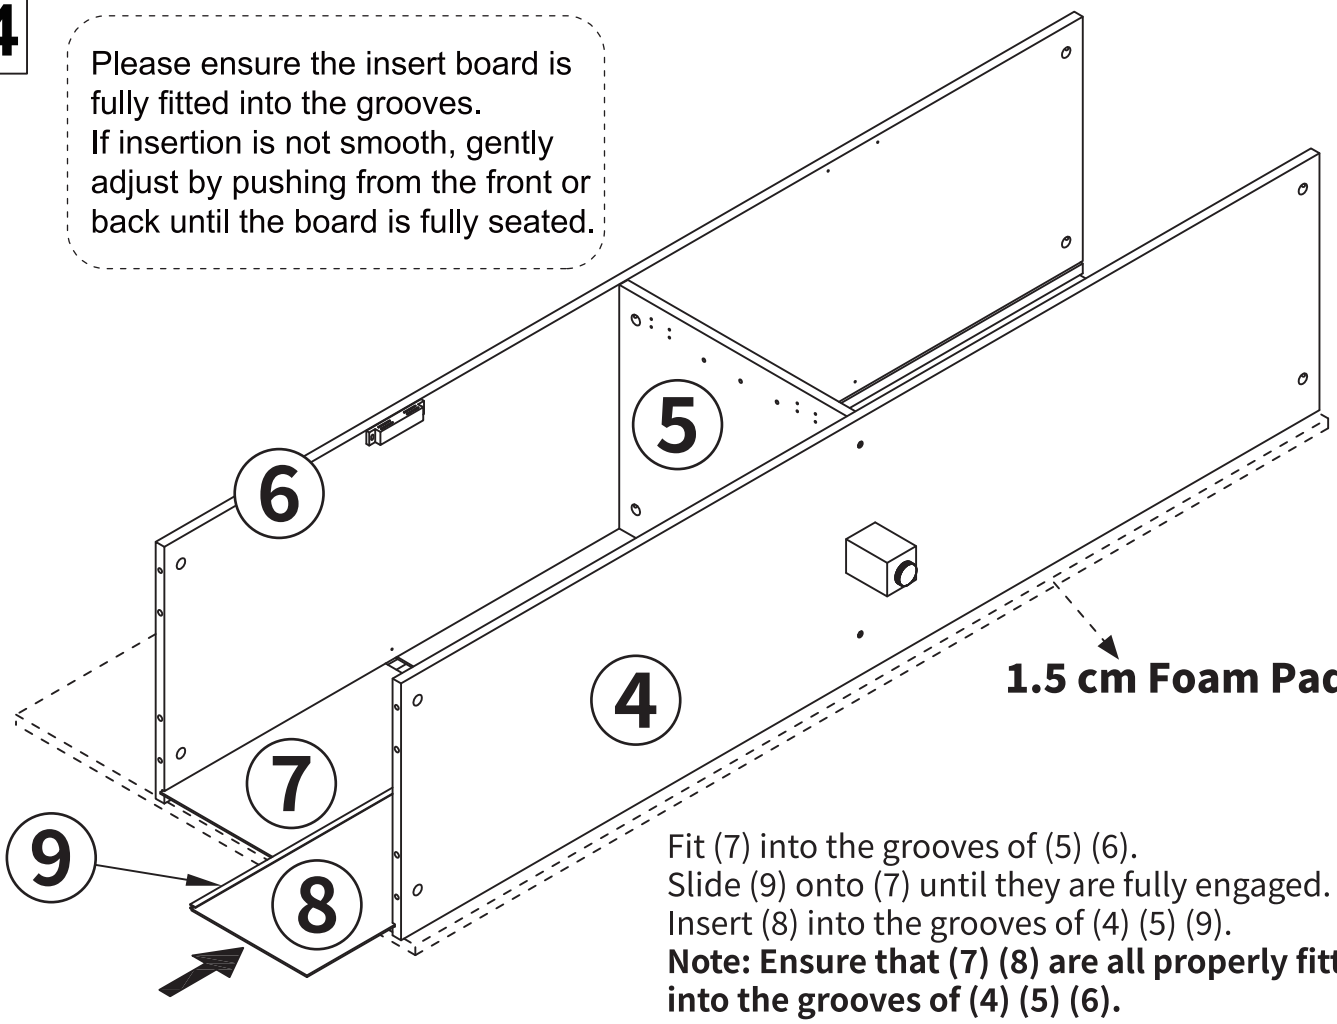


Fit (7) into the grooves of (5) (6).
Slide (9) onto (7) until they are fully engaged.
Insert (8) into the grooves of (4) (5) (9).
**Note: Ensure that (7) (8) are all properly fitted into the grooves of (4) (5) (6).**


## 15

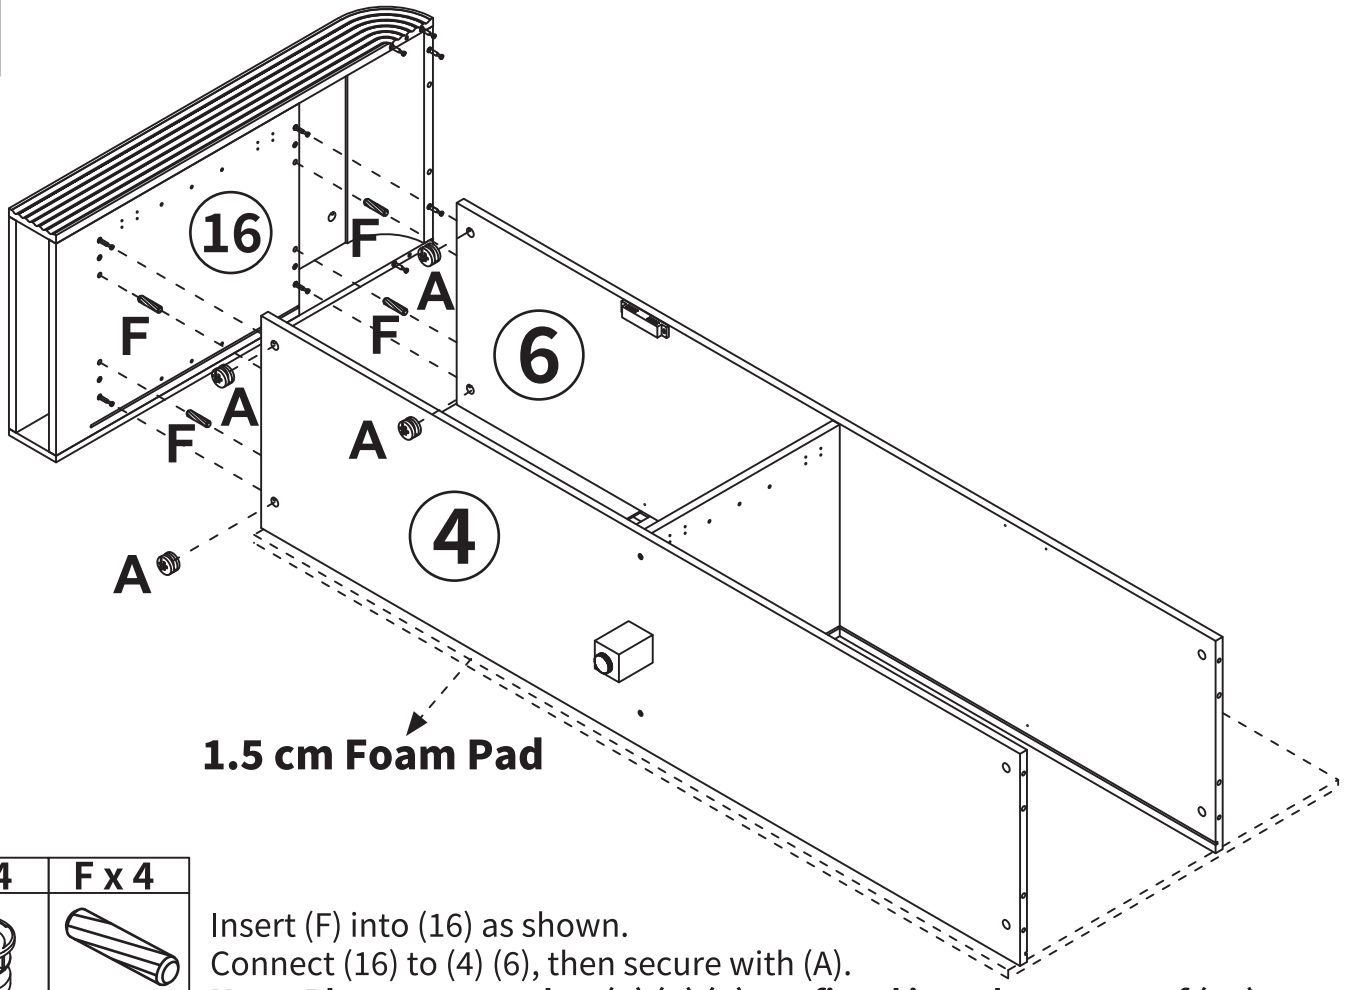


| A x 4 | F x 4 |
|---|---|
|  |  Ø8X30mm |

Insert (F) into (16) as shown.
Connect (16) to (4) (6), then secure with (A).
**Note: Please ensure that (7) (9) (8) are fitted into the groove of (16).**

## 16

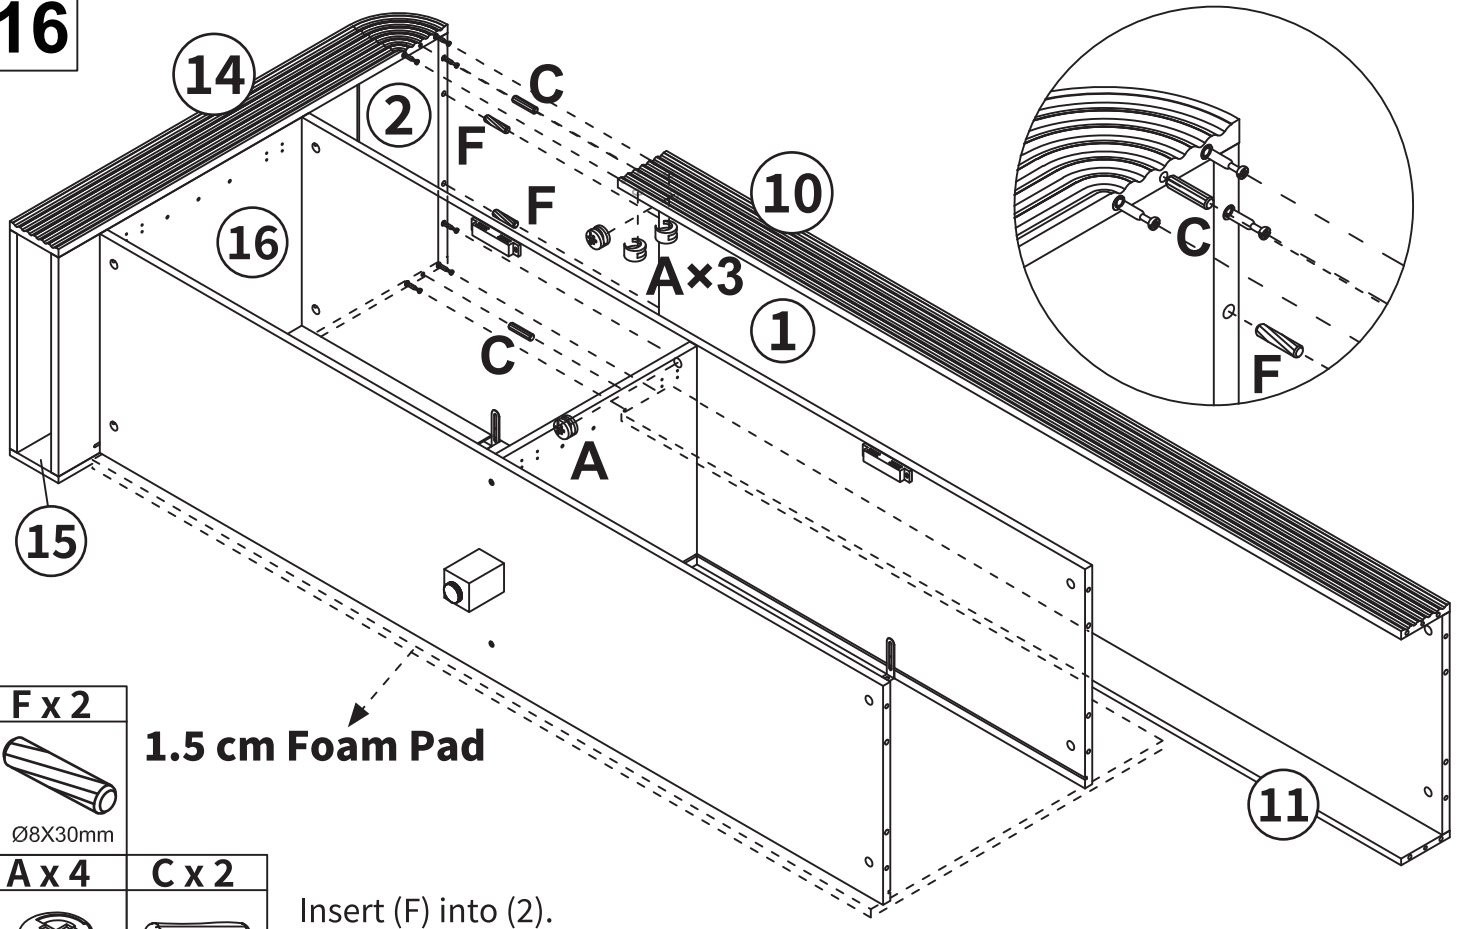



| F x 2 |
|---|
|  Ø8X30mm |

| A x 4 | C x 2 |
|---|---|
|  |  Ø6X30mm |


Insert (F) into (2).
Insert (C) into (14) (15).
Connect (1) (10) (11) to (2) (14) (15), then secure with (A).

## 17

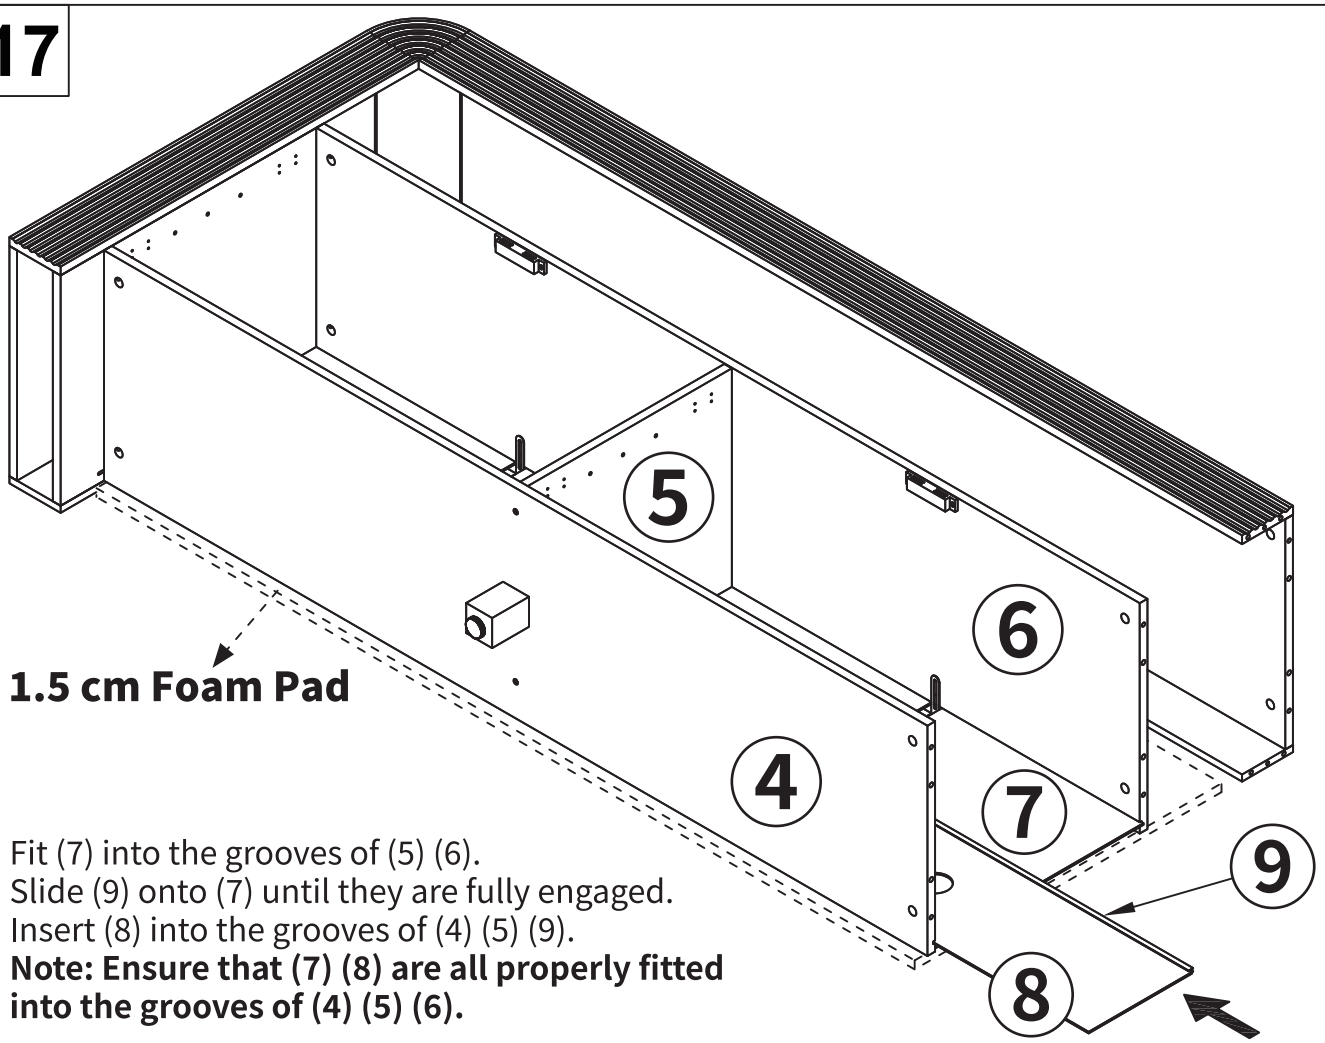


Fit (7) into the grooves of (5) (6).
Slide (9) onto (7) until they are fully engaged.
Insert (8) into the grooves of (4) (5) (9).
**Note: Ensure that (7) (8) are all properly fitted into the grooves of (4) (5) (6).**


## 18

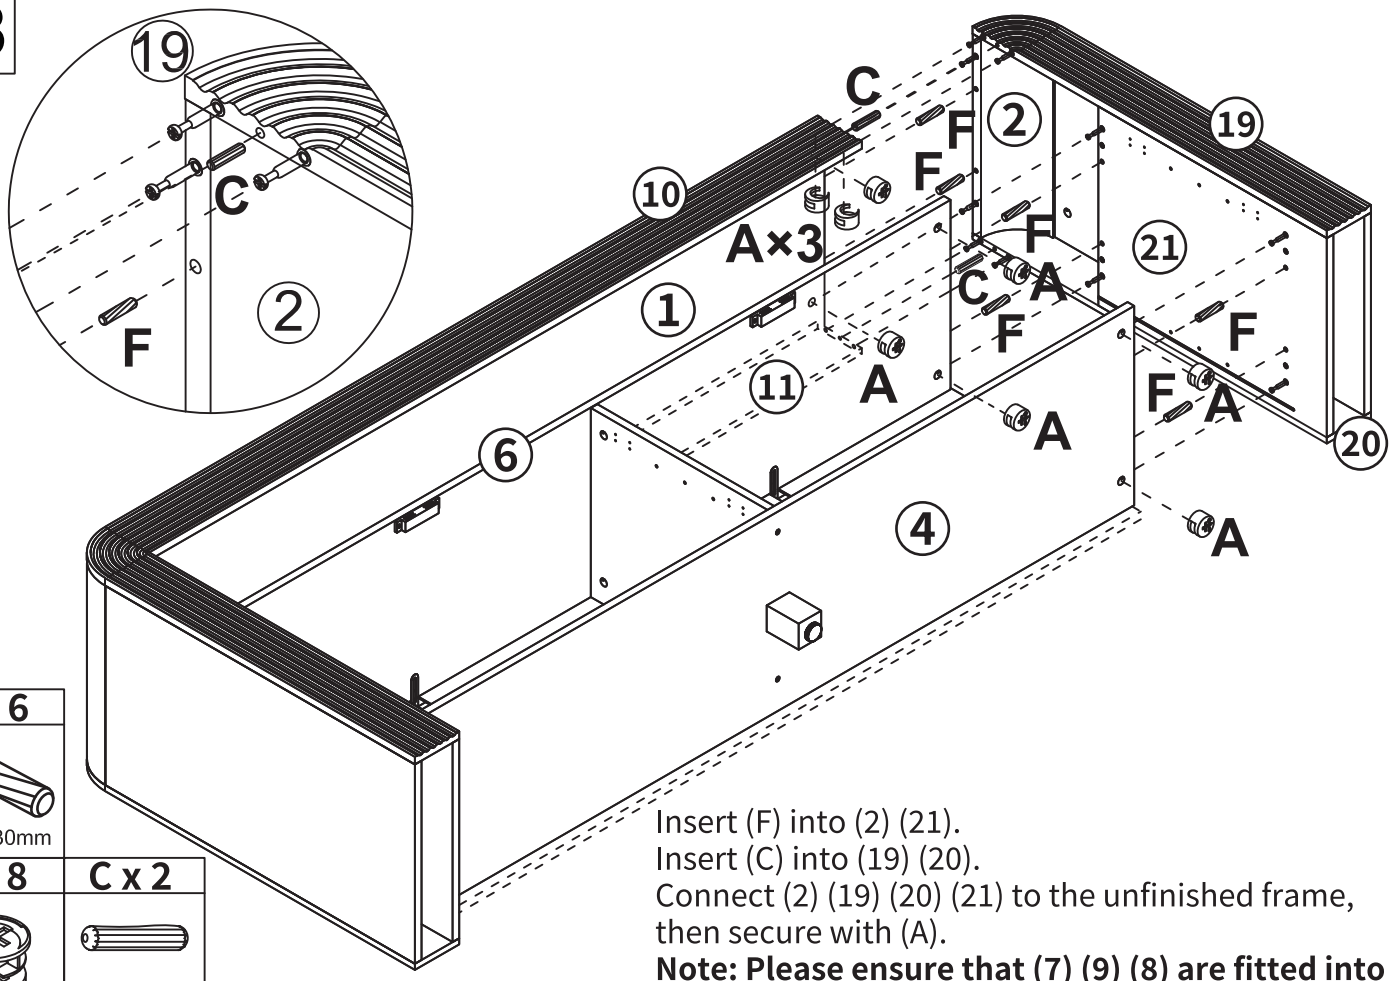




| F x 6 | A x 8 | C x 2 |
|---|---|---|
| Ø8X30mm | | Ø6X30mm |

Insert (F) into (2) (21).
Insert (C) into (19) (20).
Connect (2) (19) (20) (21) to the unfinished frame, then secure with (A).
**Note: Please ensure that (7) (9) (8) are fitted into the grooves of (21).**

## 19

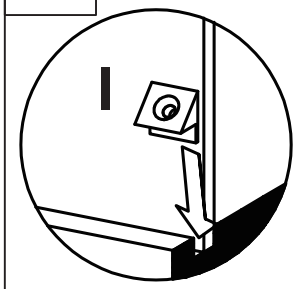

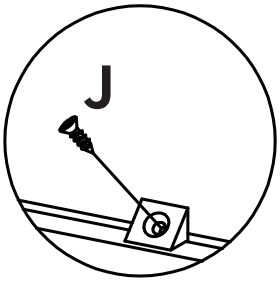
**J x 20**

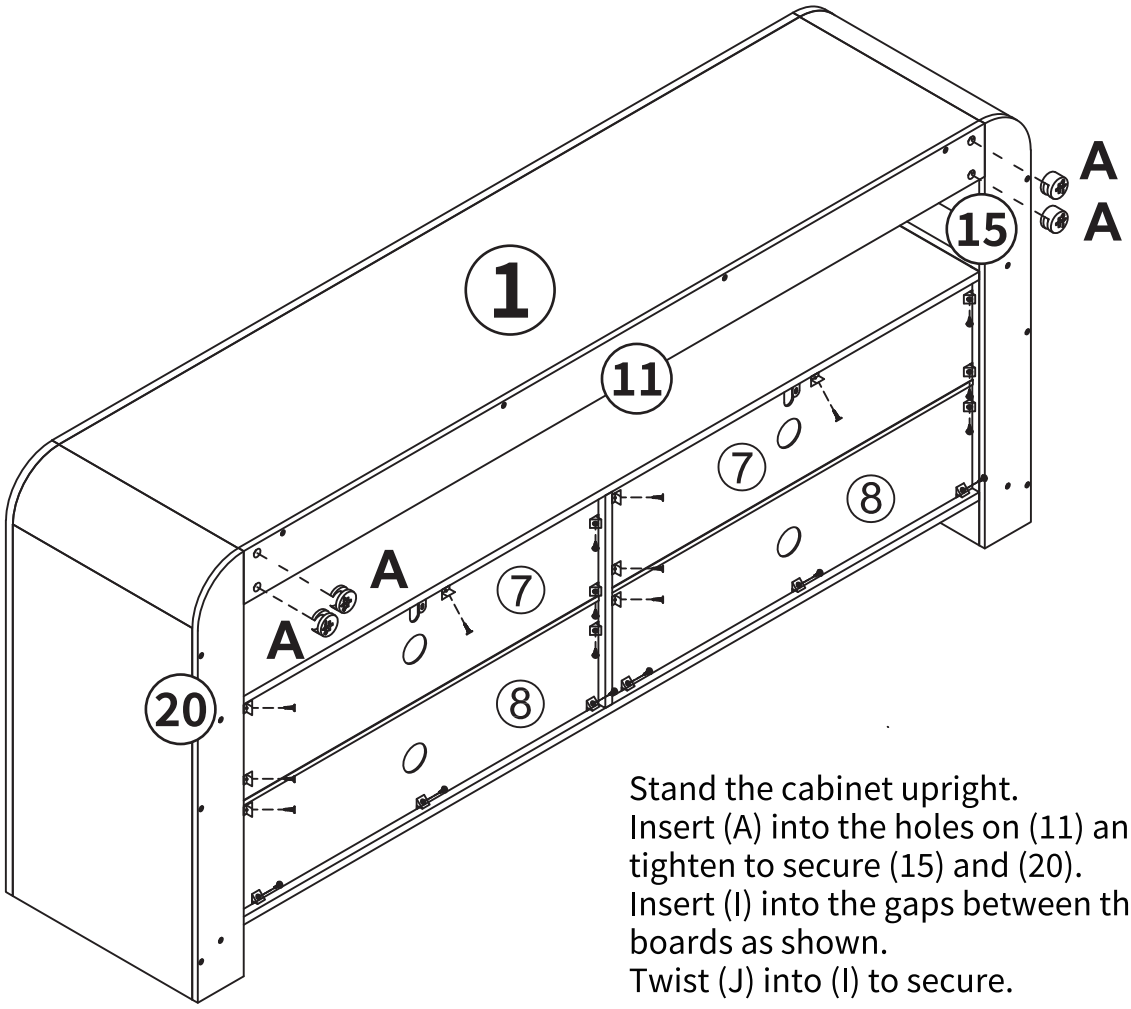


Ø3X16mm

**A x 4**





**I x 20**



Stand the cabinet upright.
Insert (A) into the holes on (11) and tighten to secure (15) and (20).
Insert (I) into the gaps between the boards as shown.
Twist (J) into (I) to secure.

## 20

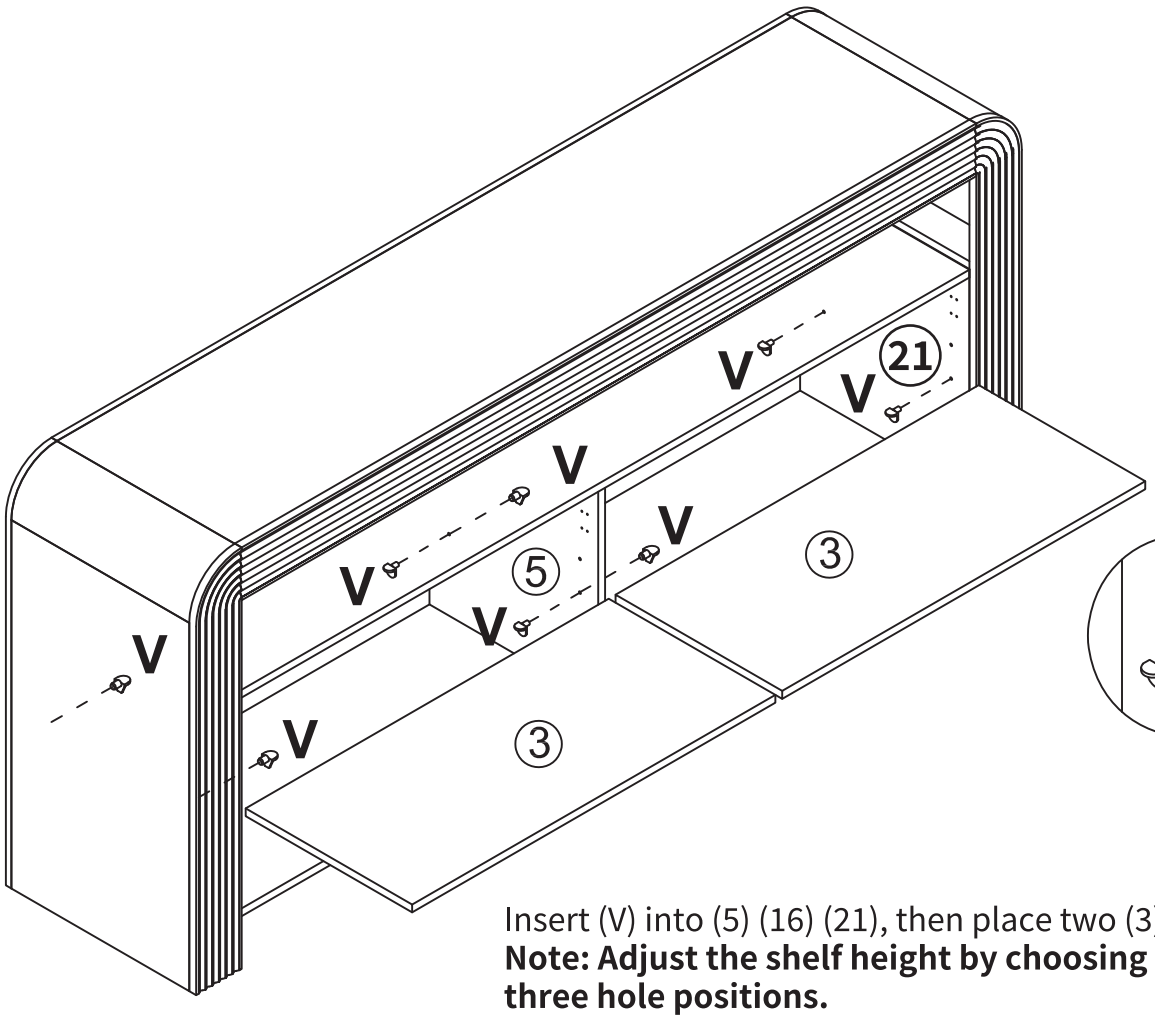

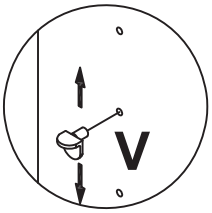




**V x 8**



Insert (V) into (5) (16) (21), then place two (3) on (V).
**Note: Adjust the shelf height by choosing from three hole positions.**
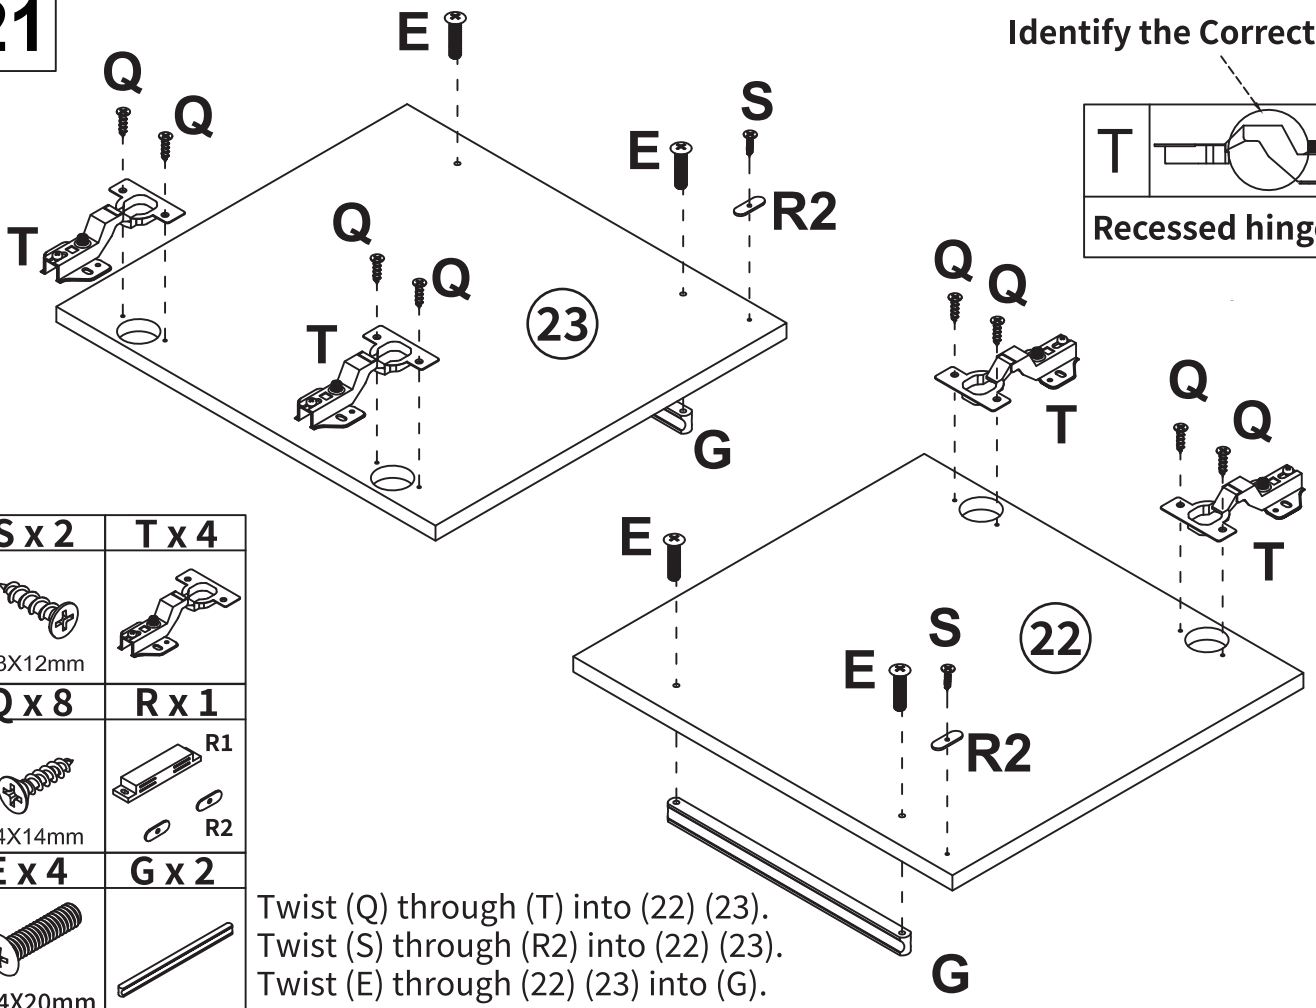
## 21





Identify the Correct Hinge.




| S x 2 | T x 4 |
|---|---|
| Ø3X12mm | |
| **Q x 8** | **R x 1** |
| Ø4X14mm | R1 R2 |
| **E x 4** | **G x 2** |
| M4X20mm | |

Twist (Q) through (T) into (22) (23).
Twist (S) through (R2) into (22) (23).
Twist (E) through (22) (23) into (G).

## 22

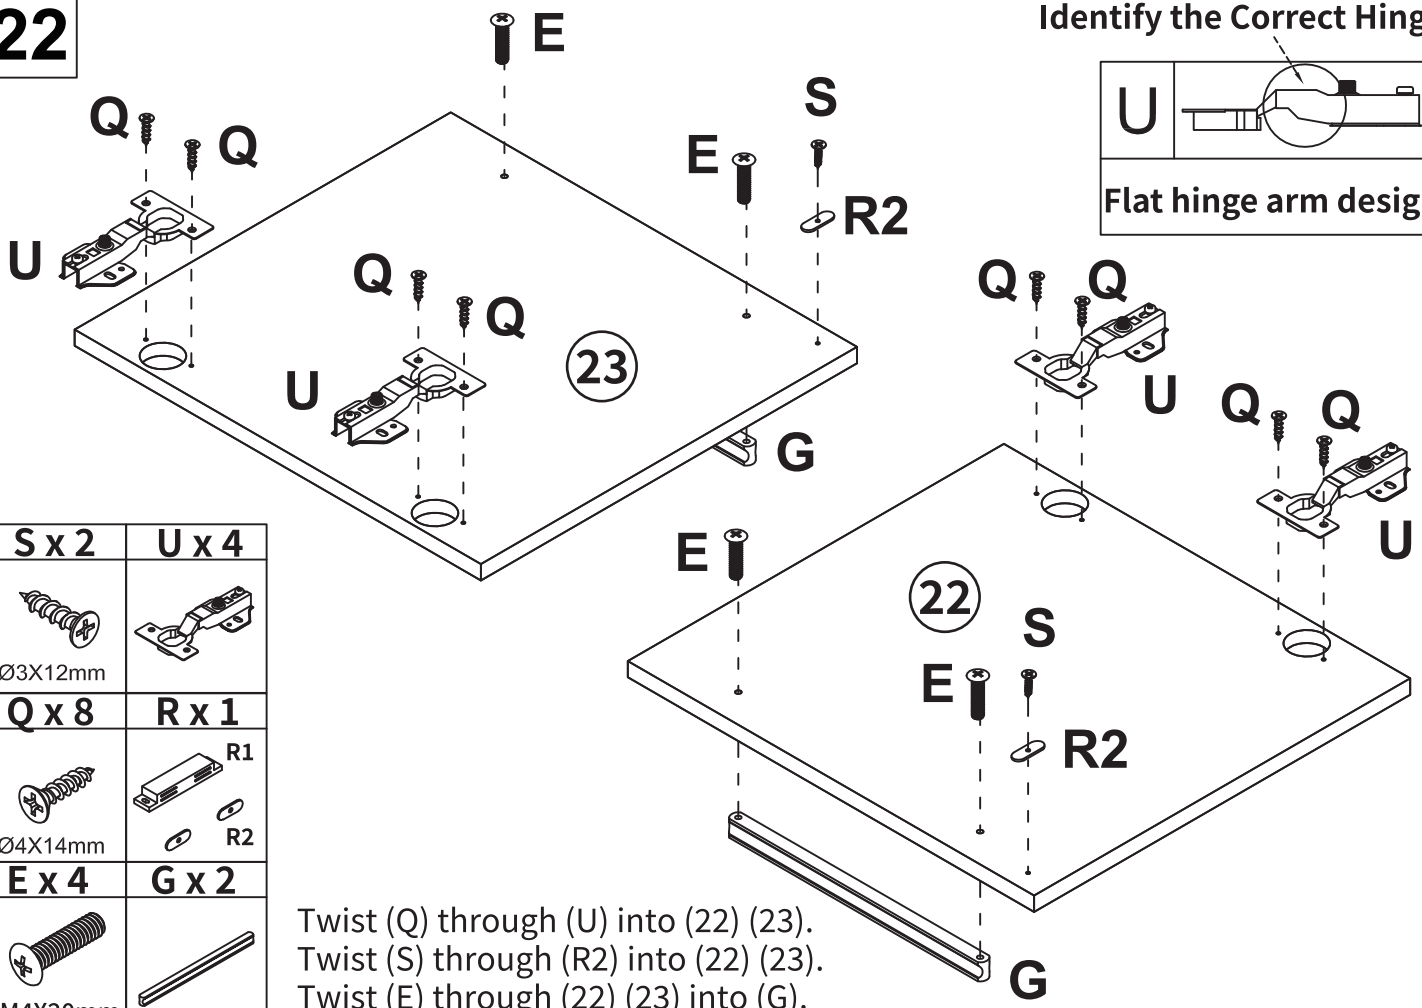



Identify the Correct Hinge.




| S x 2 | U x 4 |
|---|---|
| Ø3X12mm | |
| **Q x 8** | **R x 1** |
| Ø4X14mm | R1 R2 |
| **E x 4** | **G x 2** |
| M4X20mm | |

Twist (Q) through (U) into (22) (23).
Twist (S) through (R2) into (22) (23).
Twist (E) through (22) (23) into (G).

## 23

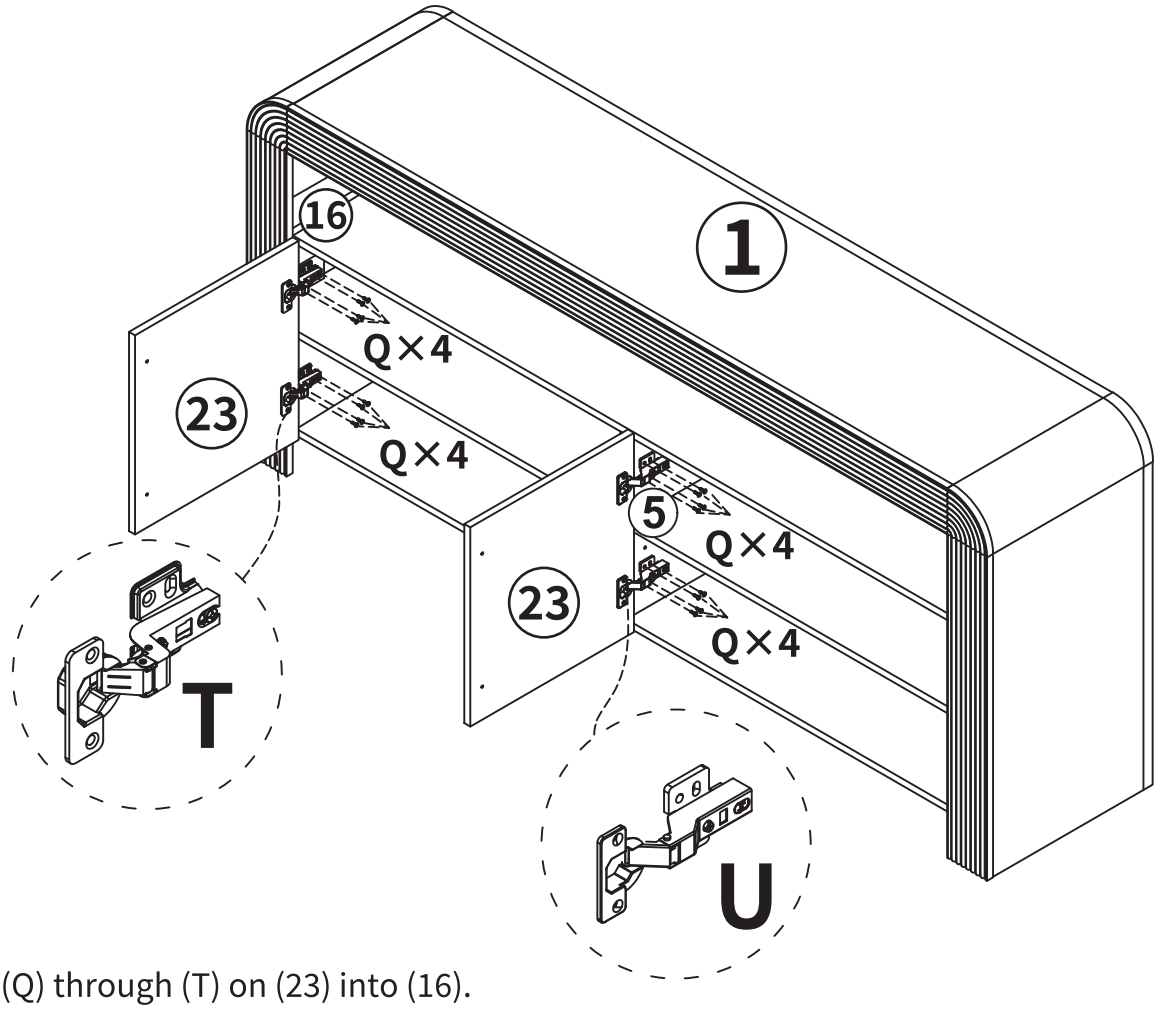



**Q x 16**



Ø4X14mm

Twist (Q) through (T) on (23) into (16).
Twist (Q) through (U) on (23) into (5).

## 24

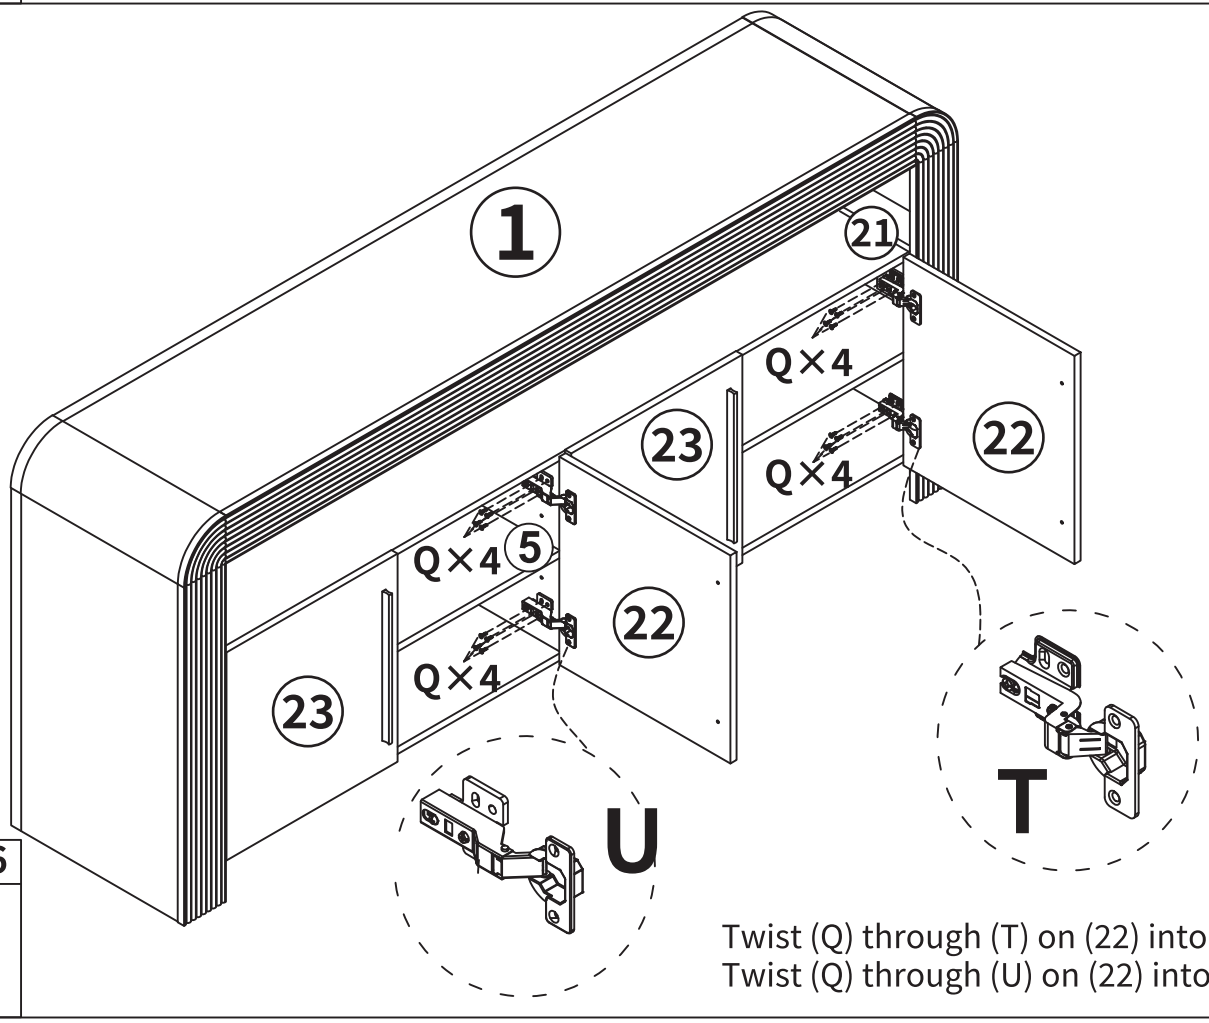



**Q x 16**




Ø4X14mm


Twist (Q) through (T) on (22) into (21).
Twist (Q) through (U) on (22) into (5).

**25**

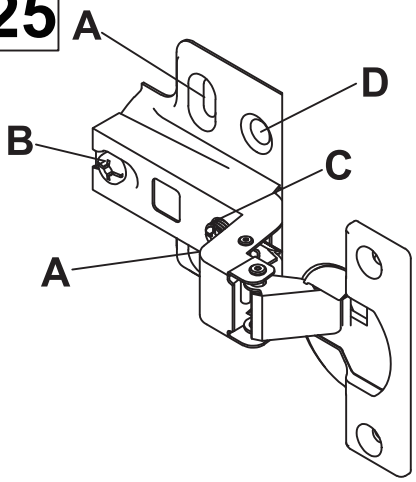



**NOTE: If you encounter a gap or difficulty closing the door after installation, please adjust the hinge as follows:**

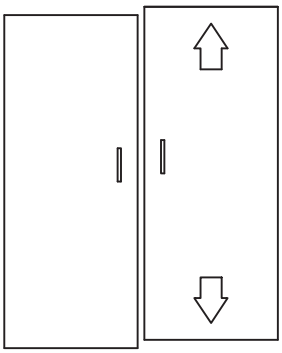


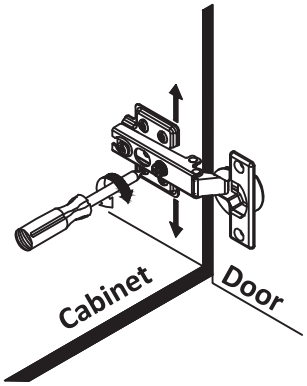


**[ How to adjust the vertical height of the door ]**


- First, remove the Screw **D** from both the upper and lower hinges.
- Then, loosen the Screw **A** on both hinges to adjust the door height until it is properly aligned.
- Once the door is aligned, tighten the Screw **A**, then reinstall the Screw **D**.

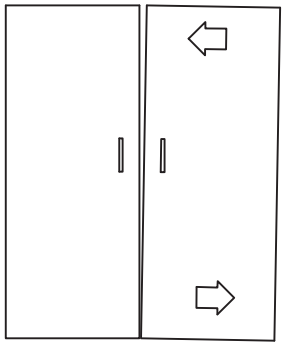


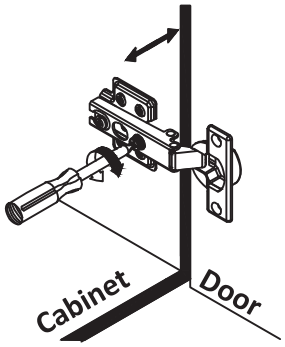


**[ How to adjust the horizontal level of the door ]**

- Twist Screw **C** on the hinge to adjust the door horizontally until it is aligned.
- Adjust the upper hinge only for top misalignment, the lower hinge only for bottom misalignment, or both if needed.
- Note: Screw **C** does not need to be tightened at the end — simply leave it in place once the door is aligned.

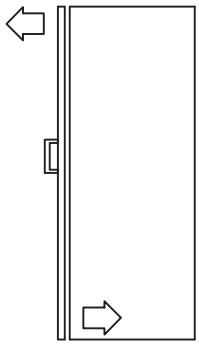


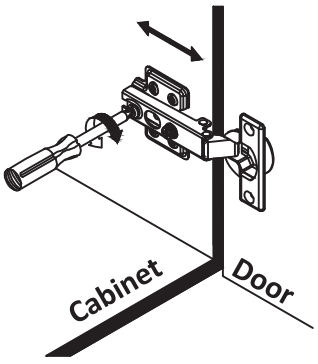



**[ How to adjust the depth of the door ]**


- Loosen Screw **B** and push/pull the door to adjust the gap.
- If the gap remains, keep Screw **B** loose and slightly twist Screw **C** to help move the door forward/backward.
- Once aligned, tighten Screw **B** to lock the position. (Screw **C** does not need to be tightened.)


# 26

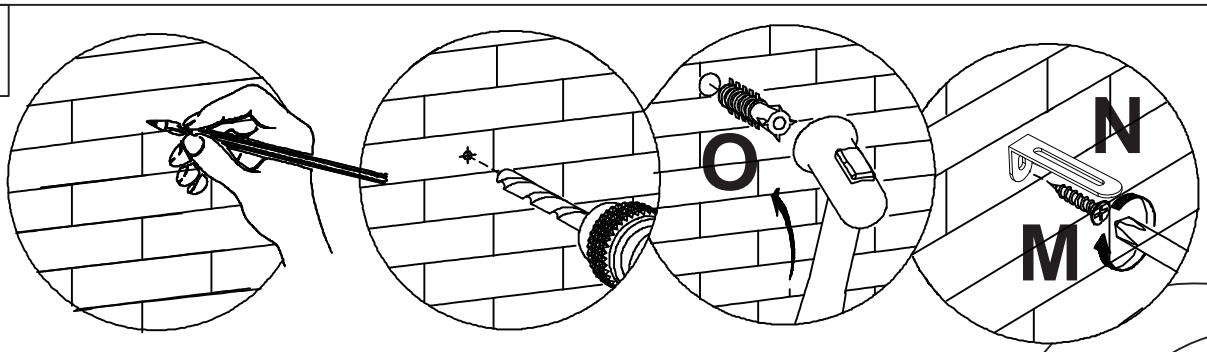

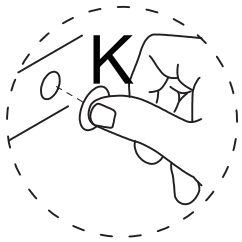


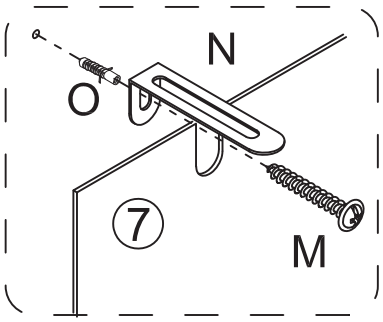

Paste visible holes with hole stickers.

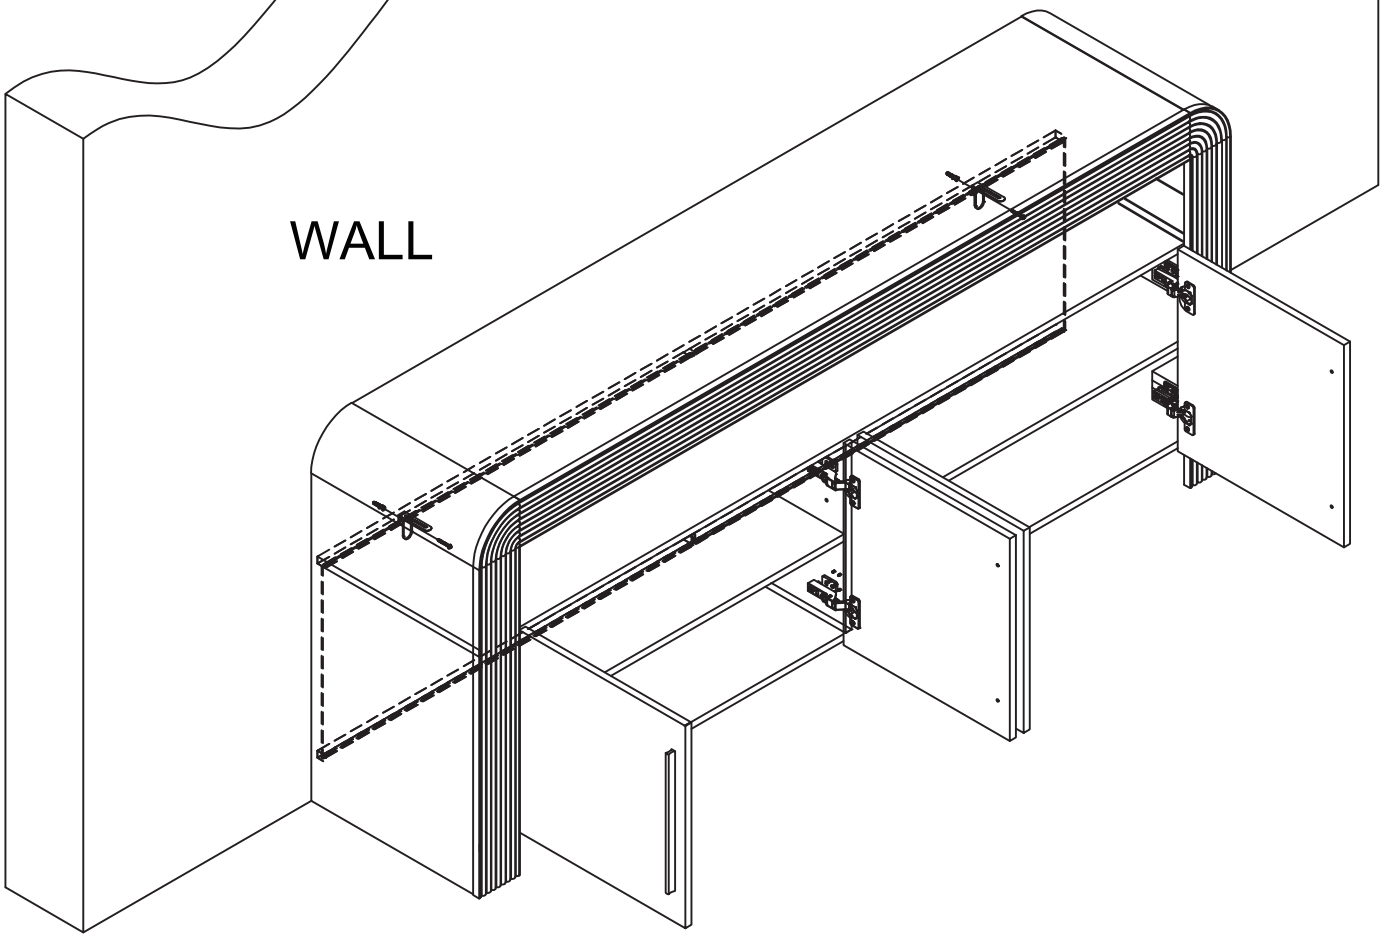



Measure the distance between the two (N) on (6) and mark the corresponding positions on the wall.
Pre-drill holes at the marked positions.
Insert (O) into the drilled holes.
Twist (M) through (N) into (O) to secure.
Cover all exposed holes with (K) for a clean look.

| M x 2 | O x 2 | K x 49 |
|---|---|---|
|  Ø4X35mm |  |  Ø20mm |



**NOTE:**The included tipping restraint is designed for wooden stud walls only and requires attachment to a stud. If the provided hardware doesn't fit your wall, please purchase suitable expansion anchors from your local hardware store.

**WARNING:**Furniture tipping can cause serious injury or death, especially to children. Install restraint to reduce risk. It is a deterrent only, not a substitute for supervision, and not for earthquake protection (buy seismic restraints separately). Inspect periodically for security.

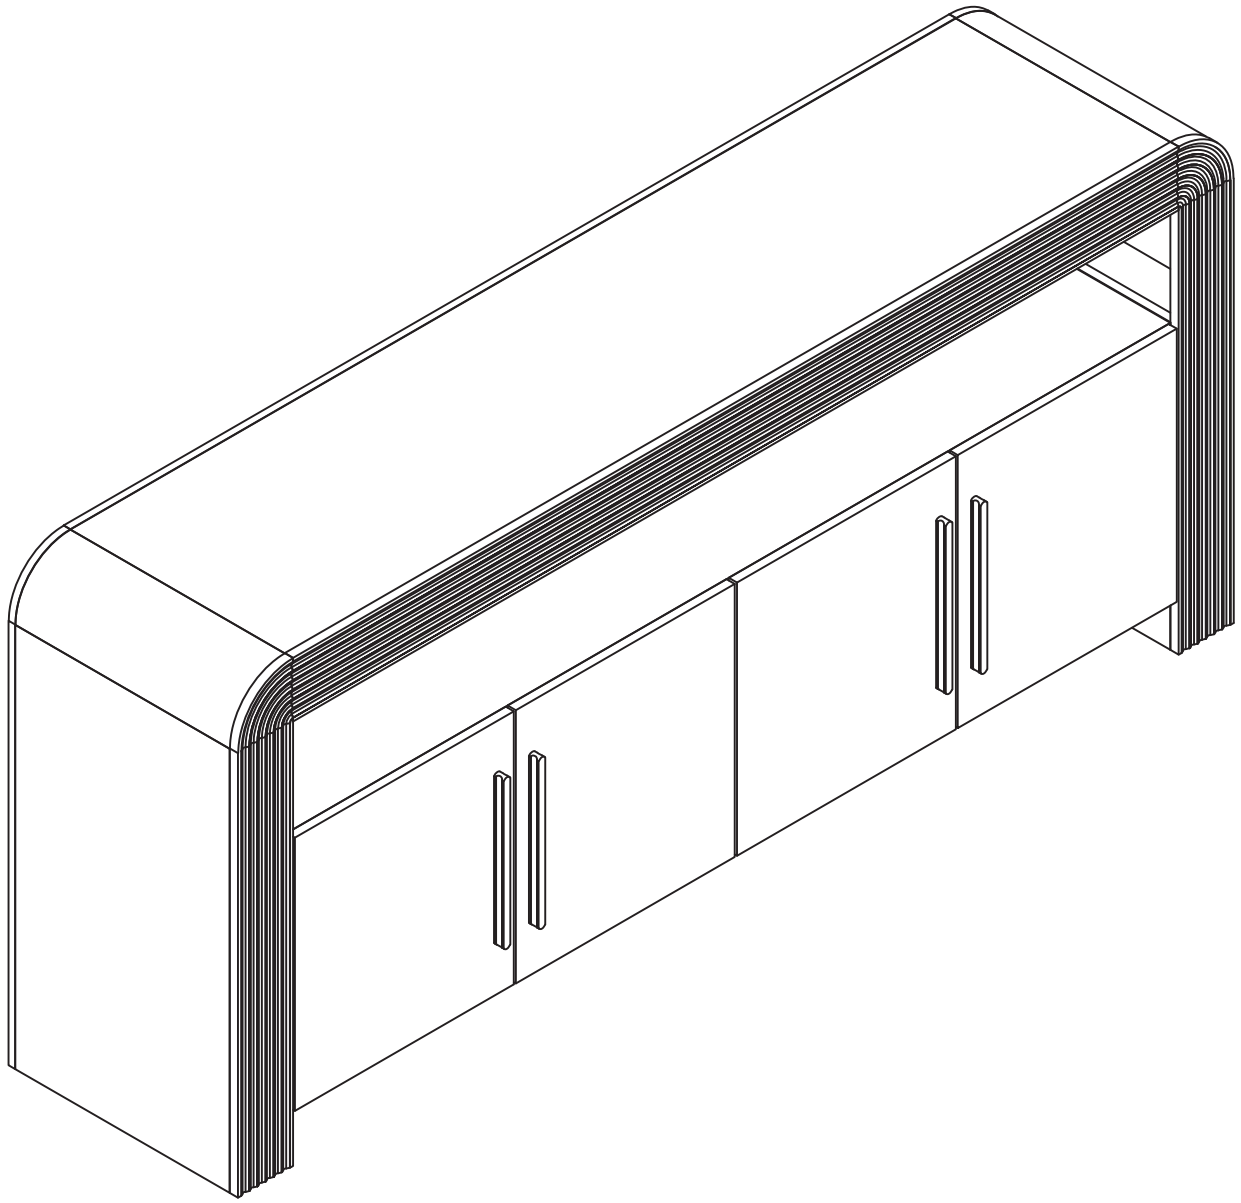

## DONE!