

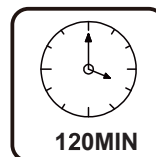
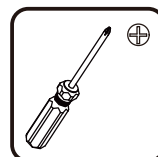
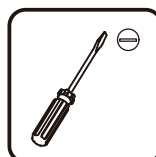



Installation & Assembly

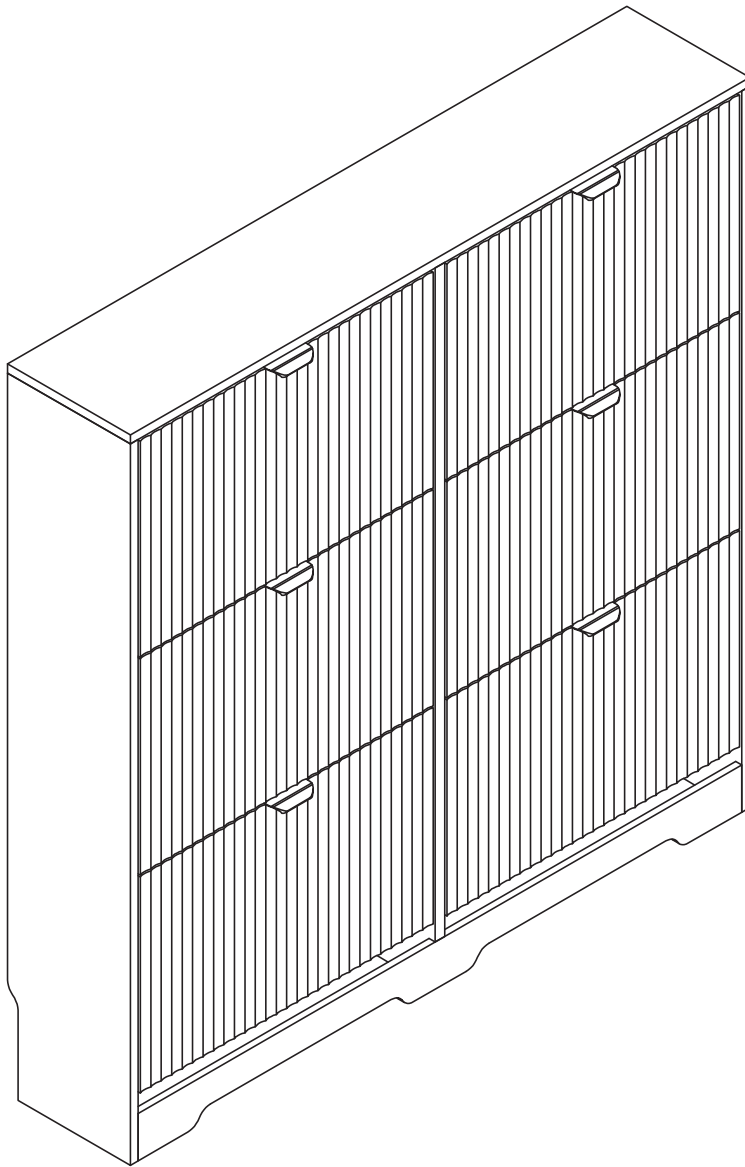


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

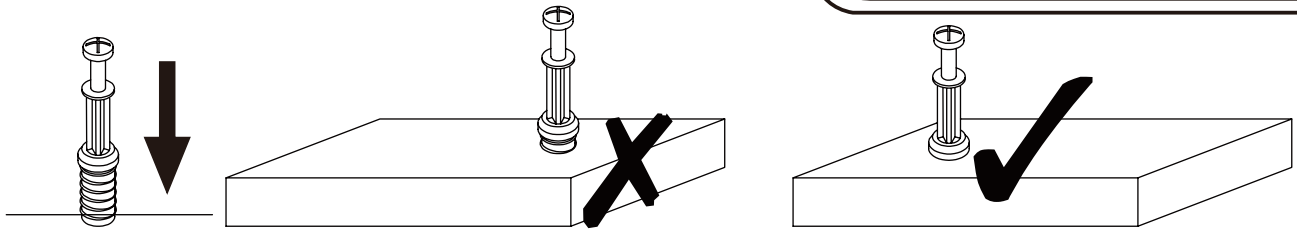


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

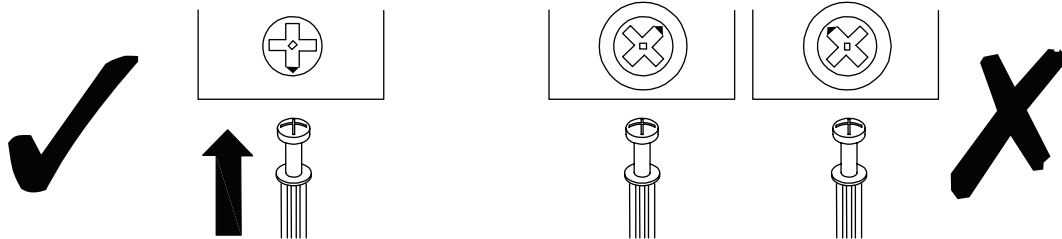

EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










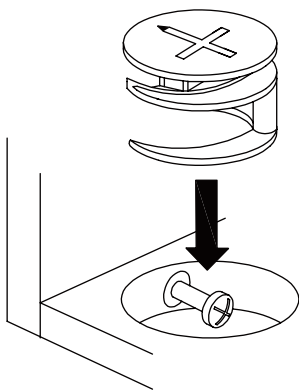


EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.


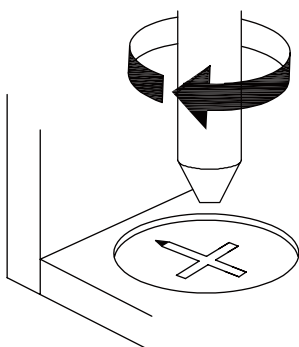




EN_Turn cam lock clockwise to tighten.


PACKING DELALS

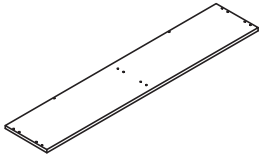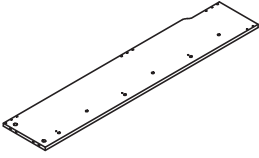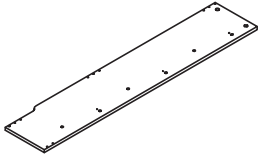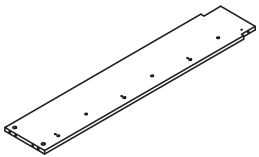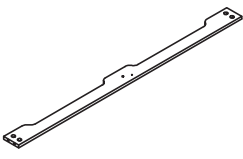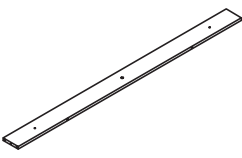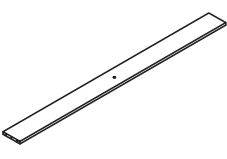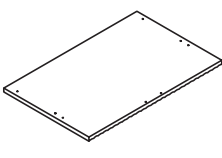NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x2	
⑧		x6	
⑨		x12	
⑩		x6	

NO.	PARTS	QTY	SPARE
	 Hardware Kit	x1	

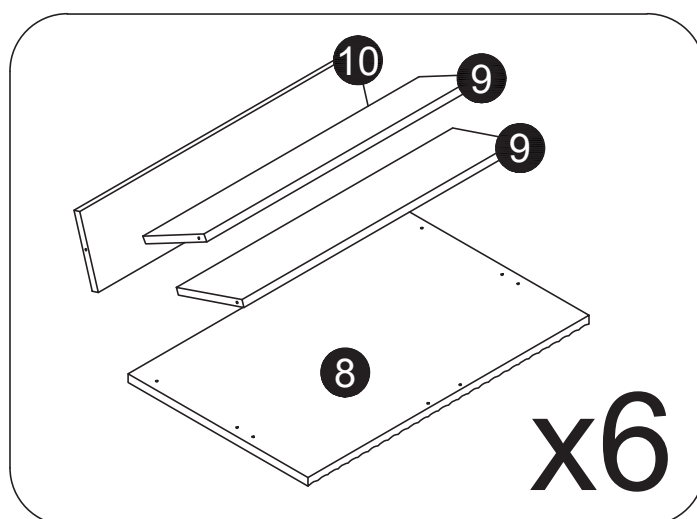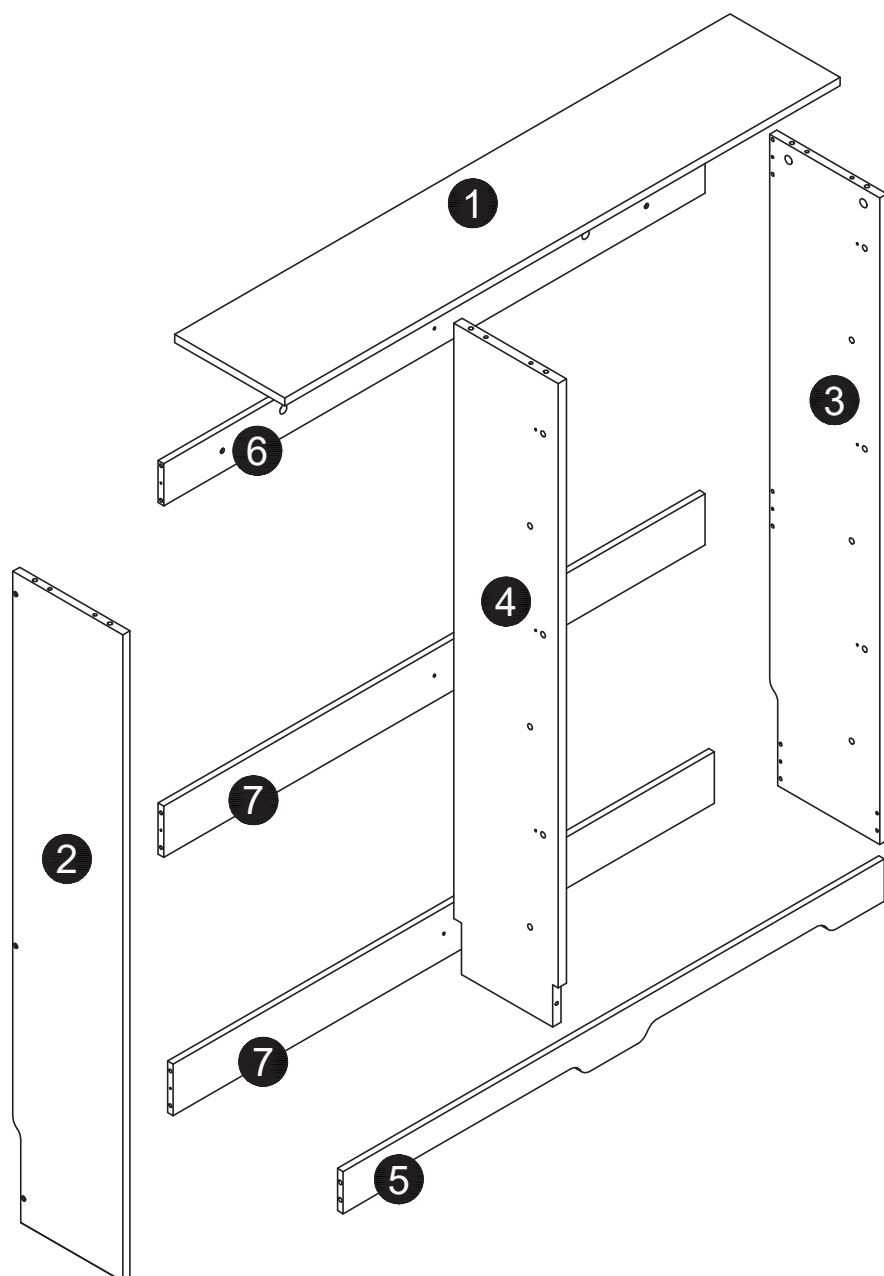


 A x12 Ø6x35mm +1(spare)	 B x12 Ø15x10mm +1(spare)	 C x19 Ø6x30mm +1(spare)	 D x9 Ø4x35mm +1(spare)	 E x98 Ø3.5x12mm +5(spare)	 F x12 +1(spare)
 G x6	 H x12 +1(spare)	 I x6 Ø6x12mm +1(spare)	 J x6 +2(spare)	 K-1  K-2 Ø4x40mm	 L x6
 M x1	 N x6 Ø6x16mm +1(spare)	 O x1	 R x6		

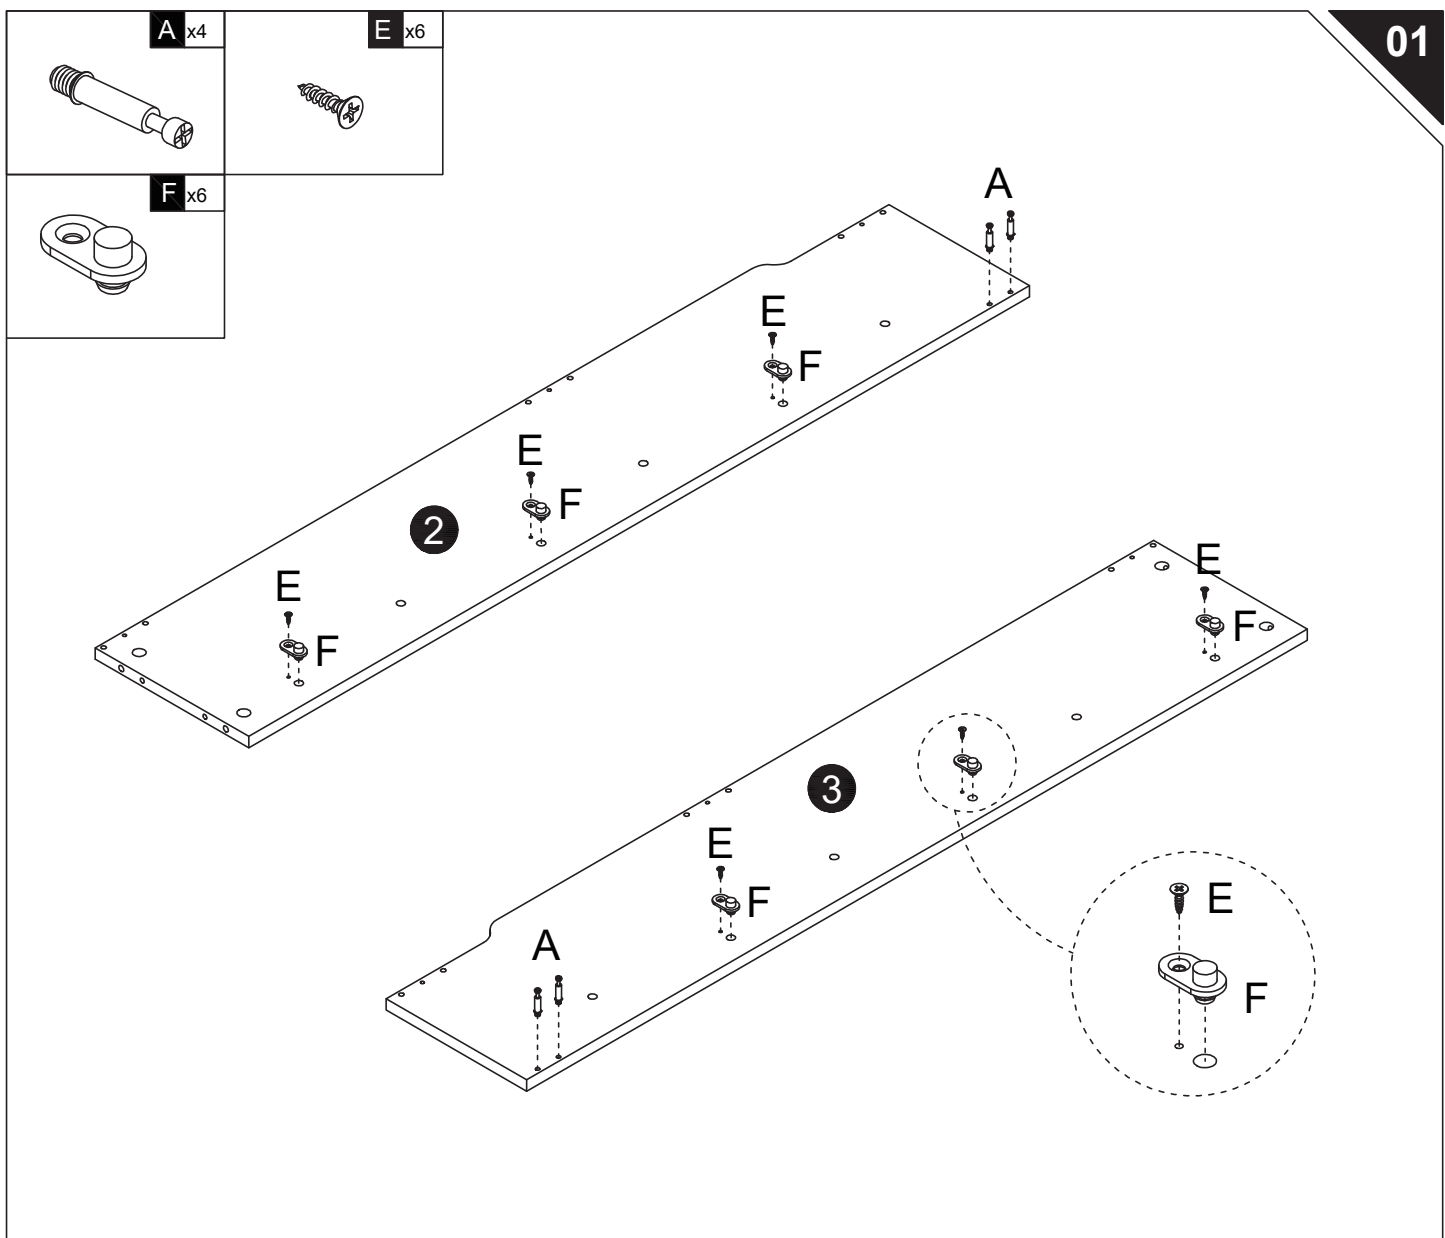

E x7


F x6

O x1

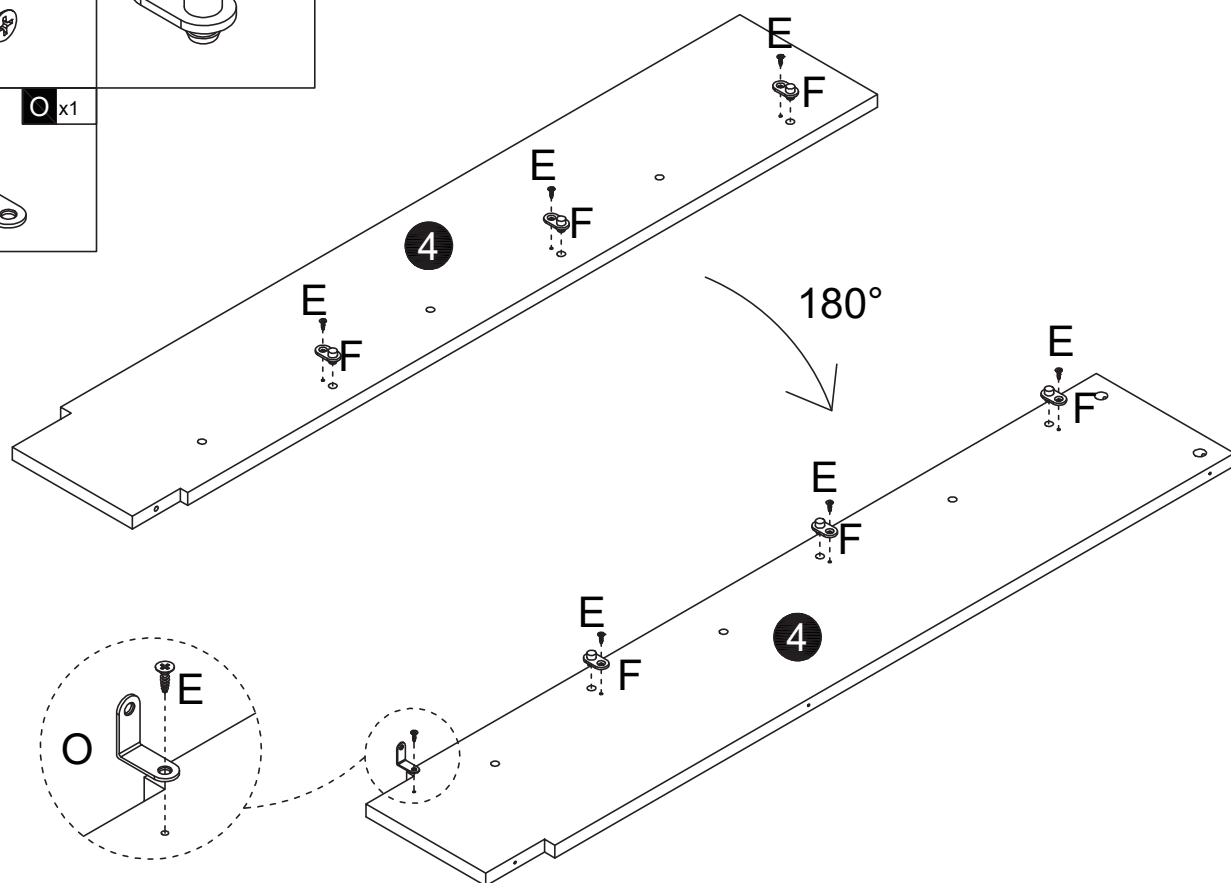

C x1

E x1

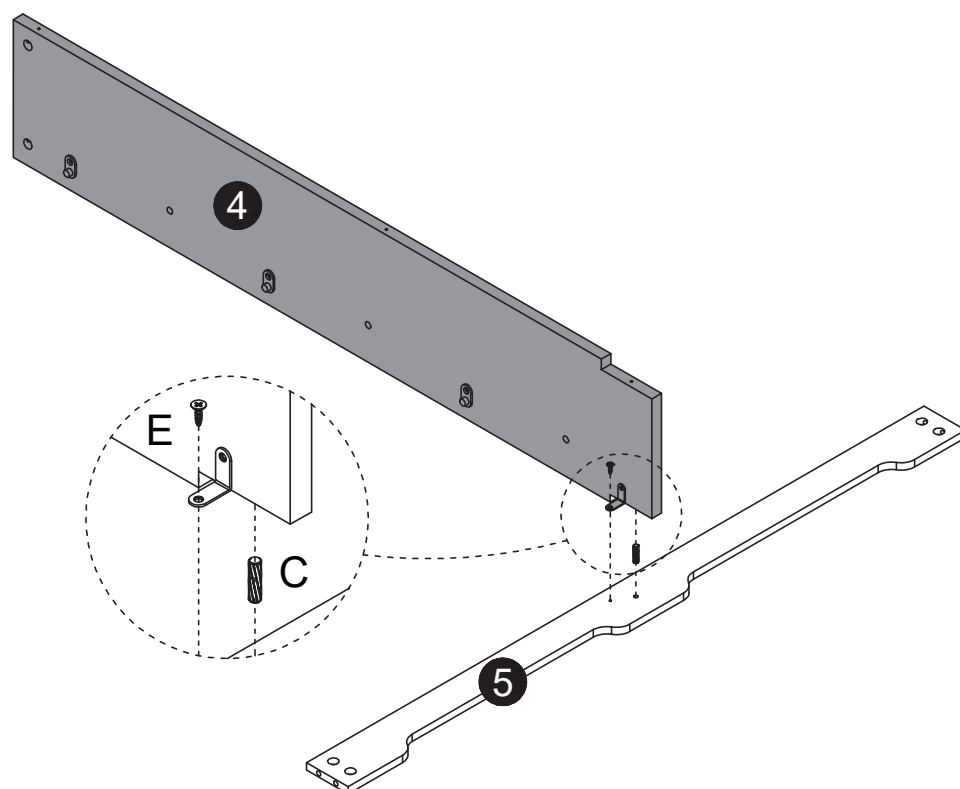


B x2

04



Need Two or More
People To Complete

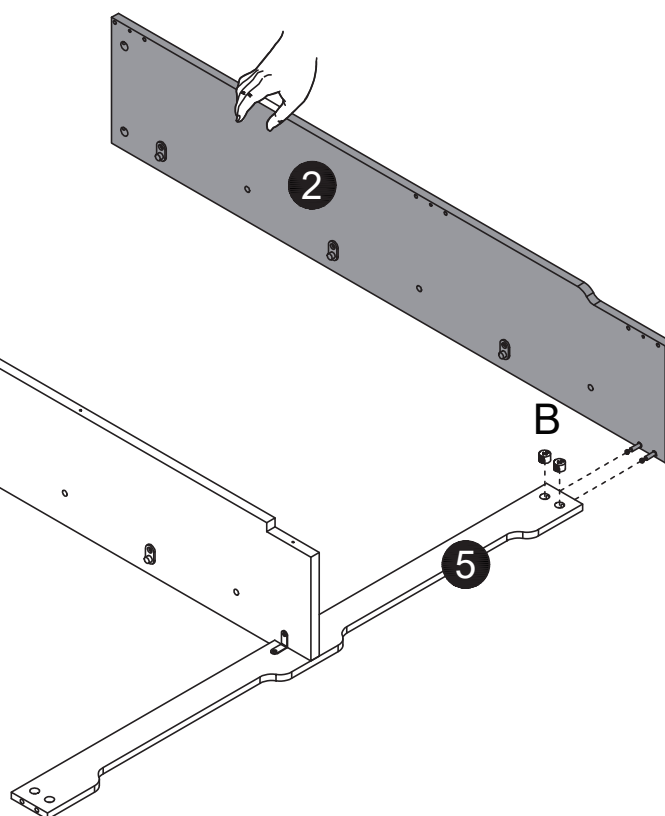


C x6

D x3

05



Caution the direction of 6 !

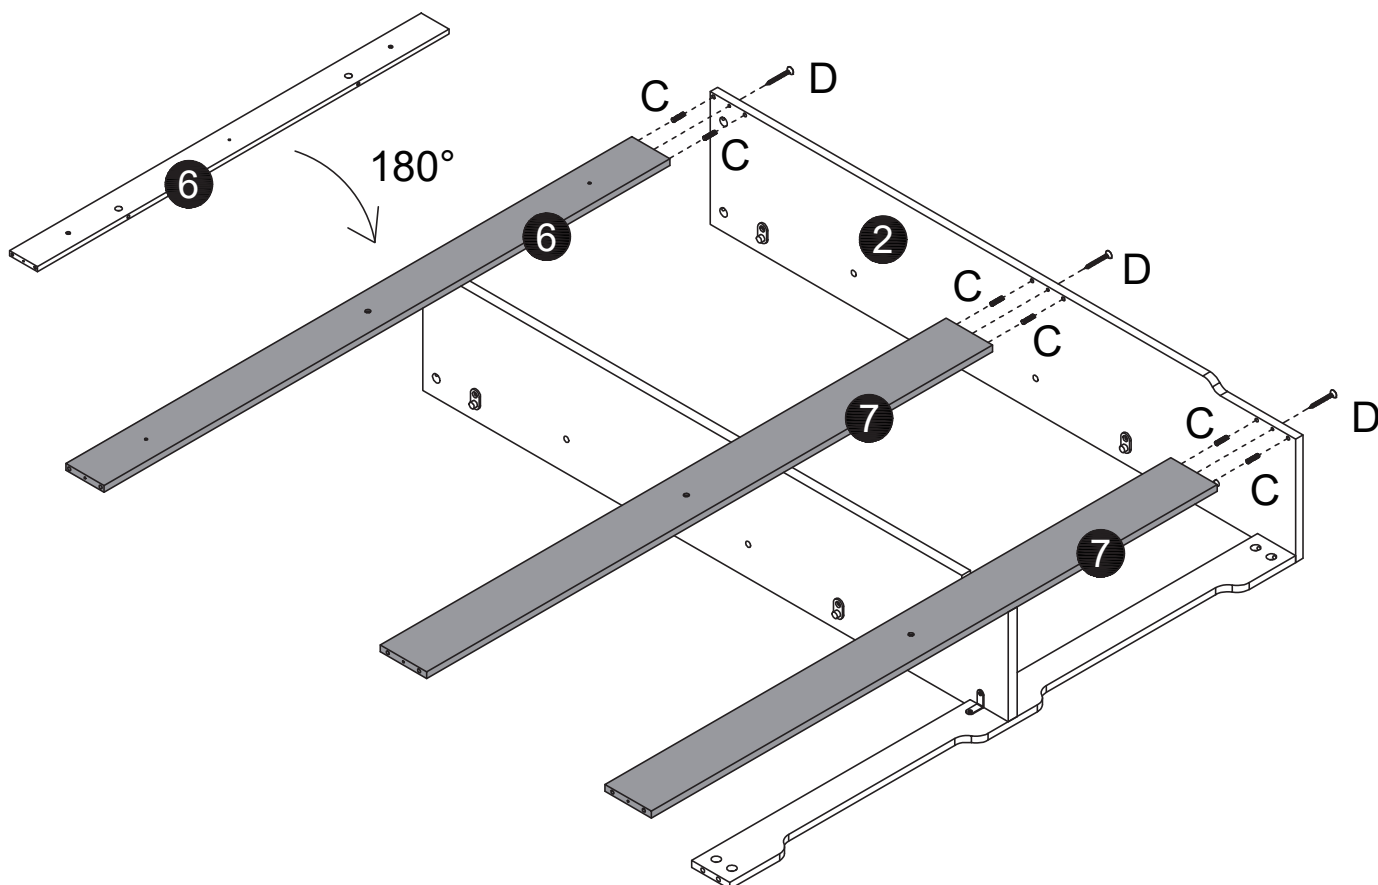



B x2




C x6




D x6

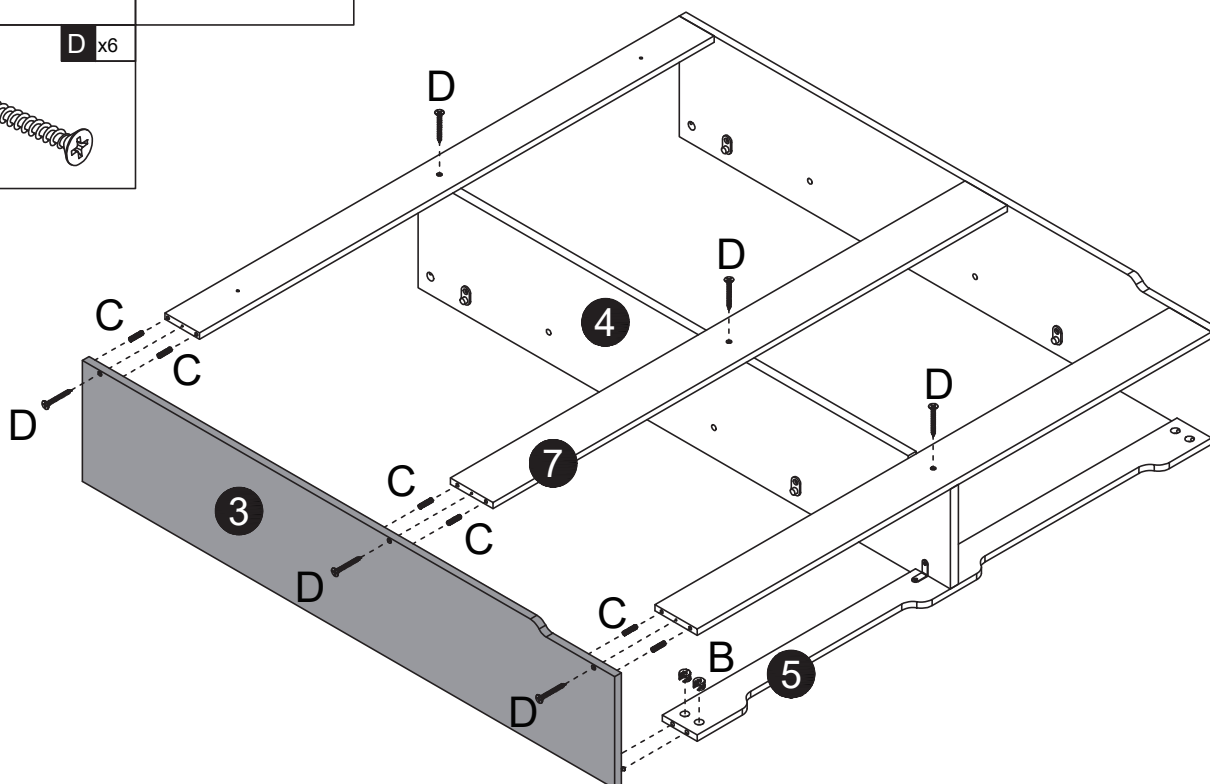


C x6

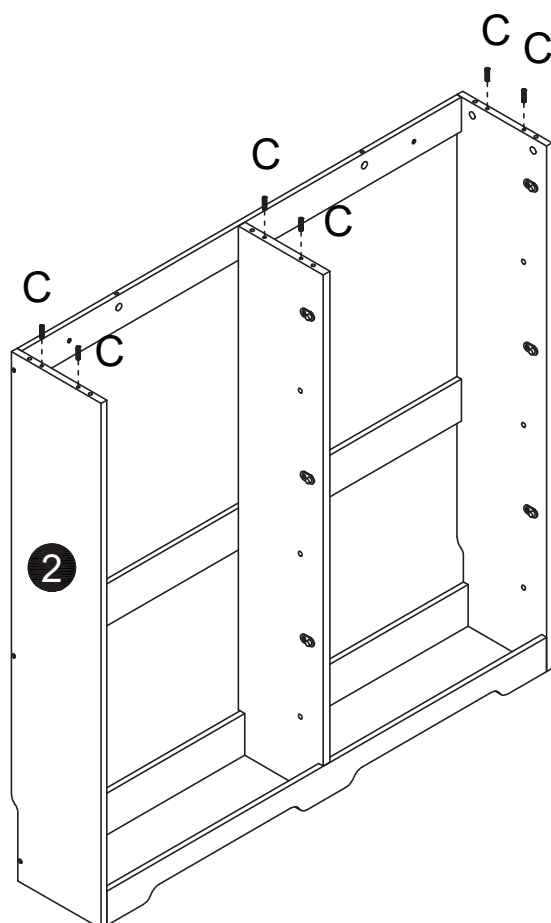

A x8




08

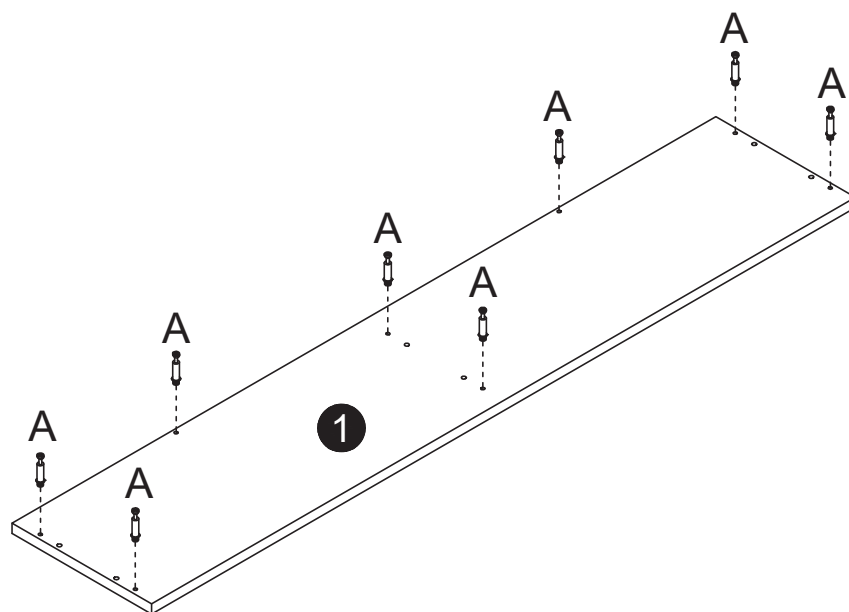

B x8






09

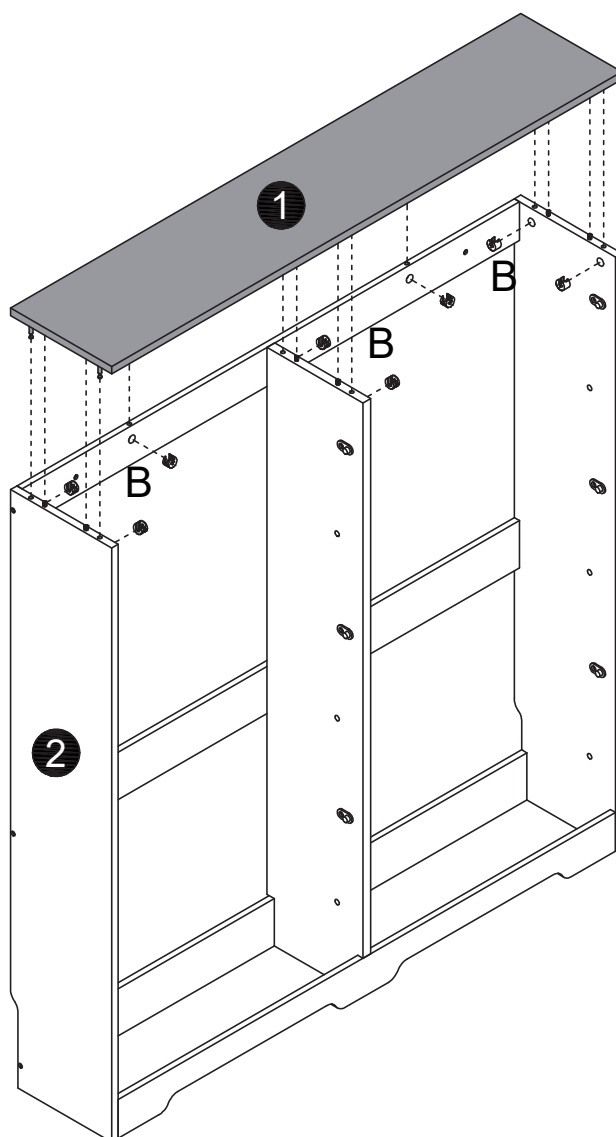



Need Two or More
People To Complete

K x2

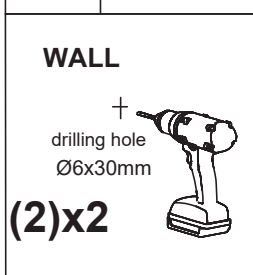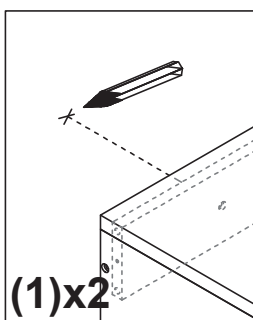


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

Then use a tape drill to make holes in the wall that are suitable for the product screws.

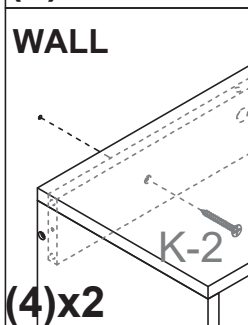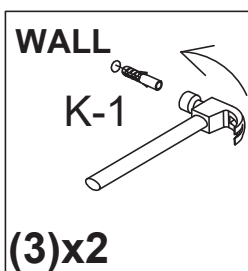

Then, put the expansion bolt into the hole

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.


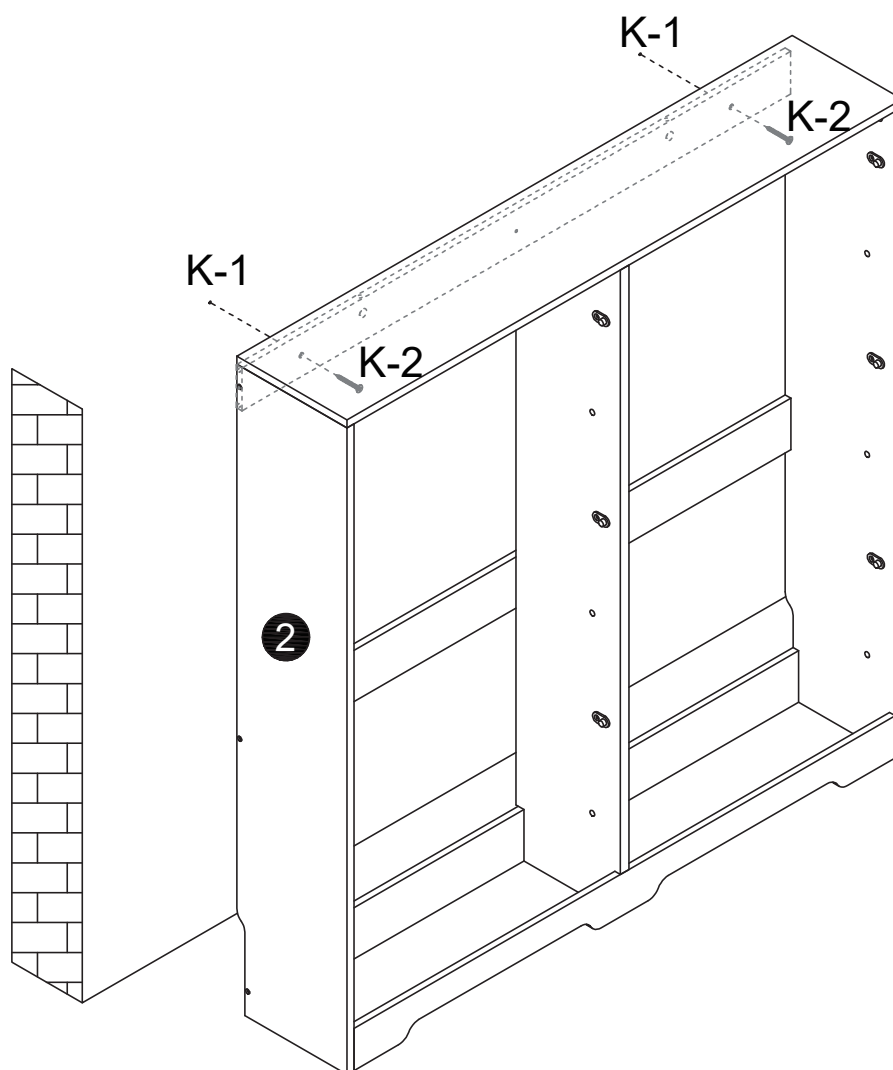


11

E x36

L x6



R x6

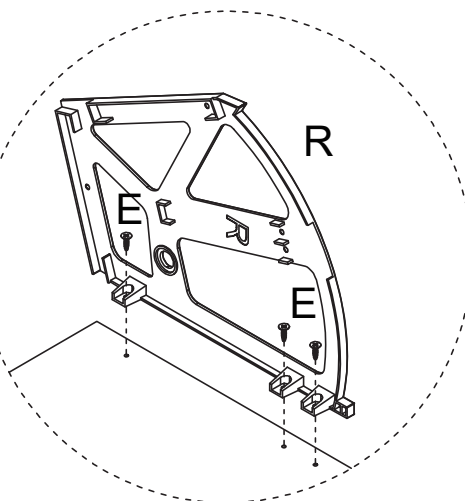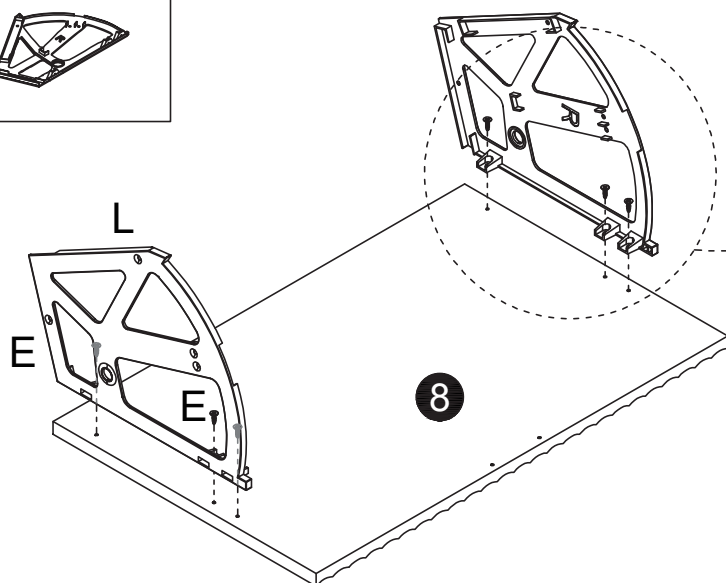

x6


12

E x12

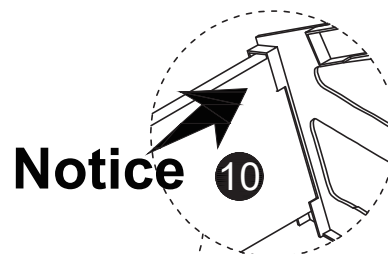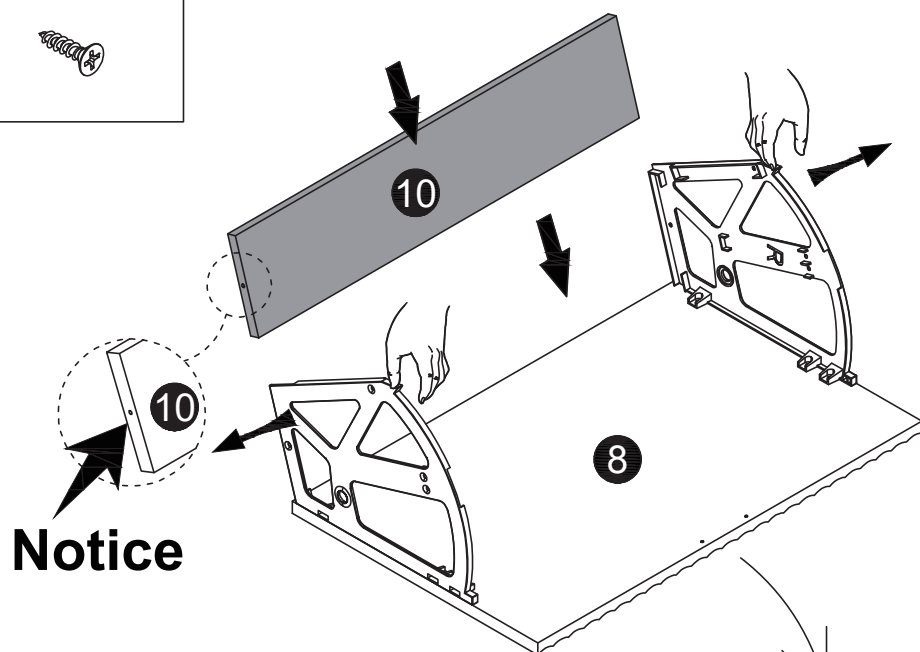

Notice


Notice

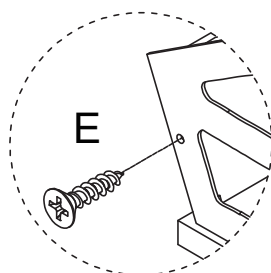

x6

E x12


13

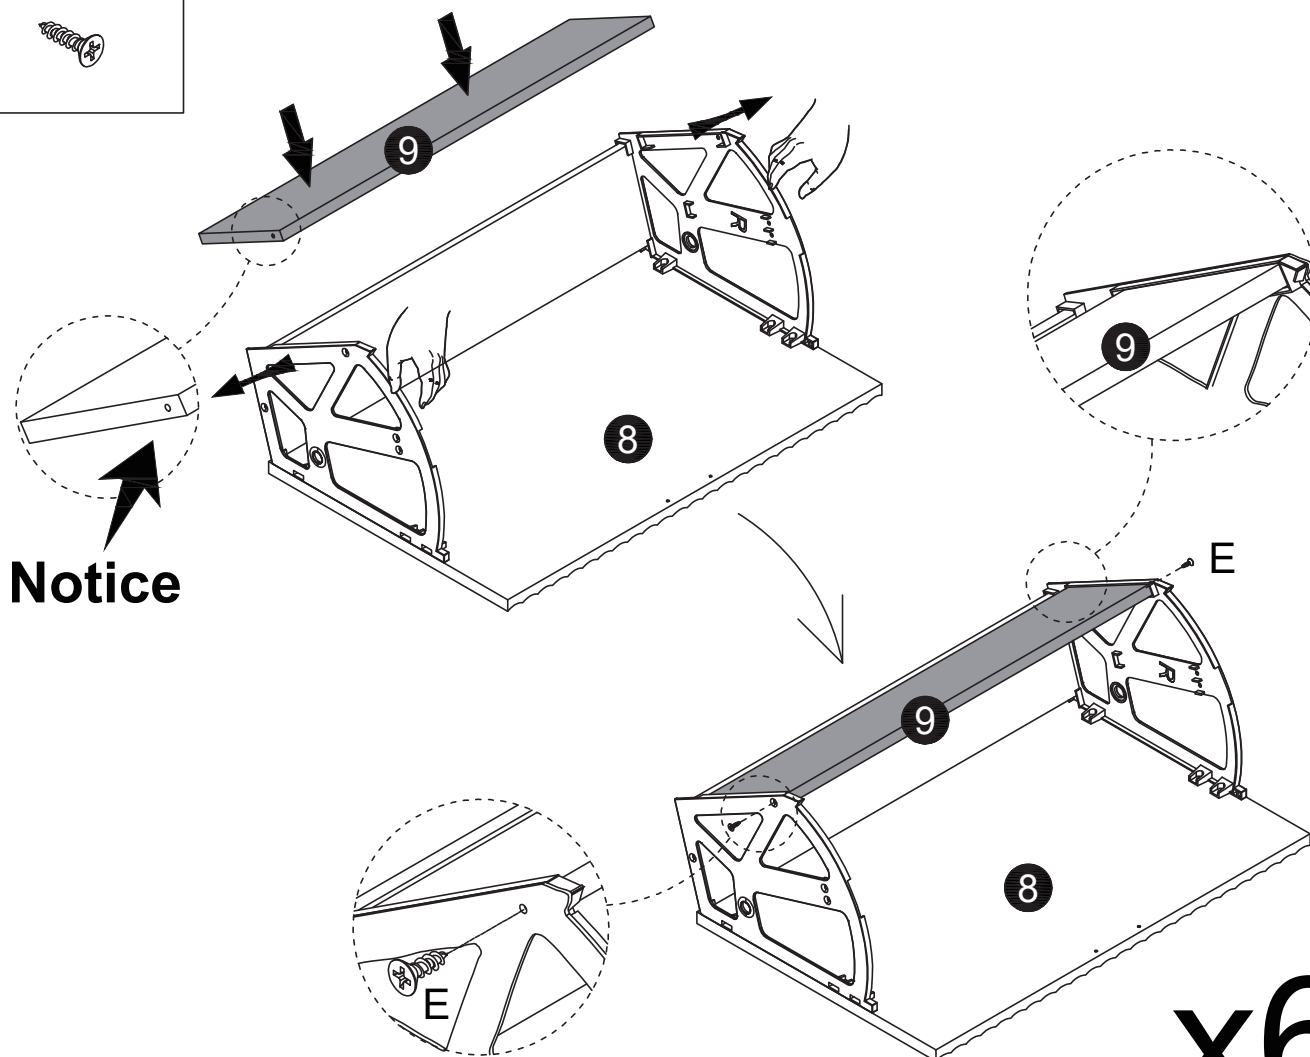

E x12

G x6

14

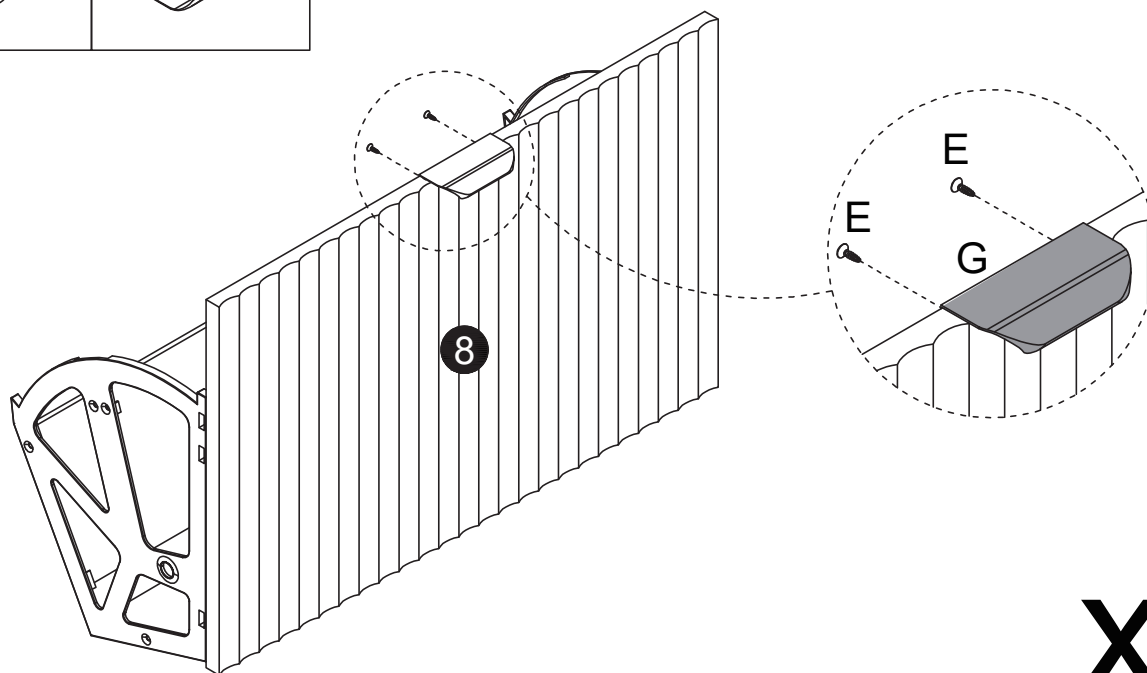


H x6




I x3



M x1




N x3

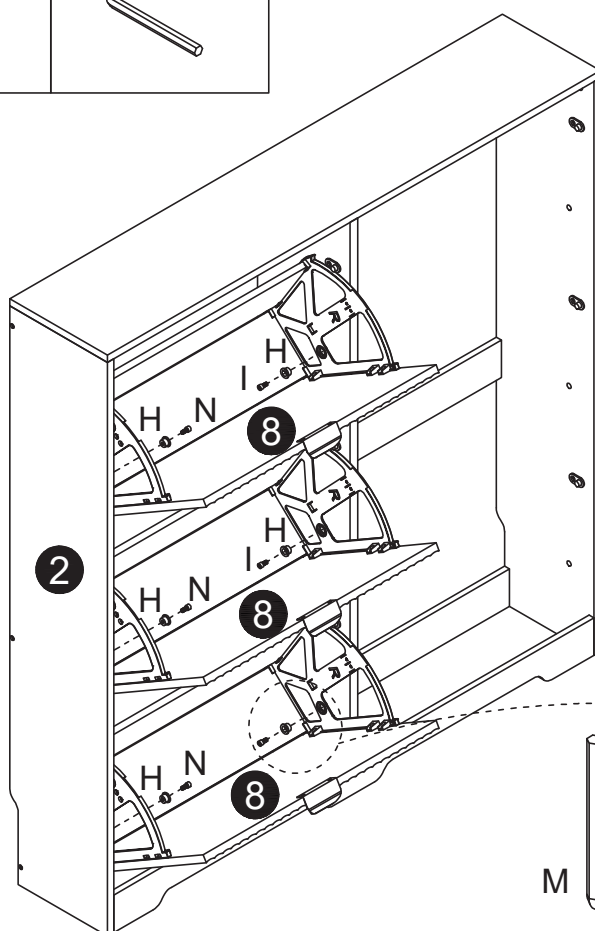




Note:

1、Distinguish between screw I and screw N.


2、Please do not forcefully lock the installation screws to the maximum limit to avoid damaging the side panel.

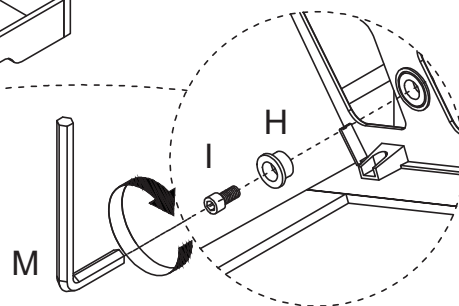

E x6

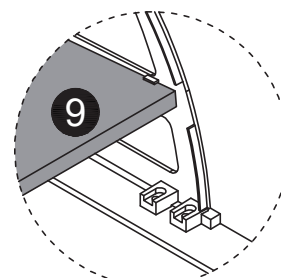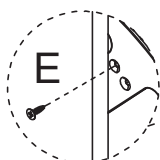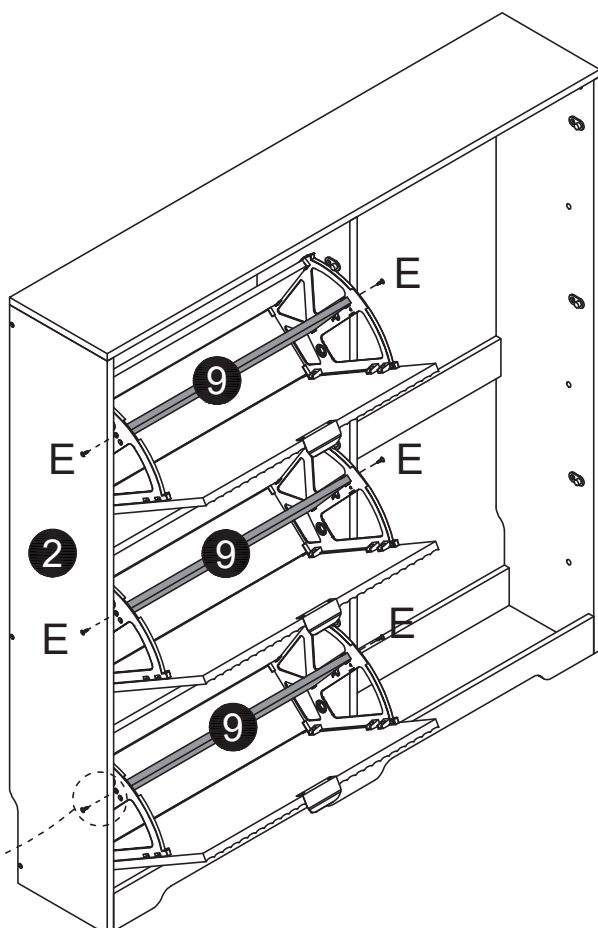

OR

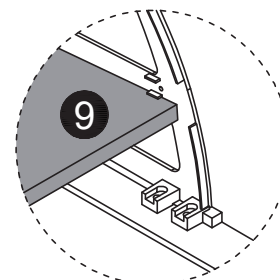


H x6




I x3



M x1




N x3

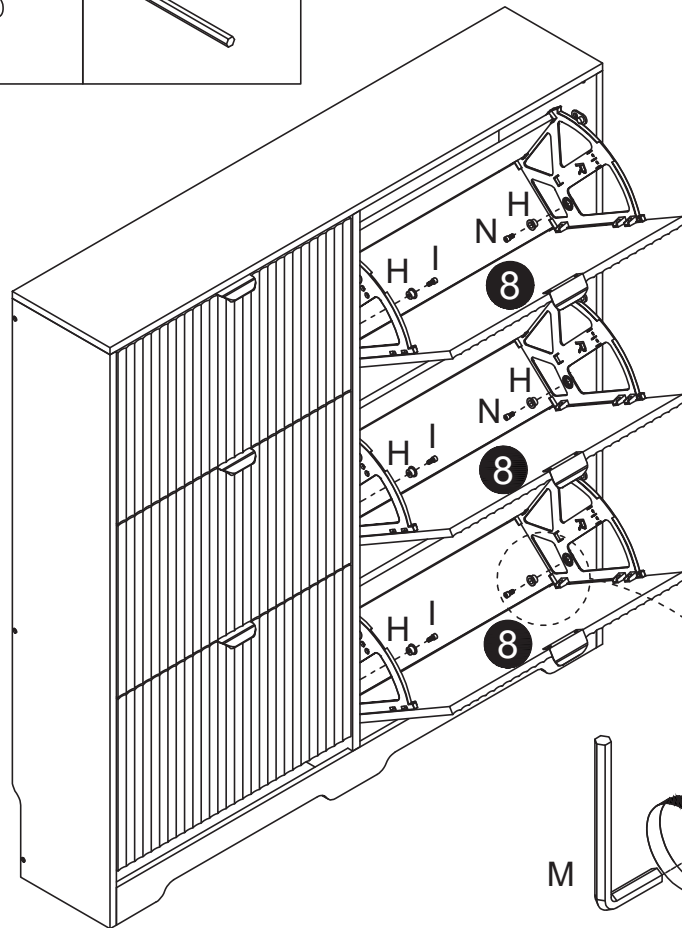



Note:

1、Distinguish between screw I and screw N.


2、Please do not forcefully lock the installation screws to the maximum limit to avoid damaging the side panel.

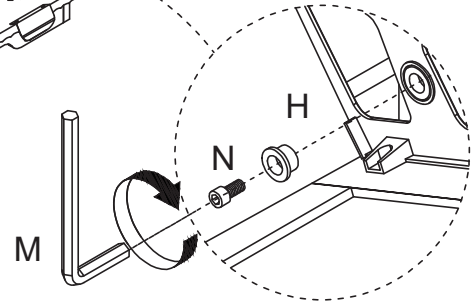

E x6

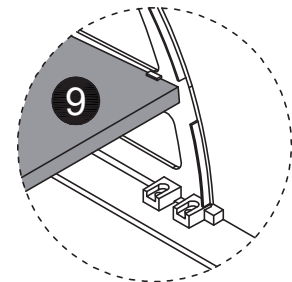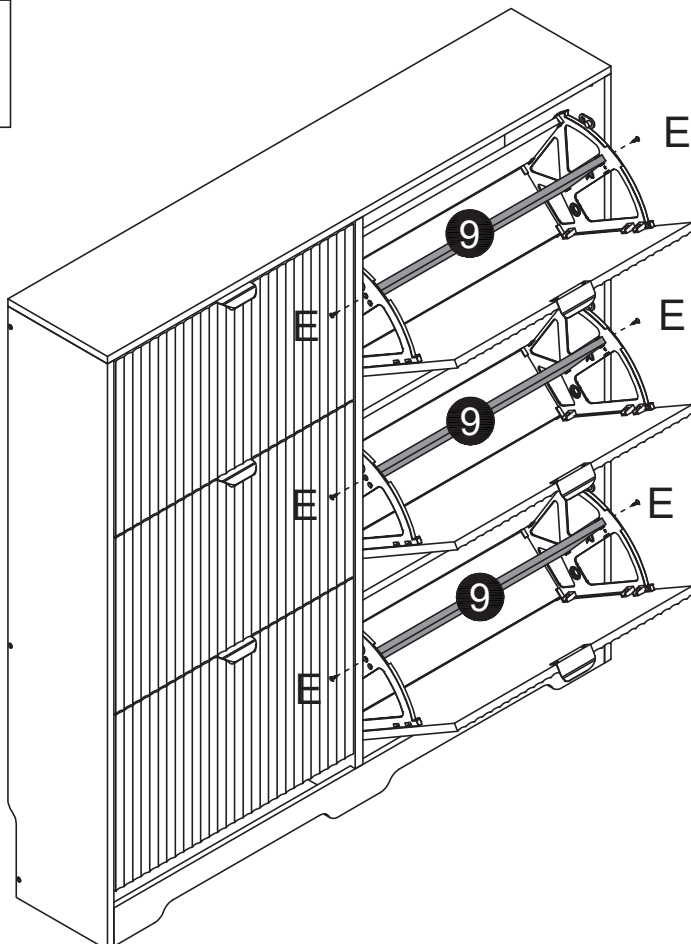


OR

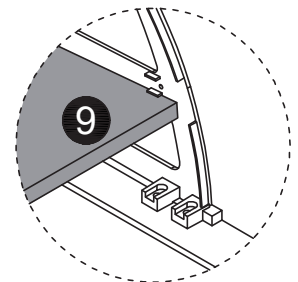

J x6

19

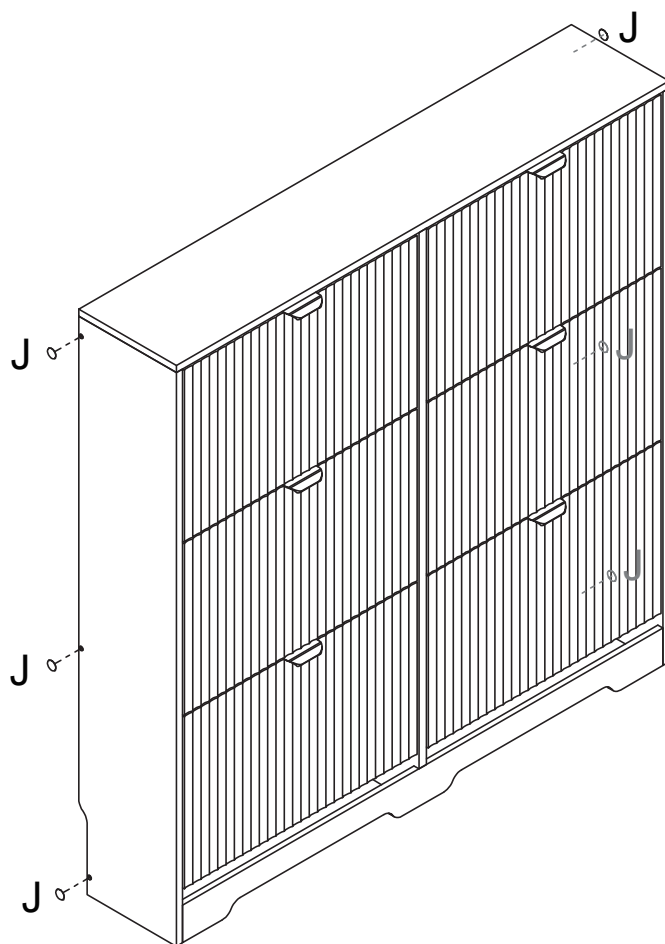

Done

