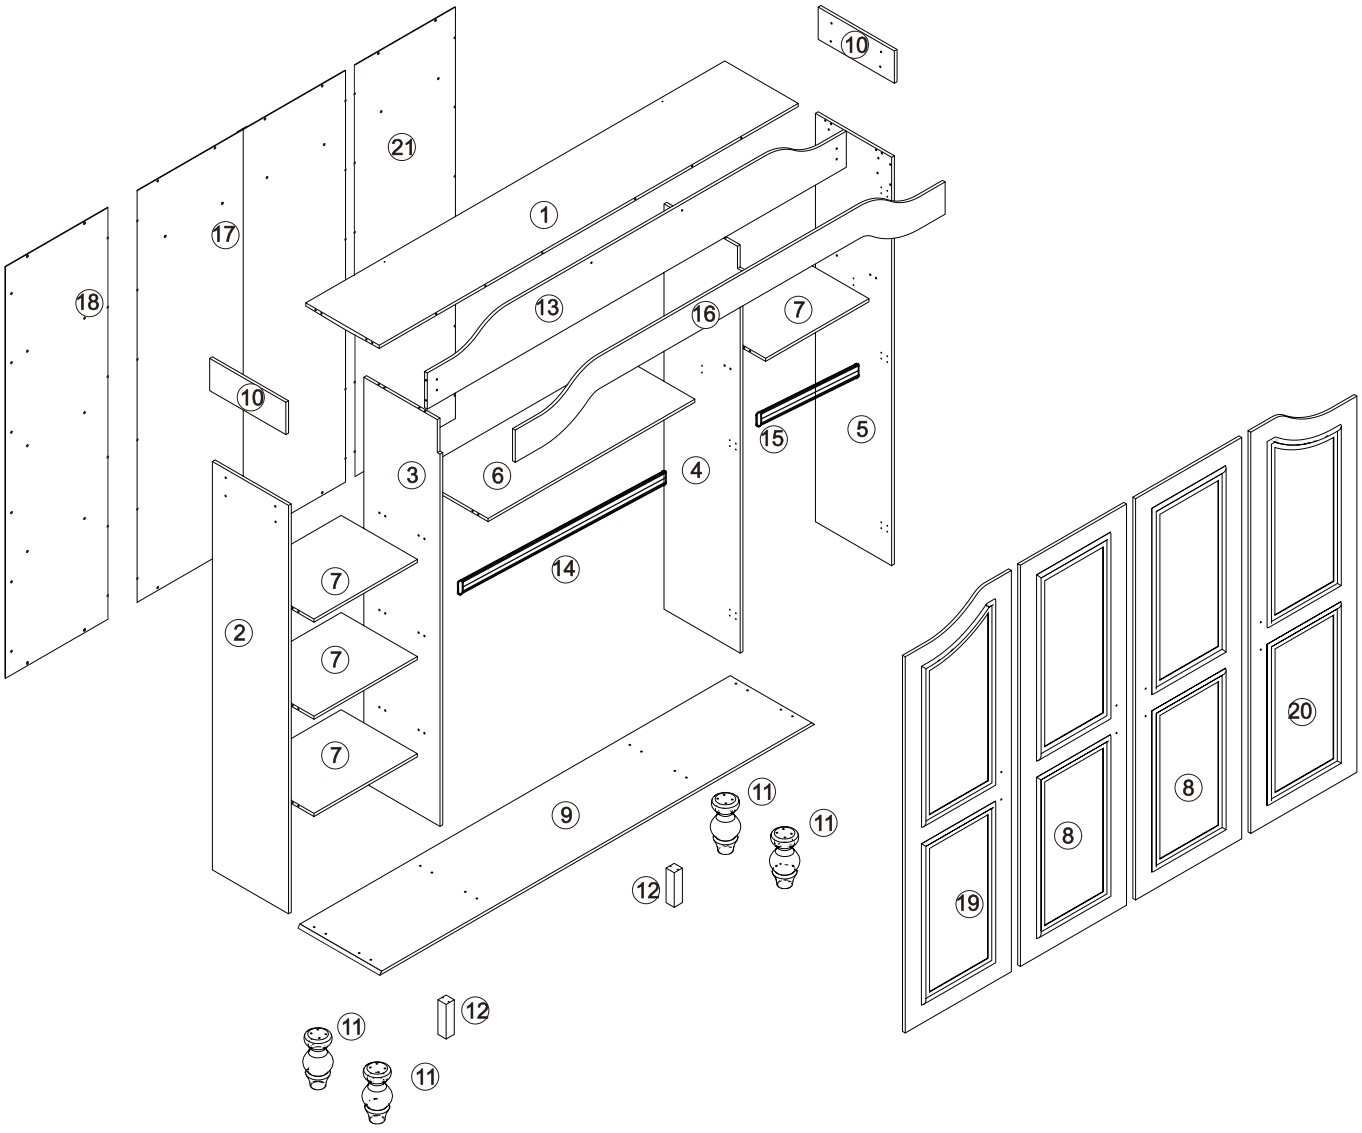
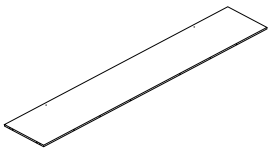
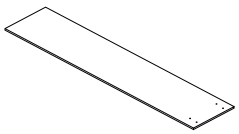
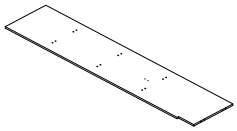
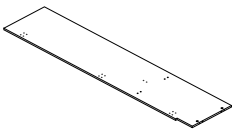
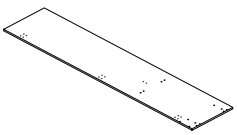
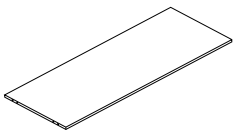


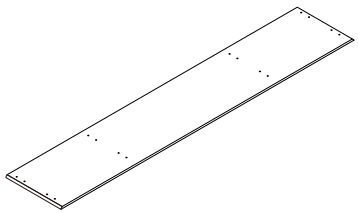



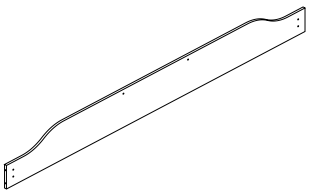
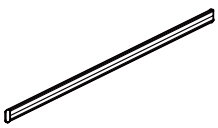
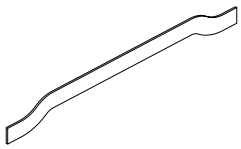
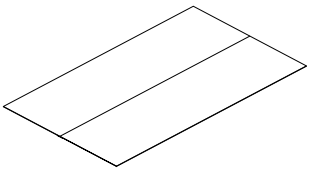
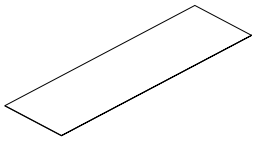
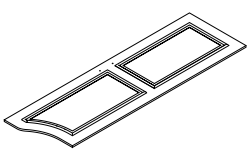
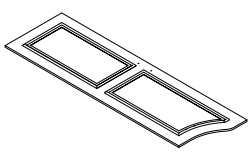
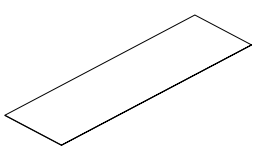




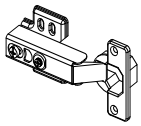
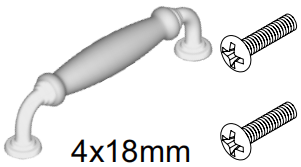





Installation instruction


10
21
1
17
18
13
16
7
10
5
15
3
6
4
14
7
2
7
7
9
11
11
12
12
11
11
8
8
20
19

Parts and Operation Elements

		
① 1pc	② 1pc	③ 1pc
		
④ 1pc	⑤ 1pc	⑥ 1pc
		
⑦ 4pcs	⑧ 2pcs	⑨ 1pc
		
⑩ 2pcs	⑪ 4pcs	⑫ 2pcs
		
⑬ 1pc	⑭ 1pc	⑮ 1pc
		
⑯ 1pc	⑰ 1pc	⑱ 1pc
		
⑲ 1pc	⑳ 1pc	㉑ 1pc


Hardware

 Cam bolt	 Cam Lock	 6x30mm Wood dowel	 4x40MM
A 36+3pcs	B 36+3pcs	C 38+3pcs	D 28+2pcs
 3x12mm screw	 3.5x12mm screw		 4x12MM 4x40MM Unti-dumping device
E 52+3pcs	F 80+3pcs	G 12 pcs	H 2pcs
 4x18mm		 4x12mm screw	 80x80MM
I 4pcs	J 4pcs	L 24+2pcs	M. 4pcs
 4x25mm	 60x60MM		
N 14+1pcs	O 2pcs	P 12pcs	Q 2pcs



SPARE BAG


THE SPARE BAG INCLUED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

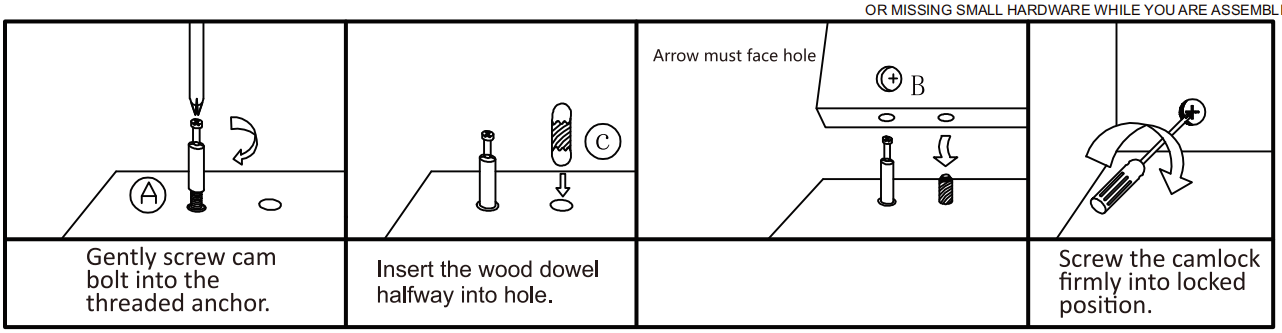

Gently screw cam bolt into the threaded anchor.	Insert the wood dowel halfway into hole.		Screw the camlock firmly into locked position.

1

A x10





F x6




J x3




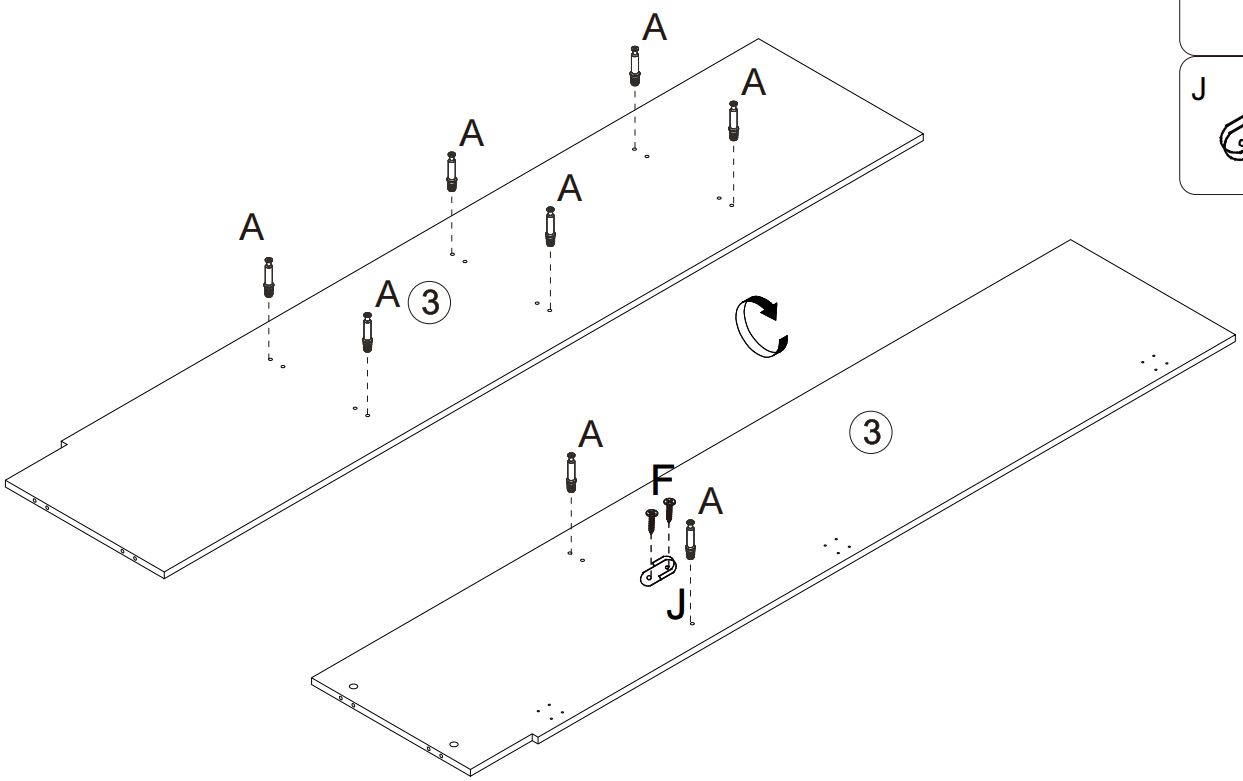


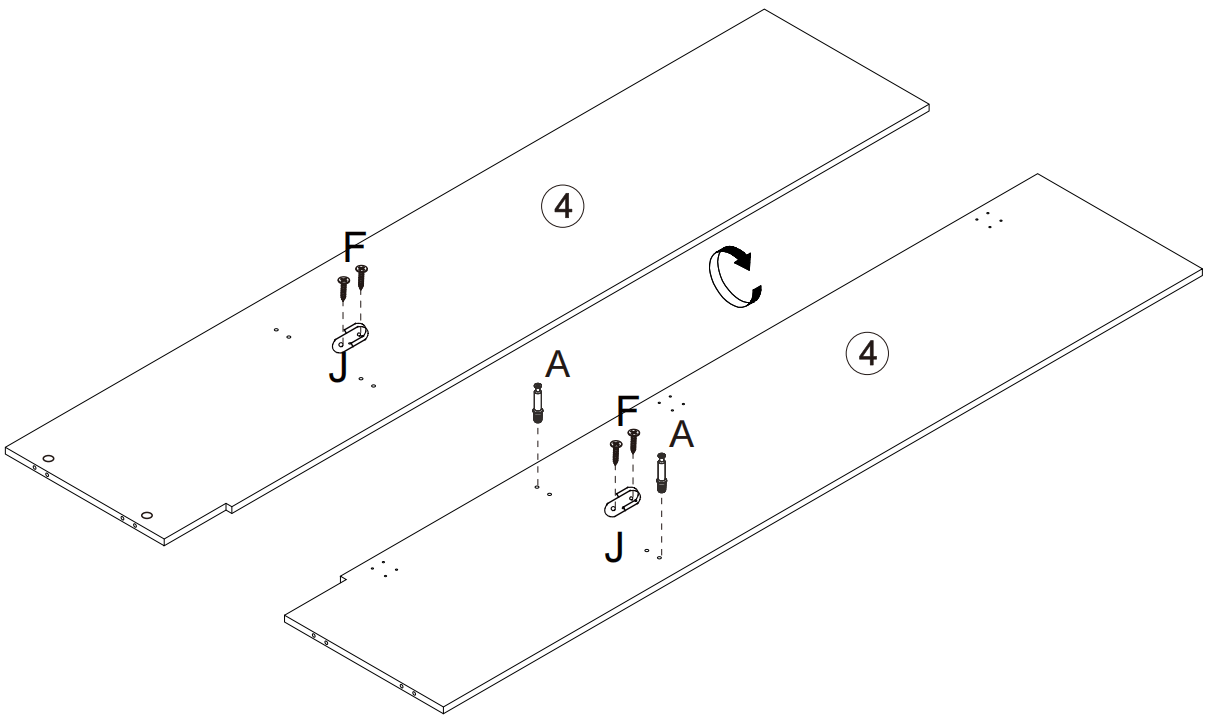


2

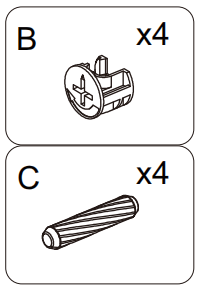


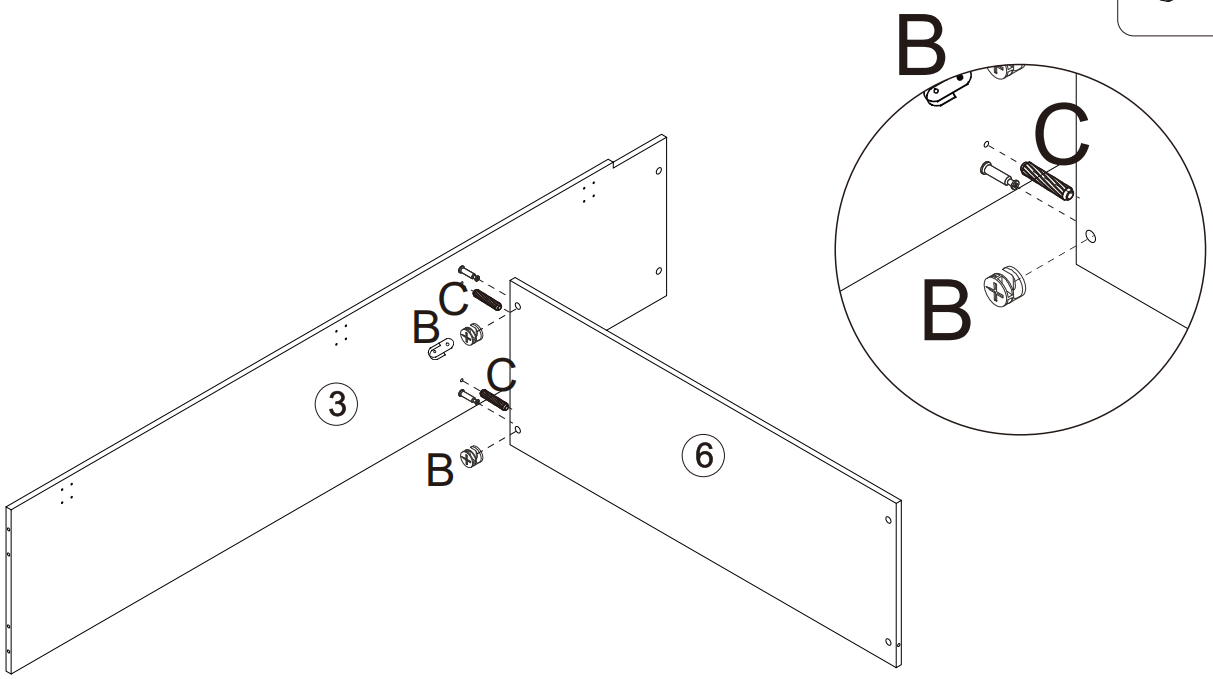


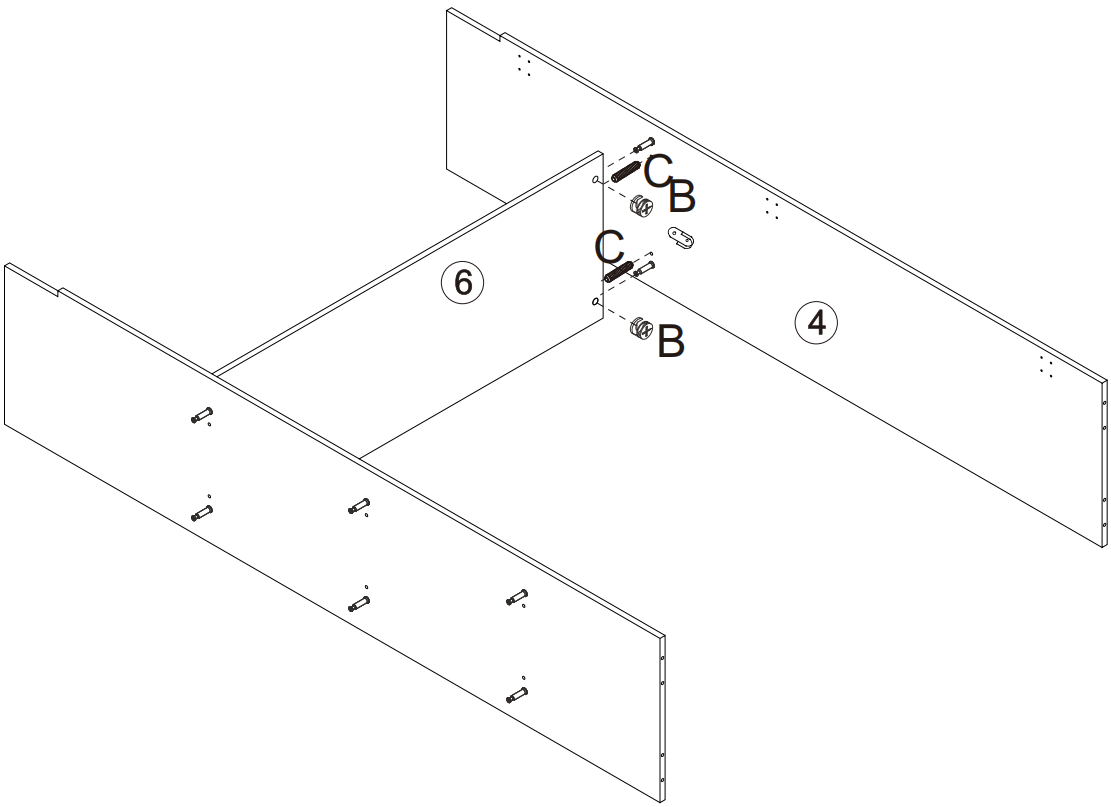

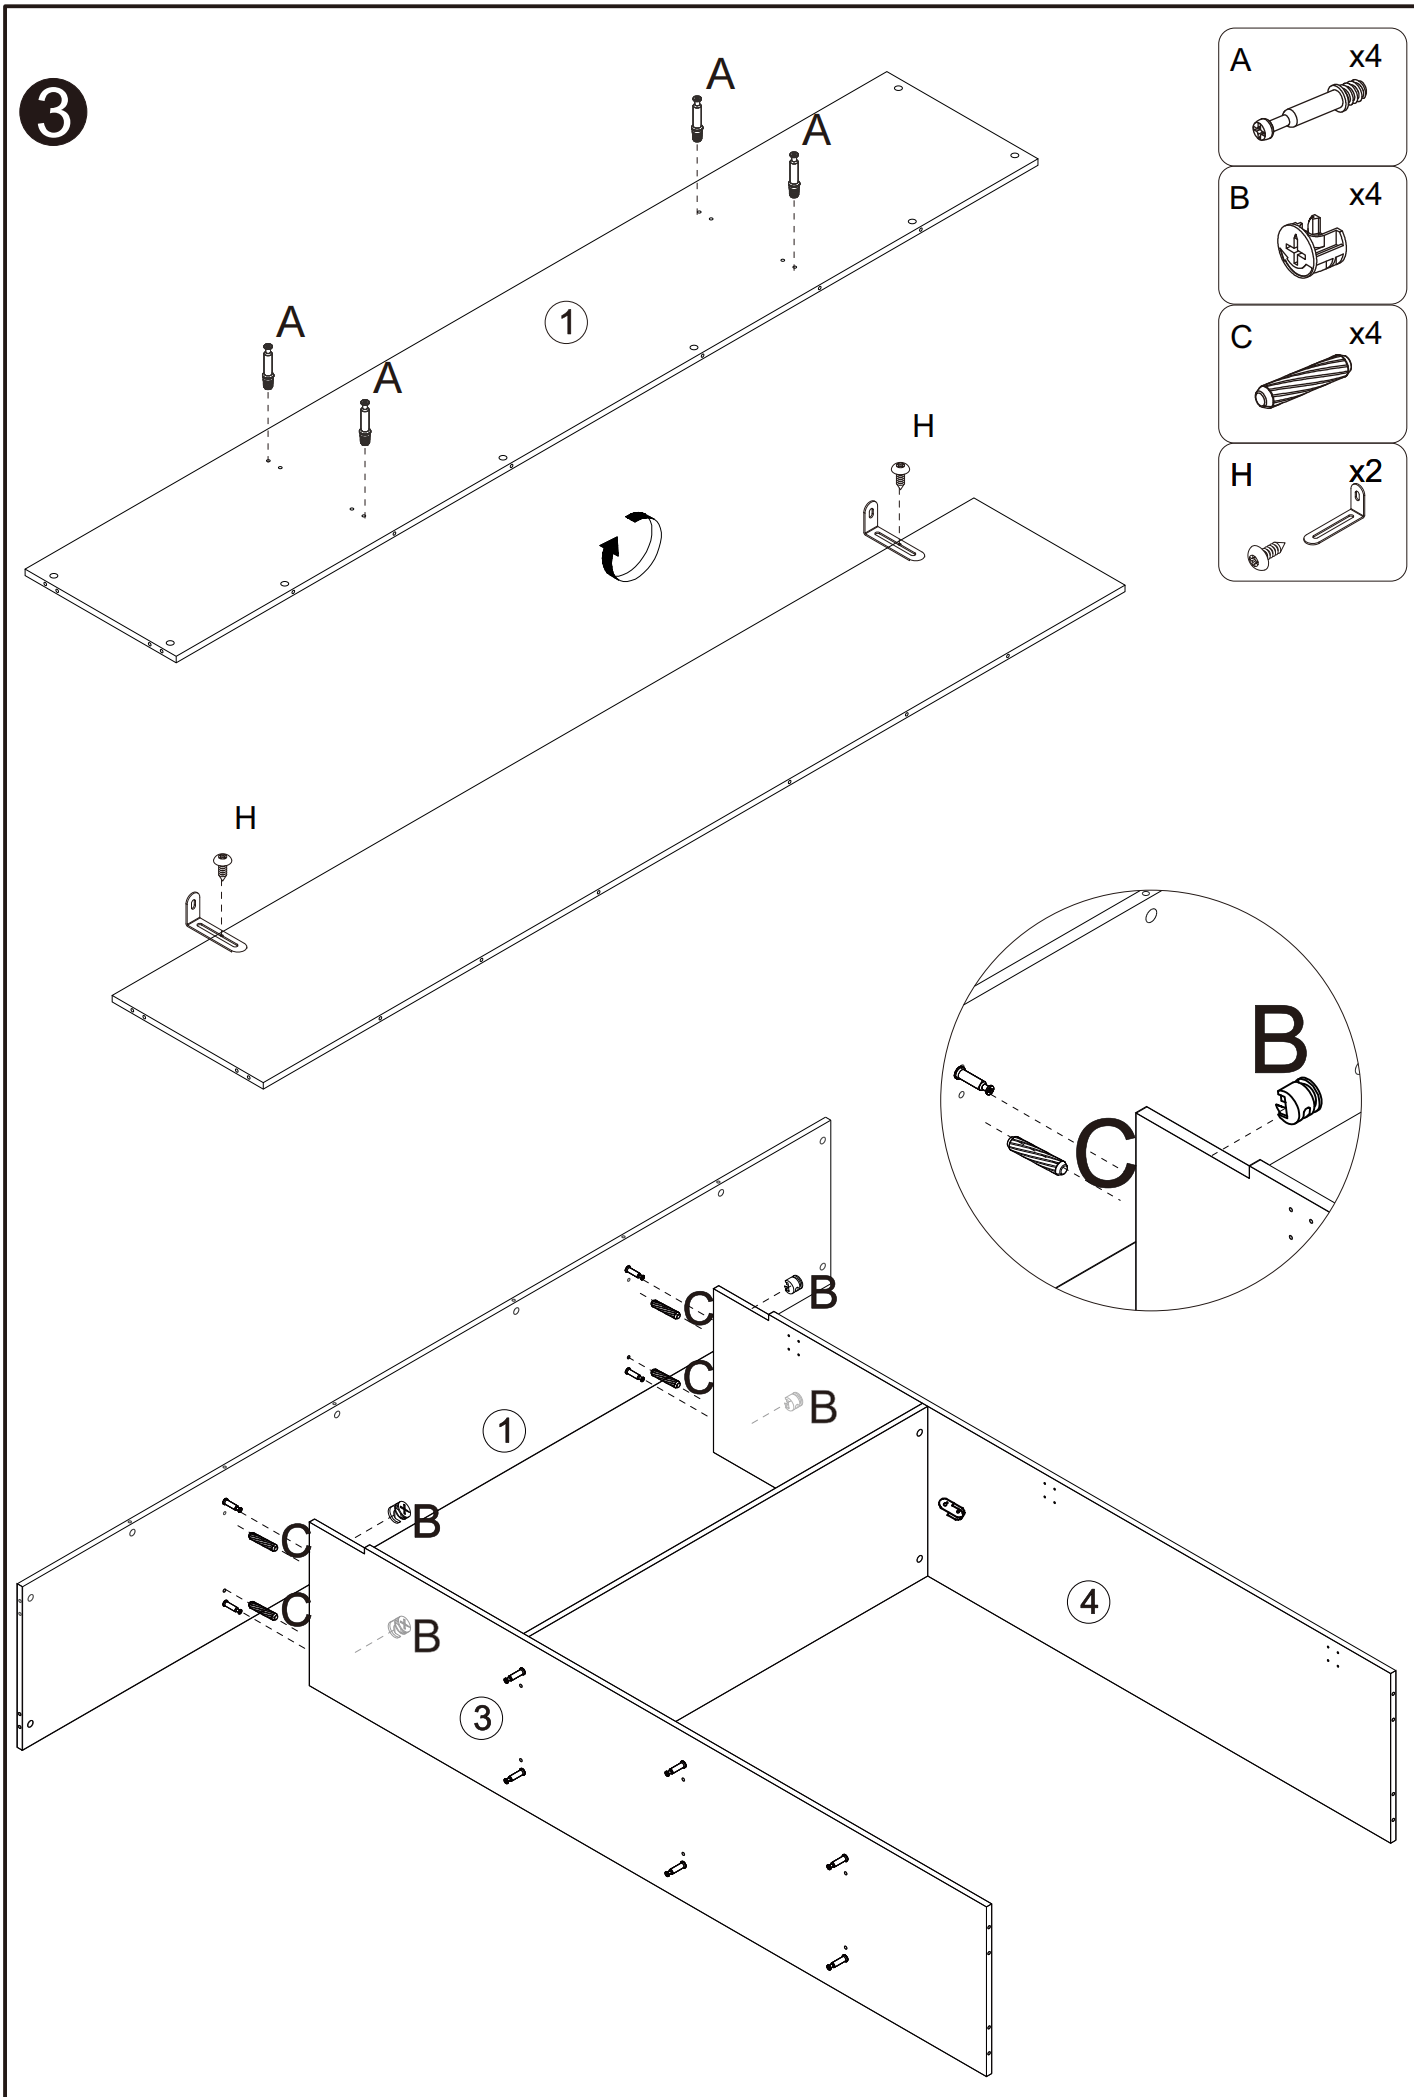
3
A x4
B x4
C x4
H x2
A
A
A
A
1
H
H
B
C
C
B
C
B
C
B
C
B
1
3
4


4

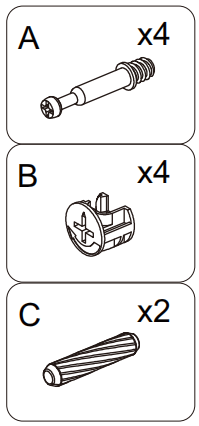

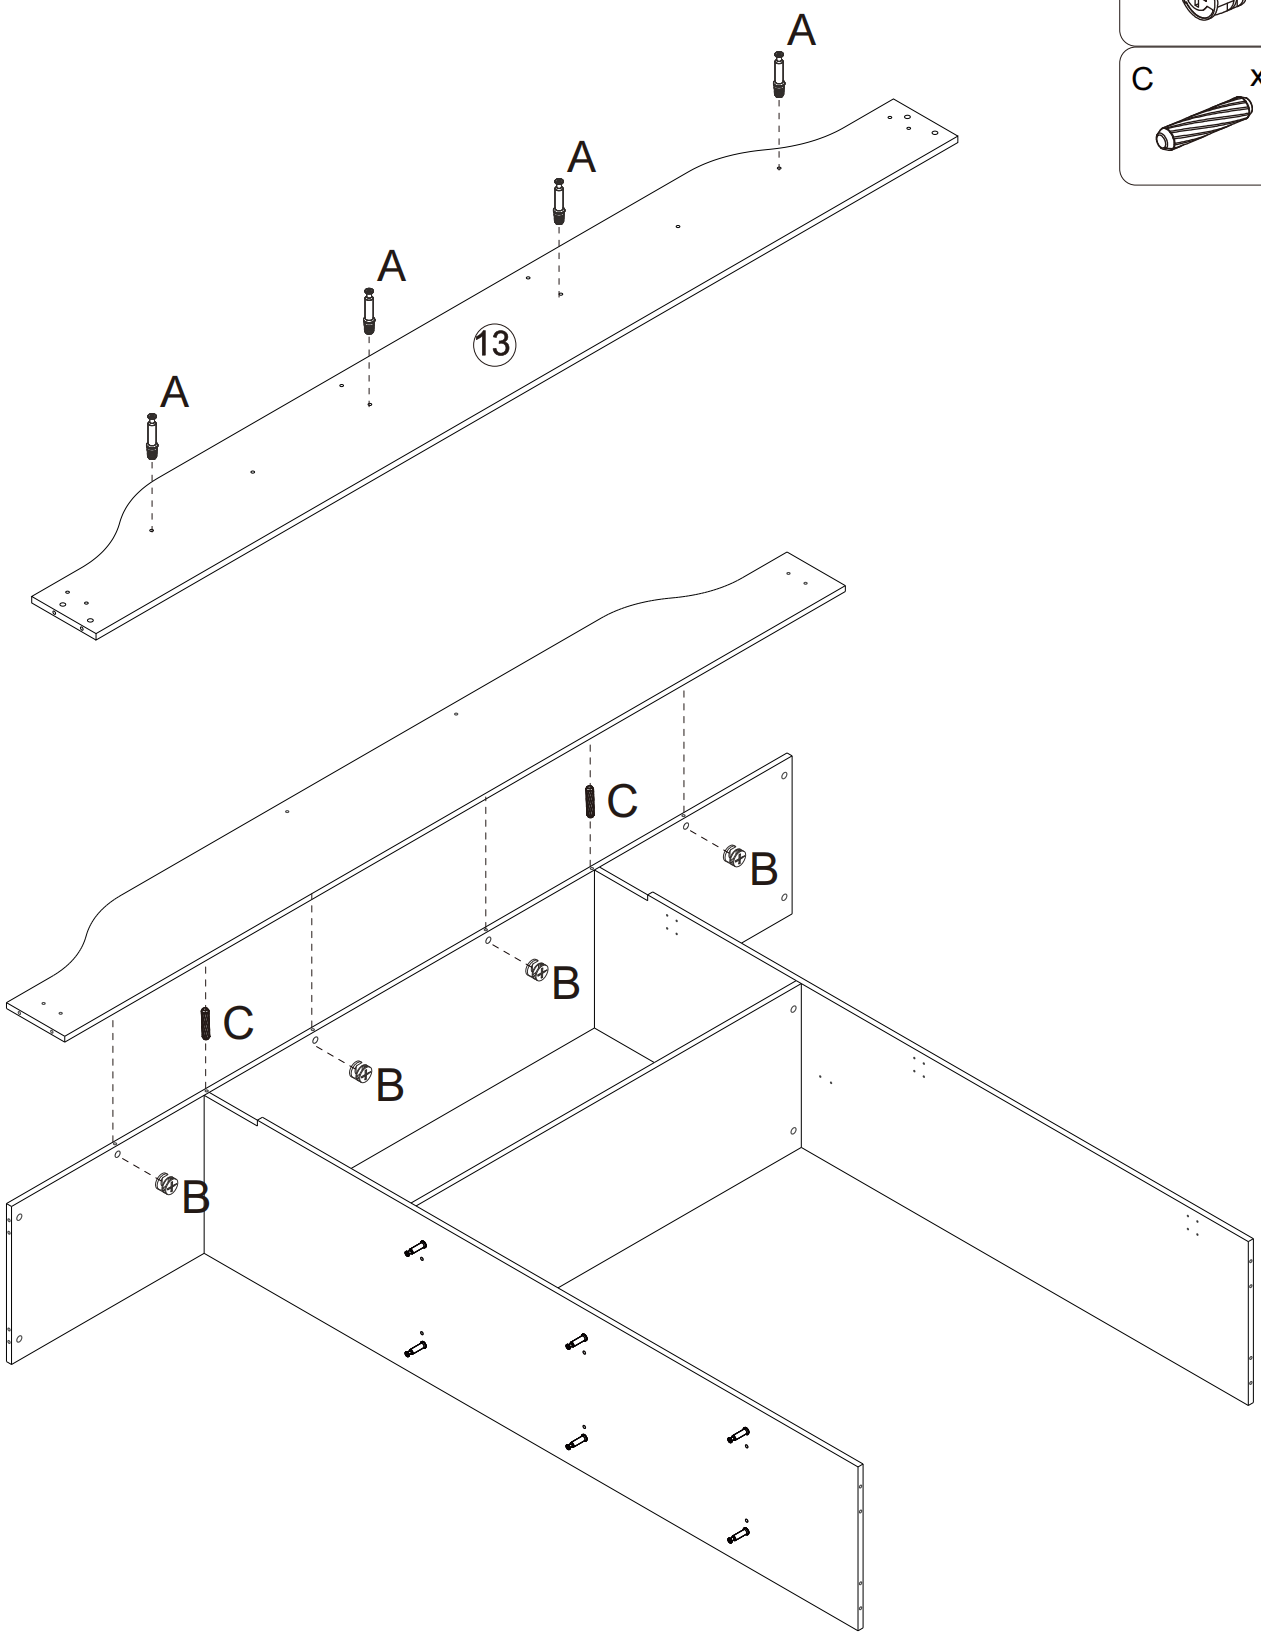


5

B x6

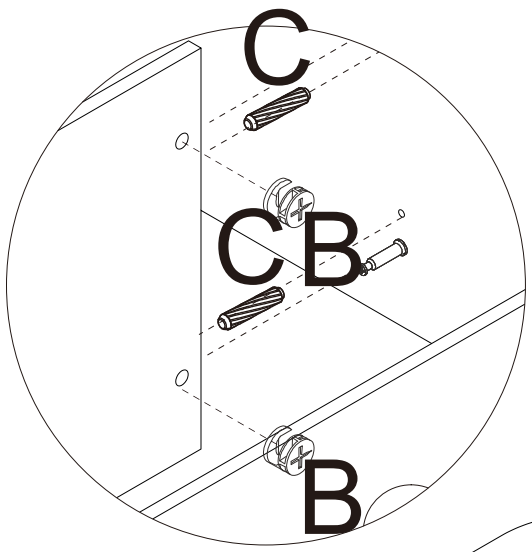



C x6



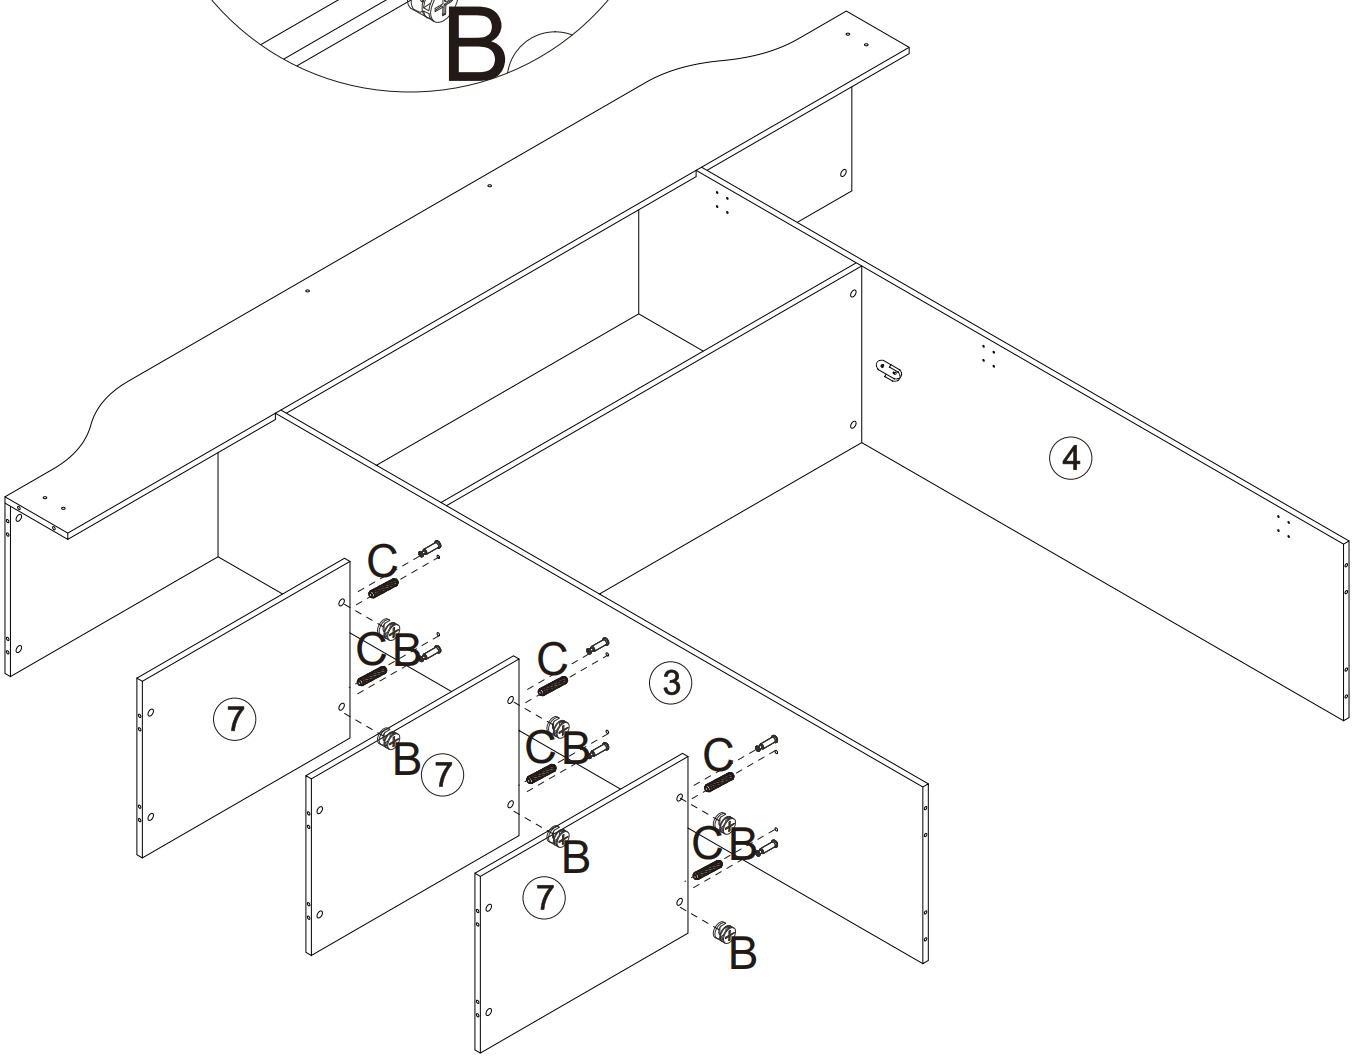



6

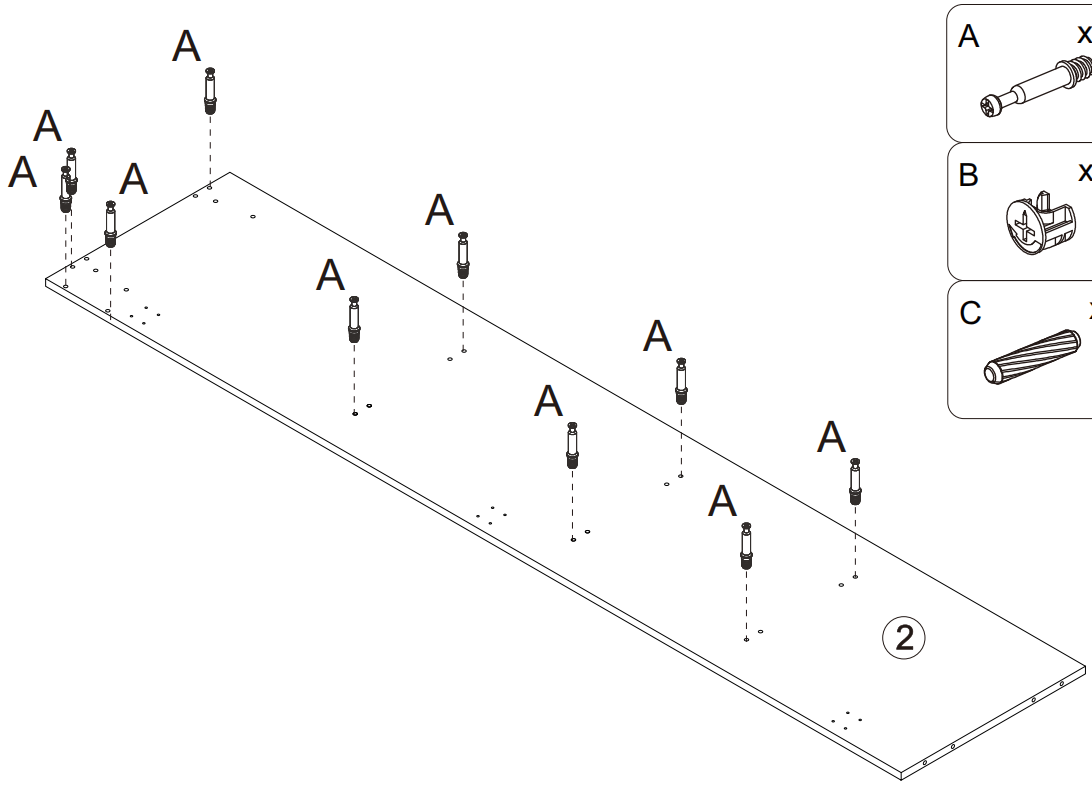


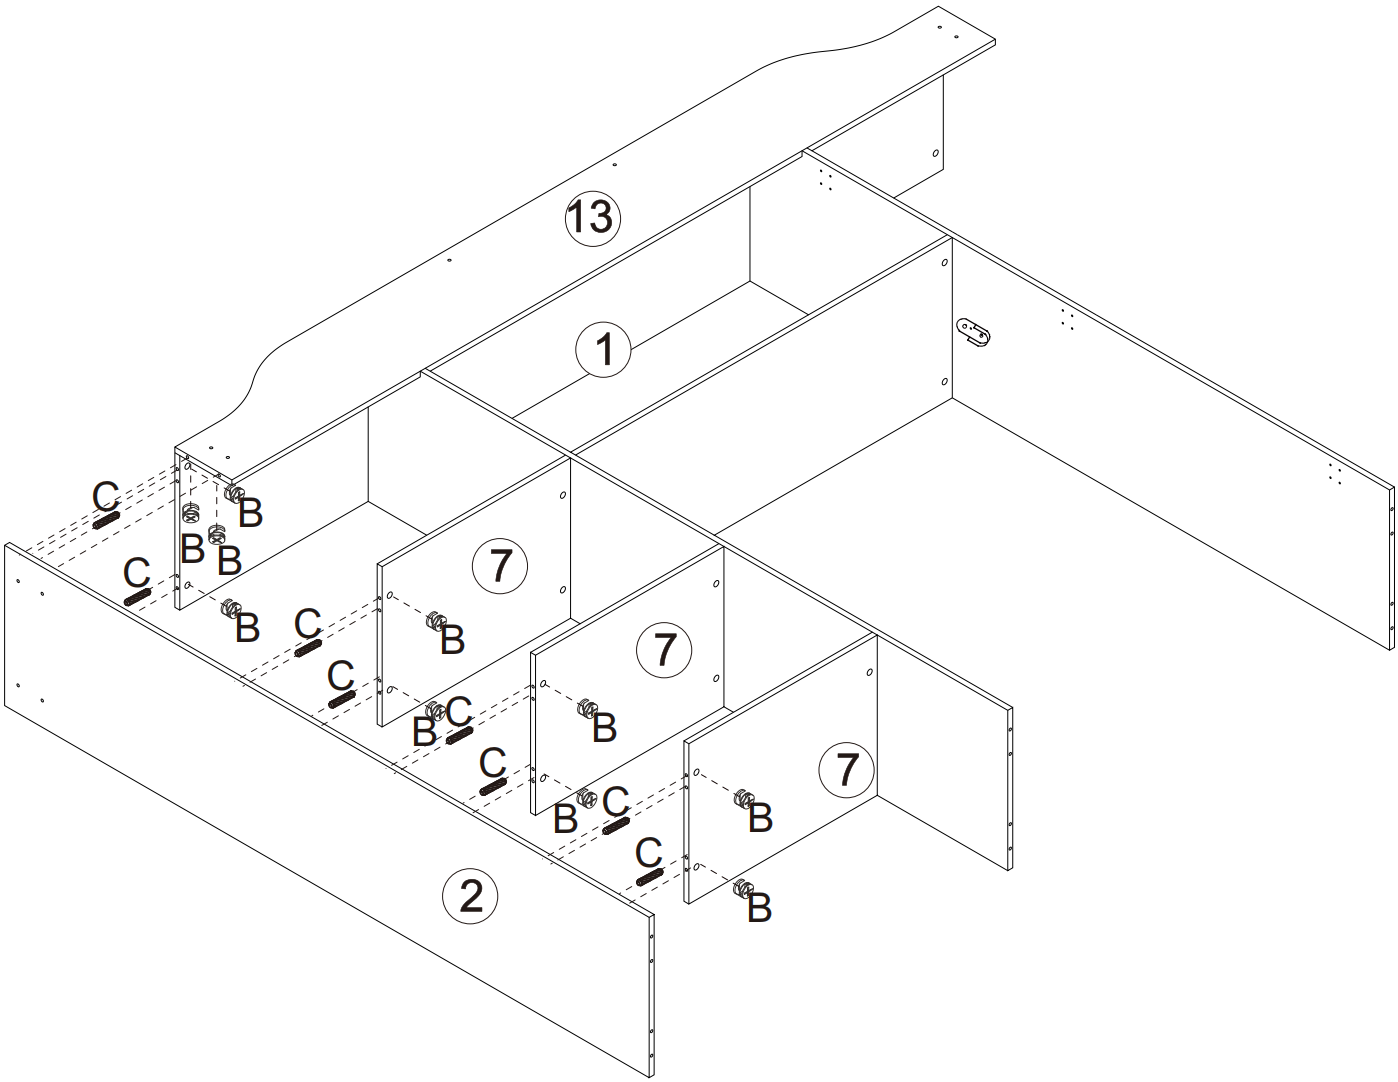

7

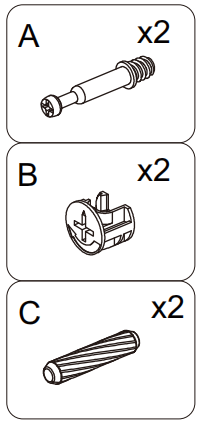


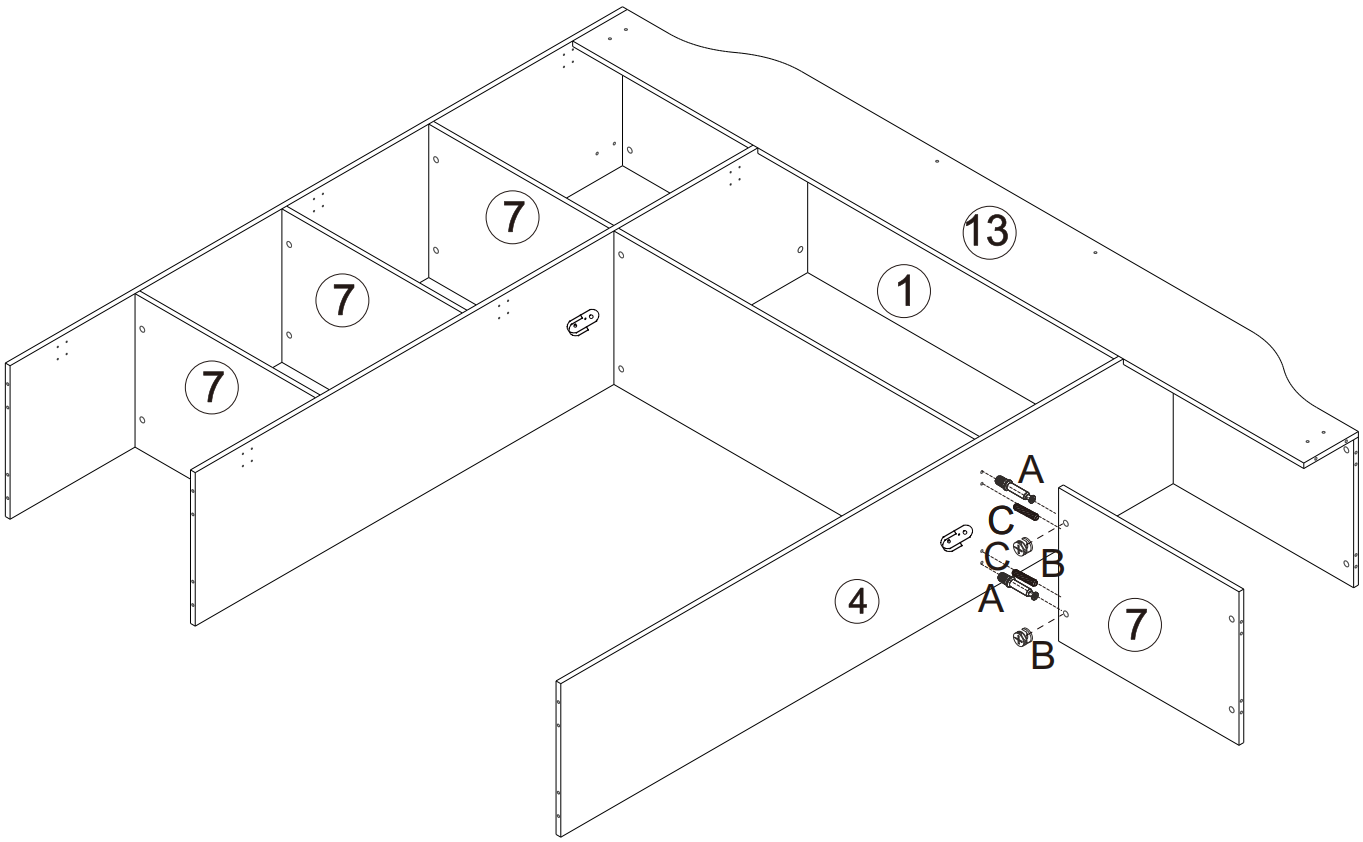


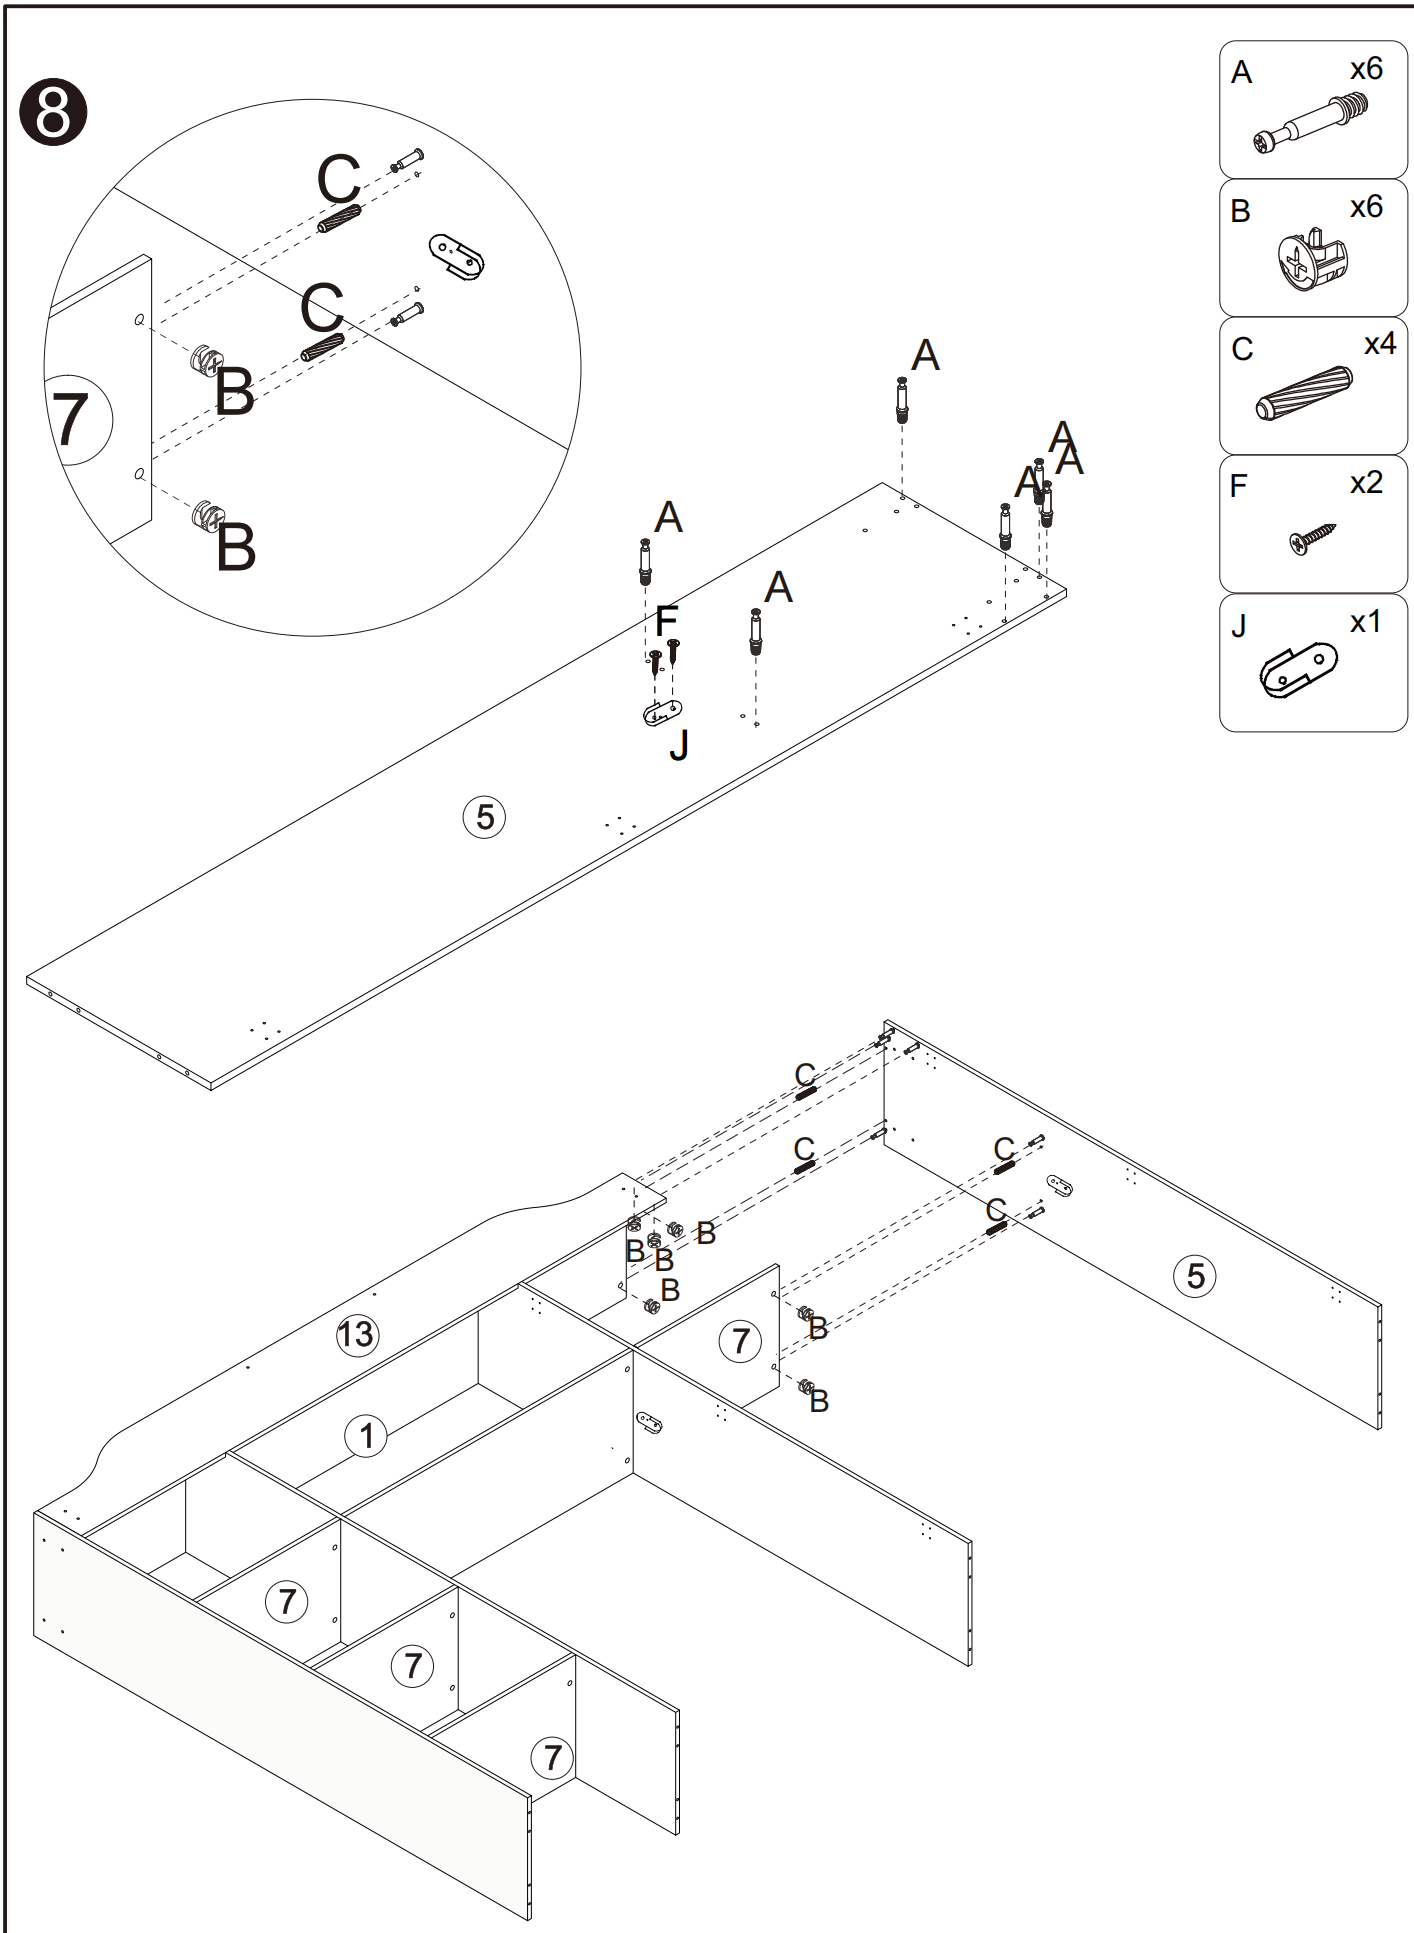



A	x6
B	x6
C	x4
F	x2
J	x1

9

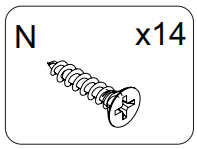

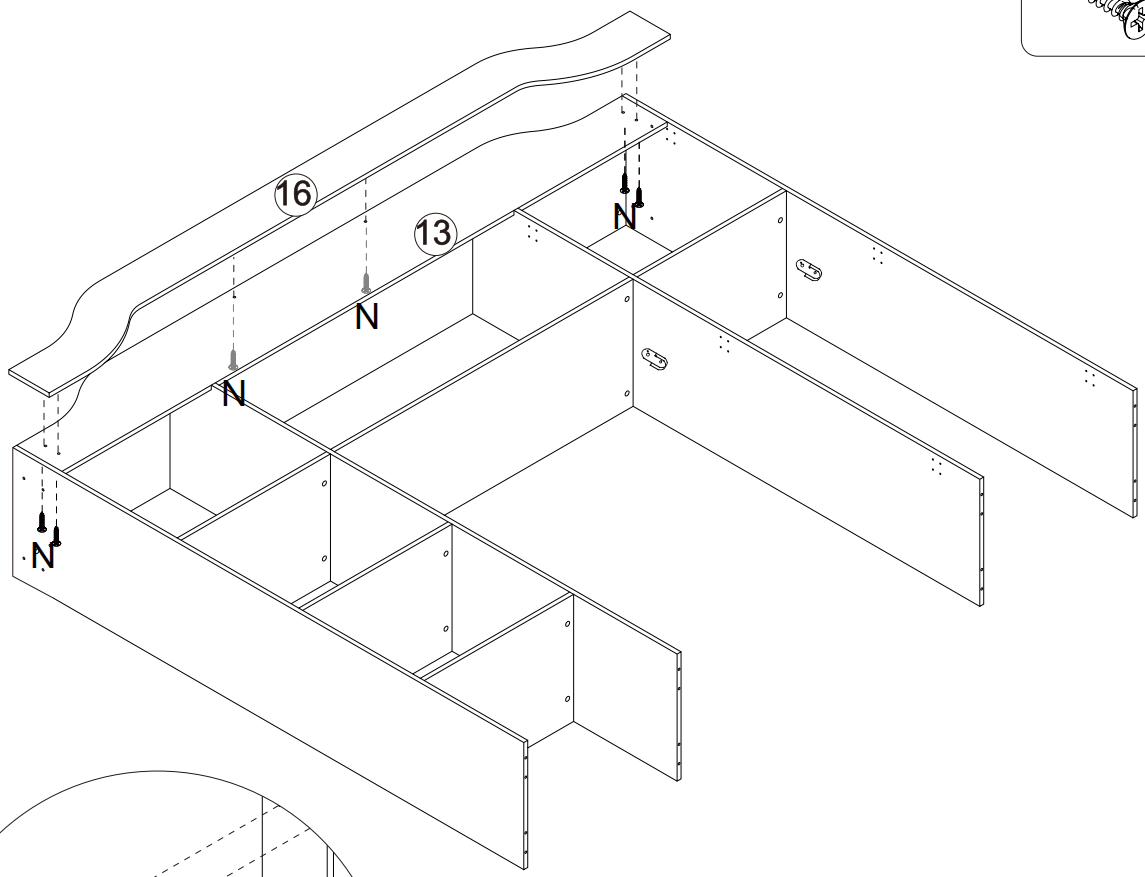

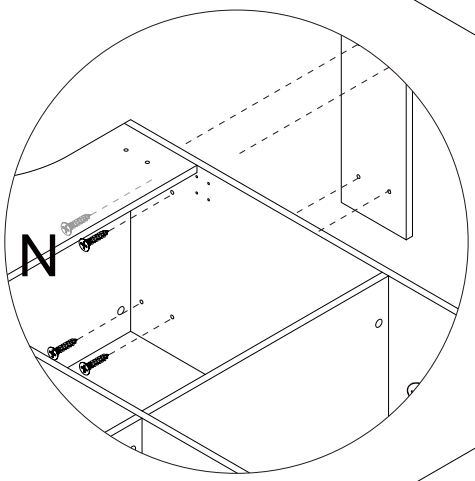

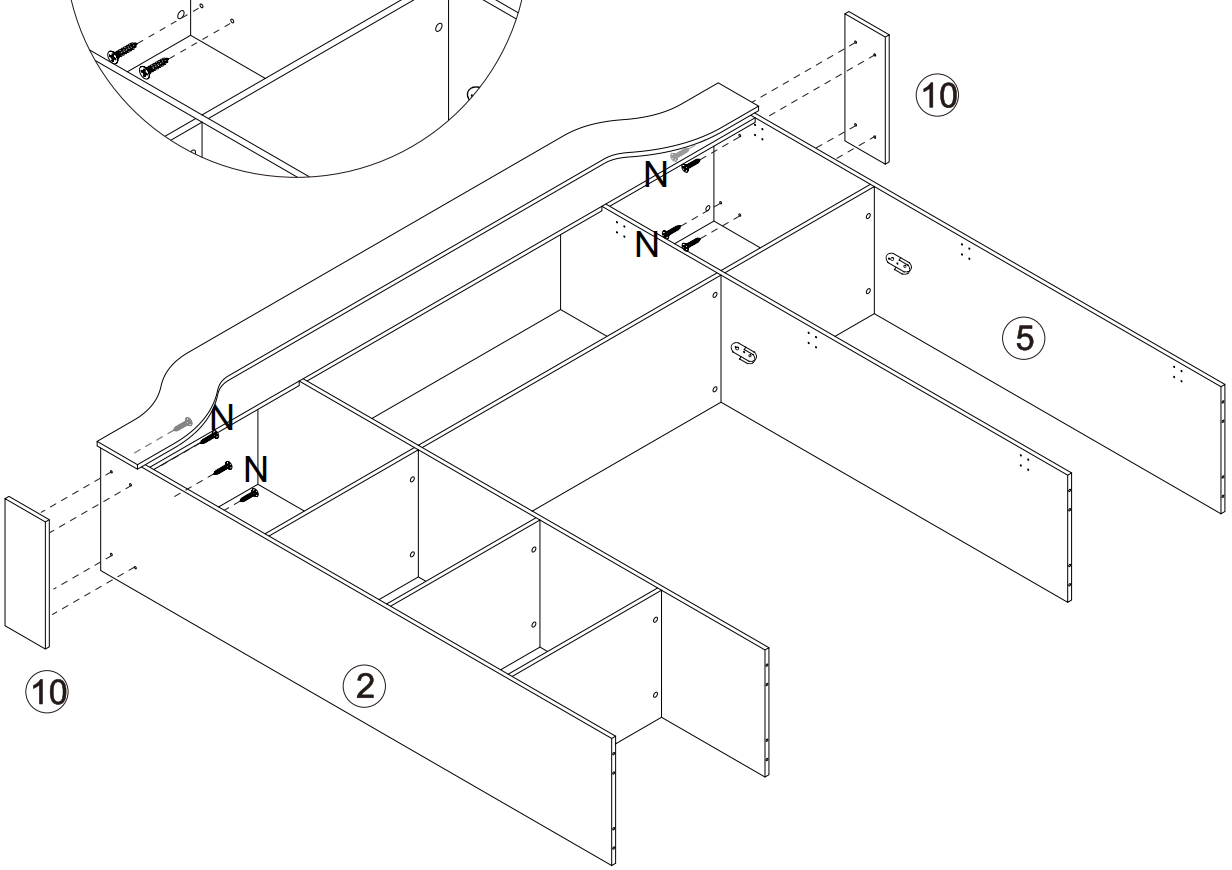


10


D x8



C x8

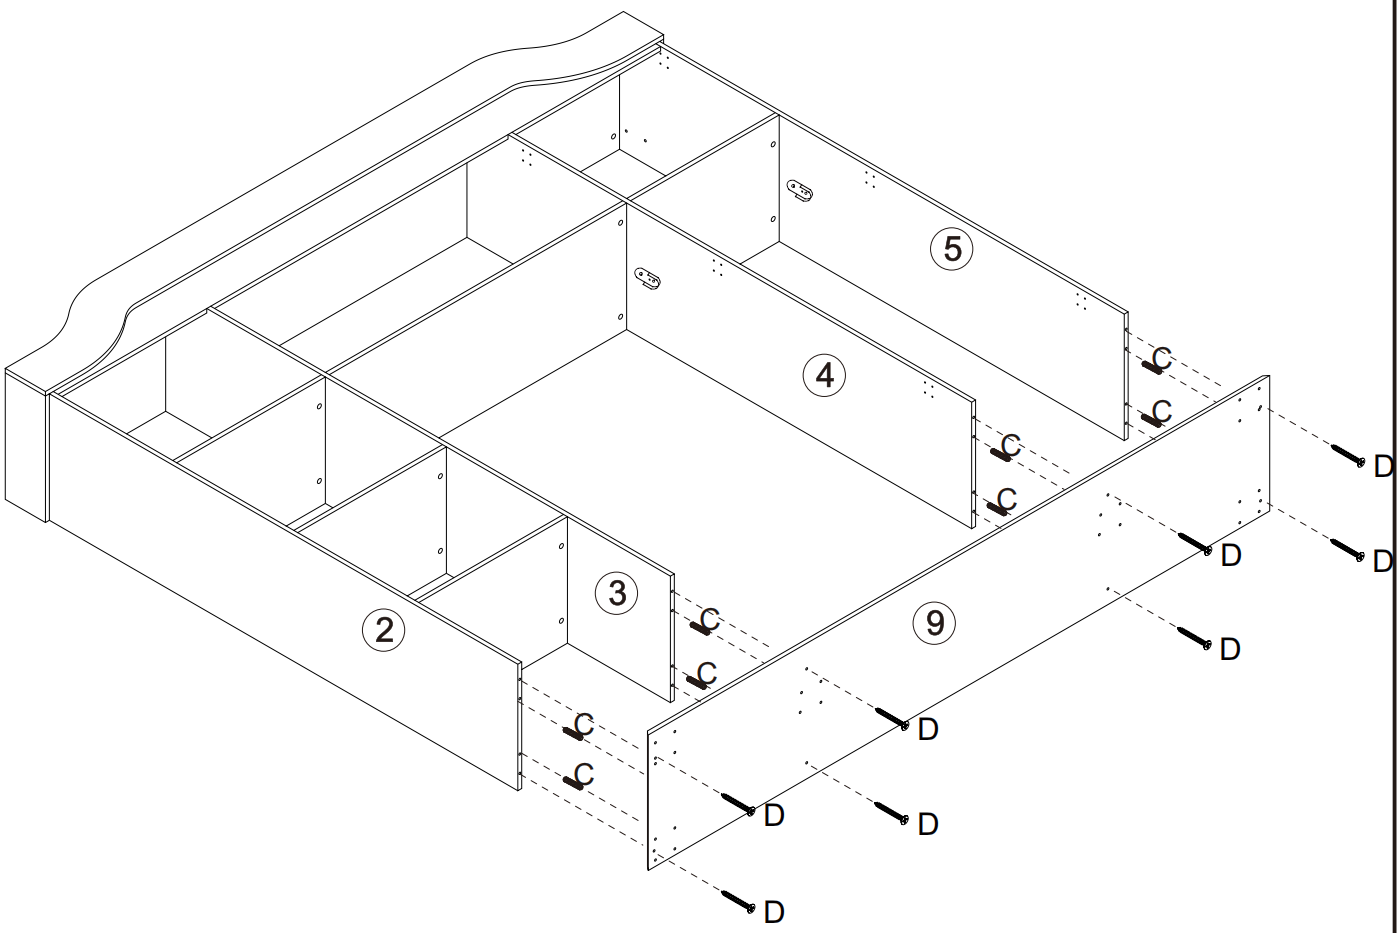

11

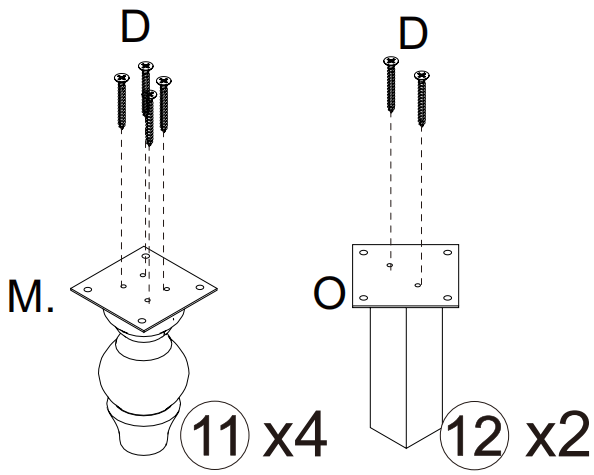


D x20


M. x4


L x24

O x2

Q x2

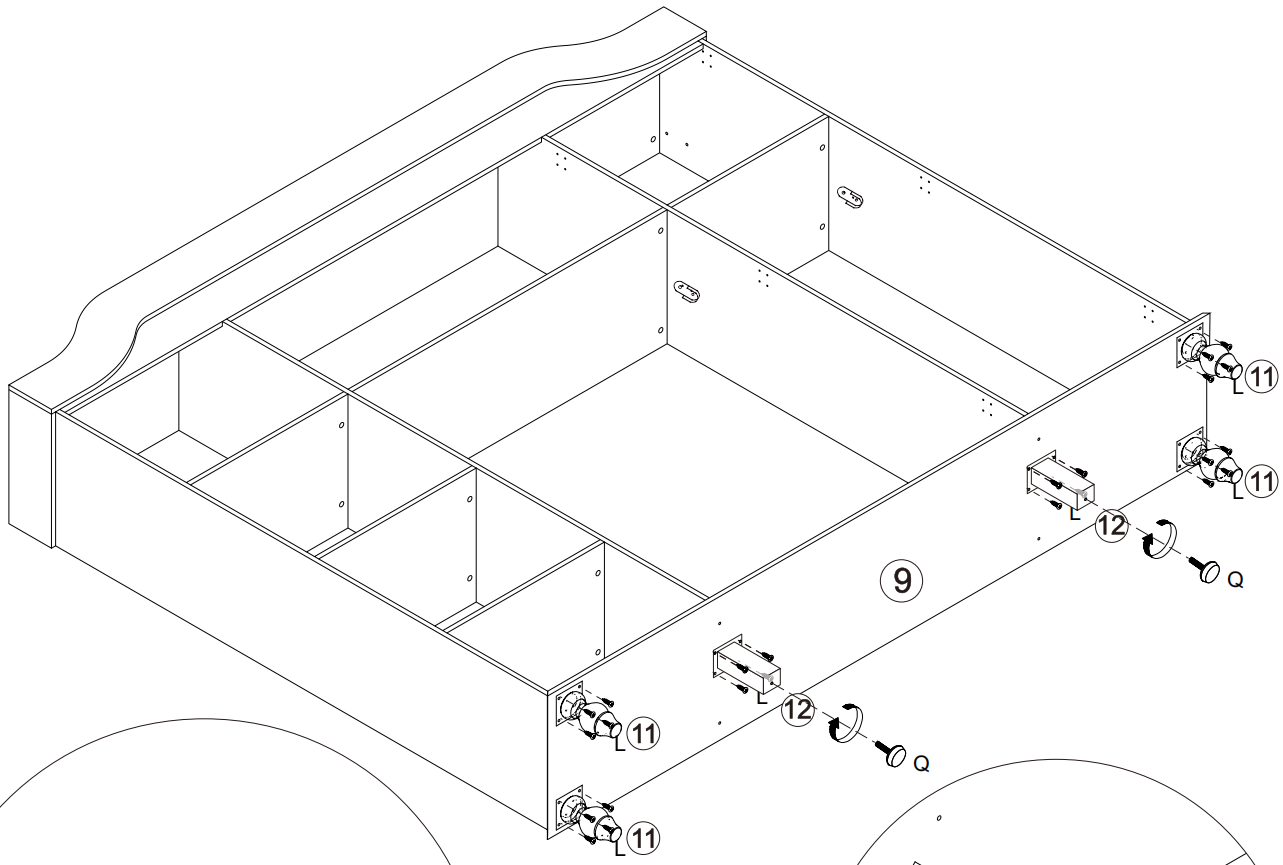

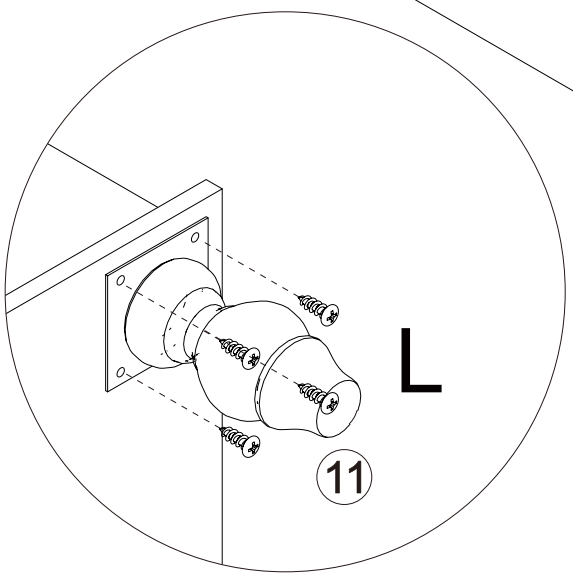


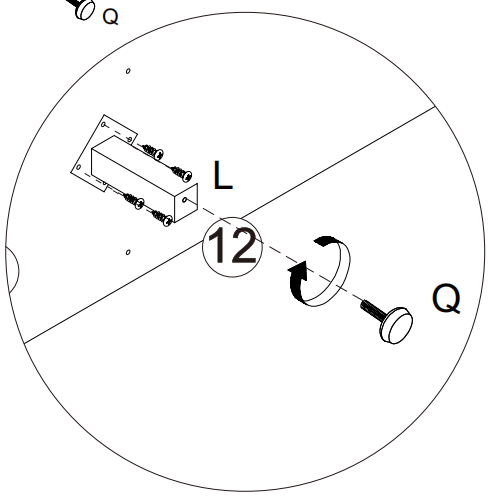


12

E x52

P x12

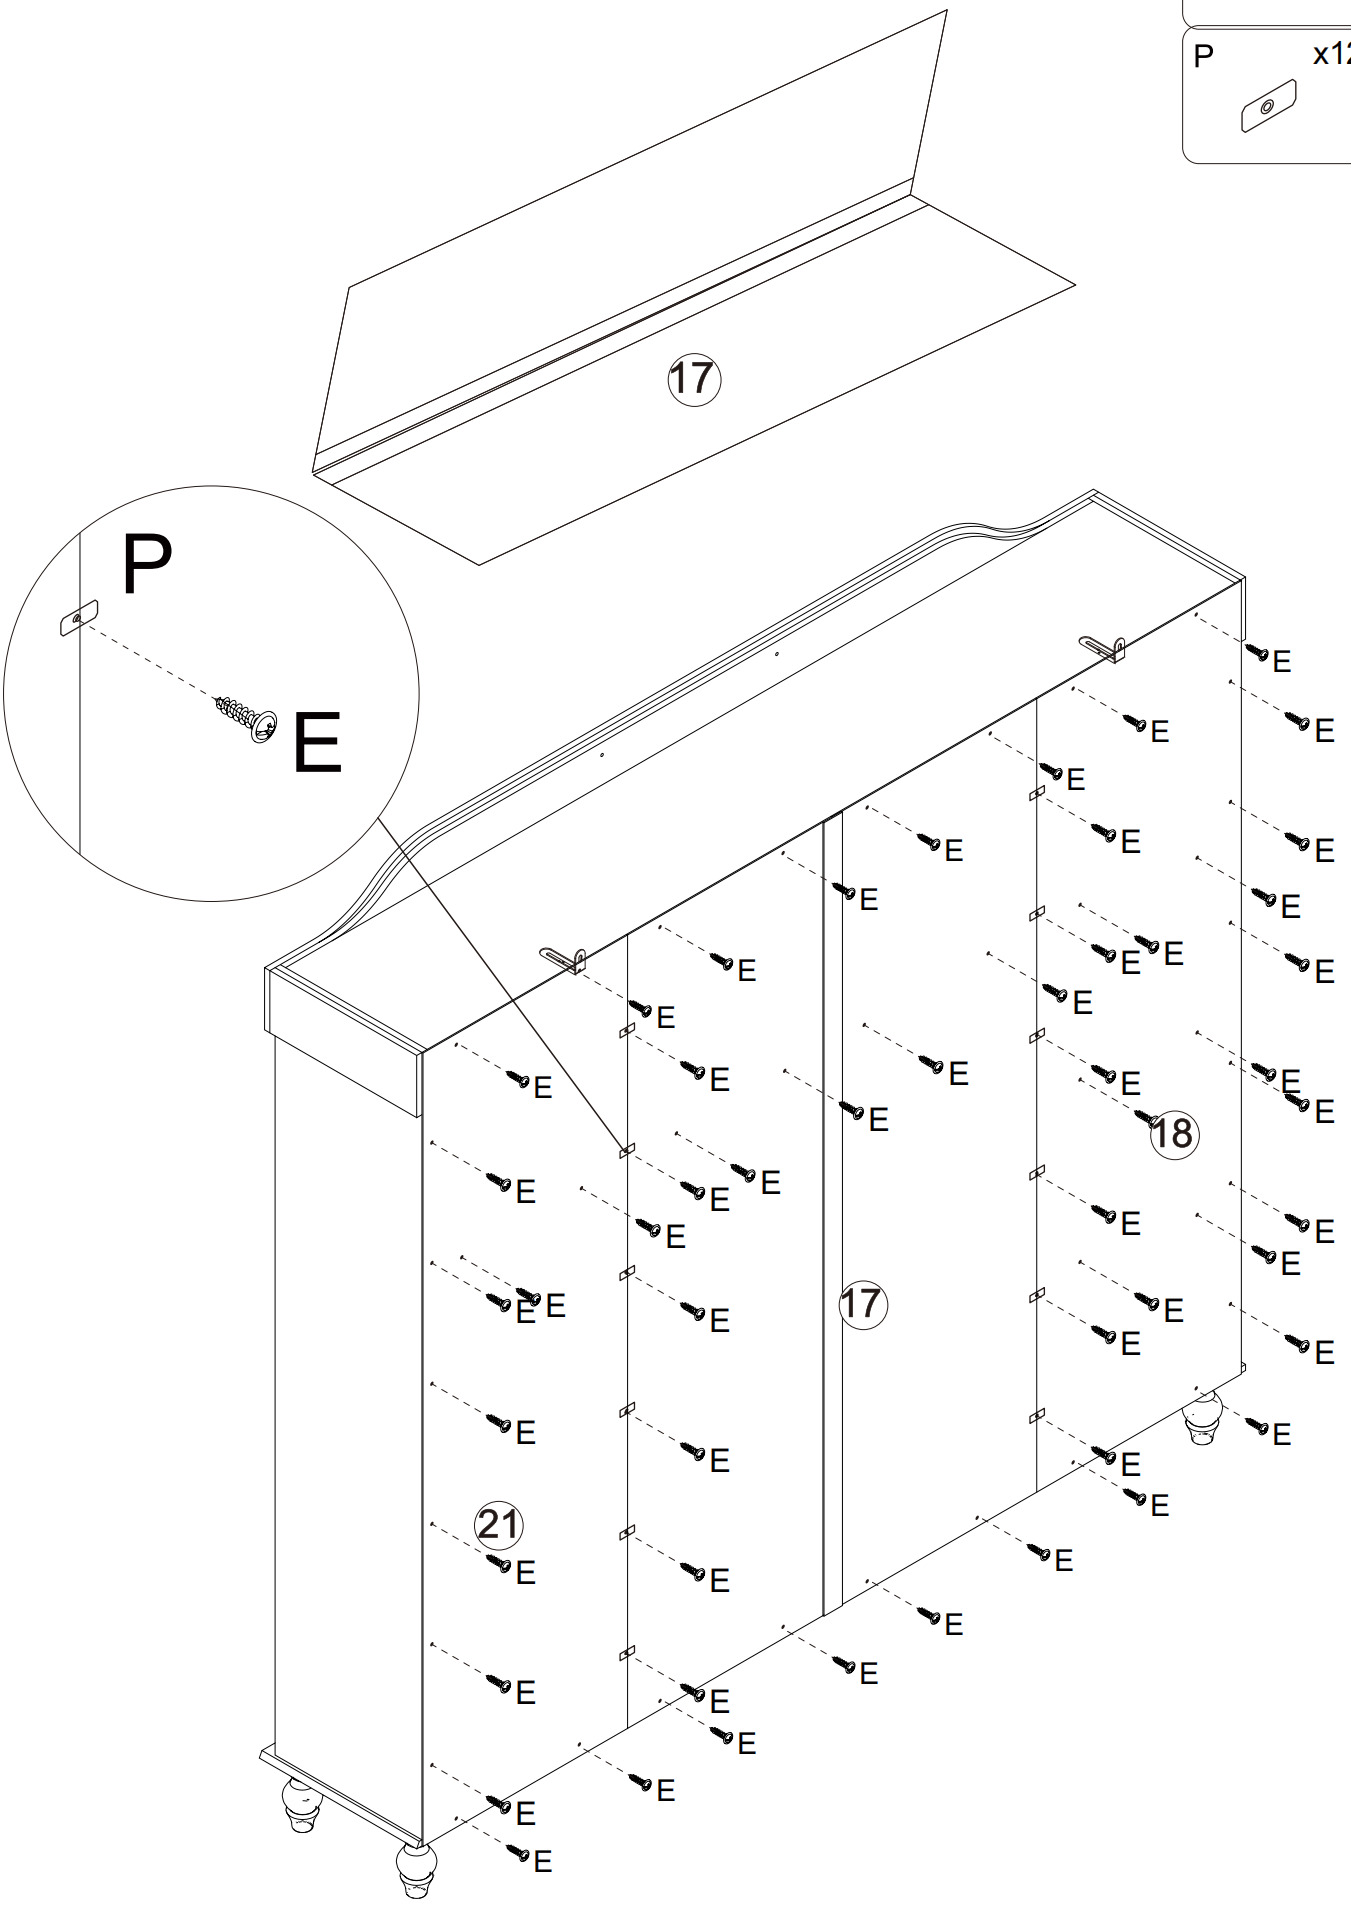
17
P
E
E
E

13

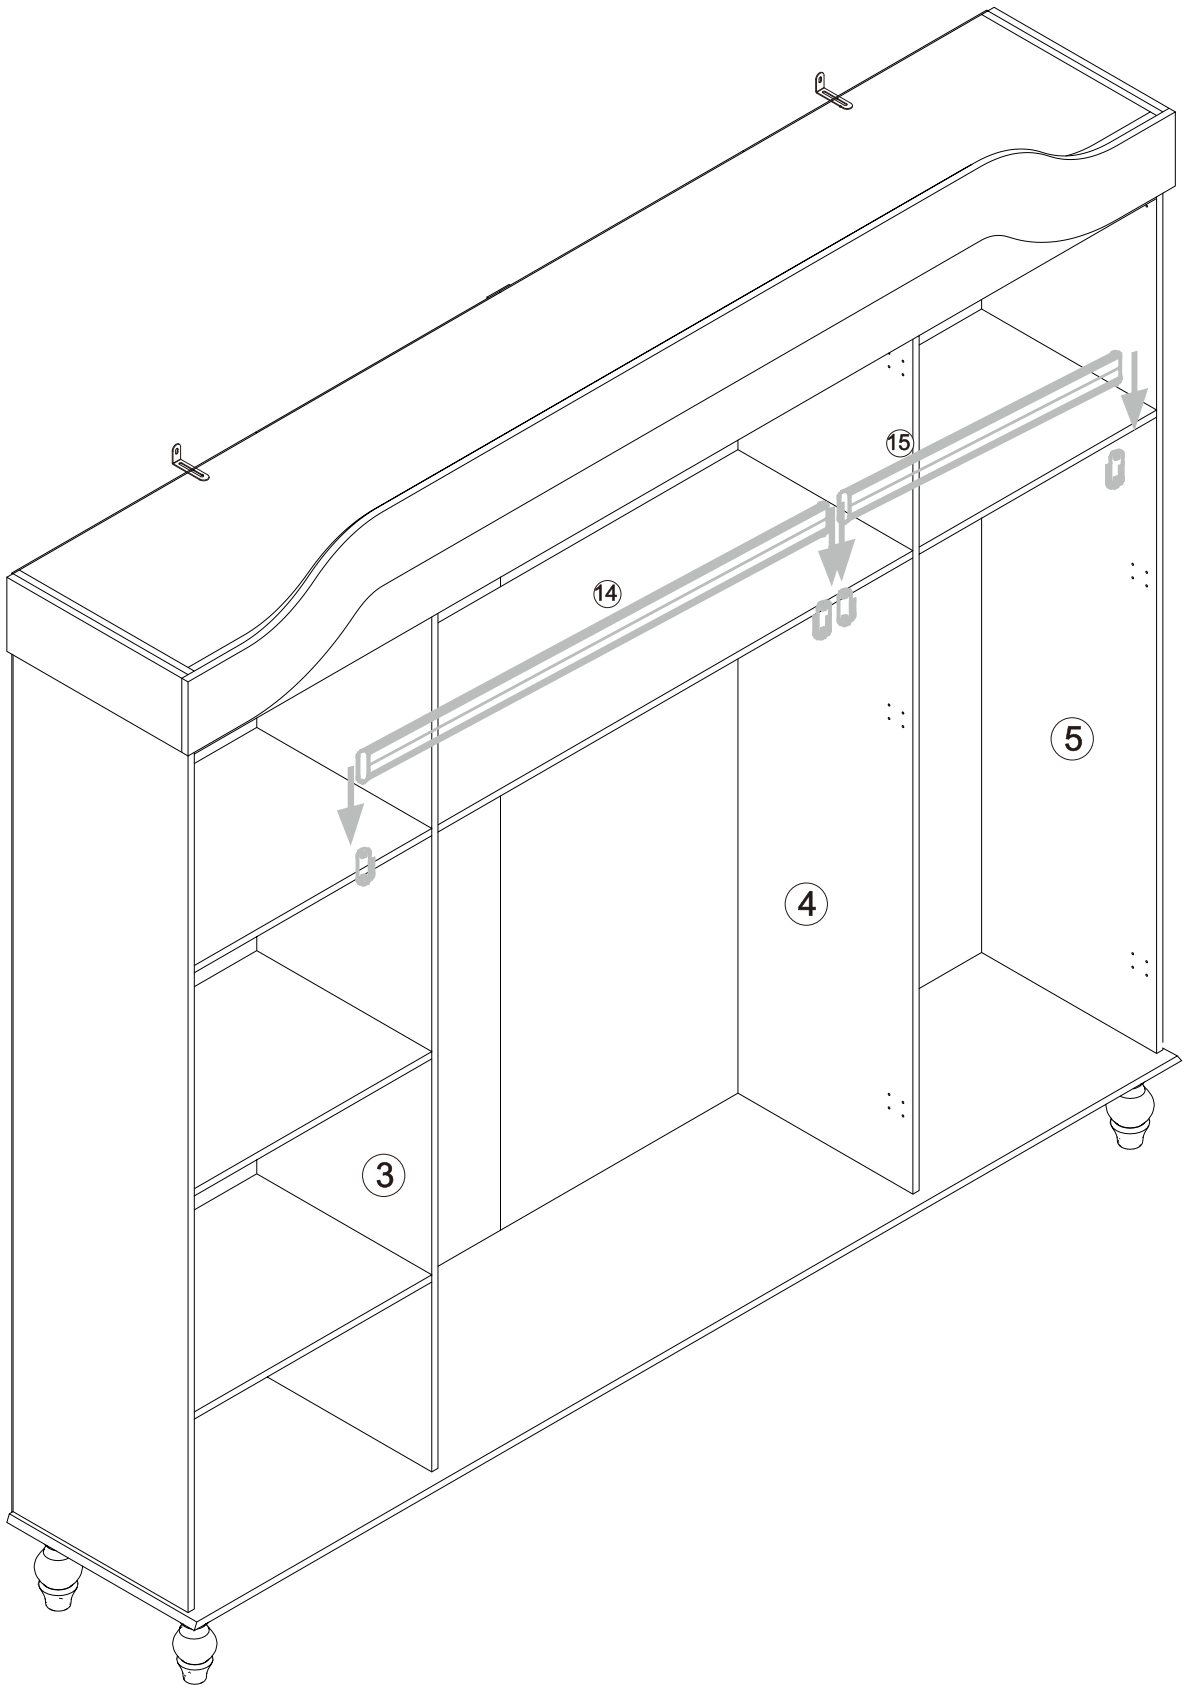



14

G x6


F x36


I x2

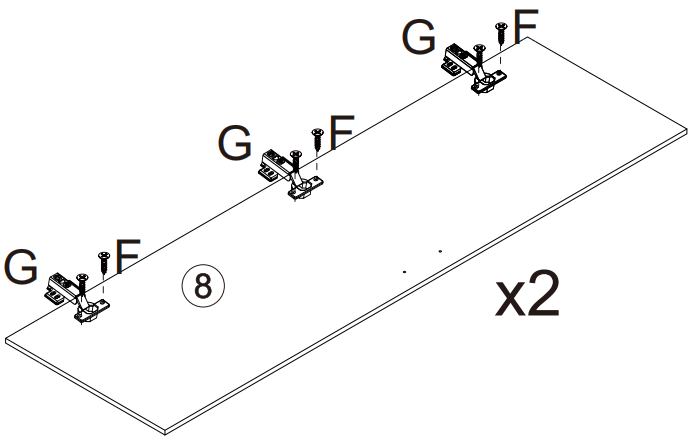


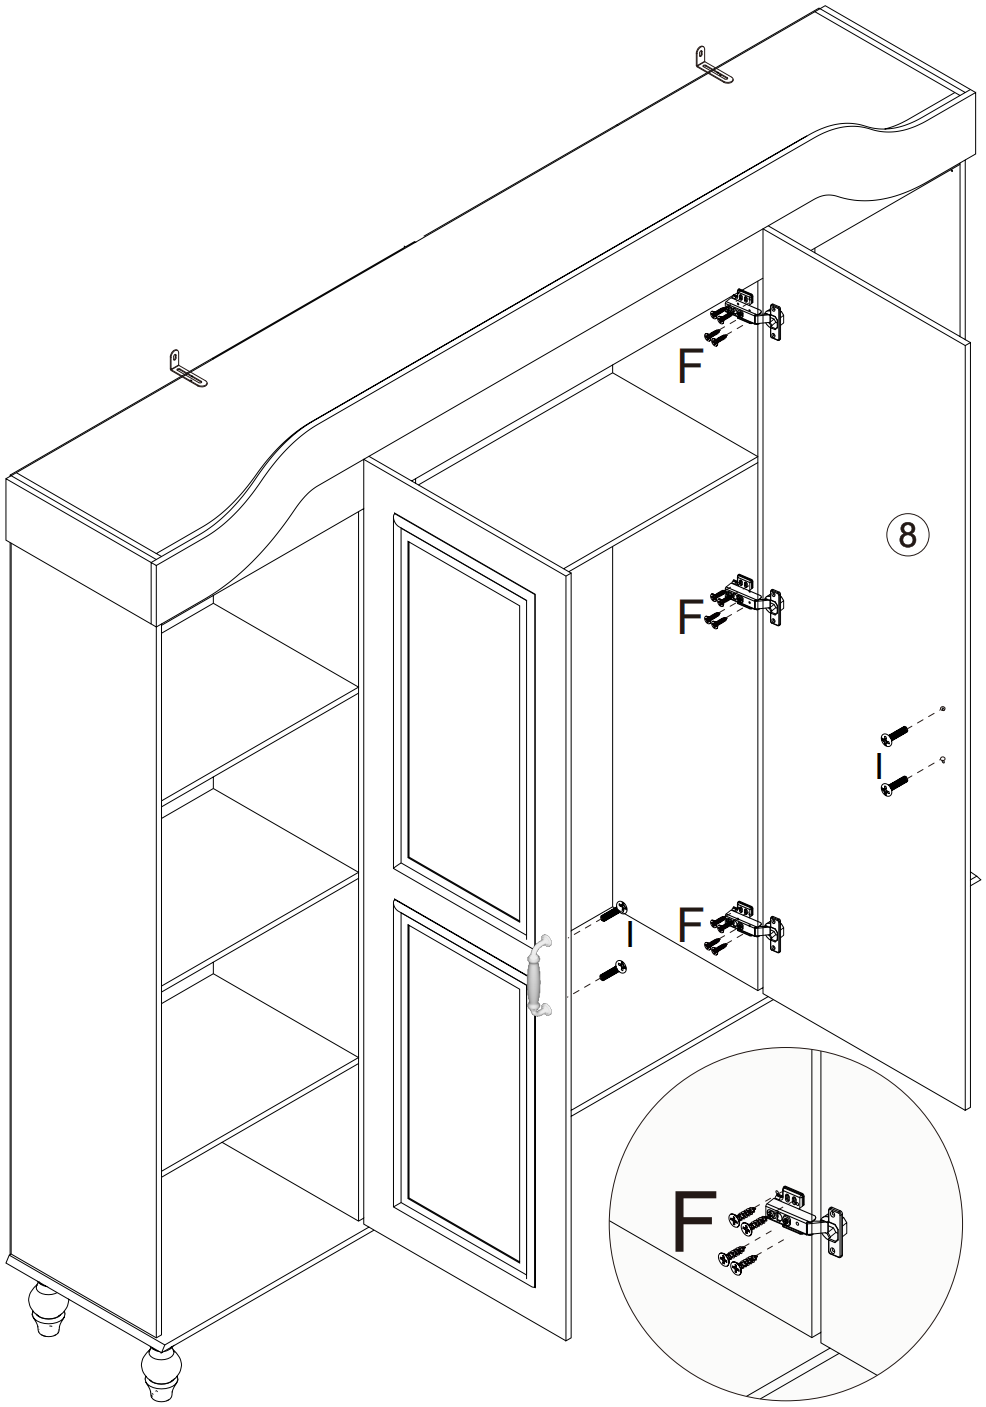


15

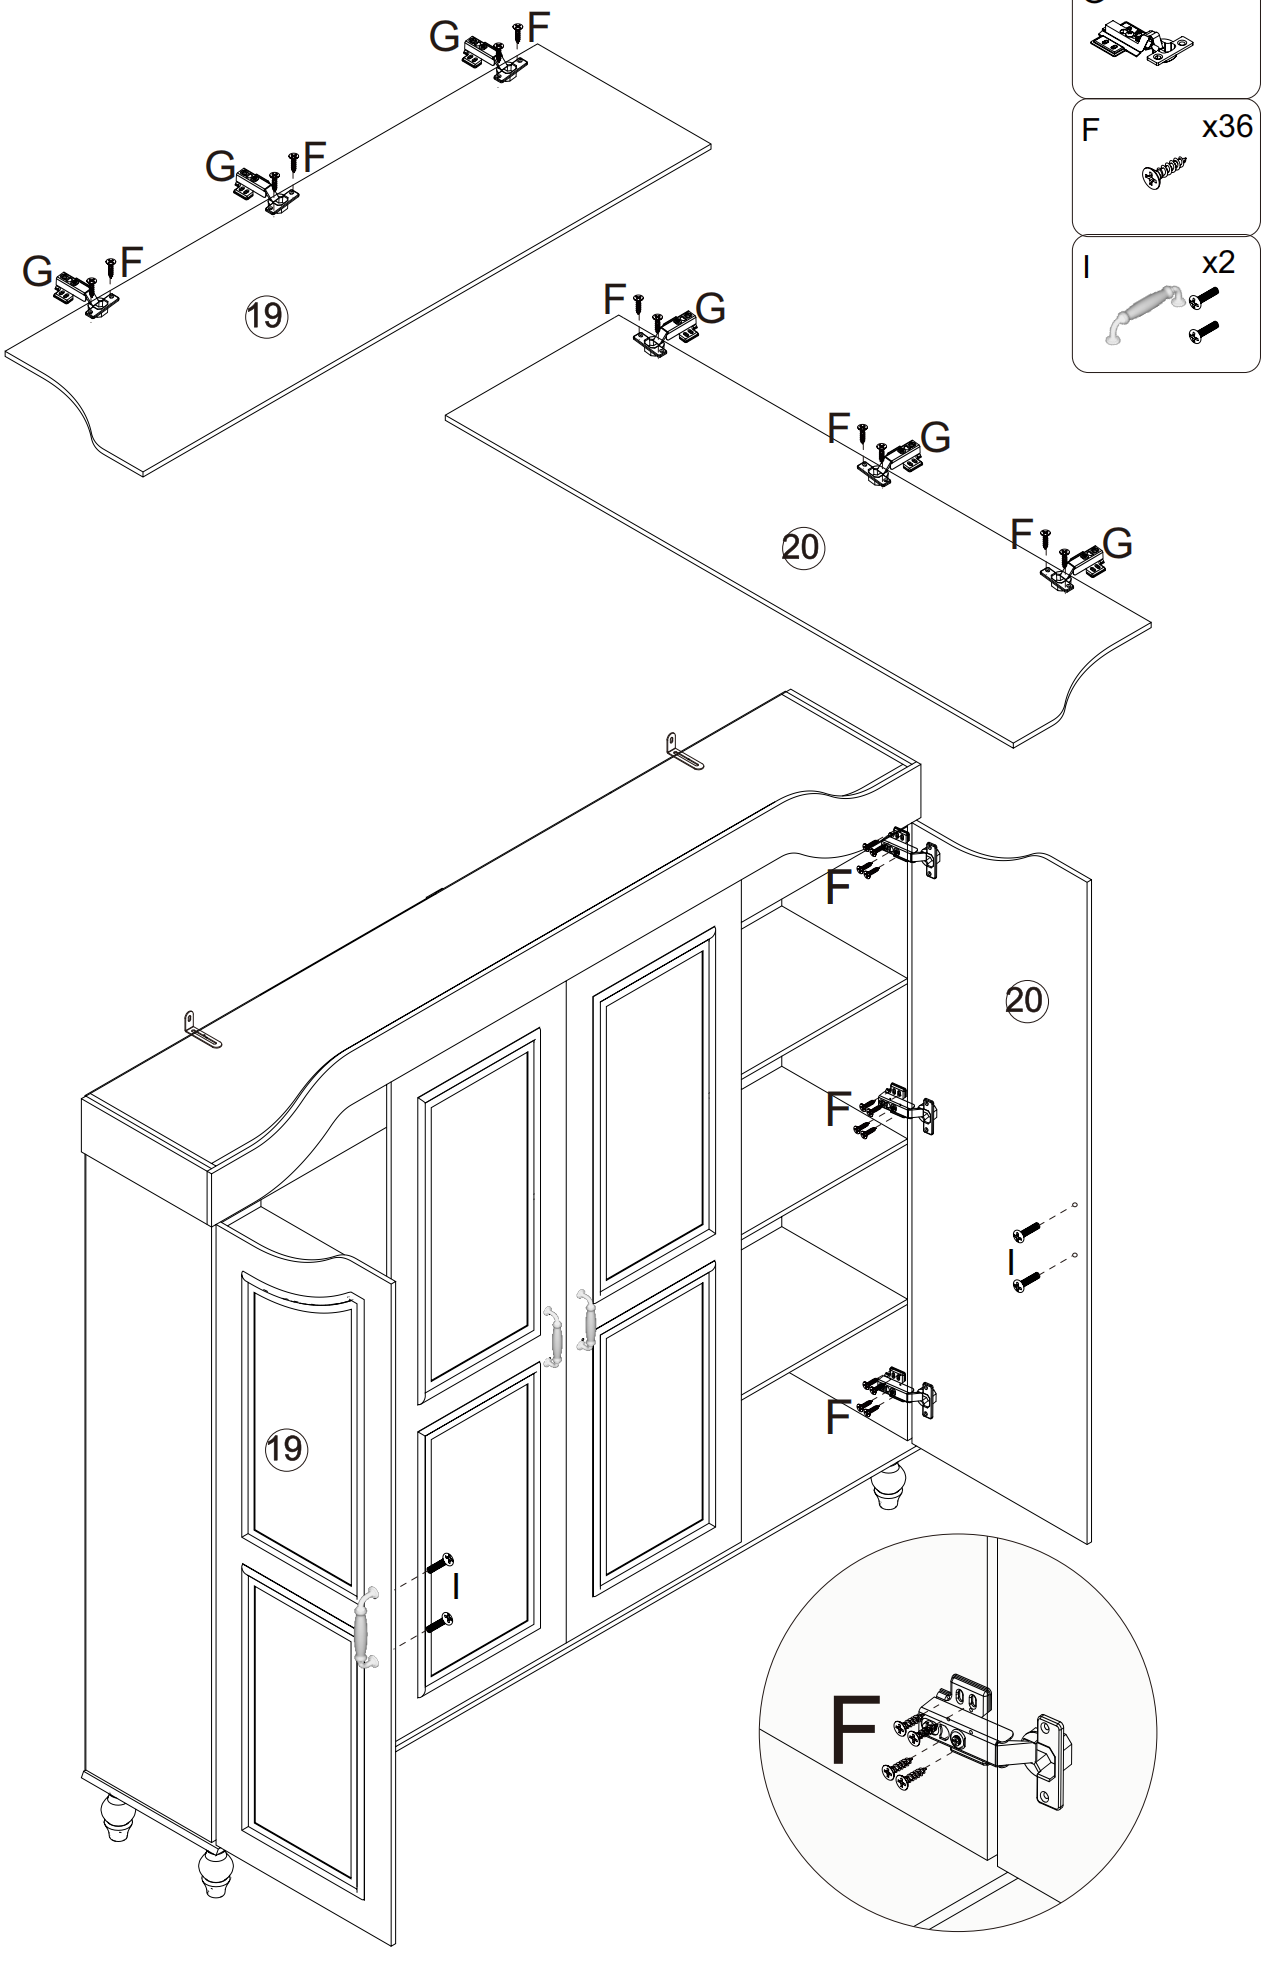

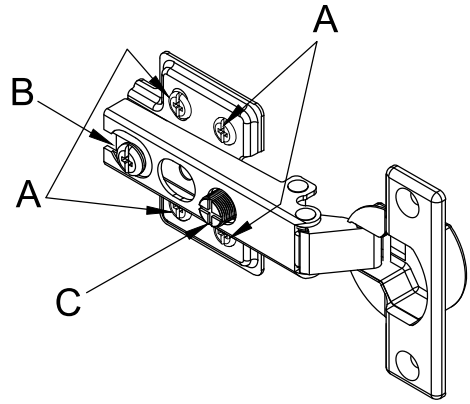


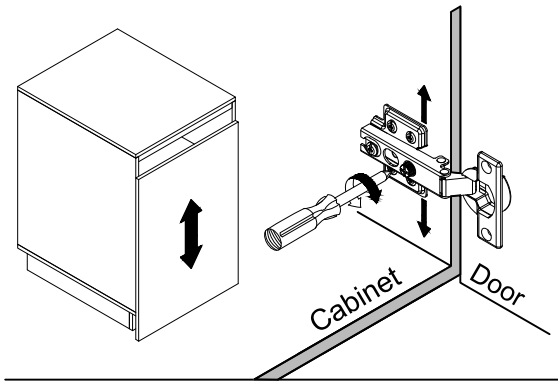

To adjust the vertical height.
Loosen the four screws "A" on both hinges.
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.
Then tighten back up.

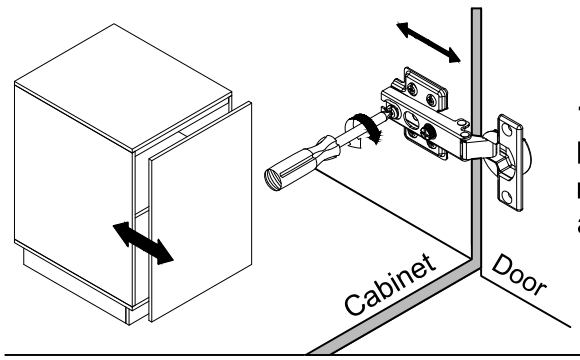

To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

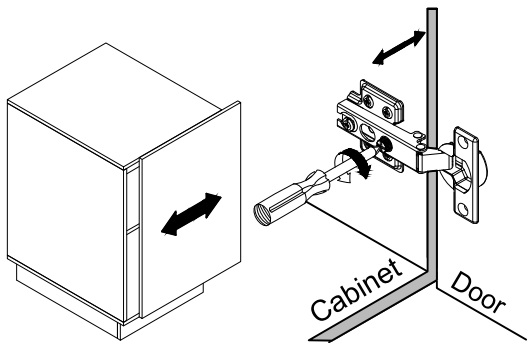

To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.

16

