




ASSEMBLY INSTRUCTIONS

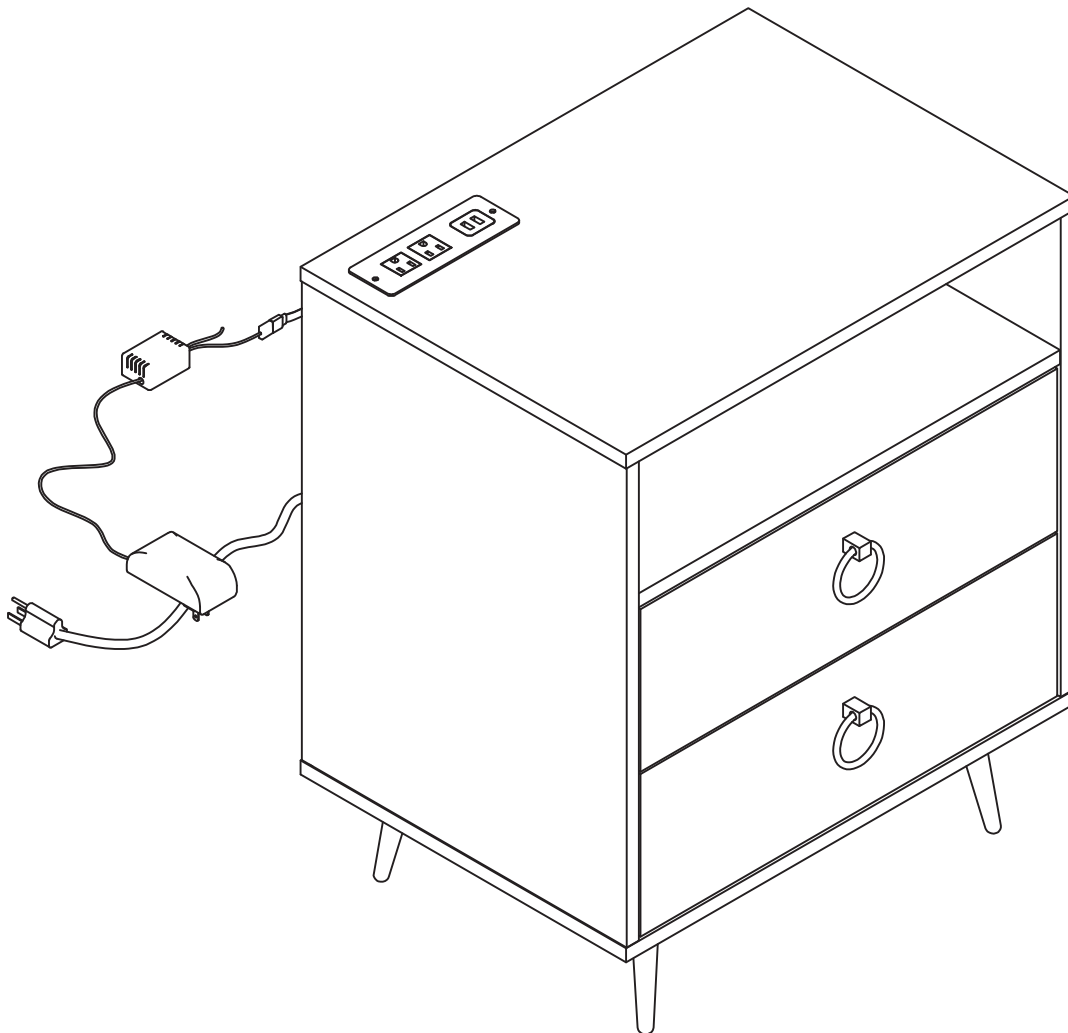

BOARD IDENTIFICATION

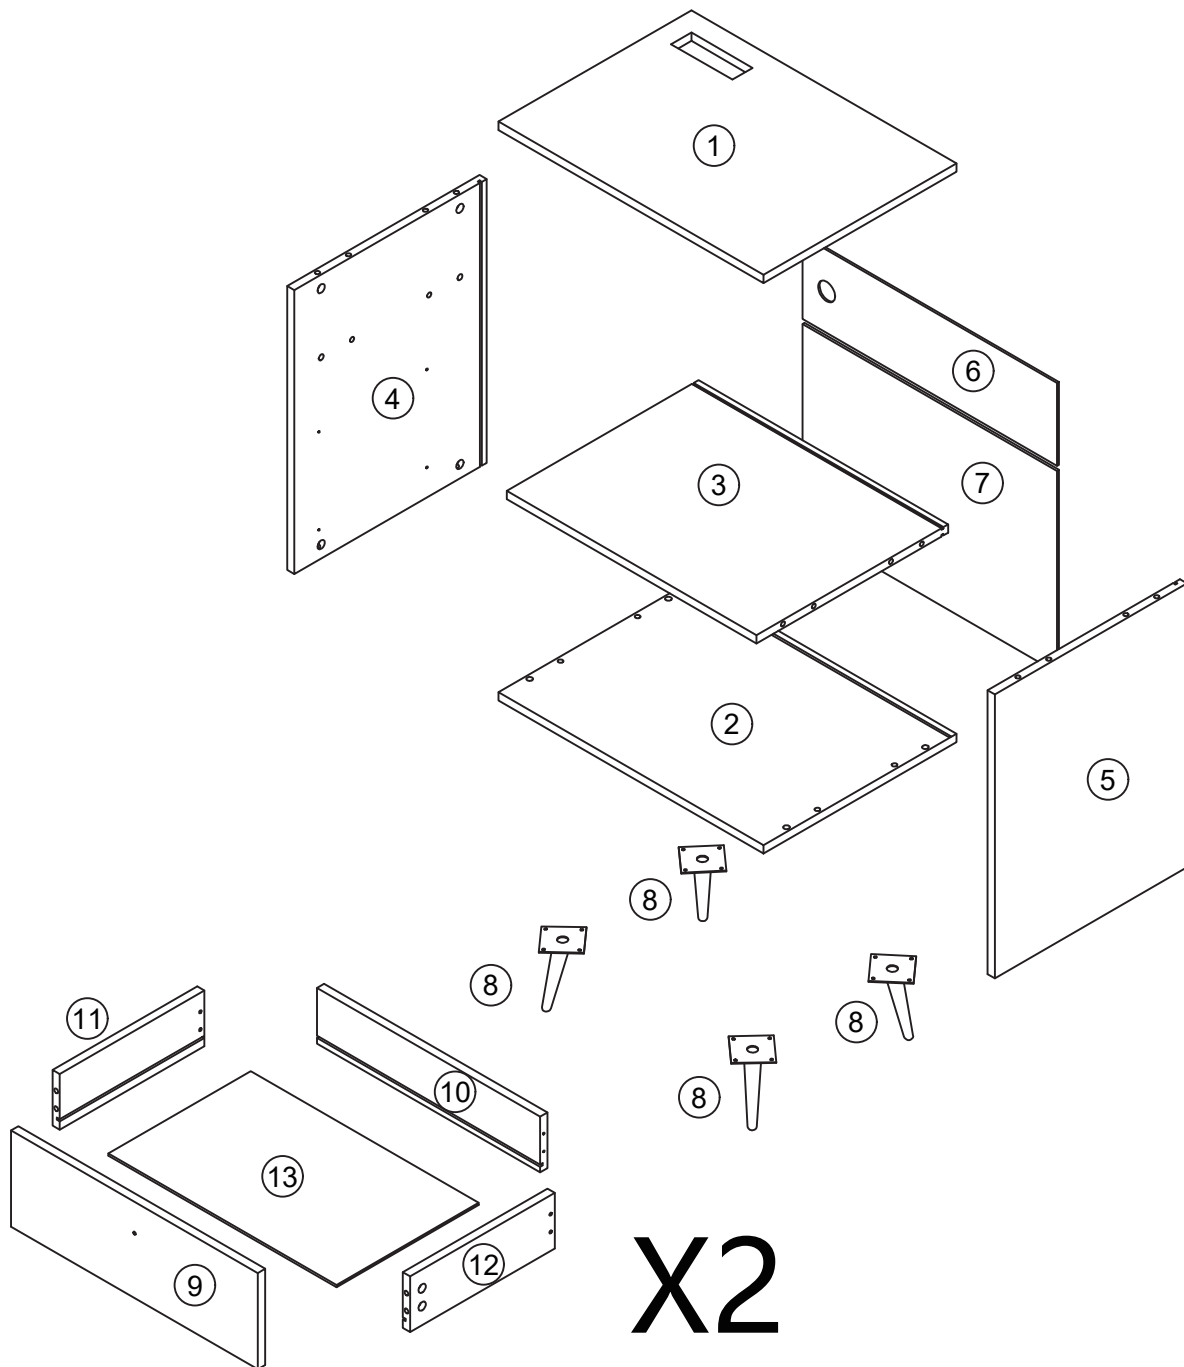


PARTS LIST

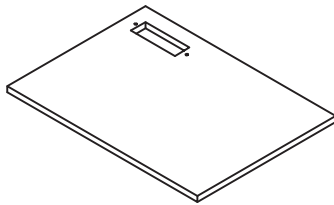


①

MAIN PANEL

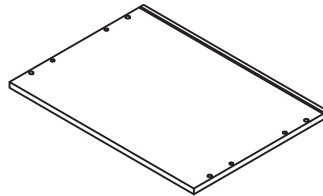


②

BOTTOM

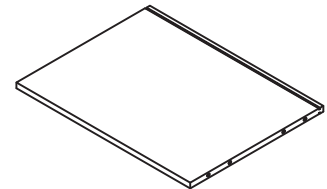


③

LAYER BOARD

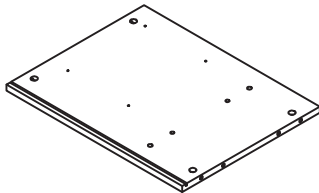


④

LEFT SIDE PANEL

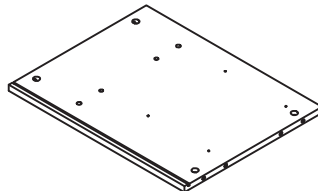


⑤

RIGHT SIDE PANEL

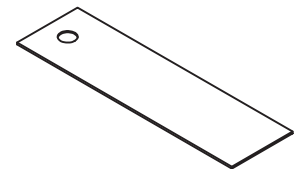


⑥

BACK PANEL

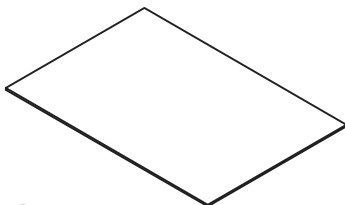


⑦


BACK PANEL




⑧

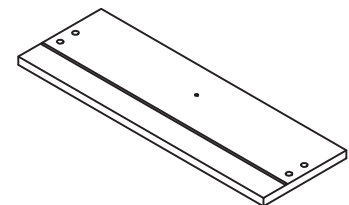FOOT
QTY:4


⑨

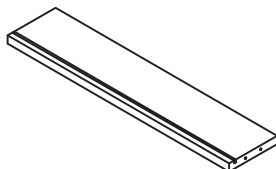DRAWER FRONT
QTY:2


⑩

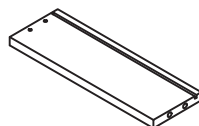DRAWER BACK
QTY:2

⑪

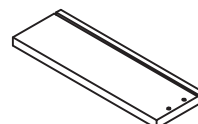DRAWER LEFT
QTY:2


⑫

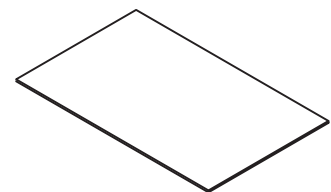DRAWER RIGHT
QTY:2


⑬

DRAWER BOTTOM
QTY:2



1

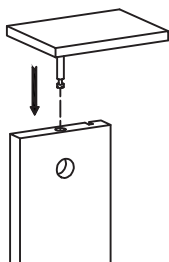


2

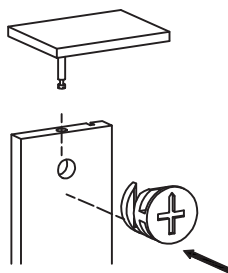


3

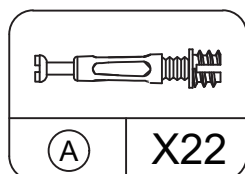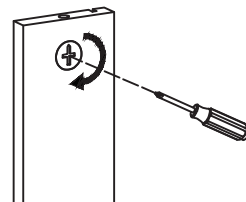


CAM BOLT
F7*31

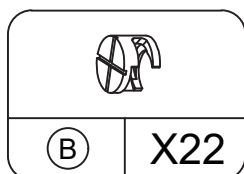


CAM LOCK
F15*11

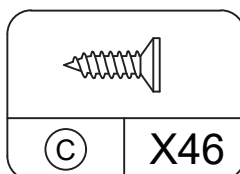


SCREW
F3.5*14

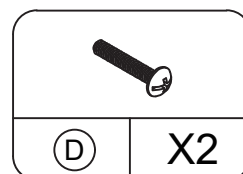


SCREW
F4*18

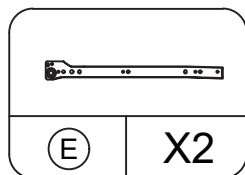


LEFT OUTER
TRACK
F20*300

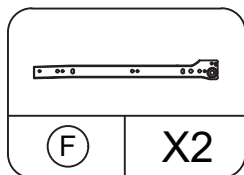


RIGHT OUTER
TRACK
F20*300

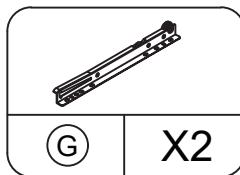


LEFT INNER
TRACK
F20*300

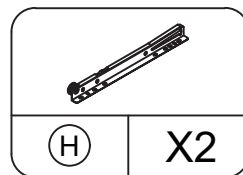


RIGHT INNER
TRACK
F20*300

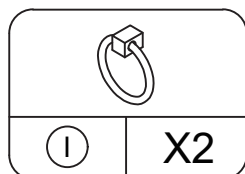


HANDLE

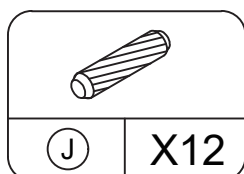


WOOD DOWEL
F8*30

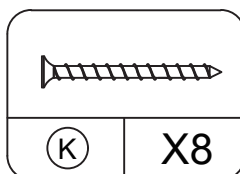

SCREW
F4*35

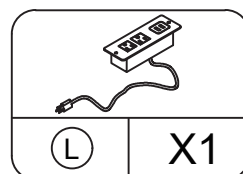



SOCKET

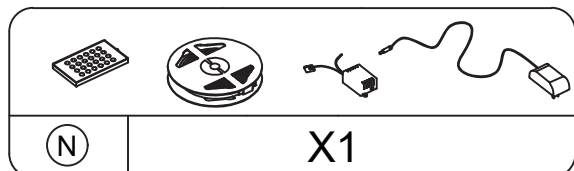

LIGHT STRIP



STEP 1

-Screw the cam bolt (A) into the panel (1) & (2).

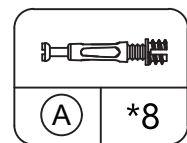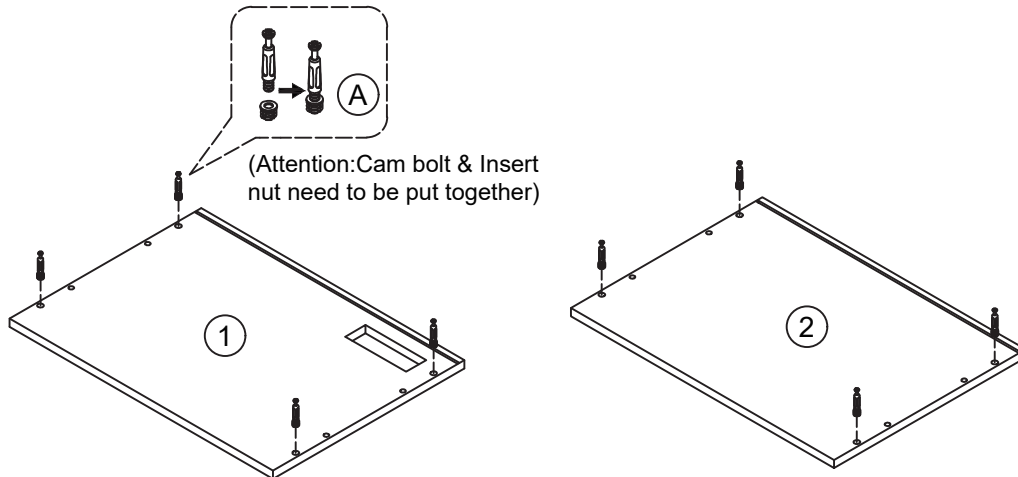




STEP 2

-Screw the cam bolt (A) into the panel (4) & (5).
-Insert wooden dowels (J) into the panel (4) & (5).


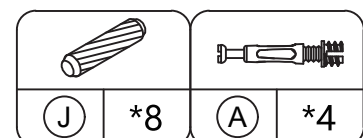
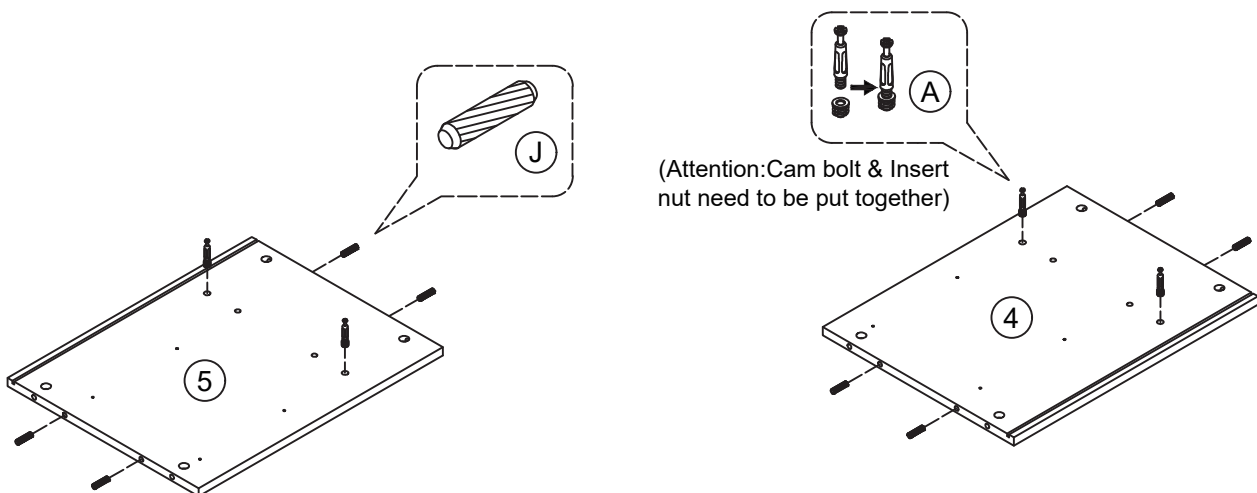


STEP 3

-Install drawer track (E) & (F) to panel (4) & (5) with screws(C).

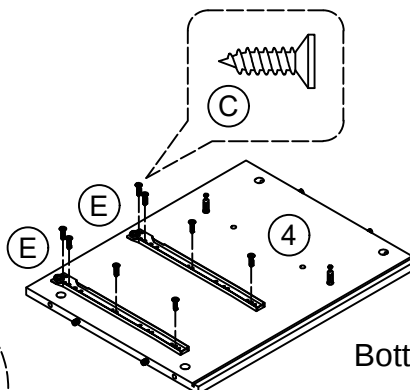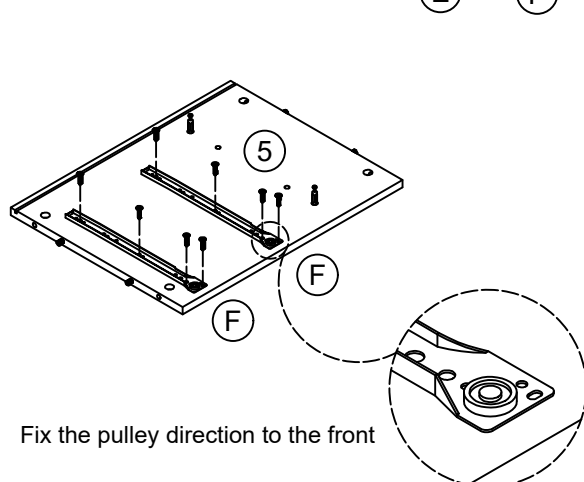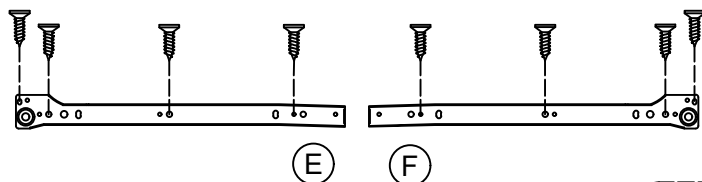



Bottom track installation video

					
(F)	*2	(E)	*2	(C)	*16

STEP 4

-Screw the cam bolt (A) into the panel (9).


-Insert wooden dowels (J) into the panel (3).

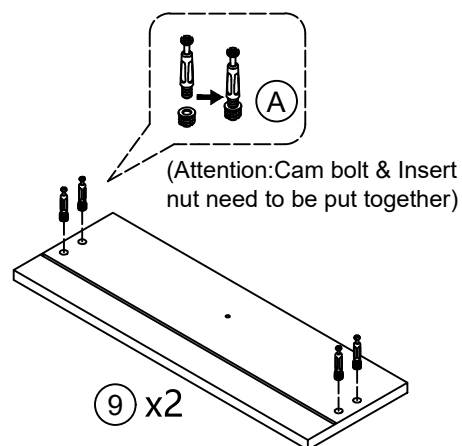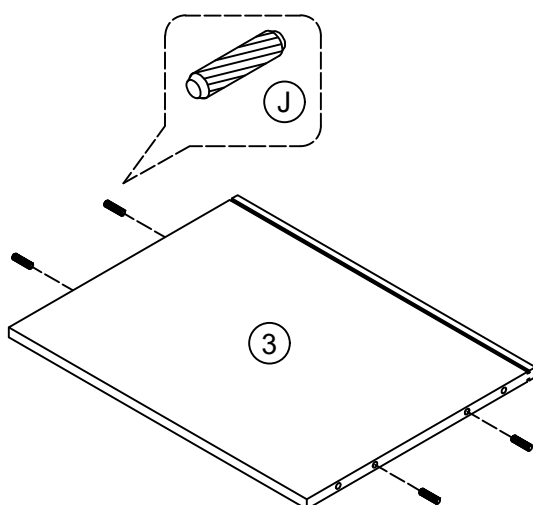

			
(J)	*4	(A)	*8


STEP 5

-Attach panel (4) & (5) to (3) and lock with cam (B).

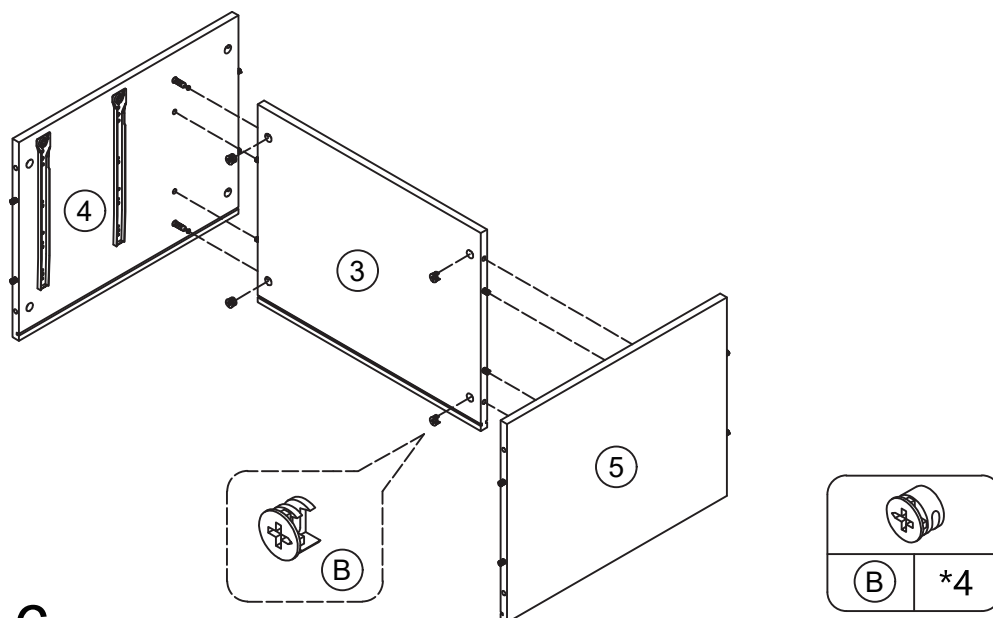



STEP 6

-Fasten the LED band with buckles.

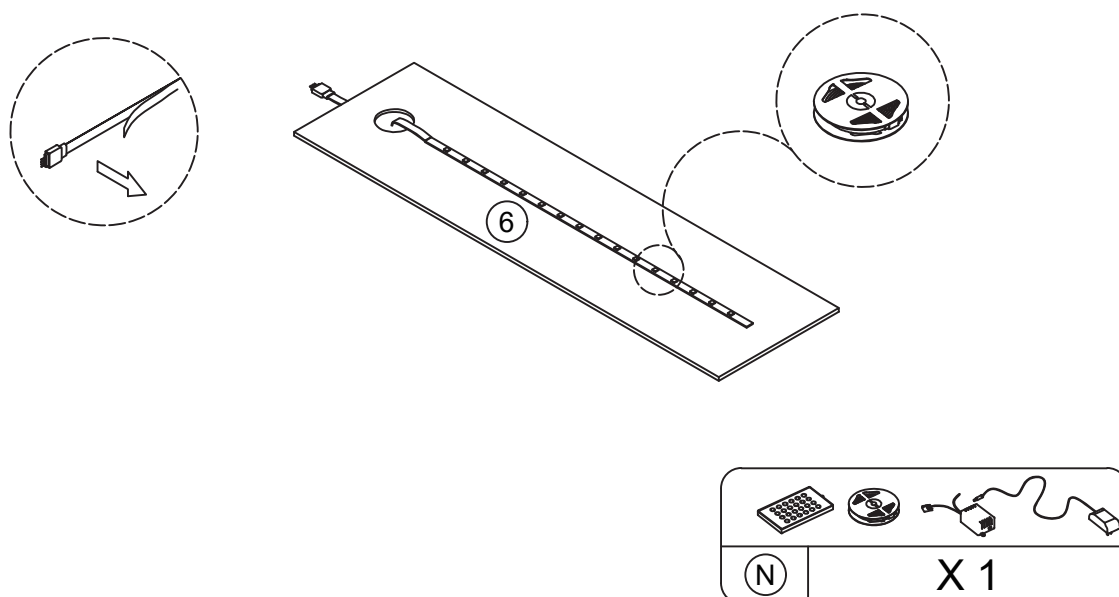



STEP 7

-Insert panel (6) & (7) into the grooves.

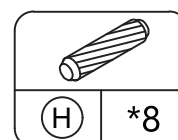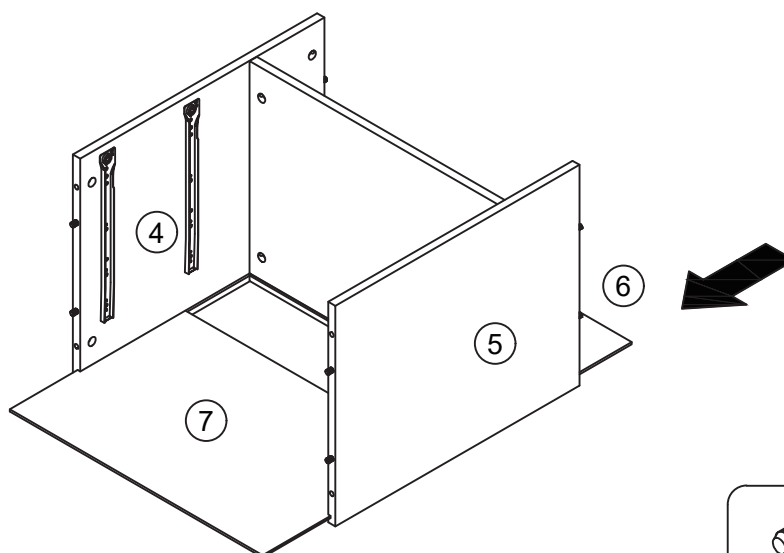



STEP 8

-Attach panel (1) & (2) to (4) & (5) and lock with cam (B).

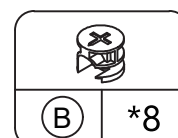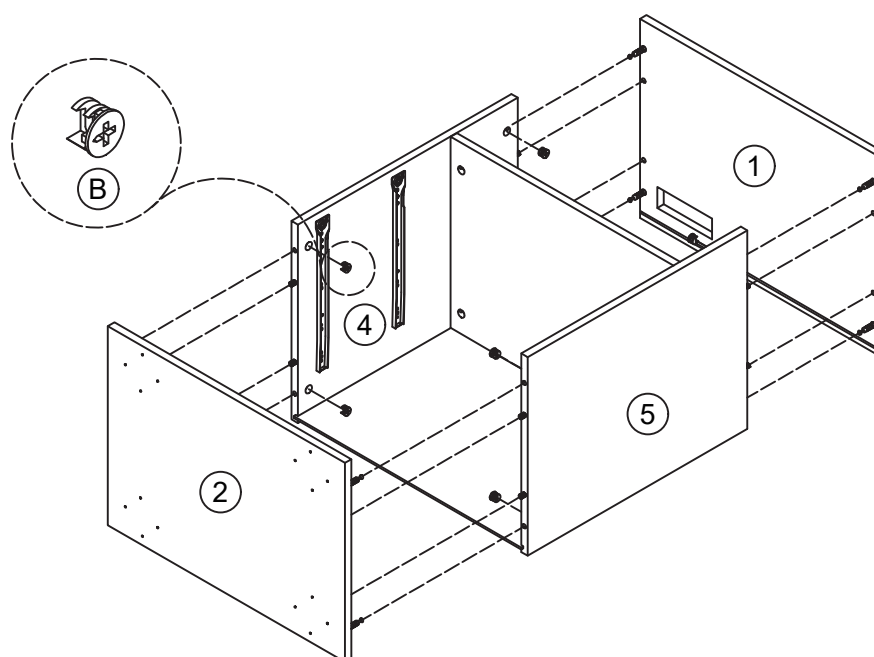




STEP 9

-Attach foot (8) to panel (2) with screws(C).

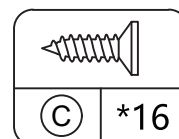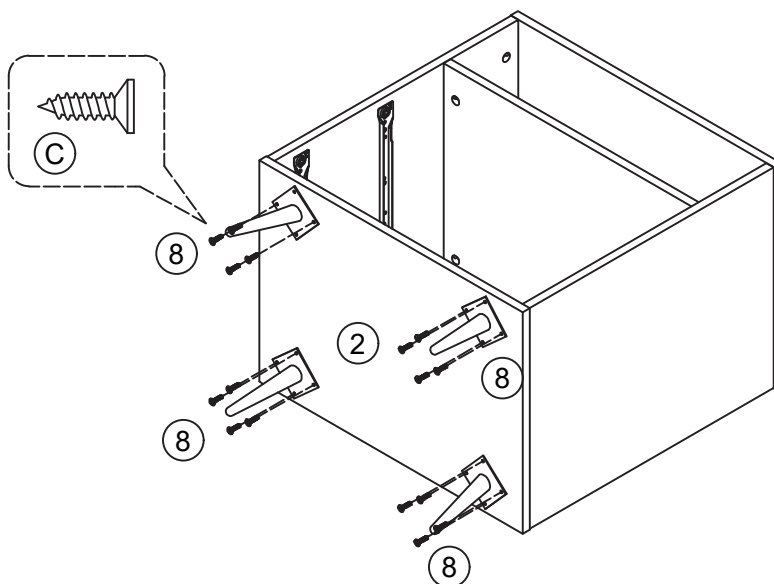


STEP 10

-Attach socket (L) to panel (1) with screws (C).

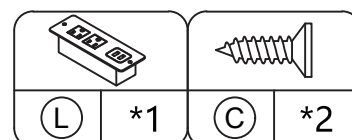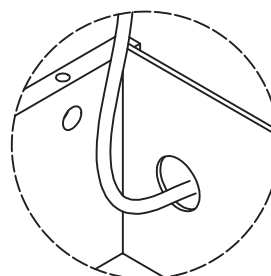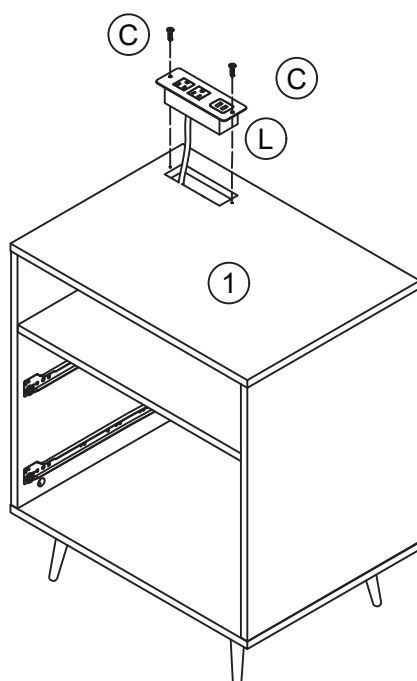


STEP 11

-Attach panel (11) & (12) to (10) with screw (K).

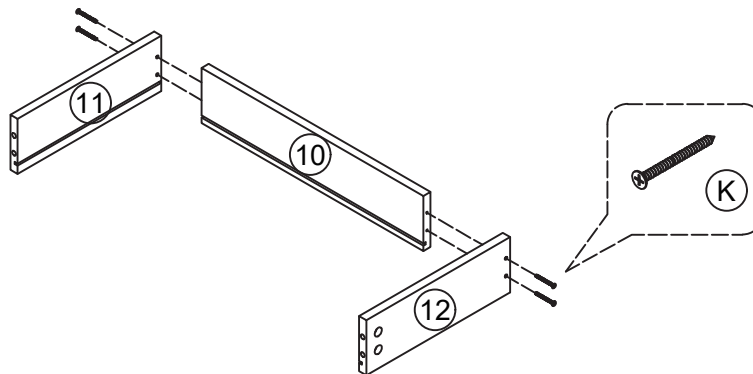


X2

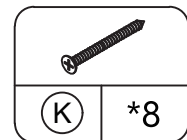


STEP 12

- Insert panel (13) into the grooves.
- Attach panel (9) to (11) & (12) with cam locks (B).

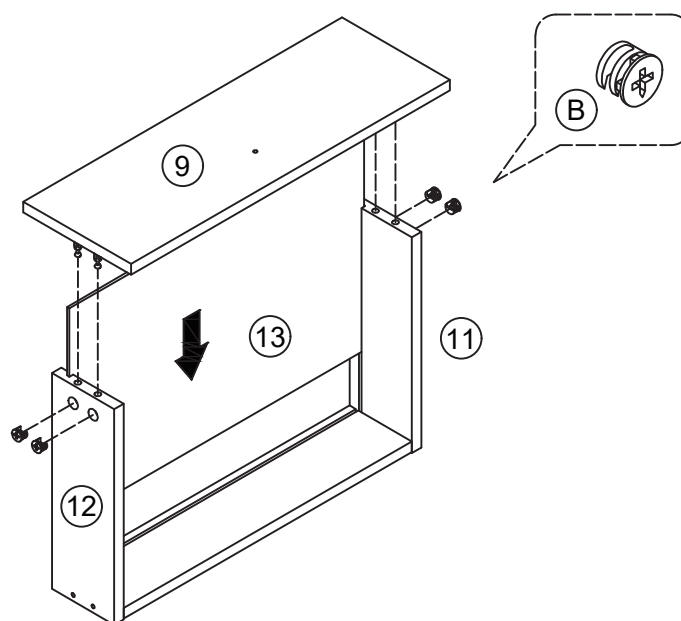


X2

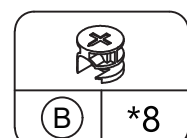


STEP 13

- Install handle (I) to panel (9) with bolts (D).


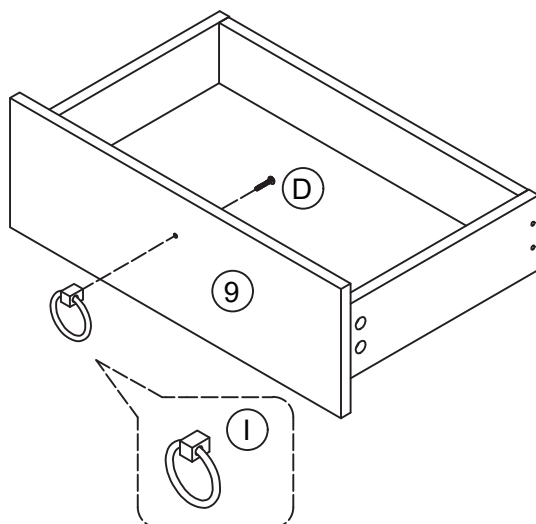


X2

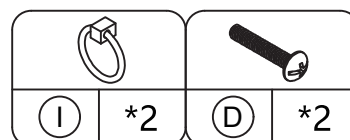


STEP 14

- Install drawer track (G) & (H) to panel (11) & (12) with screws (C).

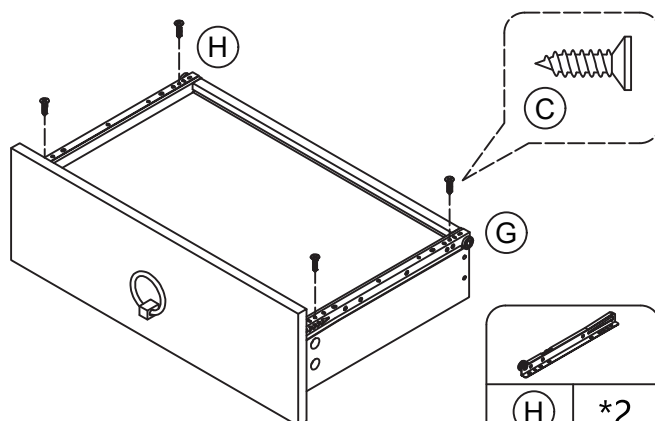
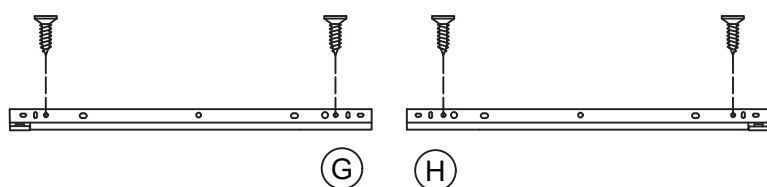


X2

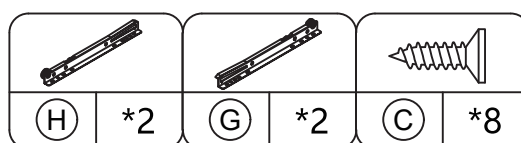

STEP 15

- Insert the drawers.

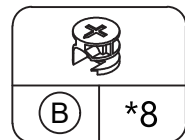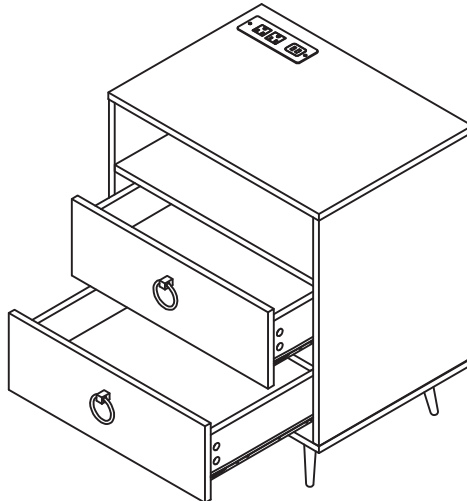


STEP 16



-Connected pin of LED and power adapter to the RGB control box as below.

-Remove the battery protection pad from remote controller; Align remote controller to the RGB Control box to adjust the color mode; Specifications of battery: cr2025 3v

-LED lamp with effective remote control distance of 5 meters

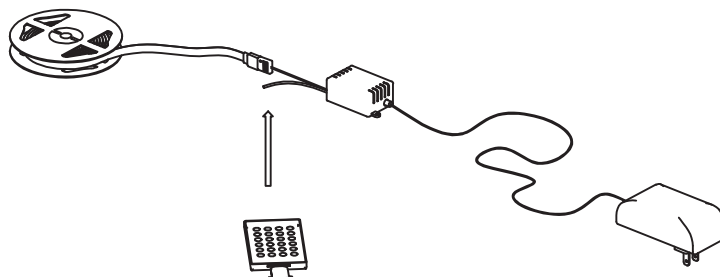

STEP 17

-Installation complete.

