


ASSEMBLY INSTRUCTIONS
30 INCH BATH VANITY-CABINET

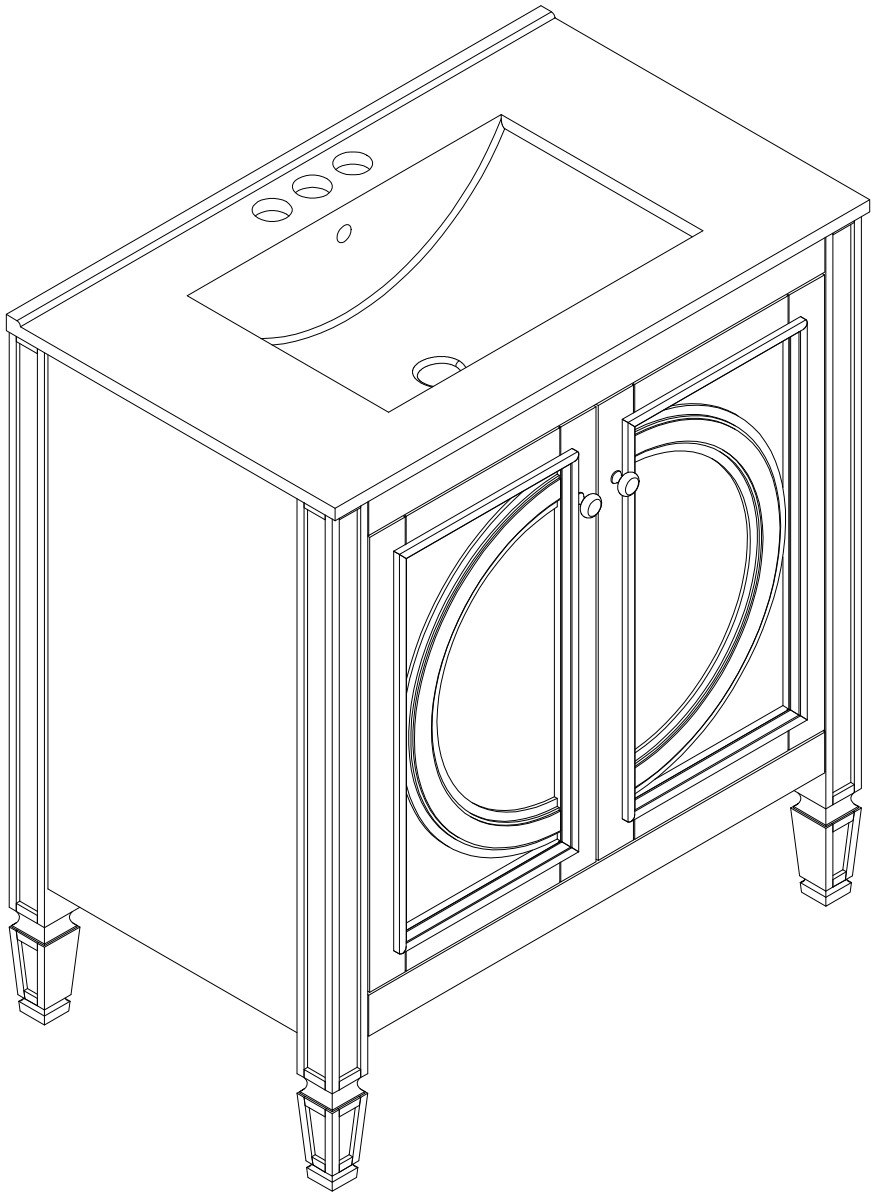


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.
"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

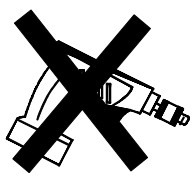

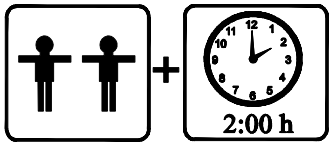

Tools Required


(Not included)


(Not included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!
We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

1. Note: This is not a clothing storage cabinet and it is not recommended to use it as a clothing storage cabinet.

2. All cabinets come with TRD, stainless steel or our "L-Bracket "when shipped.

Before Installation

Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly,and follow the assembly steps to assemble your newly purchased product correctly and efficently.

Cam Lock Assembly Instructions





Diagram A

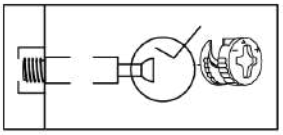

Insert Cam Bolt into hole as shown in diagram A.





Diagram B

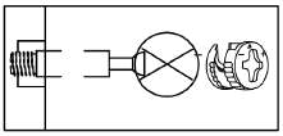

Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.







Diagram C

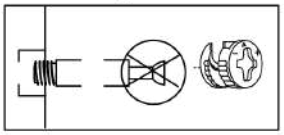


Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.

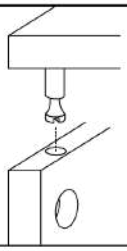

Connect the panels together.

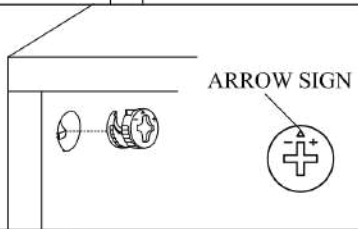


Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.

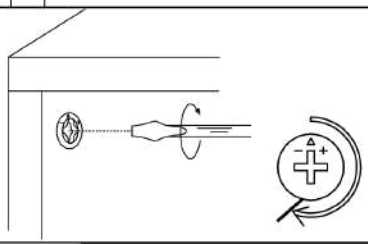

















To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver.
**Do not use an automatic screwdriver as it may bend or break if too much power is imposed.*

Detail View - CABINET









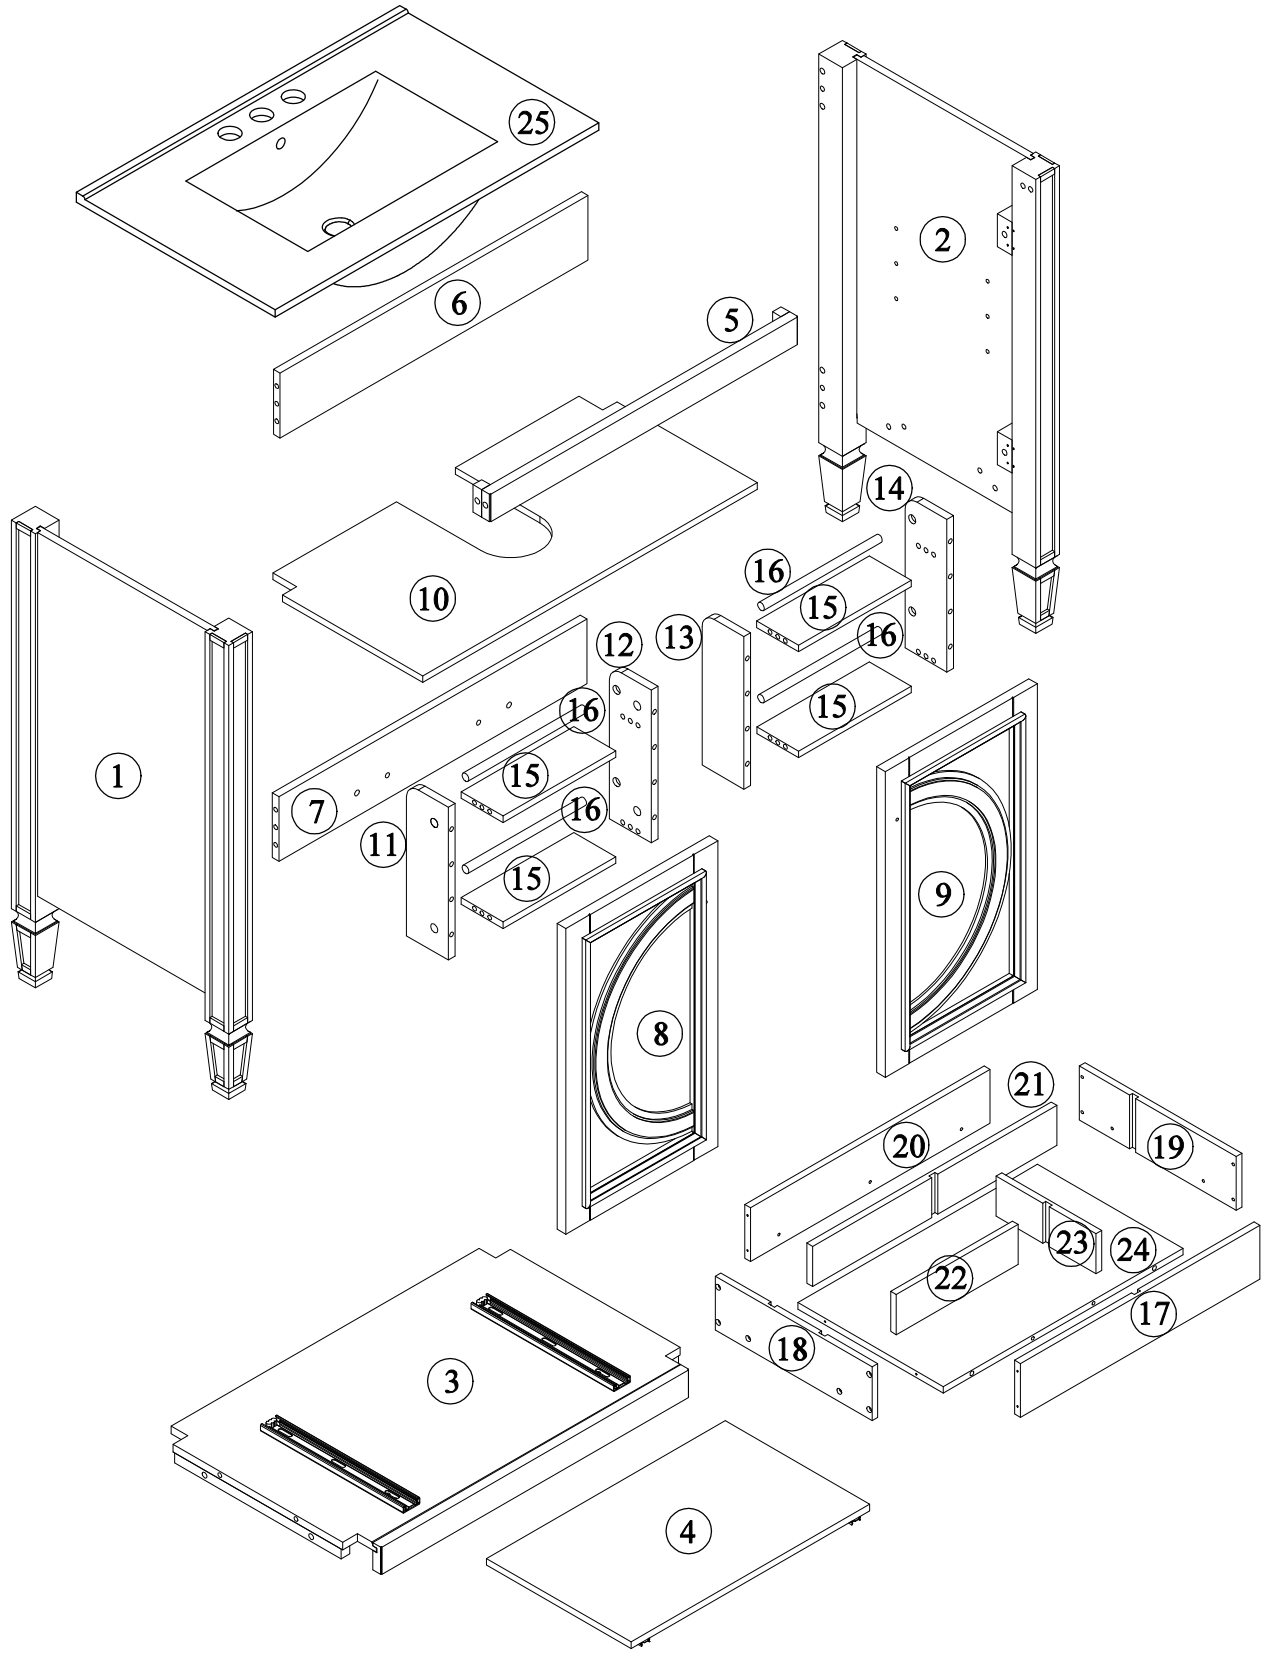


Identifying the Hardware-Identify the hardware using the illustrations below.






Part List - N759P226000

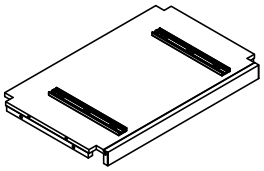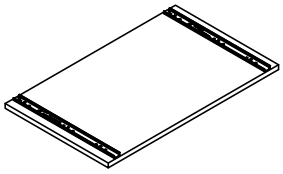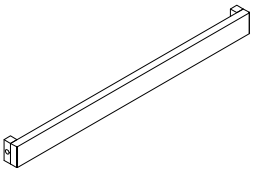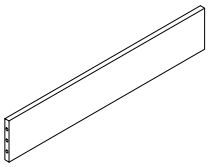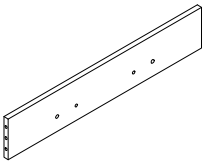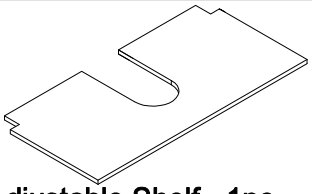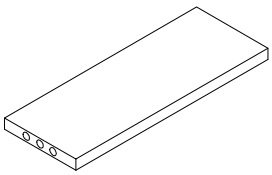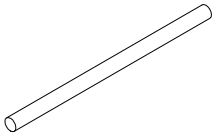1  Side Panel (L) - 1pc	2  Side Panel (R) - 1pc
3  Bottom Frame - 1pc	4  Bottom Runner Panel - 1pc
5  Top Bar Front - 1pc	6  Top Panel Rear - 1pc
7  Bottom Panel Rear - 1pc	8  Door (L) - 1pc
9  Door (R) - 1pc	10  Adjustable Shelf - 1pc
11  Panel Left Side Door (L) - 1pc	12  Panel Right Side Door (L) - 1pc
13  Panel Left Side Door (R) - 1pc	14  Panel Right Side Door (R) - 1pc
15  Panel Mid Door - 4pcs	16  Round Bar Door - 4pcs


Part List - N759P226000

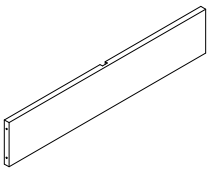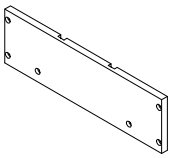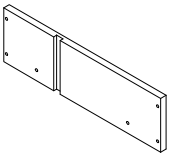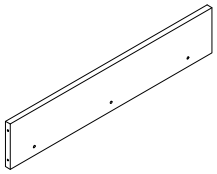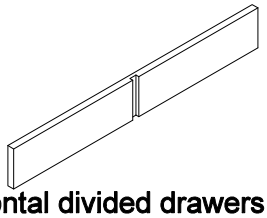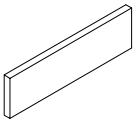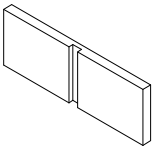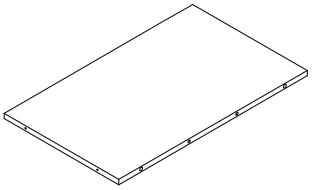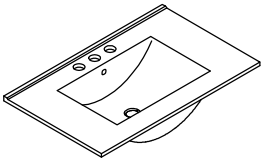
17  Drawer Front Panel - 1pc	18  Drawer Side Panel (L) - 1pc
19  Drawer Side Panel (R) - 1pc	20  Drawer Back Panel - 1pc
21  Horizontal divided drawers (C) - 1pc	22  Horizontal divided drawers (L) - 1pc
23  Vertical divided drawers (M) - 1pc	24  Bottom Drawer Panel Bottom - 1pc
25  Sink - 1pc	


Hardware List - N759P226000

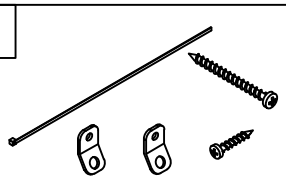
A  ø6x35mm	B  ø14.5x12mm	C  ø8xø4x32mm
Three in one bolts (28pcs)	Three in one lock (28pcs)	Round head screw (15pcs)
D  ø13x1/4"x30mm	E  ø1/4"x16x1mm	F  4mm
Hex-Head bolts (6pcs)	Washer (6pcs)	Allen key(1pc)
G 	H  ø5/32"x25mm	I 
Handle(2pcs)	Handle screw(2pcs)	Damping hinge (4pcs)
J  ø7xø3.5x15mm	K 	L  ø8x30mm
Flat head screw(24pcs)	Laminate pad - 4pcs	Wood dowel (36pcs)
M  ø6x30mm	N 	
Wood dowel (2pcs)	Anti fall hardware(2sets)	

STEP: 1



A

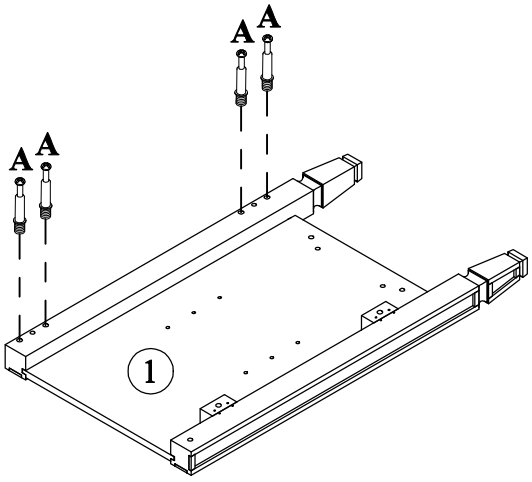8PCS

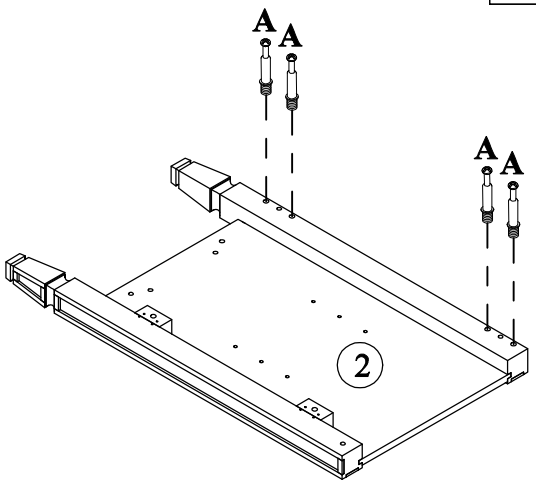


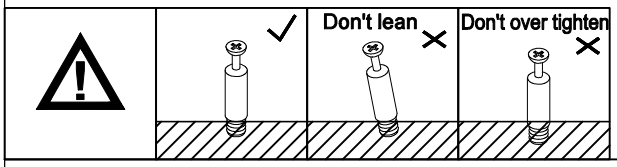





STEP: 2


A	B	L
		
2PCS	2PCS	2PCS

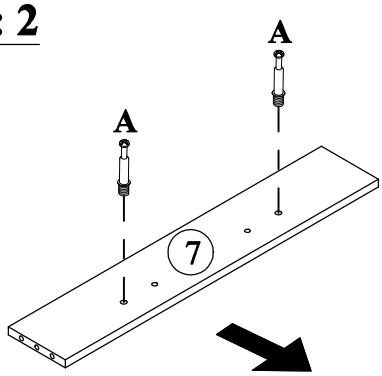


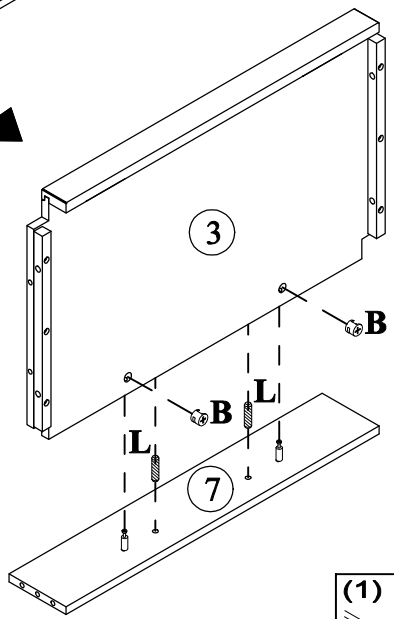


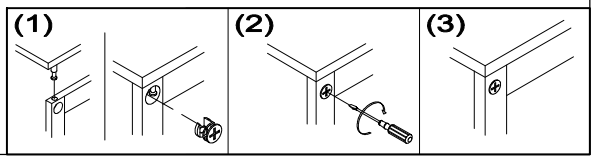

STEP: 3


B	L
	
4PCS	5PCS
D	**E**
	
3PCS	3PCS

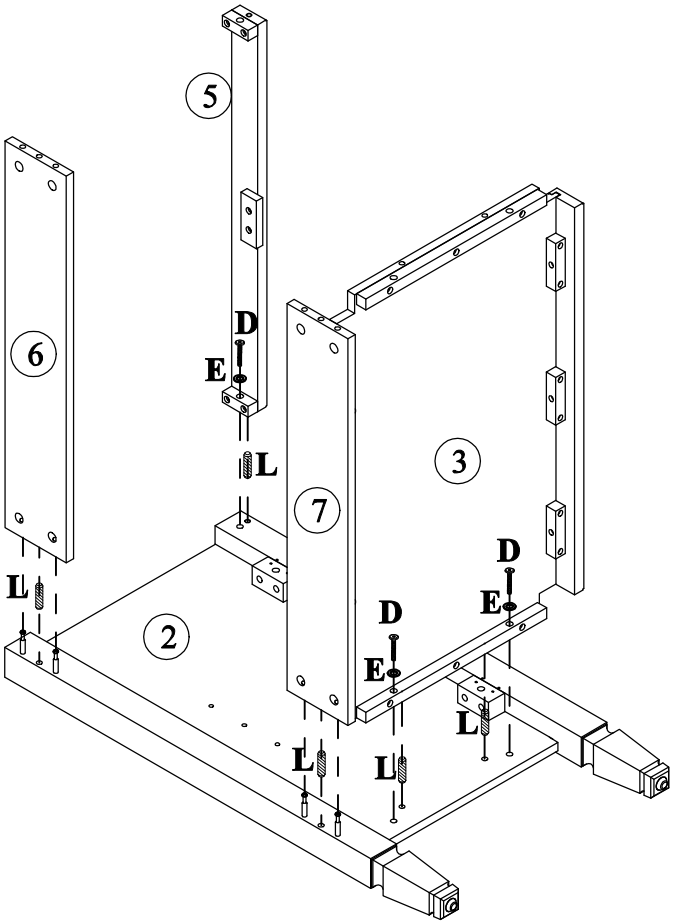


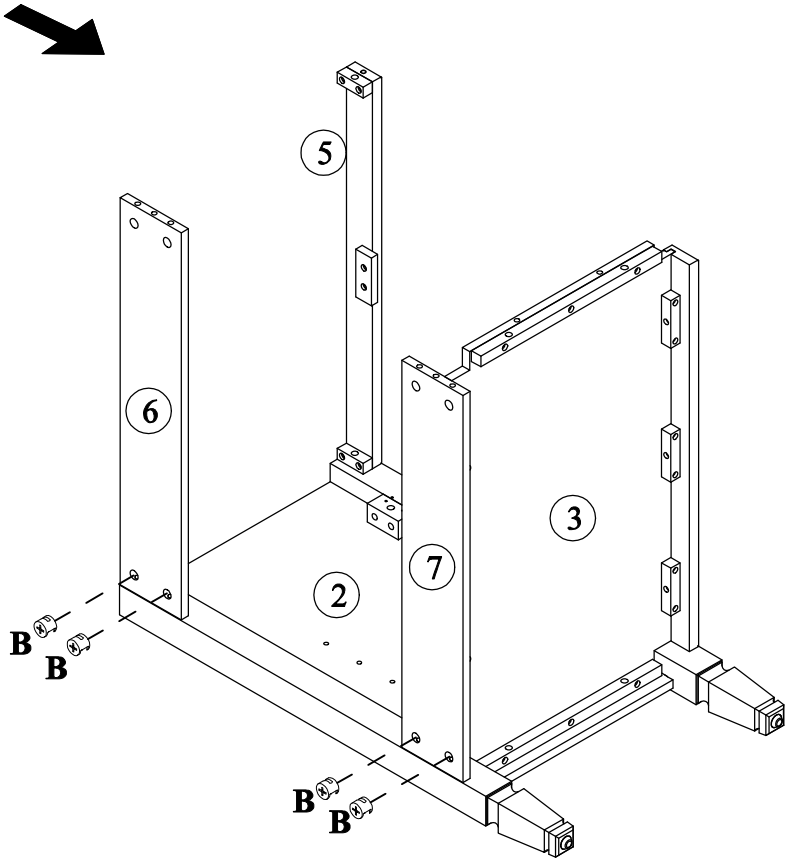


STEP: 4


B	L
	
4PCS	5PCS
D	**E**
	
3PCS	3PCS

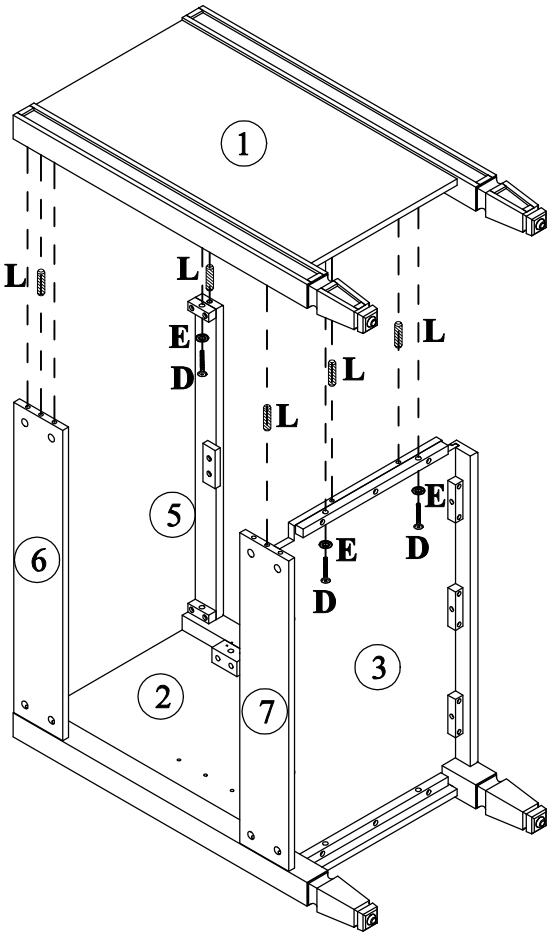

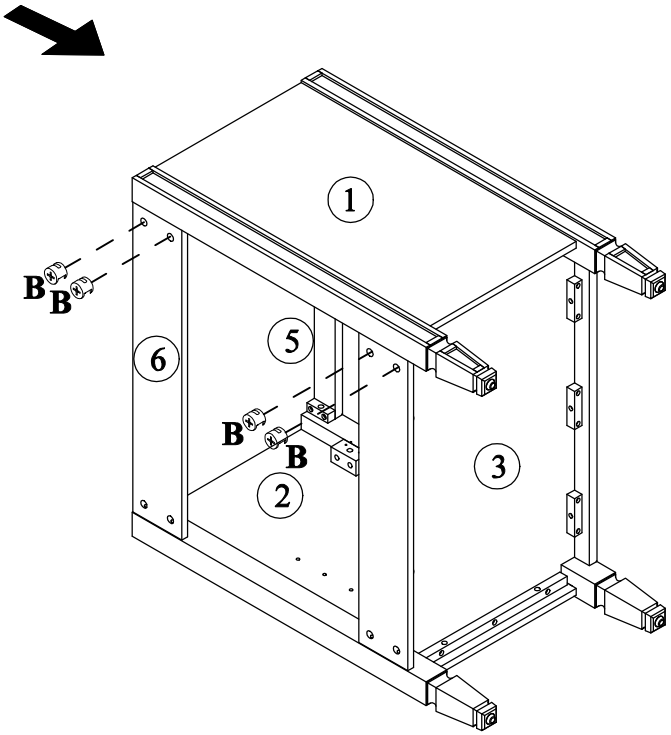


STEP: 5

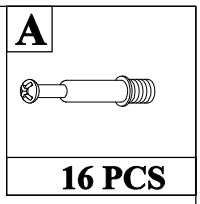

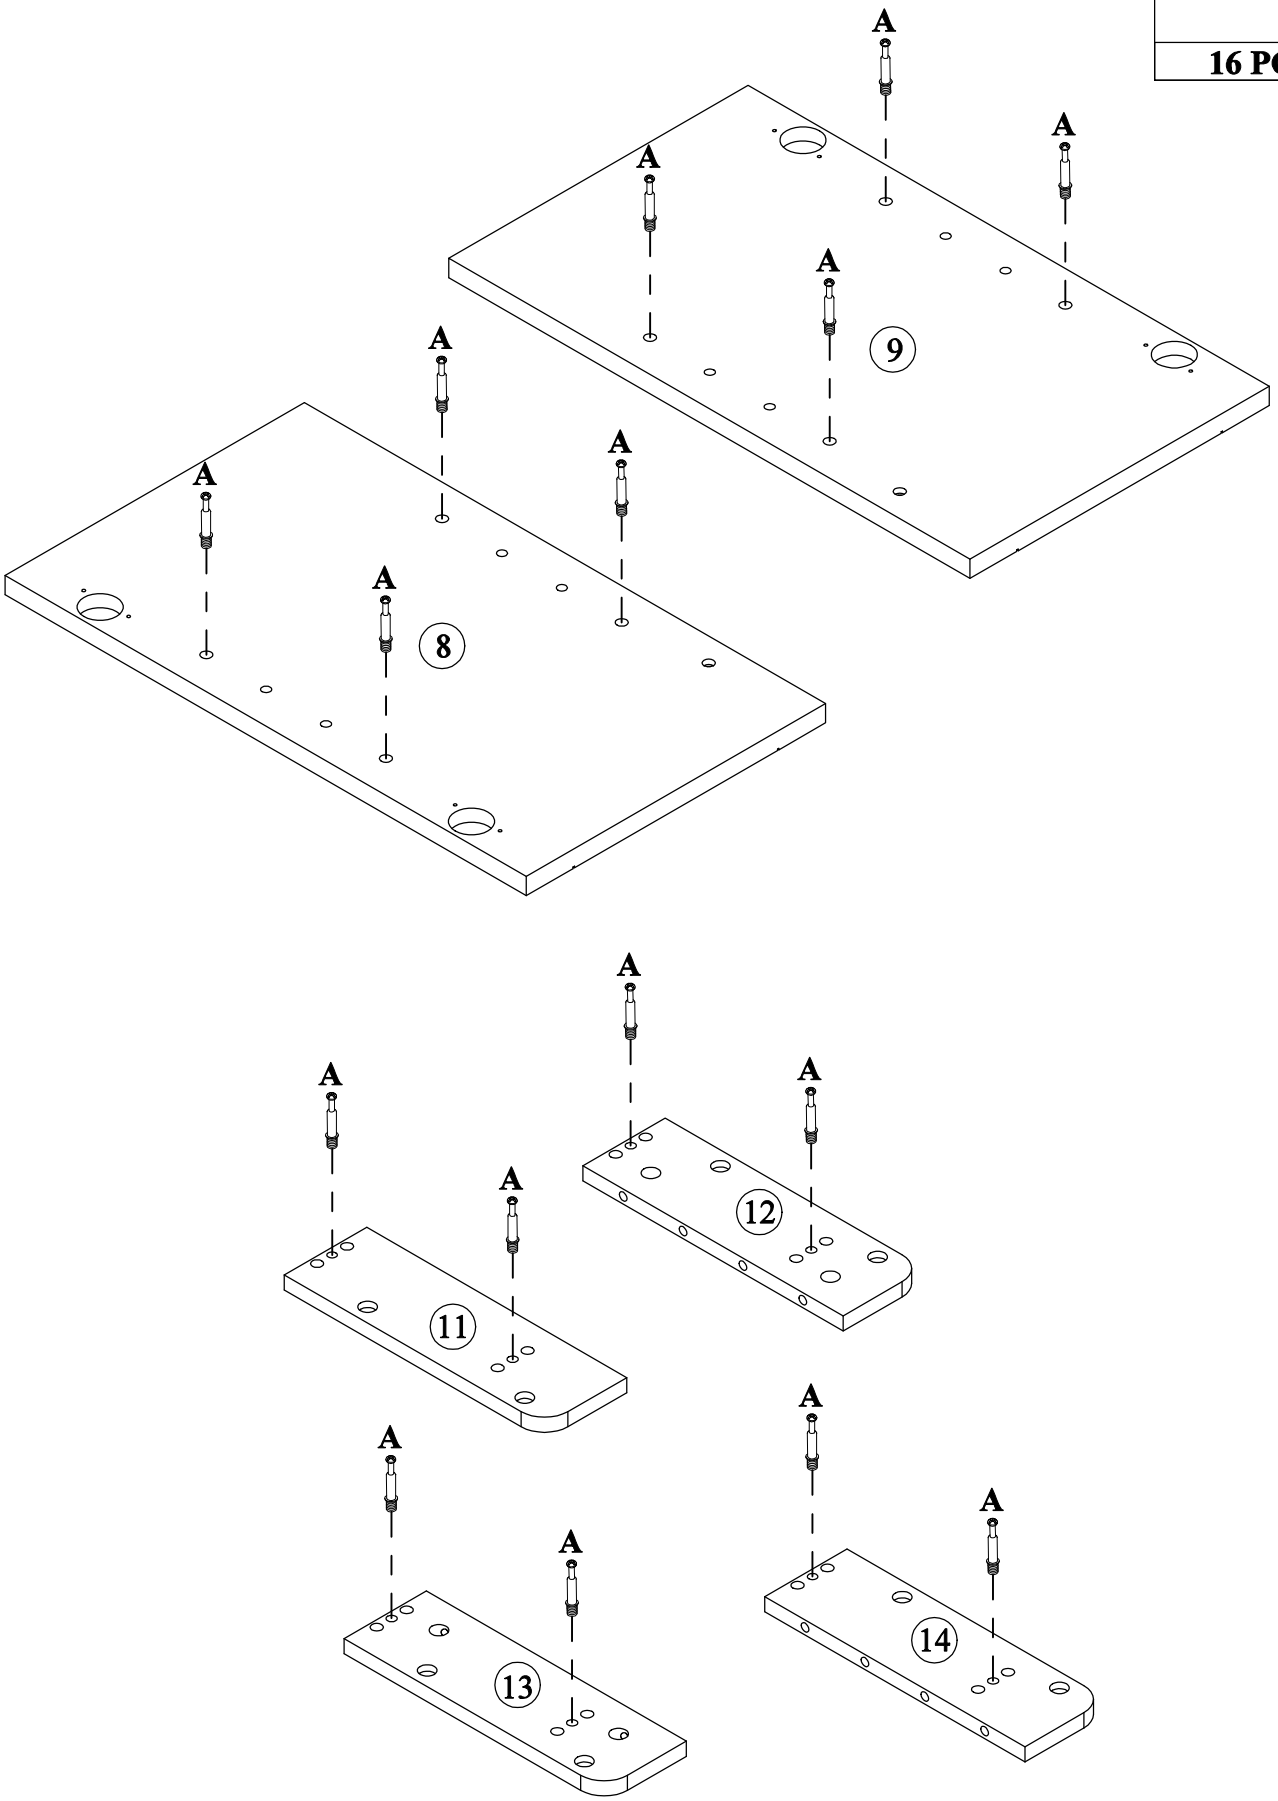


STEP: 6

B	L	I	J
8PCS	12PCS	2PCS	4PCS


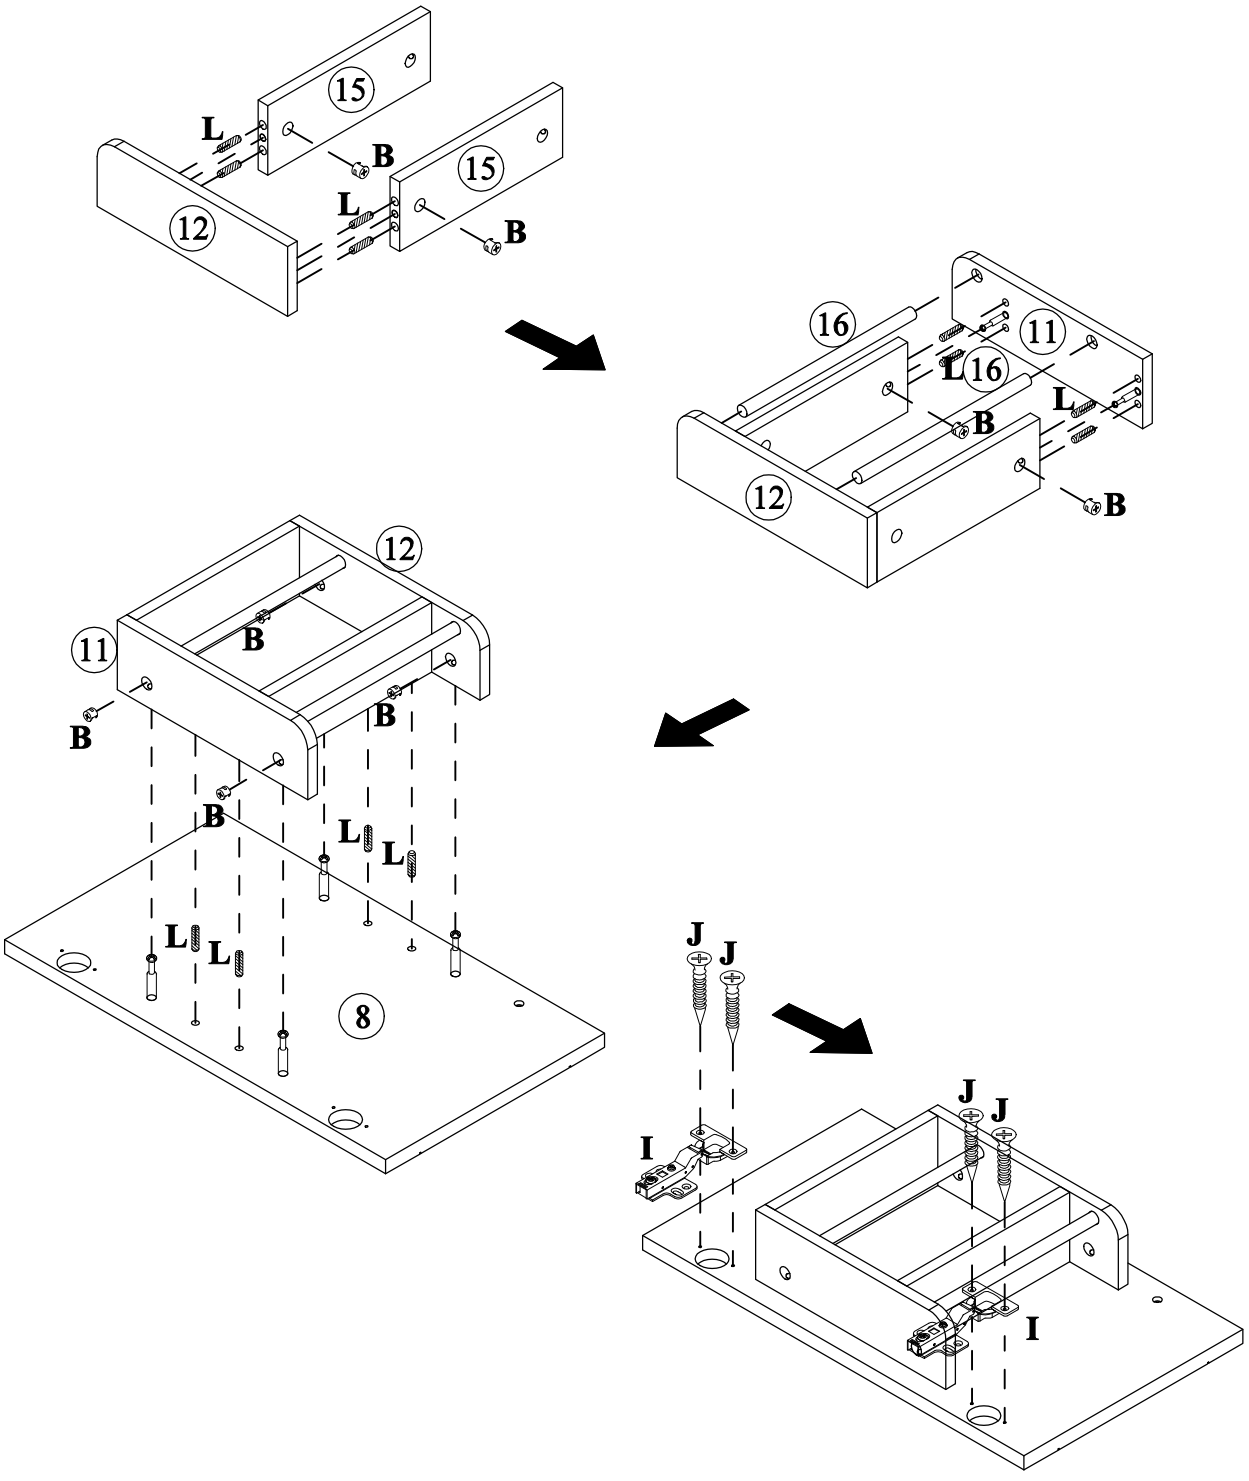


STEP: 7

B	L	I	J
8PCS	12PCS	2PCS	4PCS

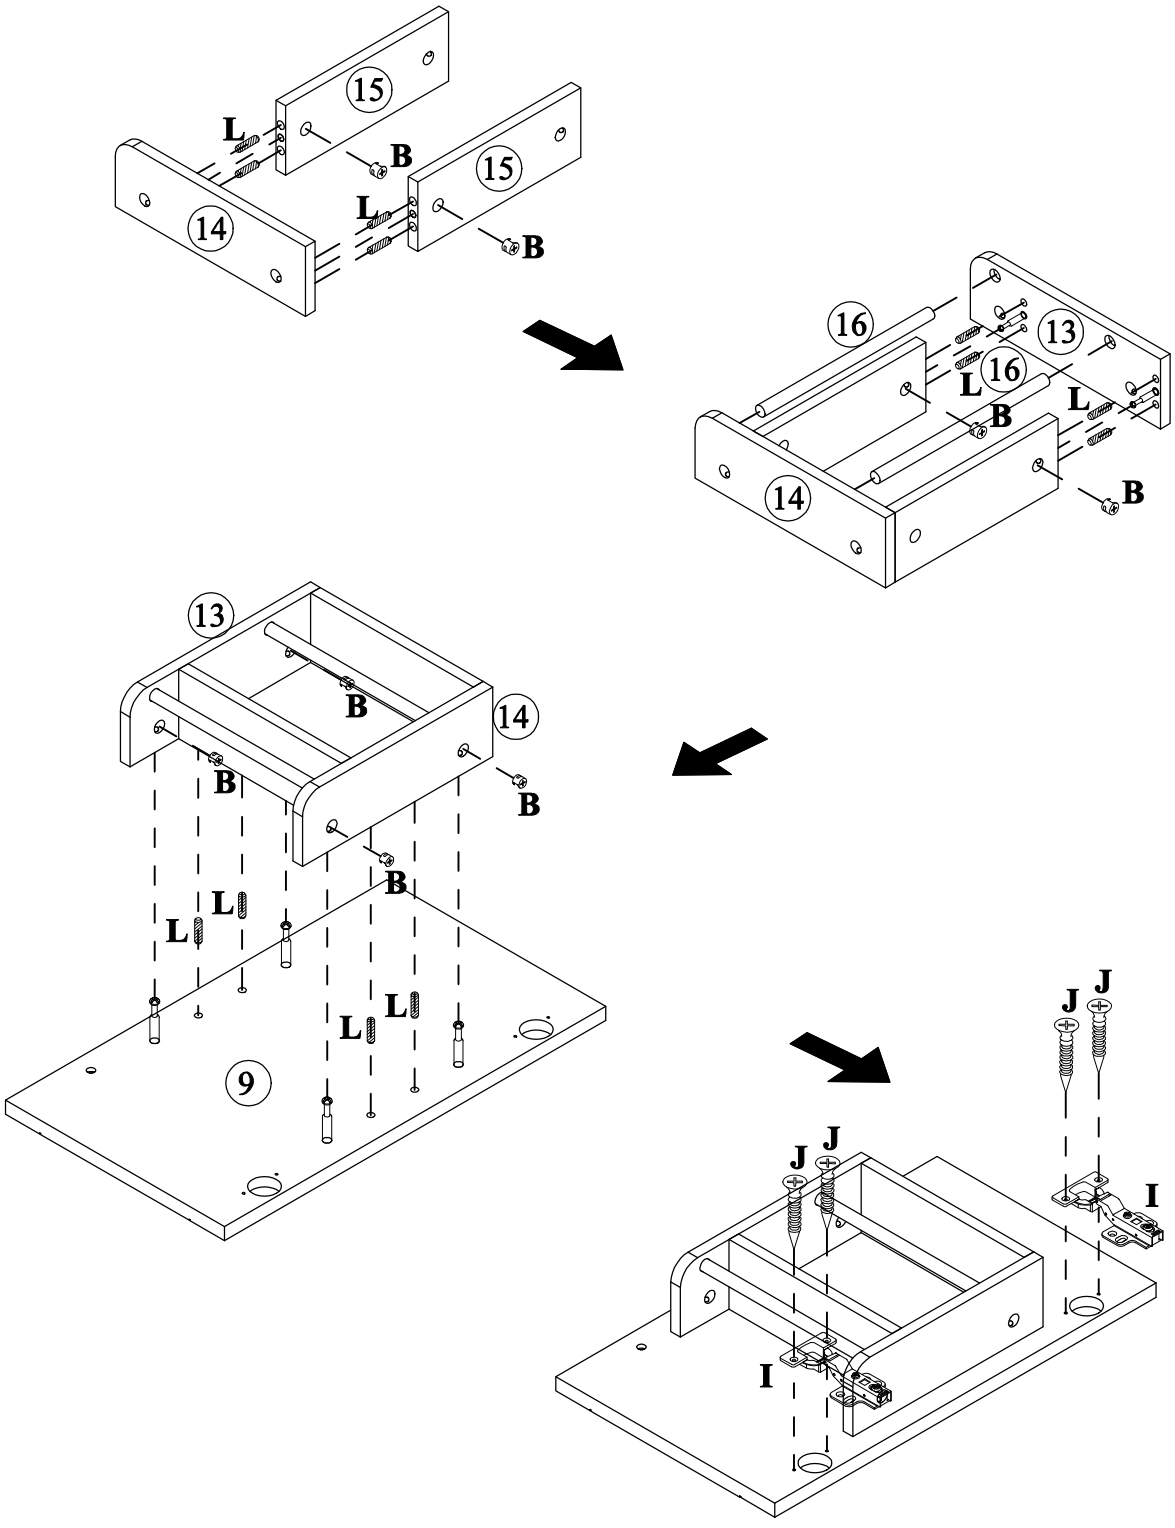


STEP: 8

A	B	M
		
2PCS	2PCS	2PCS

STEP: 9

C

3PCS

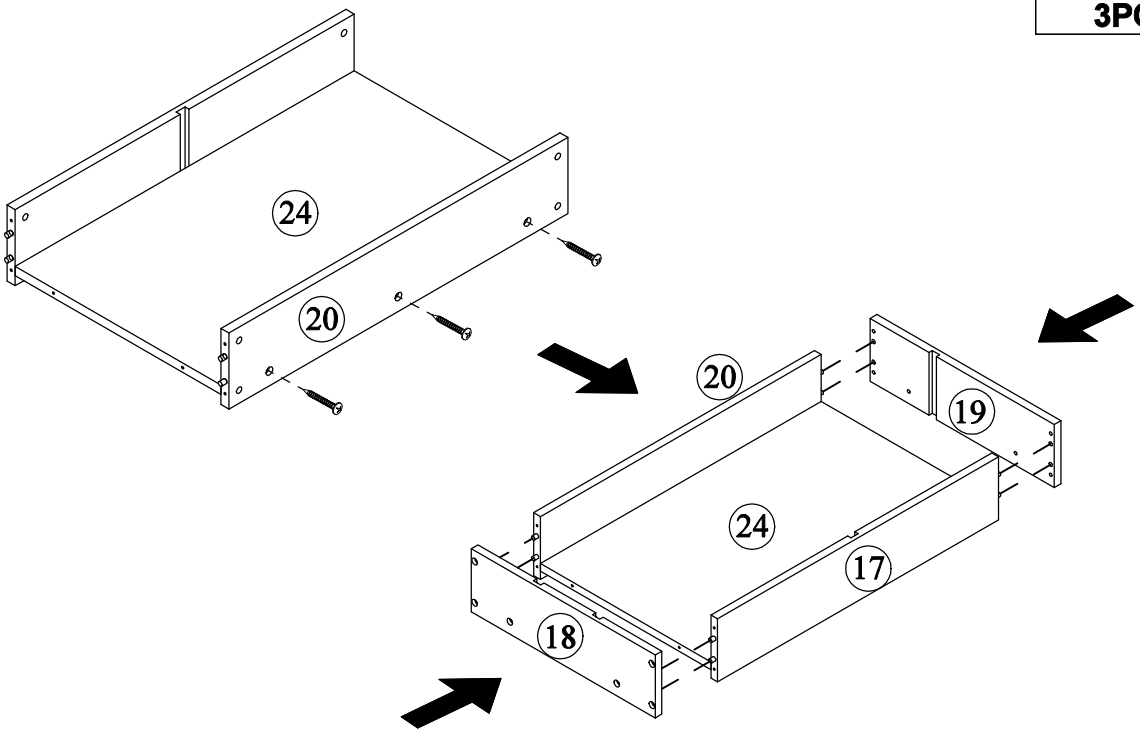



STEP: 10

C




12PCS

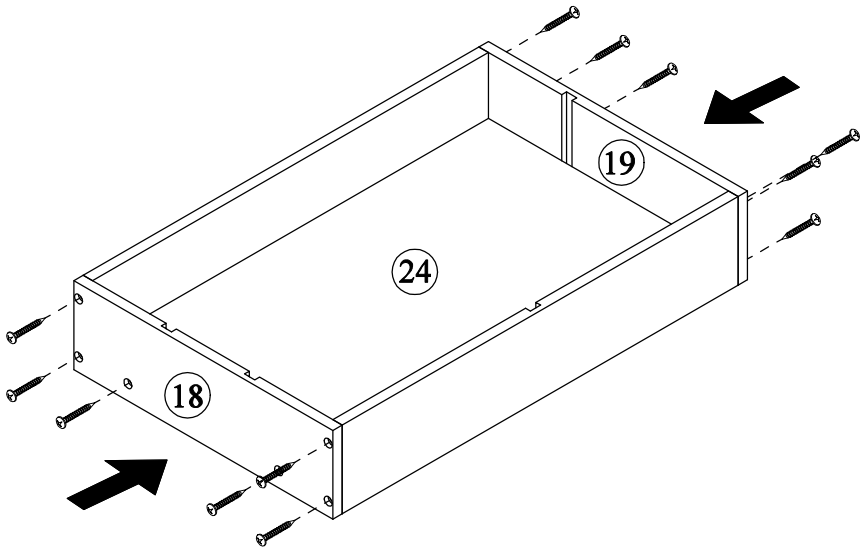

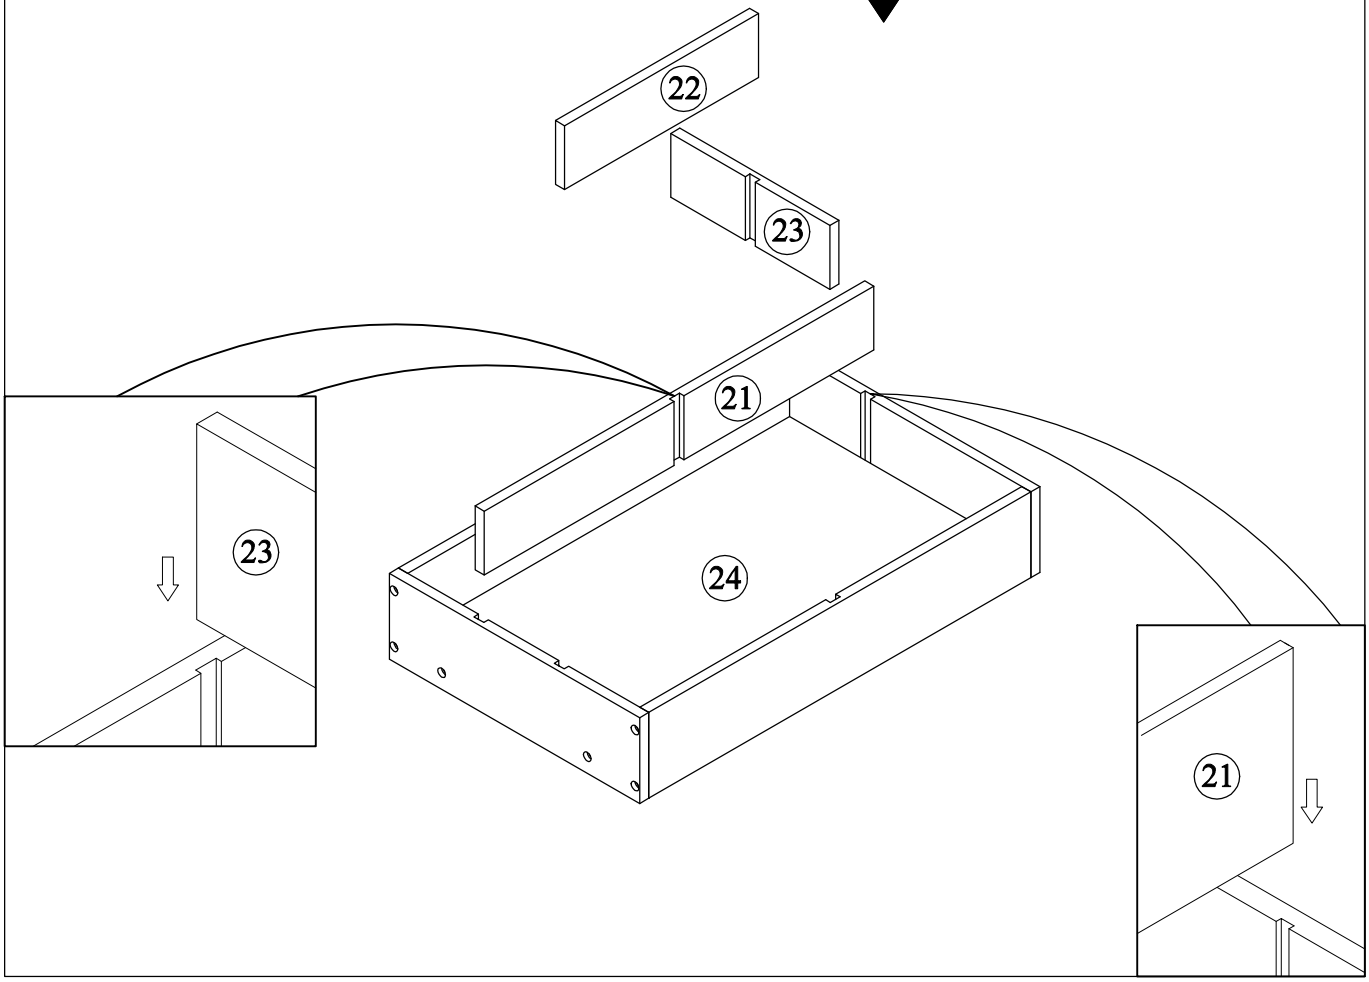


STEP: 11

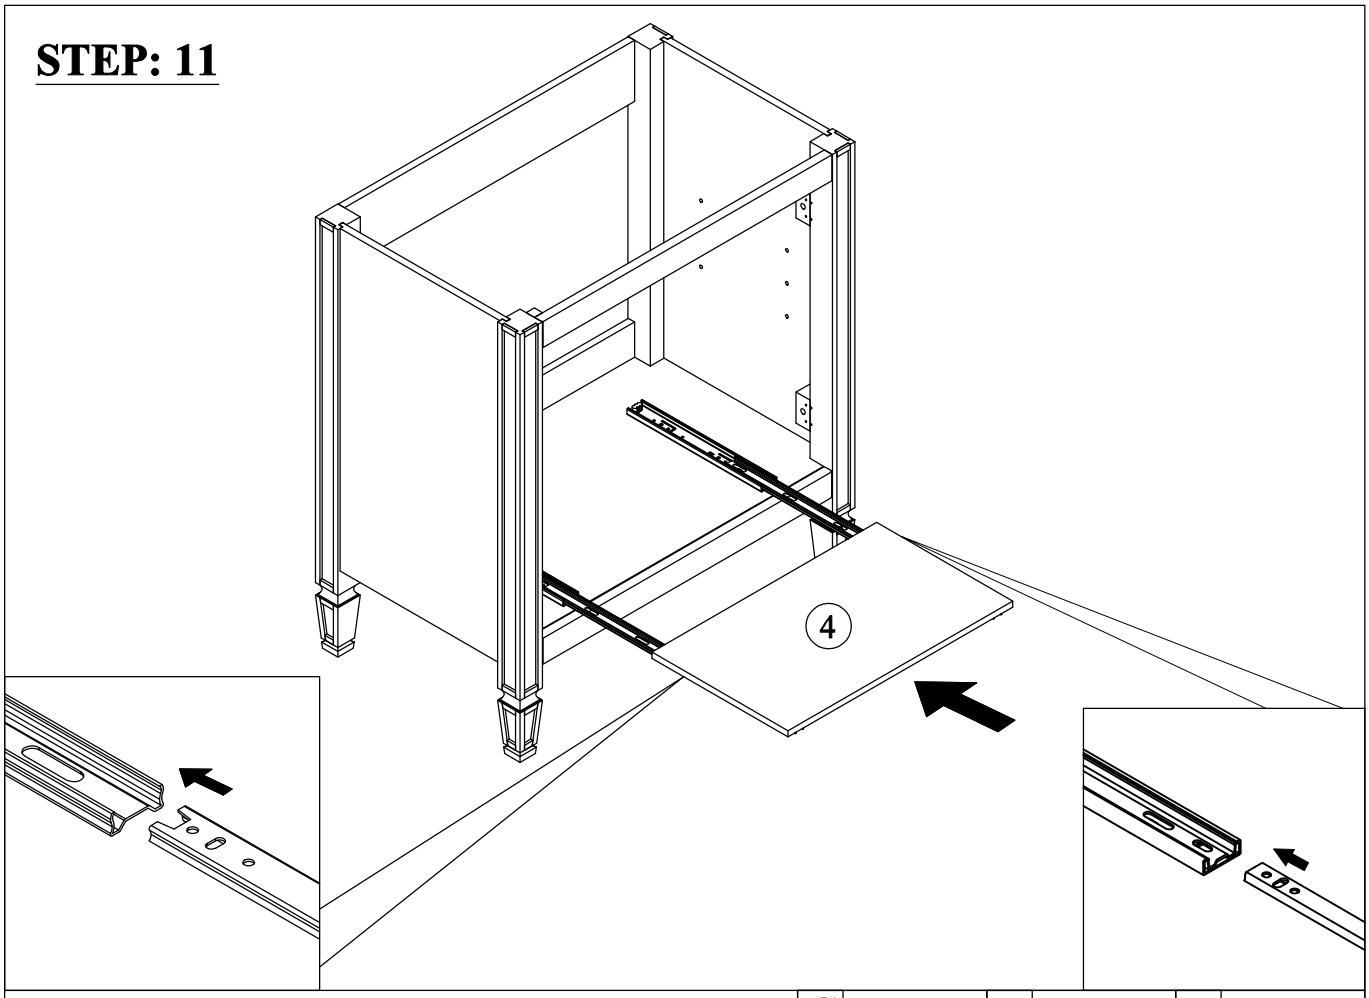


G	H	J
2PCS	2PCS	16PCS


STEP: 12

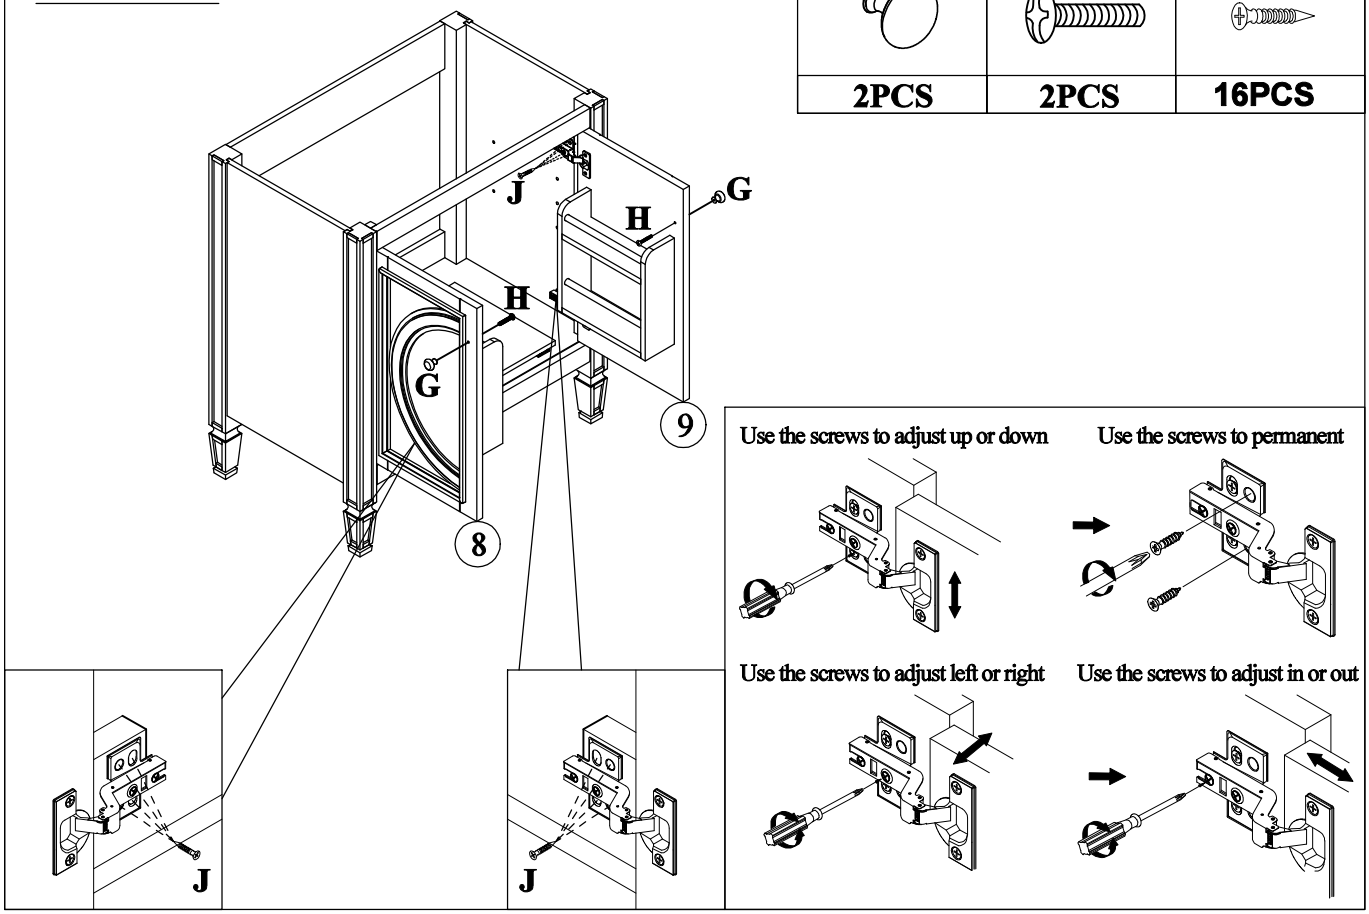


STEP: 13

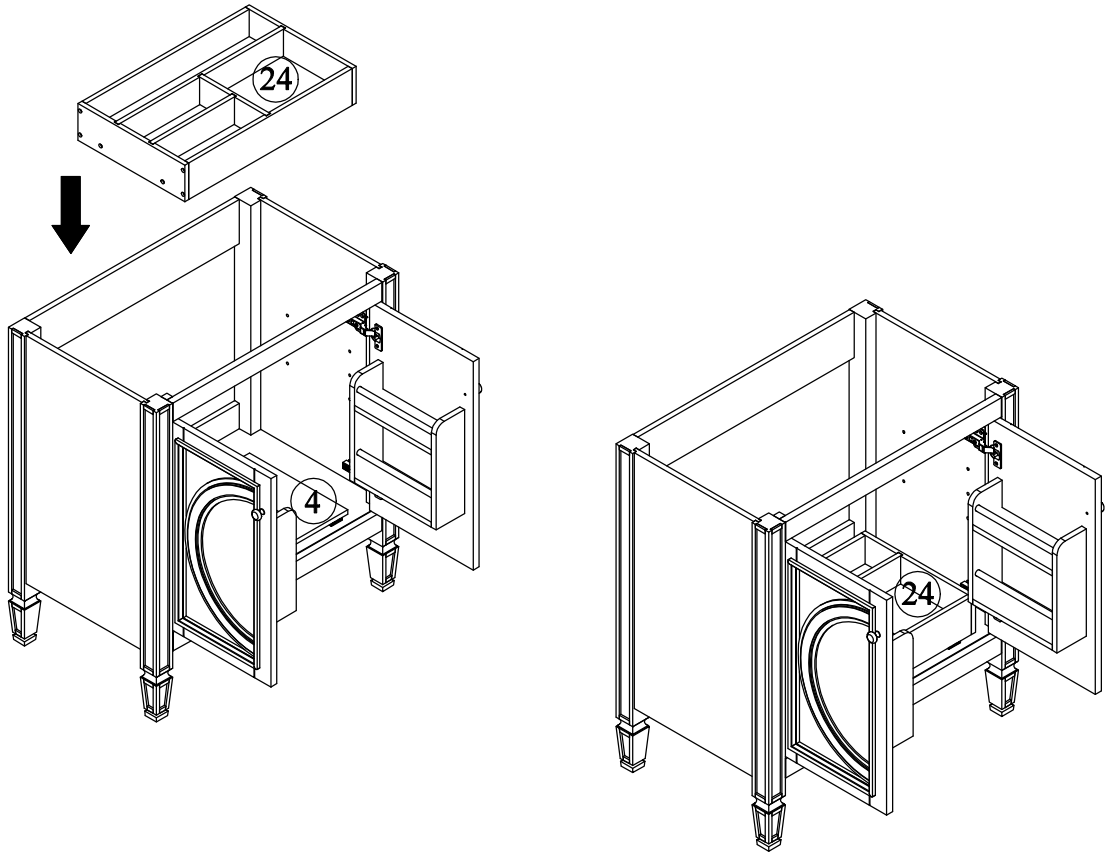



STEP: 14

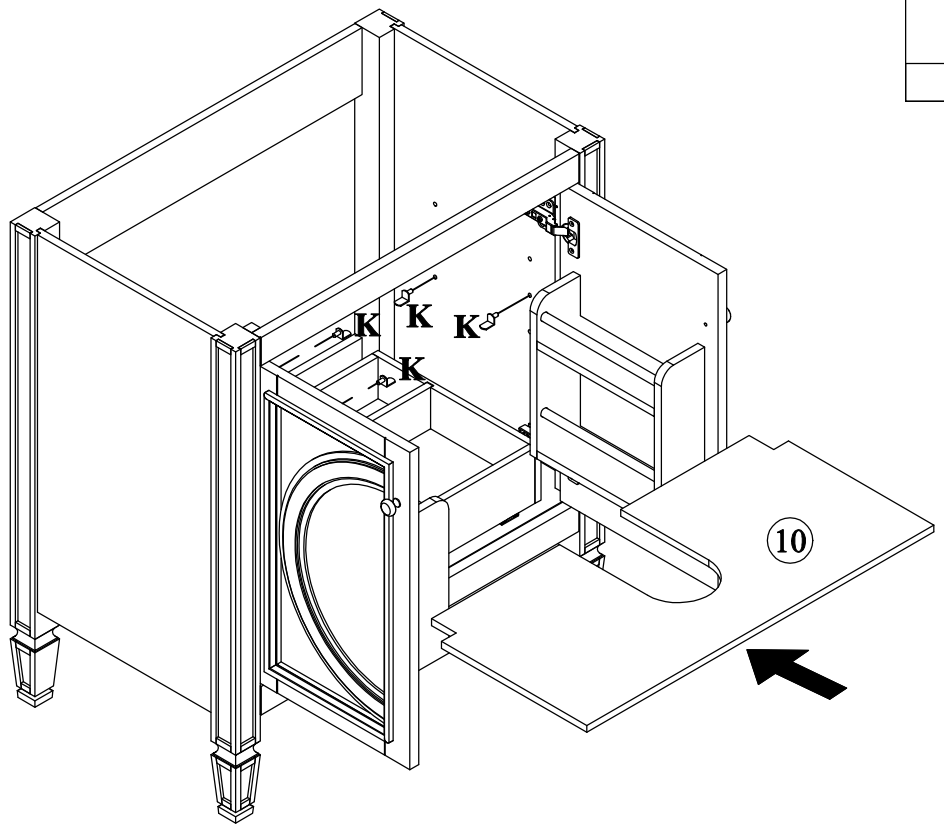

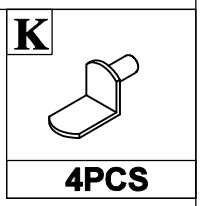


STEP: 15

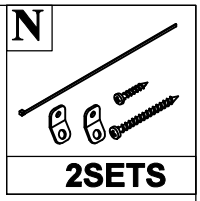

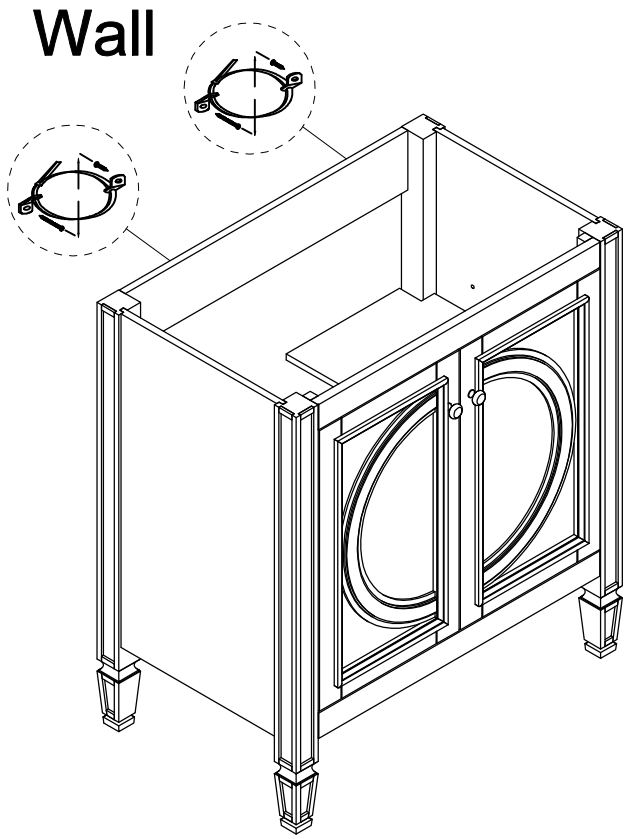


STEP: 16

Install the sink on the cabinet with glue.
Let stand for 24 hours

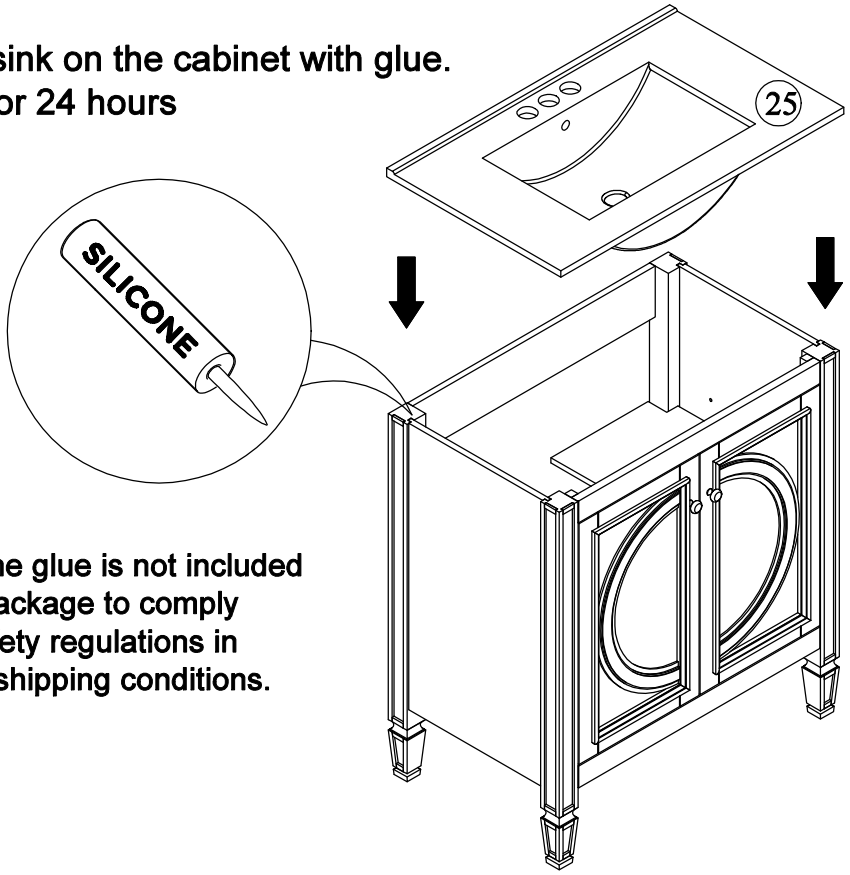


*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP: 17

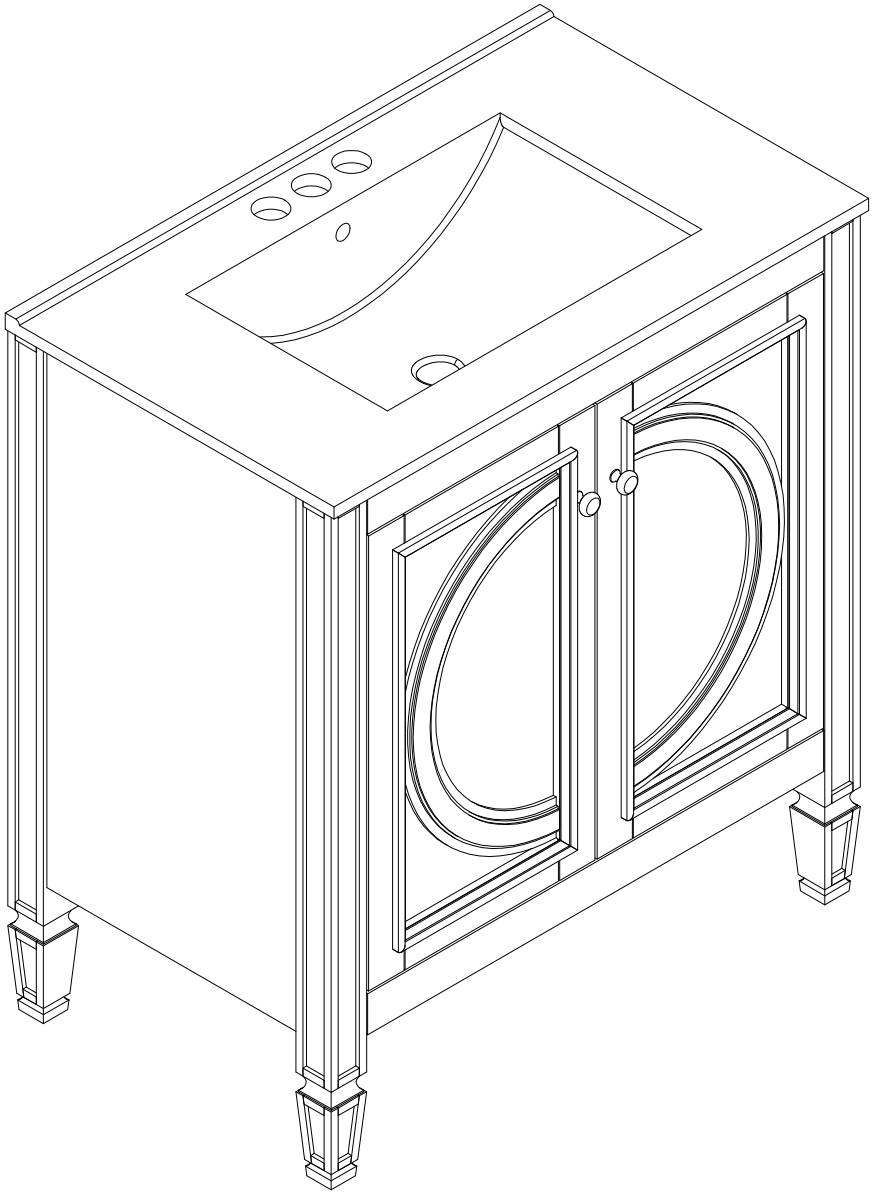




HINGE ADJUSTMENTS

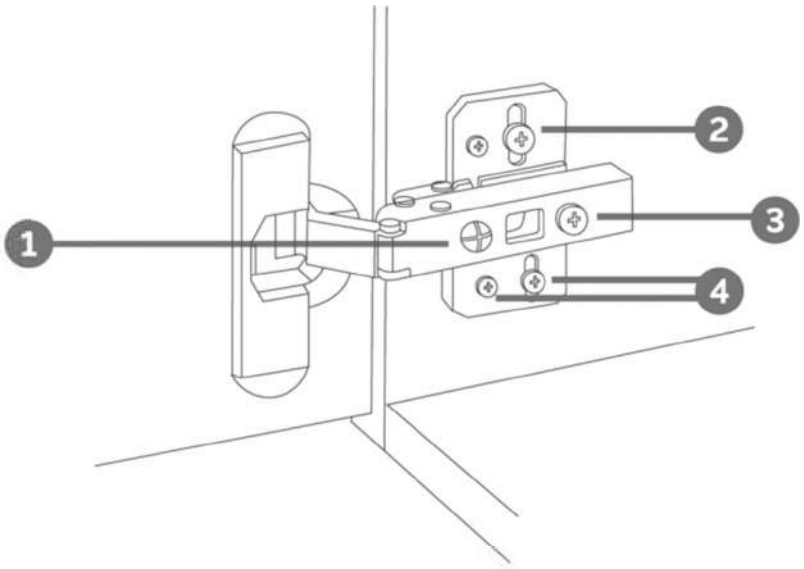


1 Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

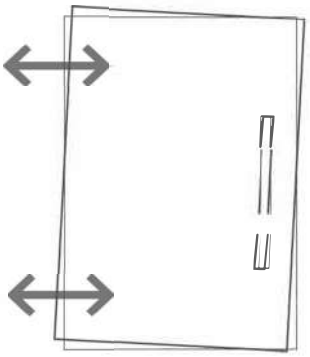

2 4 Height adjustment

While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

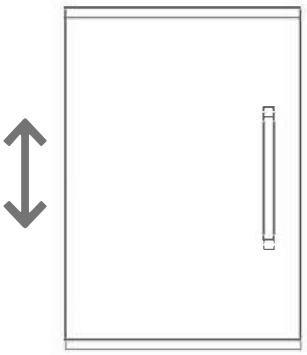

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw
clockwise to decrease the gap between the door and the cabinet
anticlockwise to increase the gap between the door and the cabinet

