

Instruction Manual

Please save this manual for future reference.

Product Name:	3-Door Rattan Light Oak Finish Wood Sideboard Cabinet




Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from the packaging inside the carton to ensure there are no missing or damaged parts. Do not attempt to assemble or use the product if any parts are missing or damaged.

CARTON CONTENTS:

Hardware –



Ⓐ × 12 + 2	Ⓑ × 12 + 2	Ⓒ × 16 + 2	Ⓓ × 24 + 2	Ⓔ × 8 + 1
 M7×39		 M8×30	 M3.5×14	 M5×40
Ⓕ × 4	Ⓖ × 20 + 2	Ⓗ × 12 + 2	Ⓘ × 3	Ⓙ × 4
	 M4×14	 M3×16	 M4×19	
Ⓚ × 2	Ⓛ × 4	Ⓜ × 2	Ⓝ × 1	Ⓞ × 1
		 M4×30 M4×14		
Ⓟ × 2				
 M8×50				

Instruction Manual

Please save this manual for future reference.

Product Name:	3-Door Rattan Light Oak Finish Wood Sideboard Cabinet

Panels –

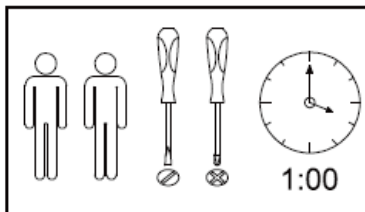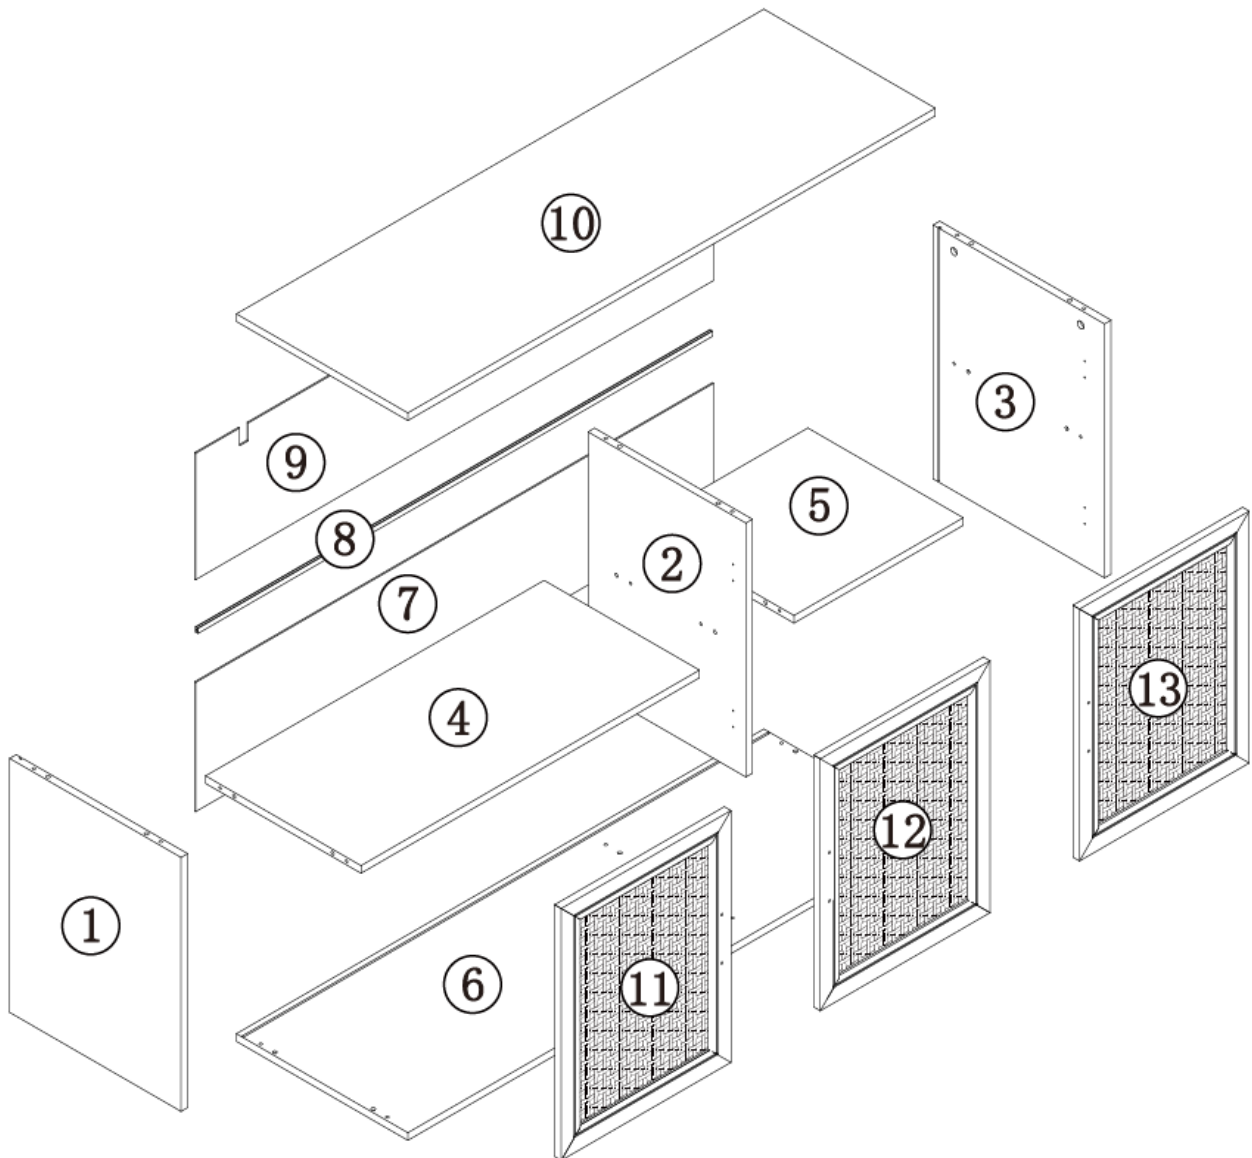











Tools required for assembly: Philips screwdriver and flathead screwdriver (if using power tools, use with care).

Instruction Manual

Please save this manual for future reference.

Product Name:	3-Door Rattan Light Oak Finish Wood Sideboard Cabinet

Panels –

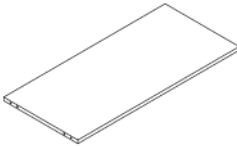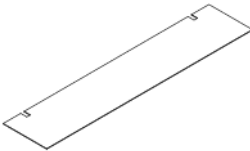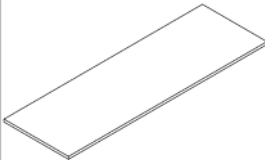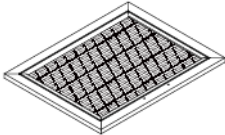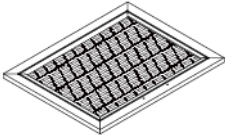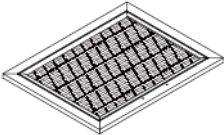① × 1	② × 1	③ × 1	④ × 1	⑤ × 1
				
⑥ × 1	⑦ × 1	⑧ × 1	⑨ × 1	⑩ × 1
				
⑪ × 1	⑫ × 1	⑬ × 1		
				

Instruction Manual


Please save this manual for future reference.

Product Name:	3-Door Rattan Light Oak Finish Wood Sideboard Cabinet

ASSEMBLY INSTRUCTIONS:

Step 1: Install and tighten hardware A until the shoulder is flush with panels 1, 2, and 3.

Ⓐ × 6

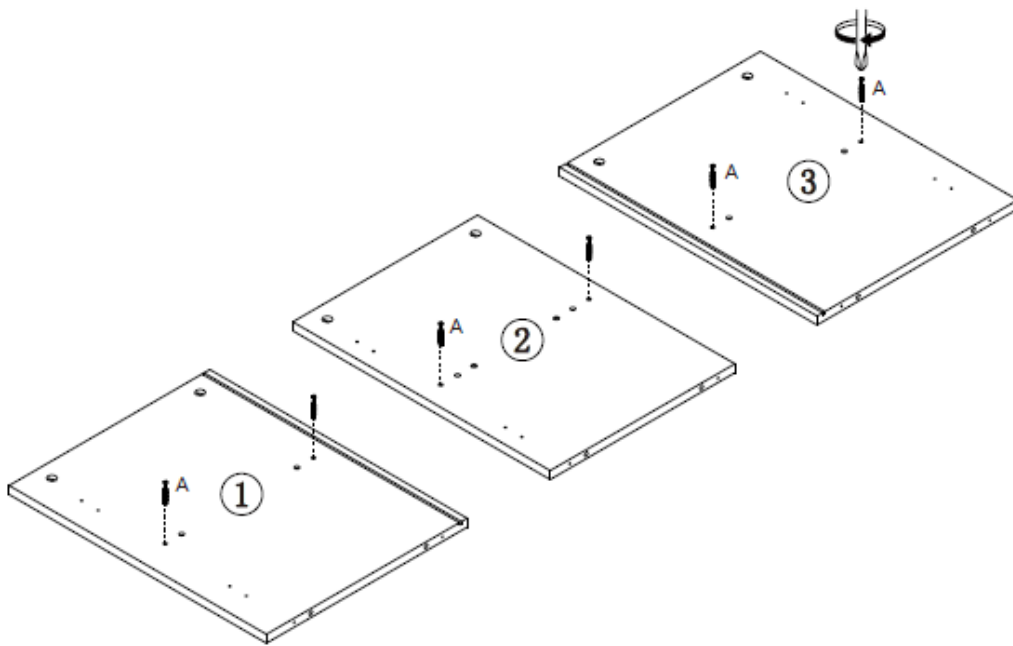


Instruction Manual

Please save this manual for future reference.

Product Name:	3-Door Rattan Light Oak Finish Wood Sideboard Cabinet

Step 2: Connect panel 4 to panels 1 and 2 using hardware C and P and B and E.

Ⓑ × 2	Ⓒ × 2	Ⓔ × 2	Ⓟ × 2
			

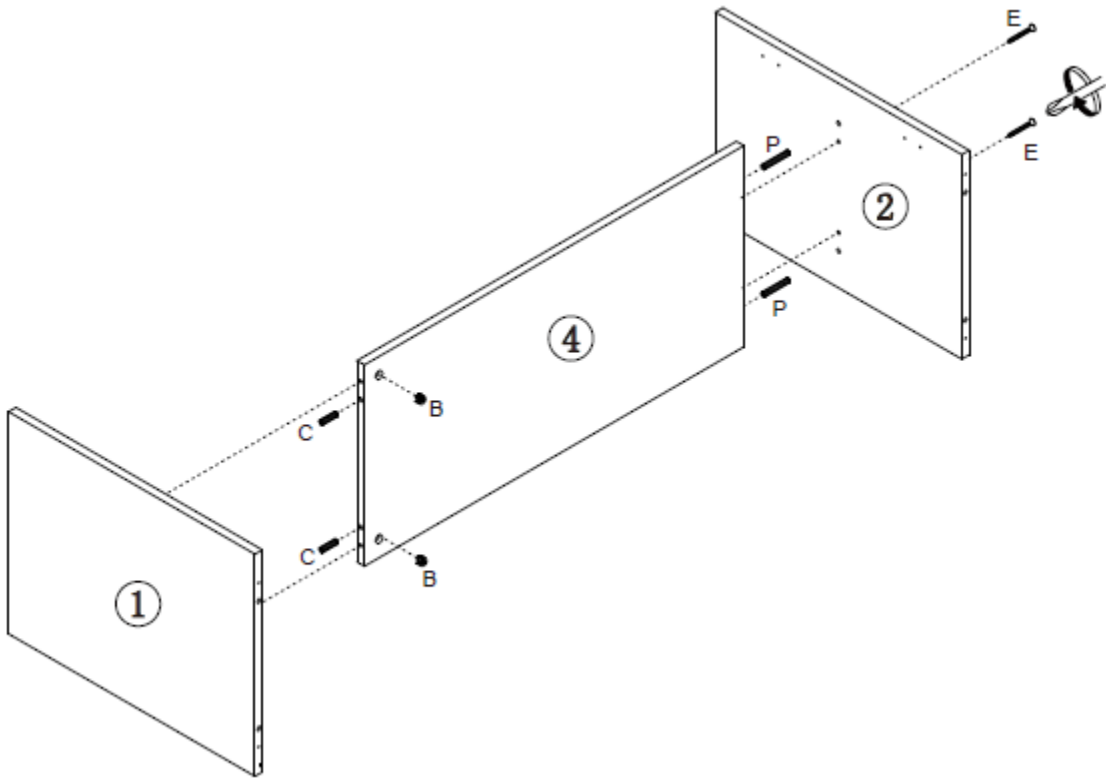


Instruction Manual

Please save this manual for future reference.

Product Name:	3-Door Rattan Light Oak Finish Wood Sideboard Cabinet

Step 3: Connect panel 5 to panels 2 and 3 using hardware C and B.

Ⓑ × 4	Ⓒ × 2
	

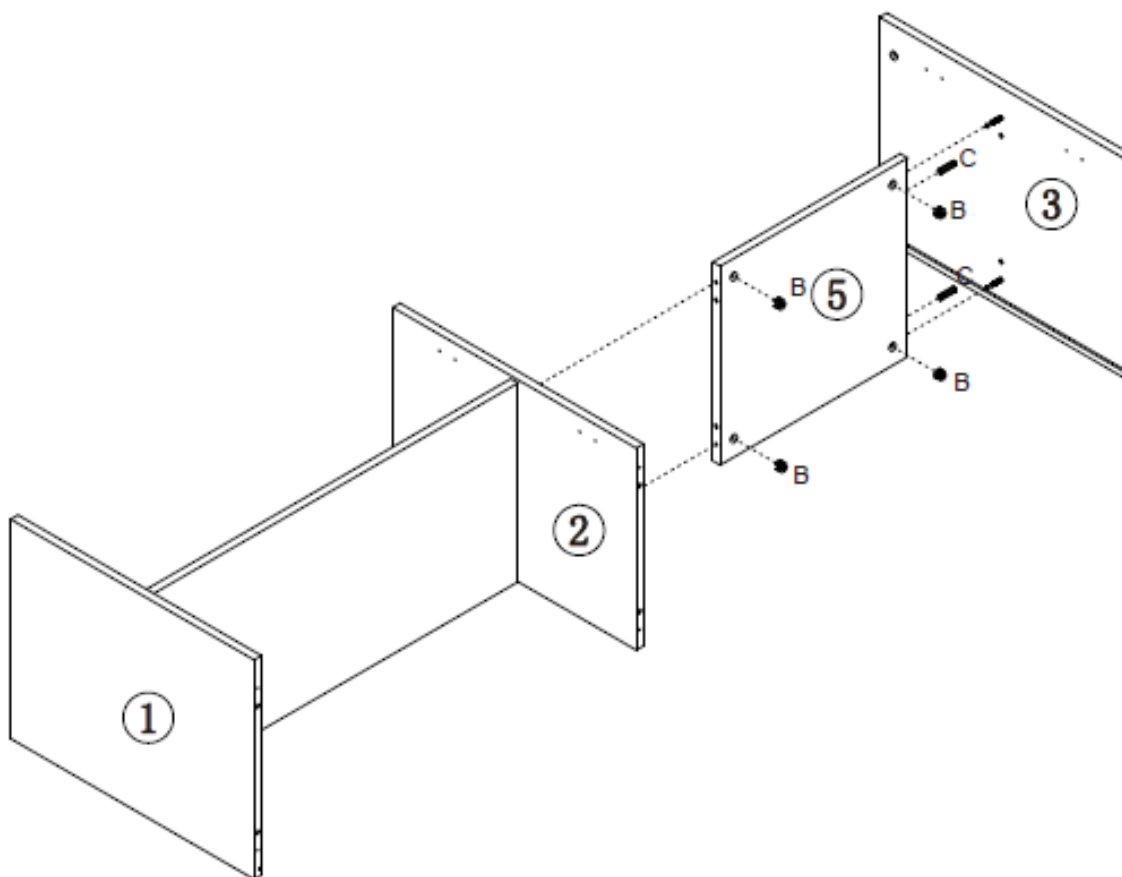


Instruction Manual

Please save this manual for future reference.

Product Name:	3-Door Rattan Light Oak Finish Wood Sideboard Cabinet

Step 4: Connect panel 6 to the assembled section (panels 1, 2, and 3) using hardware C and E.

Ⓒ × 6	Ⓔ × 6
	

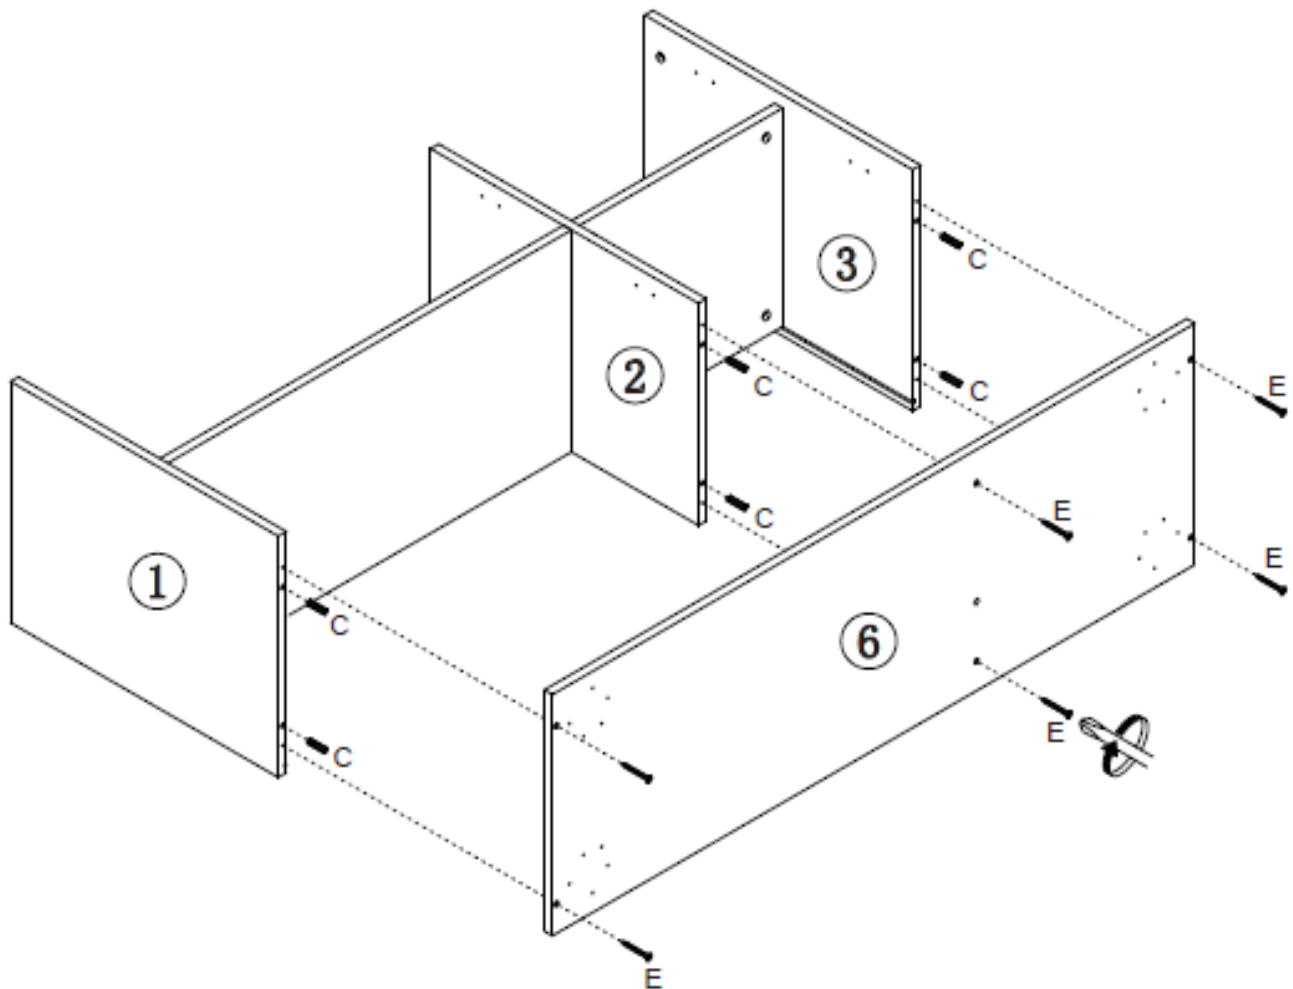


Instruction Manual

Please save this manual for future reference.

Product Name:	3-Door Rattan Light Oak Finish Wood Sideboard Cabinet

Step 5: Install hardware F to panel 6 using hardware G.

Ⓕ × 4	Ⓖ × 20
	

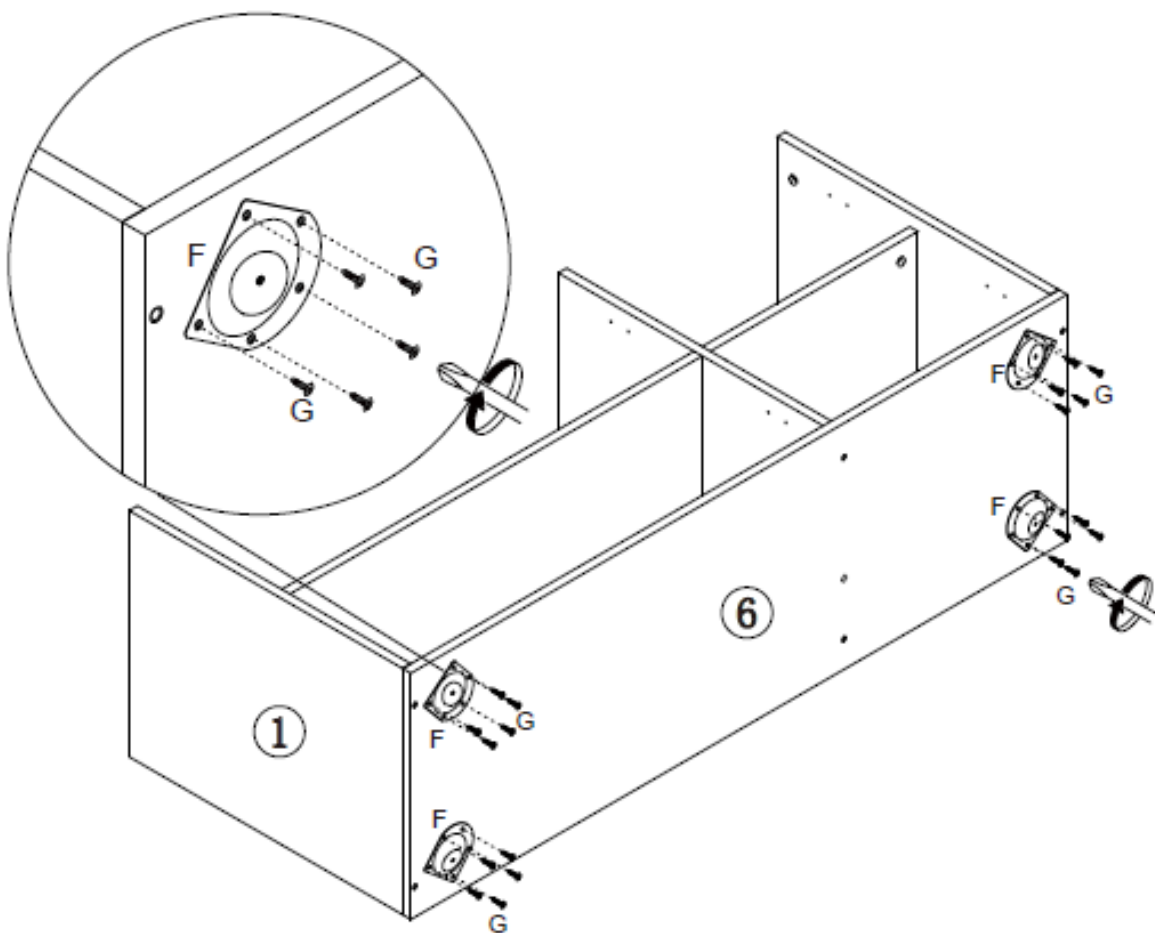


Instruction Manual

Please save this manual for future reference.

Product Name:	3-Door Rattan Light Oak Finish Wood Sideboard Cabinet

Step 6: Attach the cabinet legs L to the four corners of panel 6 by screwing it into hardware F. Screw center leg N directly to panel 6. Do not over-tighten to prevent cracking or stripping. Add hardware O to Leg N (screw it on until secure).

Ⓛ × 4	Ⓝ × 1	Ⓞ × 1
		

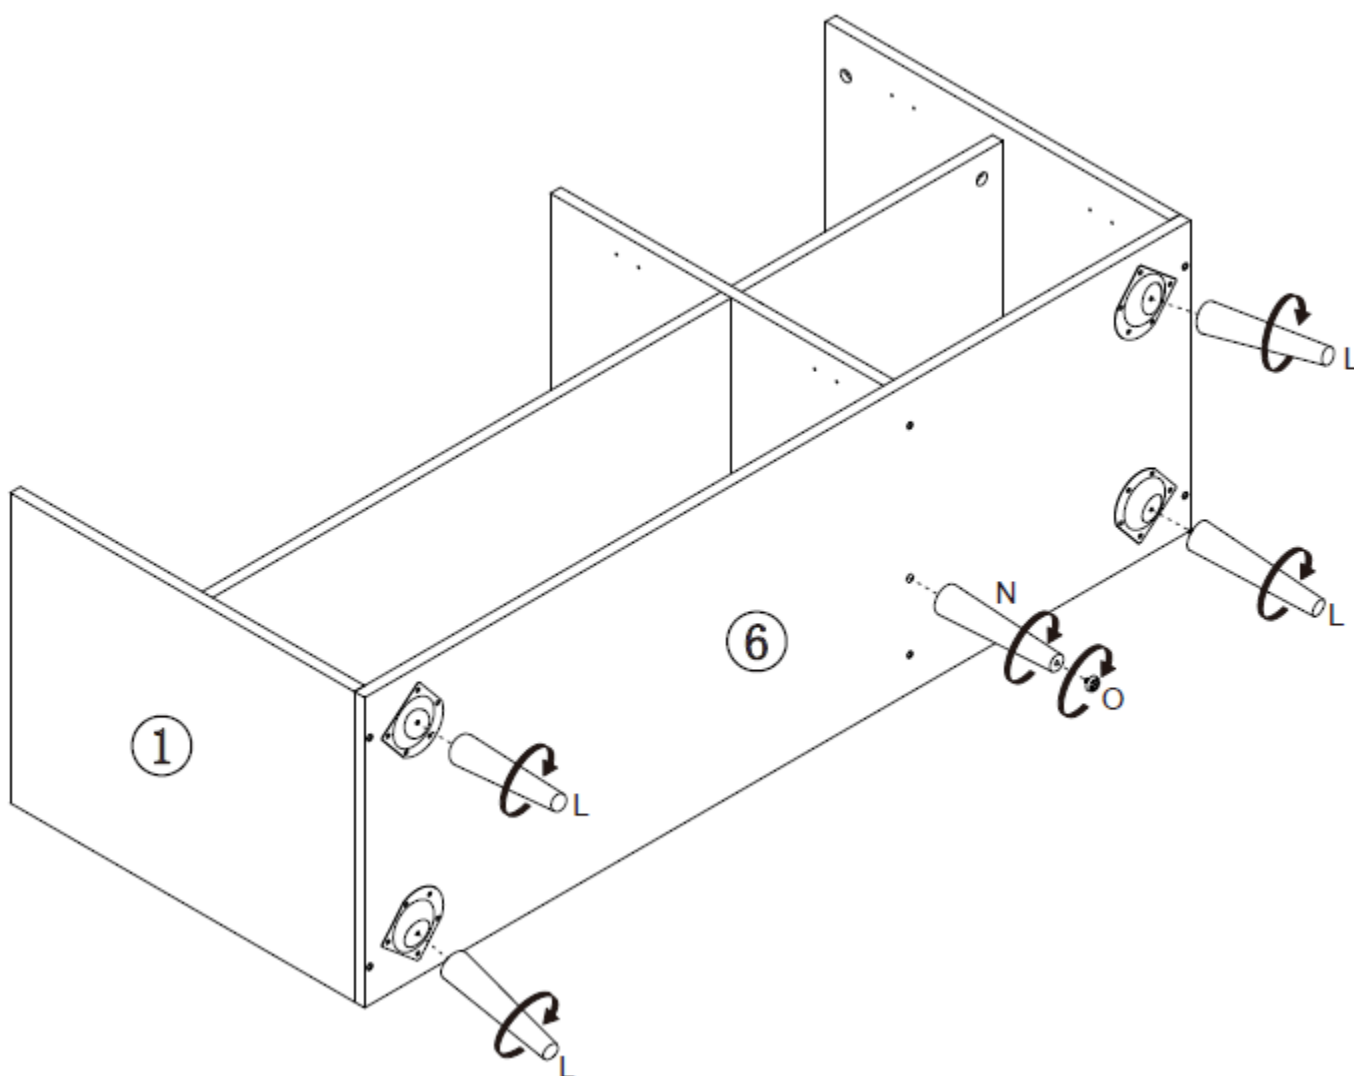

Instruction Manual

Please save this manual for future reference.


Product Name:	3-Door Rattan Light Oak Finish Wood Sideboard Cabinet

Step 7: Carefully flip the cabinet right side up.

Connect panels 7 and 9 to slim panel 8 (the center of the assembled back panel). Then slide the assembled back panel into the grooves of panels 1 and 3. Insert hardware C into panels 1, 2, and 3 (holes in the top of each panel).

THIS STEP TO BE ACCOMPLISHED
BY TWO PERSONS

Ⓒ × 6

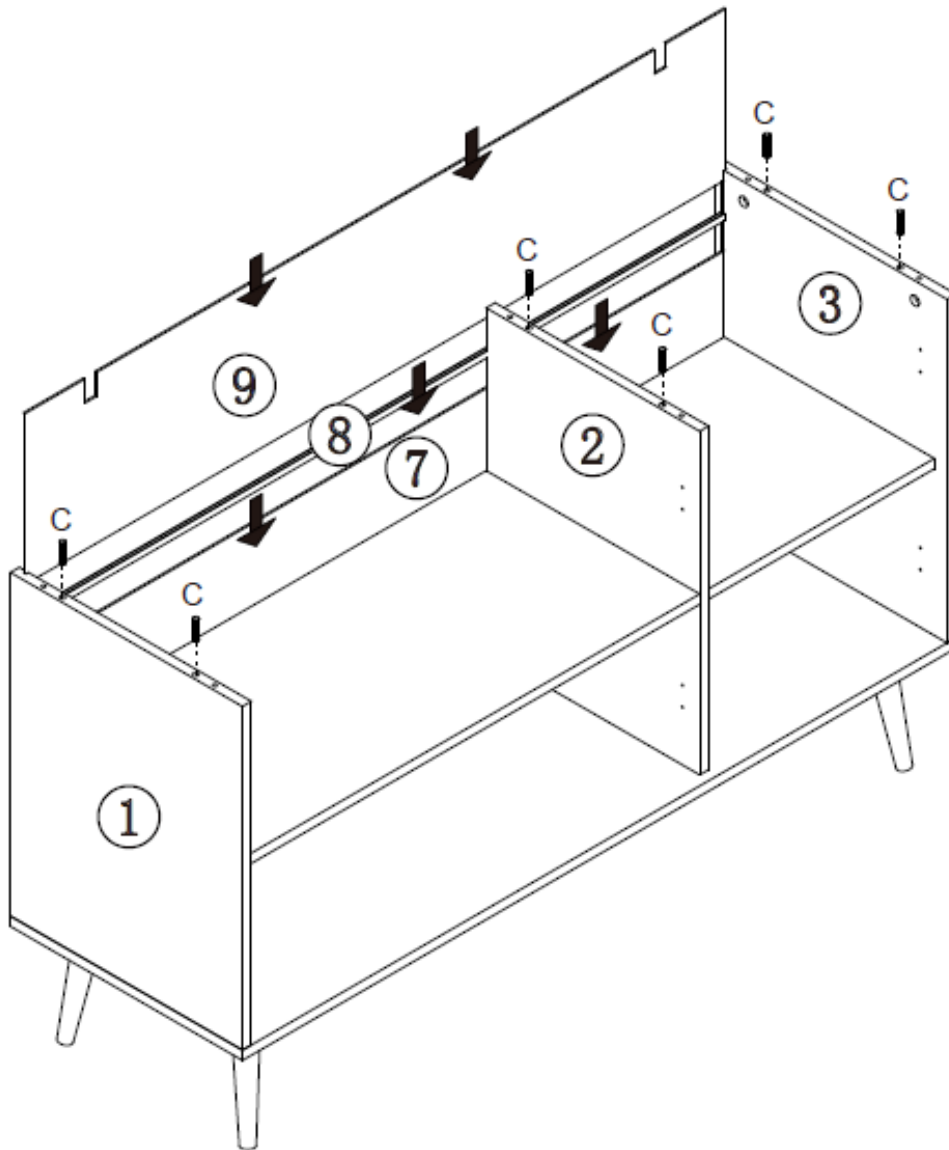


Instruction Manual

Please save this manual for future reference.

Product Name:	3-Door Rattan Light Oak Finish Wood Sideboard Cabinet

Step 8: Install and tighten hardware A until the shoulder is flush with the underside of panel 10. Install hardware M bracket using hardware A into panel 10.

Ⓐ × 6	Ⓜ × 2
	

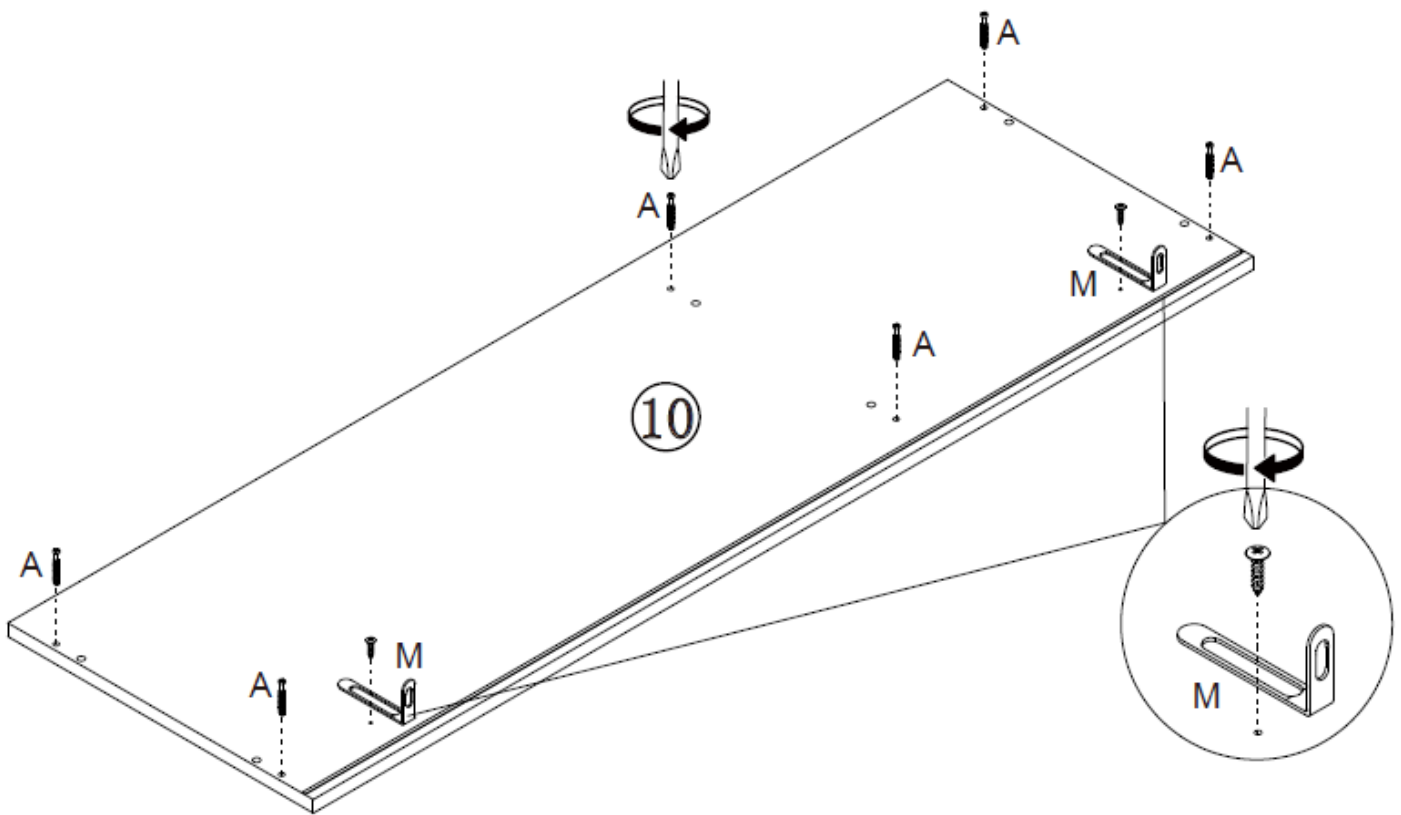

Instruction Manual

Please save this manual for future reference.


Product Name:	3-Door Rattan Light Oak Finish Wood Sideboard Cabinet

Step 9: Attach panel 10 to the assembled section of panels 1, 2, and 3 using hardware B.

Ⓑ × 6



THIS STEP TO BE ACCOMPLISHED
BY TWO PERSONS


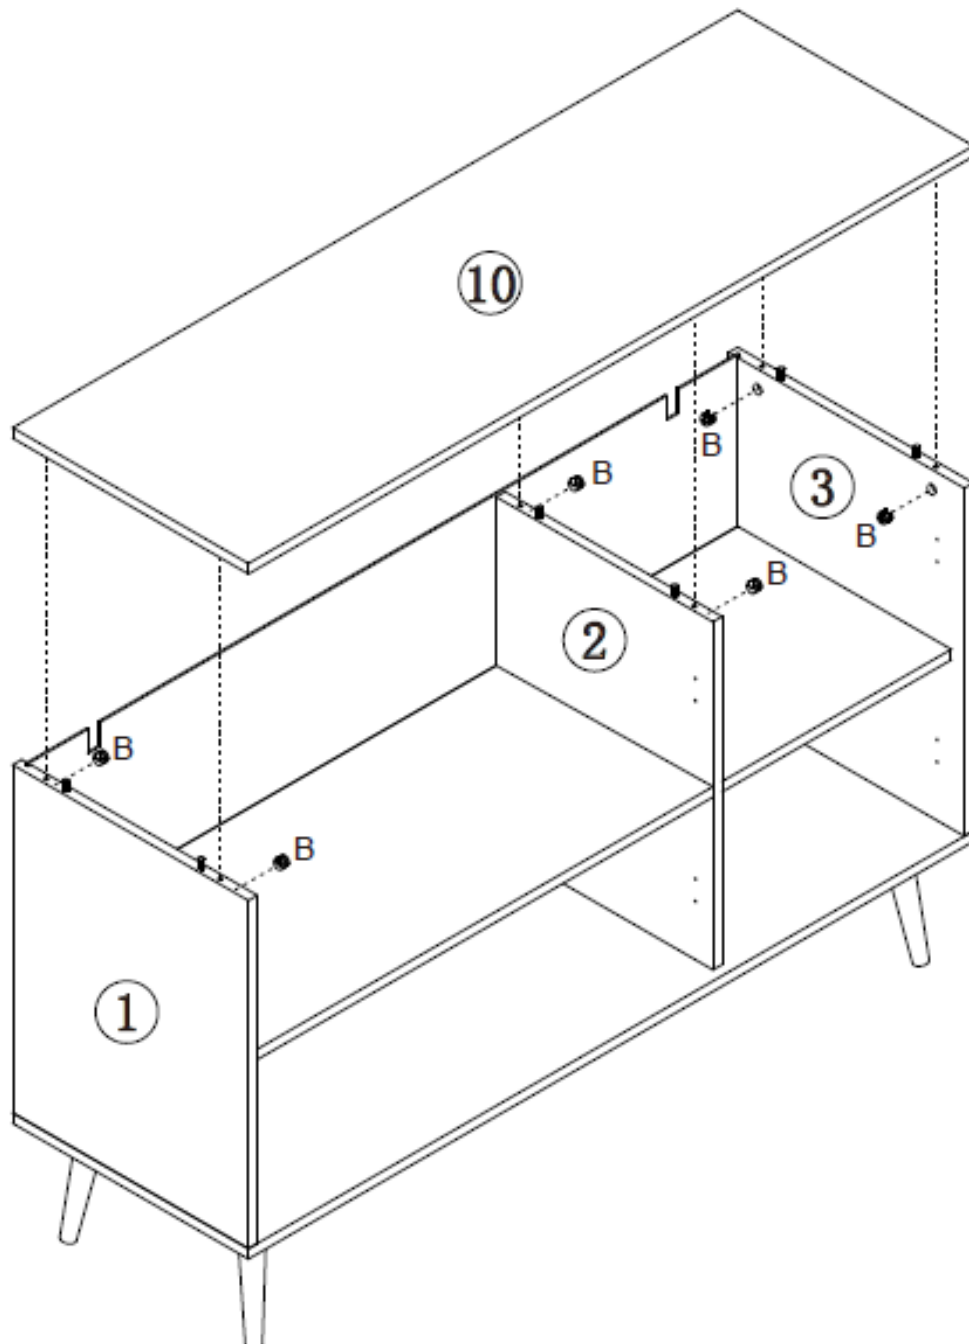


Instruction Manual

Please save this manual for future reference.

Product Name:	3-Door Rattan Light Oak Finish Wood Sideboard Cabinet

Step 10: To stabilize the cabinet body, lock hardware H on the back of panels 9 and 7 in 12 places with the screw in hardware H.

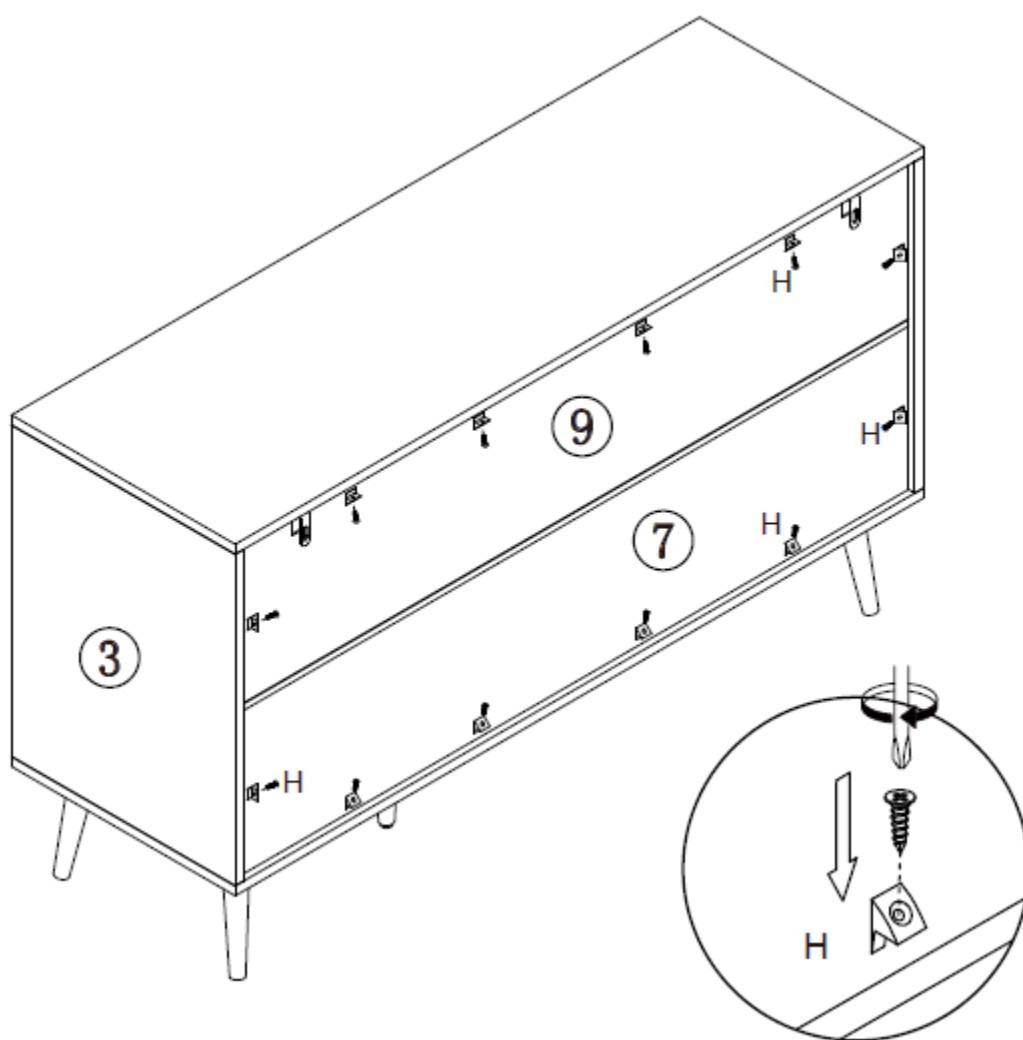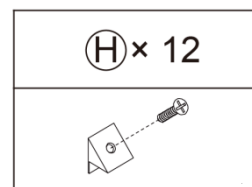


Instruction Manual

Please save this manual for future reference.

Product Name:	3-Door Rattan Light Oak Finish Wood Sideboard Cabinet

Step 11: Assemble the hardware to cabinet doors 11 (x 2) and 12. Install hardware J to doors 11 (x 2) and 12 using hardware D. Then install hardware I to doors 11 (x 2) and 12 with the screws in hardware I.

Ⓓ × 12	Ⓙ × 4	Ⓚ × 2	Ⓛ × 3
			


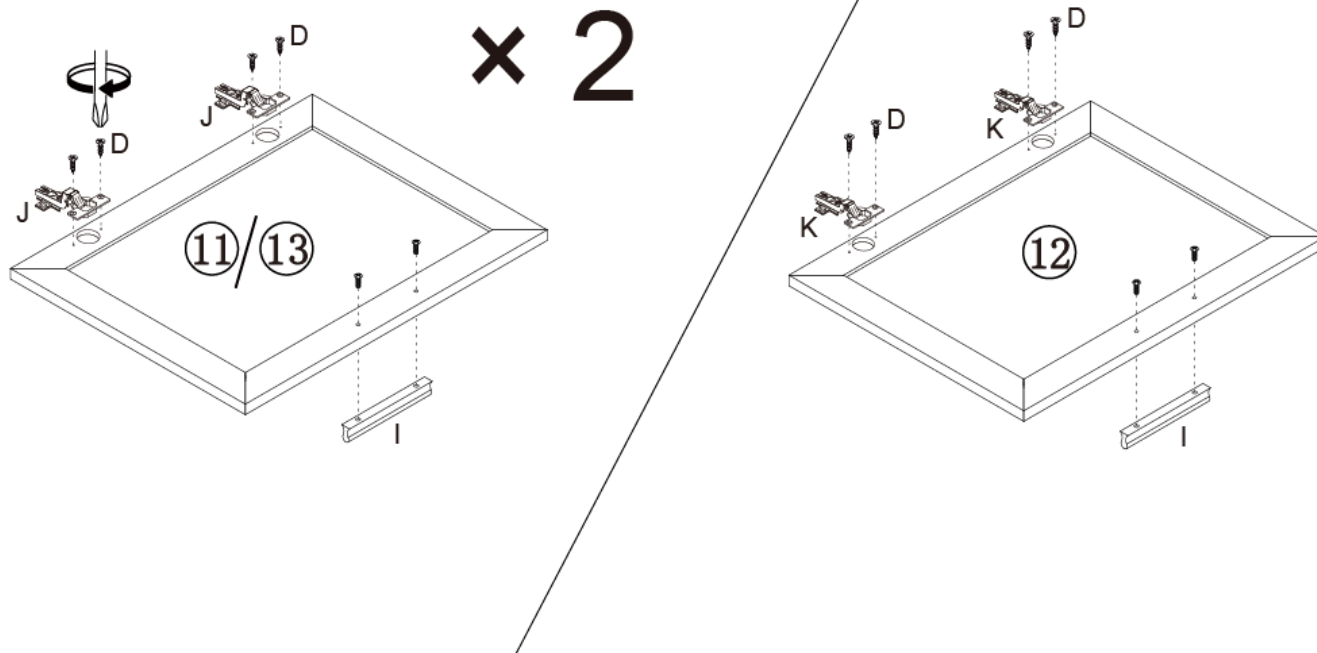


Instruction Manual

Please save this manual for future reference.

Product Name:	3-Door Rattan Light Oak Finish Wood Sideboard Cabinet

Step 12: Attach one of the doors 11 to panel 1, and the other door 11 to panel 3 using hardware D. Attached door 12 to panel 2 using hardware D.

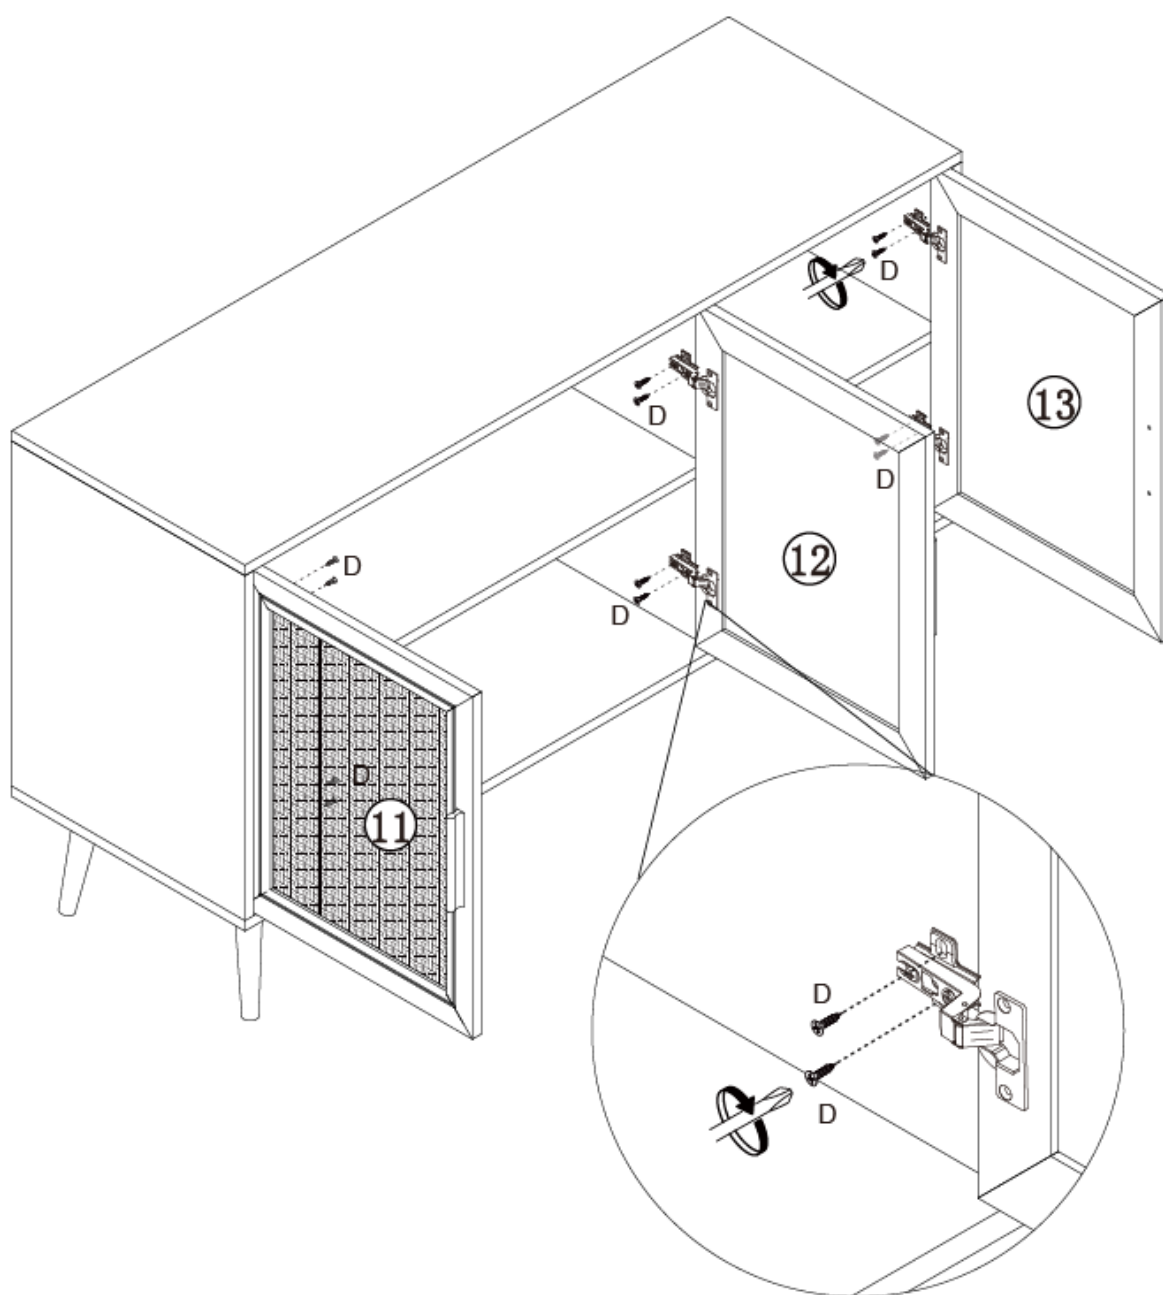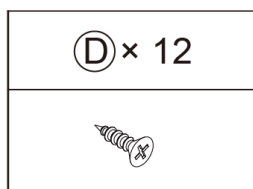


Instruction Manual

Please save this manual for future reference.


Product Name:	3-Door Rattan Light Oak Finish Wood Sideboard Cabinet

Tips:


Adjust the door up and down by loosening and tightening the screws in the vertical position.

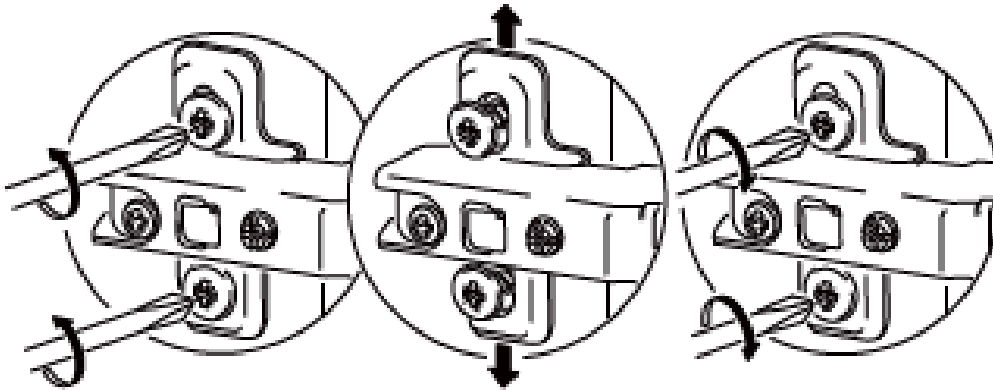

Adjust the door front and back with the left screw in the horizontal position.

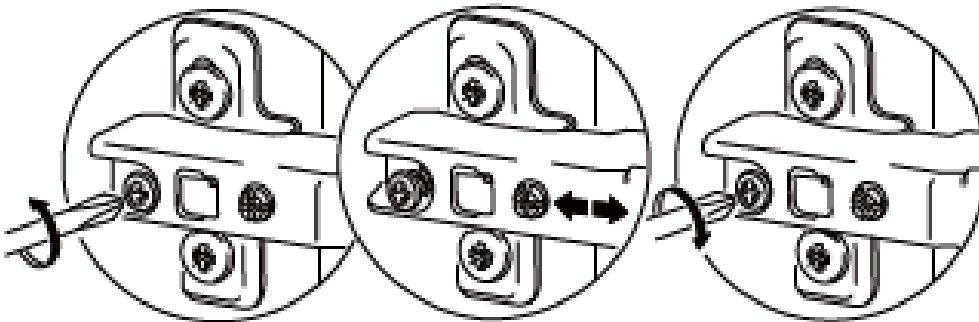

Adjust the door left and right with the right screw in the horizontal position.

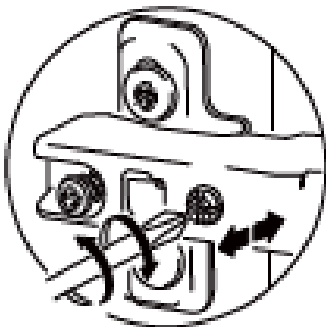

Instruction Manual

Please save this manual for future reference.

Product Name:	3-Door Rattan Light Oak Finish Wood Sideboard Cabinet

Step 13: For additional stability, secure the cabinet to the wall using the restraint kit included.

