
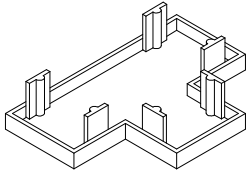
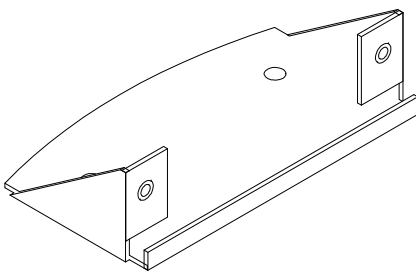
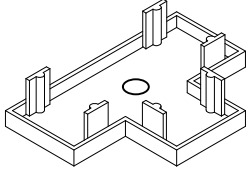
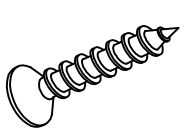
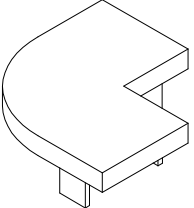
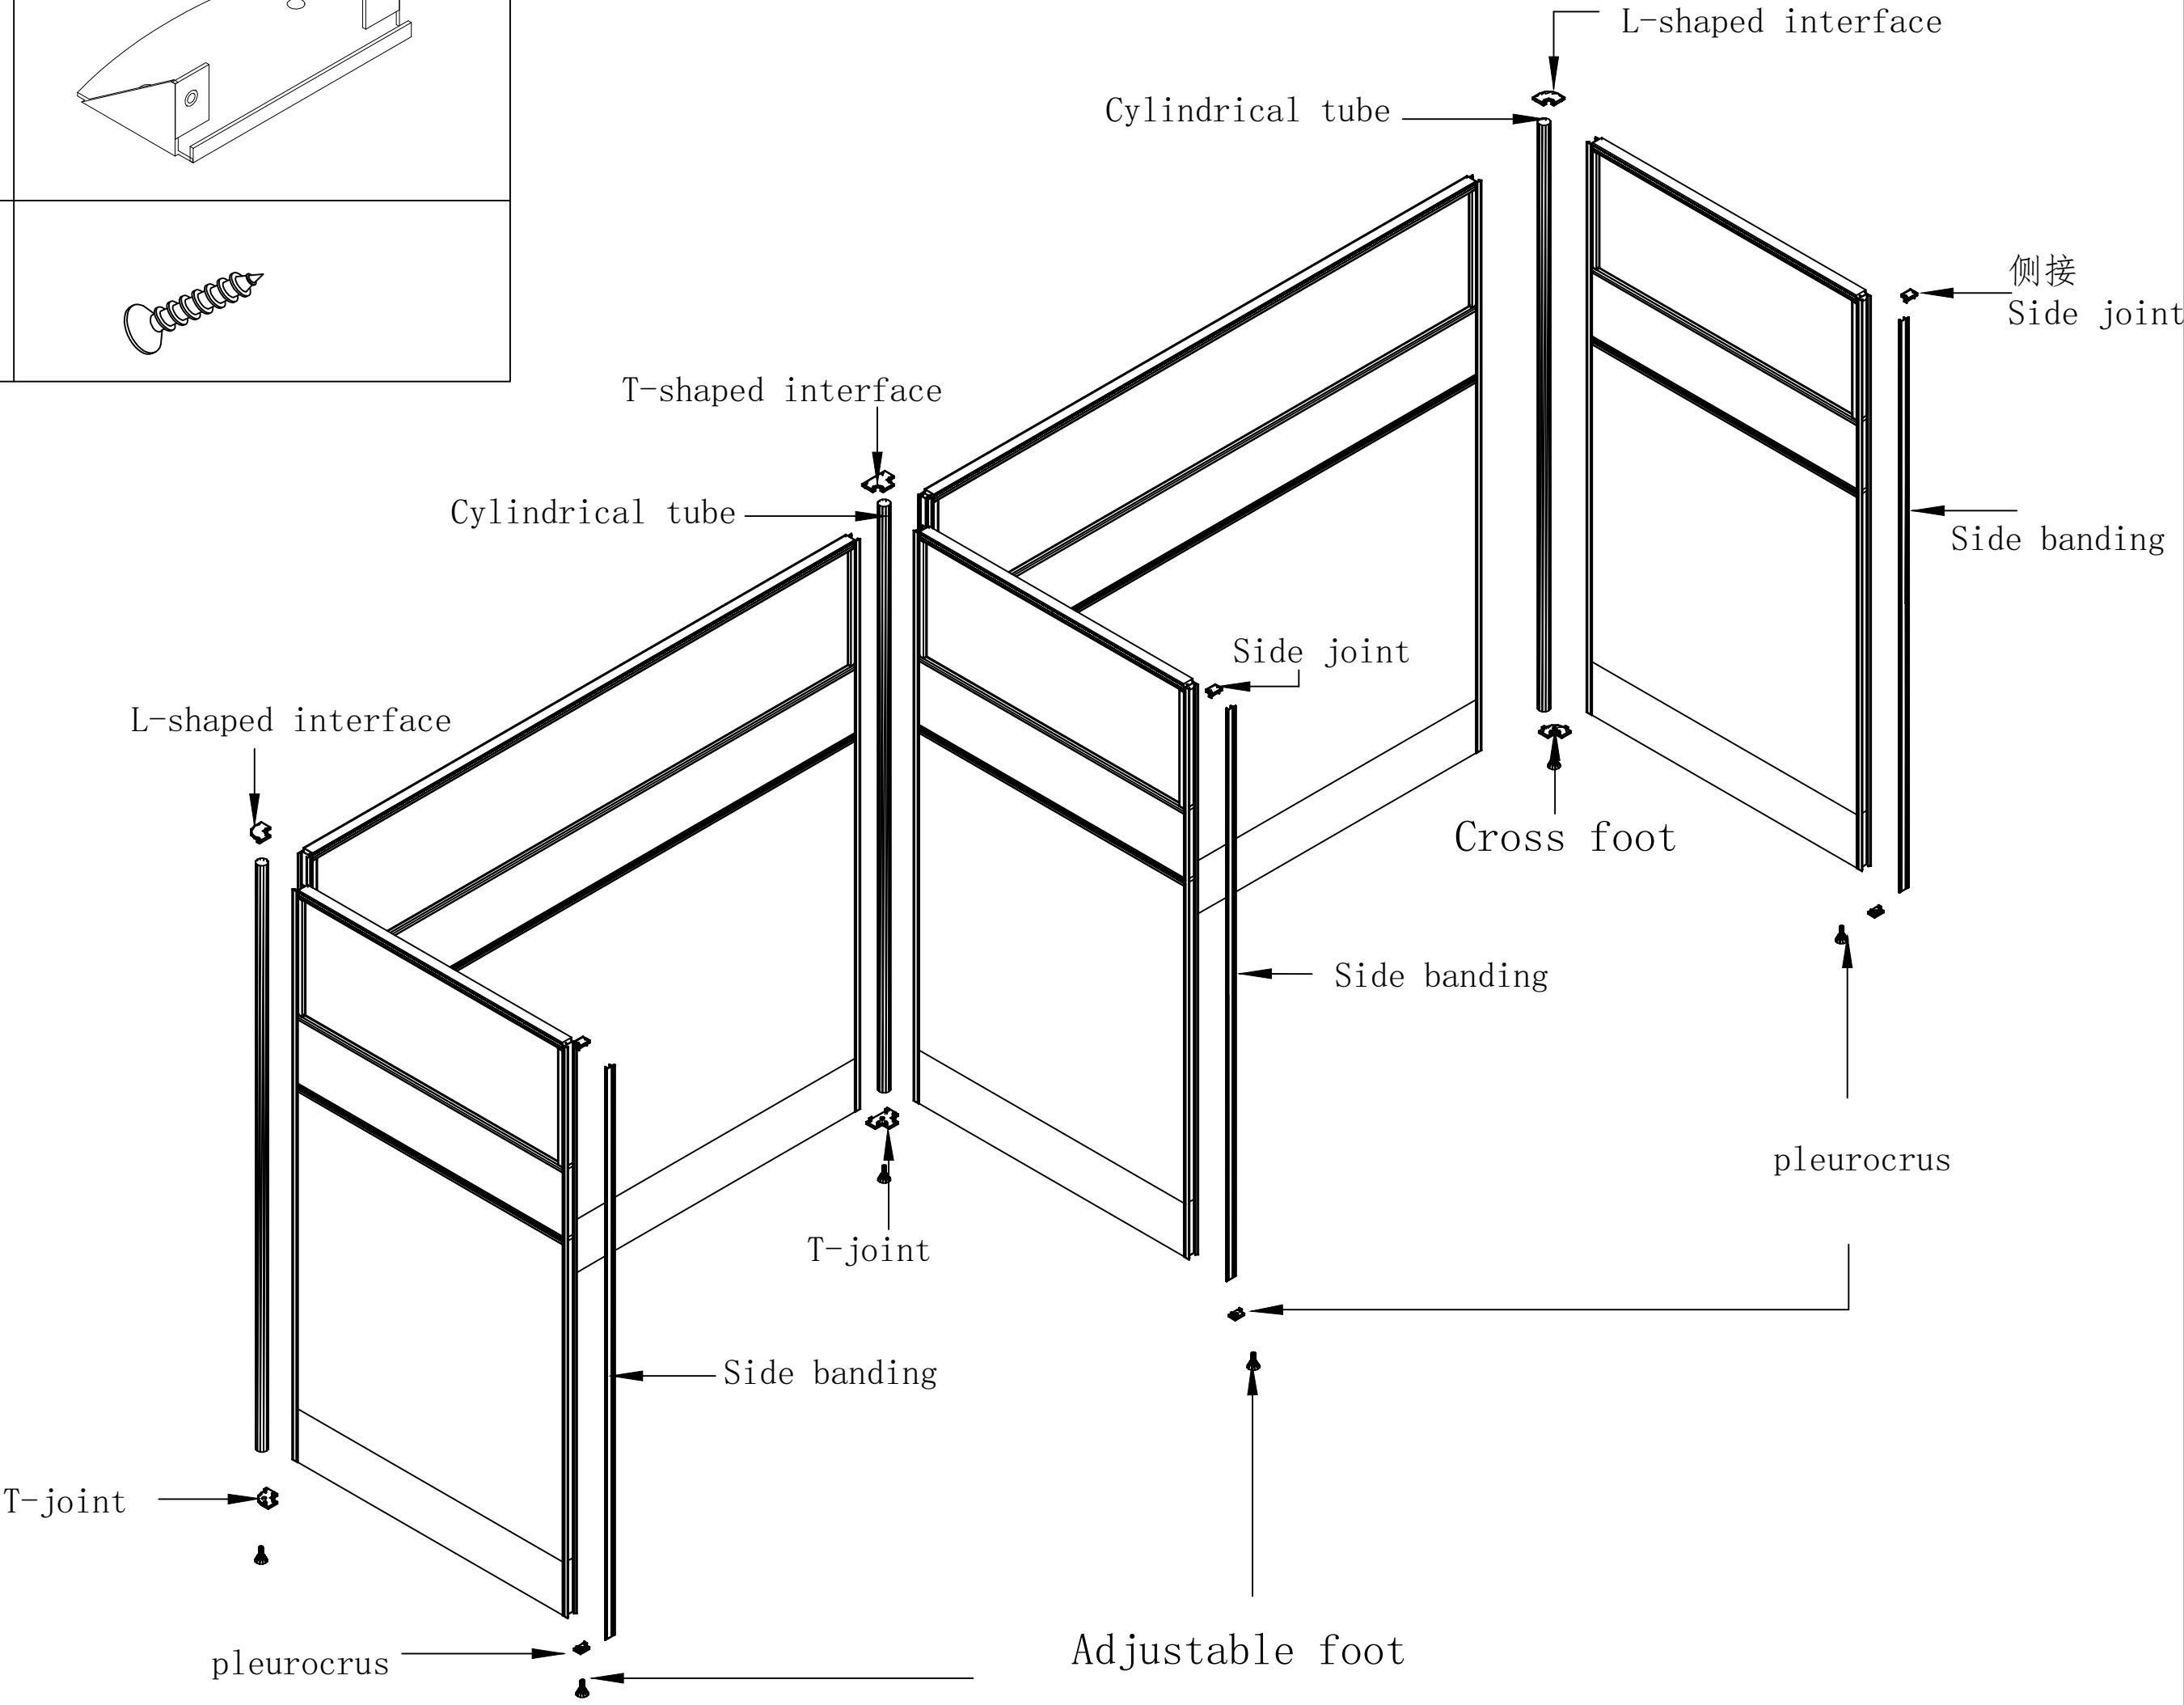
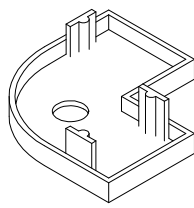
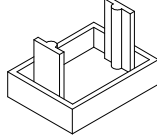
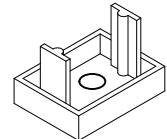
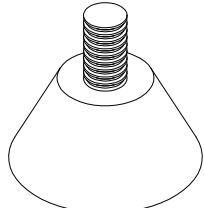
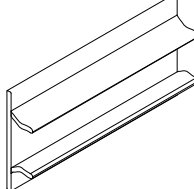
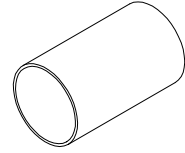


Installation guide


T-shaped interface		corbel	
T-joint		Self-tapping yarn	
L-shaped interface		<div></div>	
Cross foot			
Side joint			
pleurocrus			
Adjustable foot			
Side banding			
Cylindrical tube			

Step 1

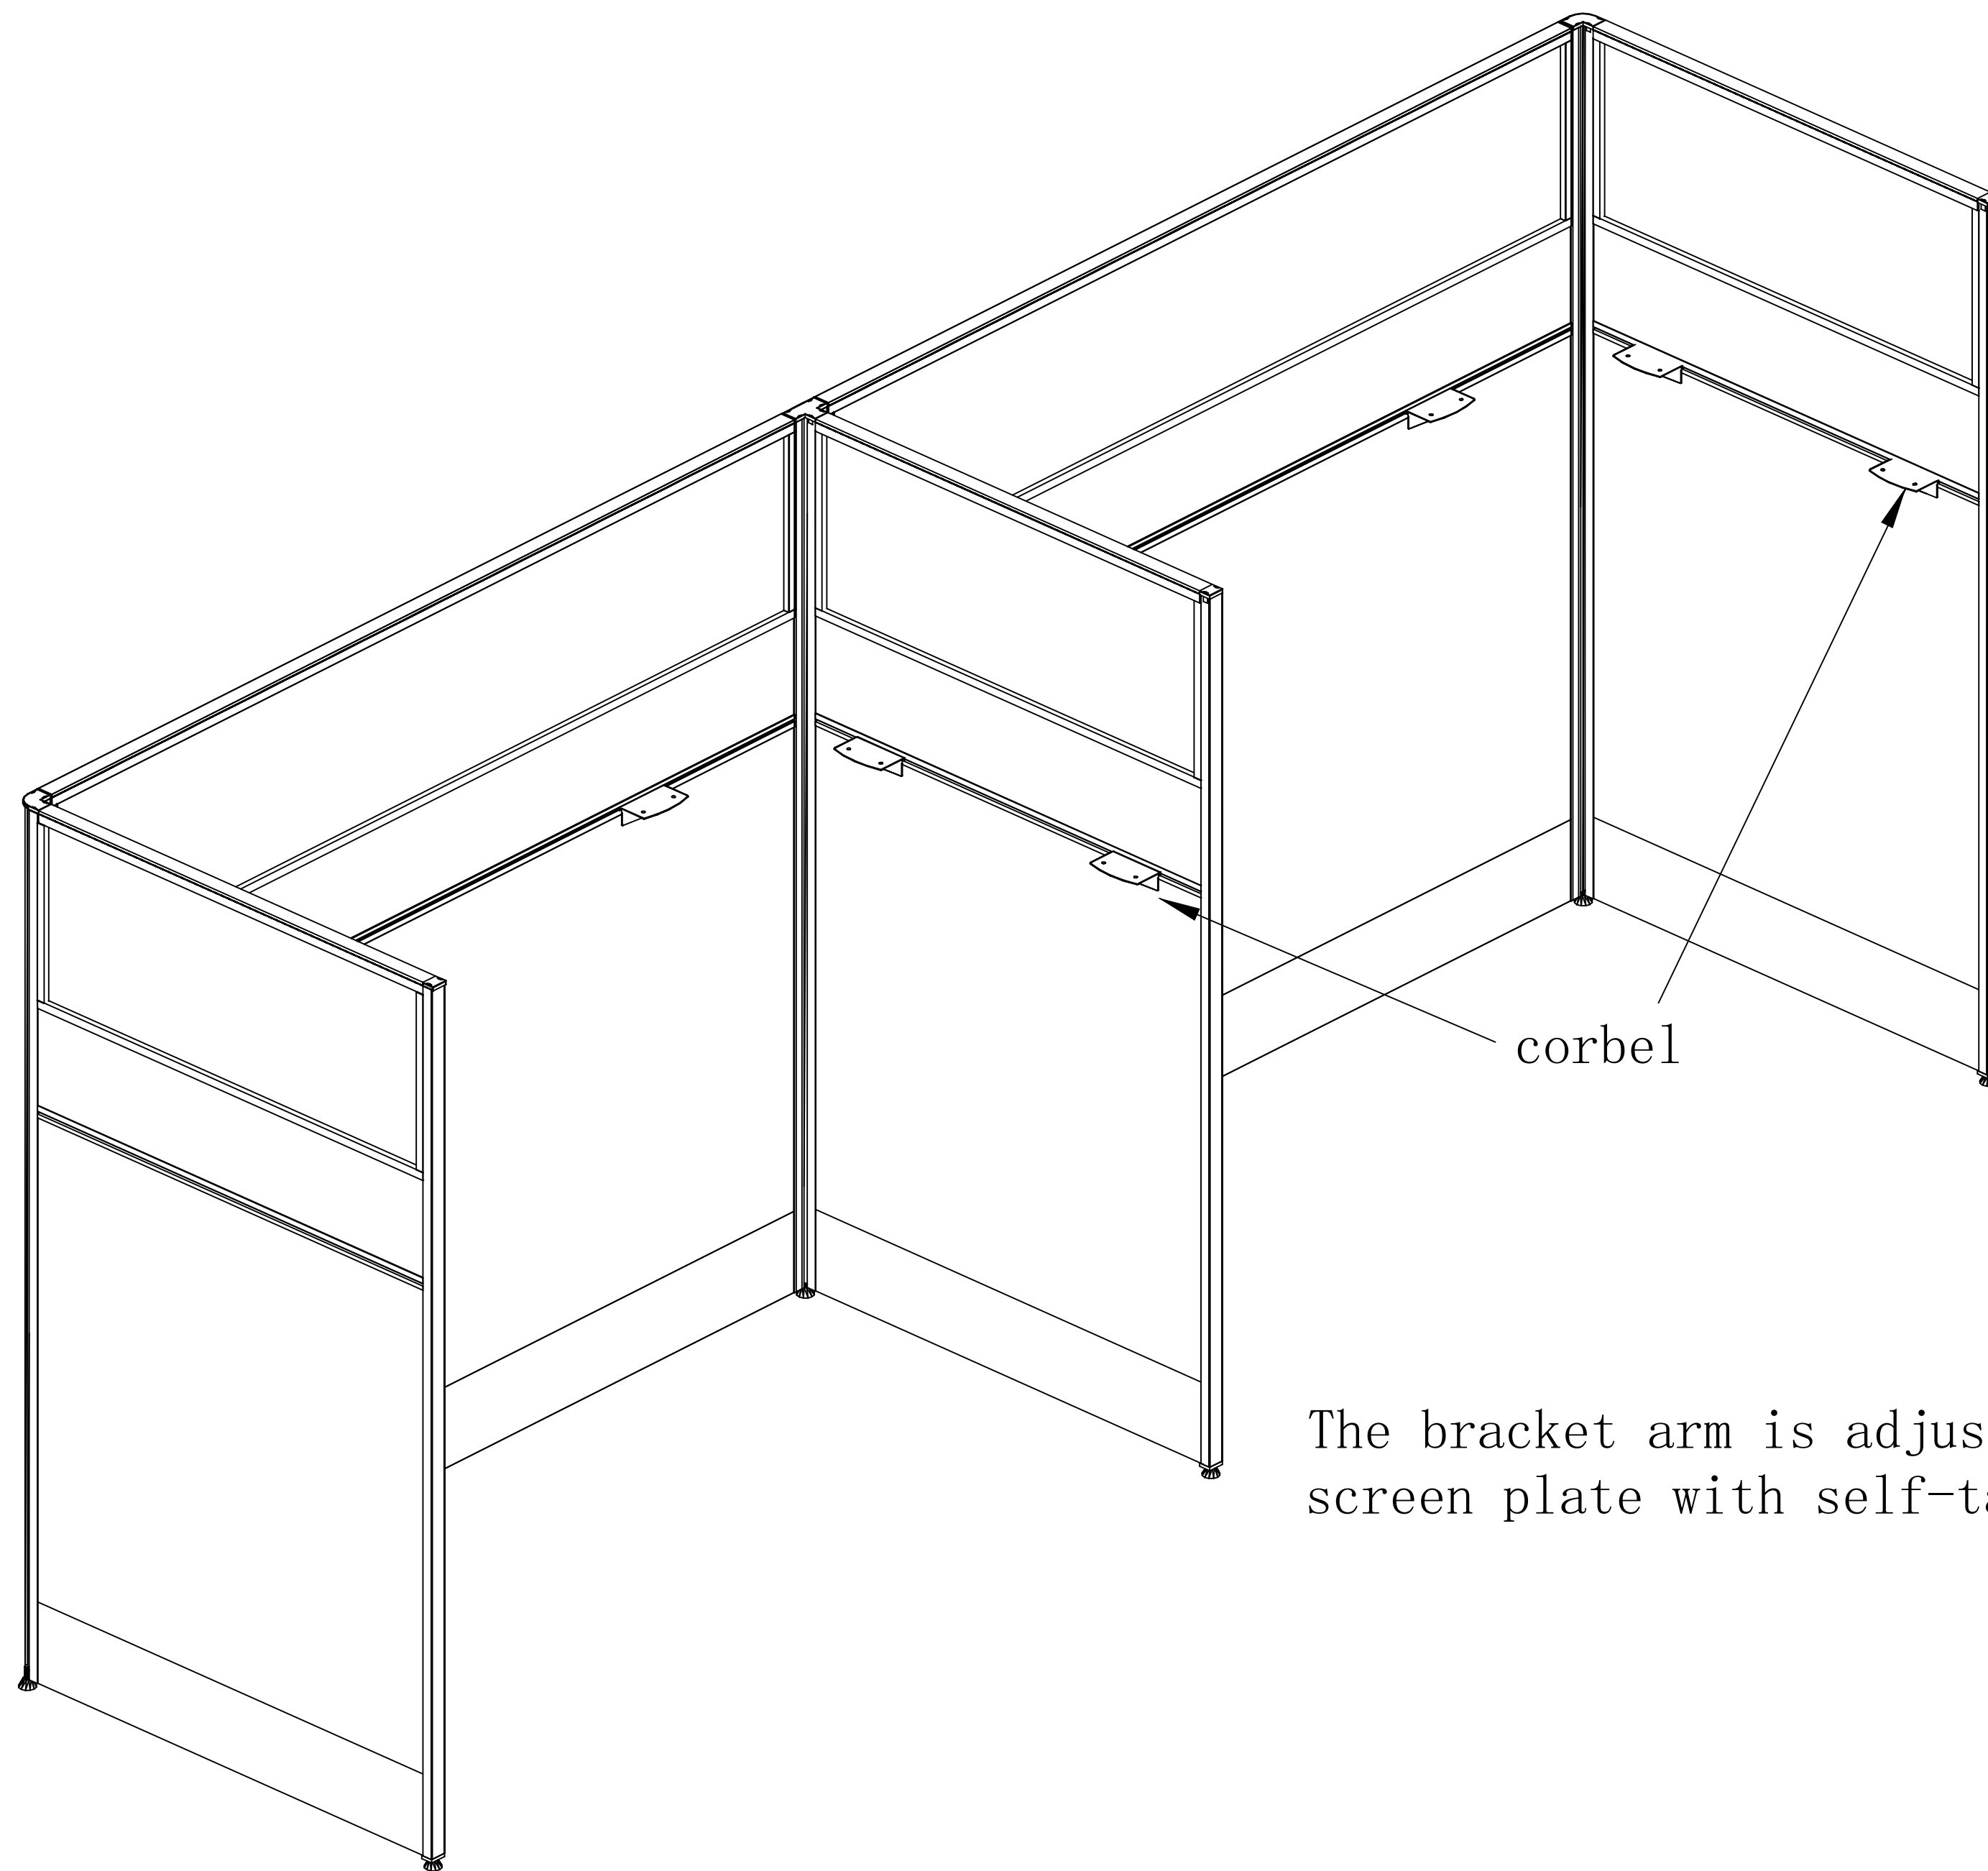

The bracket arm is adjusted and fixed on the screen plate with self-tapping.

Step 2

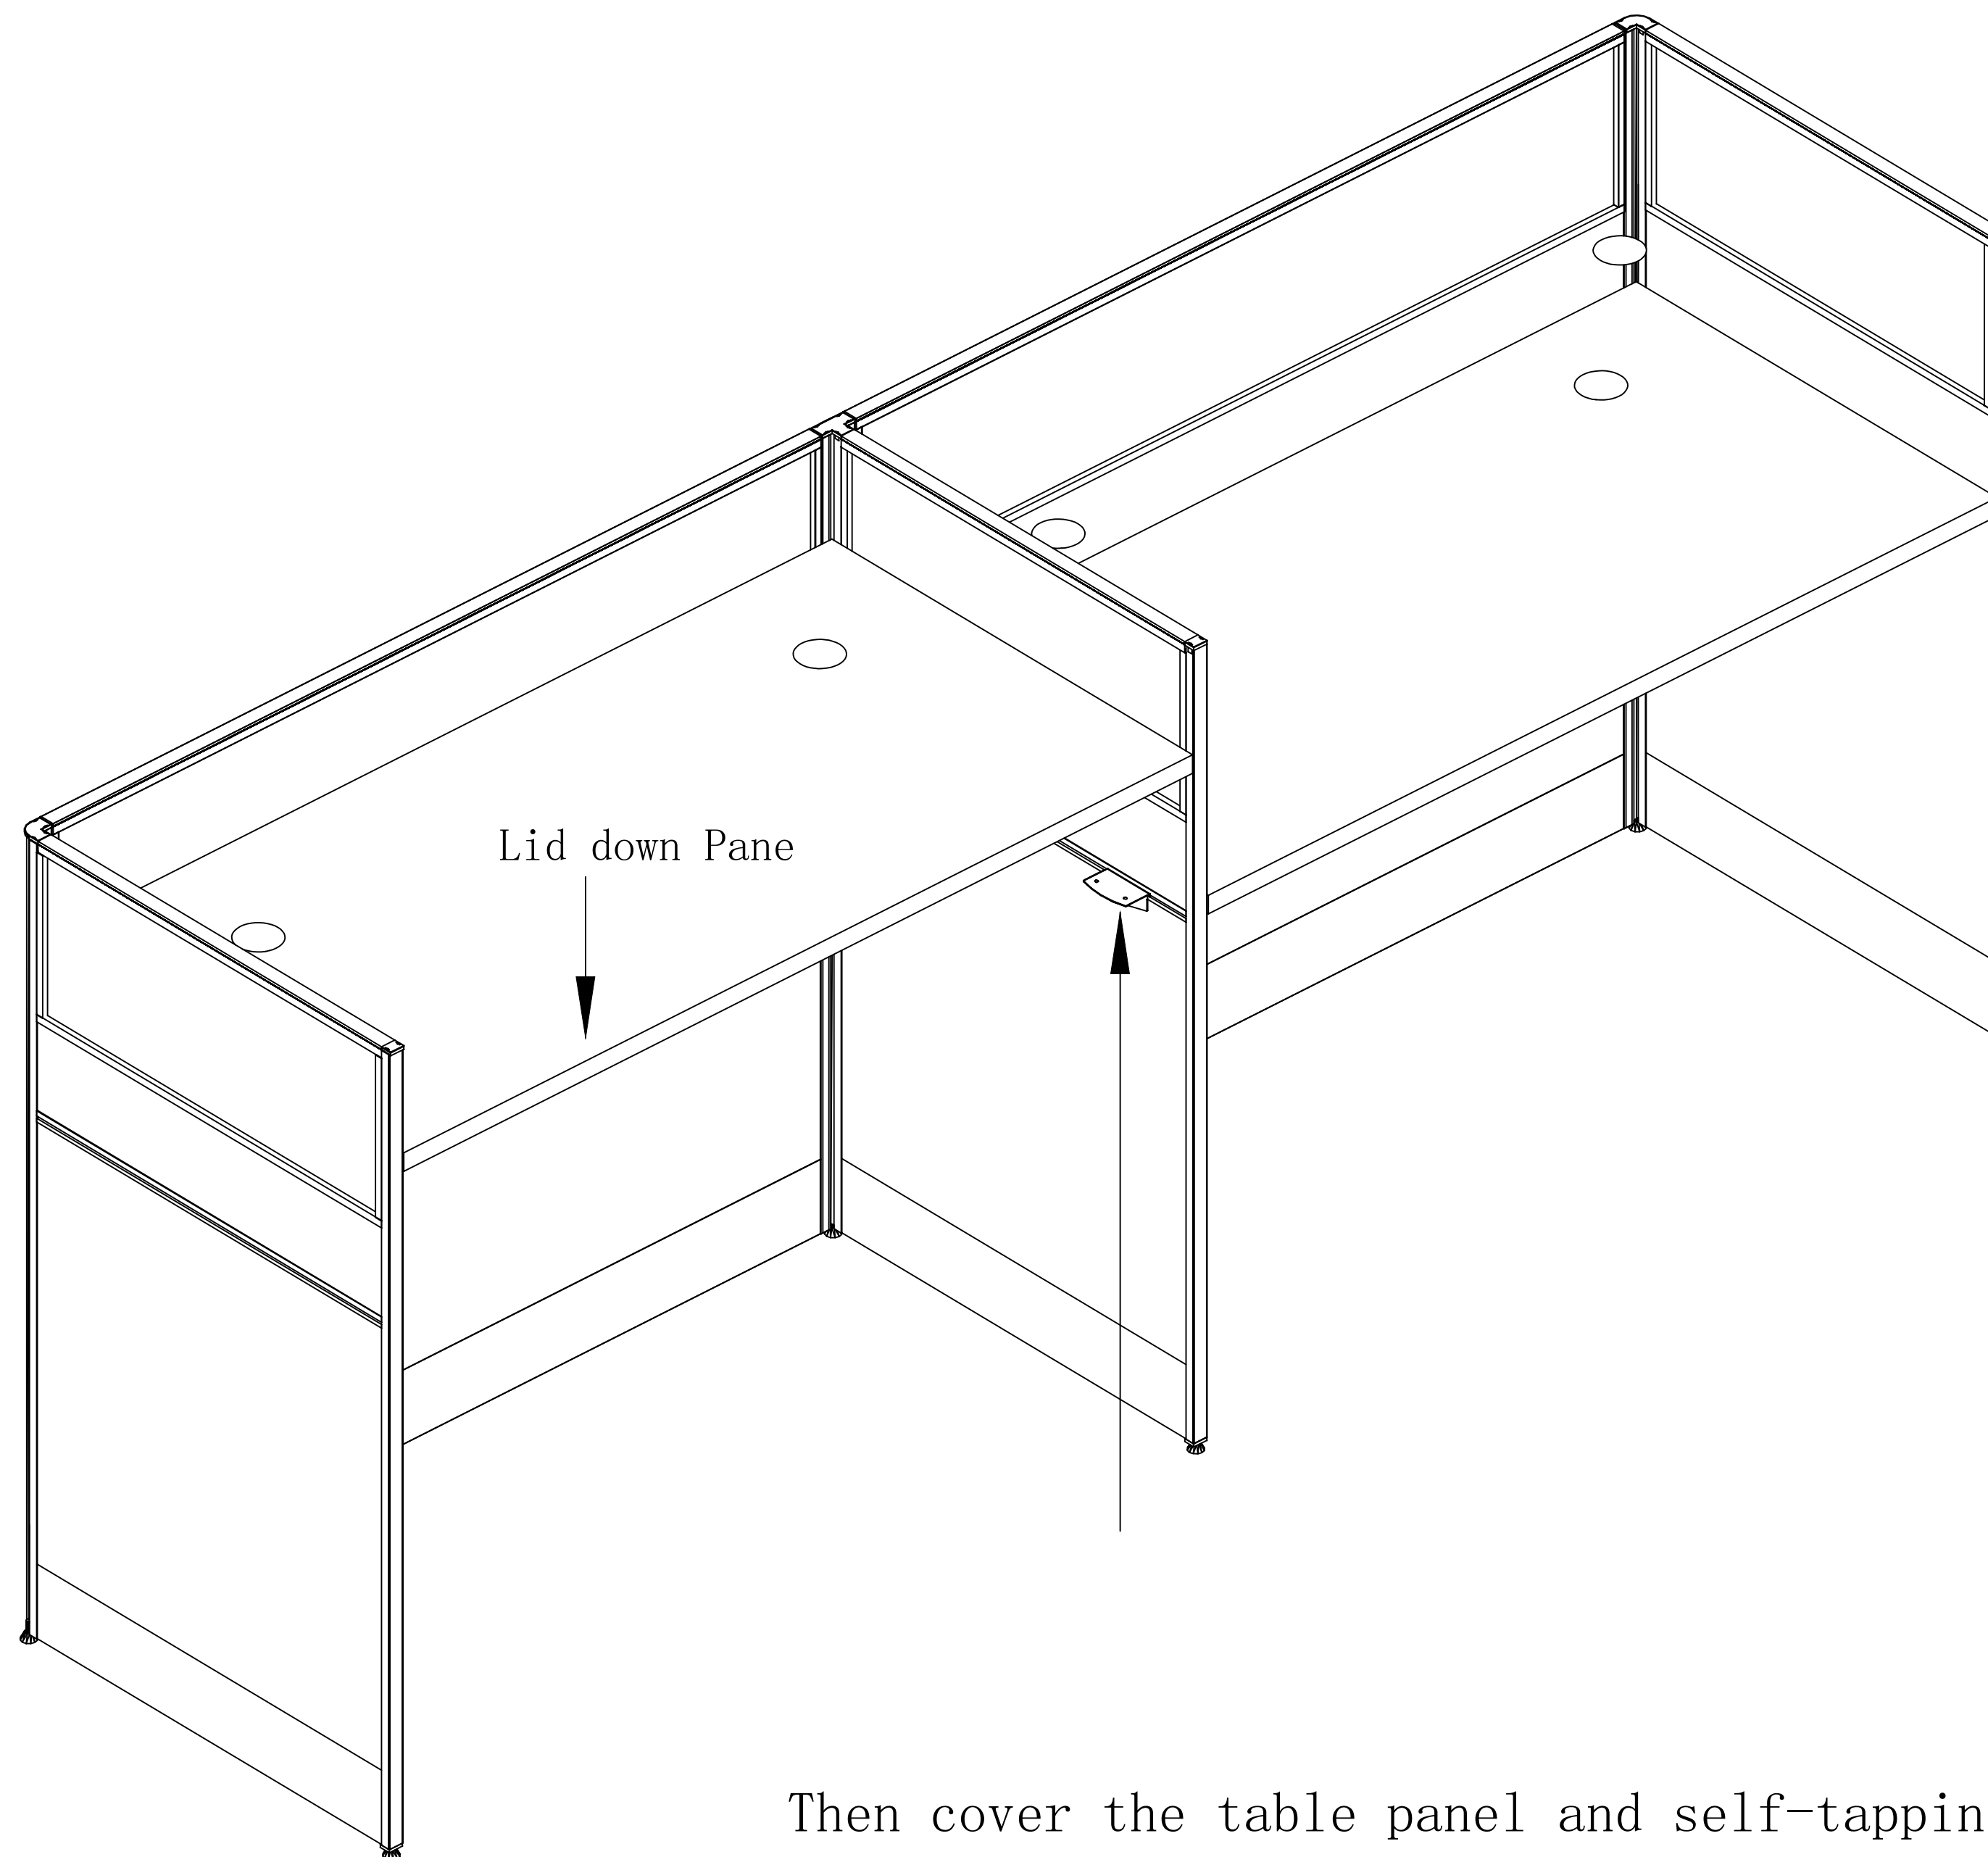

Then cover the table panel and self-tapping screws
to lock the countertop.

Step 3