

CARE AND MAINTENANCE


Wipe clean with a soft cloth dampened in water and a mild soapy solution. Wipe dry with a clean and dry cloth.

If there are any questions relating to defects, missing parts, assembly issues or replacements, please send a detailed email to hello@happimess.com

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.

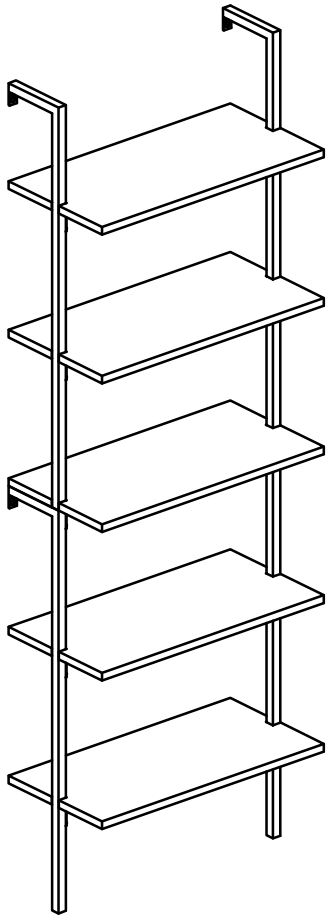
Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Upper Left Leg		1x
B	Lower Left Leg		1x
C	Upper Right Leg		1x
D	Lower Right Leg		1x
E	Shelf		5x
F	Metal Bracket		10x
G	Bolt M6x15mm		40x
H	Screw M6x60mm		4x
I	Anchor		4x
K	Allen Key		1x

happimess

Item # : MSH1001

Product Dimensions : W23.6" x D11.8" x H72"



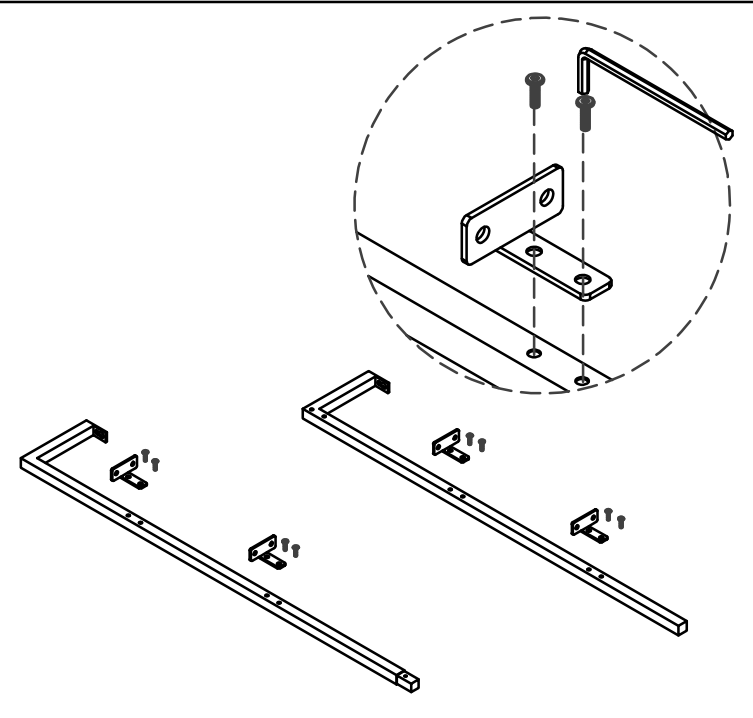
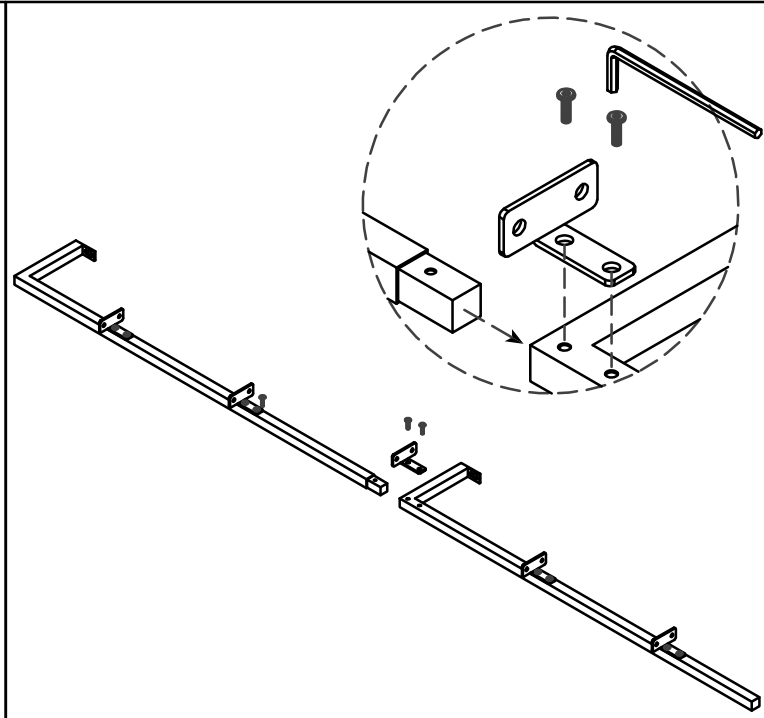
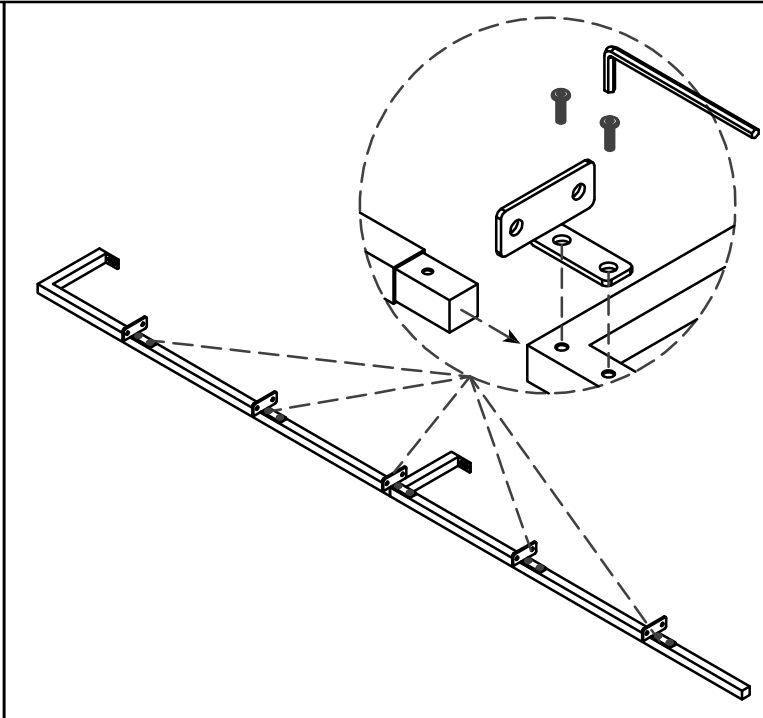
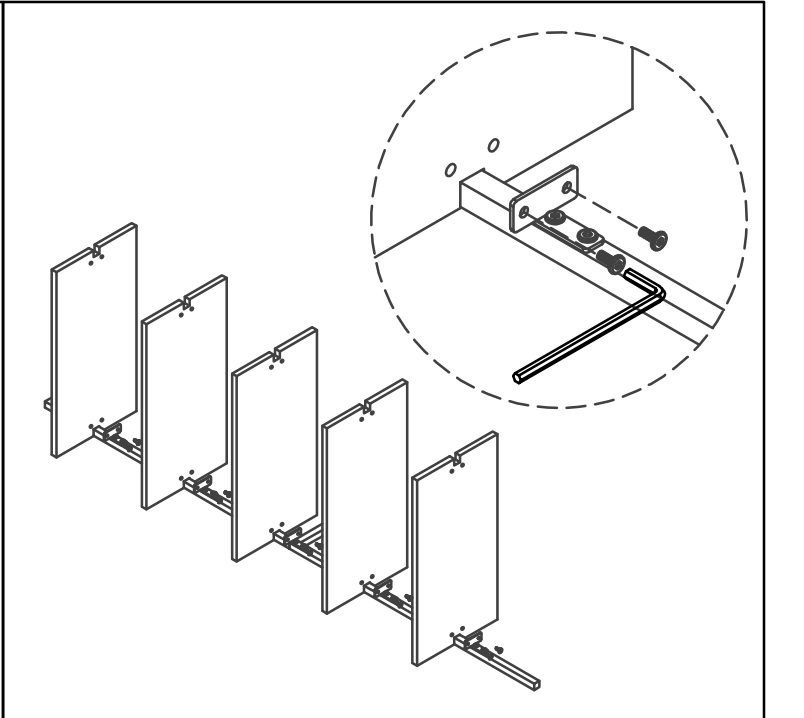
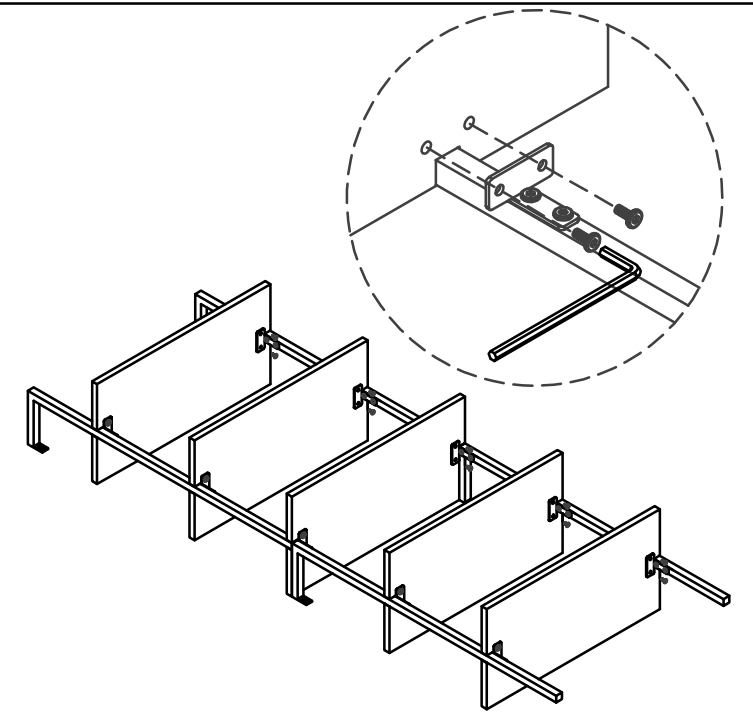
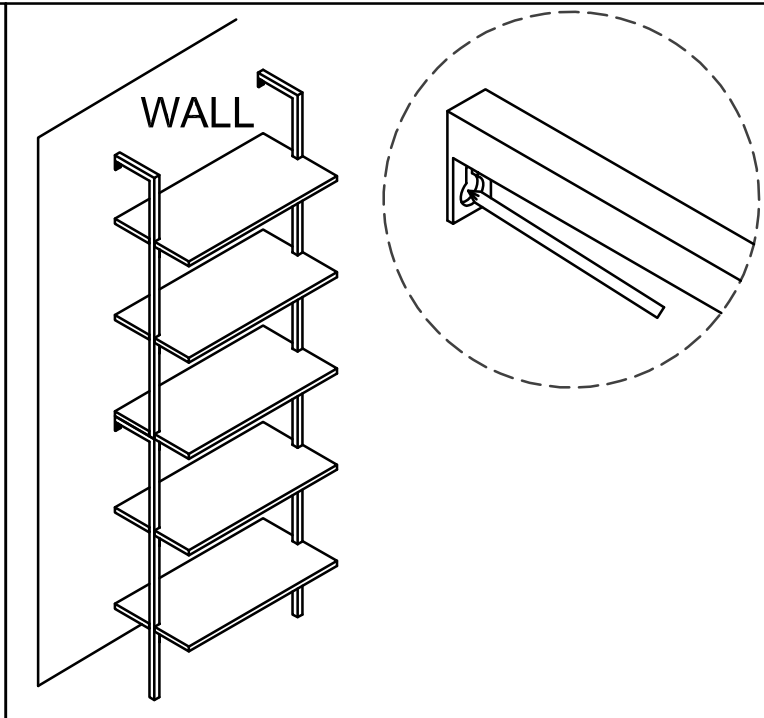
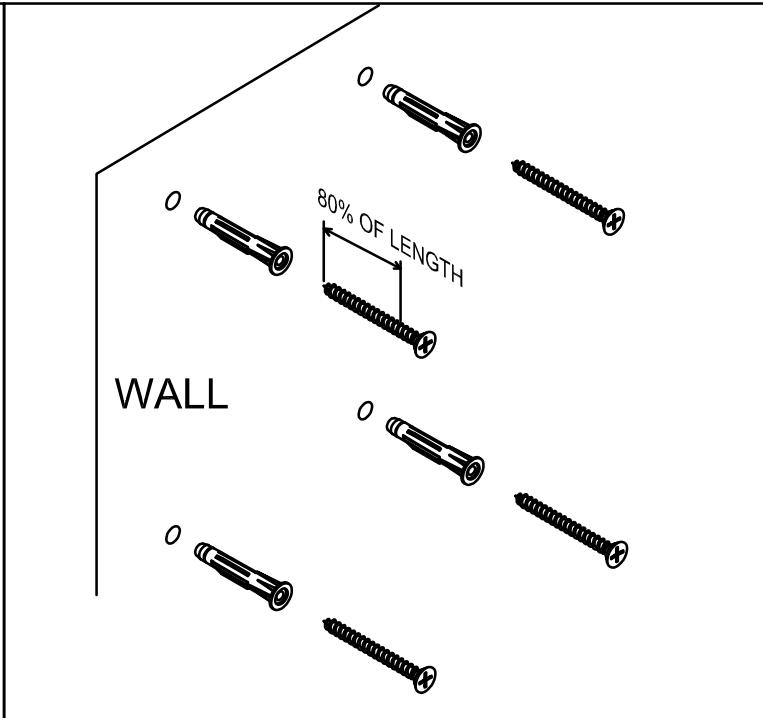
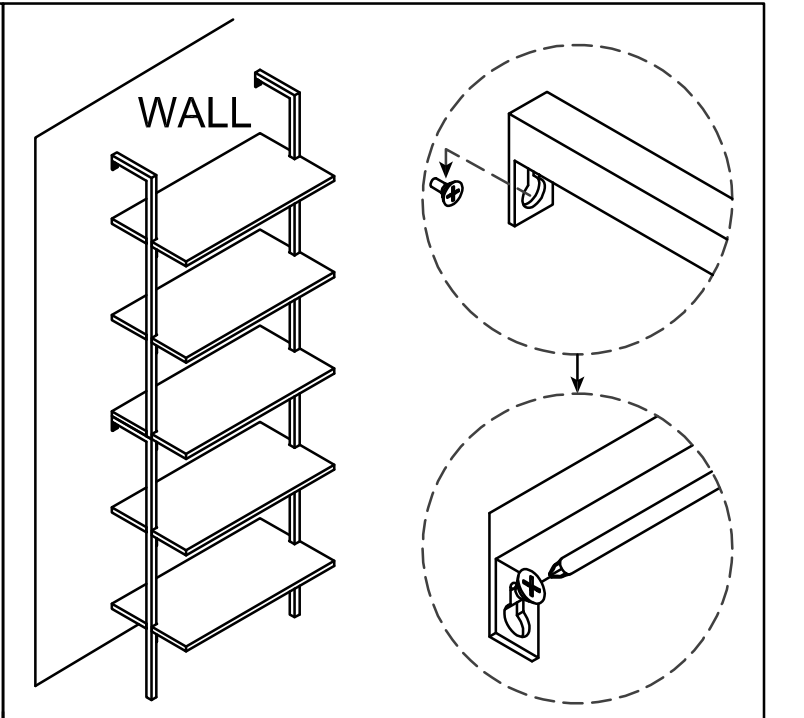
Weight Capacity : 60 Lbs
Warning : Do not stand on Shelf
Warning : Do not sit on Shelf



PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware content list. If any parts is missing or damaged, do not attempt to assemble the product

Estimated Assembly Time is 20 Minutes.

			
STEP 1 : ATTACH THE METAL BRACKETS TO THE UPPER LEFT LEG (A) AND LOWER LEFT LEG (B) WITH BOLTS (G), TIGHTEN WITH AN ALLEN KEY (K).	STEP 2 ATTACH THE UPPER LEFT LEG (A) TO THE LOWER LEFT LEG (B) AT JOIN POSITION. THEN ATTACH THE METAL BRACKET (F) TO THE THE LEG WITH BOLTS (G), TIGHTEN WITH AN ALLEN KEY (K).	STEP 3 REPEAT AS IN STEP 1 AND 2 WITH THE UPPER RIGHT LEG (C) AND LOWER RIGHT LEG (D).	STEP 4 ATTACH THE SHELVES TO THE METAL BRACKETS (F) AND LEFT LEG (A+B) WITH BOLTS (G), TIGHTEN WITH AN ALLEN KEY (K).
			
STEP 5 REPEAT AS IN STEP 4 WITH THE RIGHT LEG (C+D).	STEP 6 MARK WHERE HOLES NEED TO BE DRILLED	STEP 7 TAP THE WALL ANCHORS (I) INTO PLACE IN THE NEW HOLES THAT YOU JUST DRILLED. THEN INSERT 80% OF THE LENGTH OF THE SCREWS (H) INTO THE ANCHORS (I).	STEP 8 HANG THE SHELF ON THE POSITION OF THE SCREW (H). THEN TIGHTEN THE SCREWS (H) TO FIX THE SHELF.