


Barber Chair



OWNER'S MANUAL



CAUTION! Please read through this manual before assembling, installing or using the product to ensure safe and correct use.

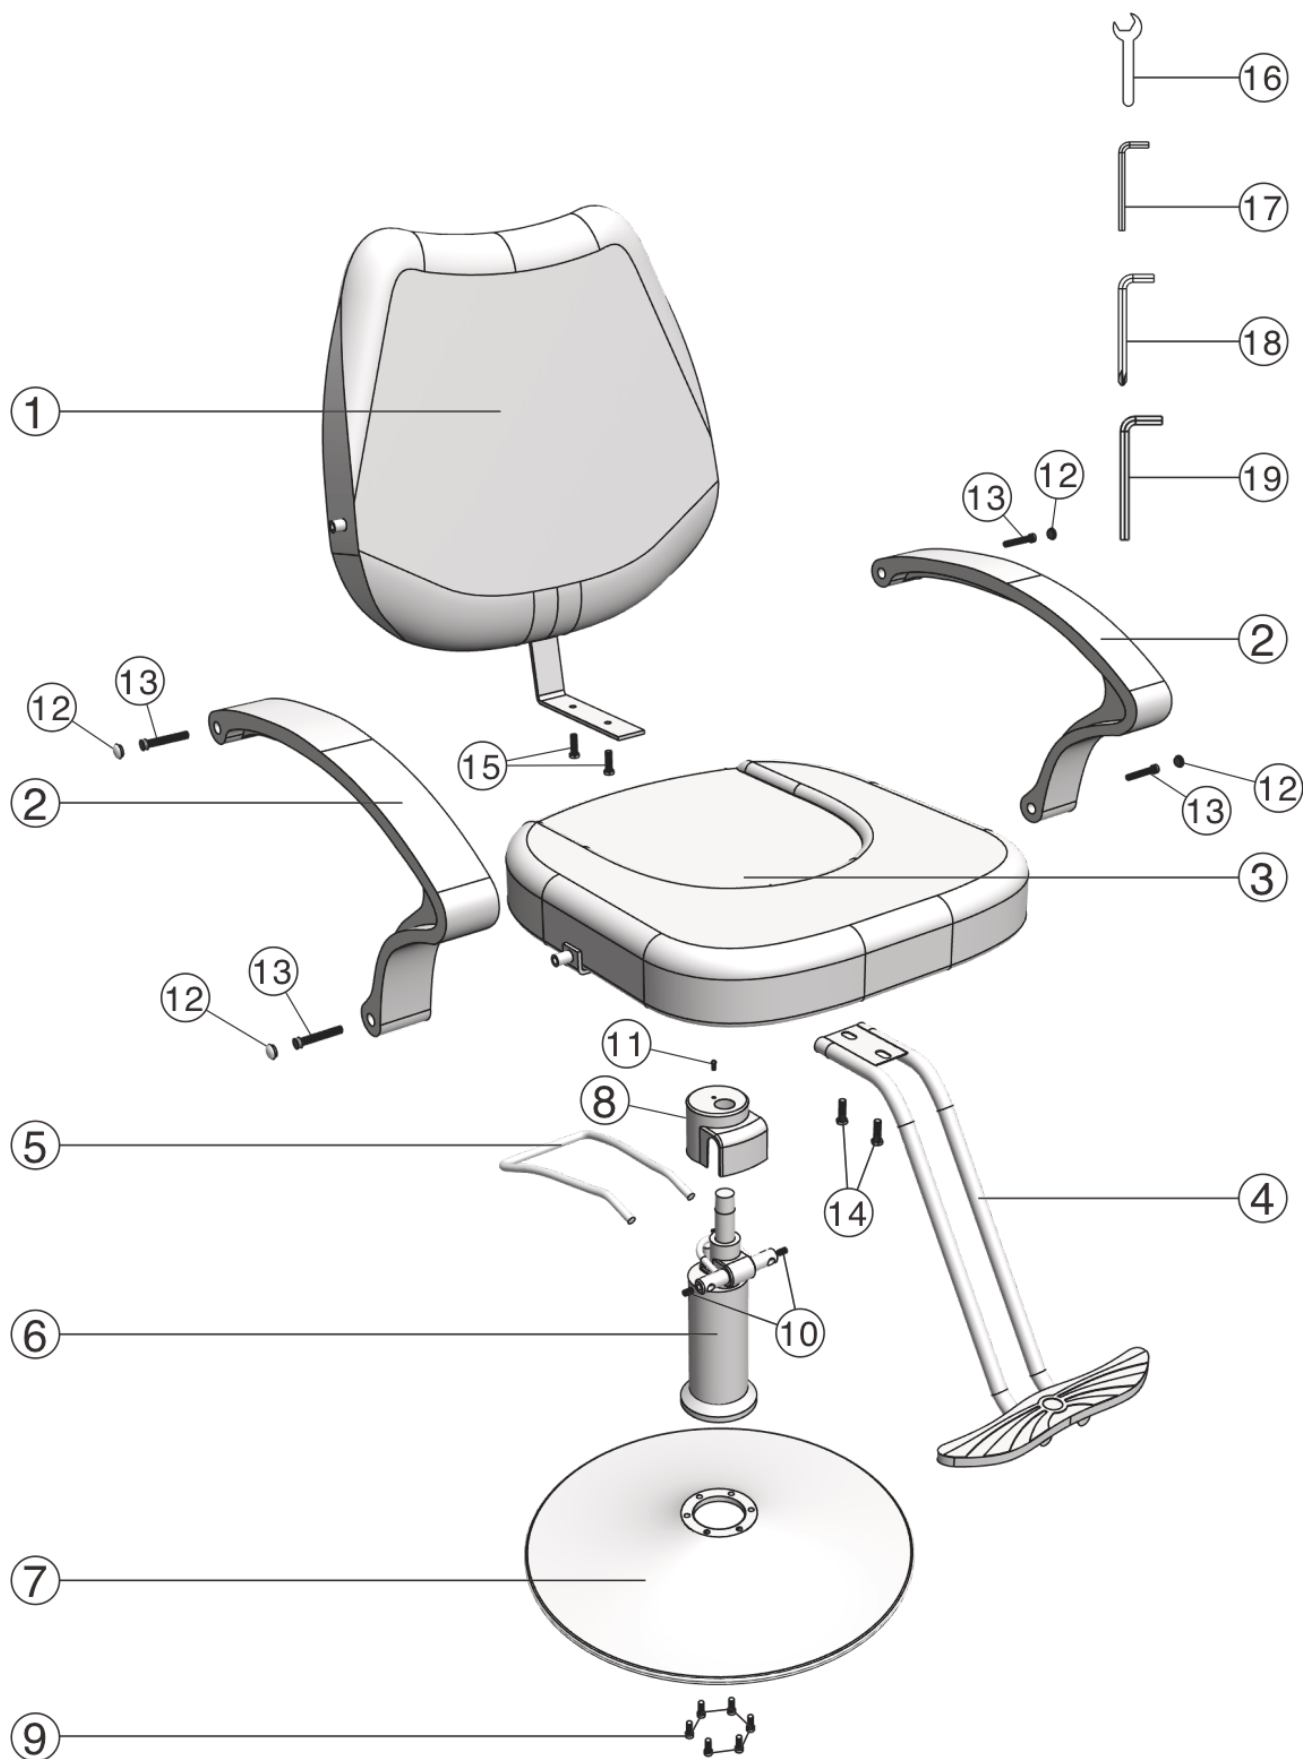

Parts

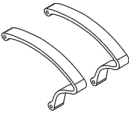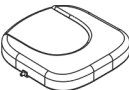Parts Code	Image	Parts Name	Qty(Pcs)
1		Backrest	1
2		Armrest	1 Pair
3		Seat	1
4		Footrest	1
5		Foot Pump Rod	1
6		Oil Pump	1
7		Base	1
8		Oil Pump Cover	1
9		Allen Socket Screw M6*12	6
10		Lock Nut M8	2
11		Semi-round Head Screw M5*15	1
12		Cover of Screw	4
13		Allen Socket Screw M8*50	4
14		Hex Screw M8*25	2
15		Hex Screw M8*30	2

Tools


Parts Code	Image	Parts Name	Qty(Pcs)
16		Wrench 14mm	1
17		Allen Key 4mm	1
18		Allen Key 5mm with Phillips head Screwdriver	1
19		Allen Key 6mm	1

Installation Diagram

Step One:

Loosen the two Lock Nuts M8 ⑩, install the Foot Pump Rod ⑤ to the Oil Pump ⑥, and tighten the two Lock Nuts M8 ⑩ to fix the Foot Pump Rod ⑤


Caution: Install the Foot Pump Rod ⑤ to the Oil Pump ⑥ in the correct direction as the diagram

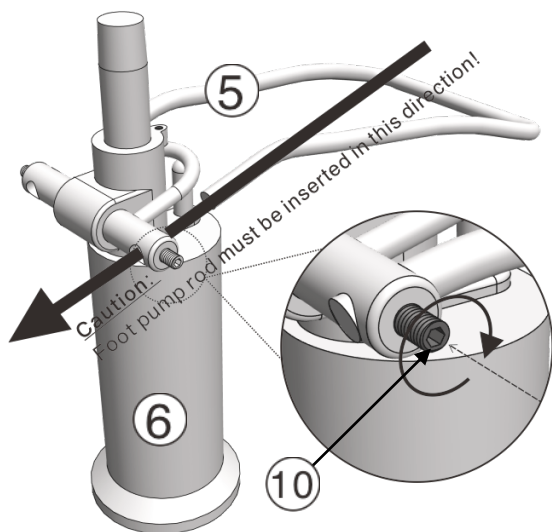

Two Lock Nuts M8 ⑩ were pre-installed on Oil Pump ⑥

Step Two:


Install the Oil Pump Cover ⑧ on the Oil Pump ⑥ and fix it with the Semi-round Head Screw M5*15 ⑪

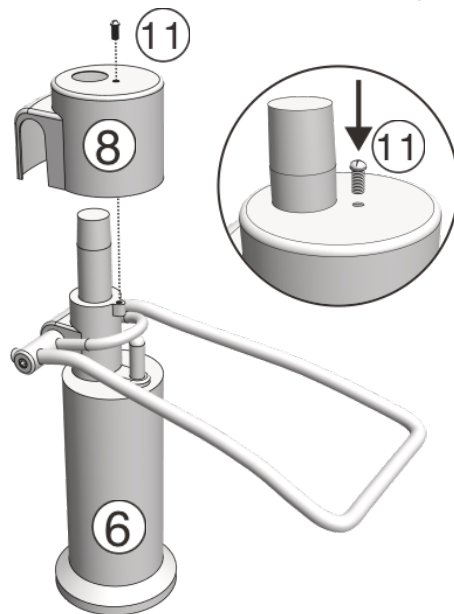

Semi-round Head Screw M5*15 ⑪ were pre-installed on Oil Pump ⑥

Step Three:


Unscrew the six Allen Socket Screws M6*12 ⑨ from the bottom of the Oil Pump ⑥ for later use

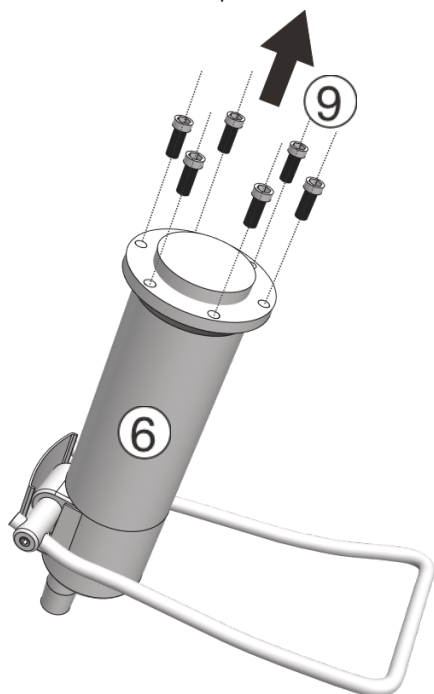

Six Allen Socket Screws M6*12 ⑨ were pre-installed on the bottom of the Oil Pump ⑥

Step Four:


Fix the Base ⑦ with six Allen Socket Screws M6*12 ⑨ to the bottom of the Oil Pump ⑥

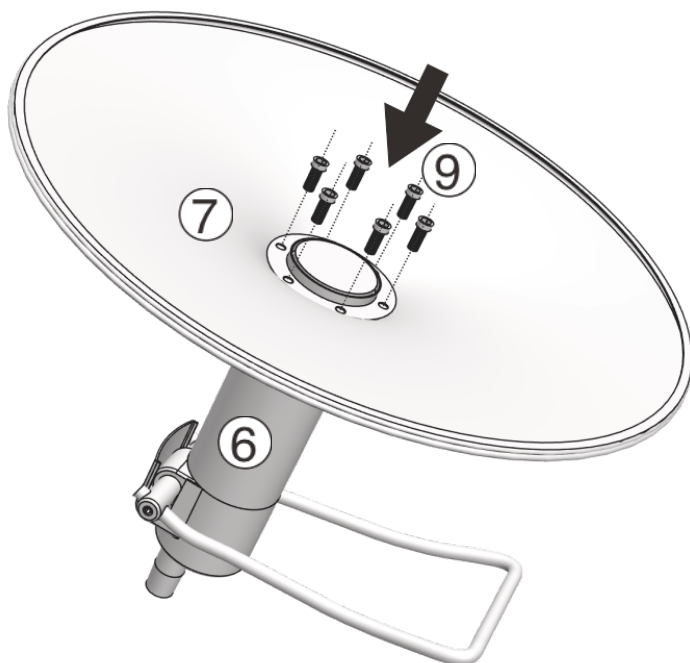

Step Five:

Attach the Backrest ① and Seat ③ and secure it with two Hex Screws M8*30 ⑮


Note: Do not tighten the 2 Hex Screws M8*30 ⑮, wait until **Step Six** is completed and the Armrests ② are installed.

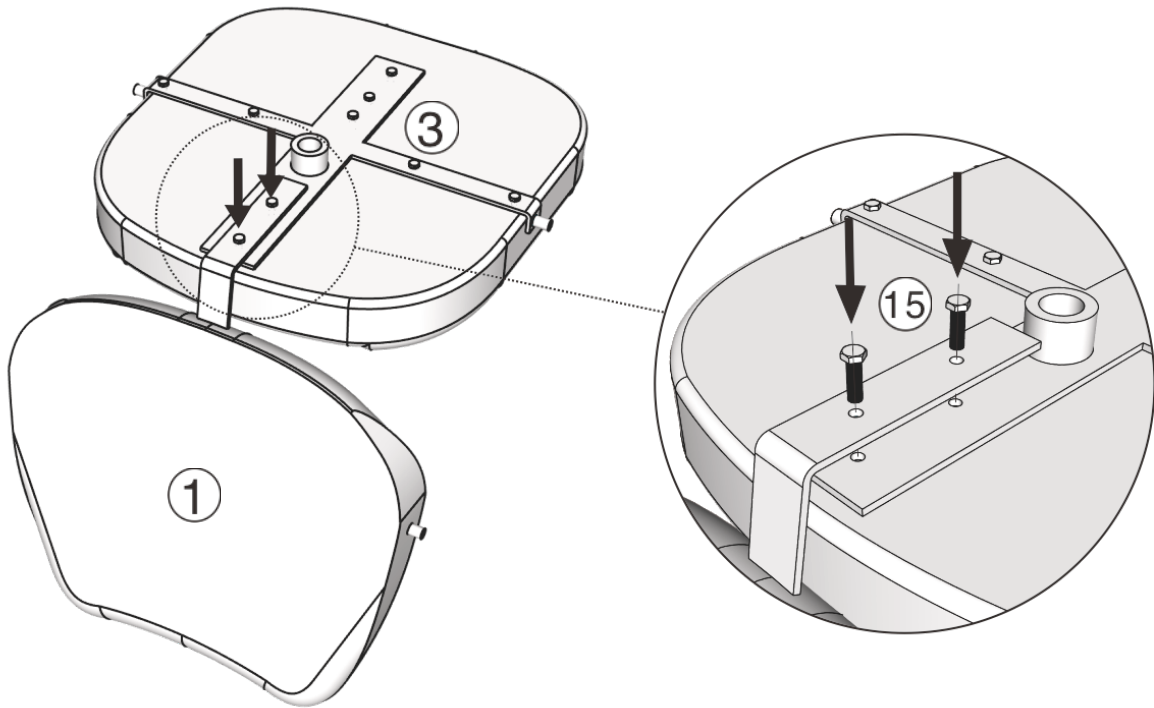

Two Hex Screws M8*30 ⑮ were pre-installed on the bottom of the Seat ③

Step Six:

Install the Armrests ② to the Backrest ① and Seat ③ with four Allen Socket Screws M8*50 ⑬ and cover the screws with four Covers ⑫

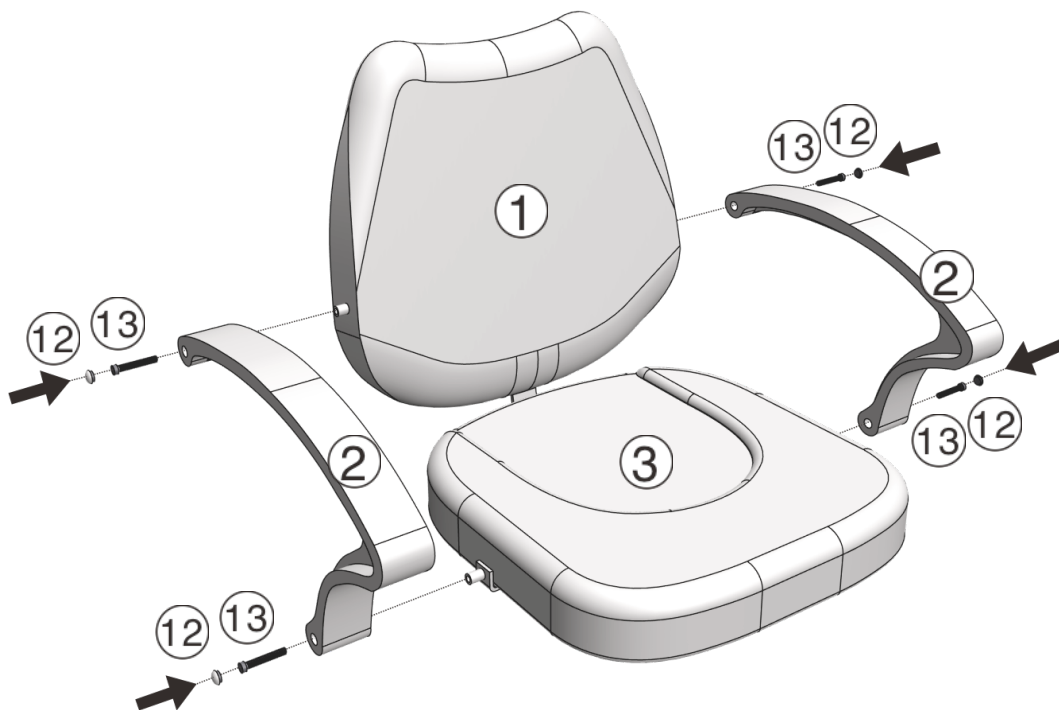


Four Allen Socket Screws M8*50 ⑬ were pre-installed on Backrest ① and Seat ③

Four Covers of the Screw ⑫ were packed in the Accessory Kit (a small bag)

Step Seven:


Install the Footrest ④ and fix it with two Hex Screws M8*25 ⑭ to the bottom of the Seat ③

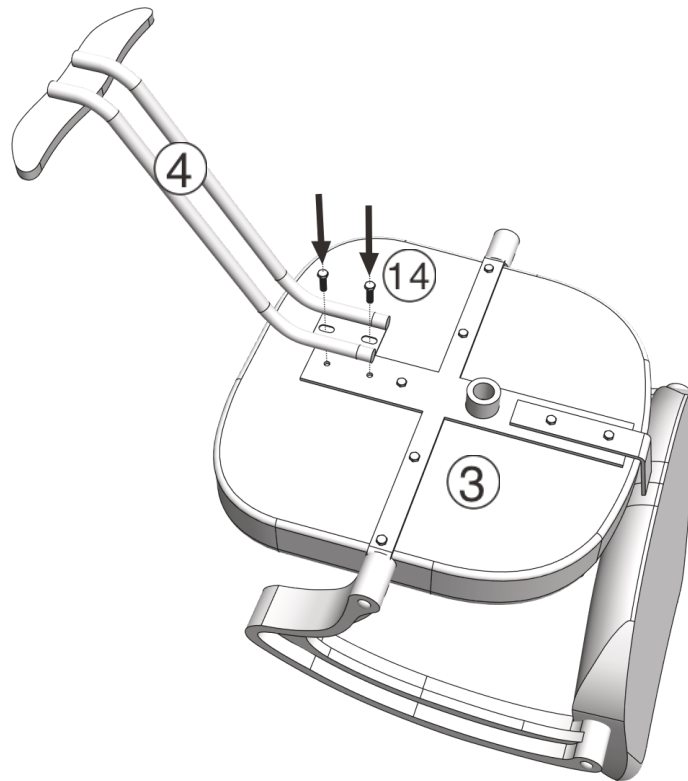

Two Hex Screws M8*25 ⑭ were pre-installed on the bottom of the Seat ③


Step Seven:

Combine the Seat: Attach the assembled seat to the pump, sit on it, and there you go.

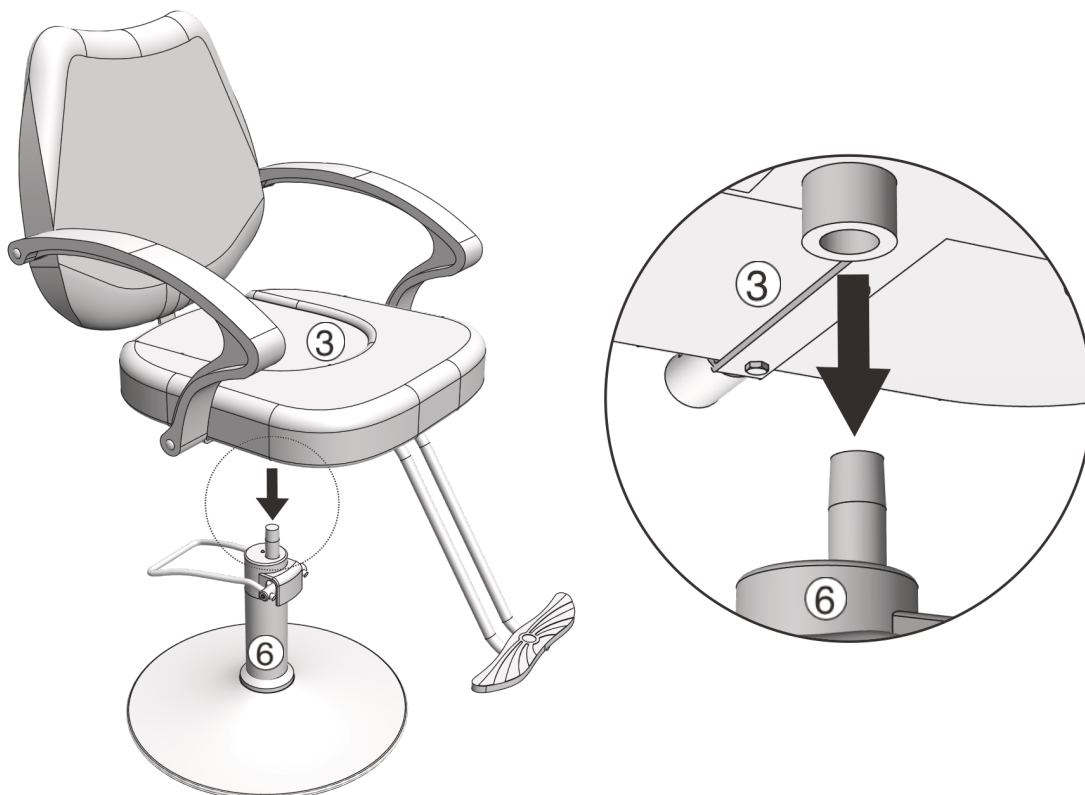

Note: No screws are needed to connect the seat and the base. The longer you seat, the tighter it gets.

Instruction for use

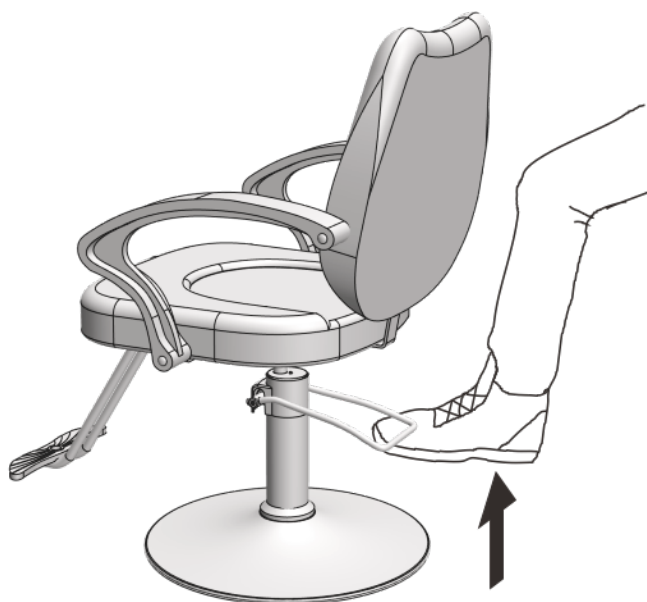


 **Lock:** Lift the foot pump rod upward, and the rotation and lifting functions are locked.



 **Unlock:** Press the foot pump rod down, and the rotation and lift functions resume.

Seat up: Foot down on the foot pump rod 5-10 cm, and repeat. Don't step too deep!

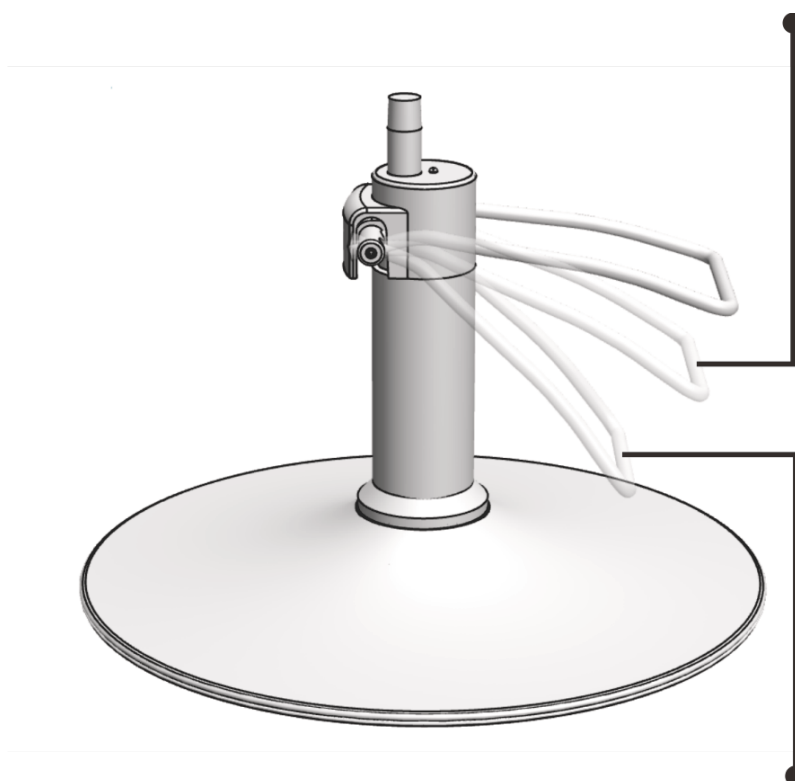

Seat down: Downhill the foot pump rod and hold still to lower the seat.

