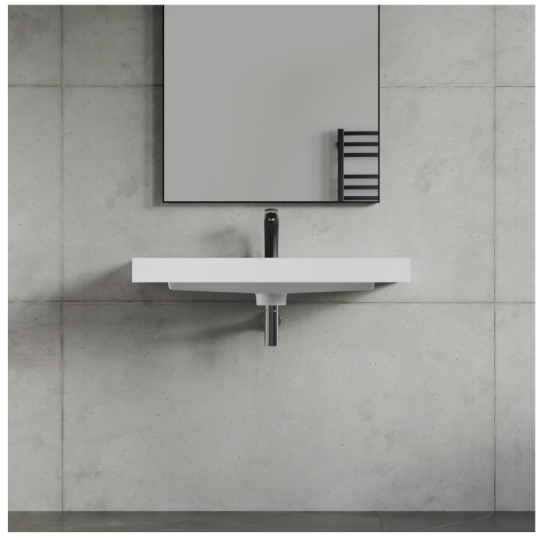
DOWELL
KITCHEN & BATH

B3618SS-W

Solid Surface Bathroom Basin

INSTALLATION GUIDE





The Dowell Installation Guide serves as a general reference, offering step-by-step guidance for renovation professionals. The tools and fixtures supplied by Dowell for attaching to clients' floors or walls are intended as examples and might not be suitable for all types of surfaces. For optimal results, we recommend engaging a qualified professional to select the appropriate hardware for your specific installation needs. Dowell assumes no responsibility for complications arising from incorrect installation or the improper use of tools, including any subsequent damages.

Solid Surface Bathroom Basin

Installation Instructions

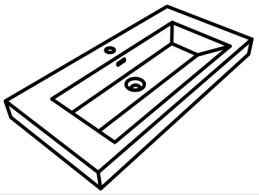
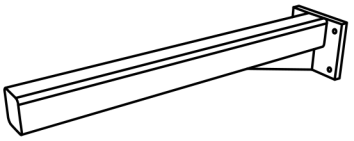

B3618SS-W

1 IMPORTANT:





Before you begin, make sure you familiarize yourself with all the parts and fully read the instructions.

2 TOOLS:

The following are included.

		
Solid Surface Bathroom Sink x1	Support x2	Expansion Bolt x8

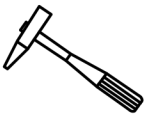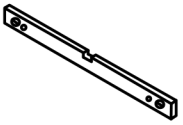
The following tools are required (Not included).

					
Hammer	Pencil	Wrench	Electrodrill	Gradienter	Steel tape

INSTALLATION STEPS

Installation steps : 1

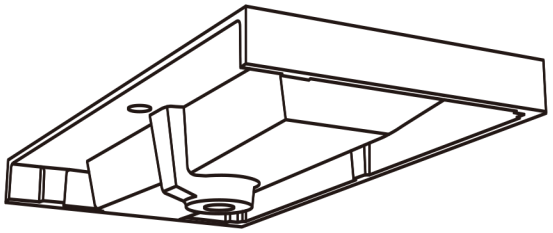
Measure the distance of the mounting holes,and the height you want, mark with the pencil.
(33"-36" is preferred for countertop height).



【 The back of the product 】


Installation steps : 2

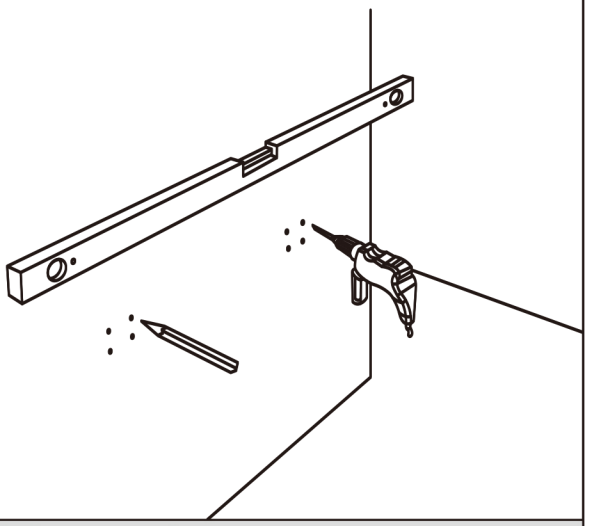Drill the hole at the mark with electric drill.




Installation steps : 3

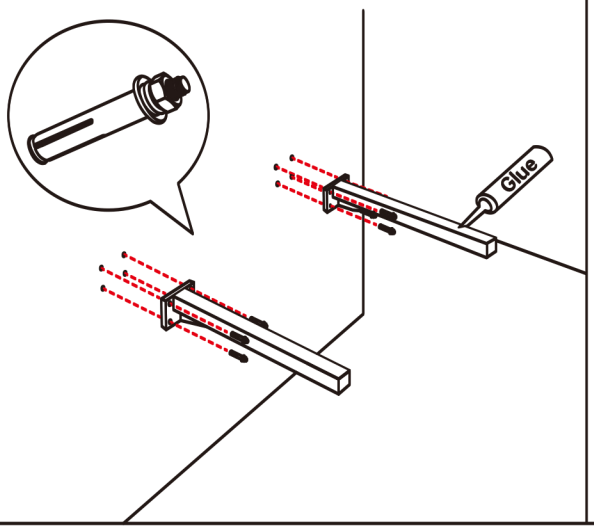Insert the wall plug and mout screws into the wall. Install the brackets. Put some glue on the surface of brackets.



Installation steps : 4

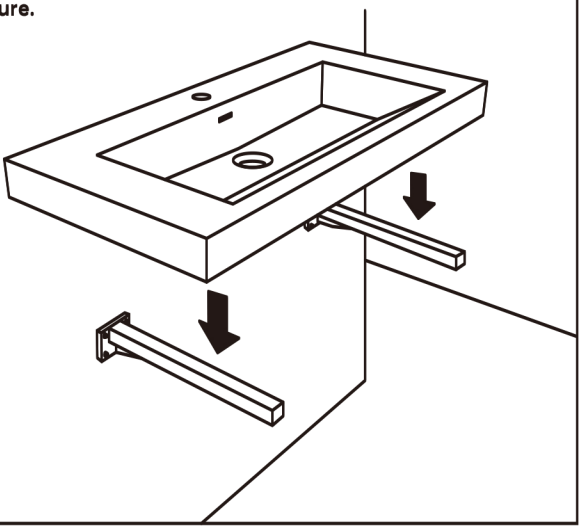Install the product onto the stand.
⚠ Before installing your bathroom sink, make sure the brackets are secure.



Scan the QR code to view detailed product installation instructions and/or videos.