



LED BED

ASSEMBLY INSTRUCTIONS

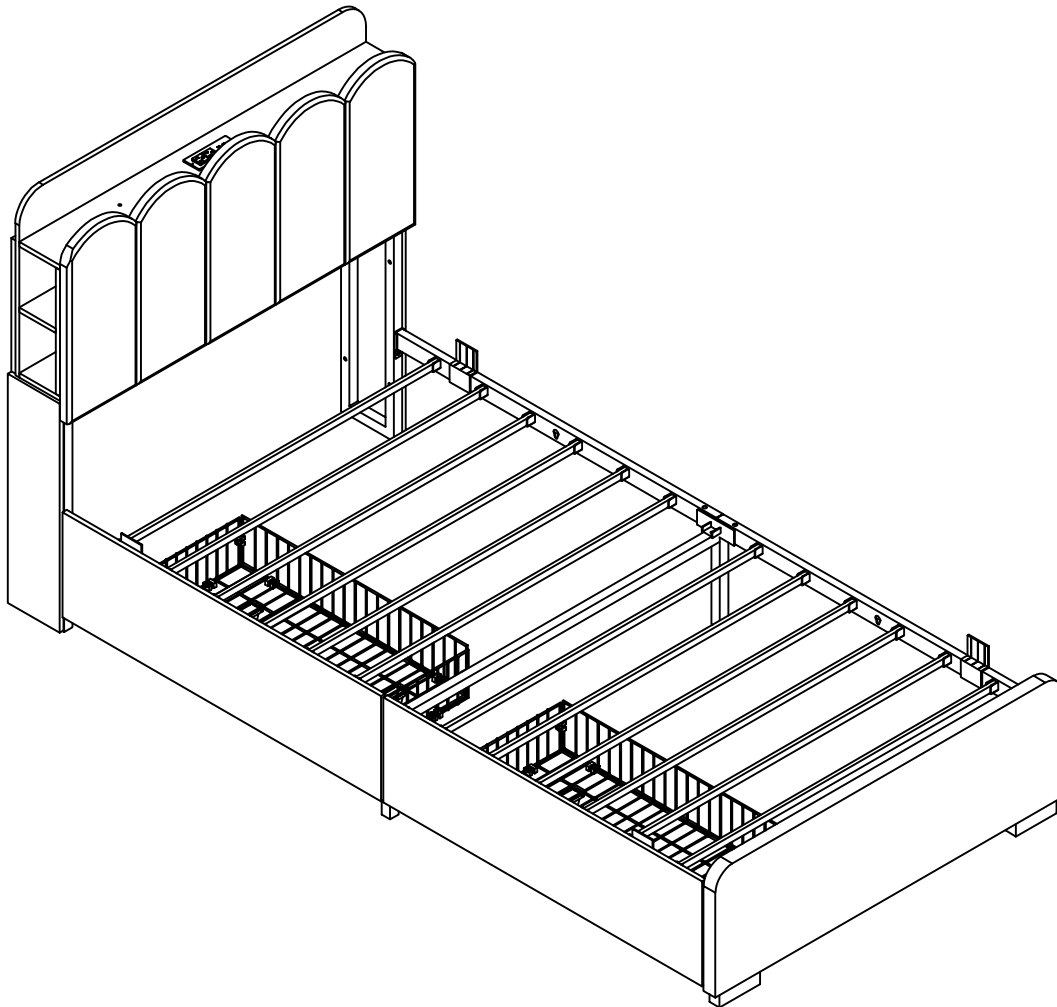


Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

PART LIST

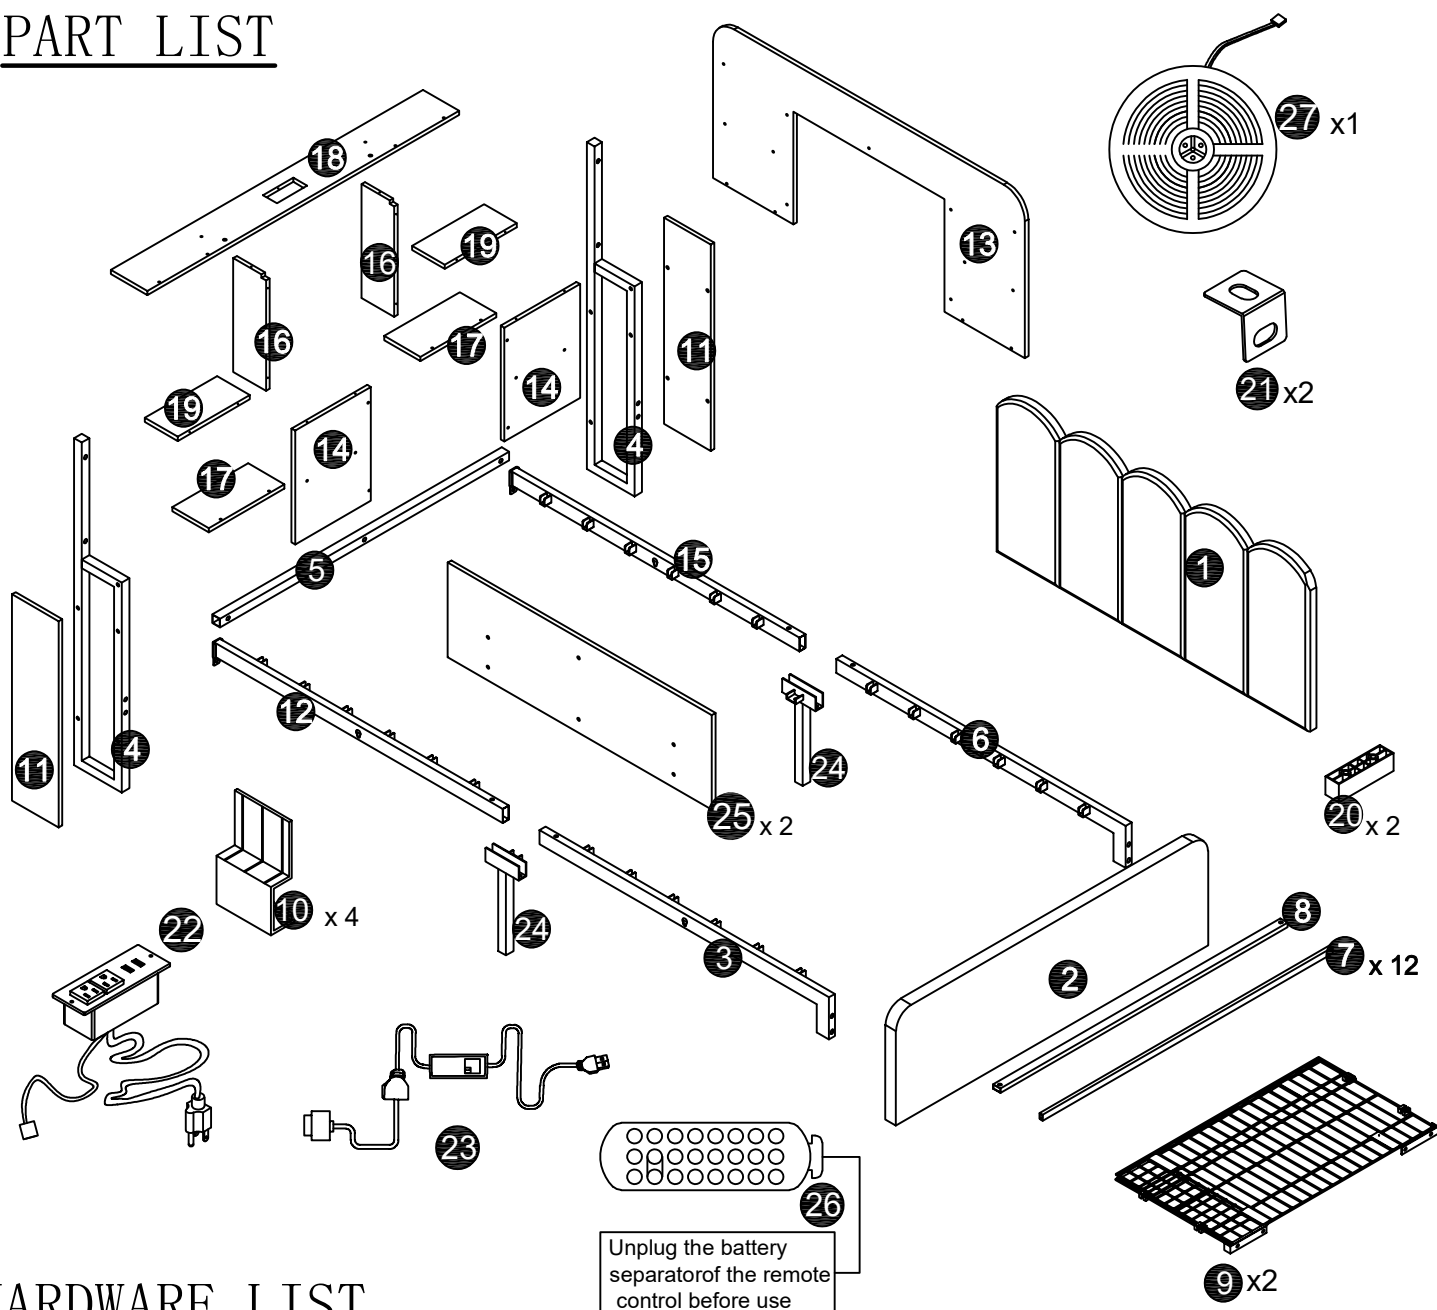


HARDWARE LIST




38mm M8 Bolt x 2



35mm M6 Bolt x 15



45mm M6 Bolt x 2




60mm M8 Bolt x 12



12mm M6 Bolt x 16




M5
x 1



40mm 6 Bolt x 35



M8 x 2

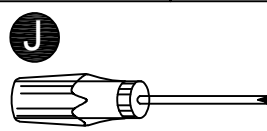


x 1



3x15 x 2




M4
x 2




x 1



38mm M8 Bolt x 4

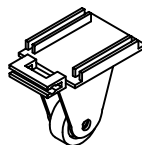

U x 8




V x 4





W x 2

Step 1:

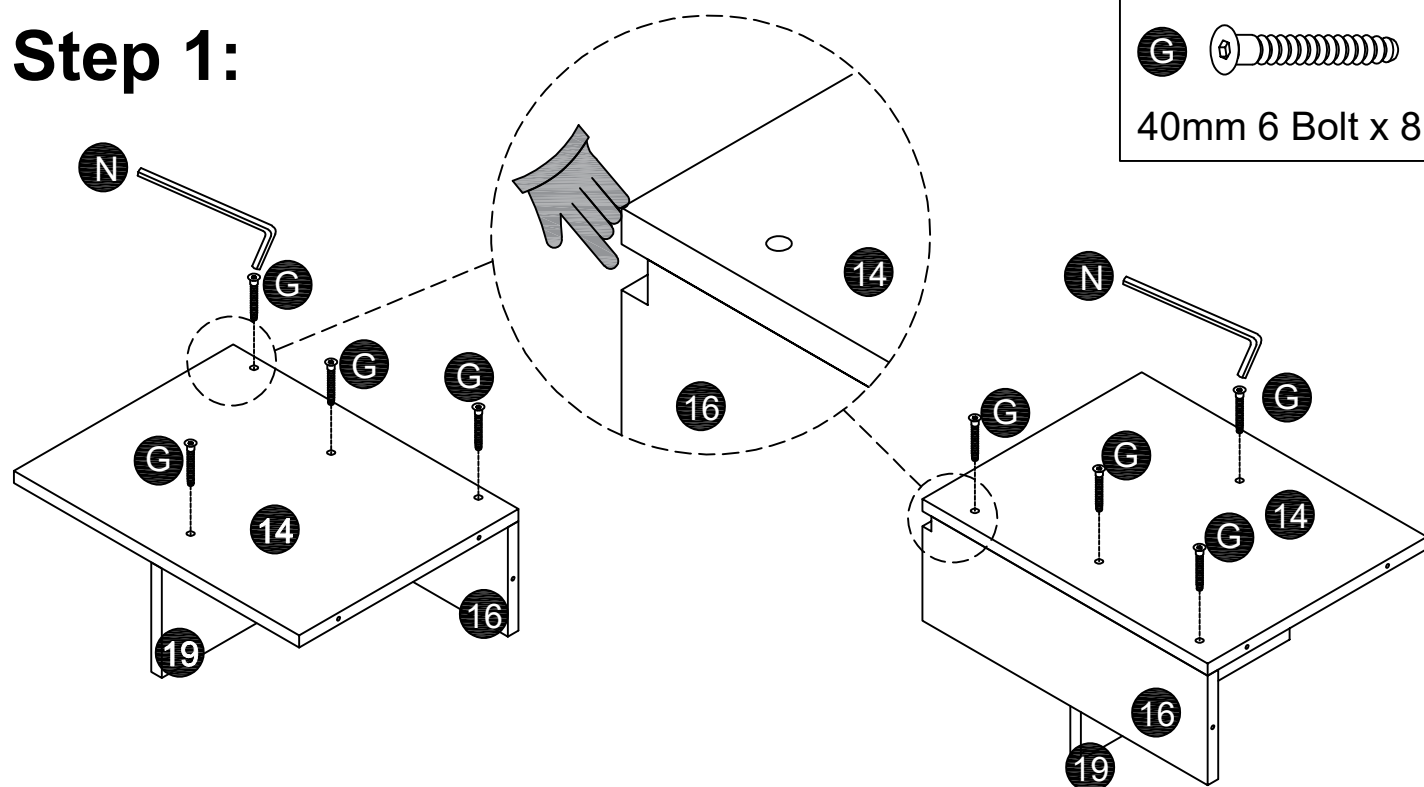


Step 2:

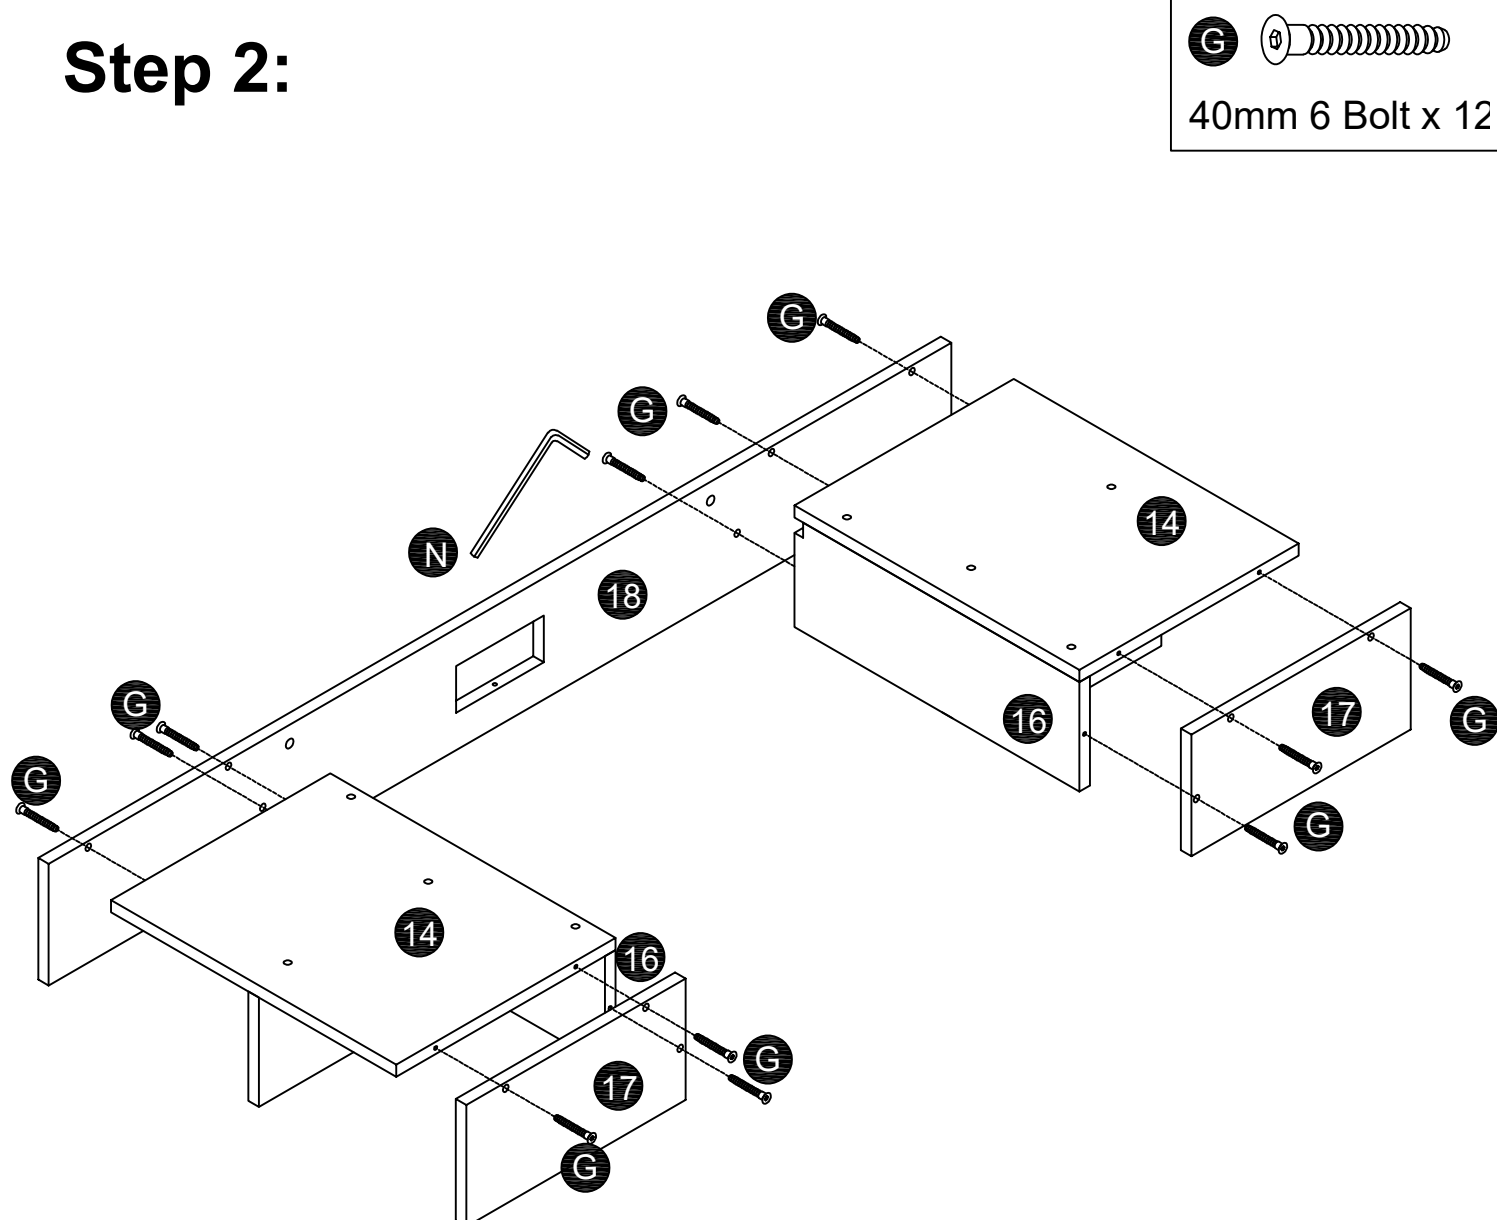




40mm 6 Bolt x 15

Step 3:

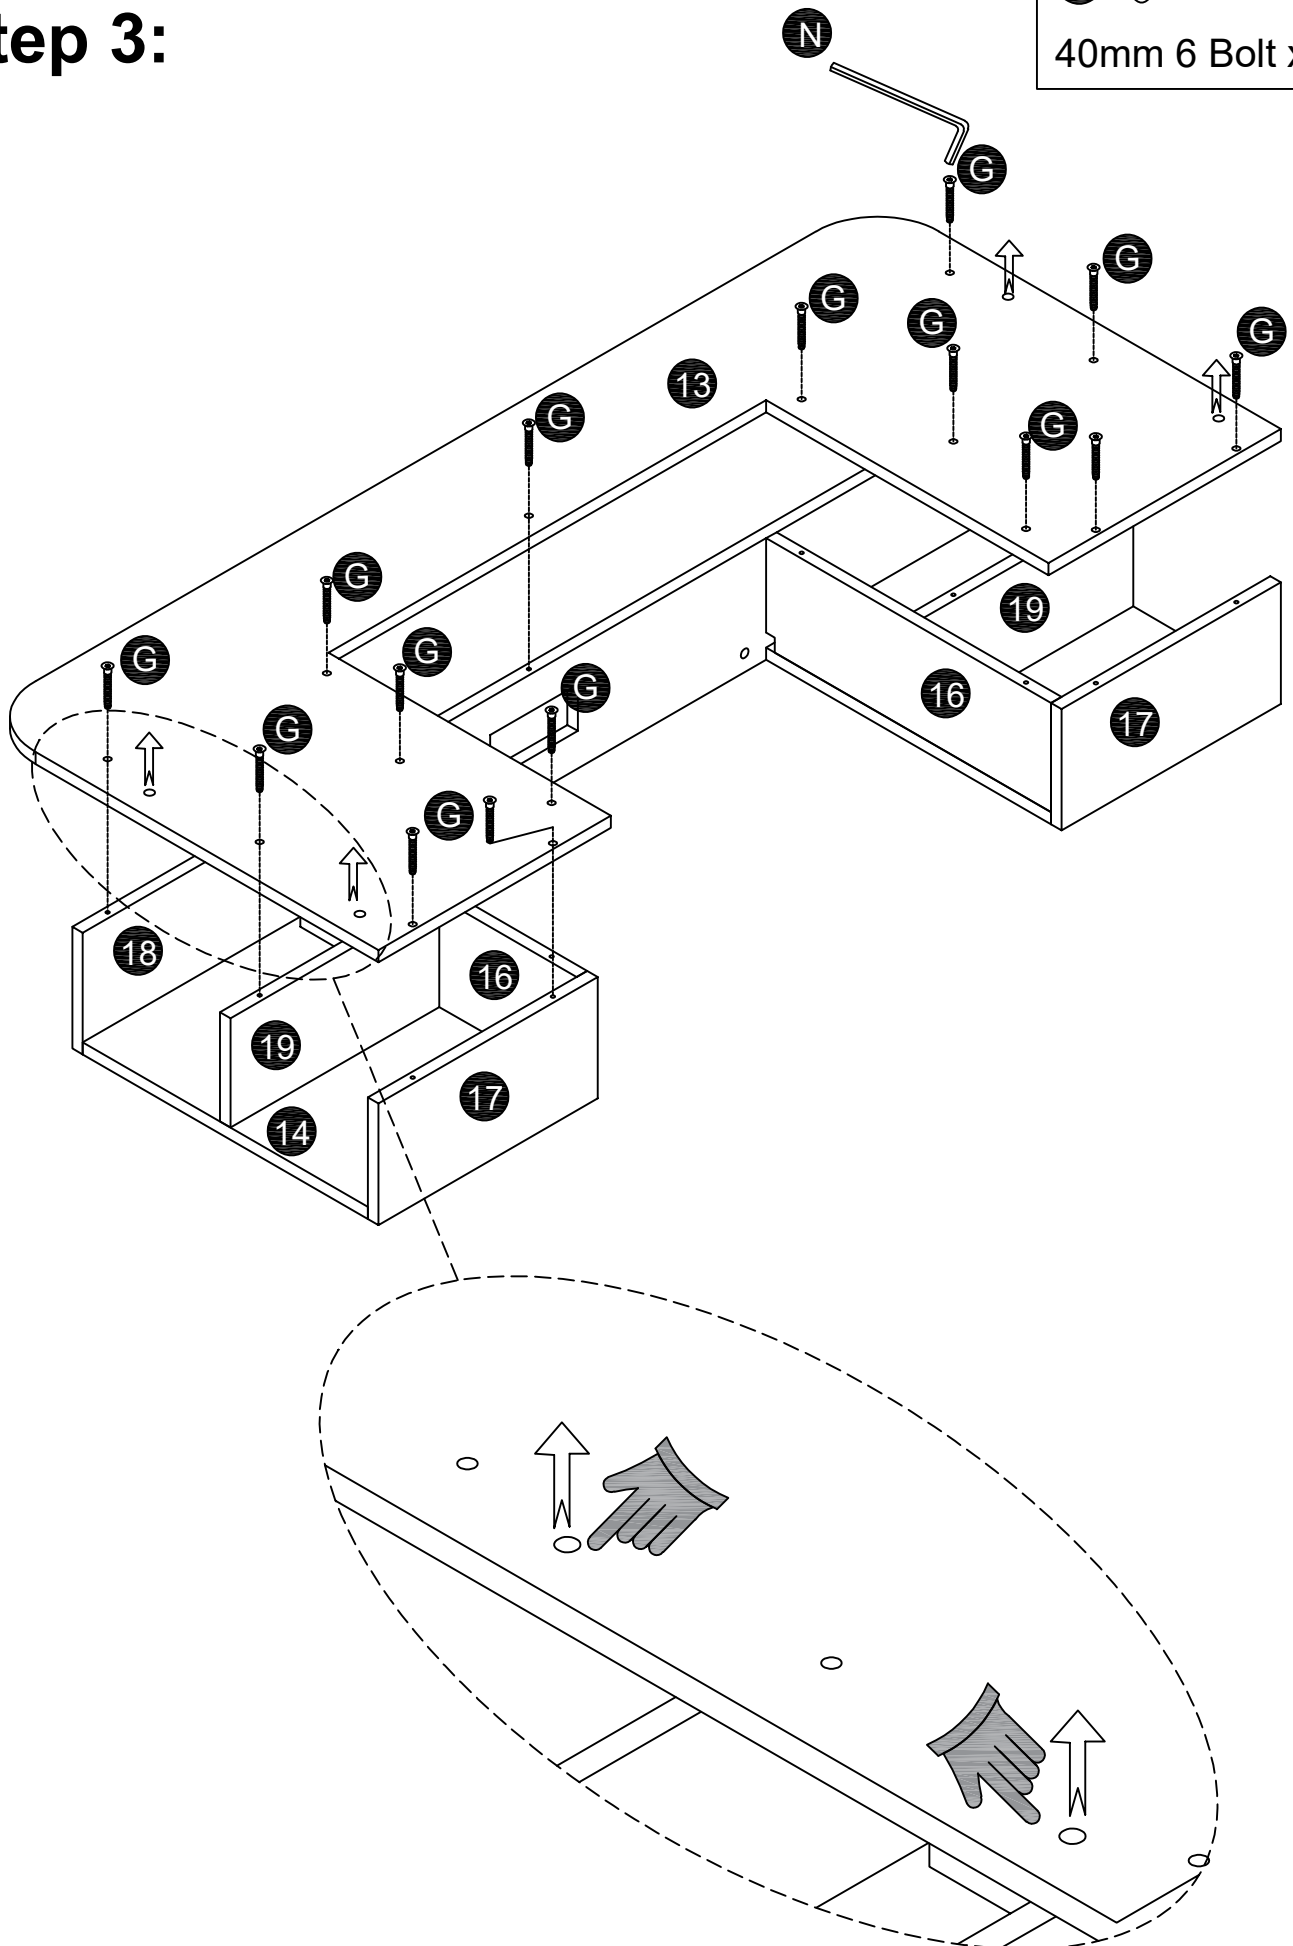



Step 4:

C 
45mm M6 Bolt x 2

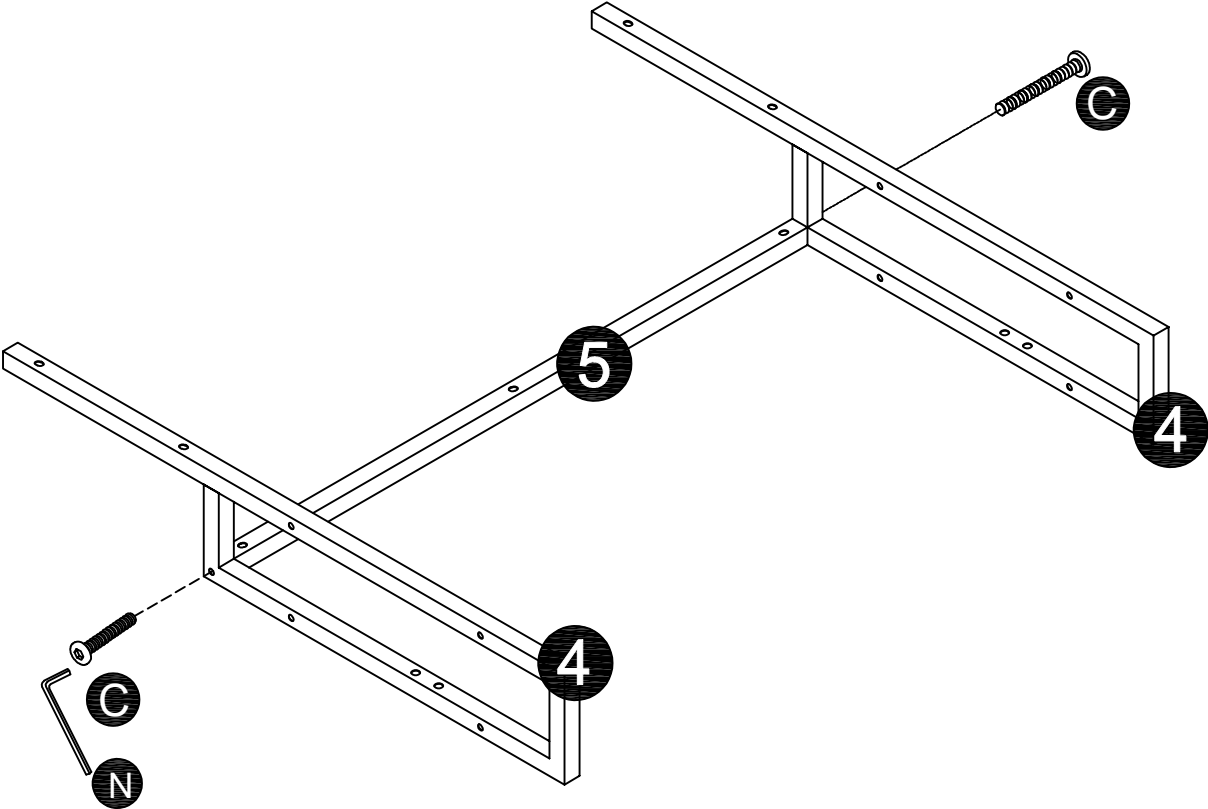

Step 5:


P 
38mm M8 Bolt x 4

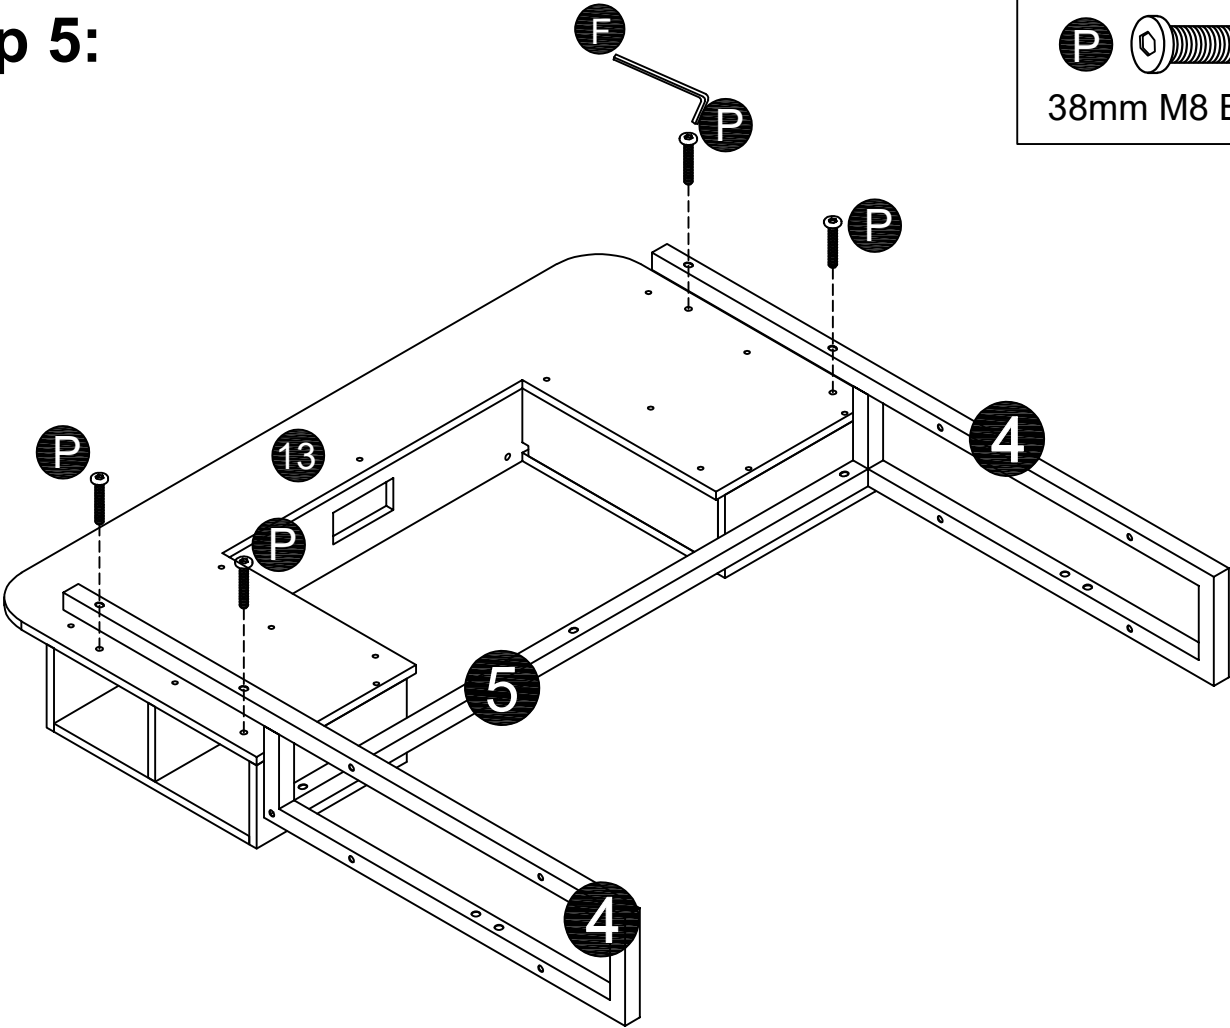

Step 6:




35mm M6 Bolt x 3

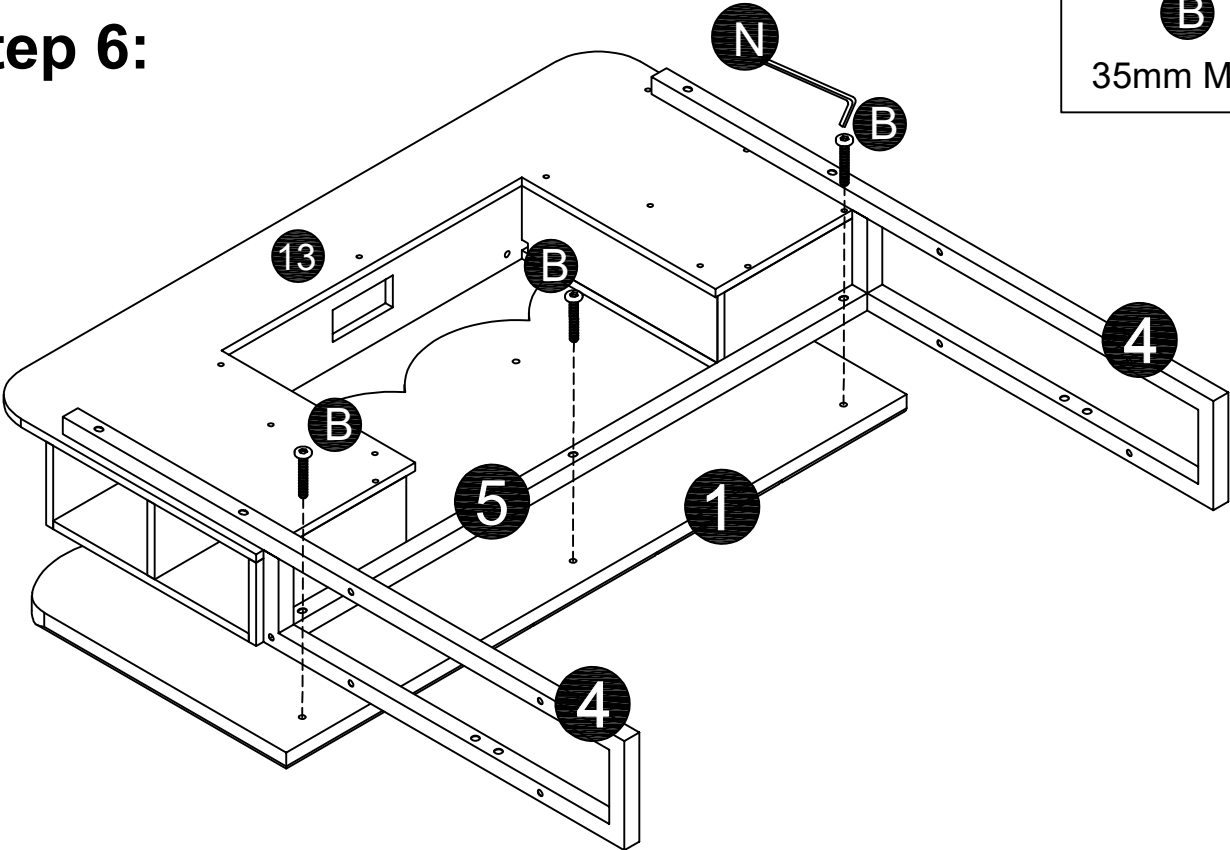


Step 7:




12mm M6 Bolt x 4

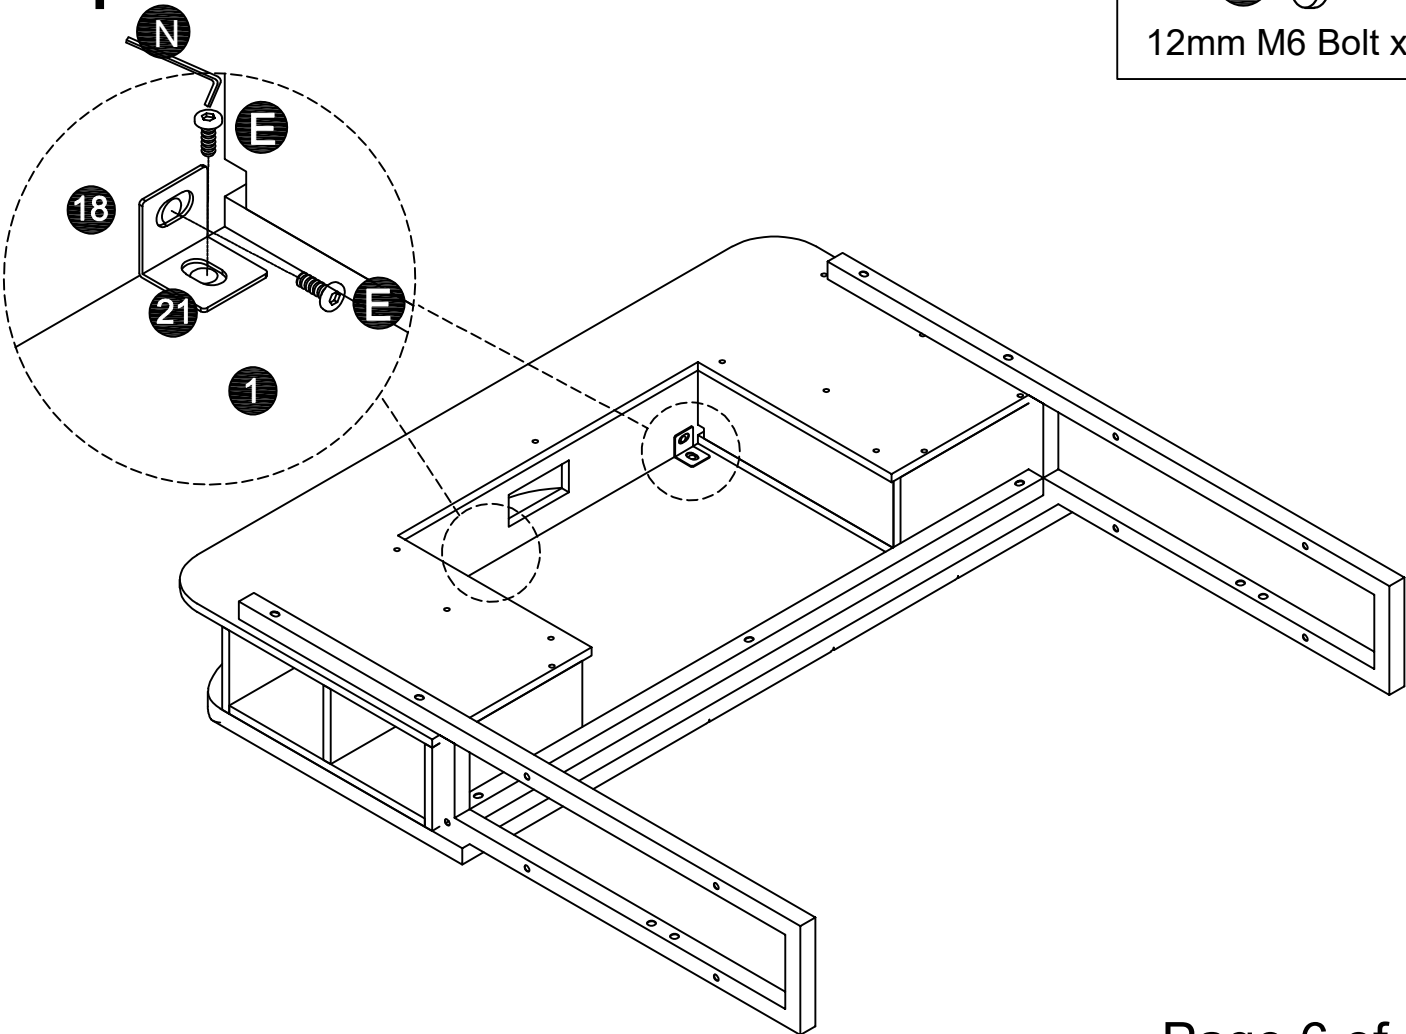

Step 8:




35mm M6 Bolt x 4

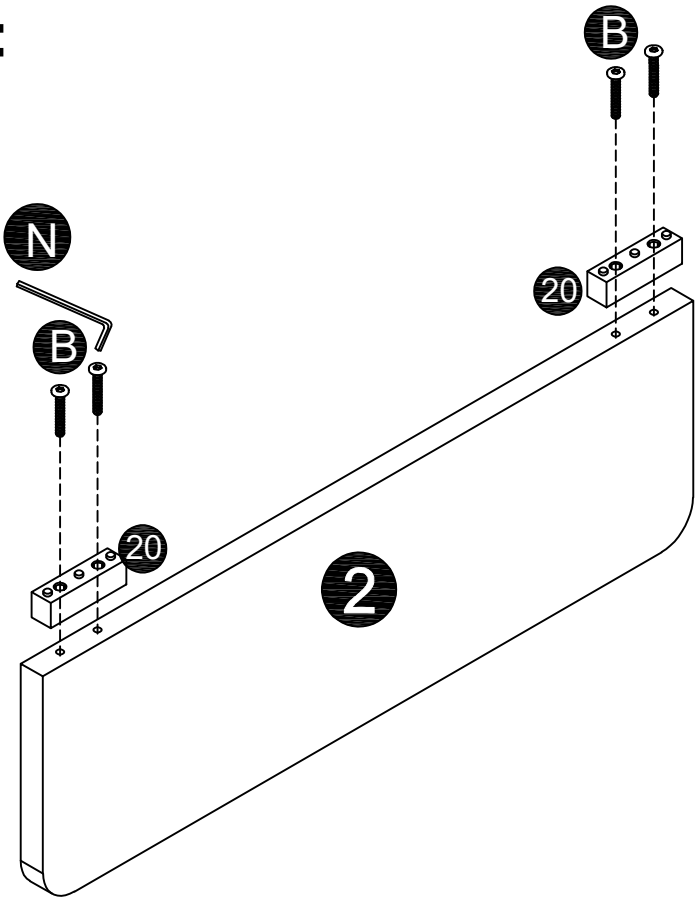



Step 9:




60mm M8 Bolt x 4

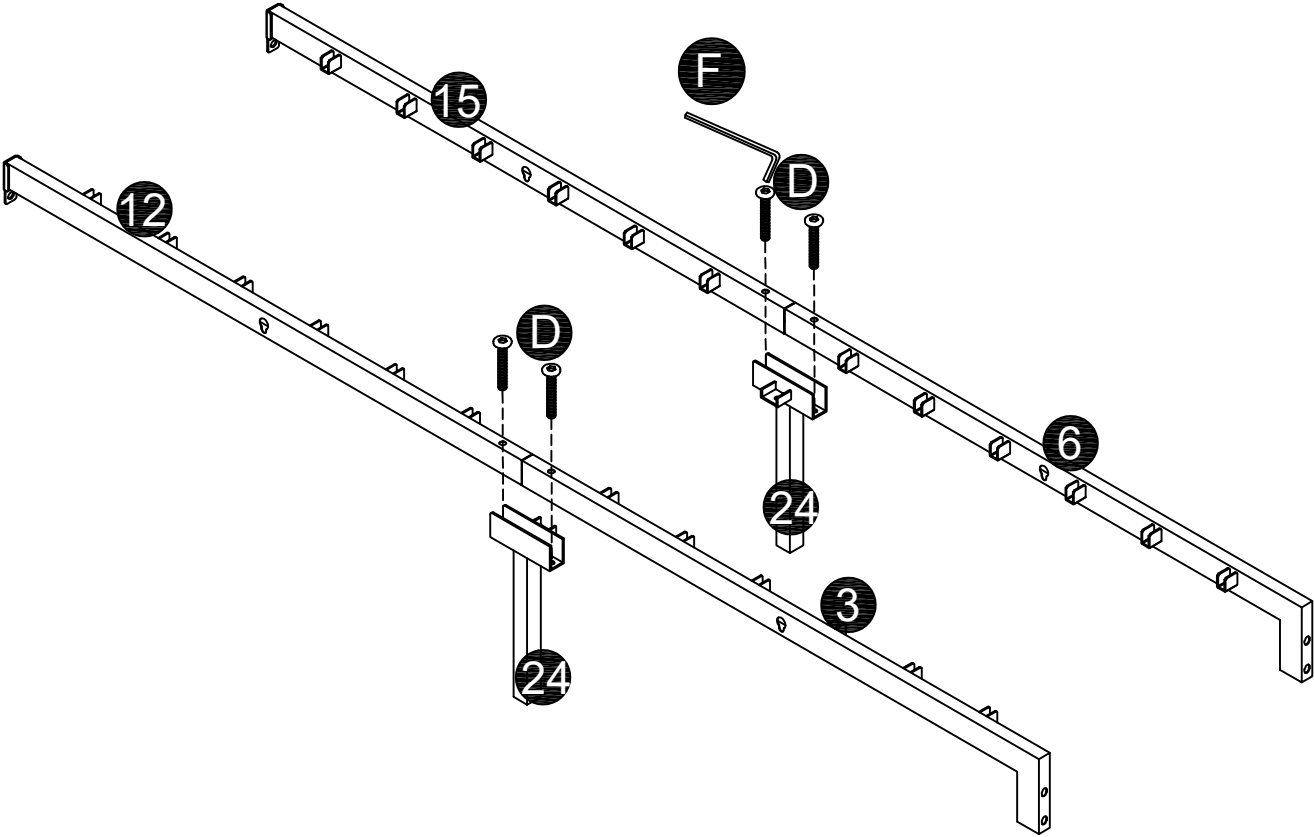

Step 10:


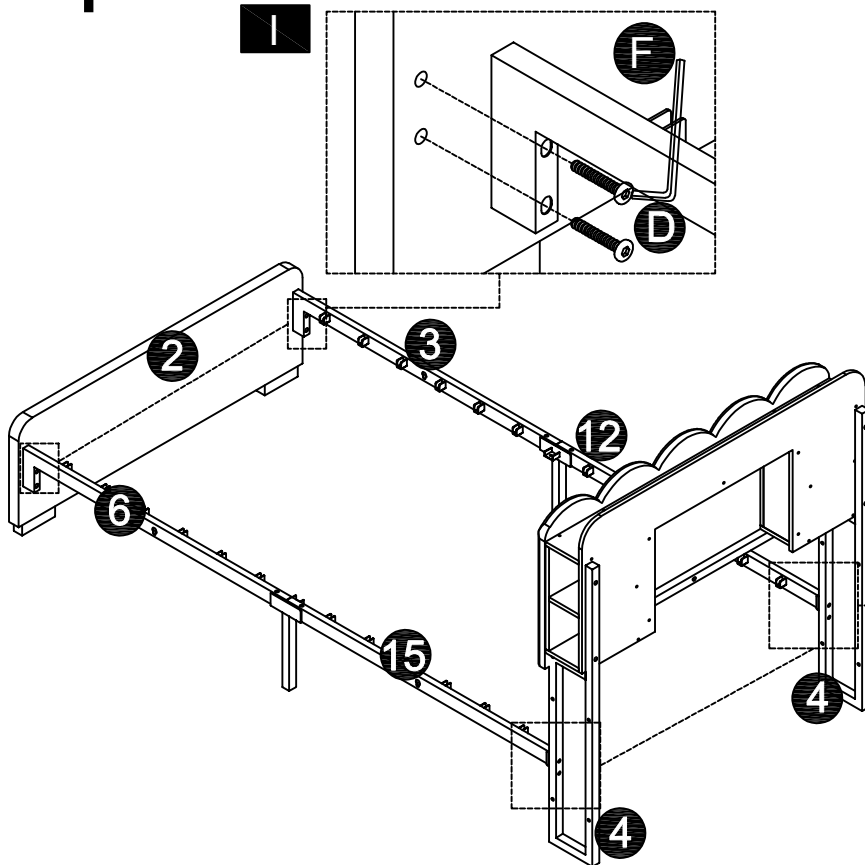


60mm M8 Bolt x 8




x 2

II

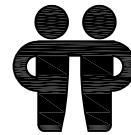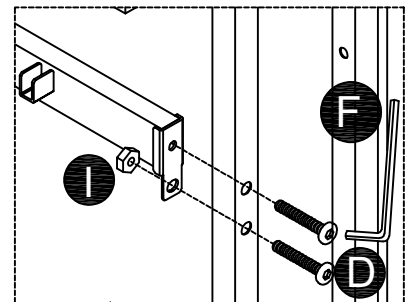


Some furniture may require two persons to assemble for safety reasons.

Step 11:

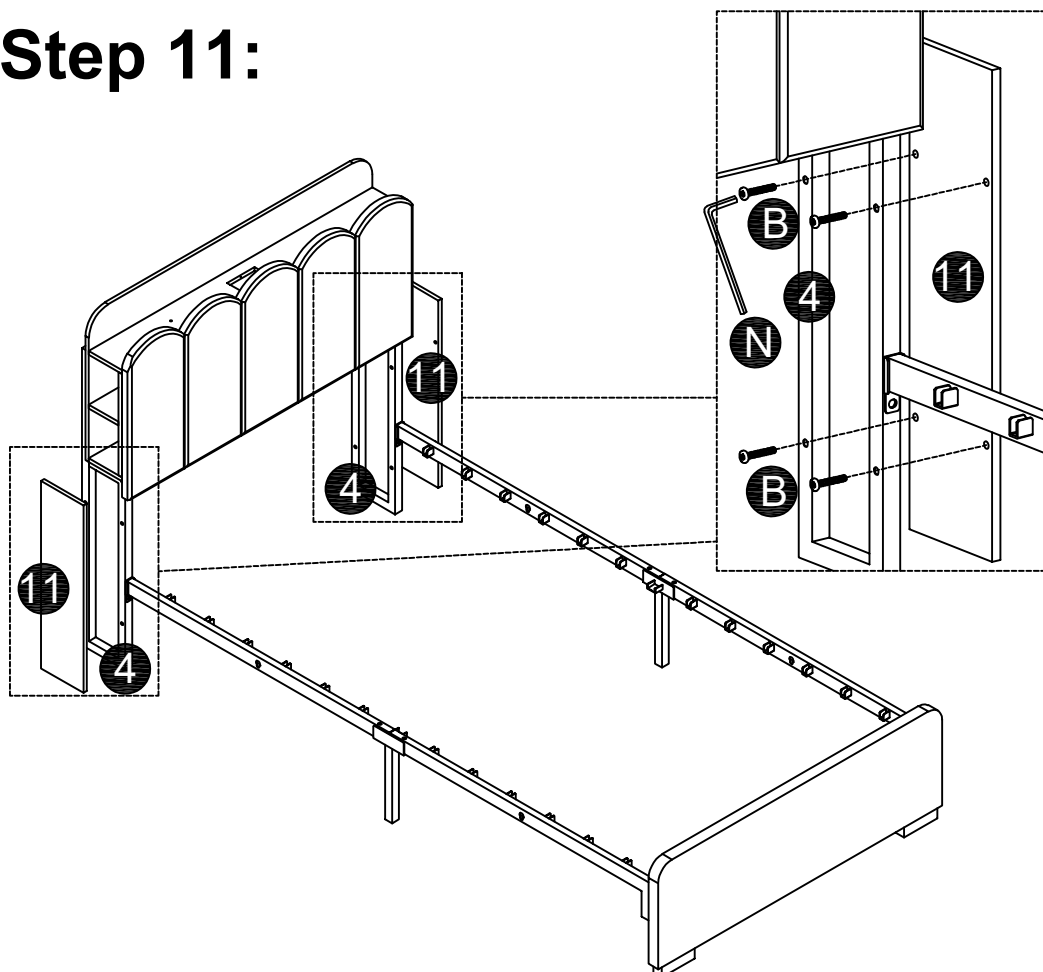


35mm M6 Bolt x 8


Step 12:

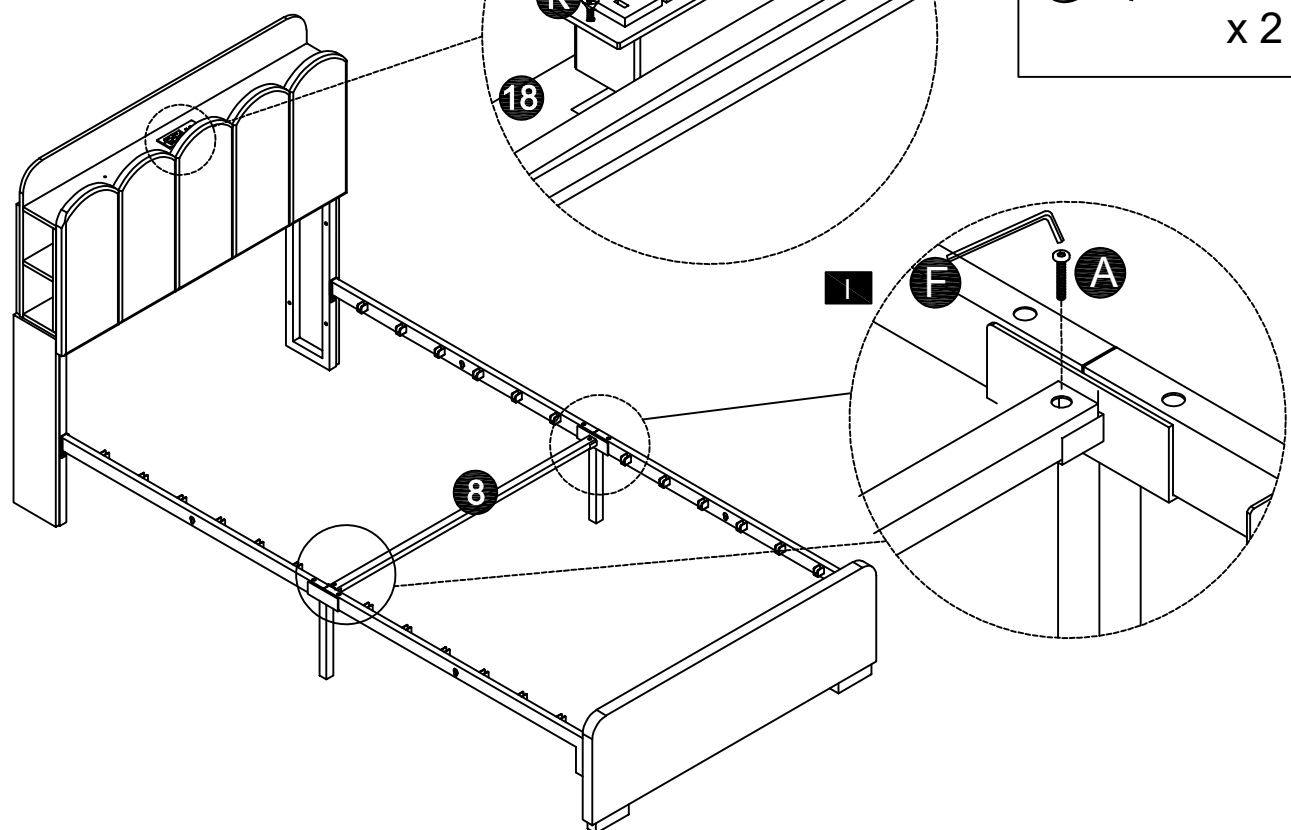


Step 13:

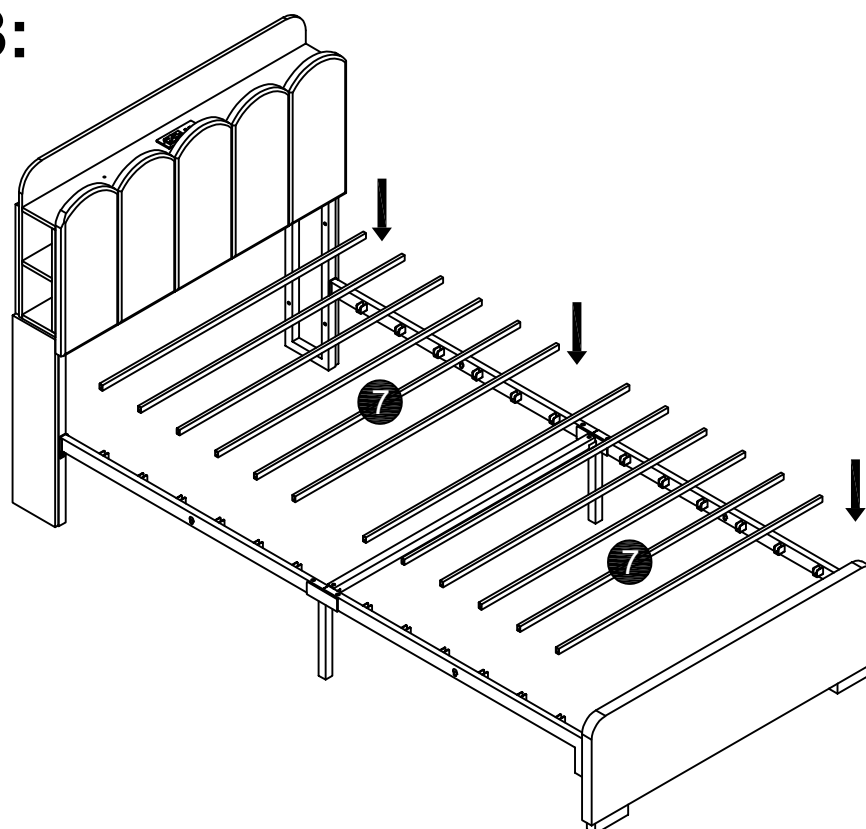


Step 14:

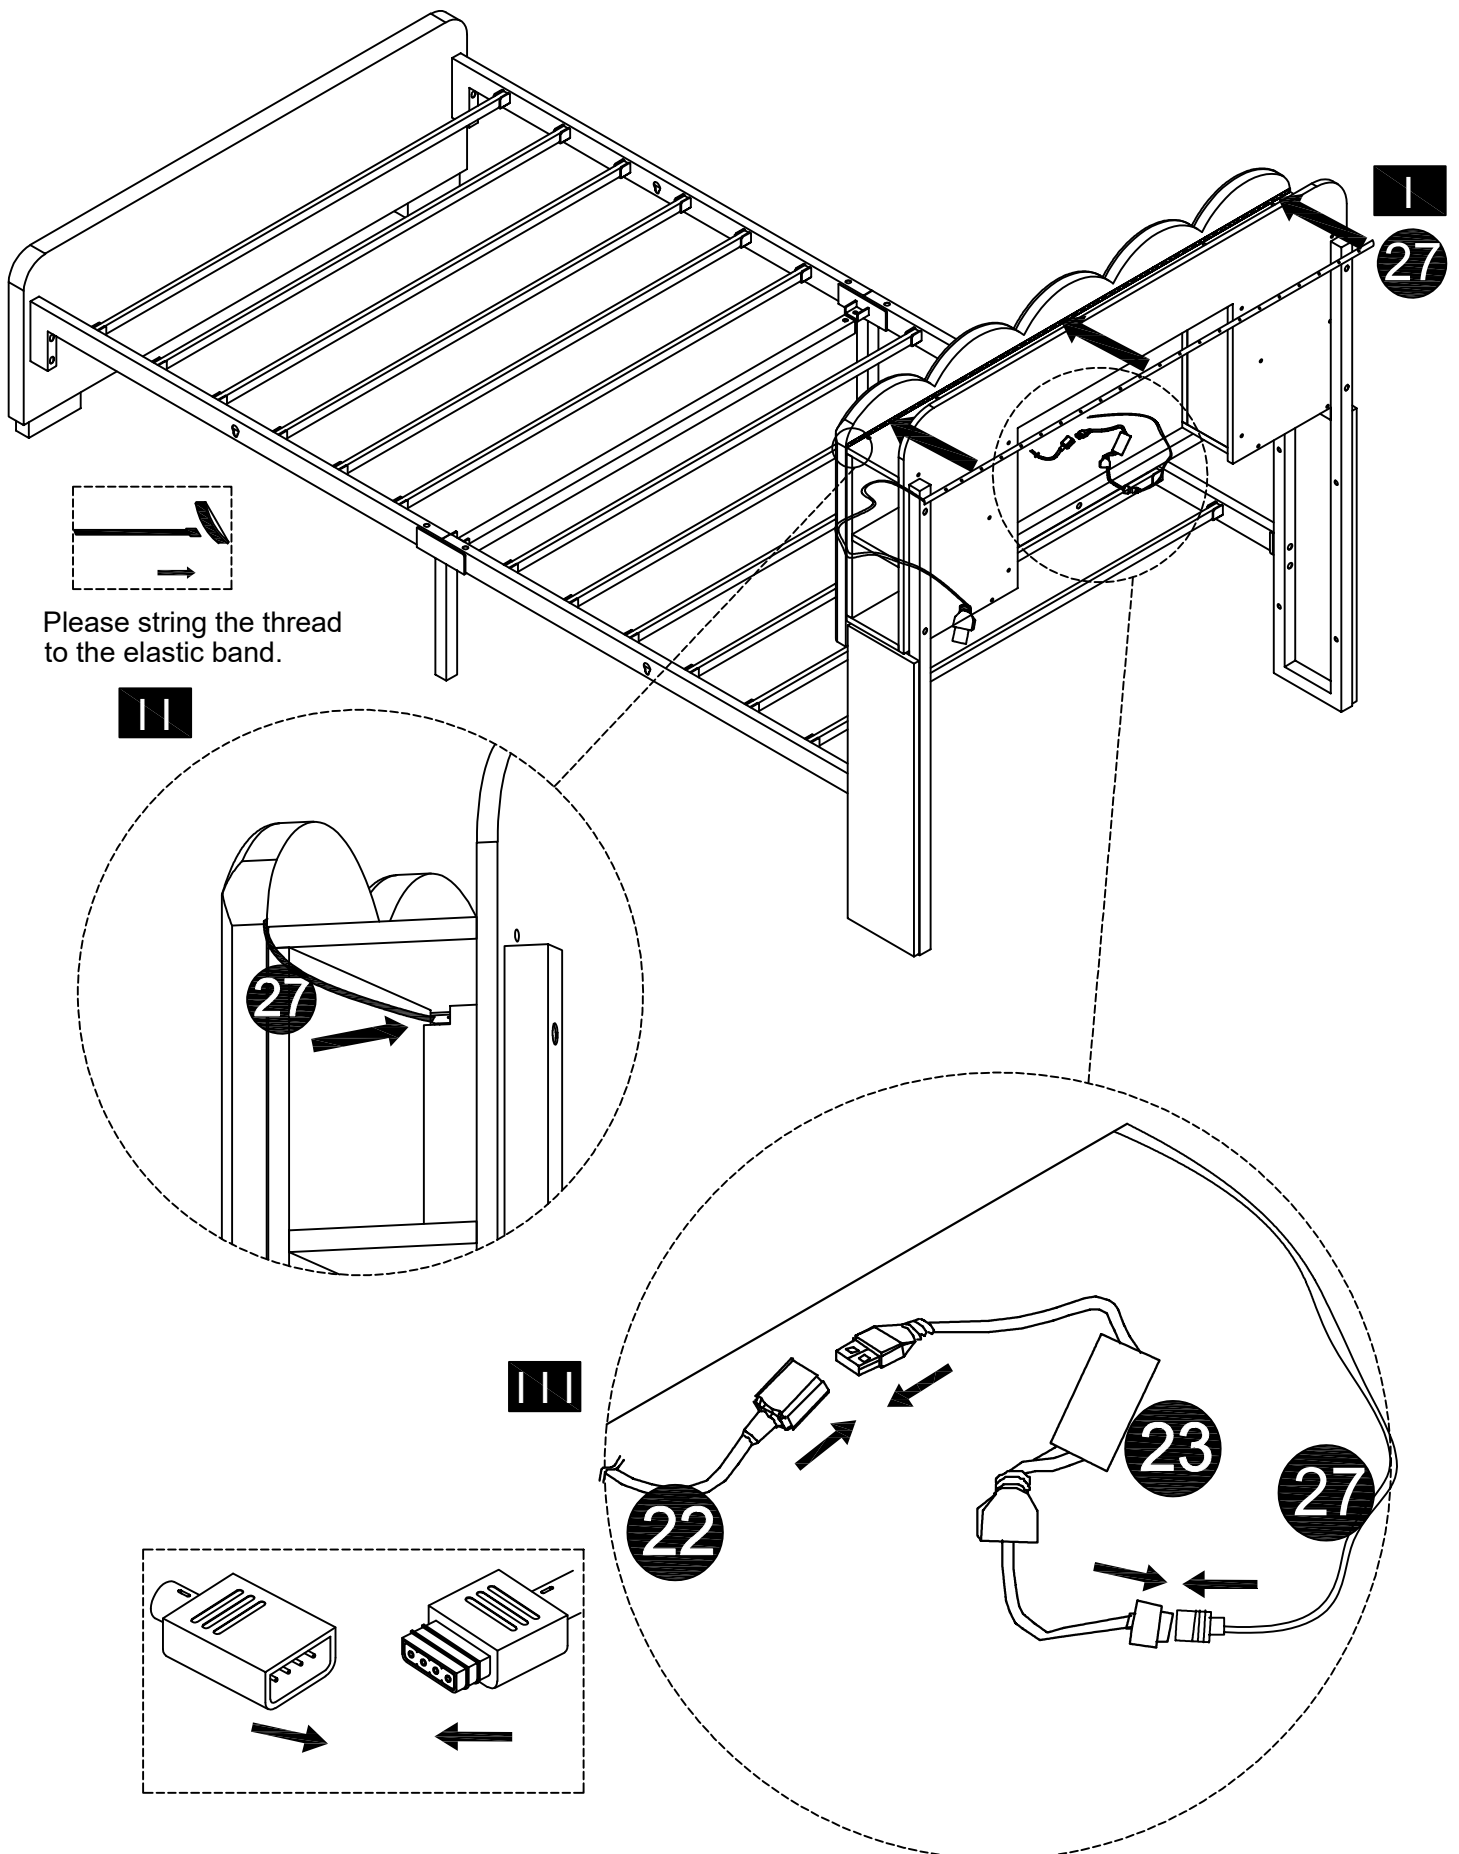


Step 15:

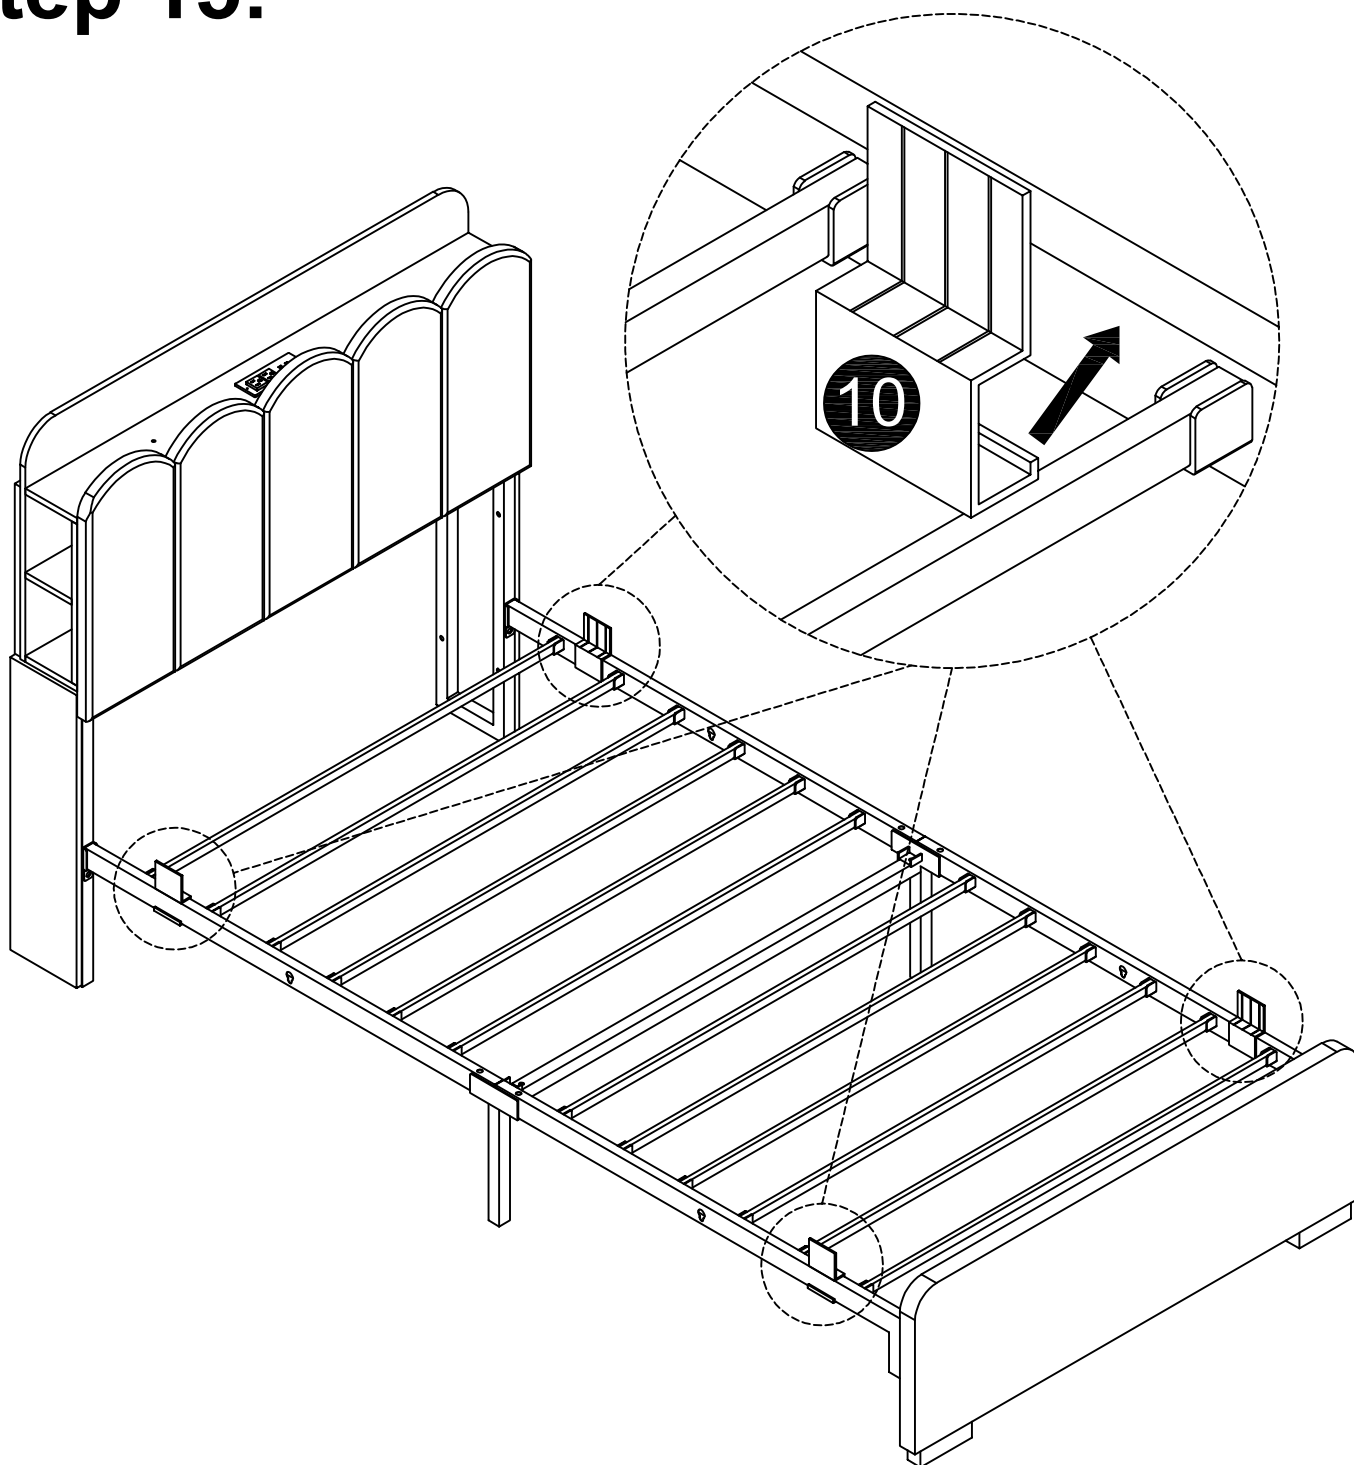


Step 16:

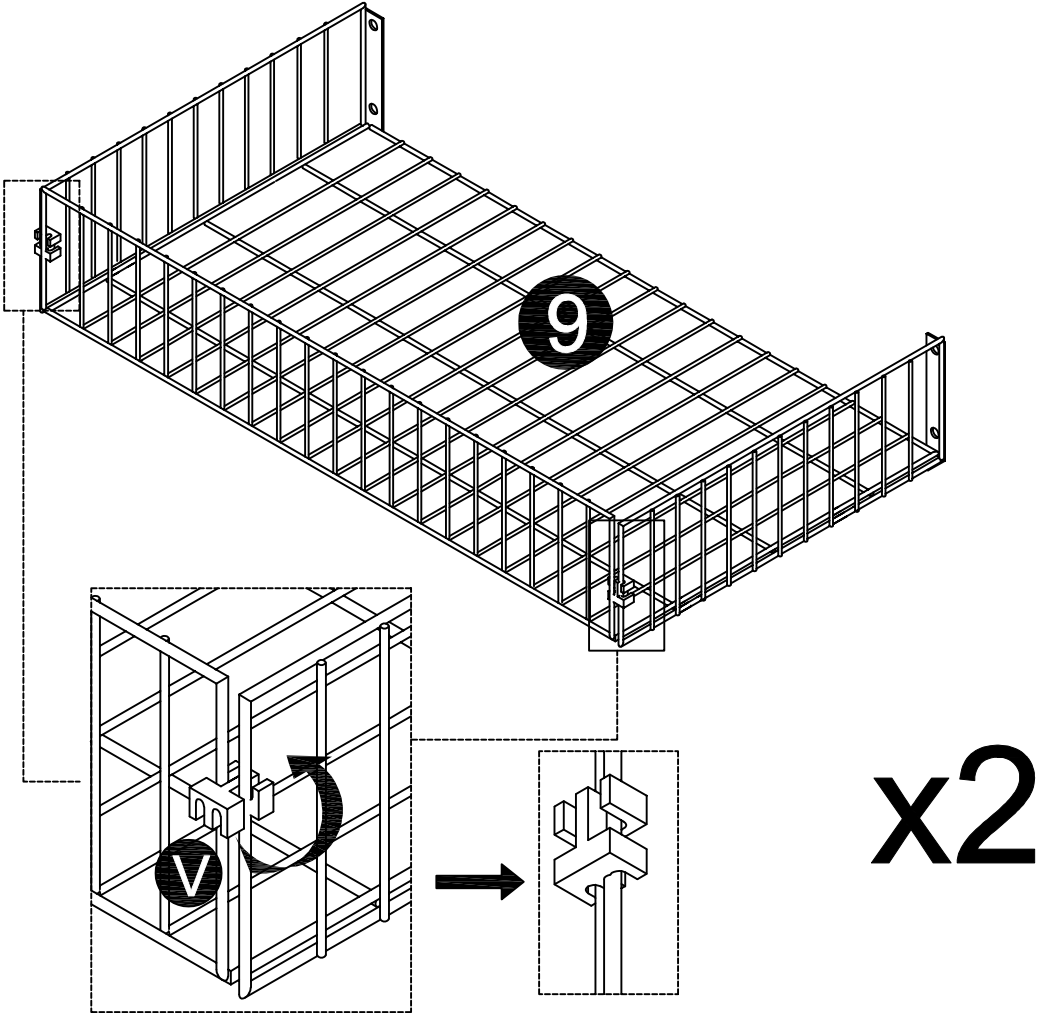


Step 17:

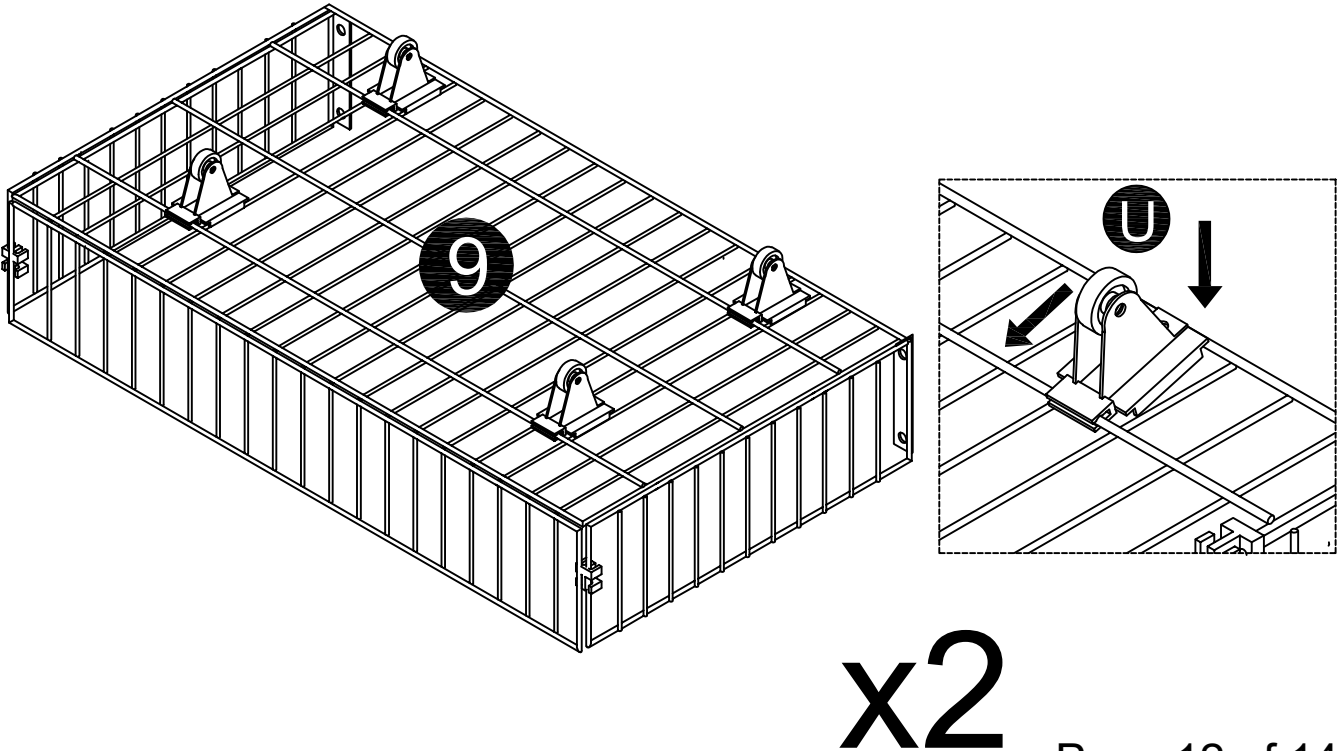

Step 18:

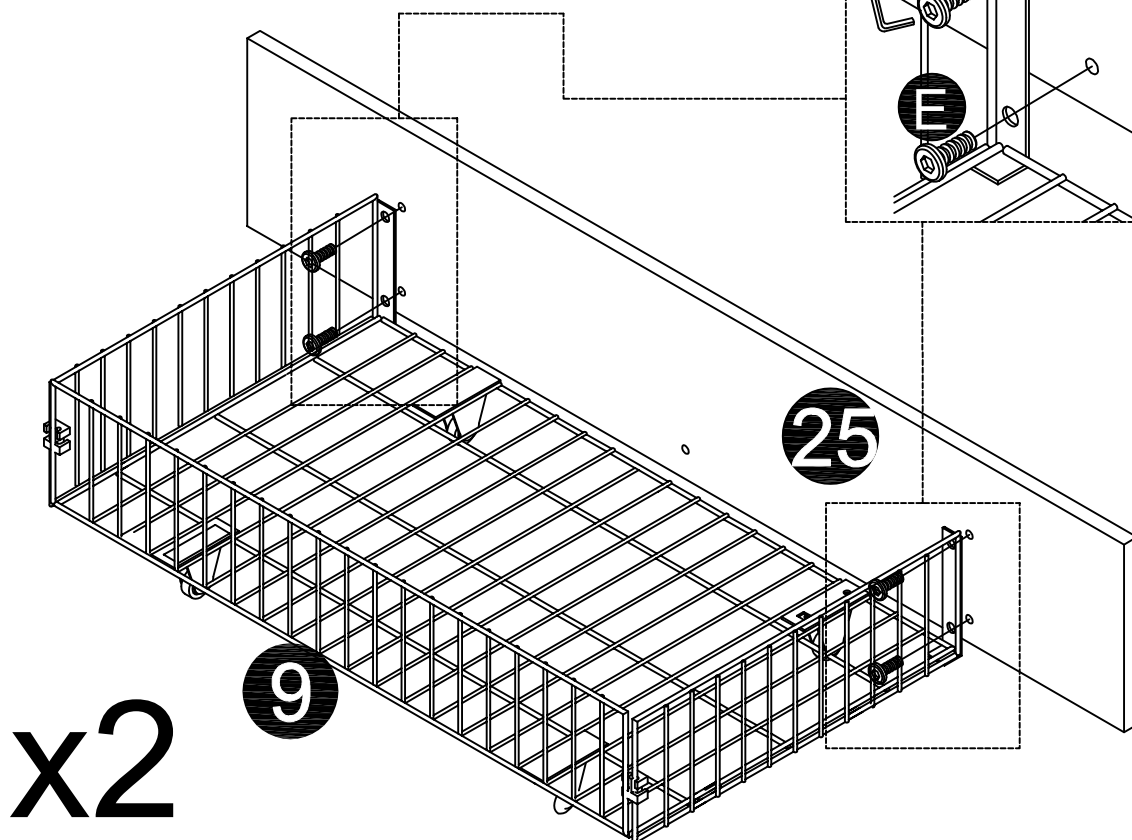

Step 19:

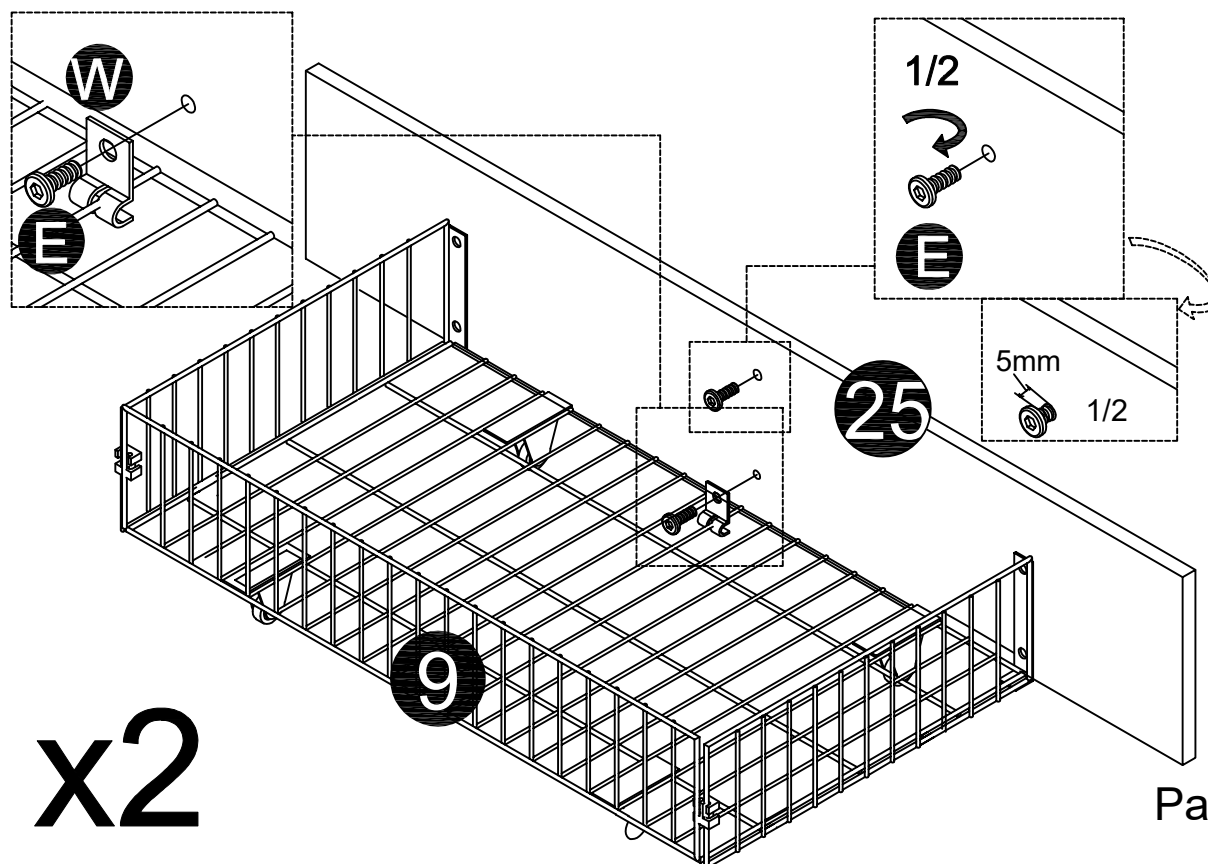

Step 20:

