
Installation Instruction

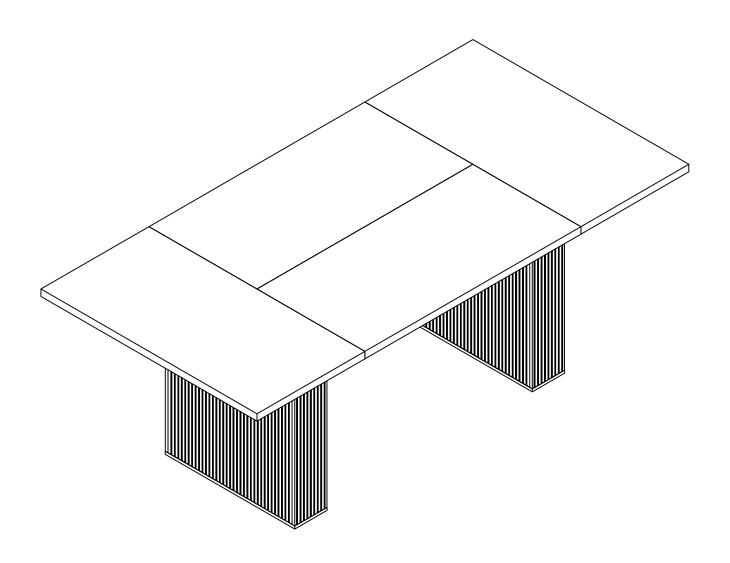

Assembling

Estimated time for assembly



45:00

What you need


- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation




100 | 35 lbs table top



What' included

Code [Qty	
A Can	n Bolt M6X35MM	39
B Can	n Lock 15X10MM	39
C Woo	oden Dowel M8X30MM	10
D Scre	ew M4X30MM	32
E Scre	ew M6X45MM	8
F Scre	ew M6X25MM	16
G Woo	oden Dowel M6X30MM	32
H Scre	ew M6X45MM	16
I Flat-	head screwdriver	1
J Wre	nch M4X55MM	1

The Hardwares

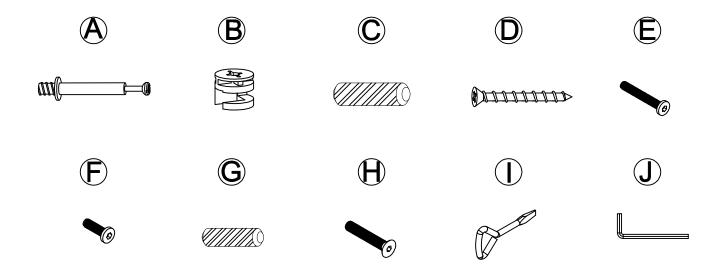


IMPORTANT:

- 1.Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
- 2.Do not over tighten screws and bolts to avoid stripping
- 3.Please use hand tools to assemble this product. Do not use power tools.


Included Accessories


Code	Description	Qty
1	Left and right panels	2
2	Rear panel	1
3	Front panel	1
4	Roof plate	2
5	Bottom plate	2
6	Anterior and posterior lateral plates	4
7	Lateral plate	4
8	Iron frame	2
9	Cross bar	2


The Accessoriess

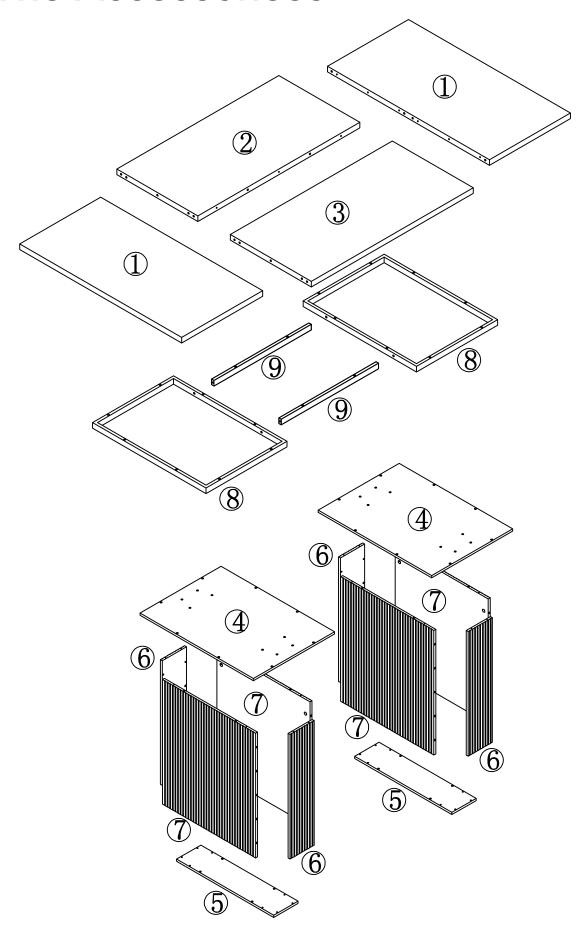



Step 1




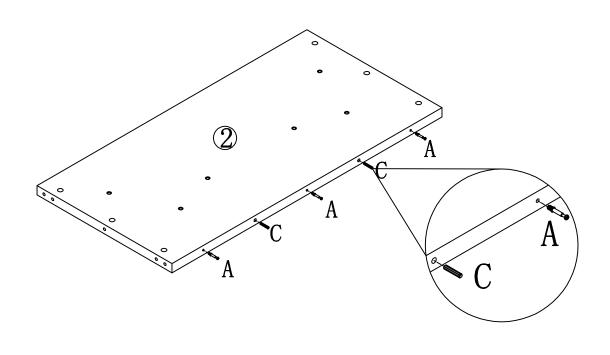

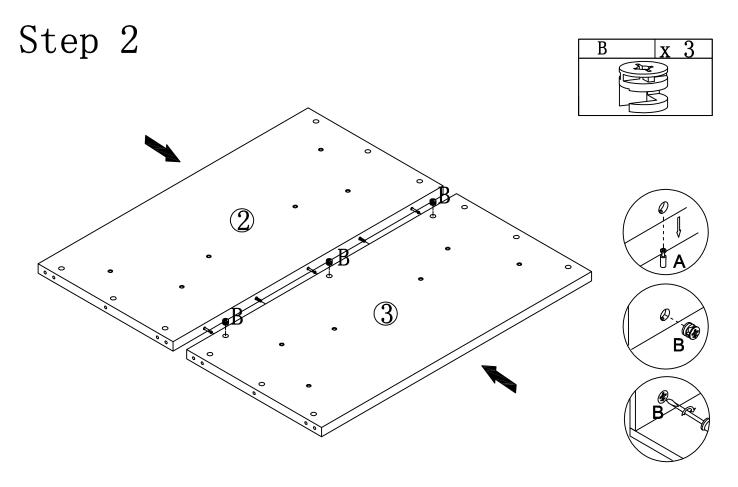


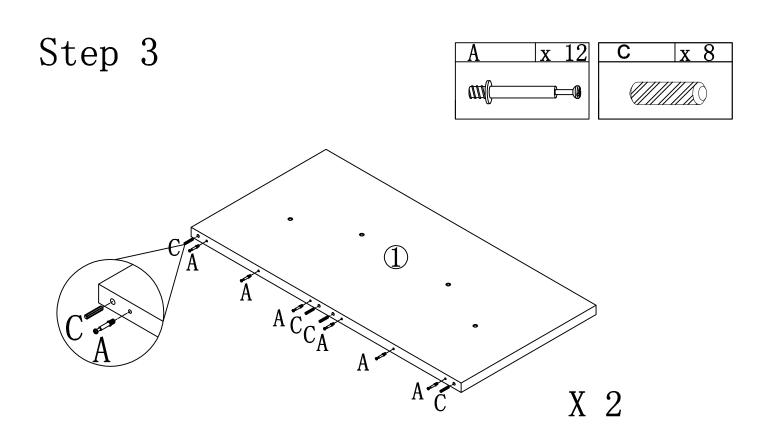


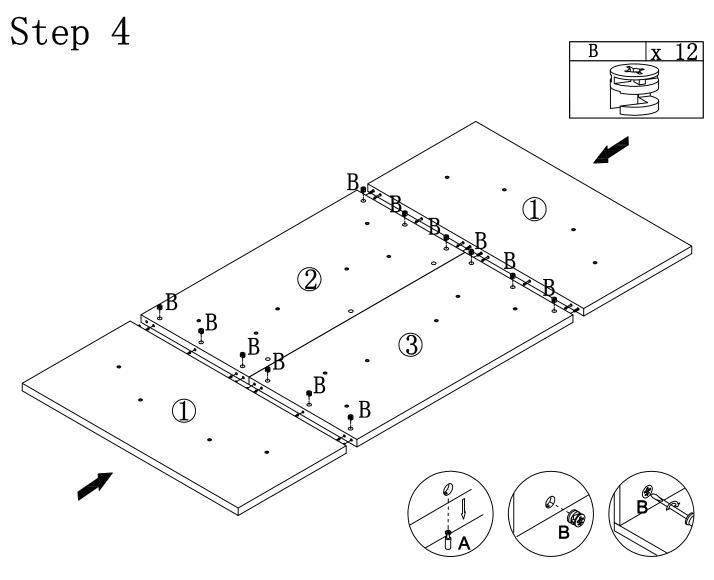

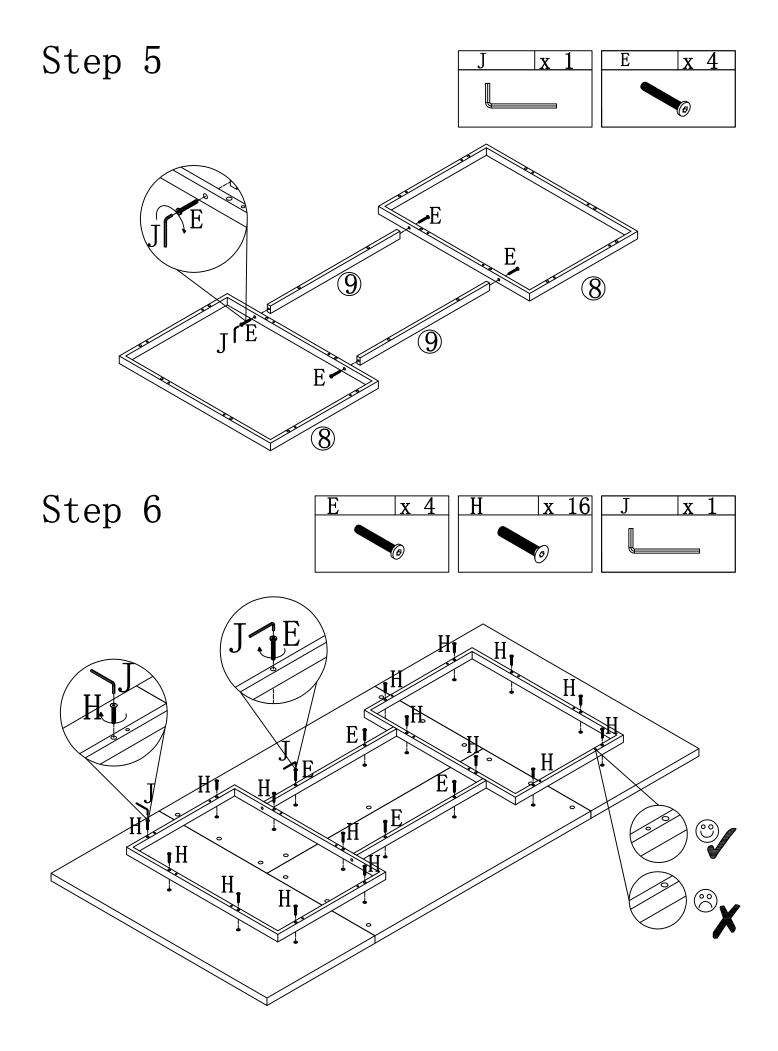


Step 7




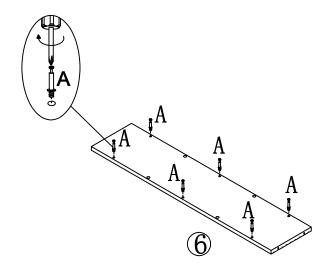



X 4

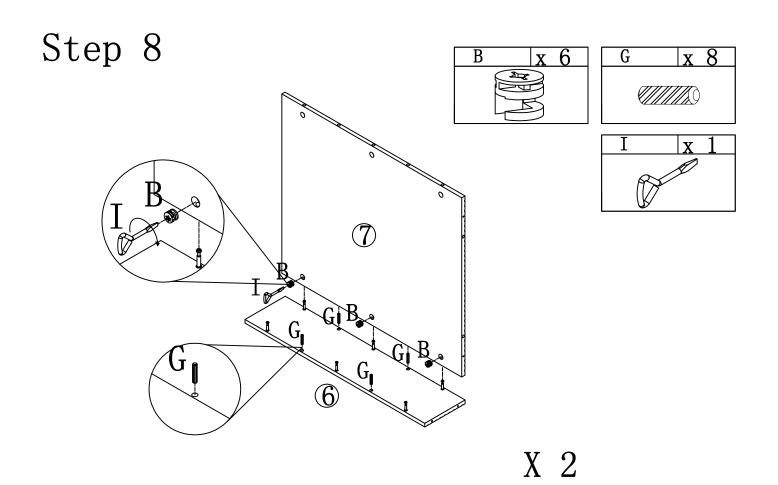


Step 9






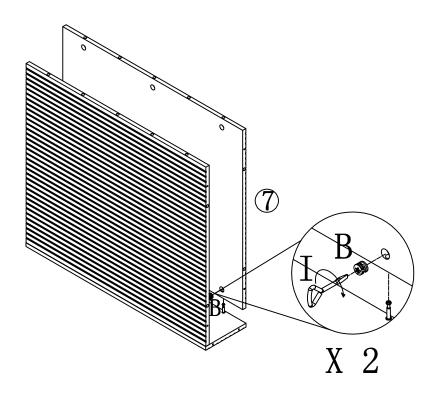


Step 10

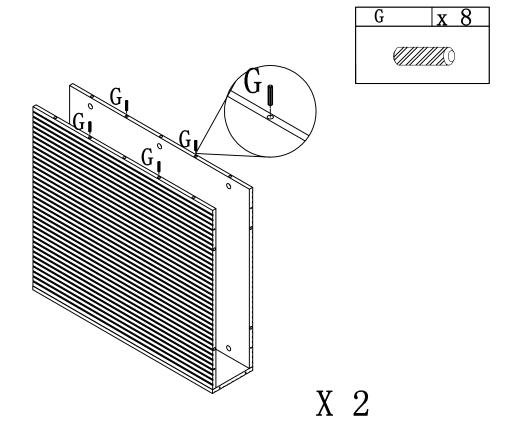


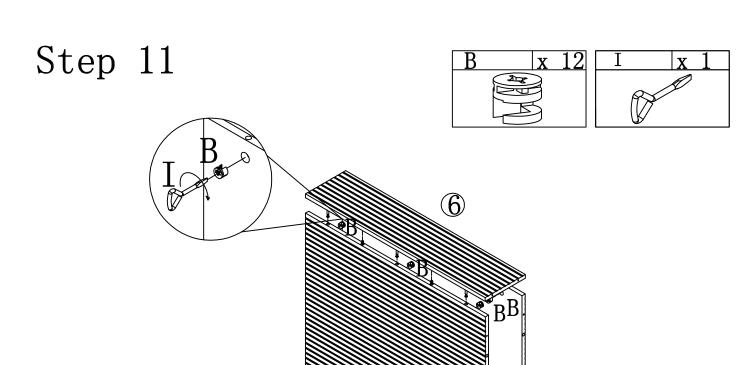



X 2



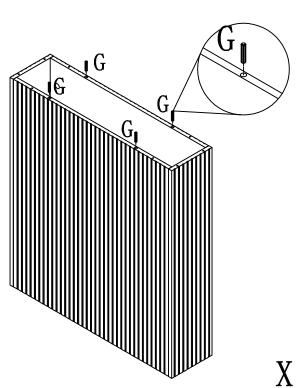







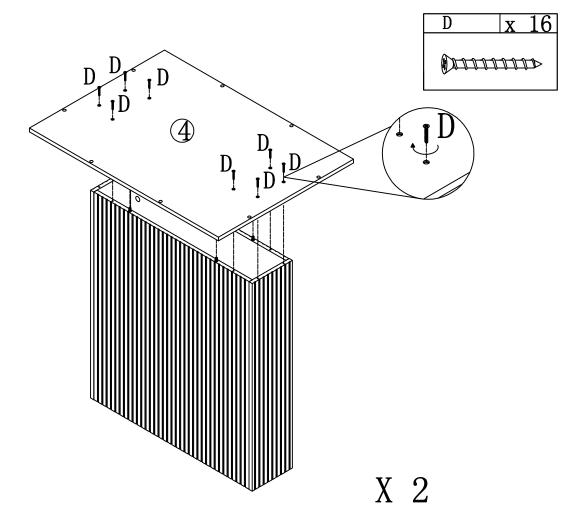

Step 14

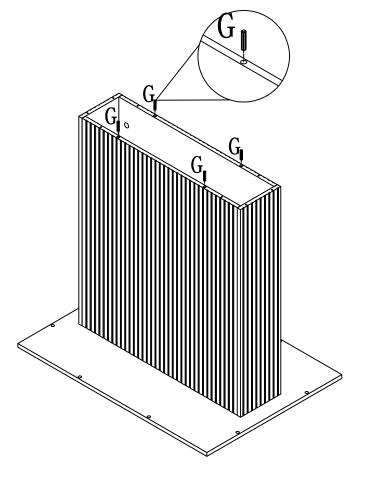



X 2

