
Assembly Instructions

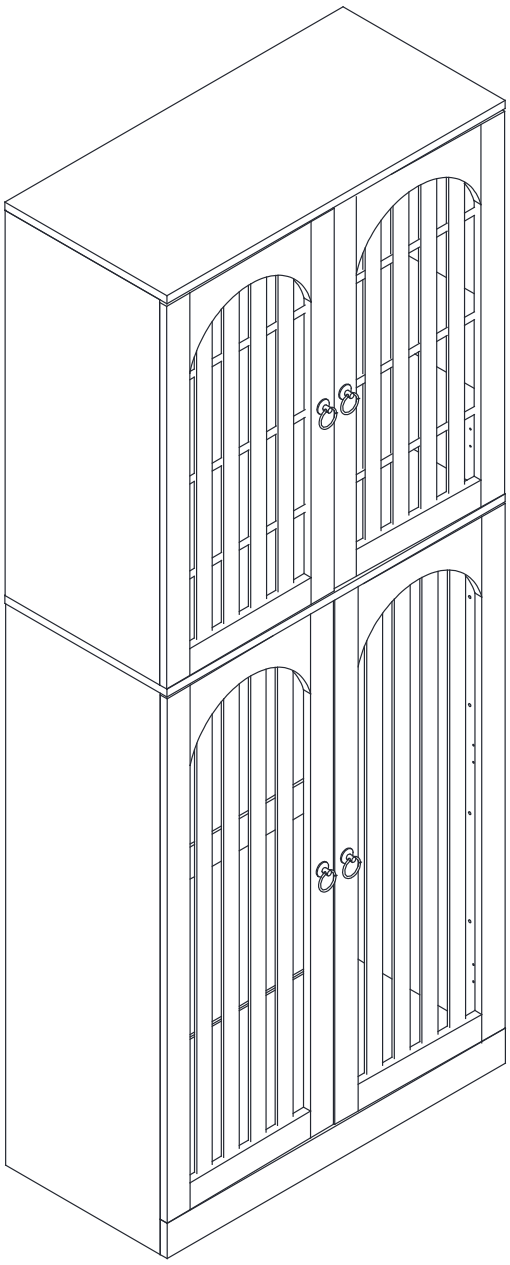

Shoe Cabinet

Model No.
HOGA-JW1092

Contact Us


We're here to help you.




Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

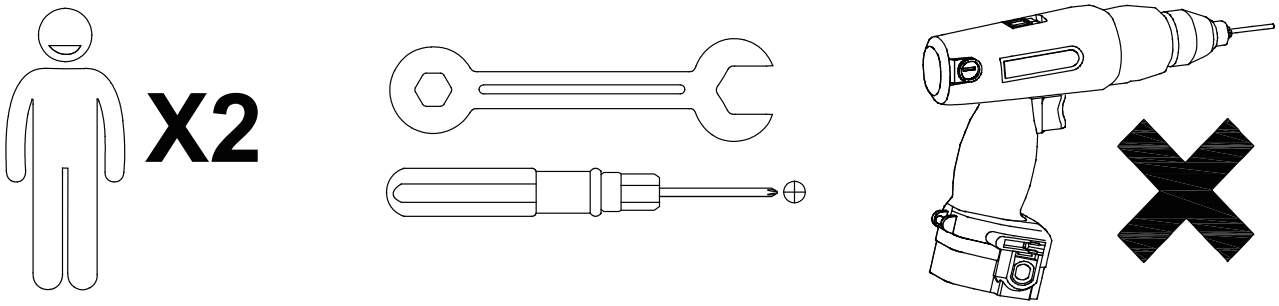



We recommend using hand tools for assembly.
If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

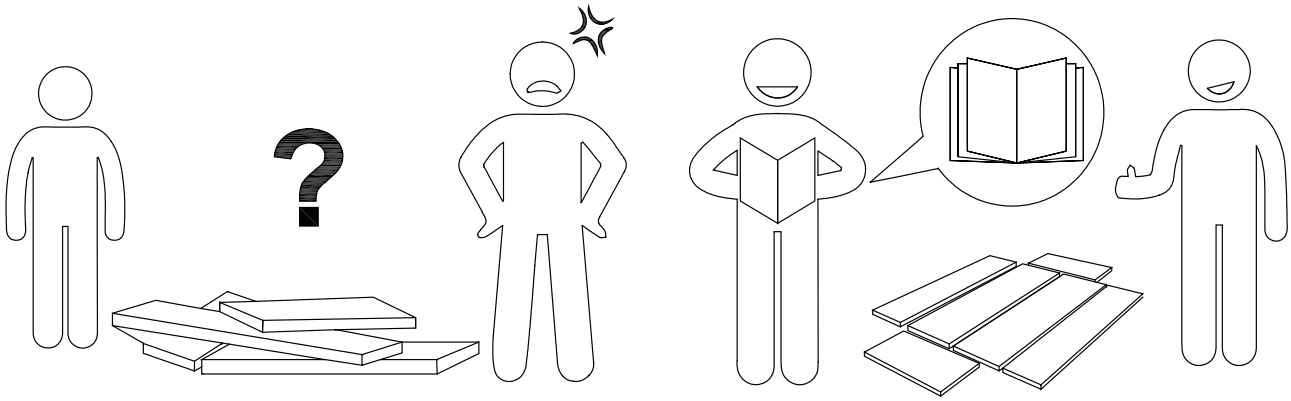

Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.
















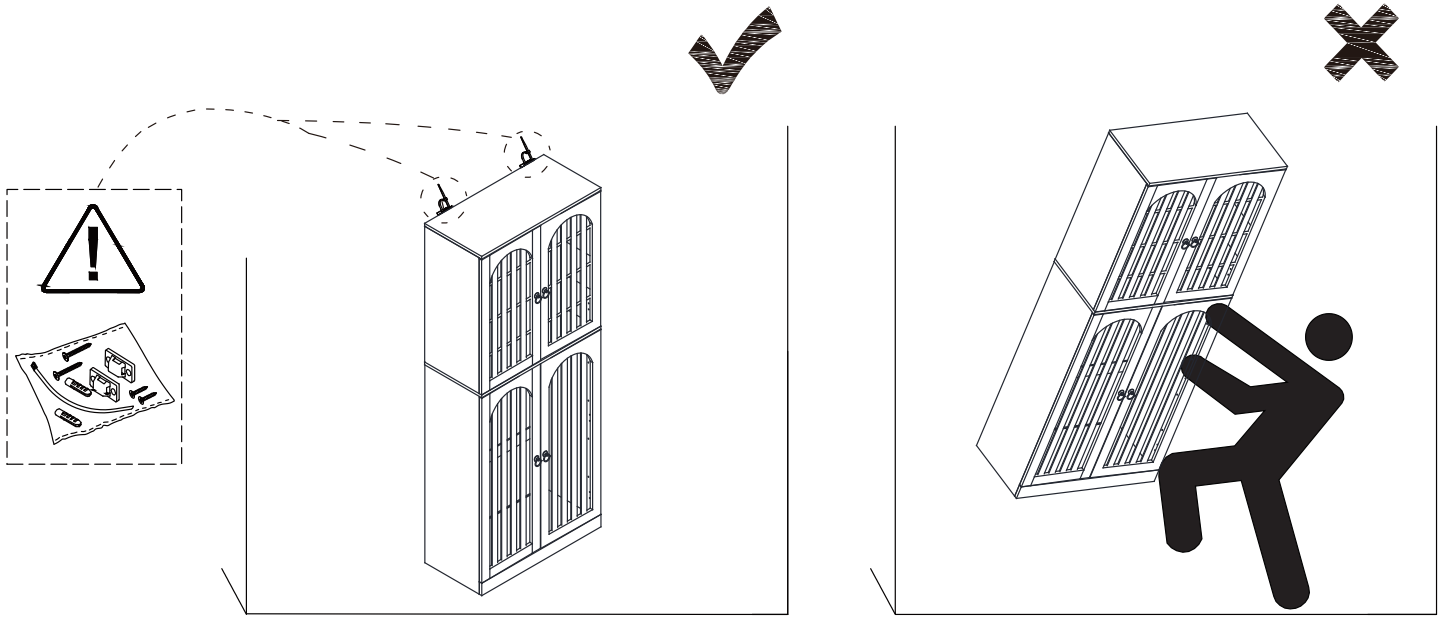


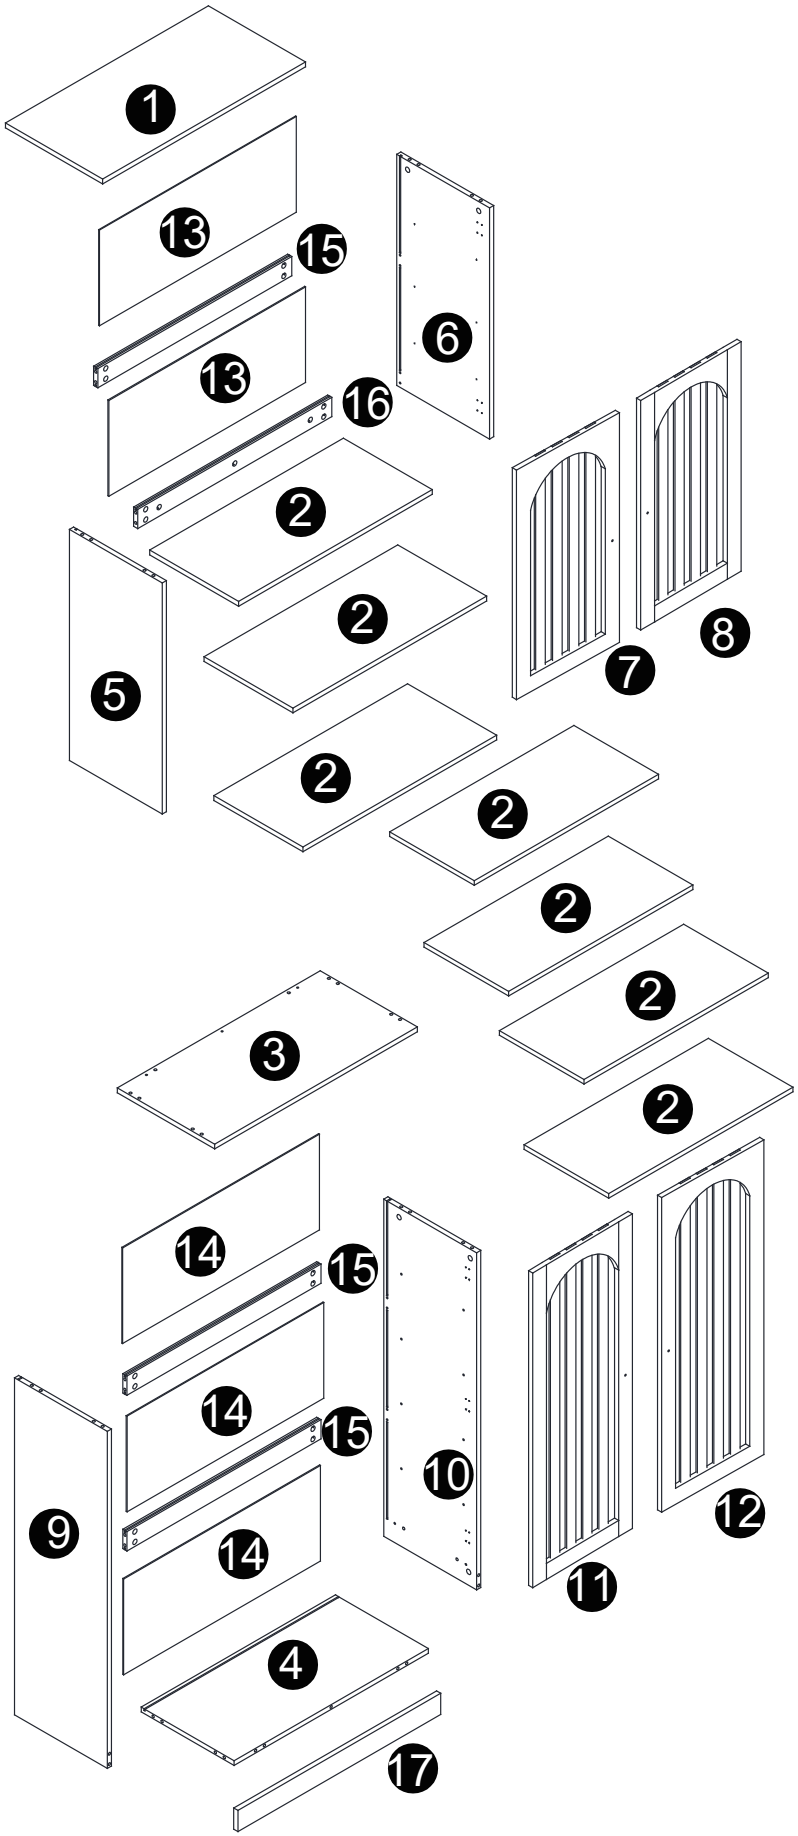


⚠ Caution





Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
Contact us for a free replacement if you encounter any damaged or missing parts.




Parts List

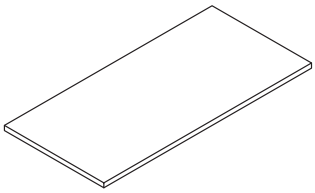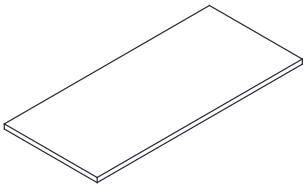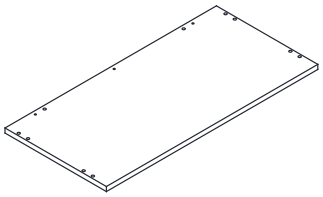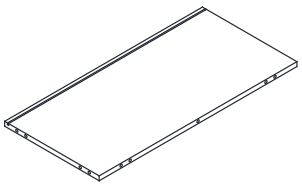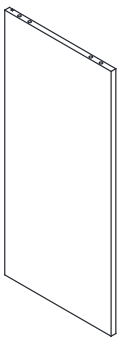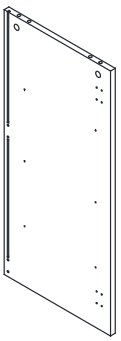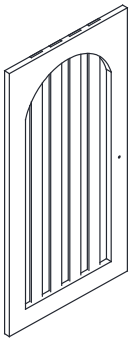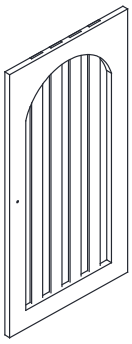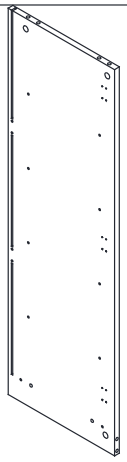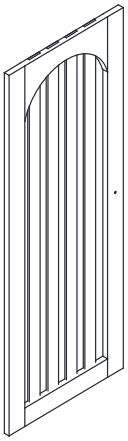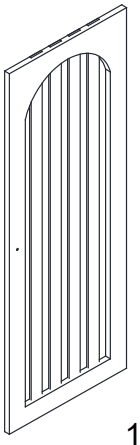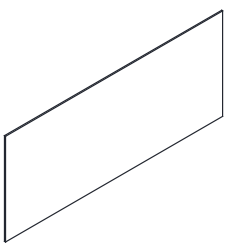
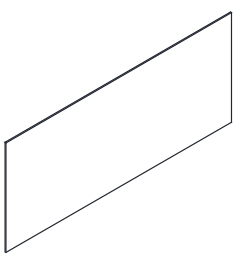
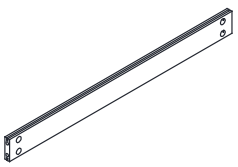
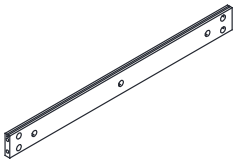
1  1 pc	2  7 pcs	3  1 pc	4  1 pc
5  1 pc	6  1 pc	7  1 pc	8  1 pc
9  1 pc	10  1 pc	11  1 pc	12  1 pc
13  2 pcs	14  3 pcs	15  3 pcs	16  1 pc

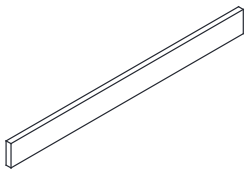⑰  1 pc			

Hardware List

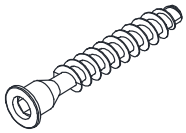
A	B	C	D	E	F
 M6x35mm	 Ø15x10 mm	 Ø8x30mm	 M7x38mm	 M4x14mm	 M3x14mm
36+1pcs	**36+1pcs**	**22+1pcs**	**4+1pcs**	**60+2pcs**	**20+1pcs**


G	H	I	J	K	L
				 **M4x18mm**	
6 pcs	**10pcs**	**20 pcs**	**28 pcs**	**4+1pcs**	**4 pcs**

M	N	O	P	Q	R
	 M4x35mm	 **M4x12mm**			 **M4**
2 pcs	**2 pcs**	**2 pcs**	**4 pcs**	**2pcs**	**1pc**


Installation of Cams and Pins

Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

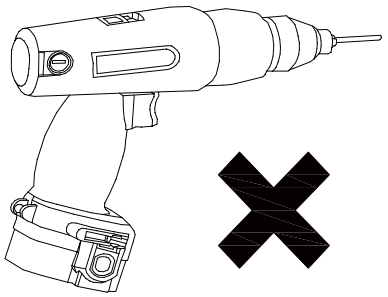


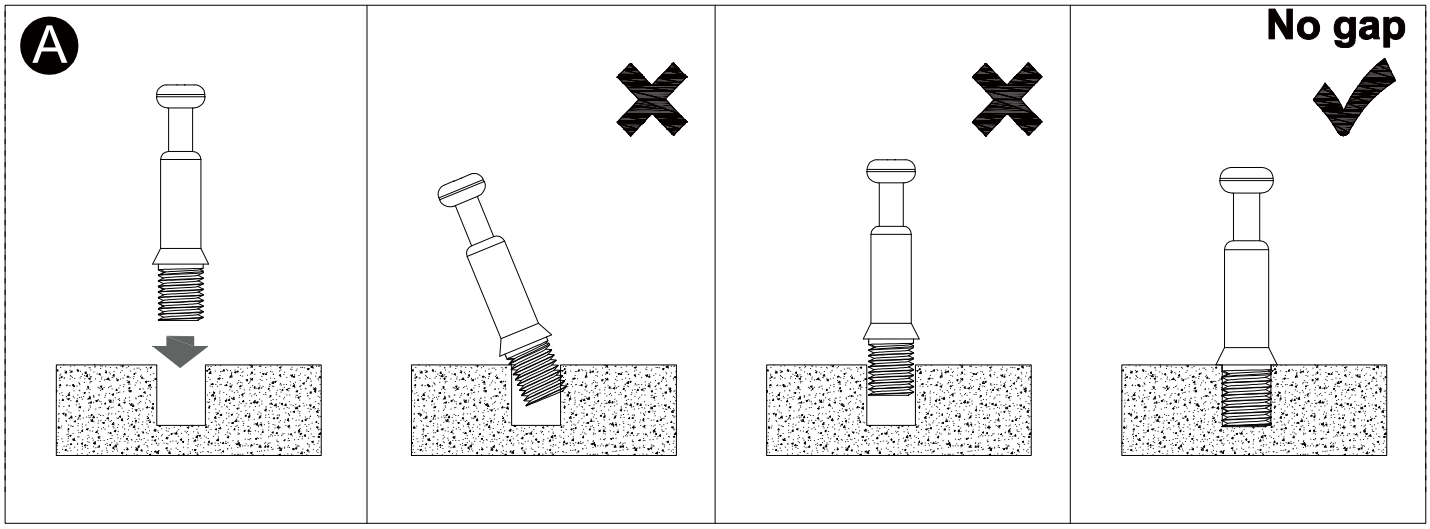



Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

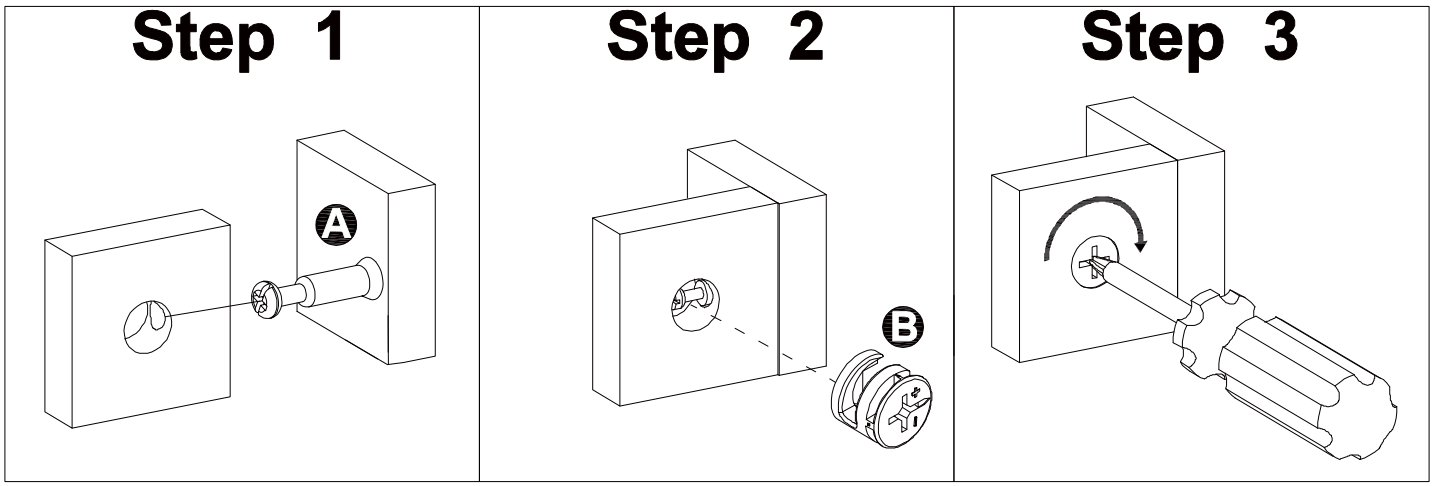


1

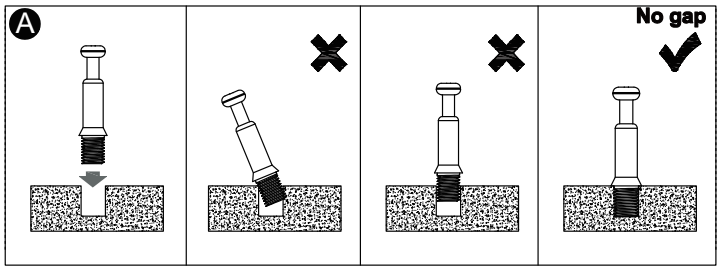

A

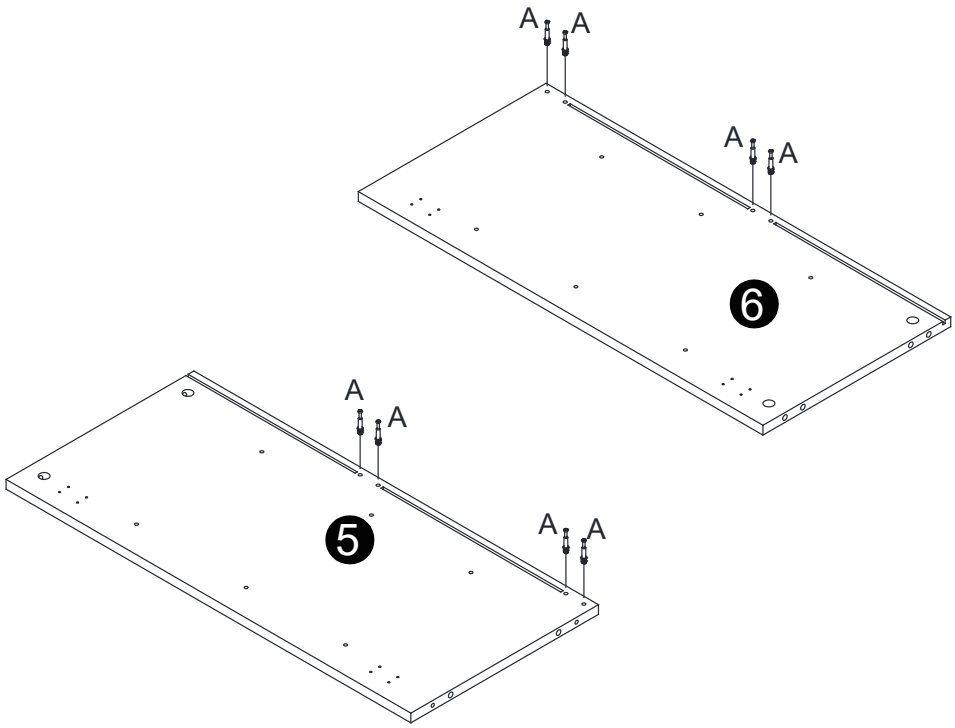M6x35mm
8 pcs

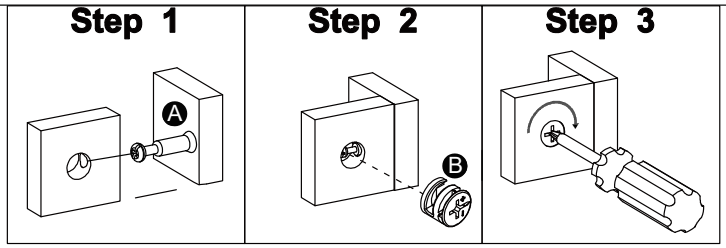


2




B

Ø15x10mm
4 pcs

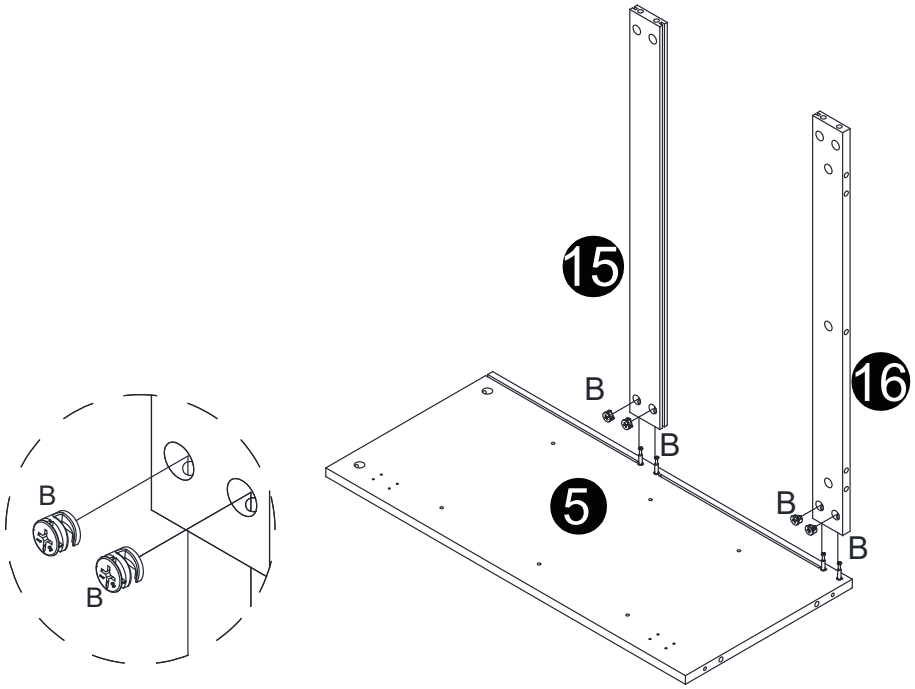


3

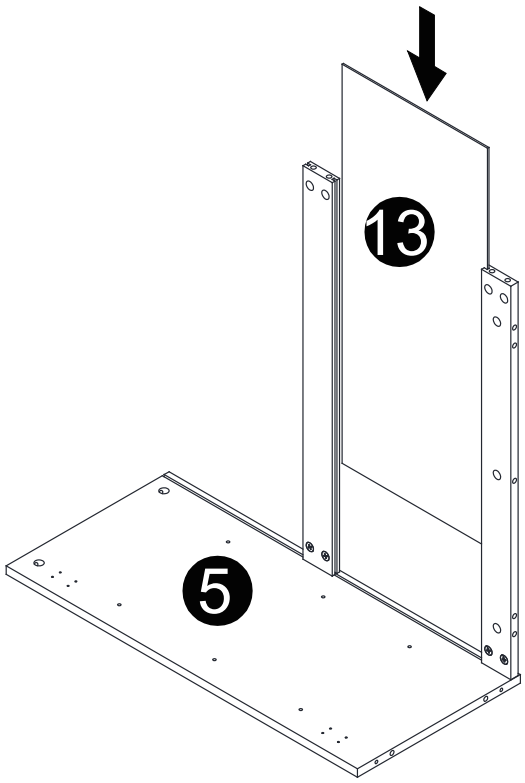


4

B

Ø15x10mm
4 pcs

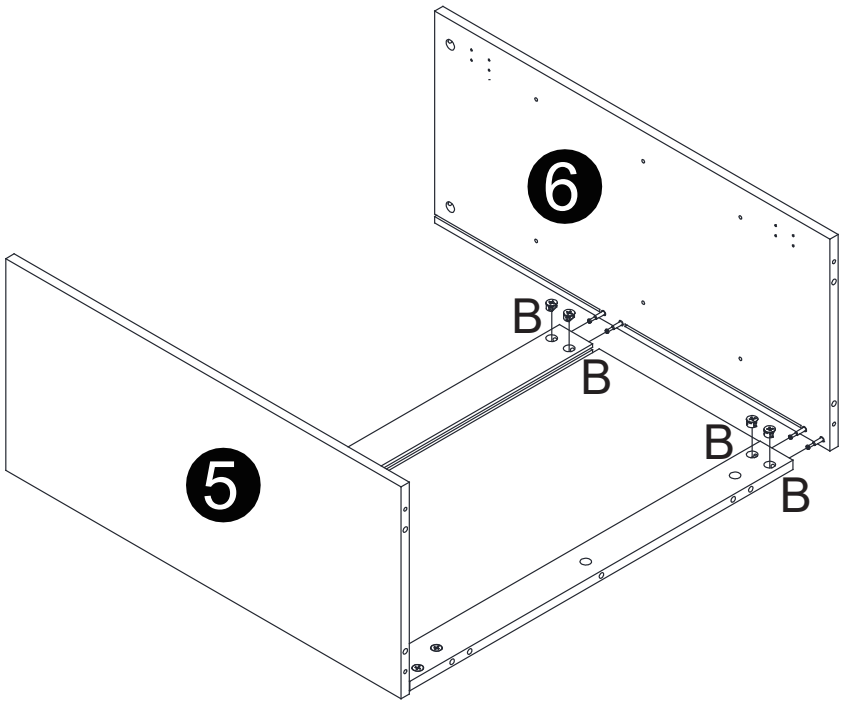


5

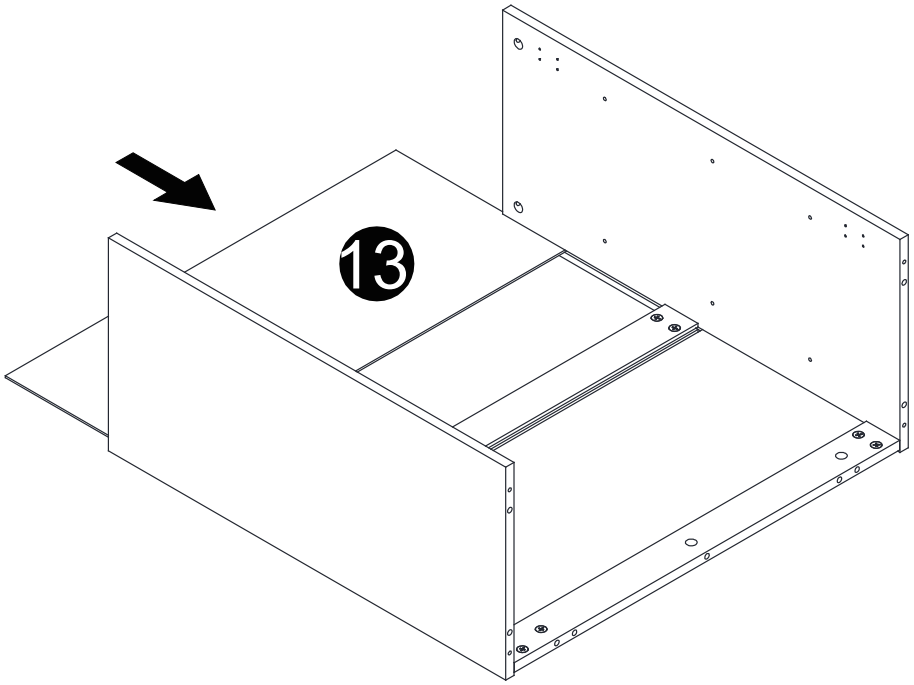

6


A	C
	
M6x35mm	Ø8x30mm
4 pcs	4 pcs

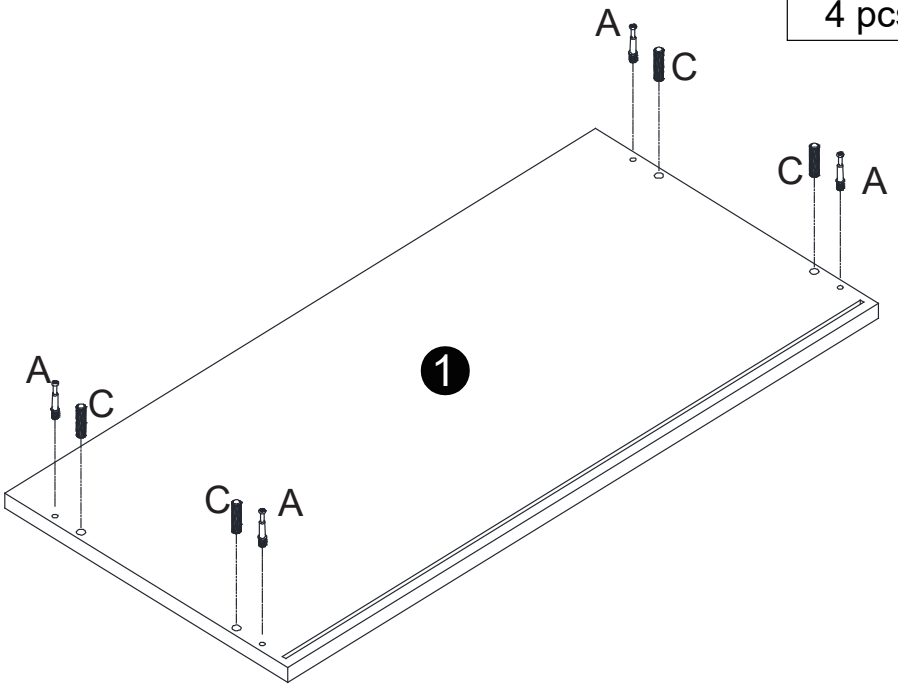


7


B


Ø15x10mm
4 pcs

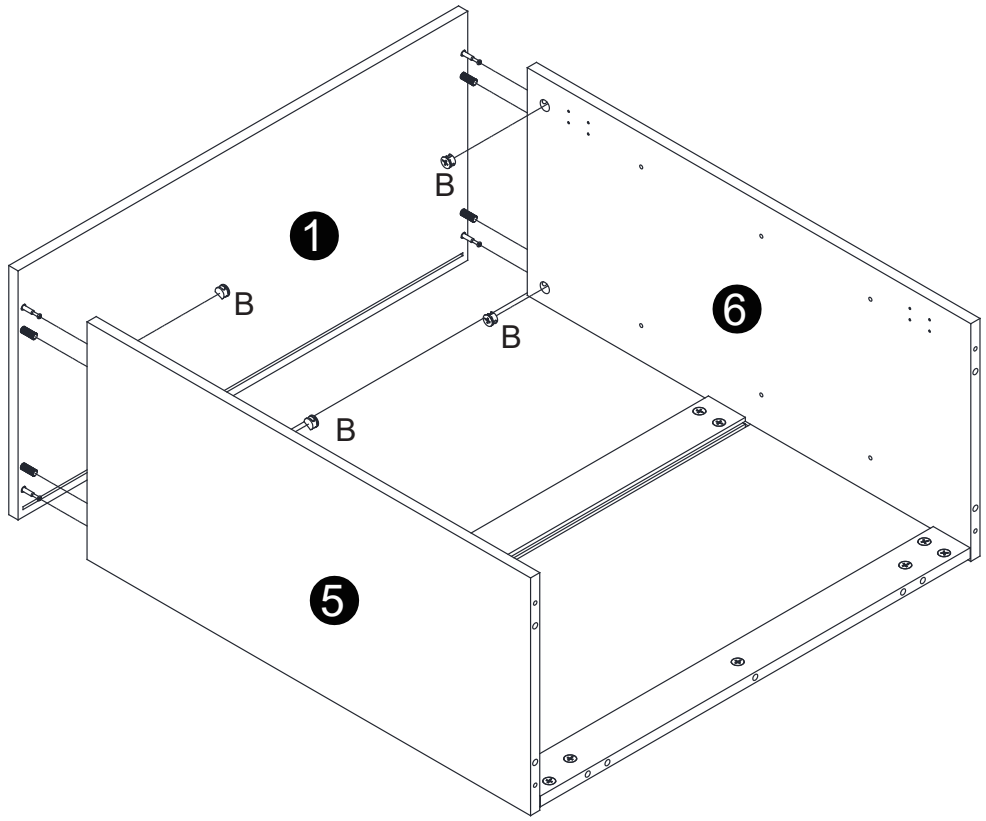

8


A	B	C	D
			
M6x35mm	Ø15x10mm	Ø8x30mm	M7x38mm
3 pcs	3 pcs	6 pcs	4 pcs

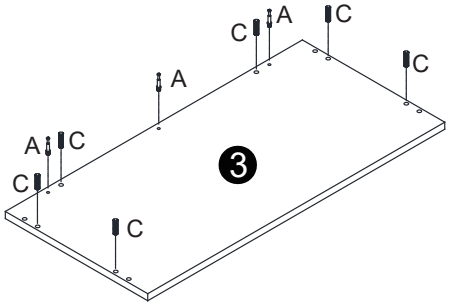

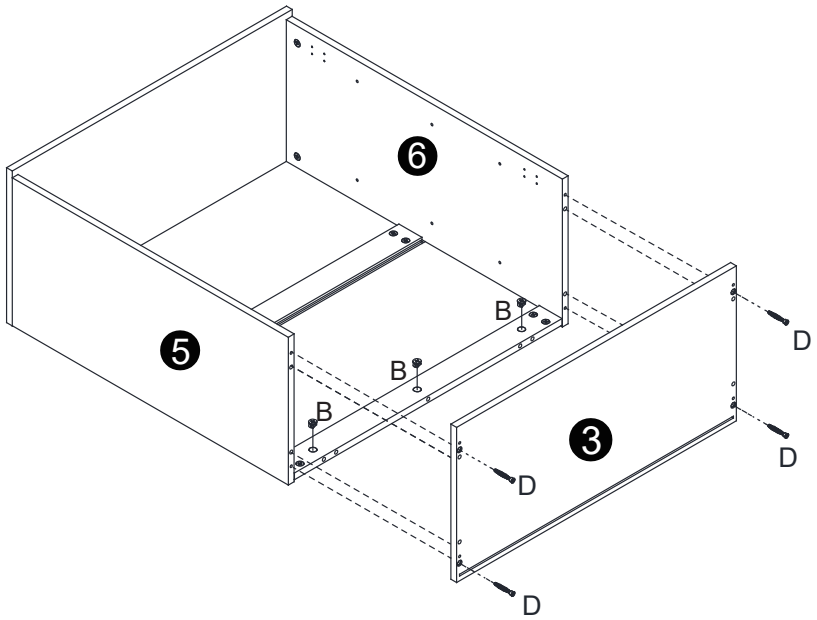


9

A	C
 M6x35mm	 Ø8x30mm
12pcs	4 pcs

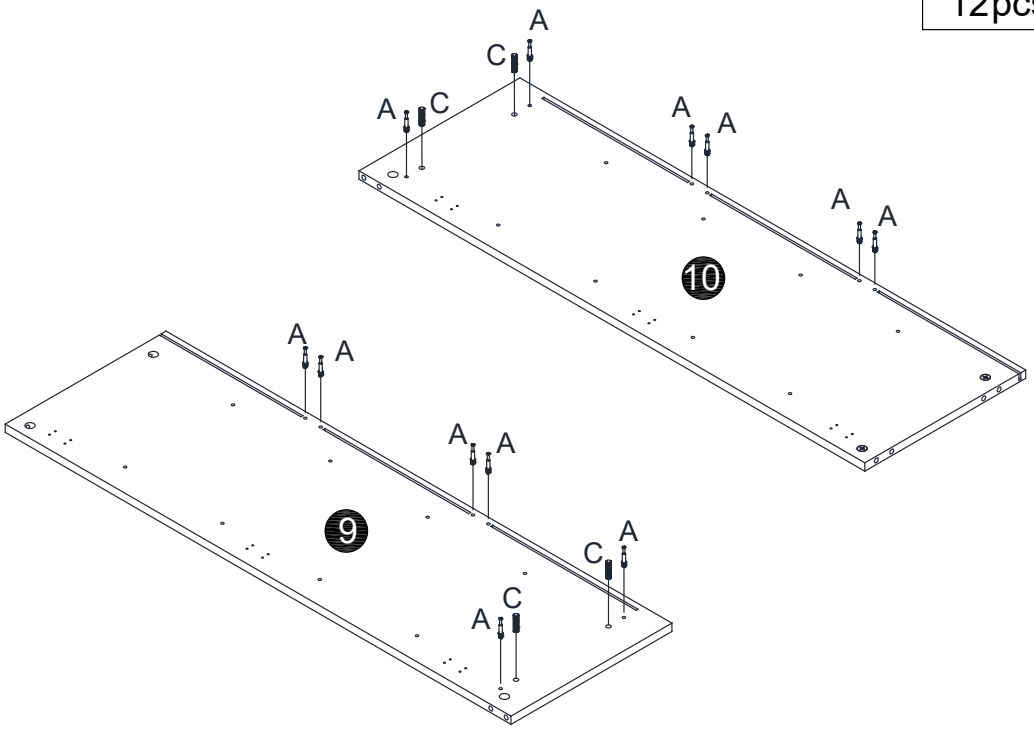


10

B
 Ø15x10mm
6 pcs

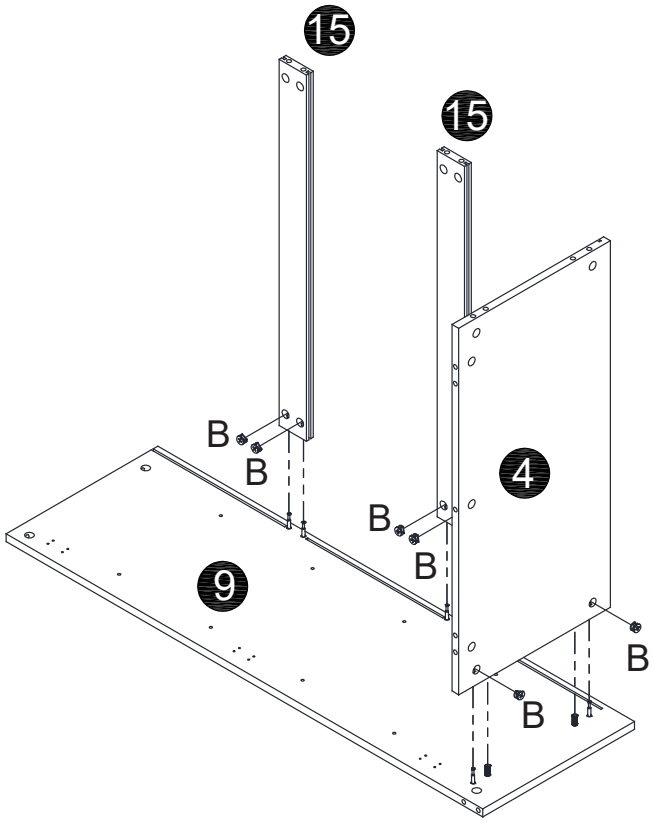


11

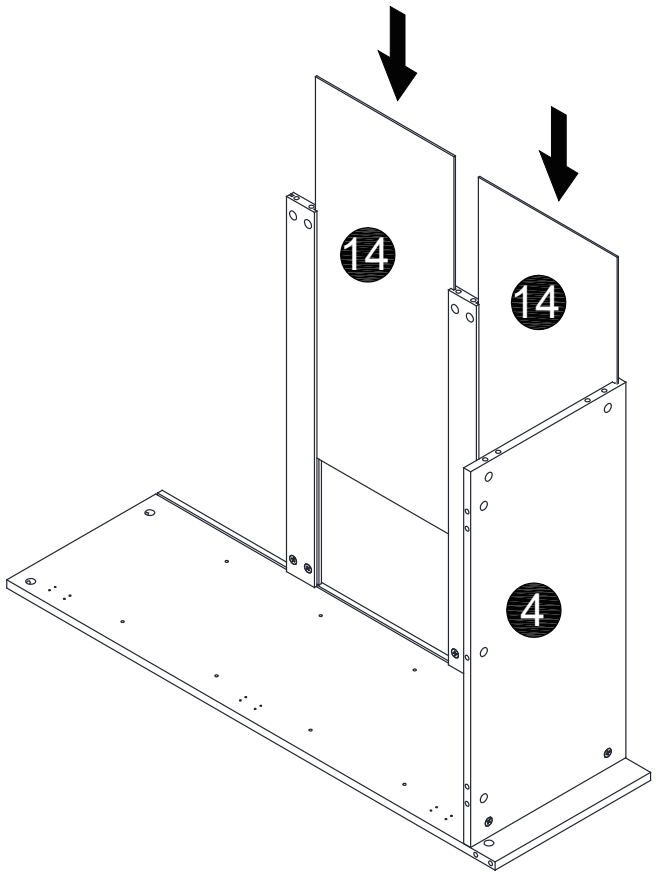


12

B


Ø15x10mm
6 pcs

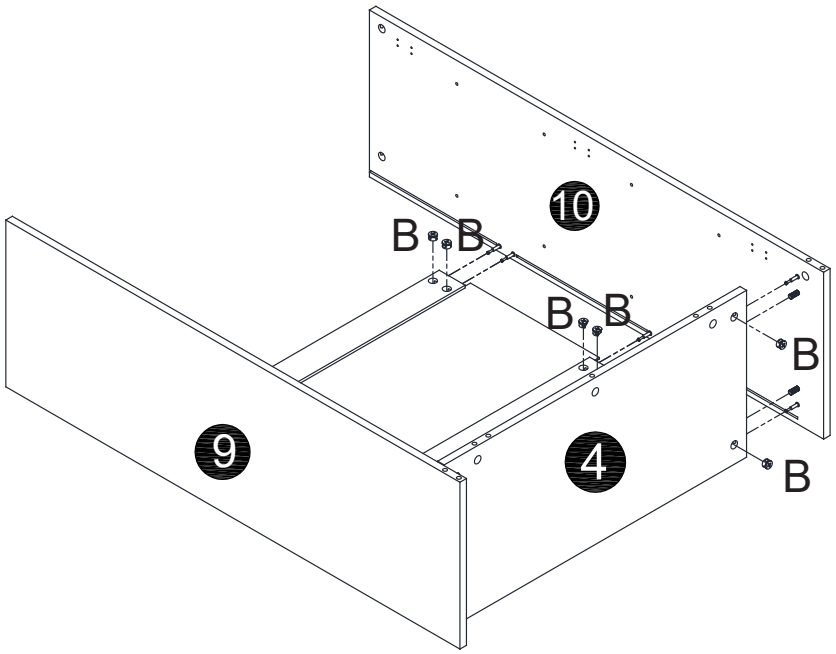



13

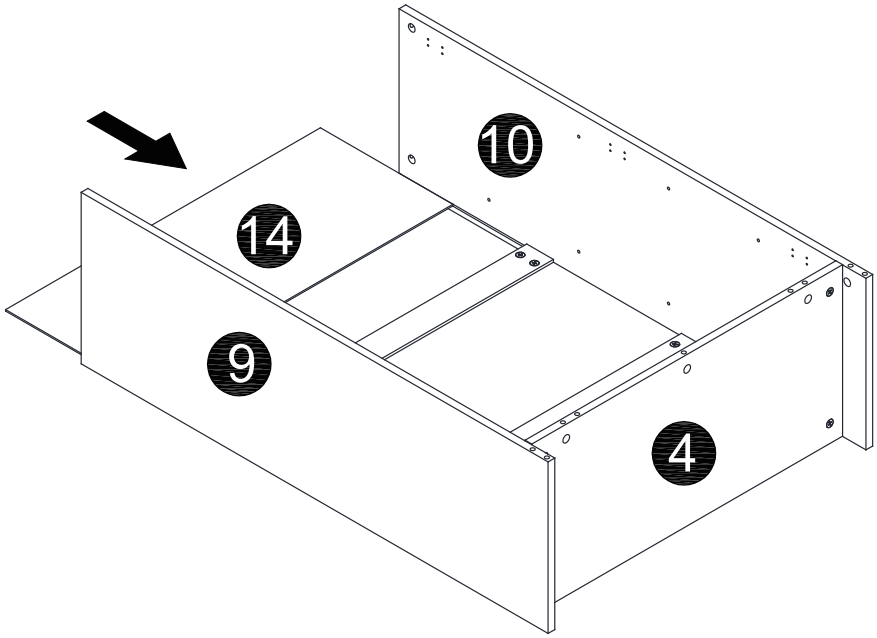

14

A	B	C
		
M6x35mm	Ø15x10mm	Ø8x30mm
5 pcs	5 pcs	4 pcs

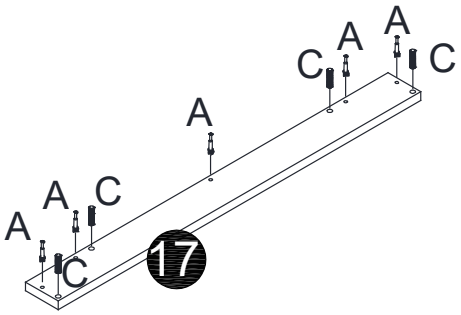


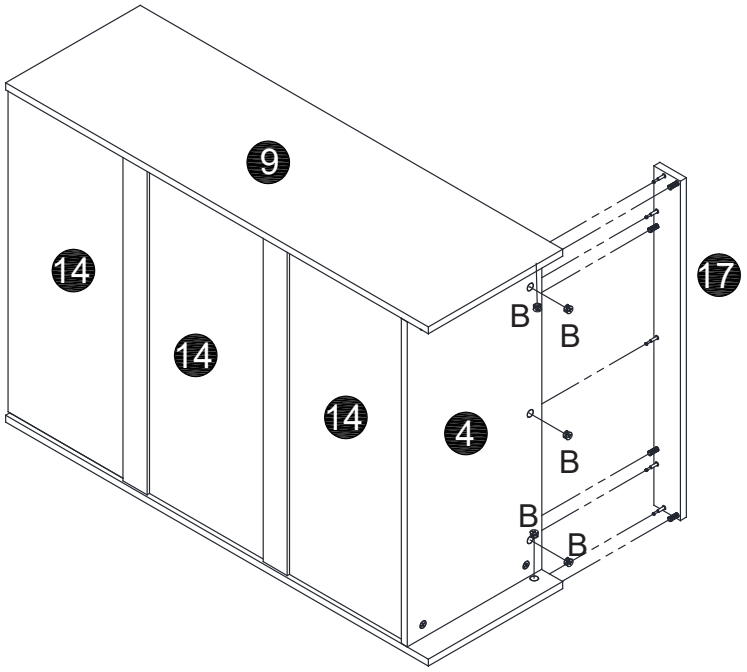

15


G

6 pcs

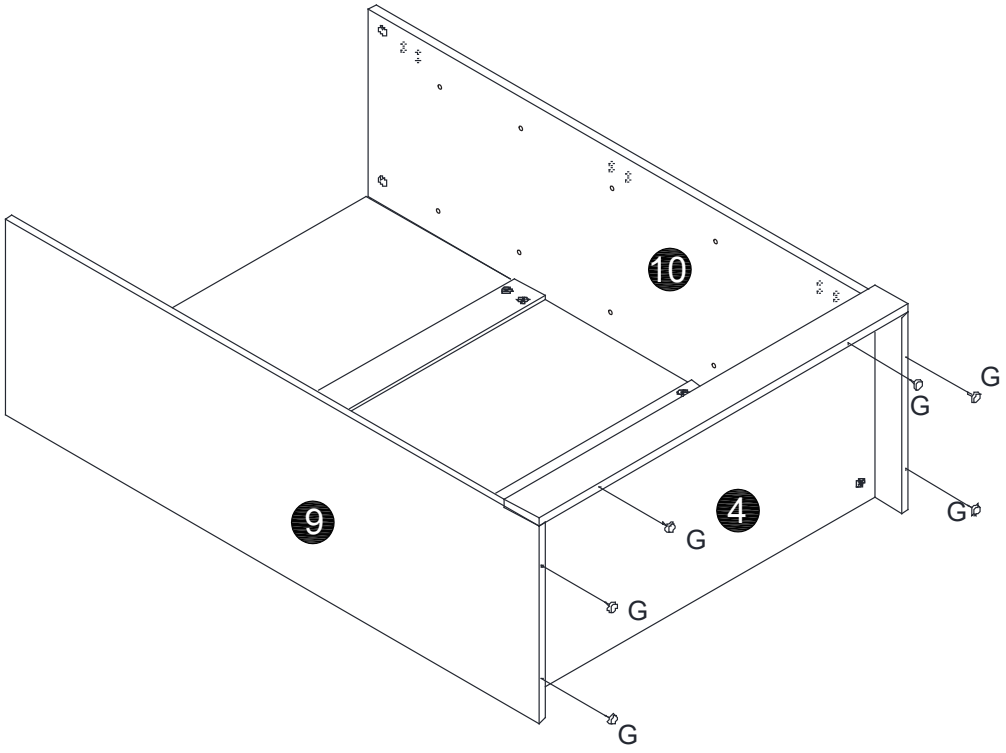

16


A	C
	
M6x35mm	Ø8x30mm
4 pcs	4 pcs

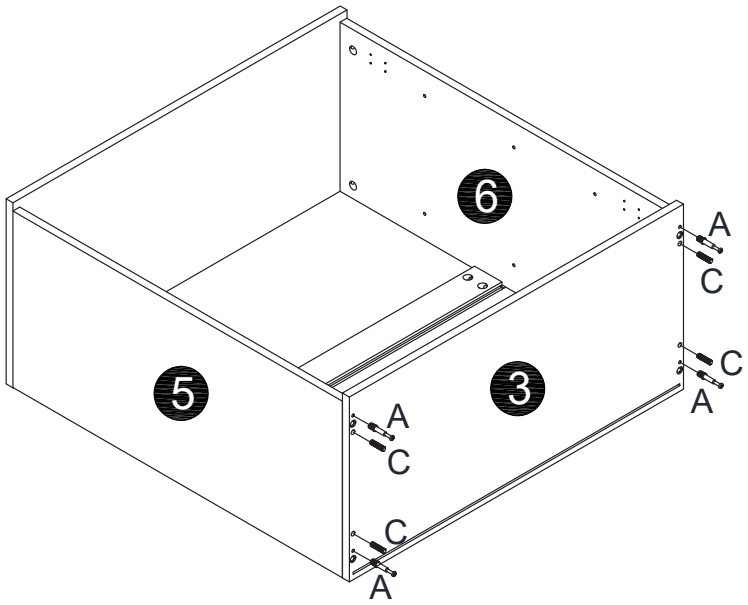


17


B

Ø15x10mm
4 pcs

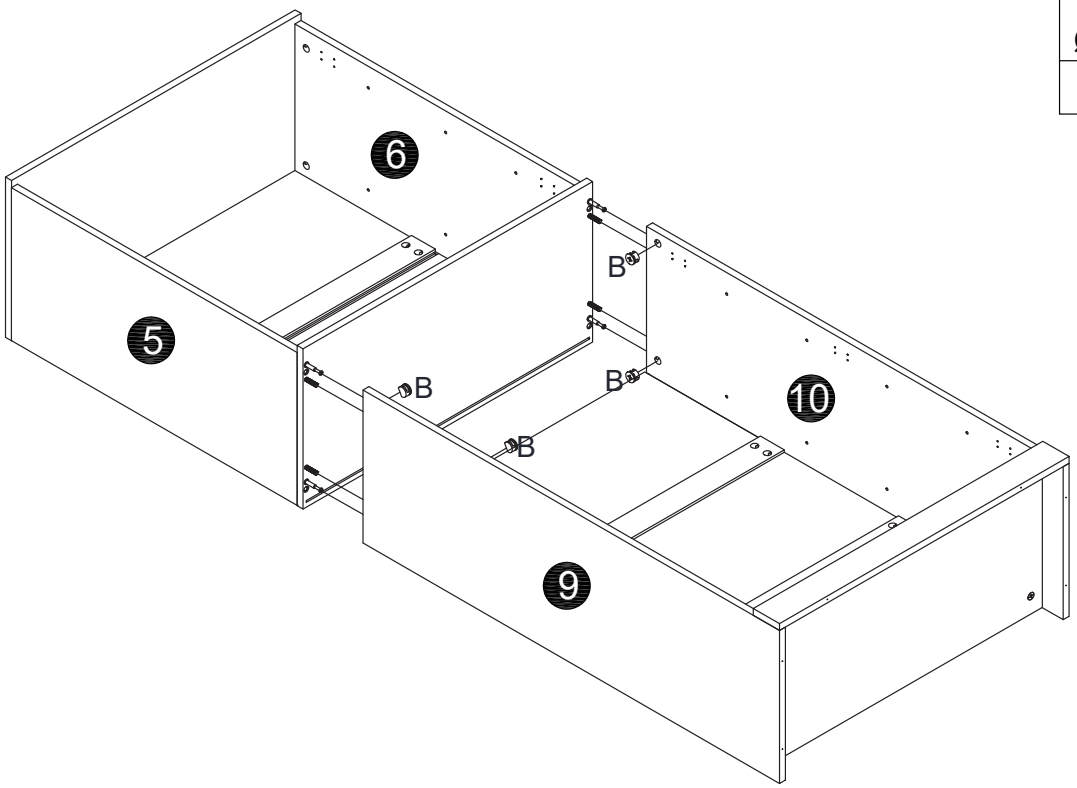



18

E	K	L	H
			
M4x14mm	**M4x18mm**		
8 pcs	2 pcs	2 pcs	4 pcs

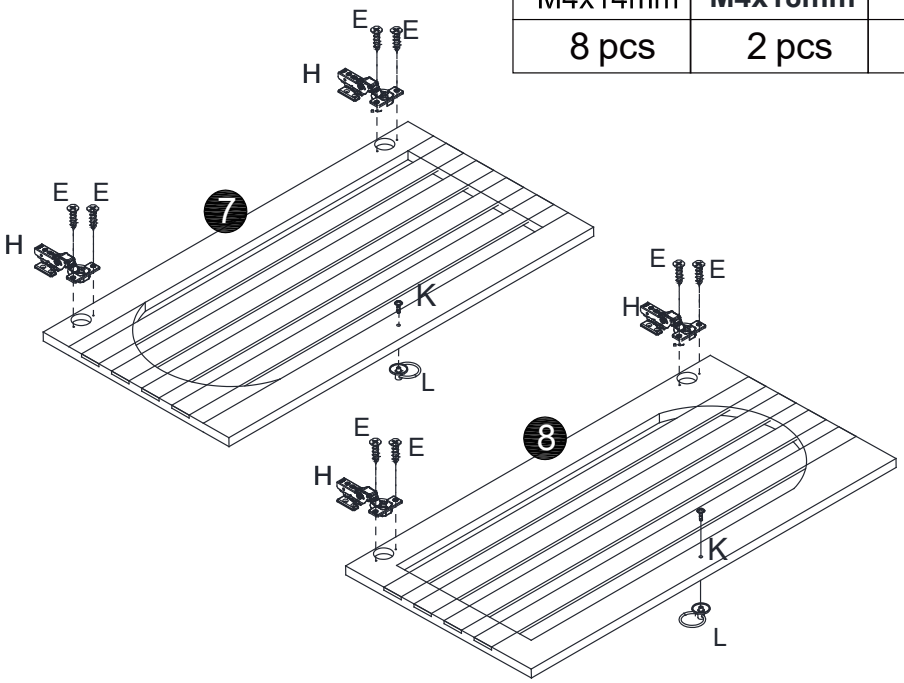



19

E	K	L	H
			
M4x14mm	**M4x18mm**		
12pcs	2 pcs	2 pcs	6 pcs

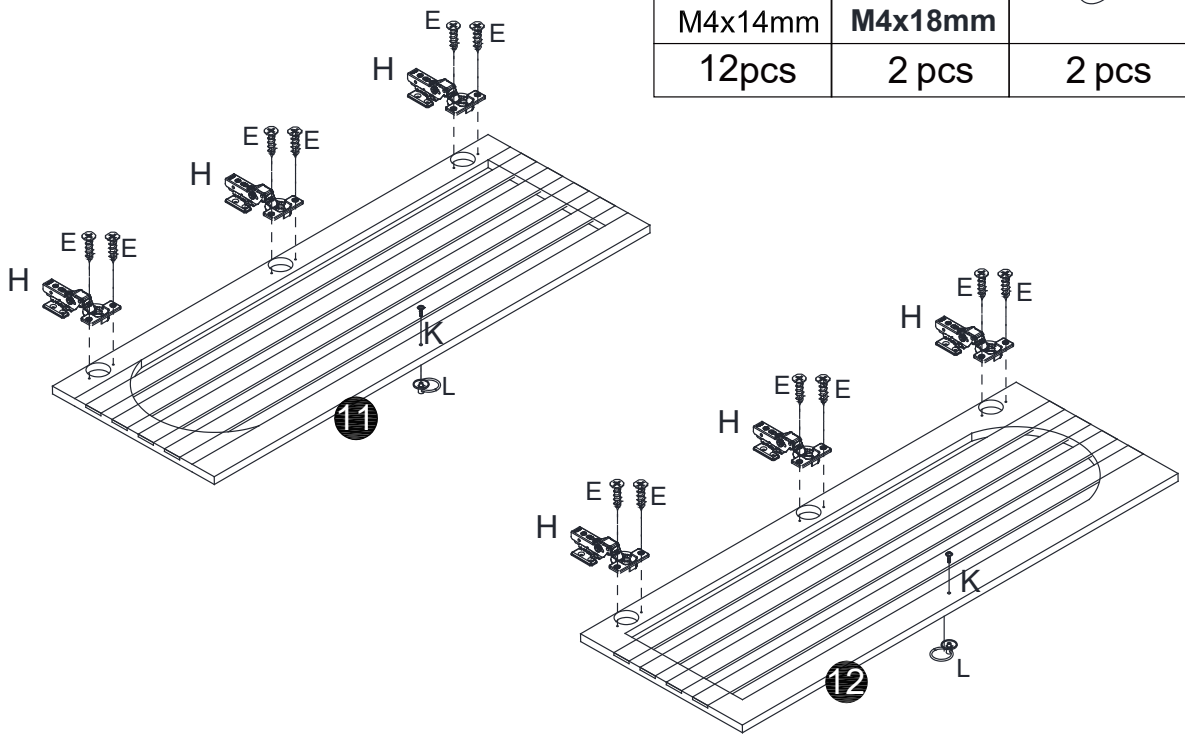

20


E

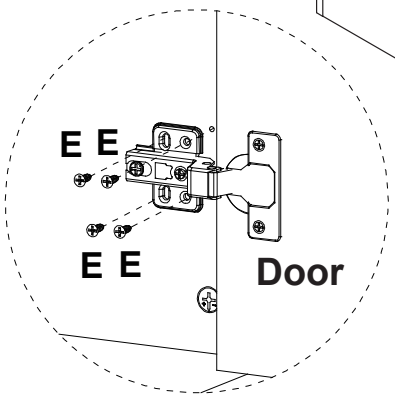M4x14mm
40 pcs



To prevent the door hinge from falling off, please install 4 screws

Step 1

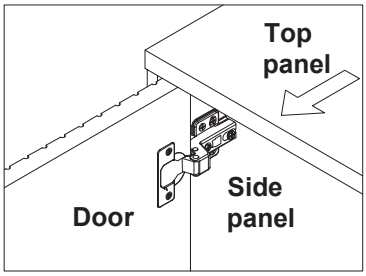
Open the door.



ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).


Step 2


Adjust the door panel to be flush with side panel and top panel edge.

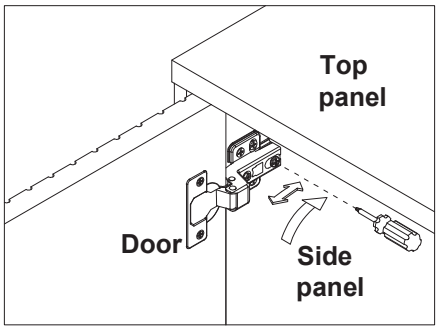

**Loosen the screw indicated a little,
adjust the hinge to the right position (see step 2a & 2b),
then tighten the screw.**


Step 2a MOVE DOOR OUT

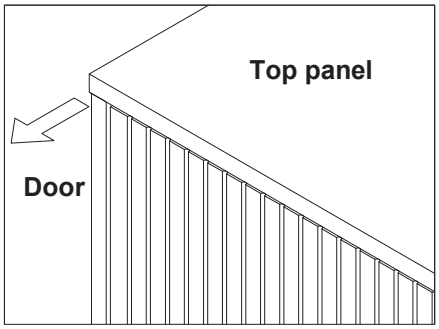


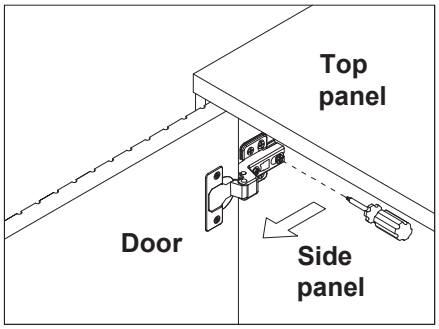

Pull the hinge forward a little.

Step 2b MOVE DOOR IN

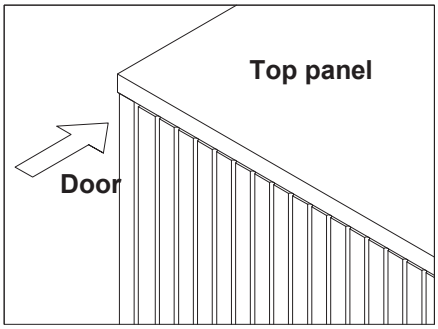


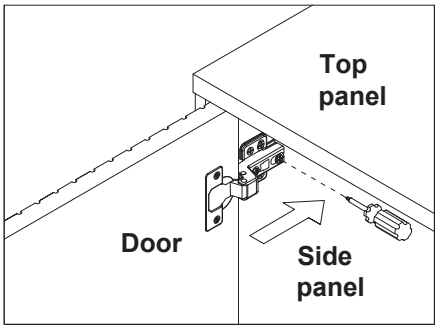

Push the hinge back a little.


Step 3


Adjust the gap between the door panel and the side panel.

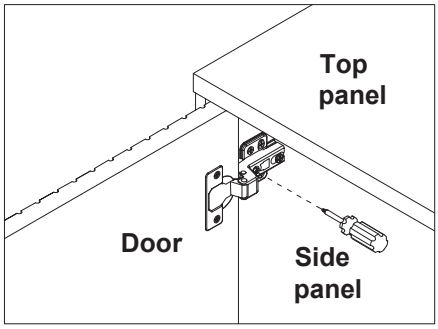

**Loosen or tighten the screw indicated a little to adjust the gap between the door panels,
adjust the hinge to the right position (see step 3a & 3b).**


Step 3a MOVE DOOR LEFT

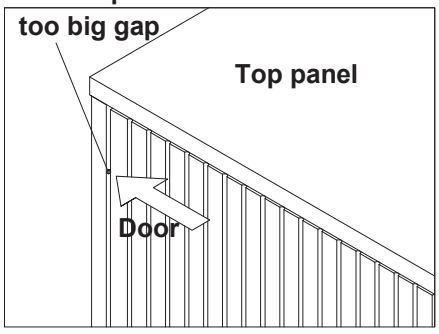


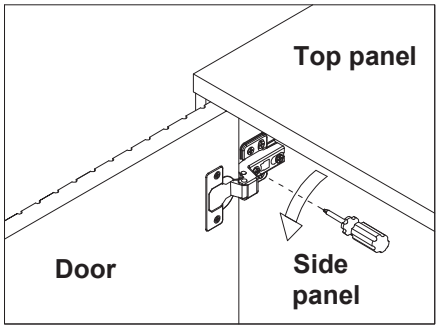

Turn the screw clockwise a little as shown to make the gap smaller


Step 3b MOVE DOOR RIGHT

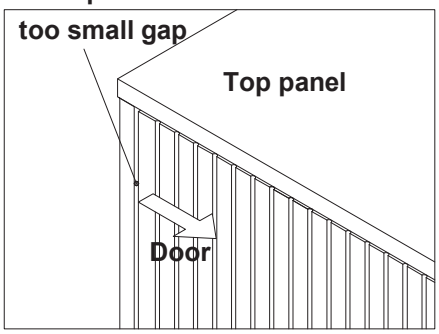

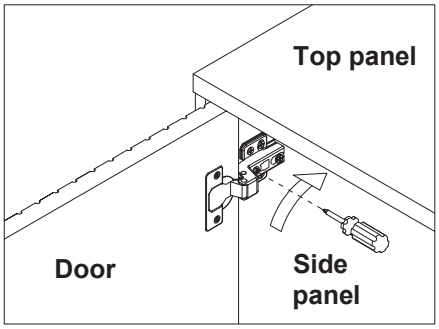


Turn the screw counterclockwise a little as shown to make the gap bigger

21

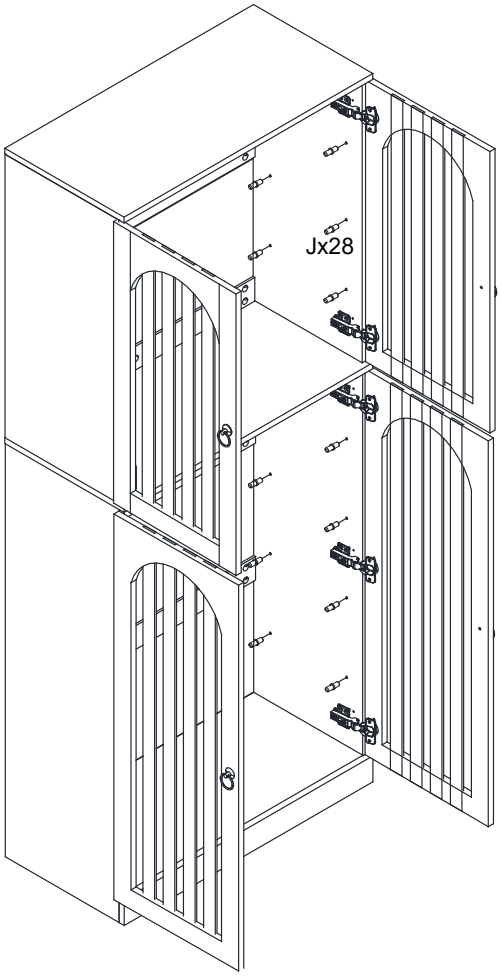


J


28 pcs

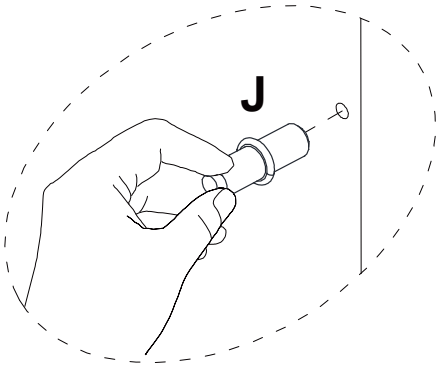



22

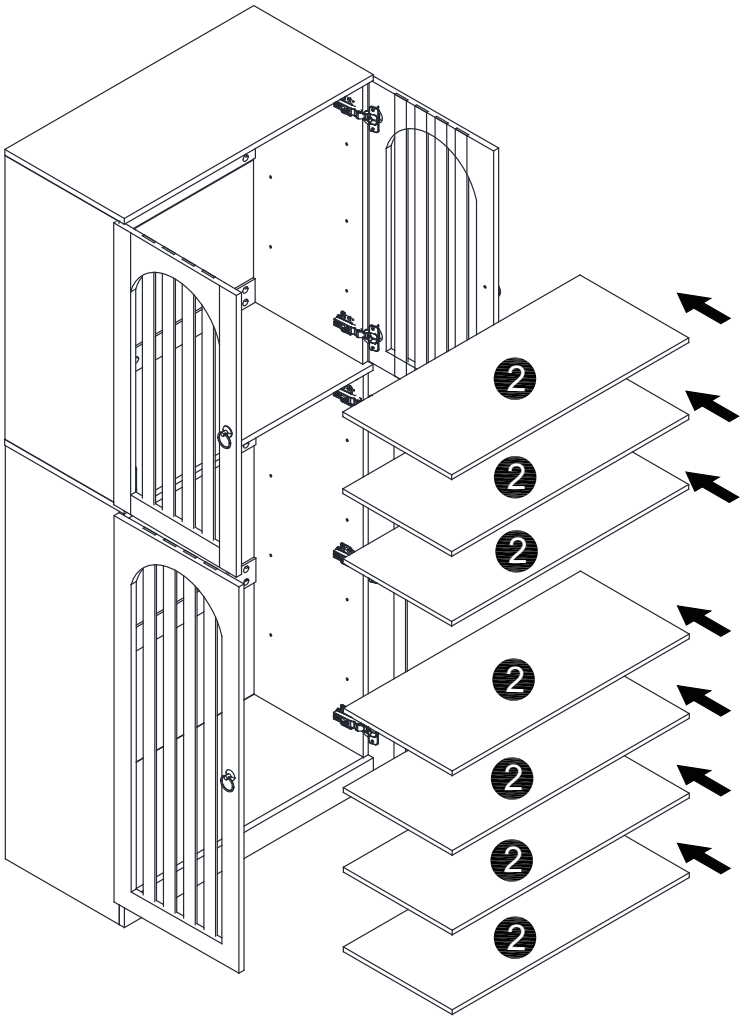


23

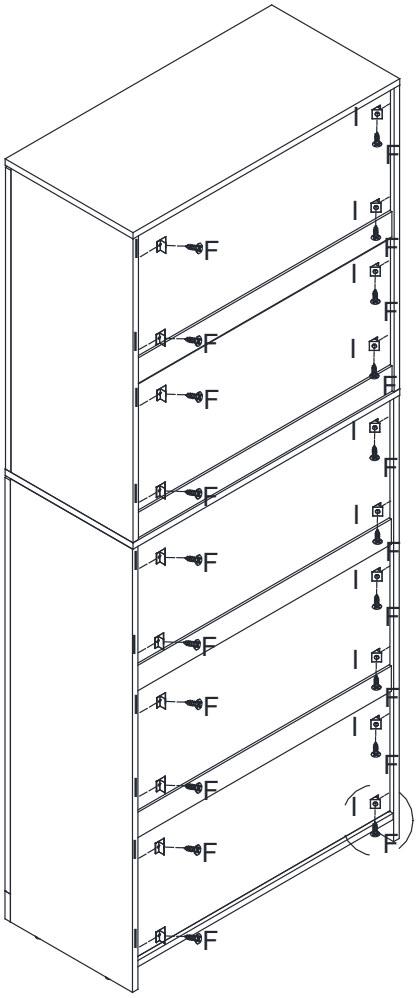

F	I
 M3x14mm	
20 pcs	20 pcs

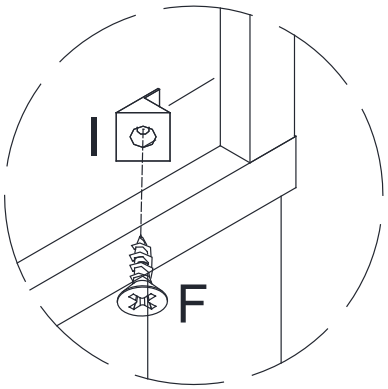

24

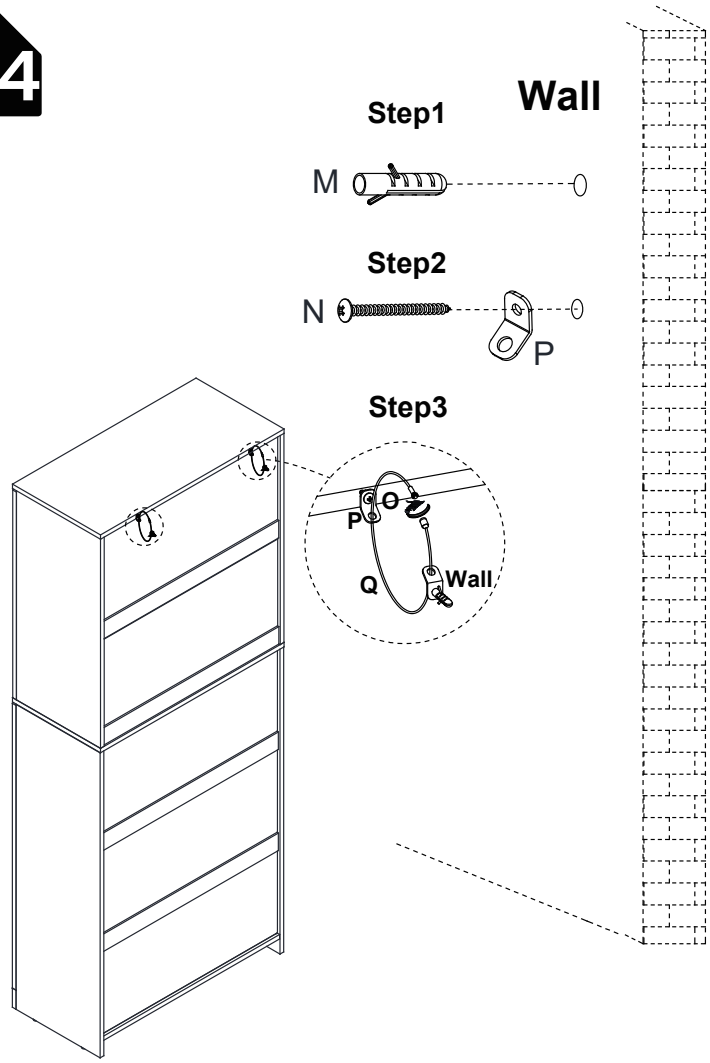

M	N	O
	 M4x35mm	 **M4x12mm**
2 pcs	2 pcs	2pcs
P	**Q**	
		
4 pcs	2 pcs	

Thank you for your support!

