



Wall-mounted Vanity Installation Guide

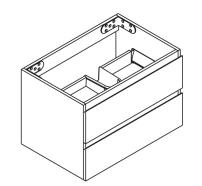


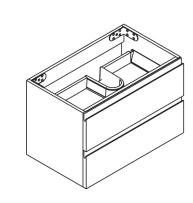

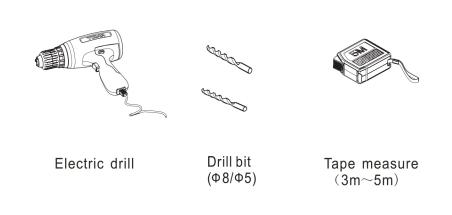


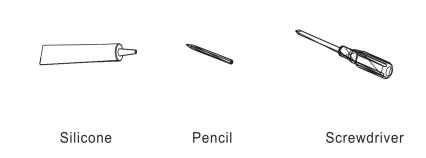



Tools required for installation

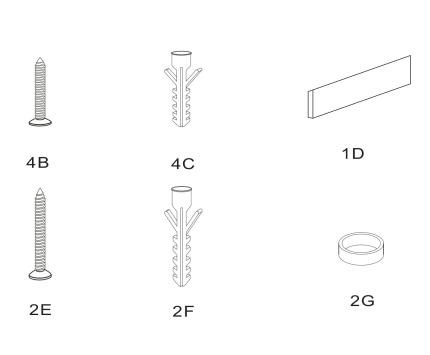


Parts required for installation

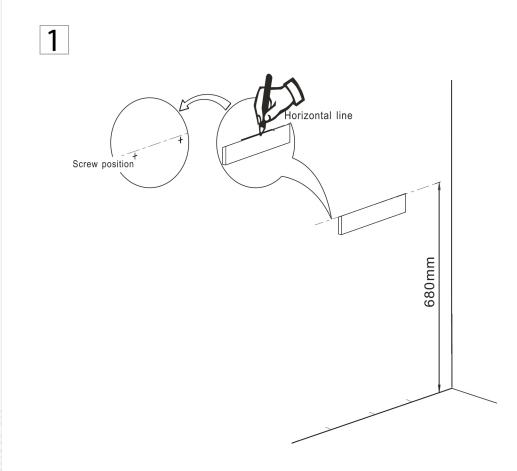

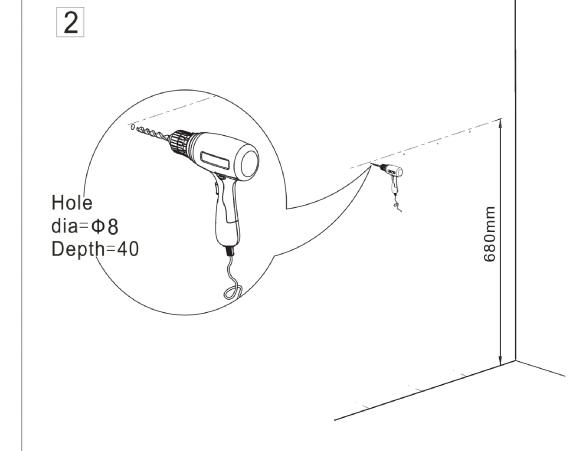


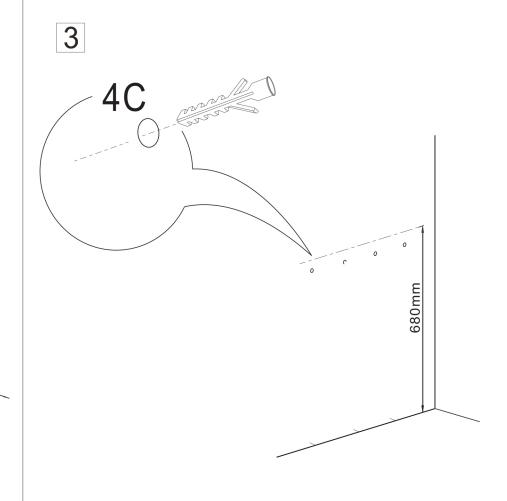

Please make sure to install screws on the wooden stud of the wall to help stabilize.

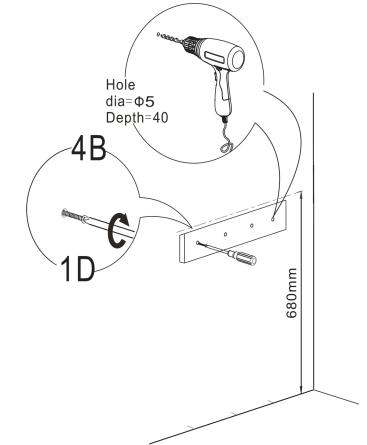

Please unpack/install the base by holding it on the side of the item, not the front or the back piece.

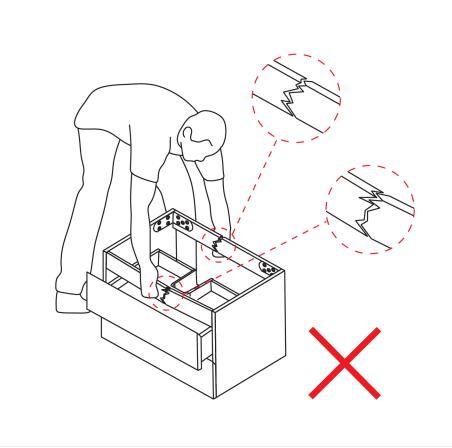

Please fix the cabinet with M6x65 screws

