



INSTRUCTION

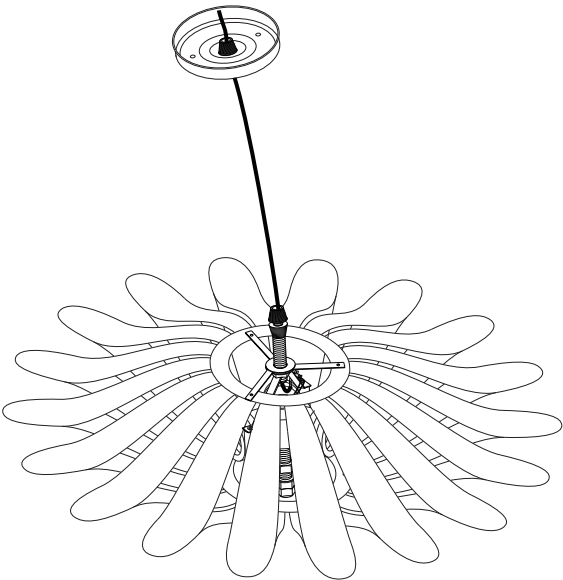

1

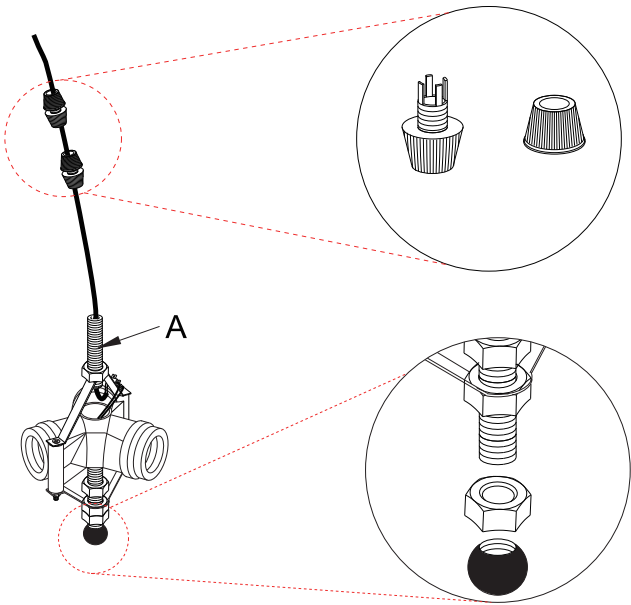


Unscrew the screws from NO.A

A *1




B *1

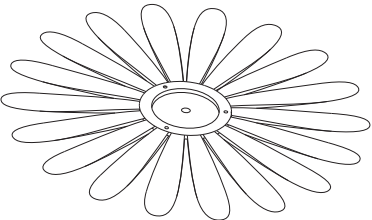

C *1



D *1



E *3



F *2




G *2



H *3




J *3

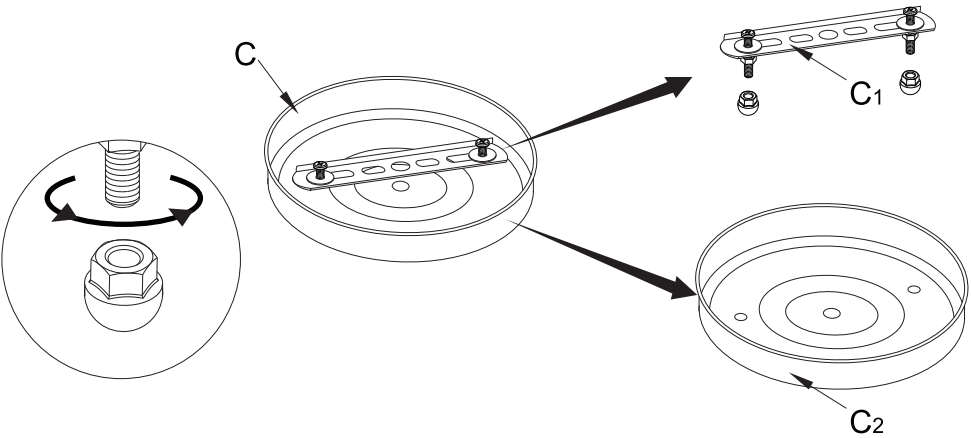


Unscrew the bottom screws of NO.C, detach the parts

2

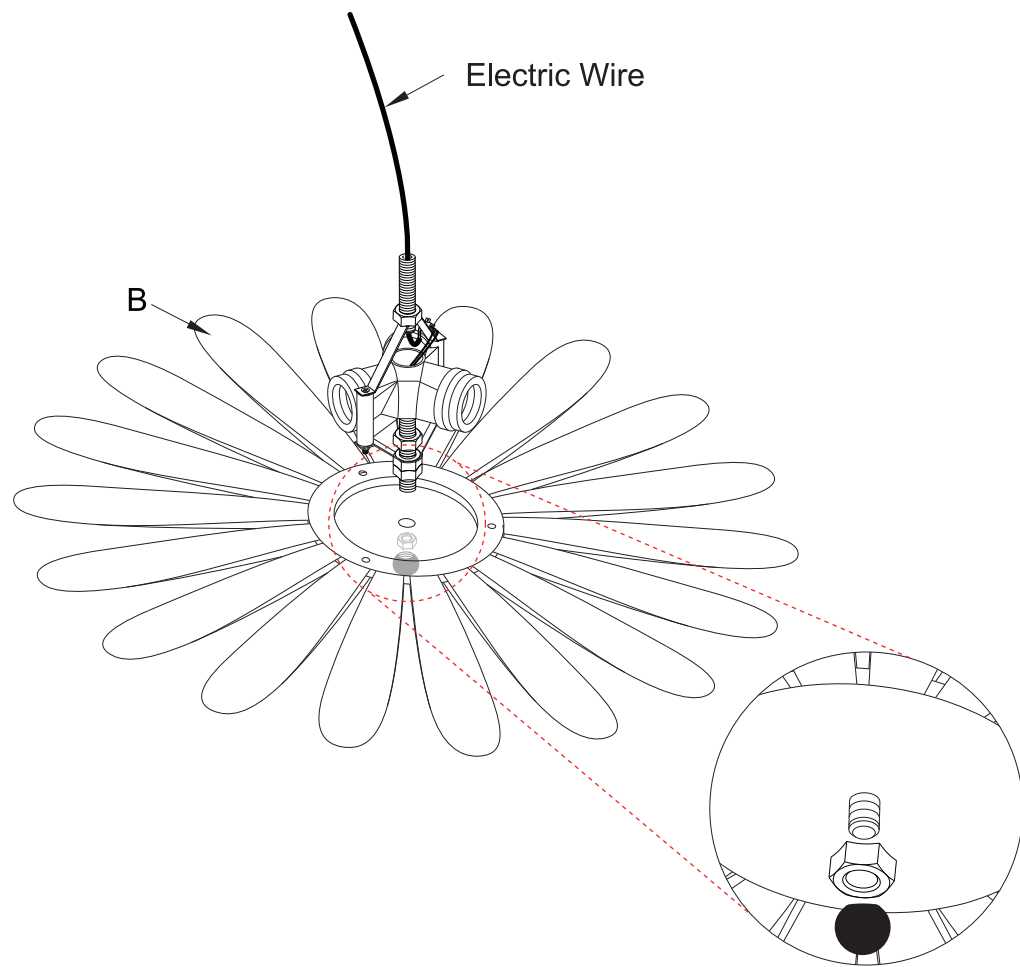


Fit NO.A to the hole position of NO.B, use the nut of Step 1 to screw them tightly

3

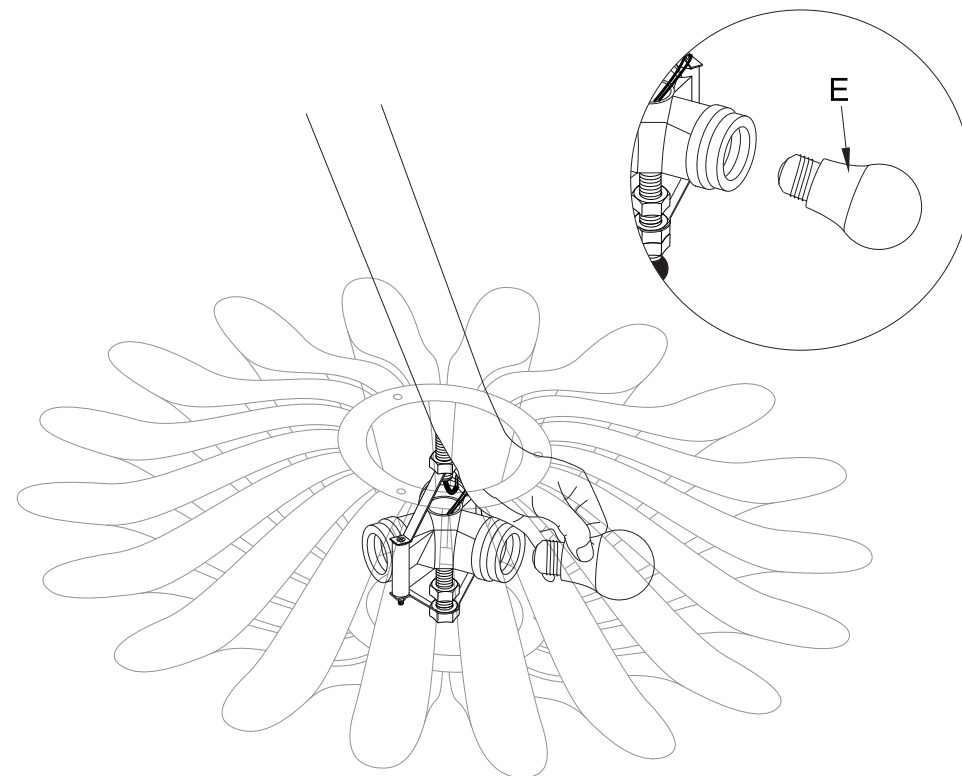


Fix the bulbs and screw tightly

4

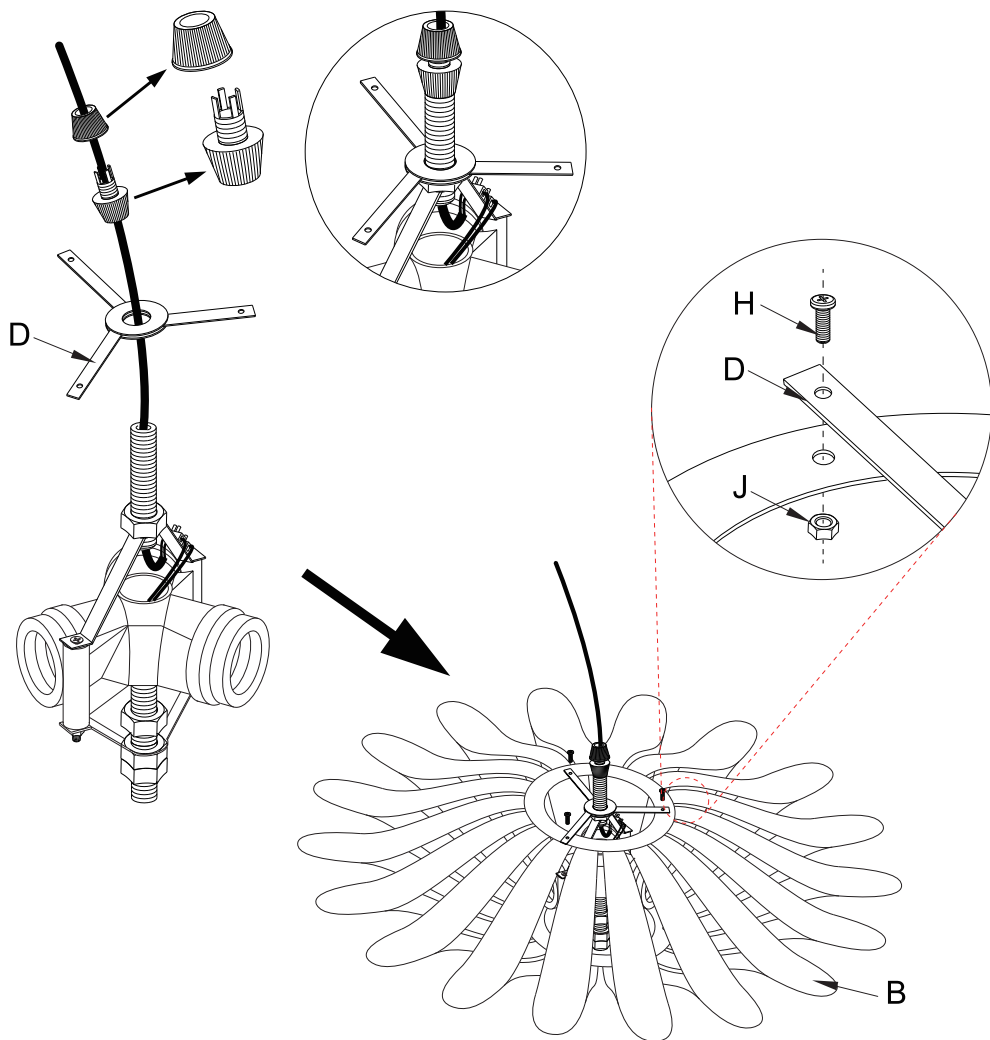


As picture shows, unscrew the screws of electric wire, install NO.D to the electric wire, fix the NO.D to the NO.B with screws H and J

5

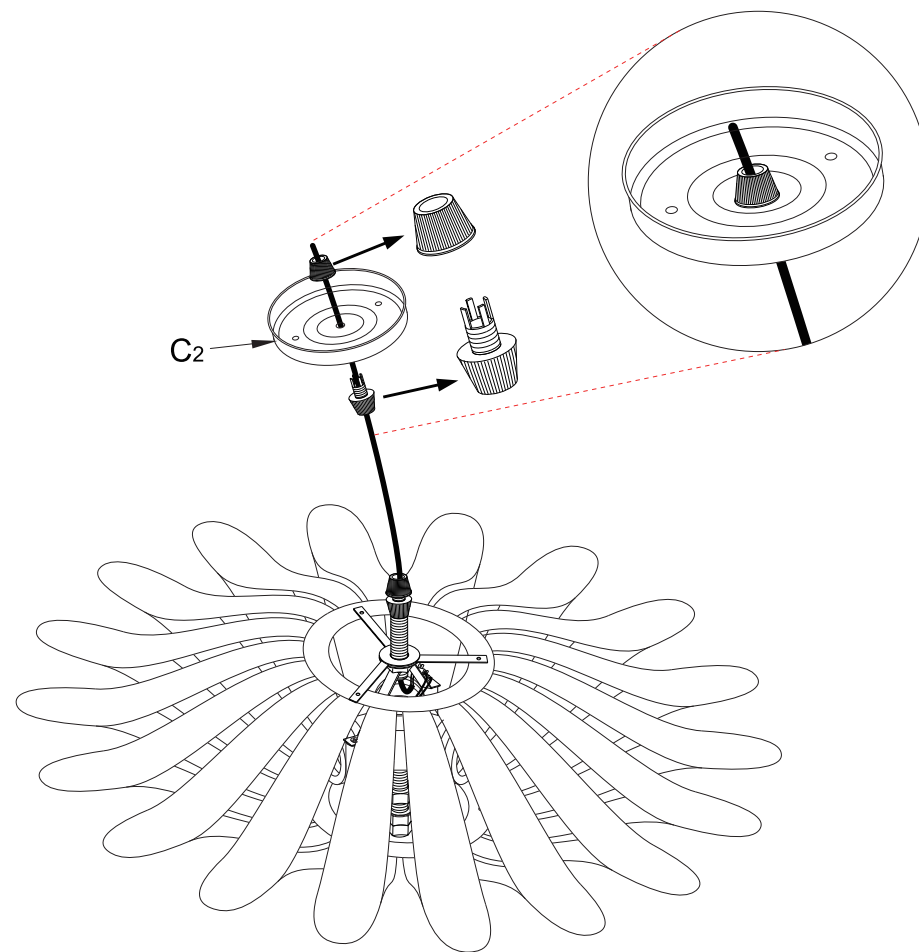


As picture shows, install the NO. C2 to the electric wire

6

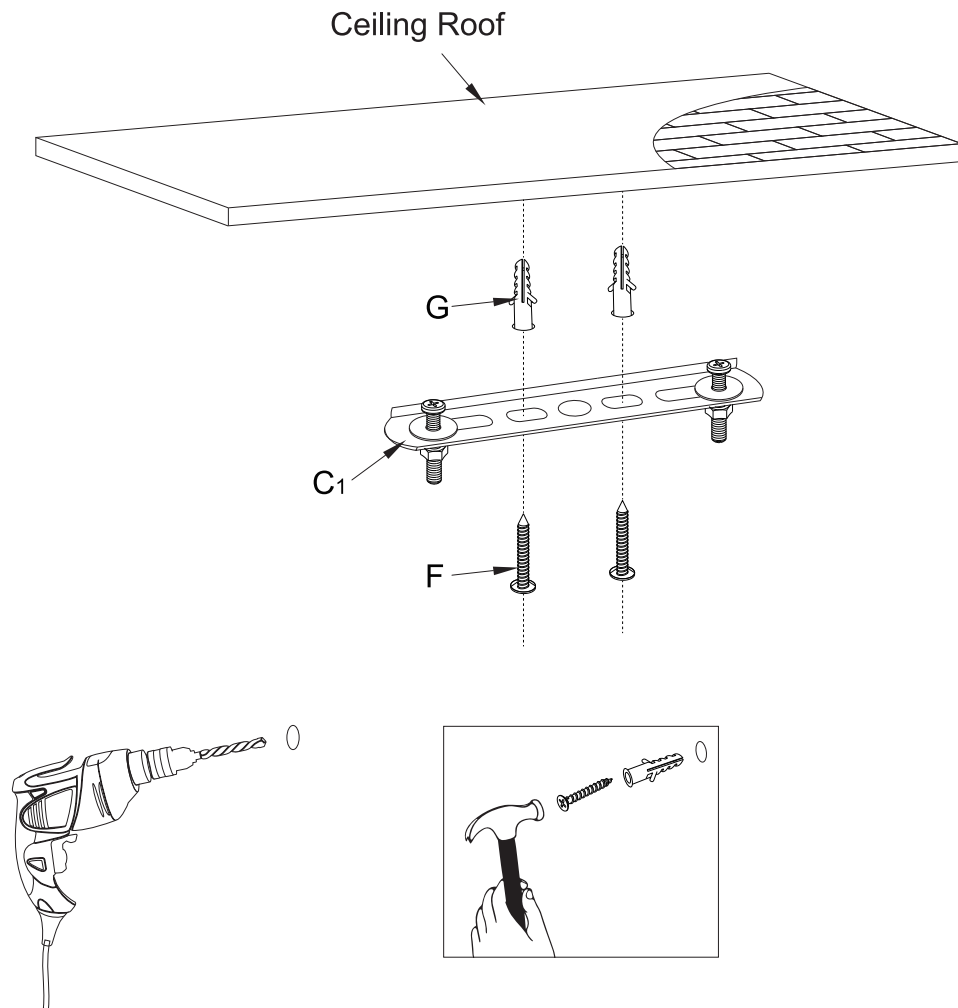

Drill the holes on the ceiling roof, fit the NO.C1 to the roof using screws F

7

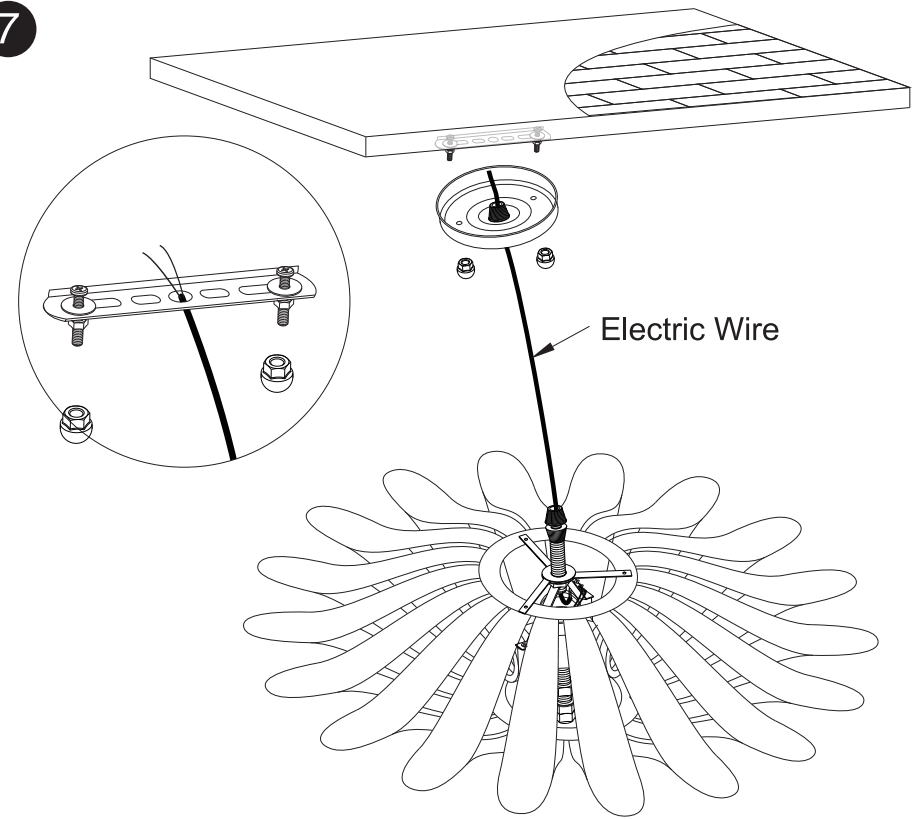

Using electric wire through the hole of NO.C1 and use the nut of Step 1 to screw tightly, then connected with reserved wire at home