


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.





**Warning !**

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

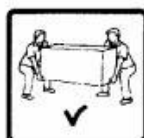

ASSEMBLY TIME

35 MINUTES

PARTS IDENTIFICATION**(BOX 1)****(BOX 2)****(BOX 3)**

HARDWARE IDENTIFICATION


1		ALLEN WRENCH	1 PC
2		FLAT WASHER	20 PCS
3		LOCK WASHER	20 PCS
4		SHORT BOLT	10 PCS
5		LONG BOLT	26 PCS
6		LIGHT SET	1 SET
7		SCREW	2 PCS
8		WOOD DOWEL	19 PCS
9		ZIGZAG SPRING CLICK	5 PCS
10		FLAT HEAD SCREW	28 PCS
11		BARREL NUT	10 PCS

**NOTE :PHILLIPS HEAD SCREW DRIVER IS REQUIRED IN THE ASSEMBLY PROCESS ;
HOWEVER MANUFACTURER DOES NOT PROVIDE THIS ITEM.**

NOTE :ALL HARDWARE WAS PACKED IN A BAG AND PUT IN HEADBOARD BOX (BOX 1)


BOX 1 & BOX 2

STEP 1

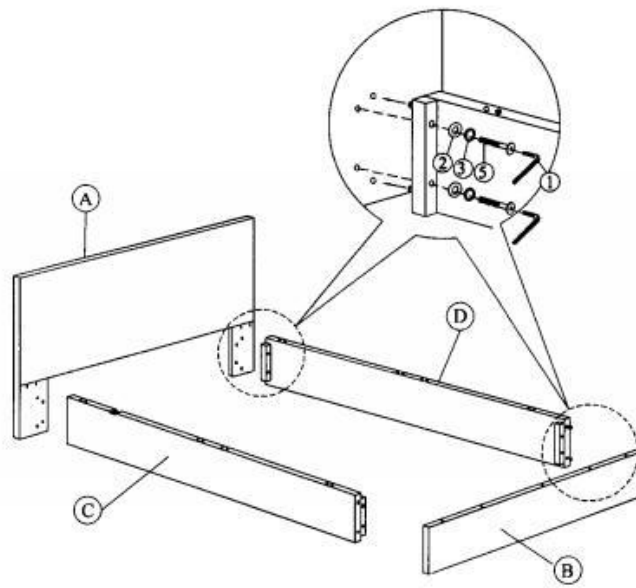


BOX 1 TO BOX3


STEP 2

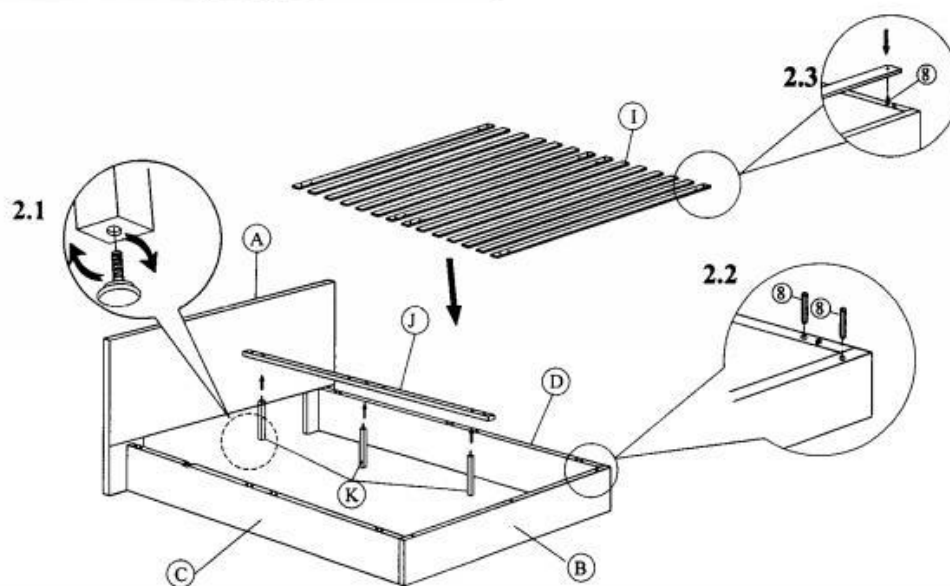


STEP 3

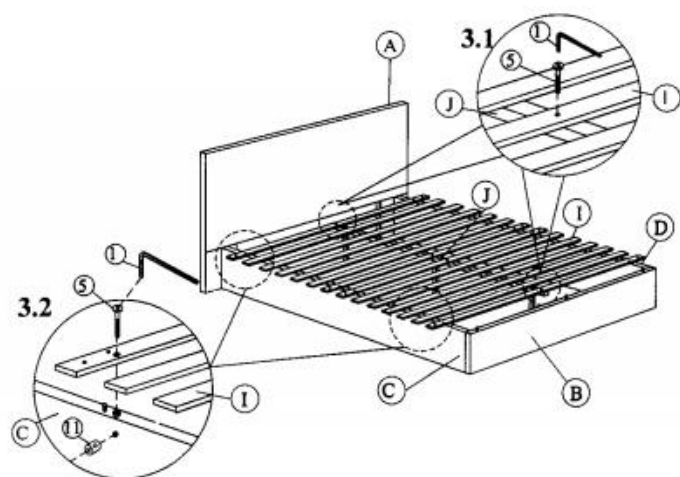


STEP 4

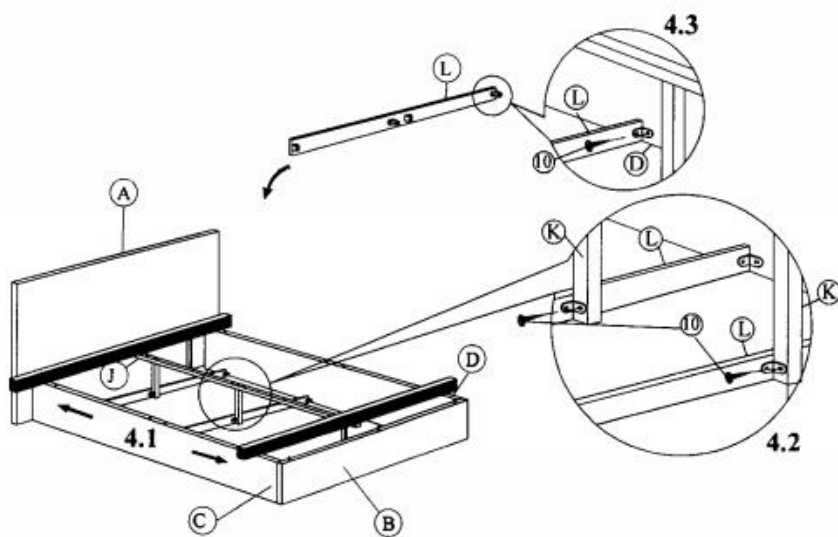

STEP 5

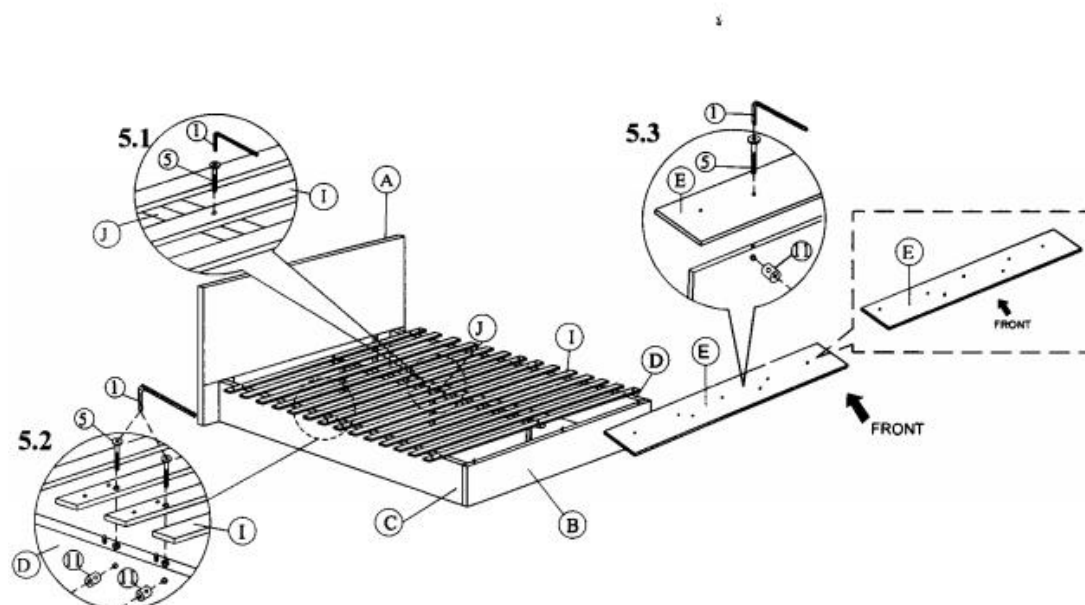

STEP 6

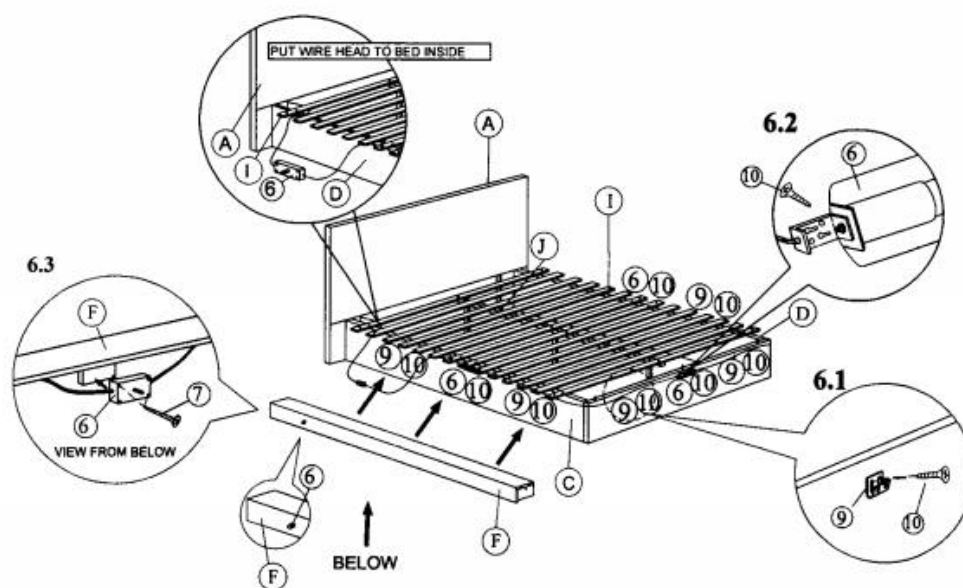

STEP 7



STEP 8

