

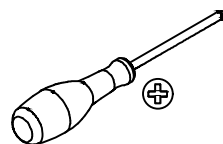
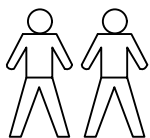
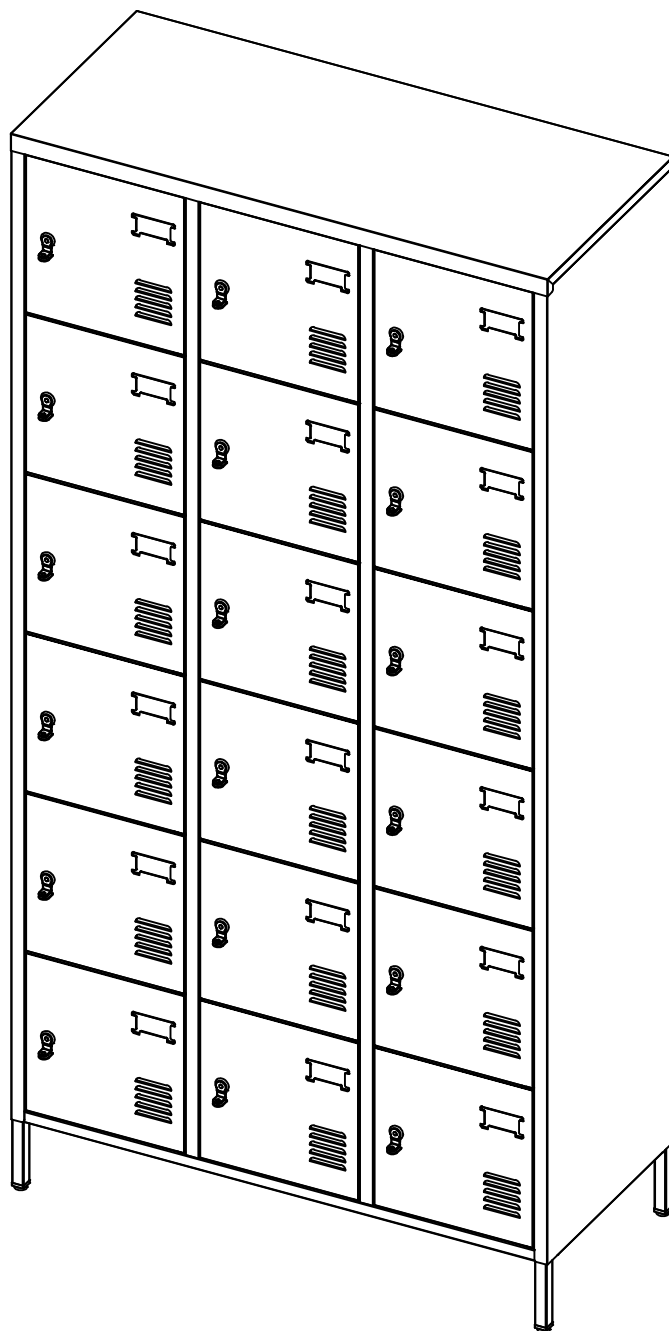
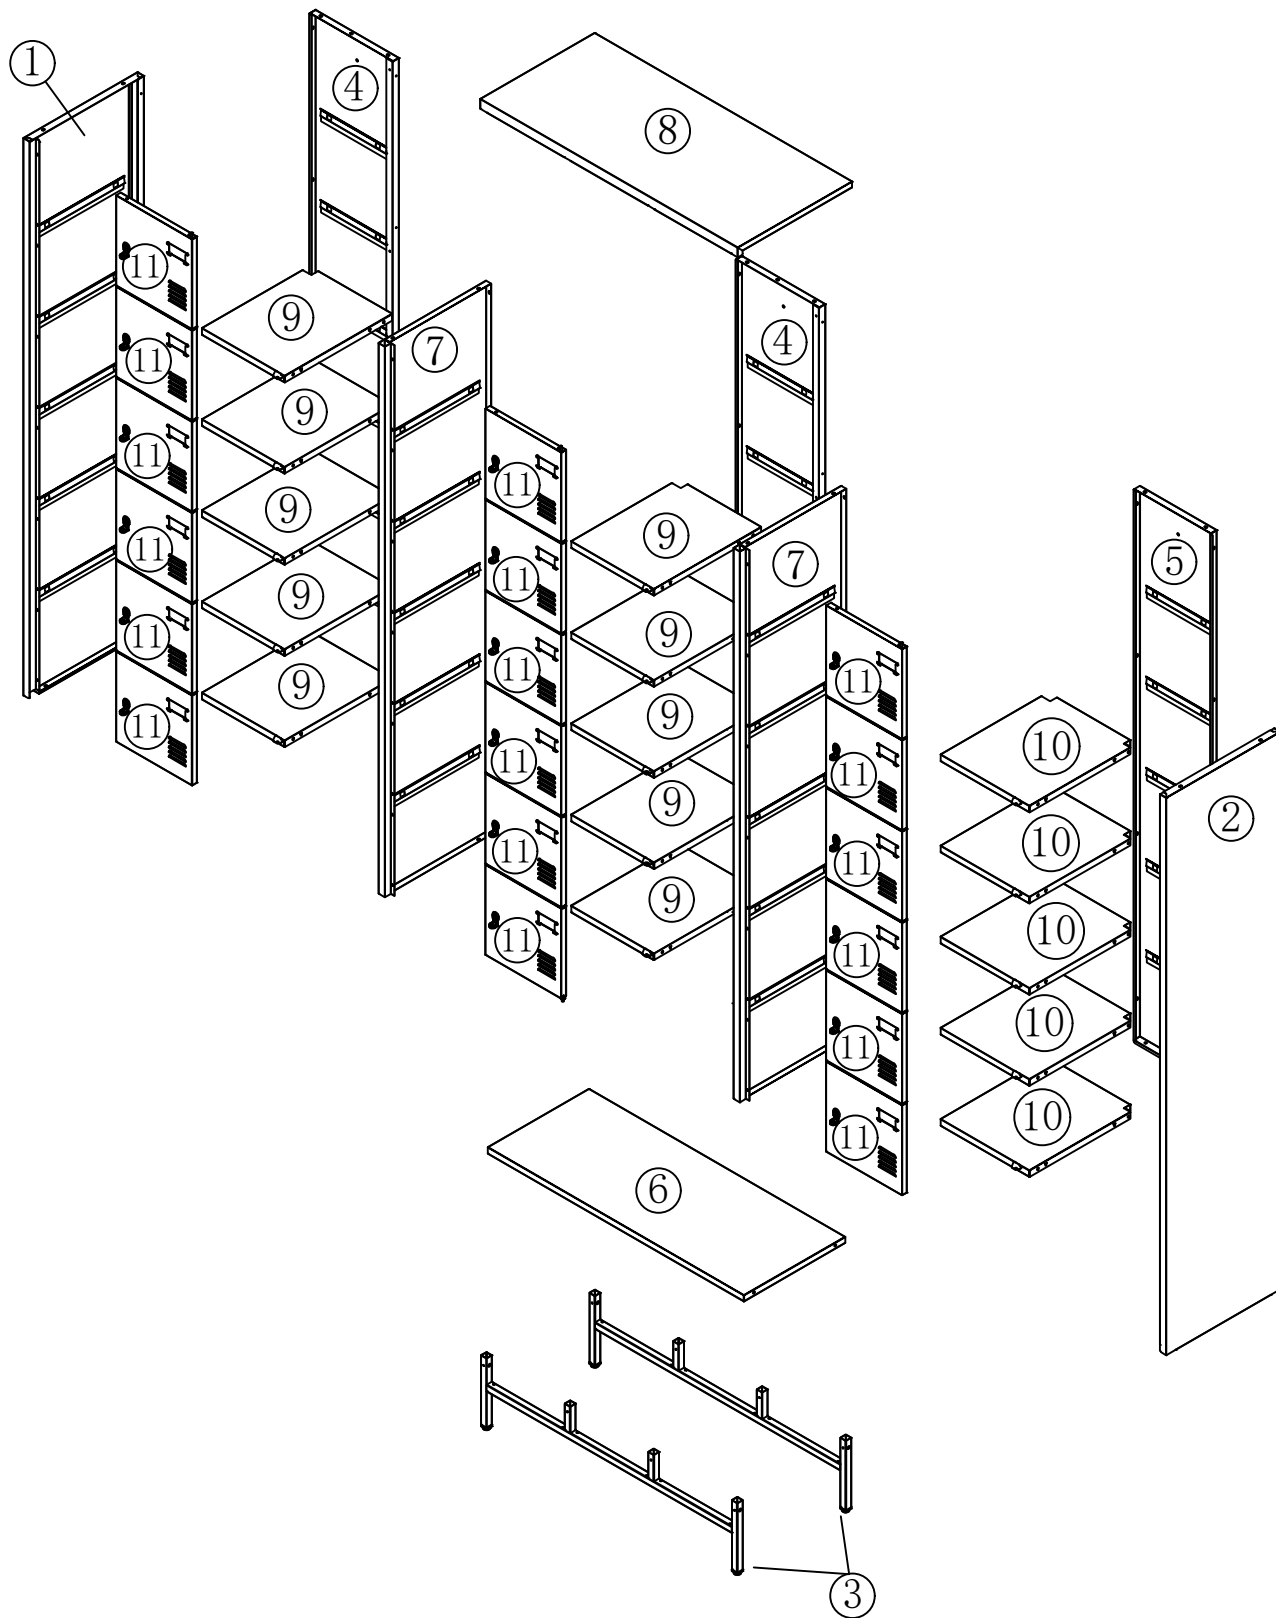


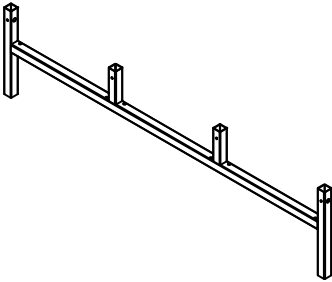







Metal Storage Locker Instructions




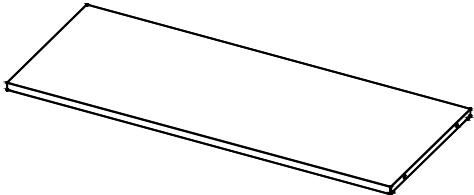

Accessories


1-Left Panel	1PC	2-Right Panel	1PC
			
3-Cross Leg	2PCS	4-Left Back Panel	2PCS
			
5-Right Back Panel	1PC	6-Bottom Panel	1PC
			

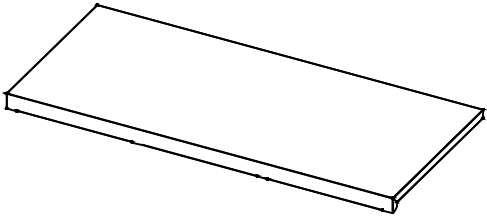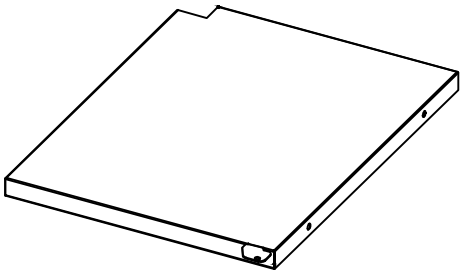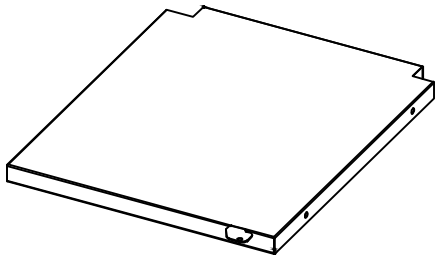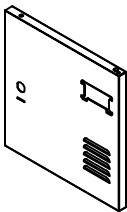7-Middle Side Panel	2PCS	8-Top Panel	1PC
			
9-Left Shelf	10PCS	10-Right Shelf	5PCS
			
11-Door	18PCS		
			

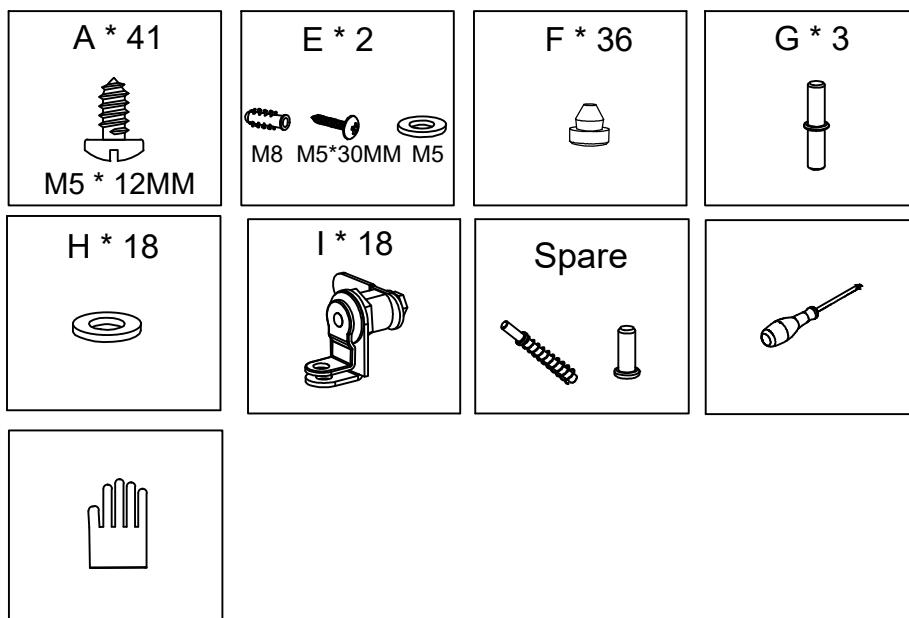


Installation Steps


Step 1: Prepare two Part 3 (Pay attention to the direction)

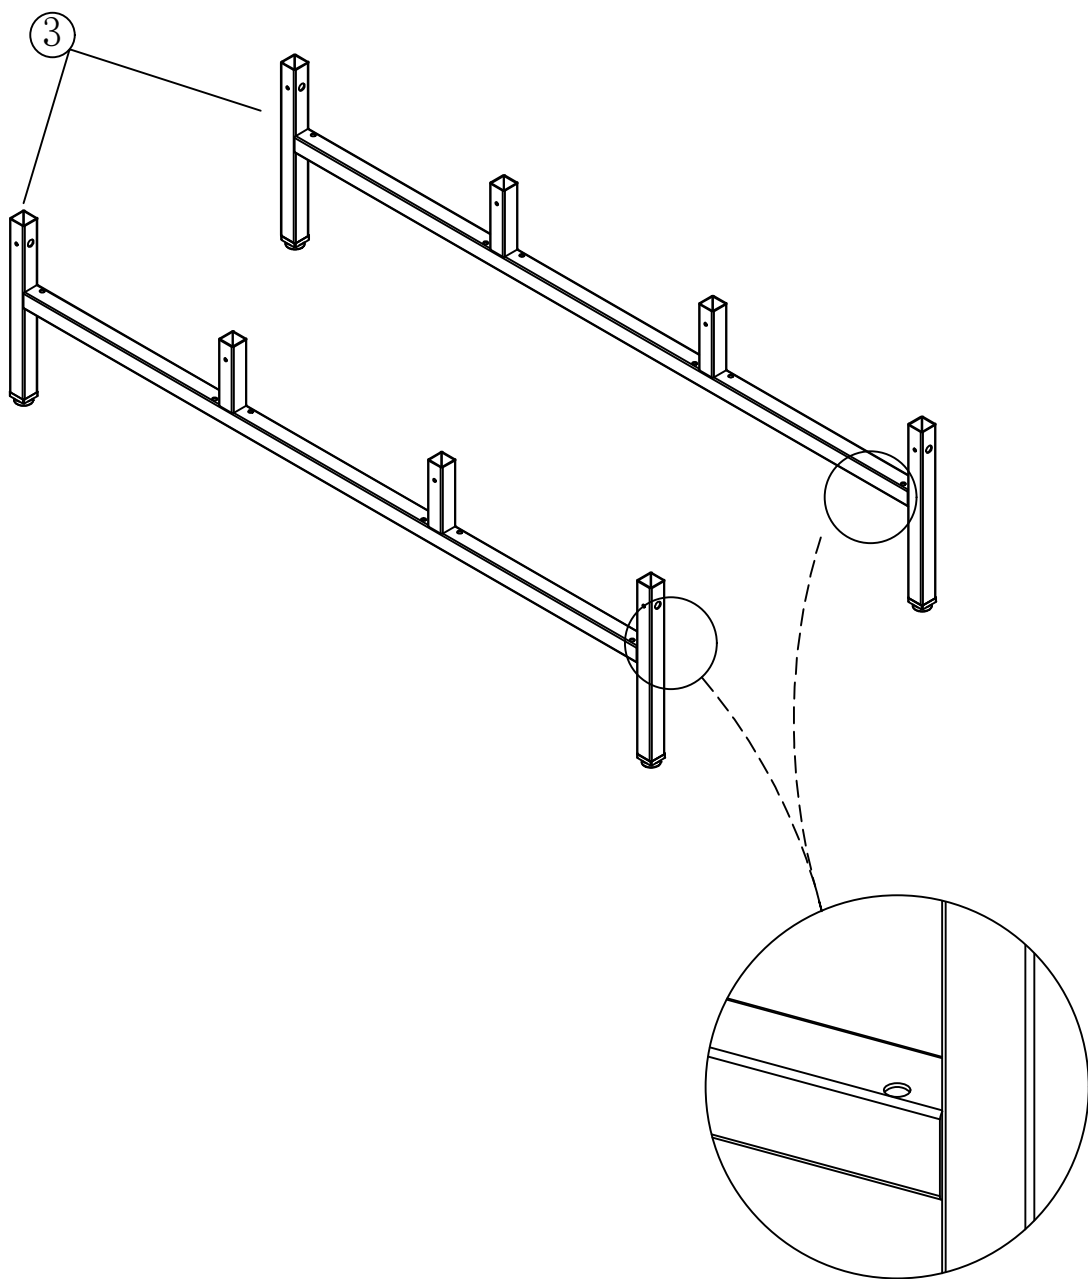



Step 2: Insert Part 1 into Part 3

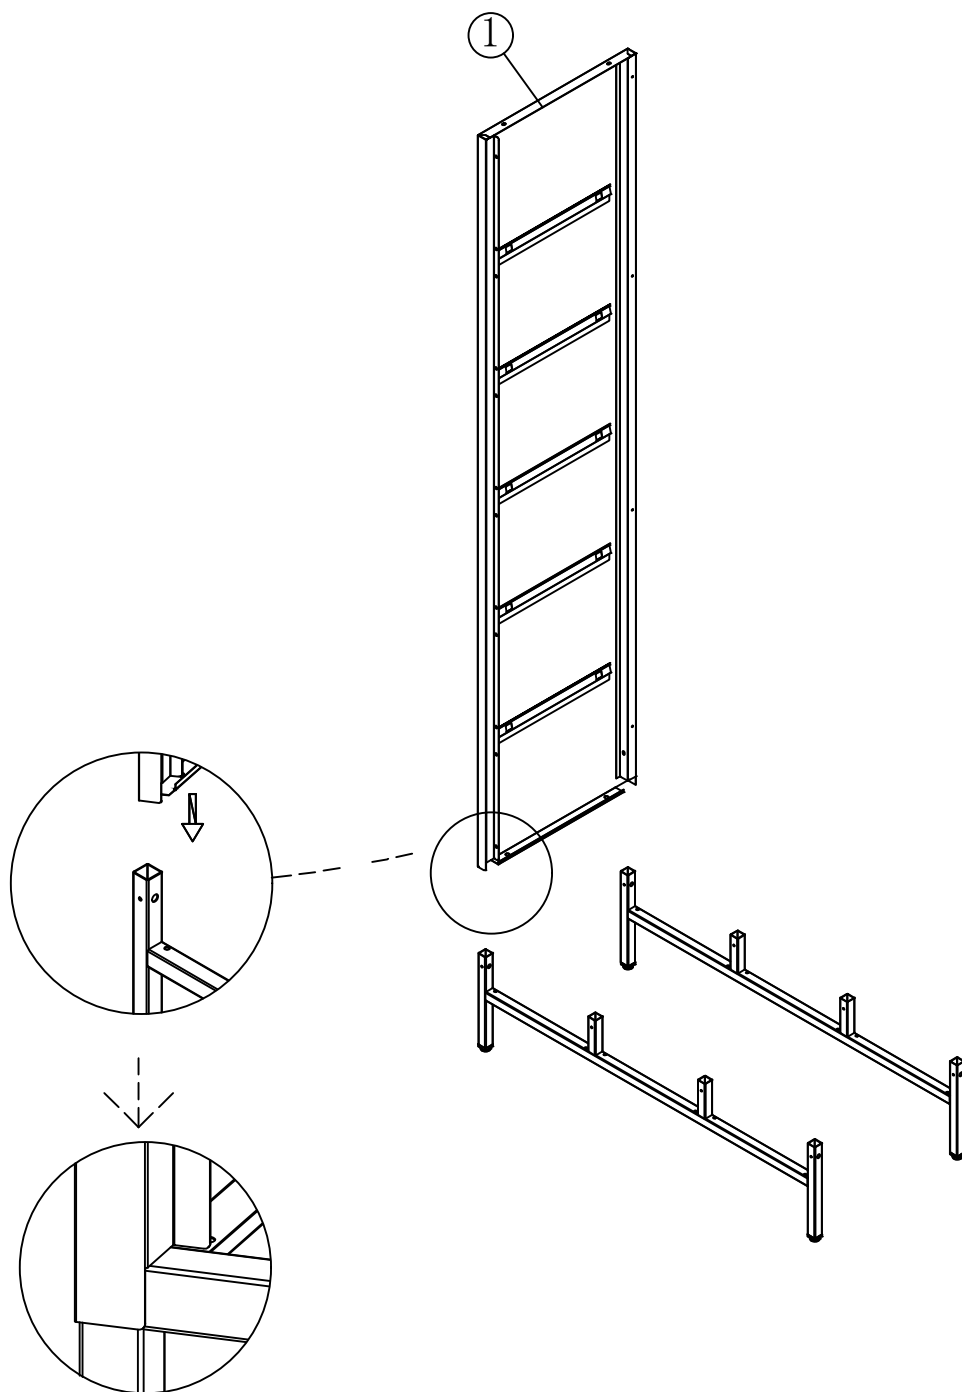



Step 3: Insert Part 2 into Part 3

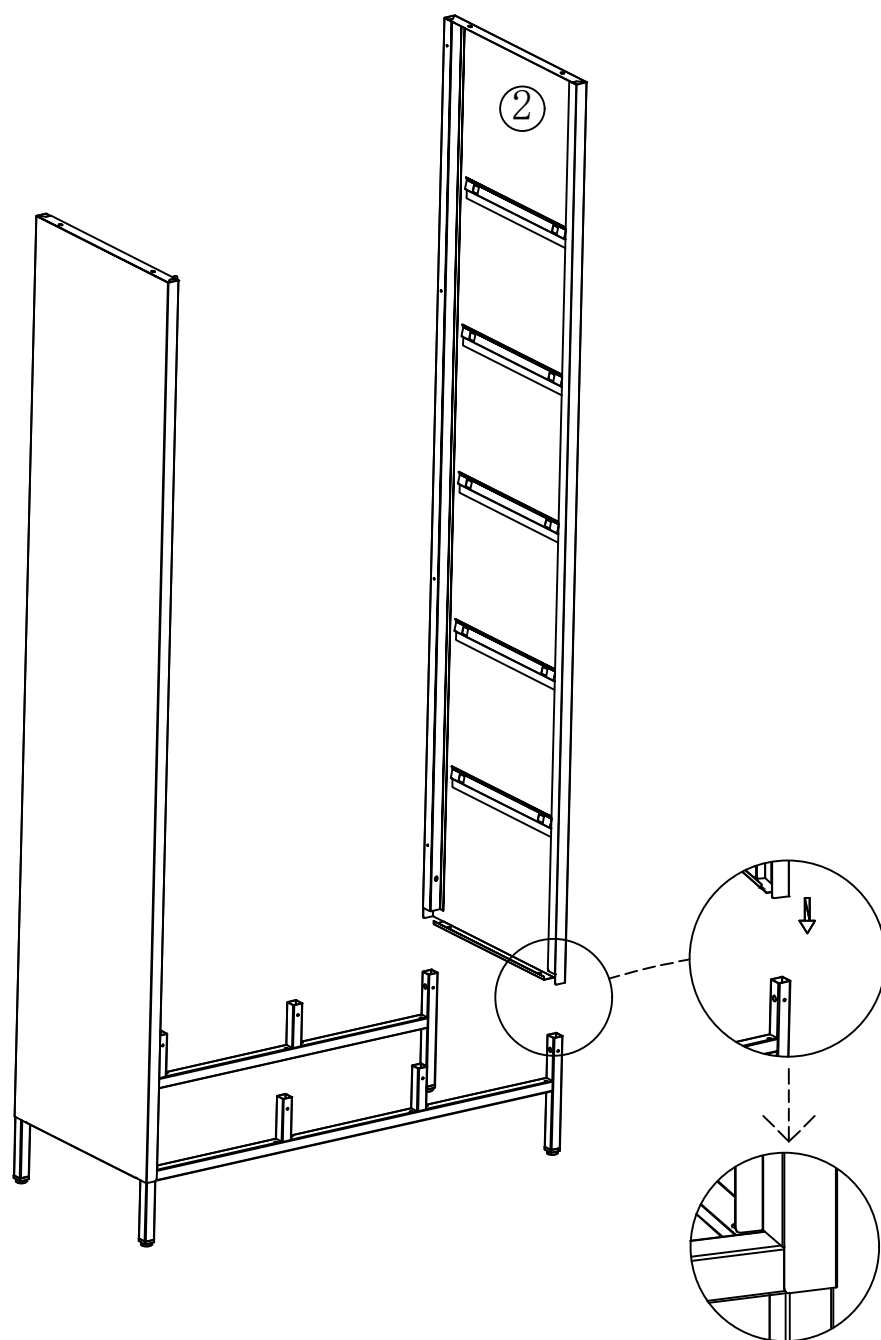


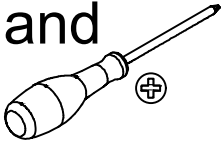
A*4	Step 4: Connect Part 1, Part 2 and Part 3 with Part A	
 M5*12MM		

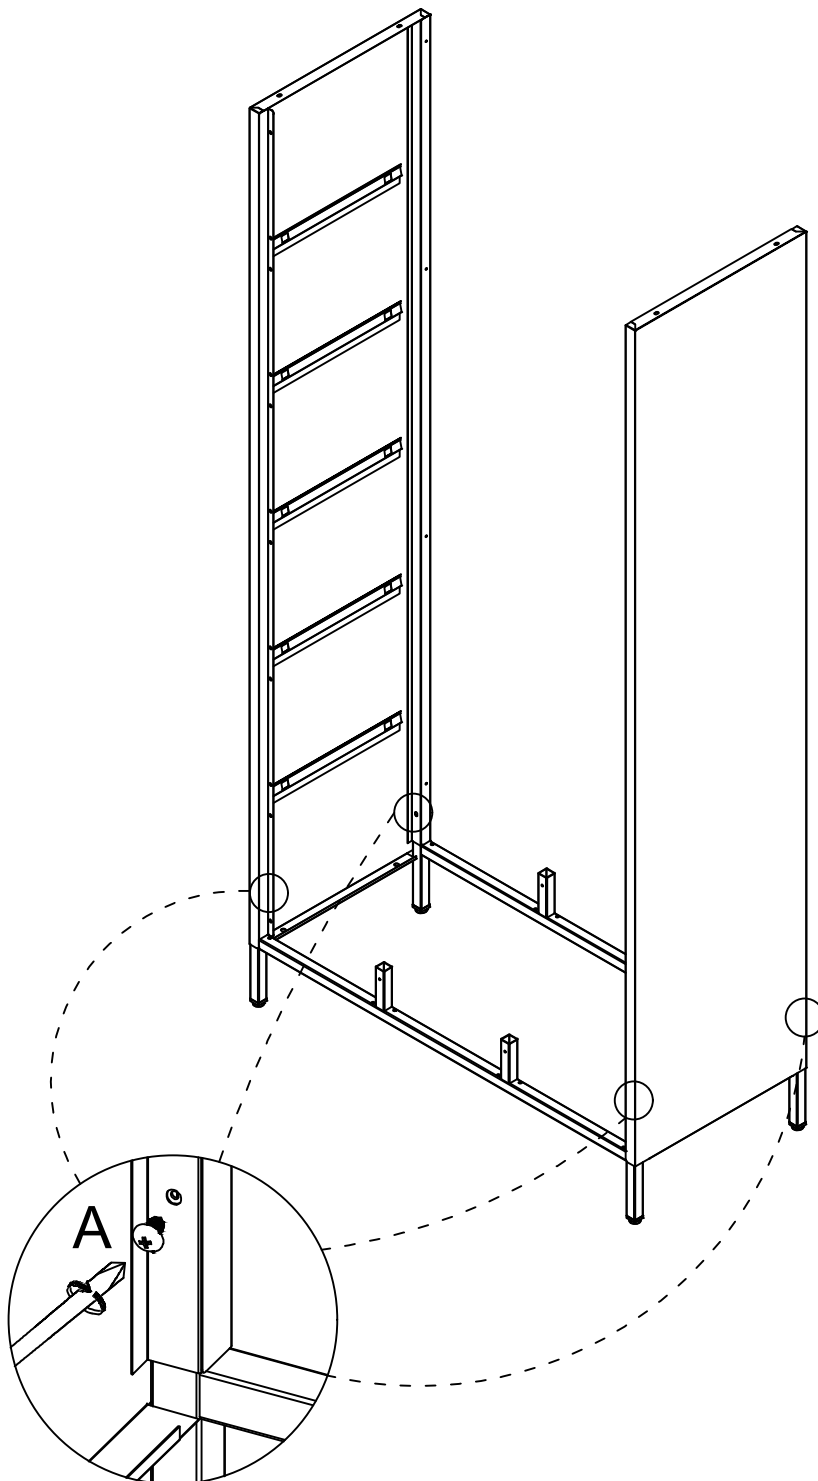


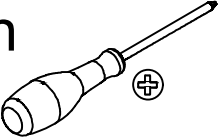
A*4	Step 5: Install Part 4 with Part A	
 M5*12MM		

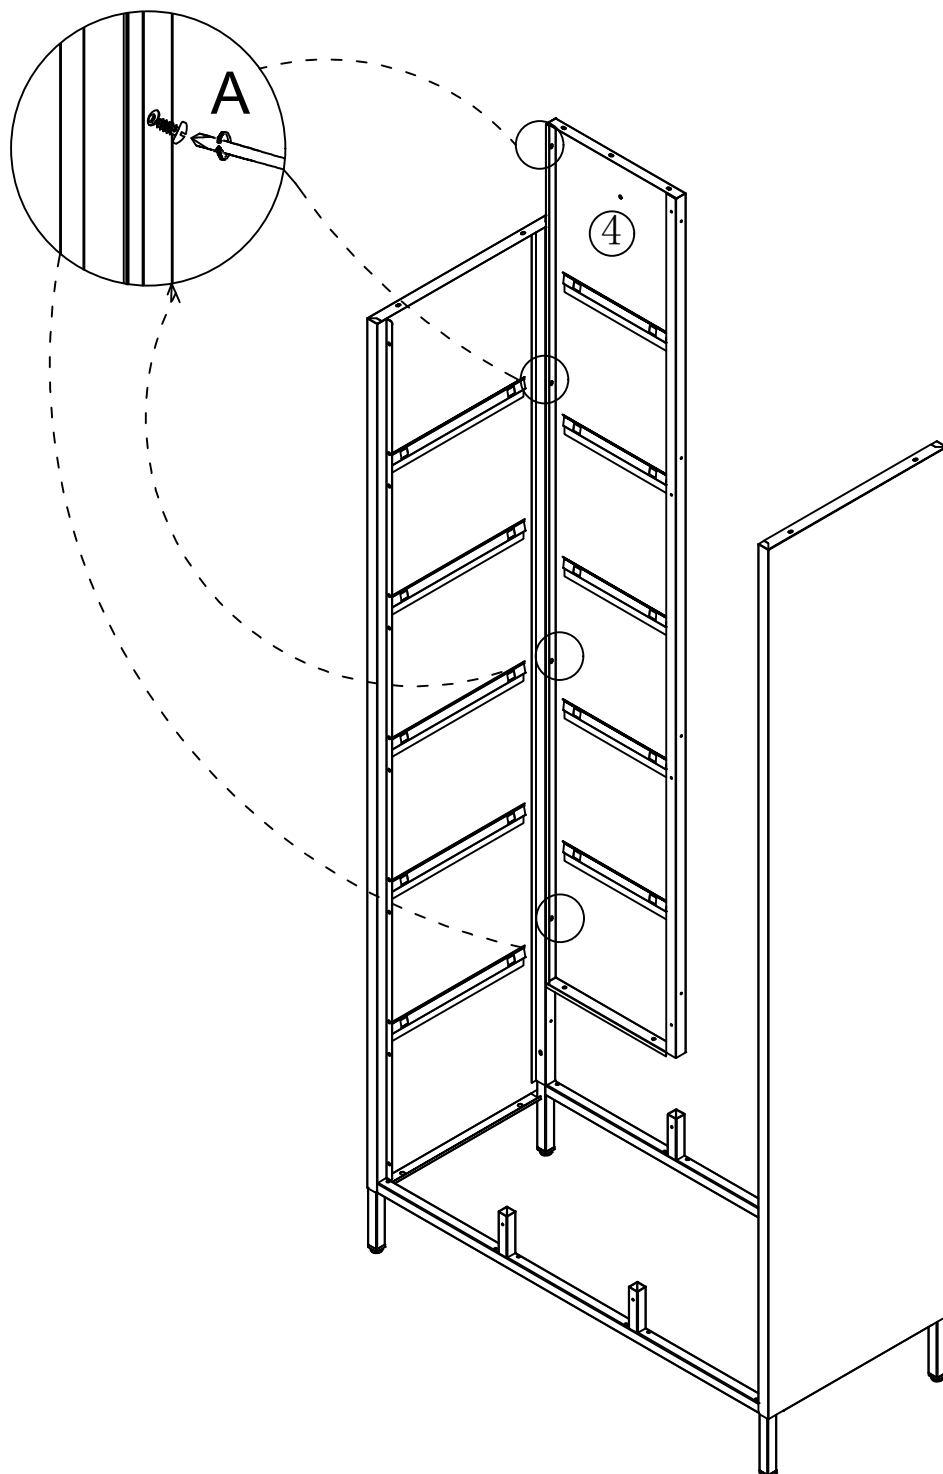

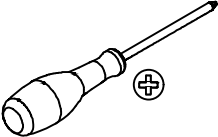
A*4	Step 6: Install another Part 4 with Part A	
 M5*12MM		

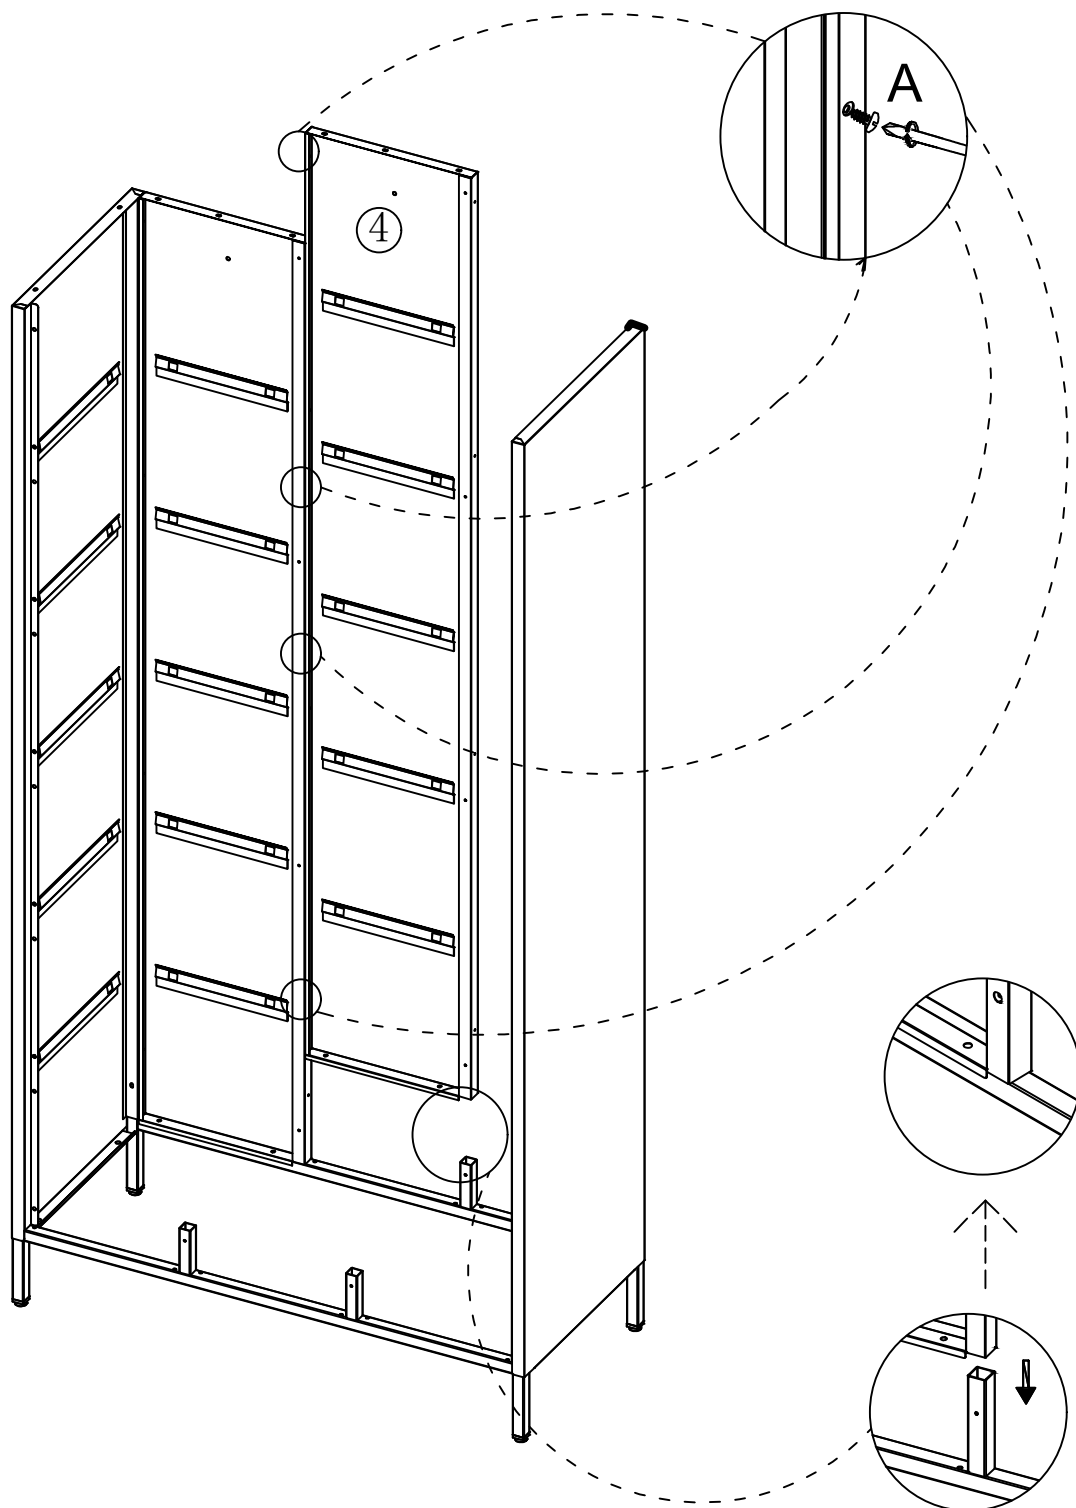


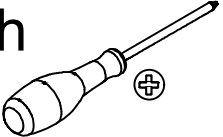
A*8	Step 7: Install Part 5 with Part A	
 M5*12MM		

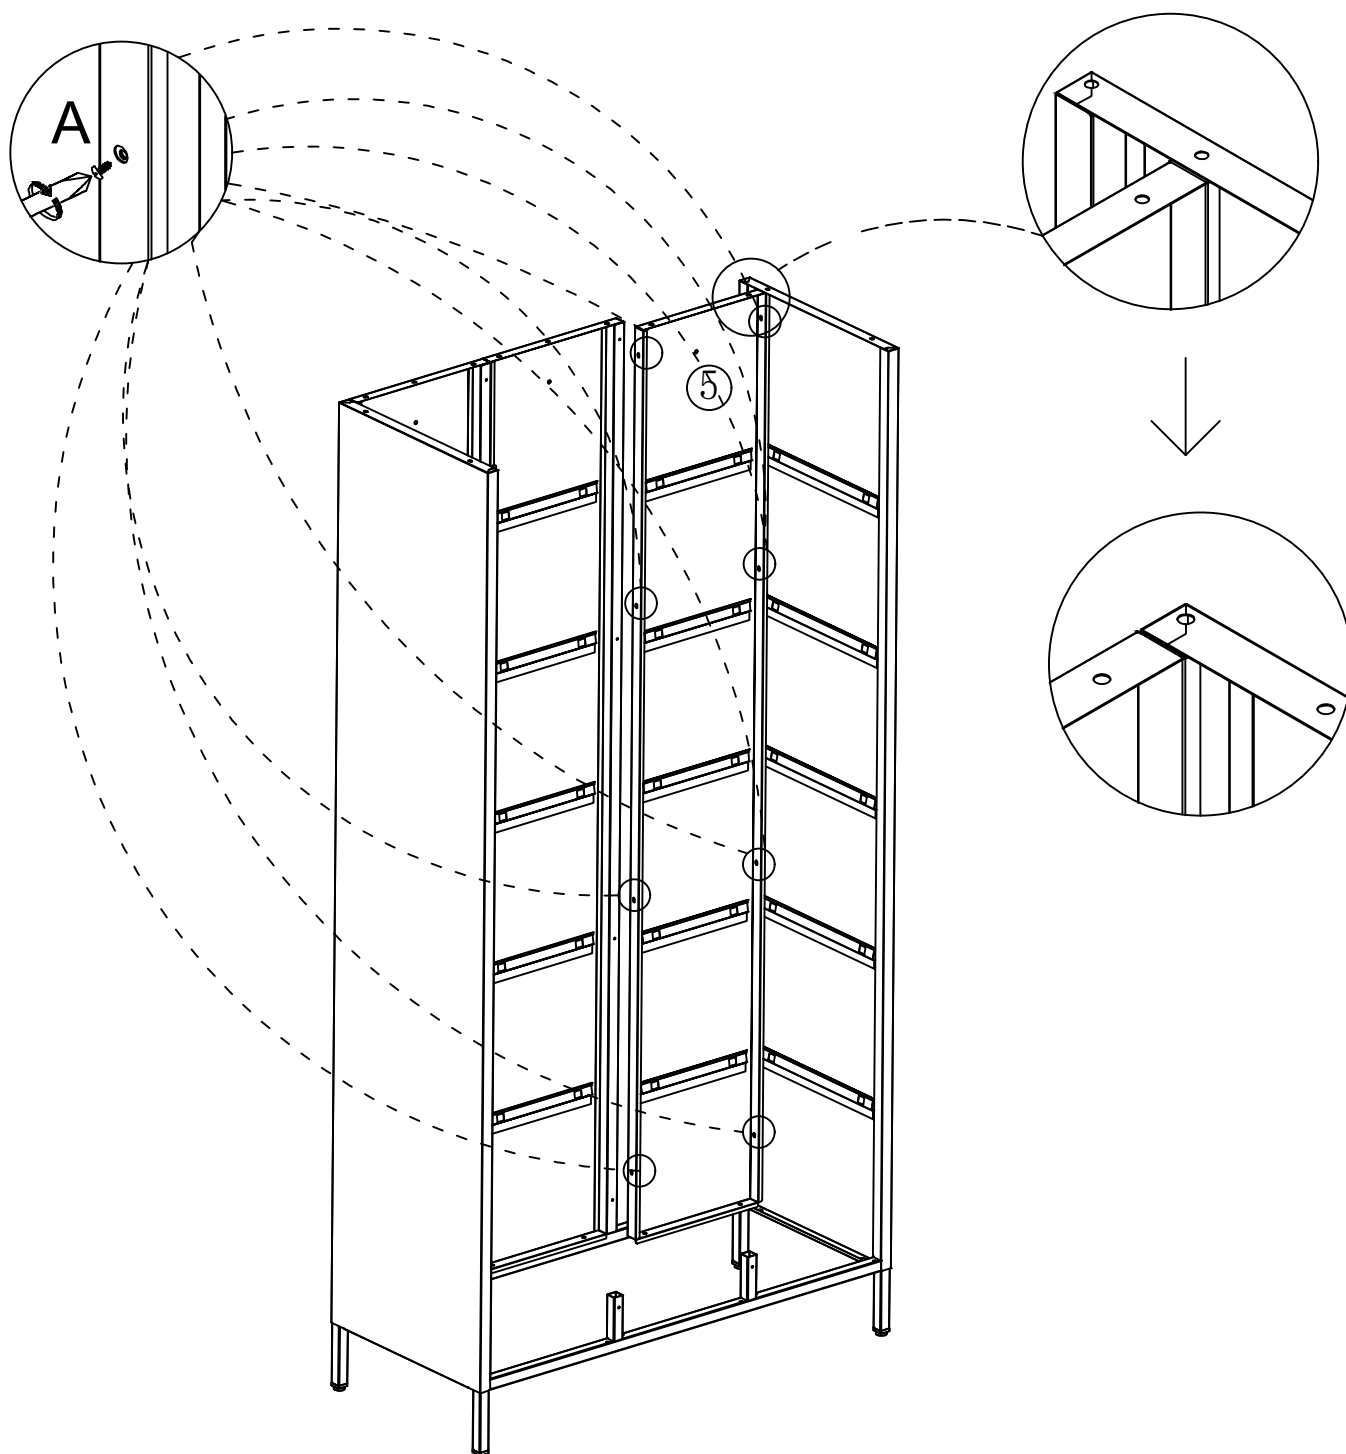


Step 8: Put Part 6 on Part 3

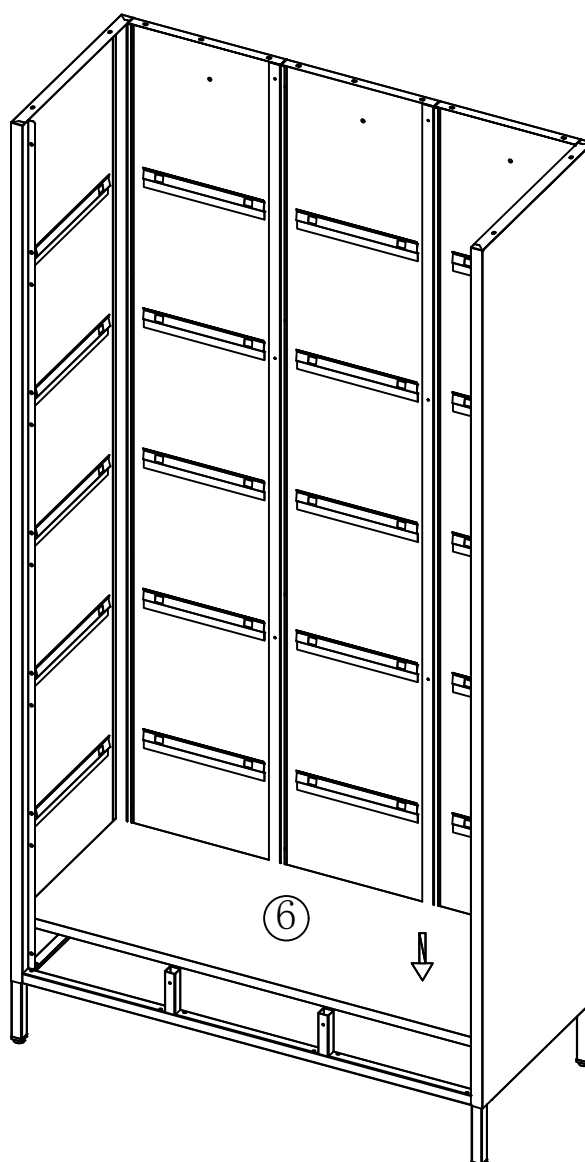

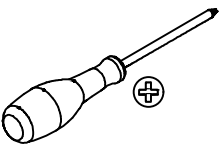A*10	Step 9: Install Part 7 with Part A	
 M5*12MM		

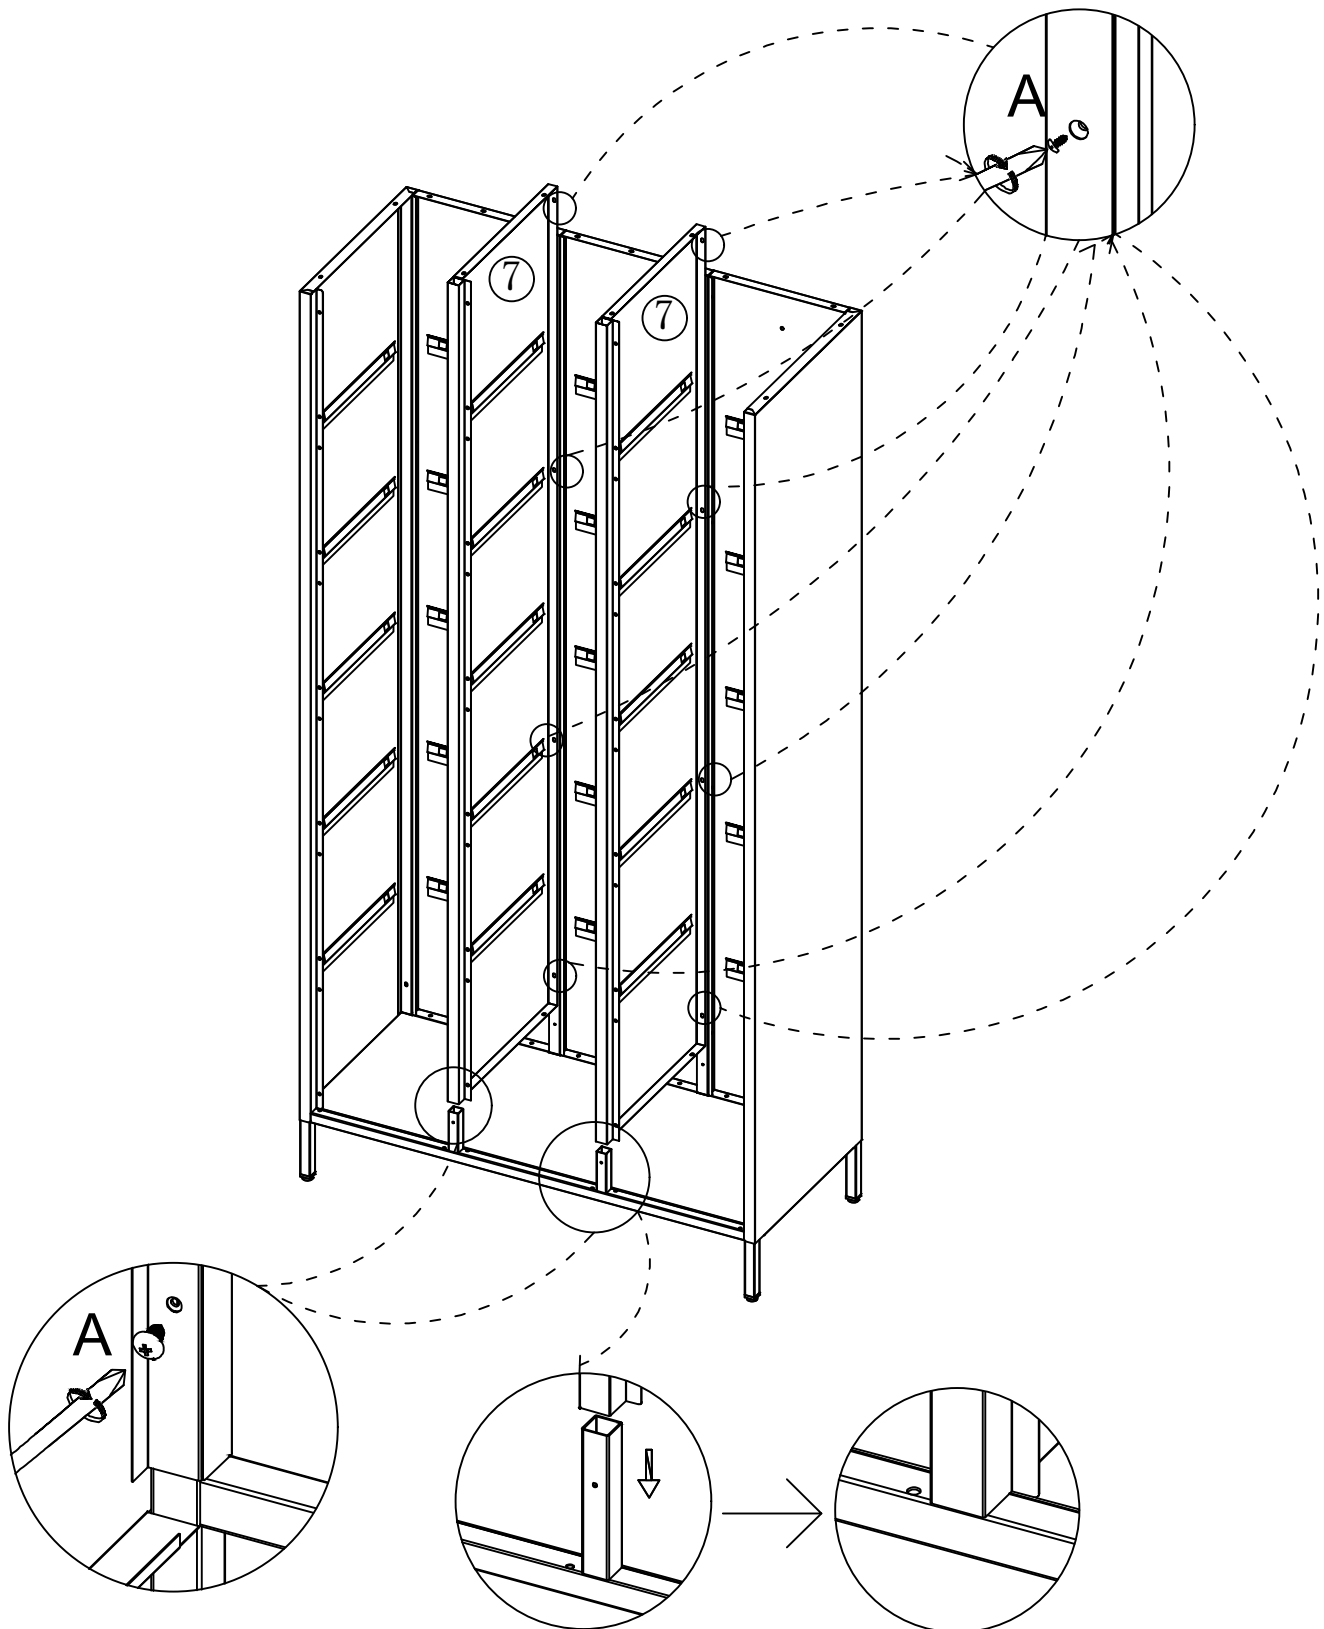

Step 10: Install Part 8


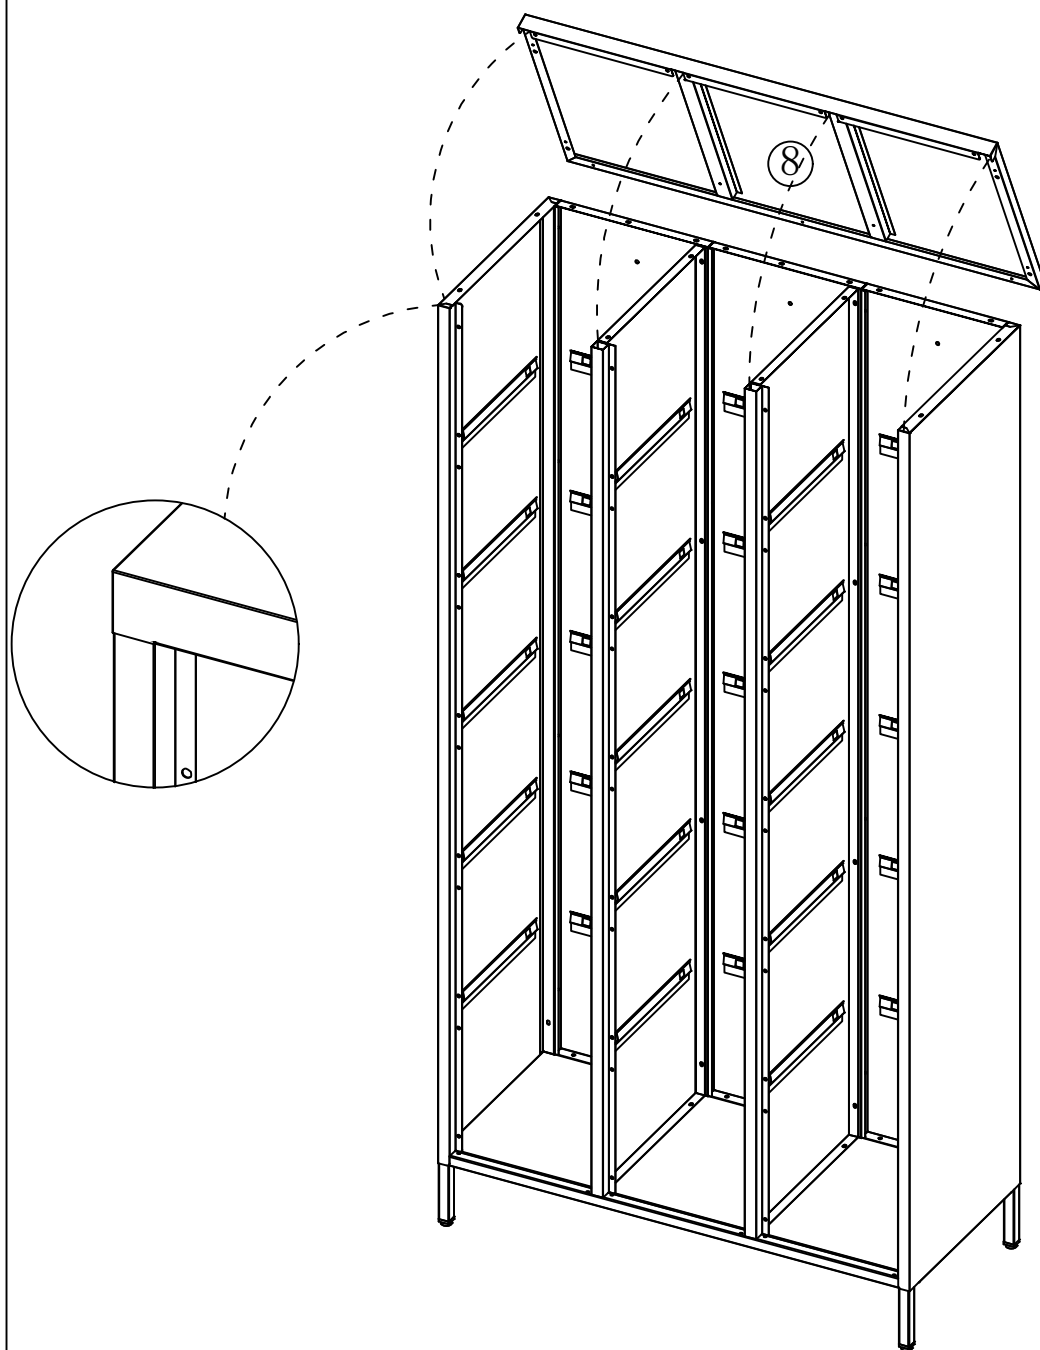


A*11



M5*12MM


Step 11: Install Part 8 with Part A

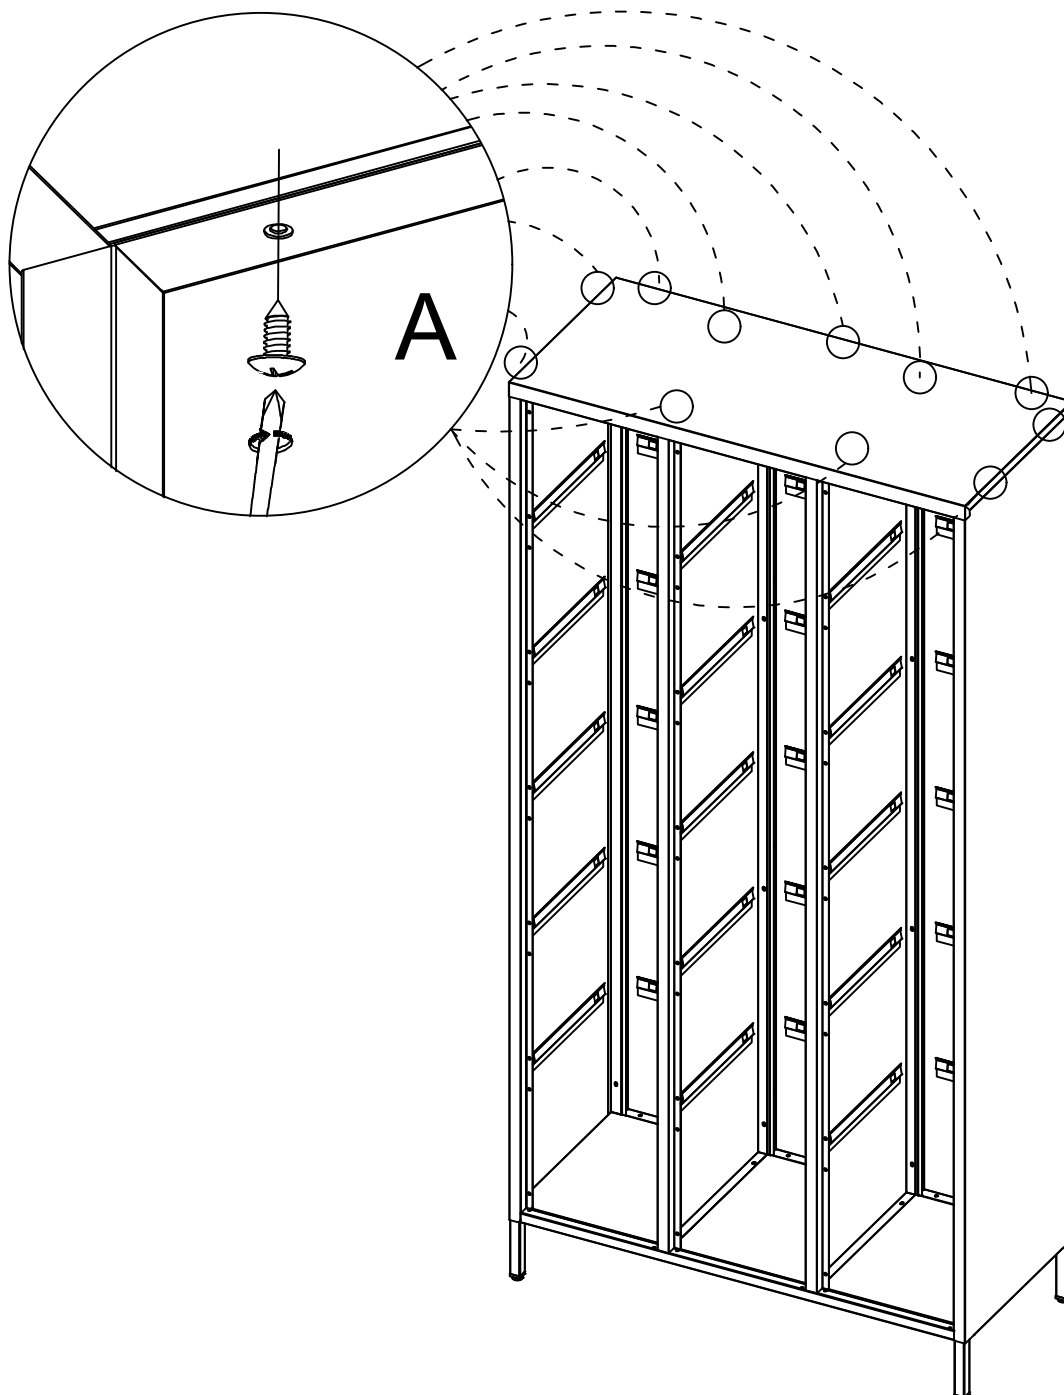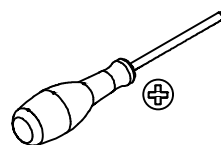


Step 12:	E*2			
	 M8	 M5*30MM	 M5	




This step can help you
fix the cabinet on the
wall.

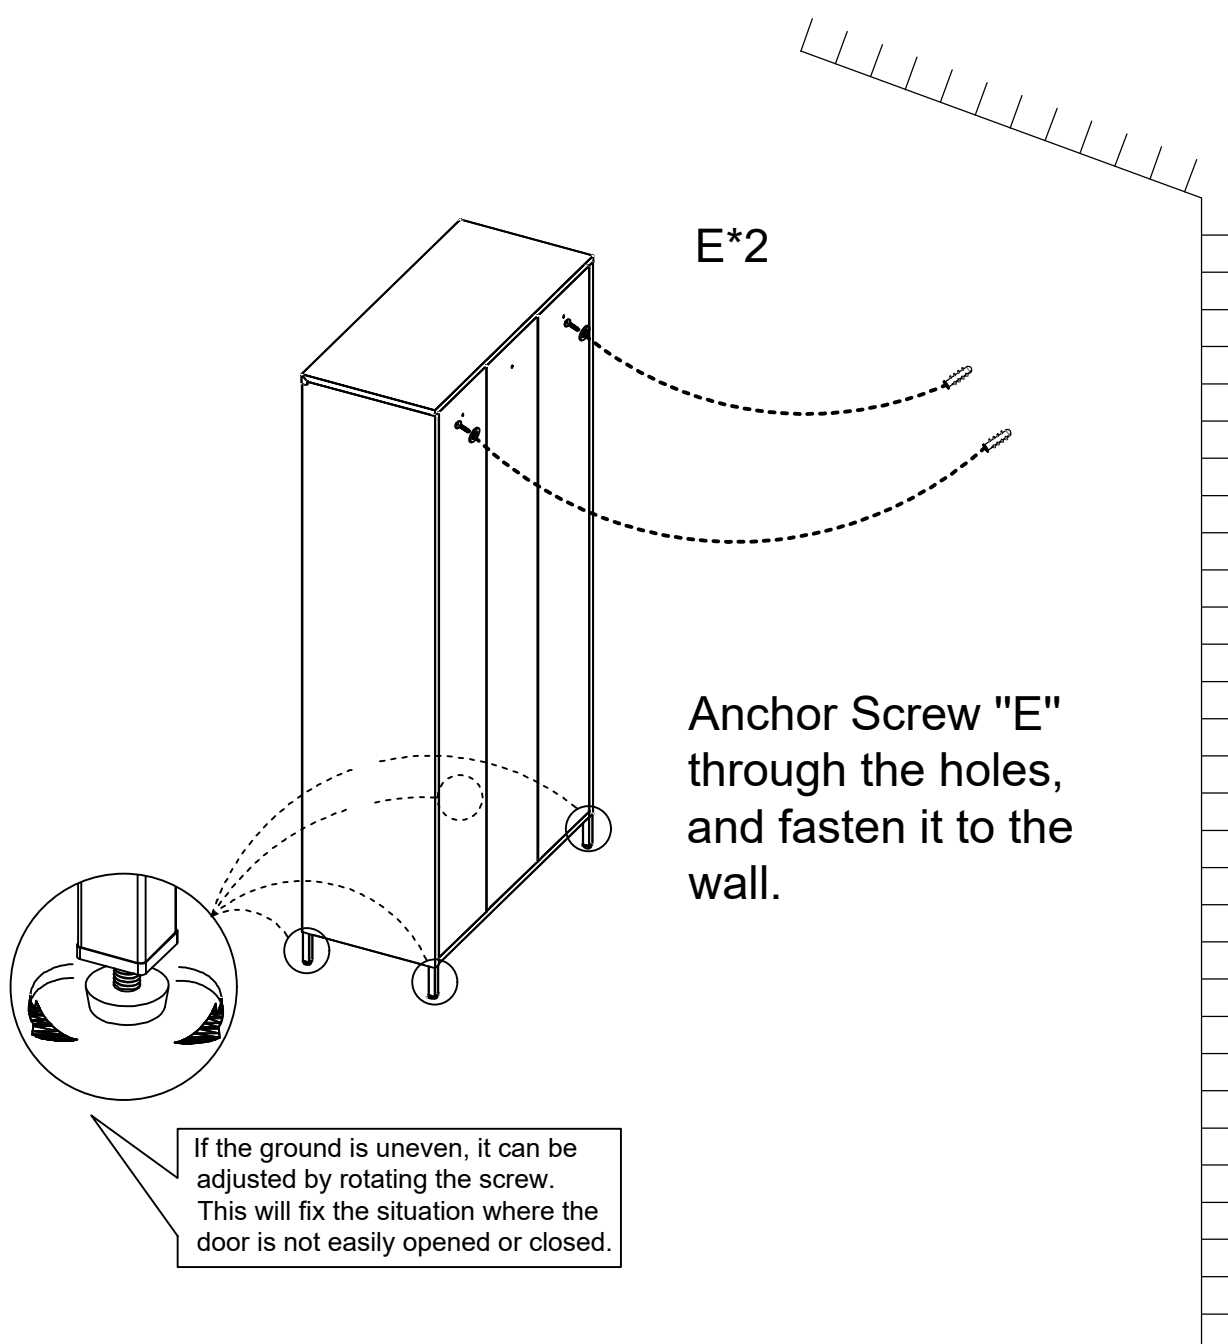

Step 13: Install Part 9

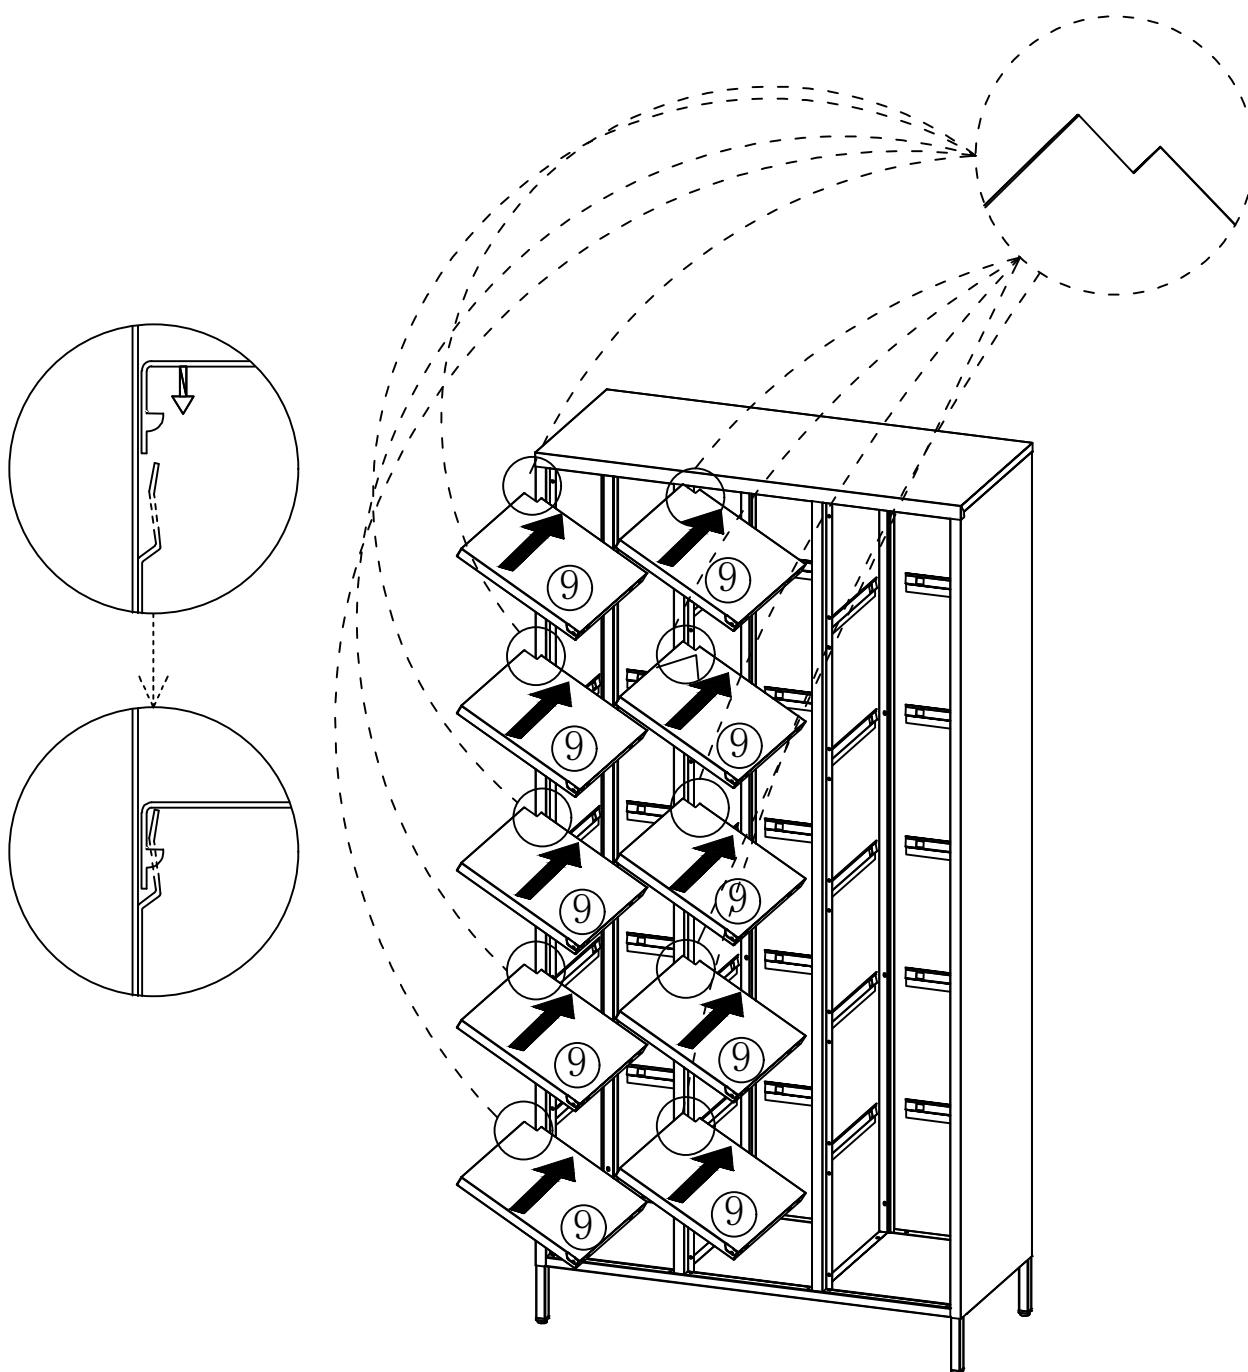


Step 14: Install Part 10

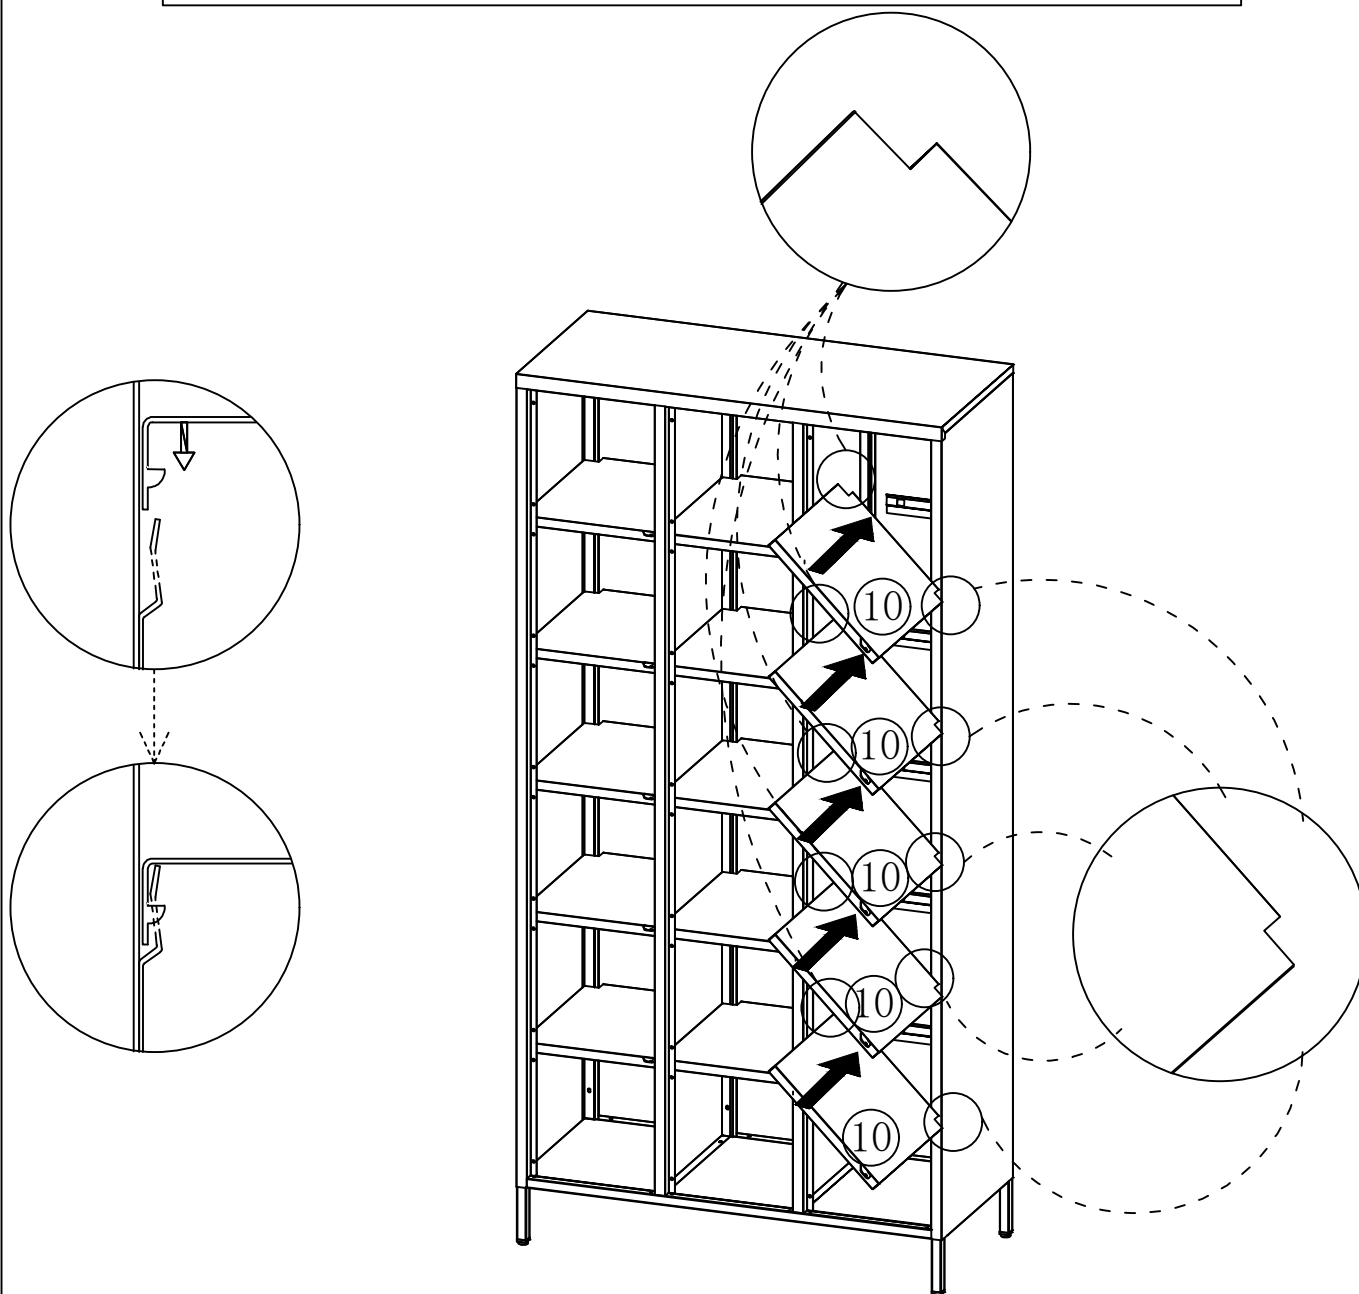


F*36




Step 15: Install Part F

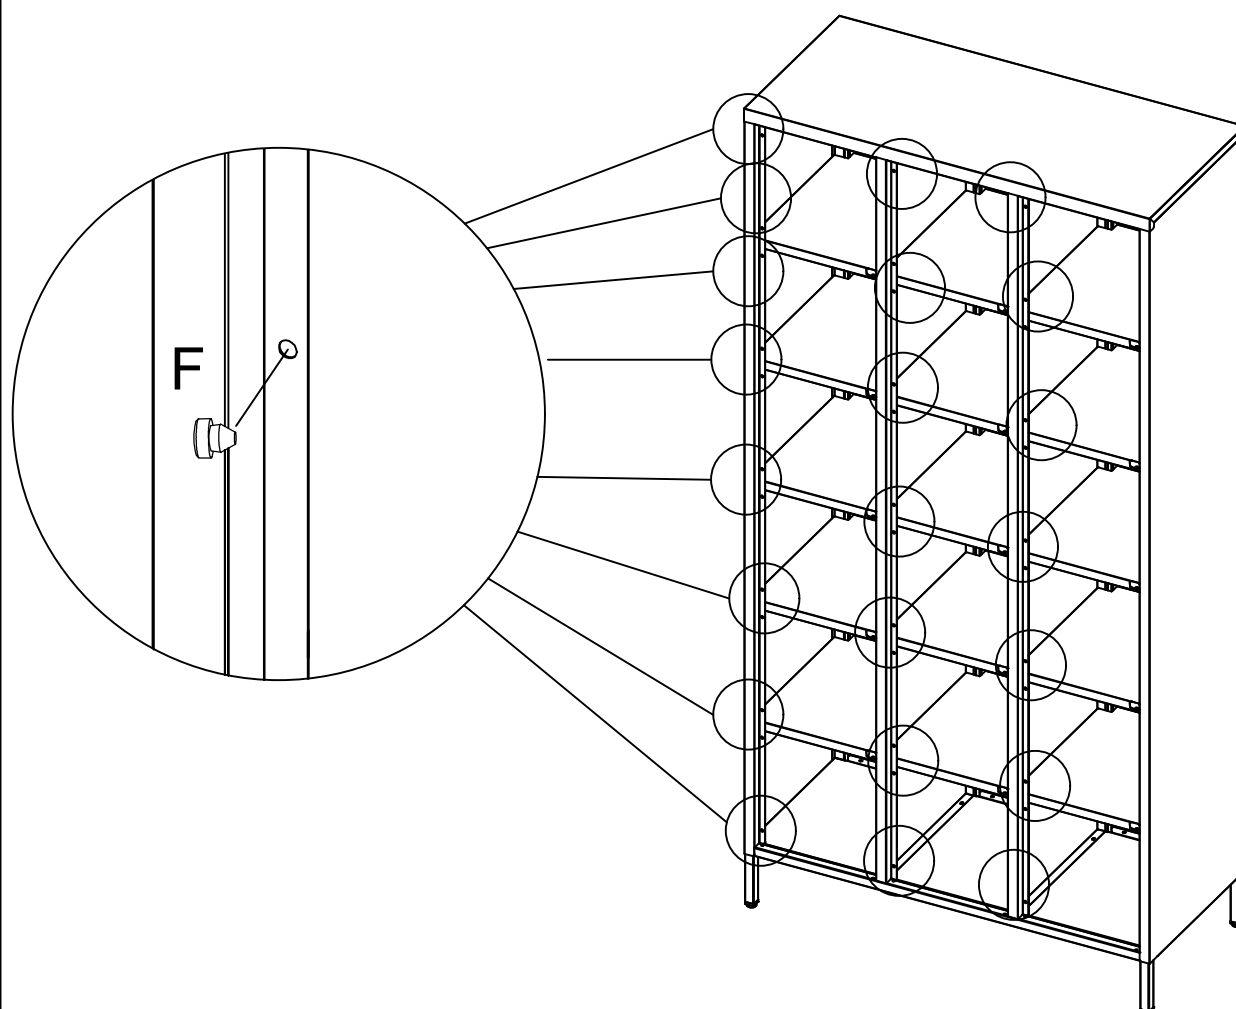


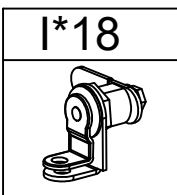

Step 16: Install the lock

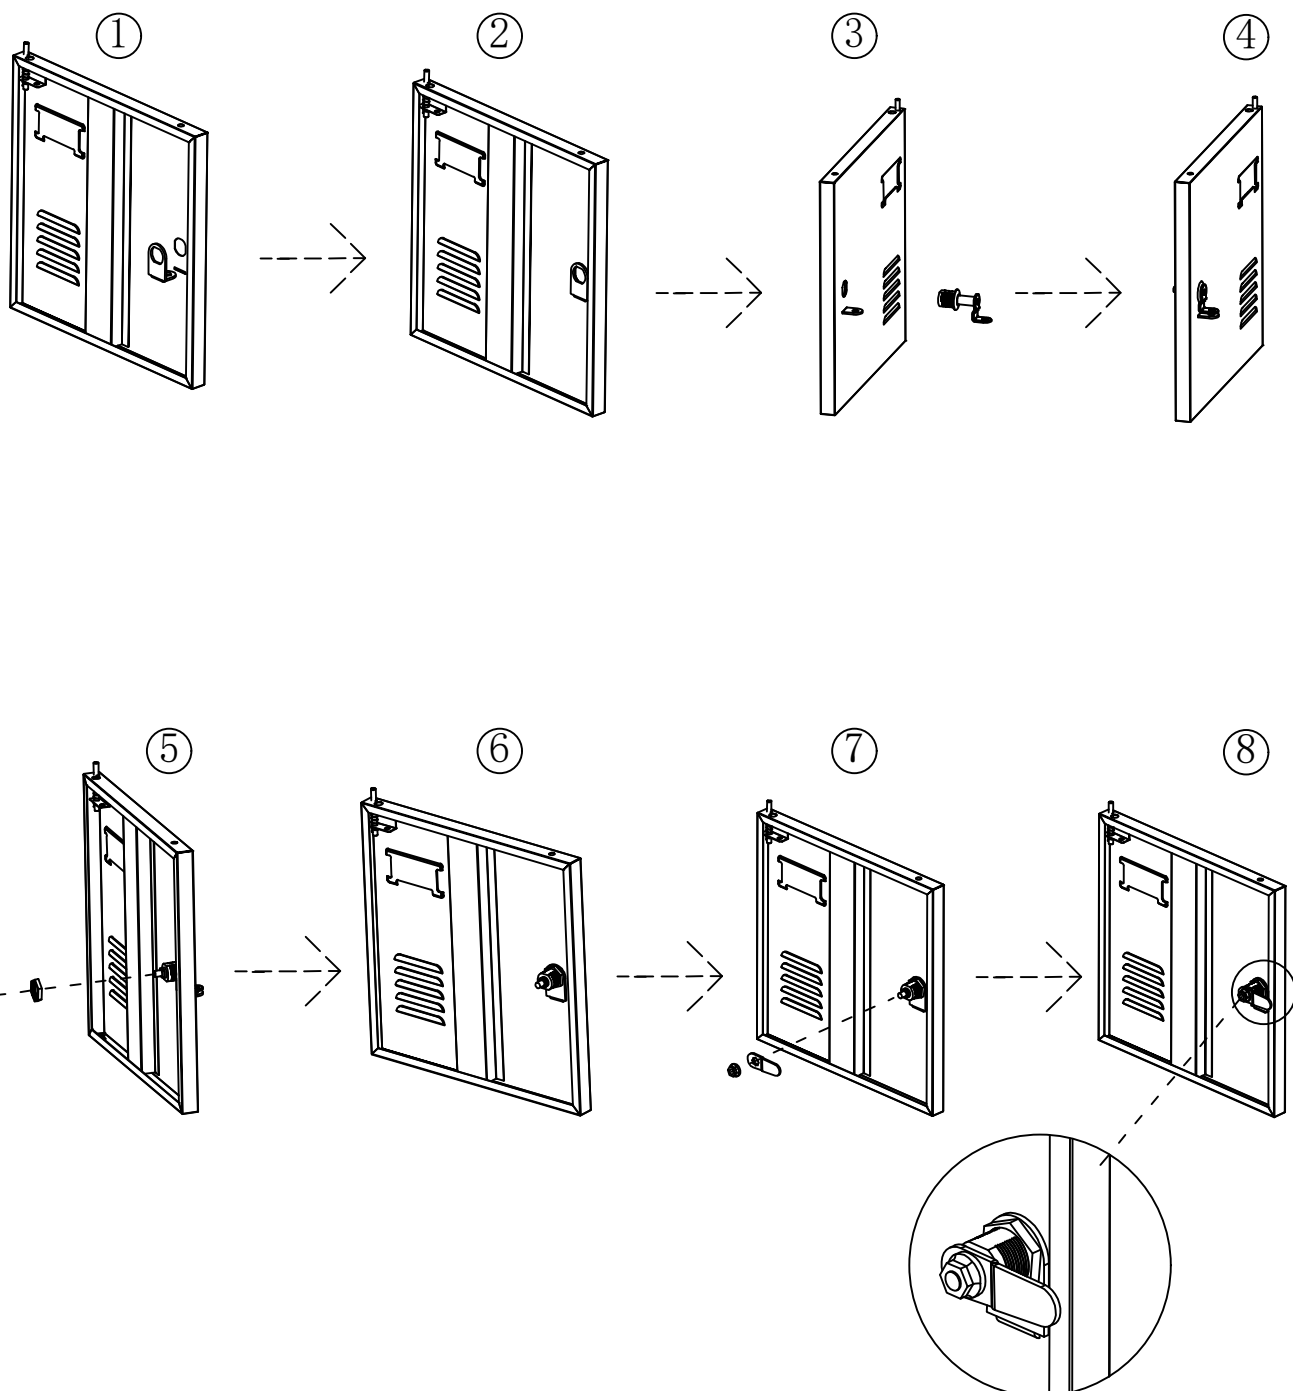

G*3	H*18	Step 17: Install the doors (Part 11)
		

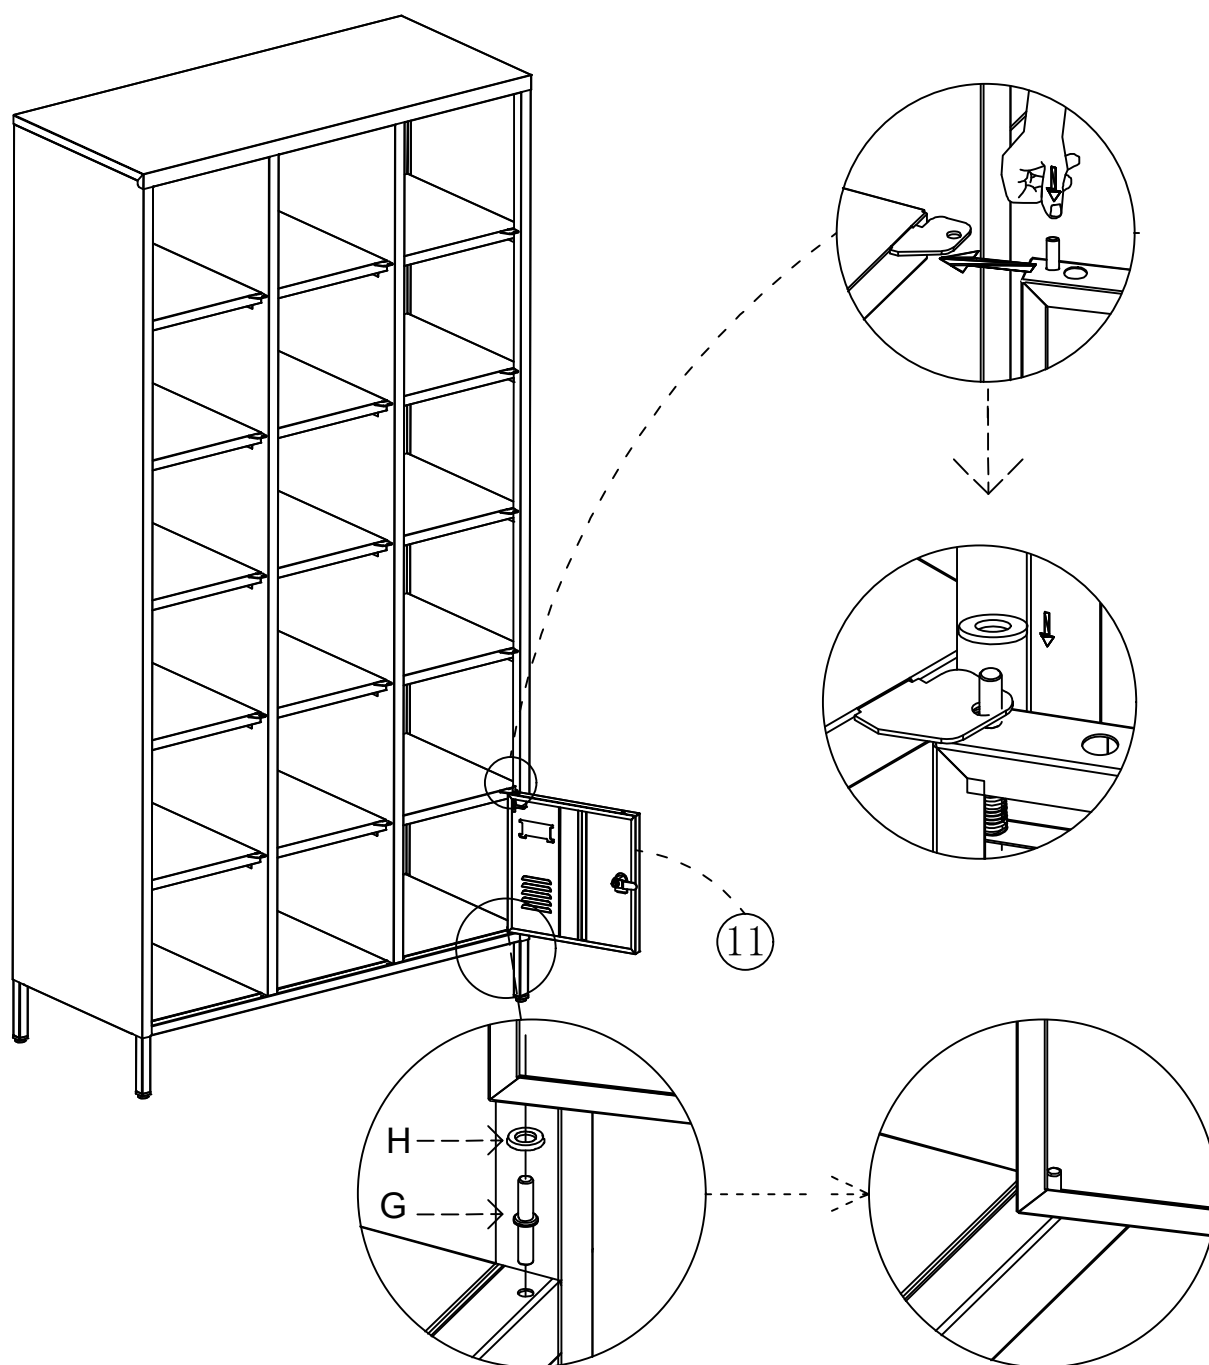

Step 18: Install all the doors

