


Assembly Instructions

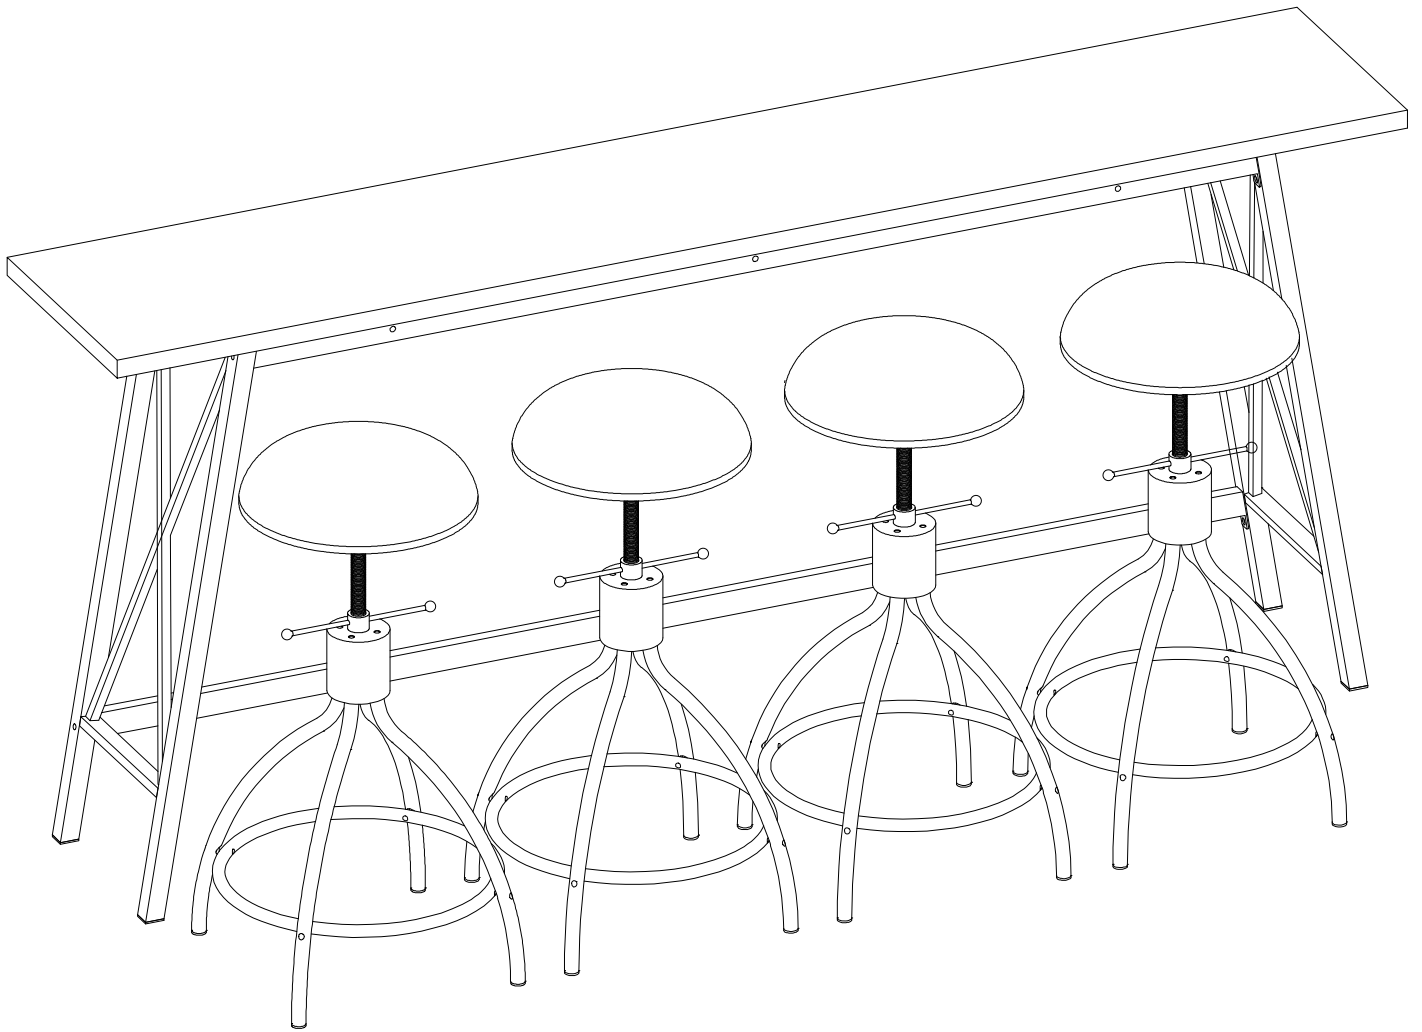


THANKS FOR YOUR PURCHASE!

WE DO OUR BEST TO INSURE THAT YOUR FURNITURE ARRIVES IN EXCELLENT CONDITION. IF ANY PARTS ARE DAMANGED OR MISSING, WE WILL BE HAPPY TO PROVIDE ASSISTANCE AND WOULD APPRECIATE IT IF YOU COULD INCLUDE YOUR ORDER ID SO THAT WE CAN SERVE YOU BETTER. IMPORTANT:PLEASE READ ALL THE INSTRUCTIONS BEFORE STARTING ASSEMBLY.

Parts List

When unpacking, please be careful not to discard any parts with the packaging. Be sure to carefully check all packaging materials to see if accessories were damaged during transportation. Please separate, identify, and count all parts and metal hardware. Compare with part list to be sure all parts are present. If hardware is missing or you have difficulty in assembling, this product please contact us at your earliest convenience.


BOX1

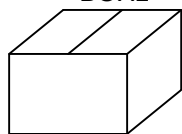

⑨		x1
⑩		x1
⑪		x2
⑫		x1
⑬		x3
⑭		x1

Main structure accessories

BOX2

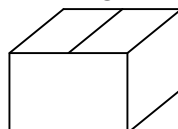

Main structure accessories



①		x4
②		x16
③		x4
④		x4
⑤		x4
⑥		x4
⑦		x4
⑧		x4

Structure accessories

A		M6x12mm Screw	x86+2
B		M6x35mm Screw	x20+2
C		M6x12mm Screw	x16+2
D		M6x5mm Screw	x16+2
E		M4 Allen Key	x2
F		M6x50mm Screw	x18+2
G		M6x40mm Screw	x6+1
H		Ø 32x22mm Screw	x4
I		M10 Allen Key	x1

Over View

Please ensure you have all the above components ready before assembly. This Dining Table with Stools has several parts and may require 2 people to assemble. It will take approximately 2 hours to assemble. The following image will help you fully understand all components. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

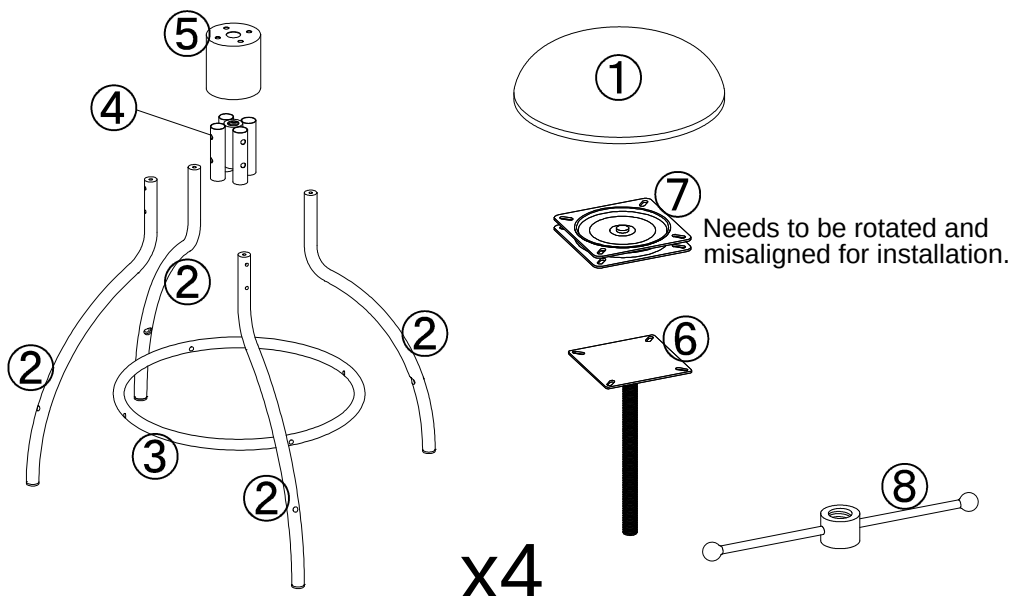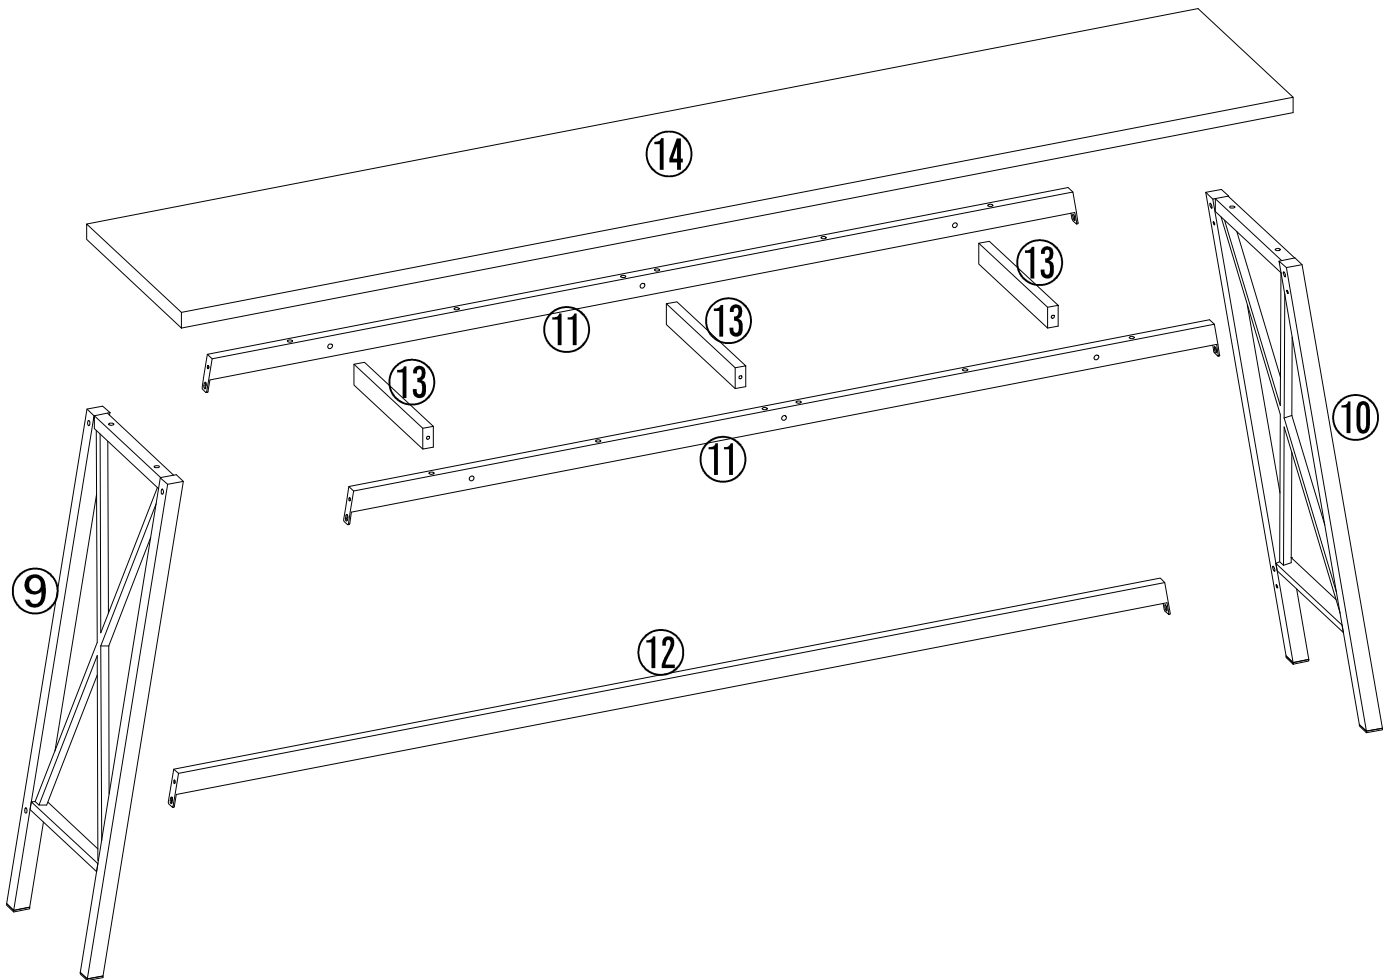

Installation Steps

1

x4

A	M6x12mm Screw
	8pcs

2

x4

Do not tighten the Bolts.

80%

A	M6x12mm Screw
	8pcs

3

x4

Do not tighten the Bolts.

80%

B	M6x35mm Screw
	4 pcs
C	M6x12mm Screw
	4 pcs

4

x4

Tighten all the bolts.


100%

A	M6x12mm Screw
	4 pcs


Installation Steps

5

First, rotate accessory ⑧ clockwise to the middle position of accessory ⑥, then rotate accessory ⑥ clockwise onto accessory ⑤.

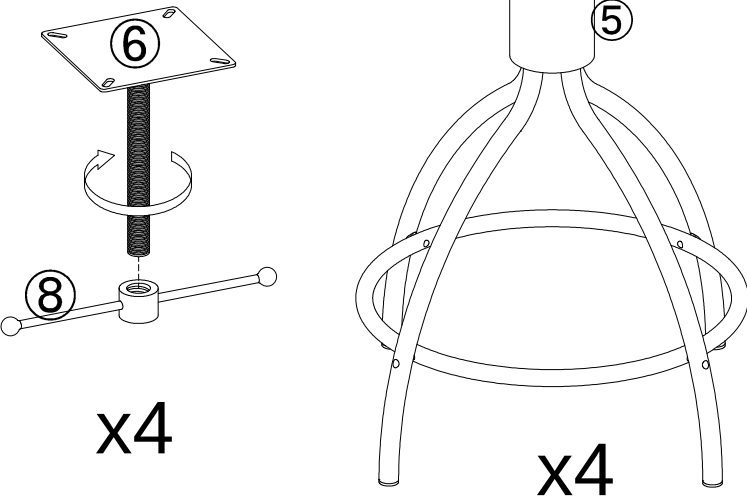


6

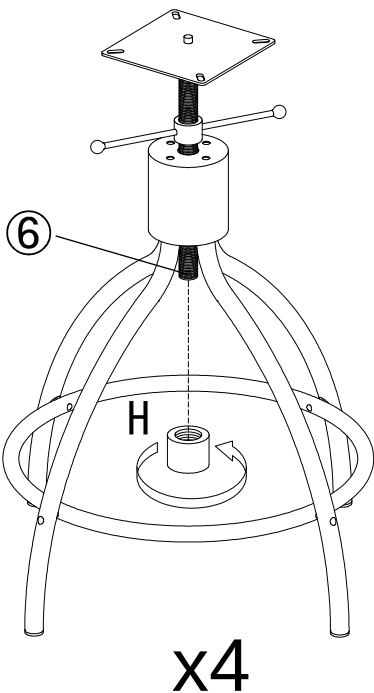

H	Screw
	1 pc



Tighten all the bolts.

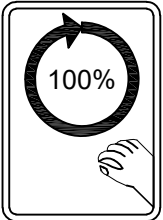

7

Twist open the concave side of accessory ⑦ upwards to misalign the holes, align the 4 holes below with the 4 holes of accessory ⑥, and rotate A and D clockwise to secure.


Tighten all the bolts.

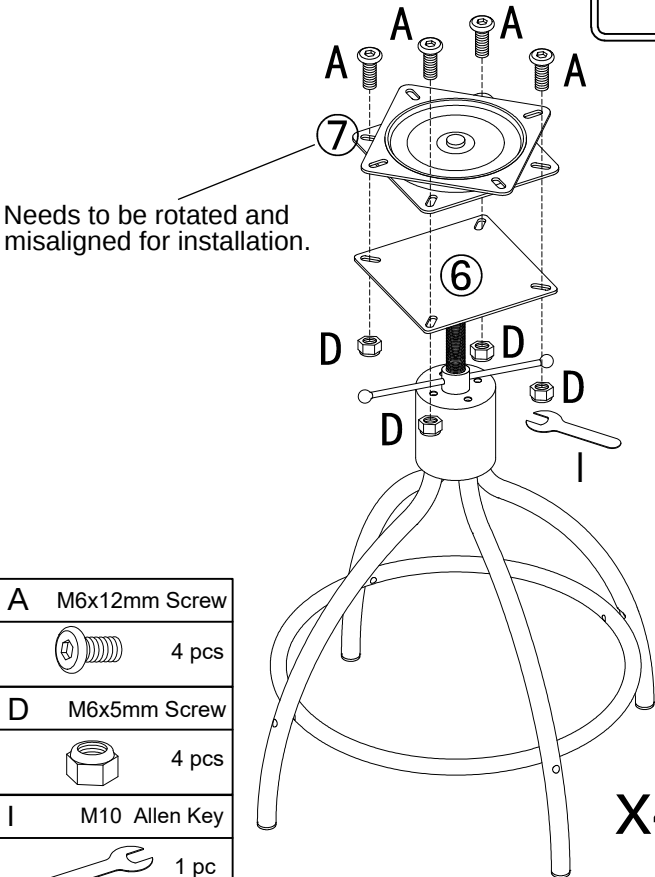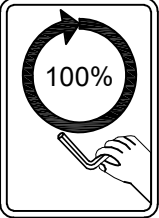


Needs to be rotated and misaligned for installation.

A	M6x12mm Screw
	4 pcs
D	M6x5mm Screw
	4 pcs
I	M10 Allen Key
	1 pc

8

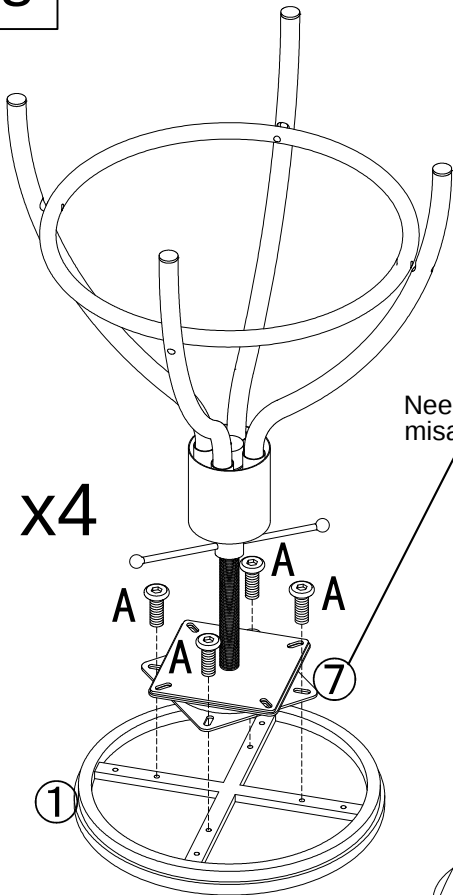

Tighten all the bolts.

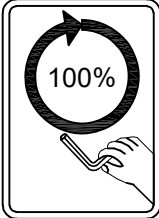


Needs to be rotated and misaligned for installation.

A	M6x12mm Screw
	4 pcs


x4

Installation Steps

9

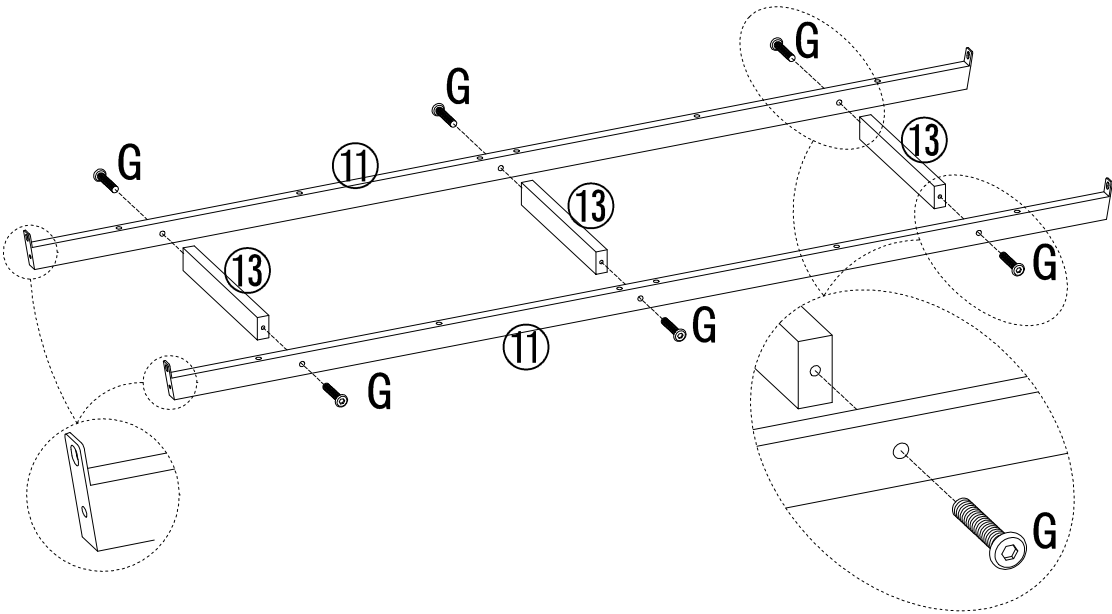


Do not tighten the Bolts.

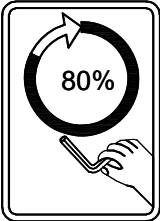


G	M6x40mm Screw
	6 pcs

10


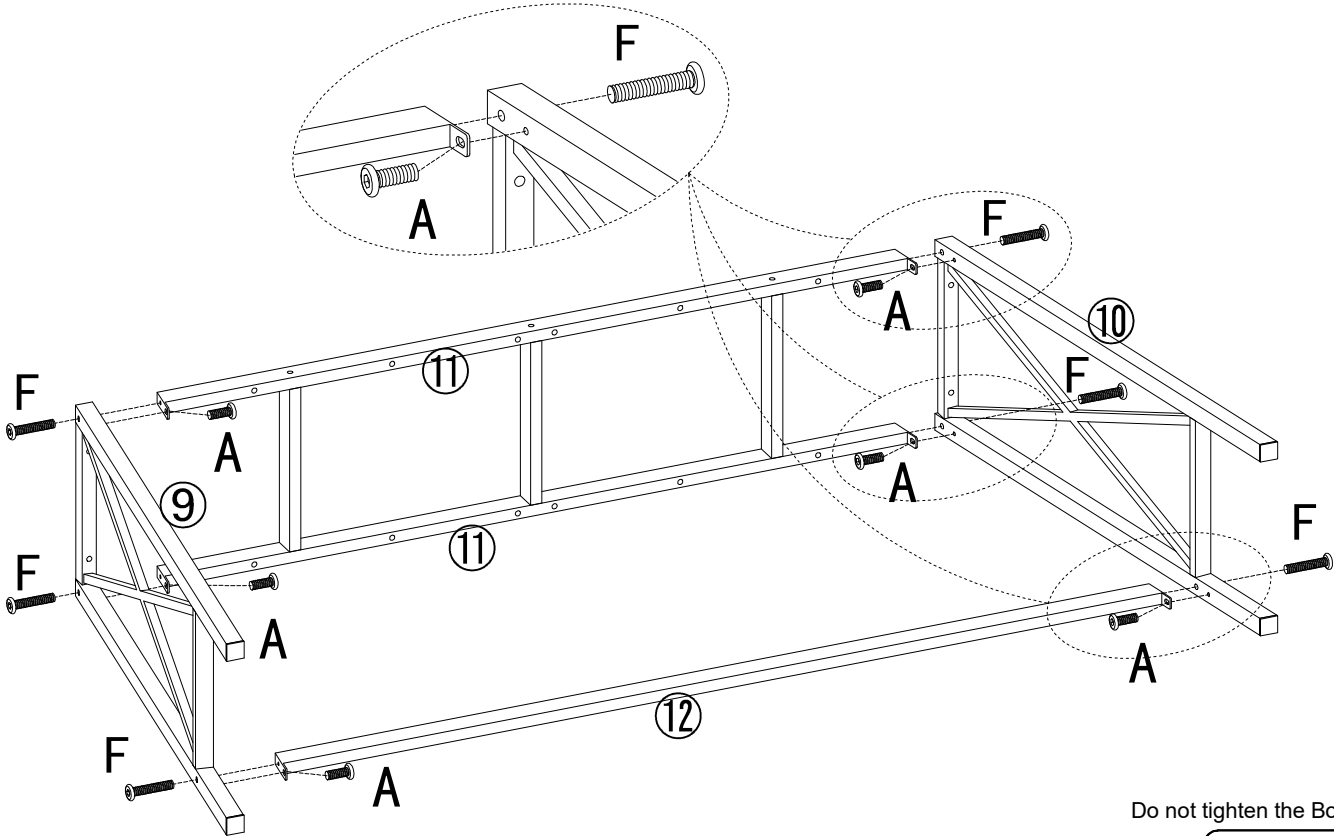


Do not tighten the Bolts.

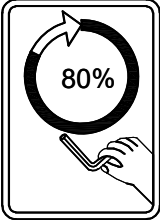



F	M6x50mm Screw
	6 pcs
A	M6x12mm Screw
	6 pcs

11

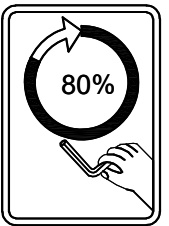 12 pcs

4 pcs

12

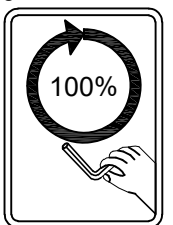

Installation Steps

13

