

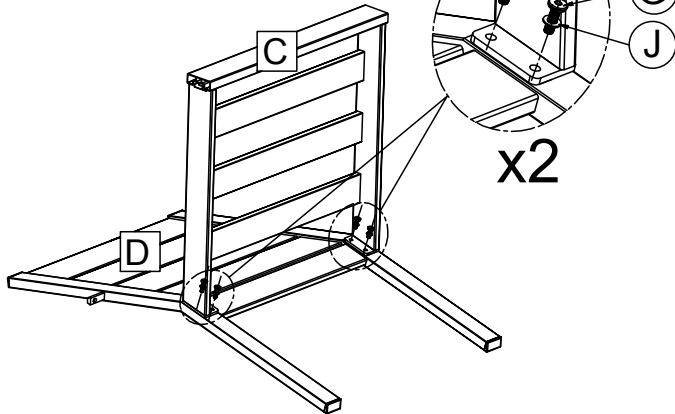
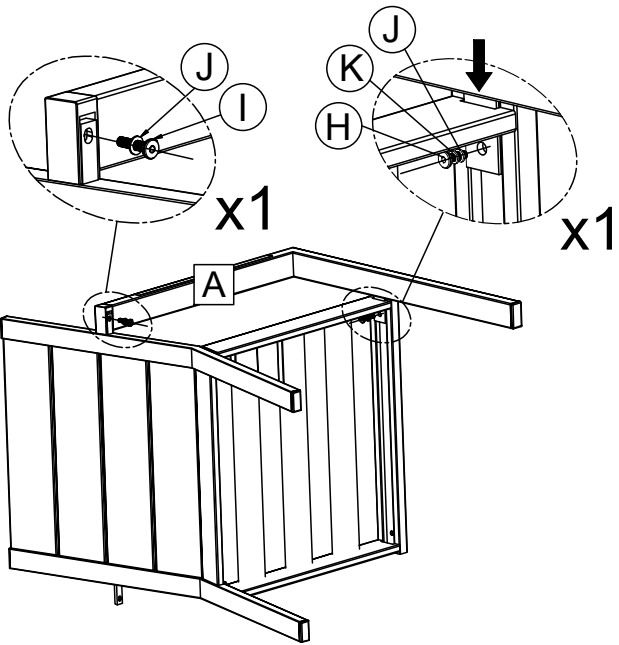


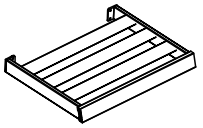



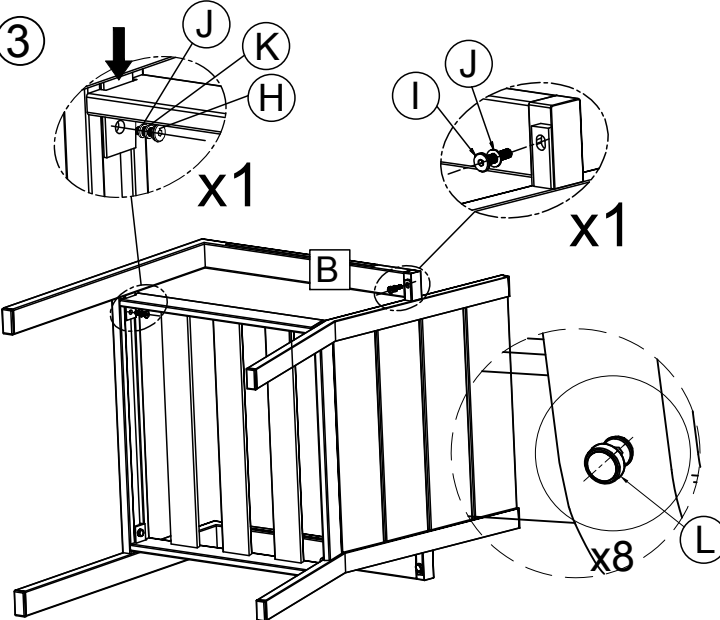
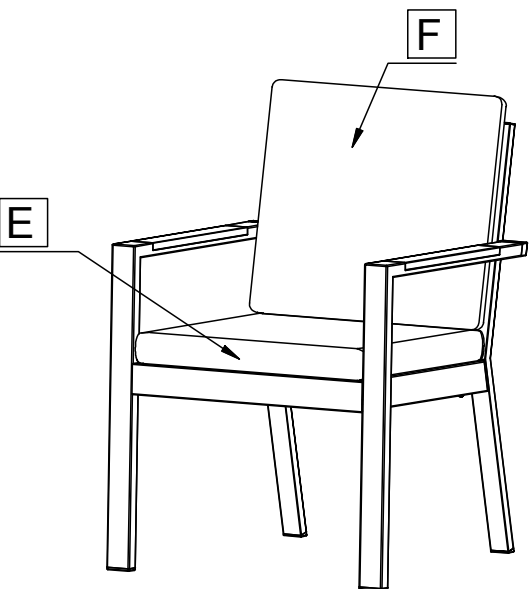







<p><b>A</b></p>  <p>1PC</p>	<p><b>G</b></p>  <p>M6*15 4PCS</p>	<p><b>1</b></p>  <p>x2</p> <p>Do not tighten the screws completely in the step.</p>	<p><b>2</b></p>  <p>x1</p> <p>Do not tighten the screws completely in the step.</p>
<p><b>B</b></p>  <p>1PC</p>	<p><b>H</b></p>  <p>M6*22 2PCS</p>		
<p><b>C</b></p>  <p>1PC</p>	<p><b>I</b></p>  <p>M6*25 2PCS</p>		
<p><b>D</b></p>  <p>1PC</p>	<p><b>J</b></p>  <p>M6 8PCS</p>	<p><b>3</b></p>  <p>x1</p> <p>x1</p> <p>x8</p> <p>Tighten all 8 screws into place with Allen Key (K) and Install the Caps (J) for protecting and concealing the screws.</p>	<p><b>4</b></p>  <p>E</p> <p>F</p>
<p><b>E</b></p>  <p>1PC</p>	<p><b>K</b></p>  <p>M6 2PCS</p>		
<p><b>F</b></p>  <p>1PC</p>	<p><b>L</b></p>  <p>M6 8PCS</p>		
	<p><b>M</b></p>  <p>1PC</p>		

**⚠** Tip: We recommend flattening the boxes to use as a protective work surface, or setting up your new furniture on a soft floor like a carpet.