

Plastic rattan shoe cabinet

Parts list



Start assembly



1.Remove the door suction plate and install it with a small screw



2.Remove the left side bracket and door suction plate and install with large screws



3.Take out the ordinary laminates and install them with large screws



4.Remove the backplane and insert it along the grooves




5.Remove the side bracket and install it with large screws to the right



6.Remove the metal cartoon and insert it into the hole



7.Remove the door plate and install the door gasket with medium screws

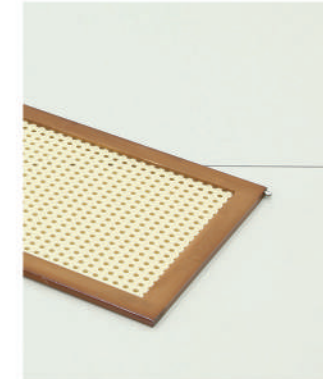

8.Remove the door panel and insert metal clips on both sides of the door



9.Take out the door panel, clamp the metal strip on the door panel into the groove of the side bracket, and finally screw on the right screw of the side bracket