

S02L

Installation Instructions

Sliding Shower and Bath Doors



Scan for **YouTube HD** Product Install Video



Scan QR Code for Installation Video



This door requires professional installation. Two installers are recommended.




All the plastic bags are not toys, keep it out of reach of infants and children to avoid choking hazards

V01-2026-01


Tools




Level




Tape Measure




Pencil



Phillips Screwdriver



Silicone

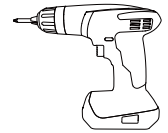

Power Drill



Drill Bit
Ø1/8"
(3mm)



Drill Bit
Ø3/16"
(4mm)




Drill Bit
Ø1/4"
(6mm)




Drill Bit
Ø5/16"
(8mm)



Drill Bit
Ø3/8"
(10mm)

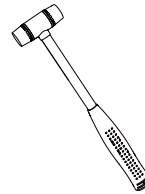

Soft Head Hammer

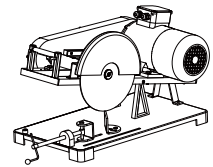


Chop saw**




Safety Glasses



Work Gloves



Hacksaw**

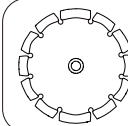


**Use the proper saw blade to cut stainless steel.



Painter's Tape




Razor Knife



Extender Driver Bit



#3 Phillips Driver Bit

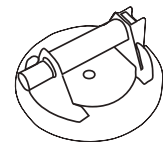

Professional-grade Glass suction cup




Measure the finished opening before proceeding with the installation to be sure that the correct model size has been ordered.

Be sure to cover the shower drain to prevent losing small parts.



Threshold must be level; Walls must be plumb.

Detailed Diagram

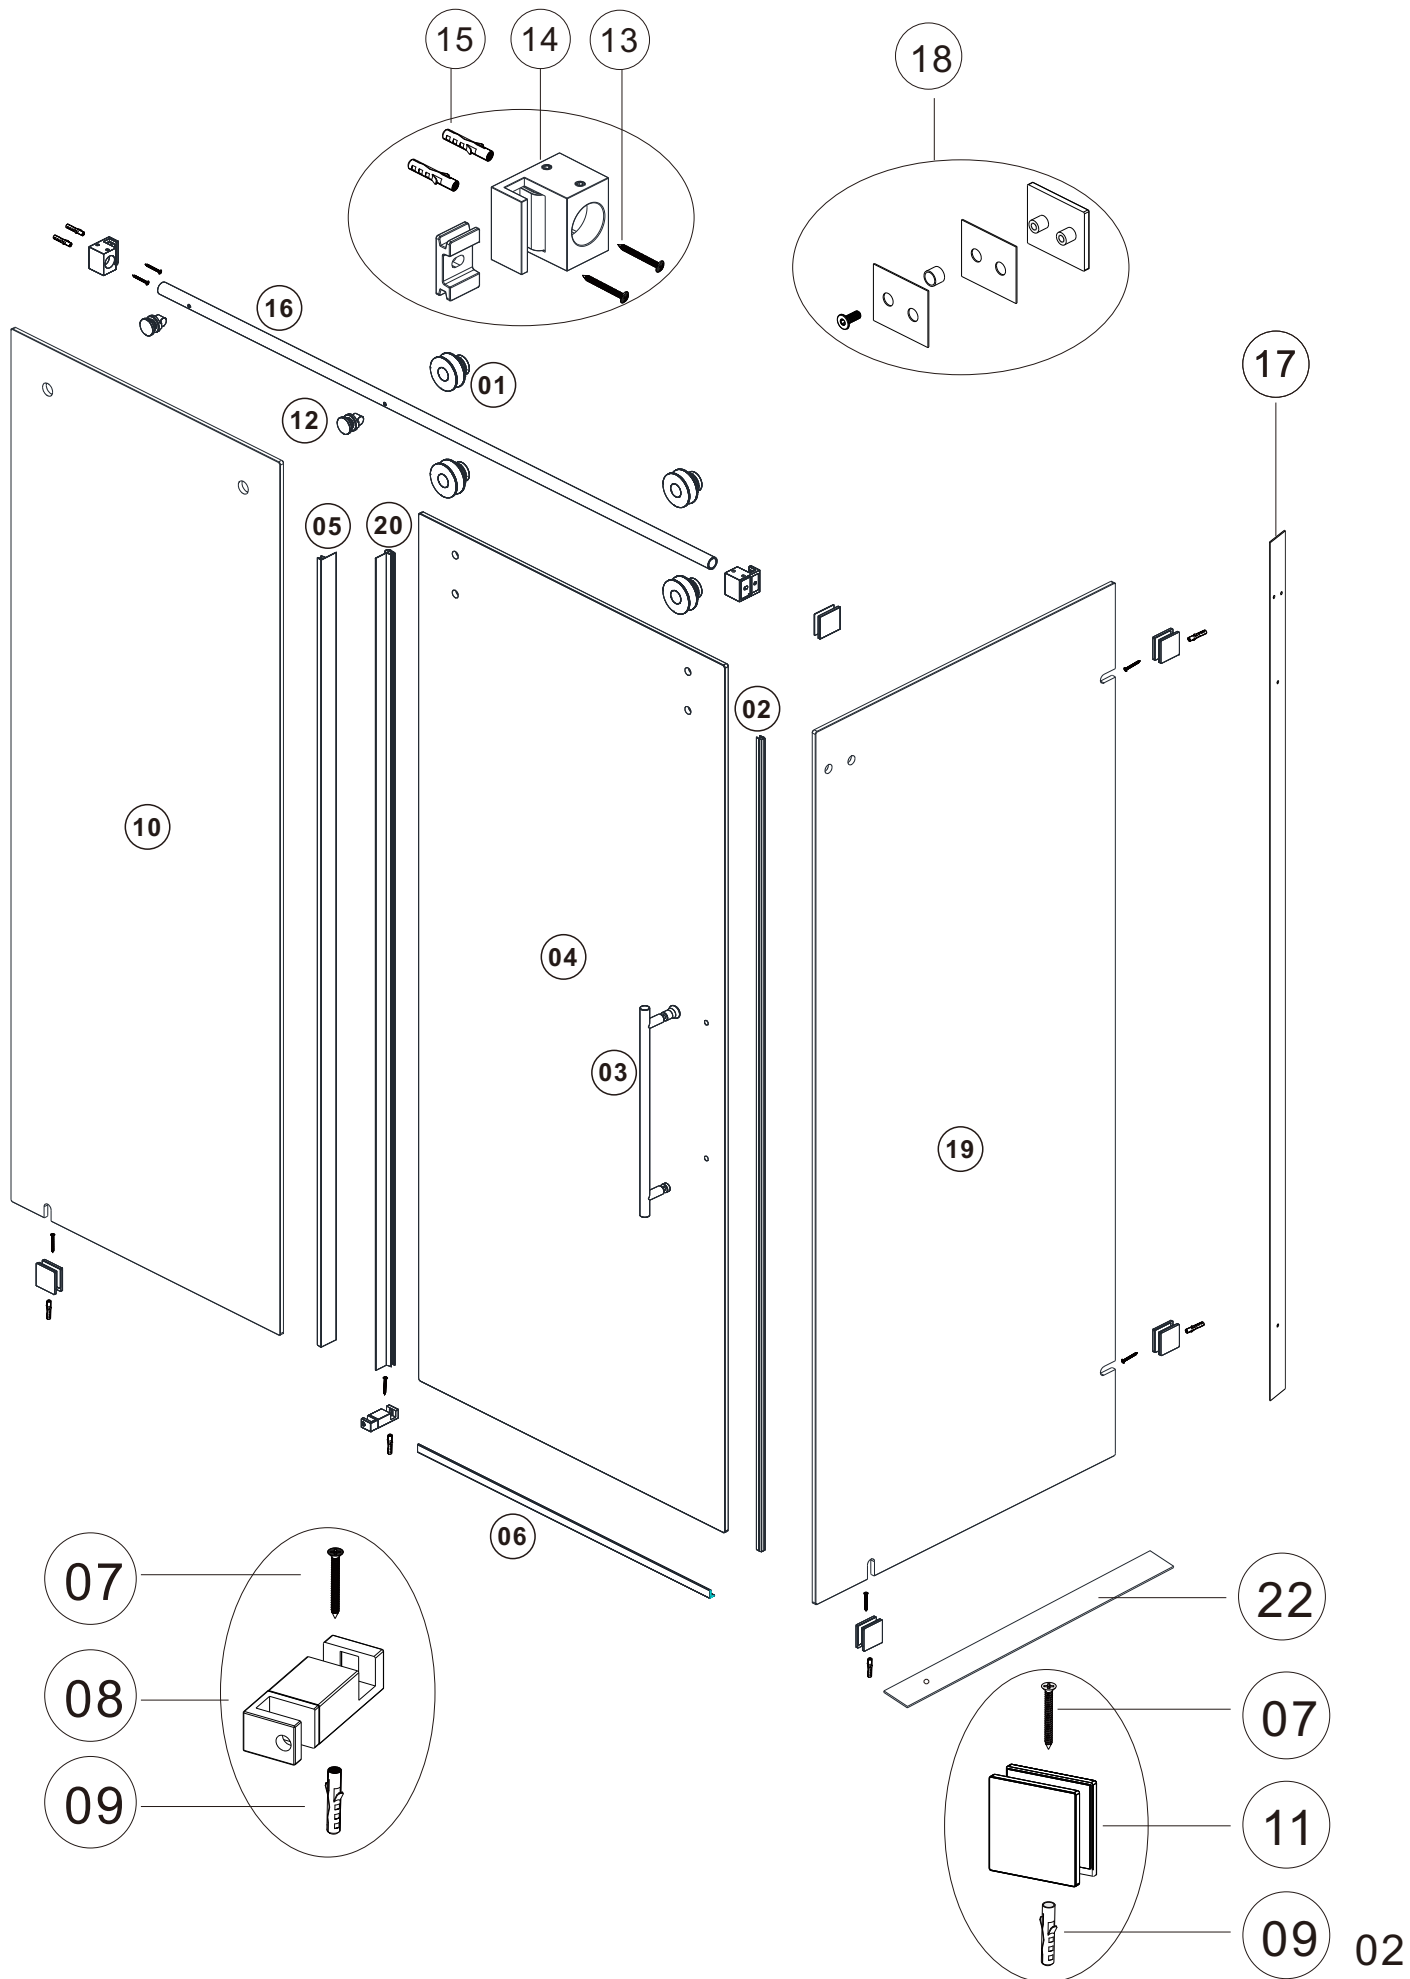


Shower Enclosure Components

01



Roller Assembly (x4)

02



Bulb Vinyl Strip (x1)

03




Handle (x1)

04




Sliding Glass (x1)

05



Vertical Vinyl Strip (x1)

06




Bottom Threshold (x1)

07



St4x30 Countersunk Screw (x5)

08

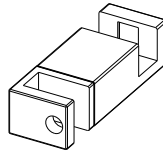


Guide Block (x1)

09




Wall Anchor (1/4"/6mm) (x5)

10




Fixed Glass (x1)

11



Glass Clamp (x4)

12




Glass-to-rail Bracket (x2)

13



St6x60 Truss Head Screw (x2)

14

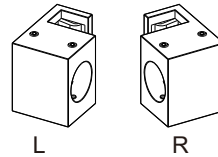


Guide Rail Bracket (x2)

15



Wall Anchor (5/16"/8mm) (x2)

16




Top guide rail (x1)

17



Quick Positioning Plate (long) (x1)

18

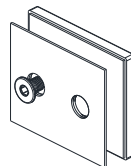

Guide rail bracket with connect cap (x1)

19




Side Glass (x1)

20



Bulb Vinyl Strip (x1)

21

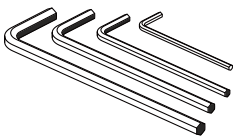


Allen Wrench (2.5/4/5) (set)

22




Quick Positioning Plate (short) (x1)

Return Panel Hanging Options

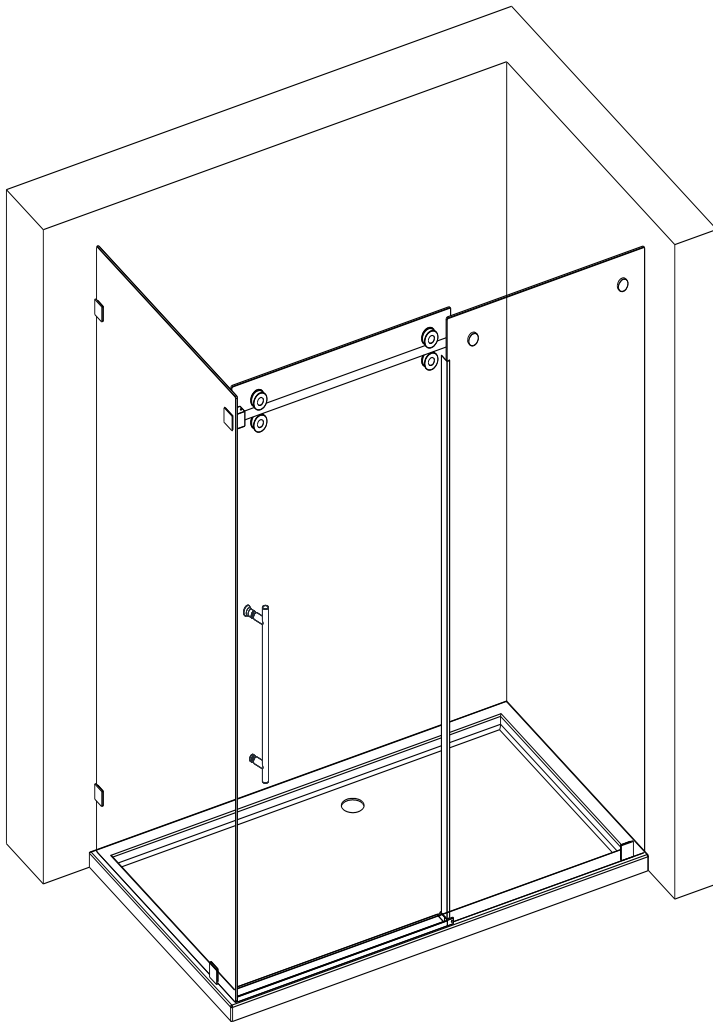

Left-hand return panel installation

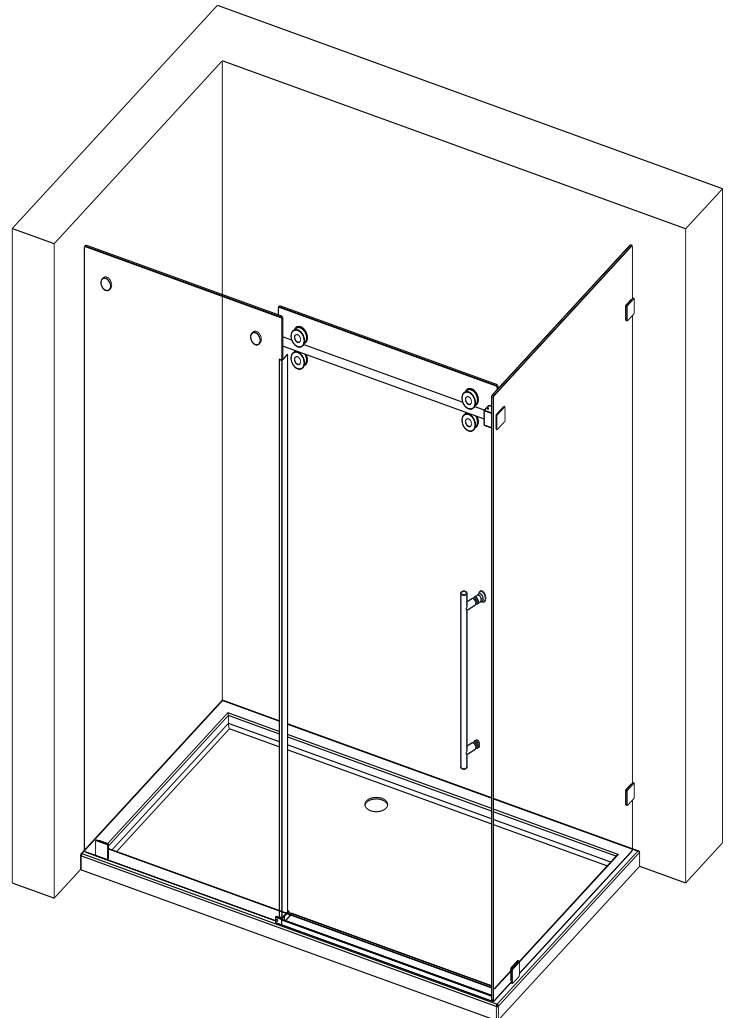


Right-hand return panel installation

NOTE



This enclosure supports both left-hand and right-hand installation; instructions are demonstrated based on left-hand configuration, with right-hand setup following identical procedures.

Check shower base/floor level and wall plumb

⚠ Ensure the wall is plumb



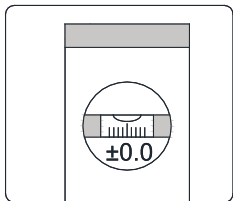


⚠ Ensure the threshold or floor is level

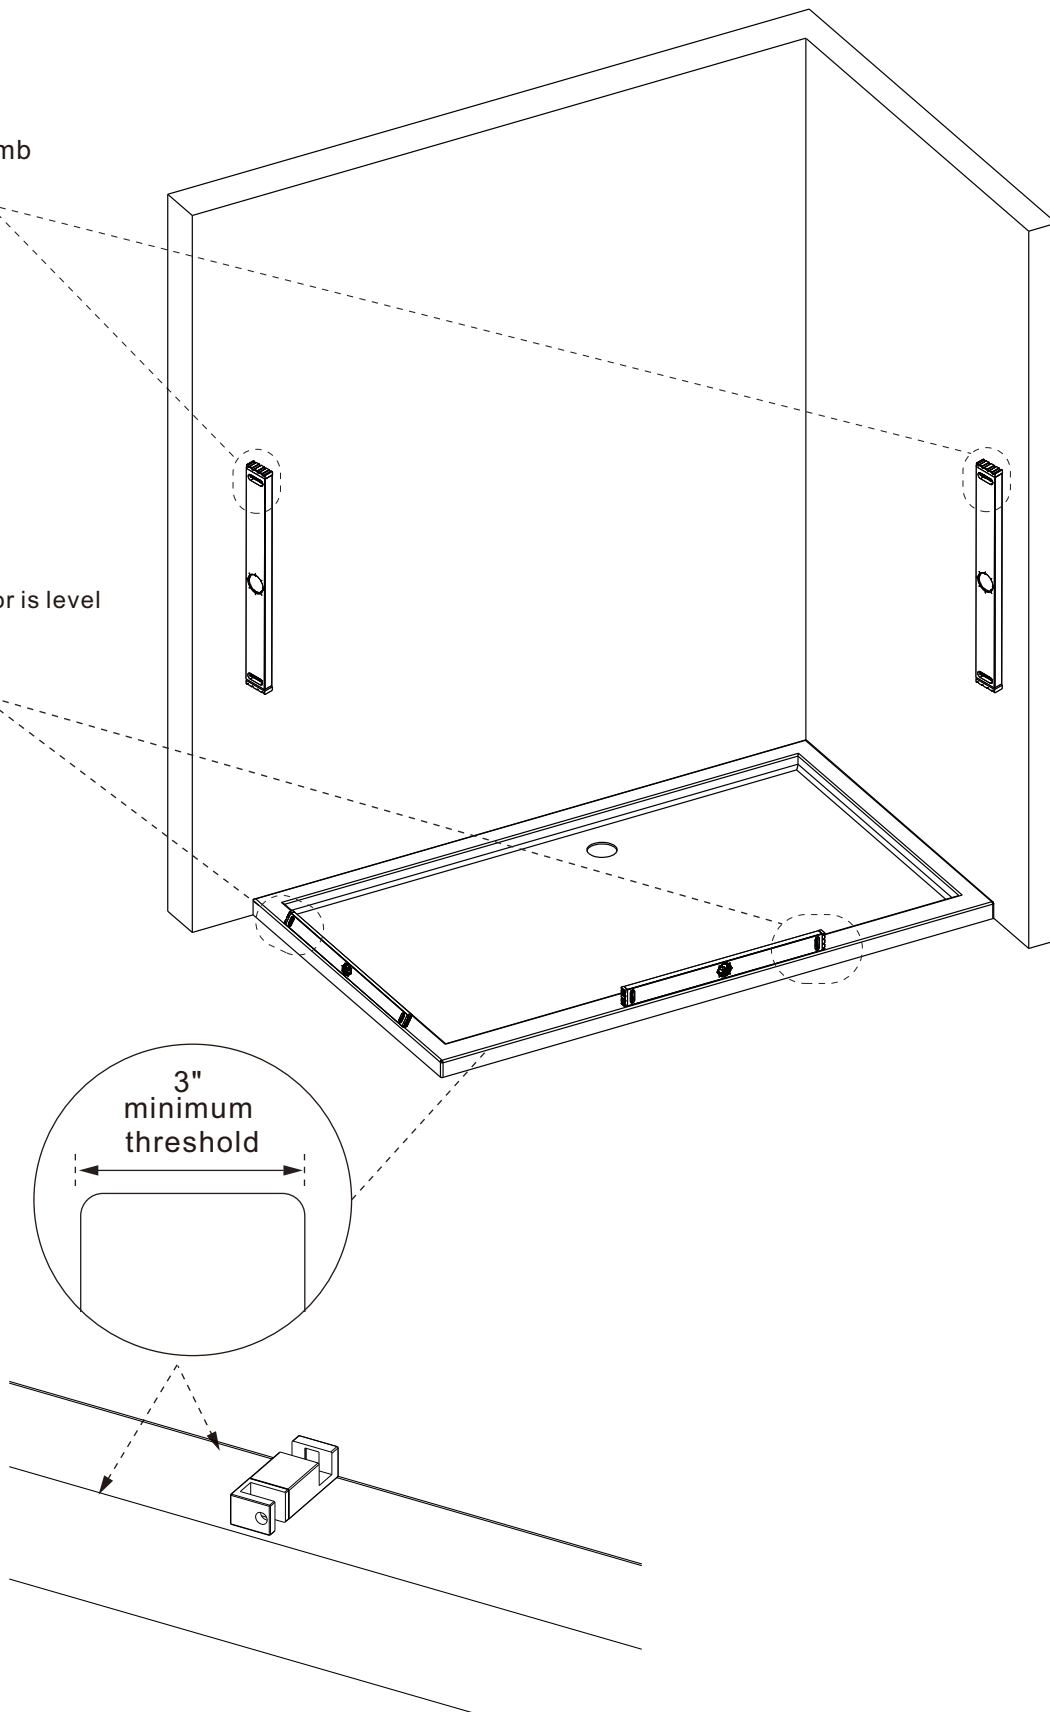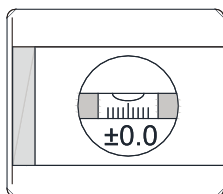**NOTE**

If installed on a threshold, the shower door requires a minimum of 3 inches (3") of flat threshold space.

Wall Drilling for Side Panel Mounting

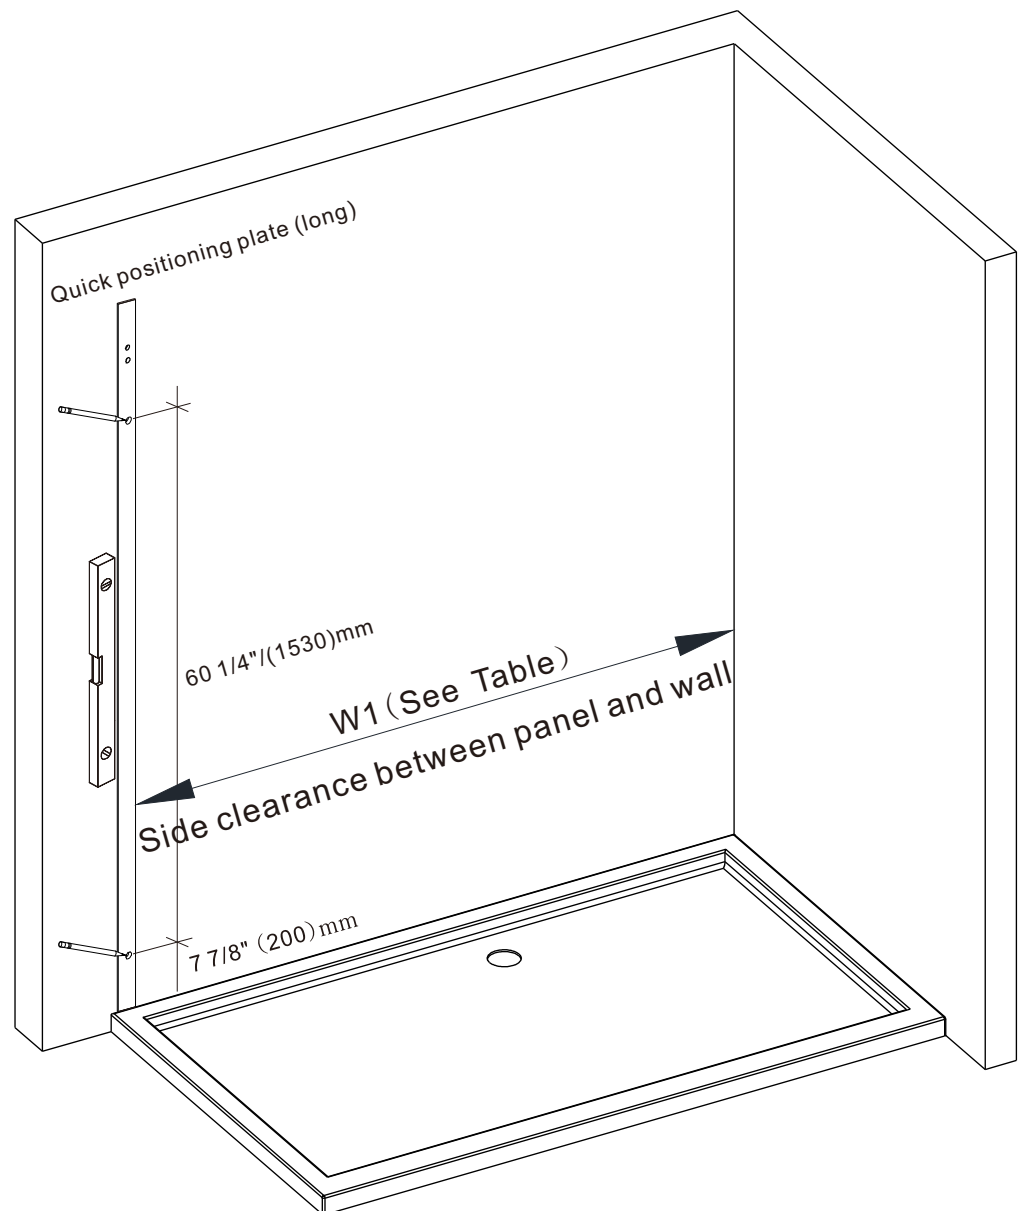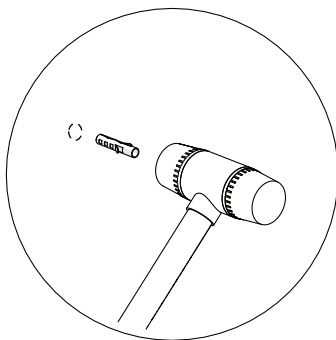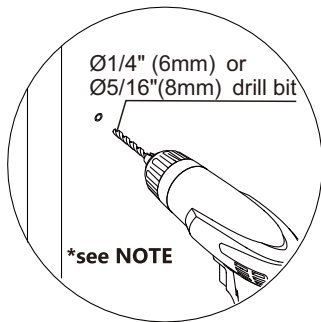

For 3" threshold width: 3/8" clearance from panel to threshold edge to prevent guide block overhang.



Drill & Screw Recommendations by Installation Case

For Guide Rail Brackets:


- **If a stud is present behind the wall:**
drill a Ø1/4" (6mm) hole up to the stud. (recommended)

OR

- **If no stud is present behind the wall:**
drill a Ø5/16" (8mm) hole and install the **Wall Anchor**.

Parts Need


15



Wall Anchor
(5/16"/8mm)

x2


Tools Need

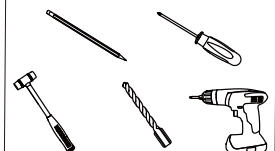

Wall Drilling for Side Panel Mounting

W1 & The distance from the side glass to the wall (Table 1)		
NO	W1	The distance from the side glass to the wall
1	43 1/4" (1098mm)	44" (1118mm)
2	44 1/4" (1124mm)	45" (1143mm)
3	45 1/4" (1149mm)	46" (1168mm)
4	46 1/4" (1175mm)	47" (1194mm)
5	47 1/4" (1200mm)	48" (1219mm)
6	48 1/4" (1226mm)	49" (1245mm)
7	49 1/4" (1251mm)	50" (1270mm)
8	50 1/4" (1276mm)	51" (1295mm)
9	51 1/4" (1302mm)	52" (1321mm)
10	52 1/4" (1327mm)	53" (1346mm)
11	53 1/4" (1353mm)	54" (1372mm)
12	54 1/4" (1378mm)	55" (1397mm)
13	55 1/4" (1403mm)	56" (1422mm)
14	56 1/4" (1429mm)	57" (1448mm)
15	57 1/4" (1454mm)	58" (1473mm)
16	58 1/4" (1480mm)	59" (1499mm)
17	59 1/4" (1505mm)	60" (1524mm)
18	60 1/4" (1530mm)	61" (1549mm)
19	61 1/4" (1556mm)	62" (1575mm)
20	62 1/4" (1581mm)	63" (1600mm)
21	63 1/4" (1607mm)	64" (1626mm)
22	64 1/4" (1632mm)	65" (1651mm)
23	65 1/4" (1657mm)	66" (1676mm)
24	66 1/4" (1683mm)	67" (1702mm)
25	67 1/4" (1708mm)	68" (1727mm)
26	68 1/4" (1734mm)	69" (1753mm)
27	69 1/4" (1759mm)	70" (1778mm)
28	70 1/4" (1784mm)	71" (1803mm)
29	71 1/4" (1810mm)	72" (1829mm)

Floor Drilling for Side Panel Mounting

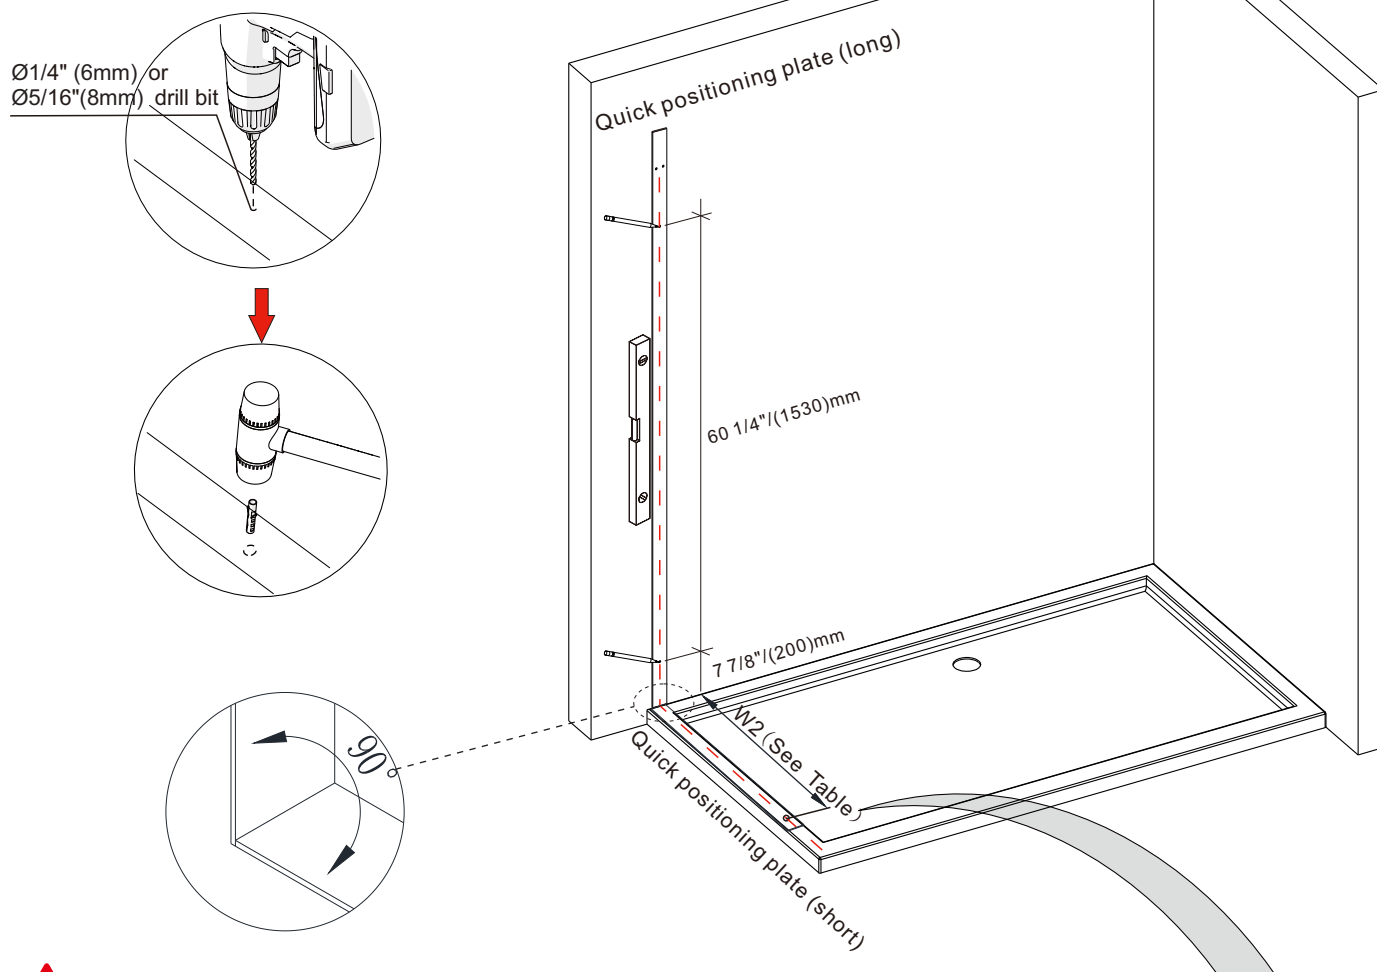

Align the two quick positioning plates

The distance from the floor drill hole to the wall

Table of Side Panel Glass





No.	Type	Side panel width	W2
01	shower door	32"/813mm	663mm/(26 1/16)"
02		33"/838mm	688mm/(27 1/16)"
03		34"/863mm	713mm/(28 1/16)"
04		35"/888mm	738mm/(29 1/16)"
05		36"/913mm	763mm/(30 1/16)"




The mounting hole positions of the wall clamps for the side fixed panel vary depending on the height (or length) of the glass. Different glass sizes correspond to different pre-drilled hole locations. Always check the specific glass size against the drilling template provided.



Do NOT drill at a fixed dimension without checking the glass size first.

Glass Clamp Mounting for Side Panel

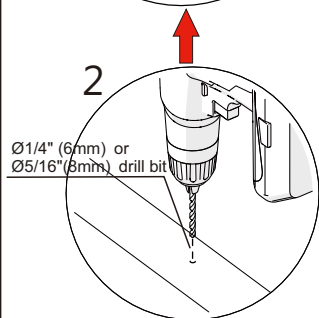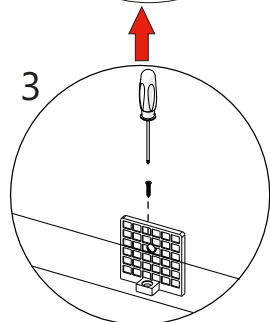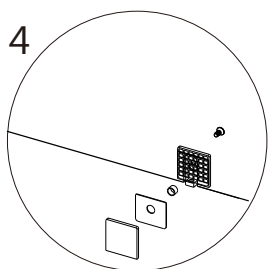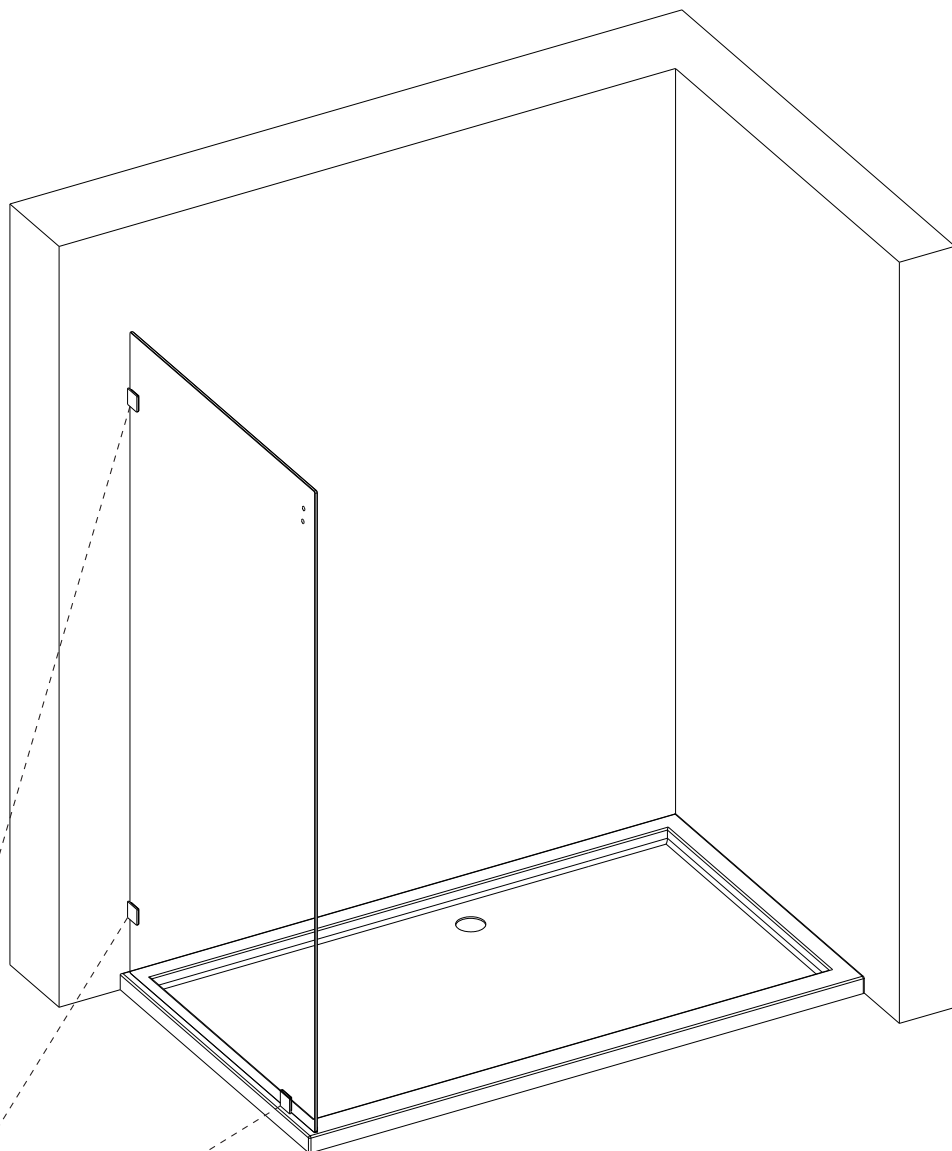


Ø1/4" (6mm) or
Ø5/16" (8mm) drill bit

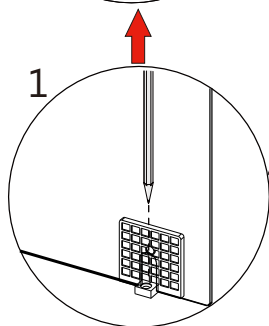

Parts Need	Tools Need
11  Glass Clamp x3	 

Measure the opening width and cut the top guide rail

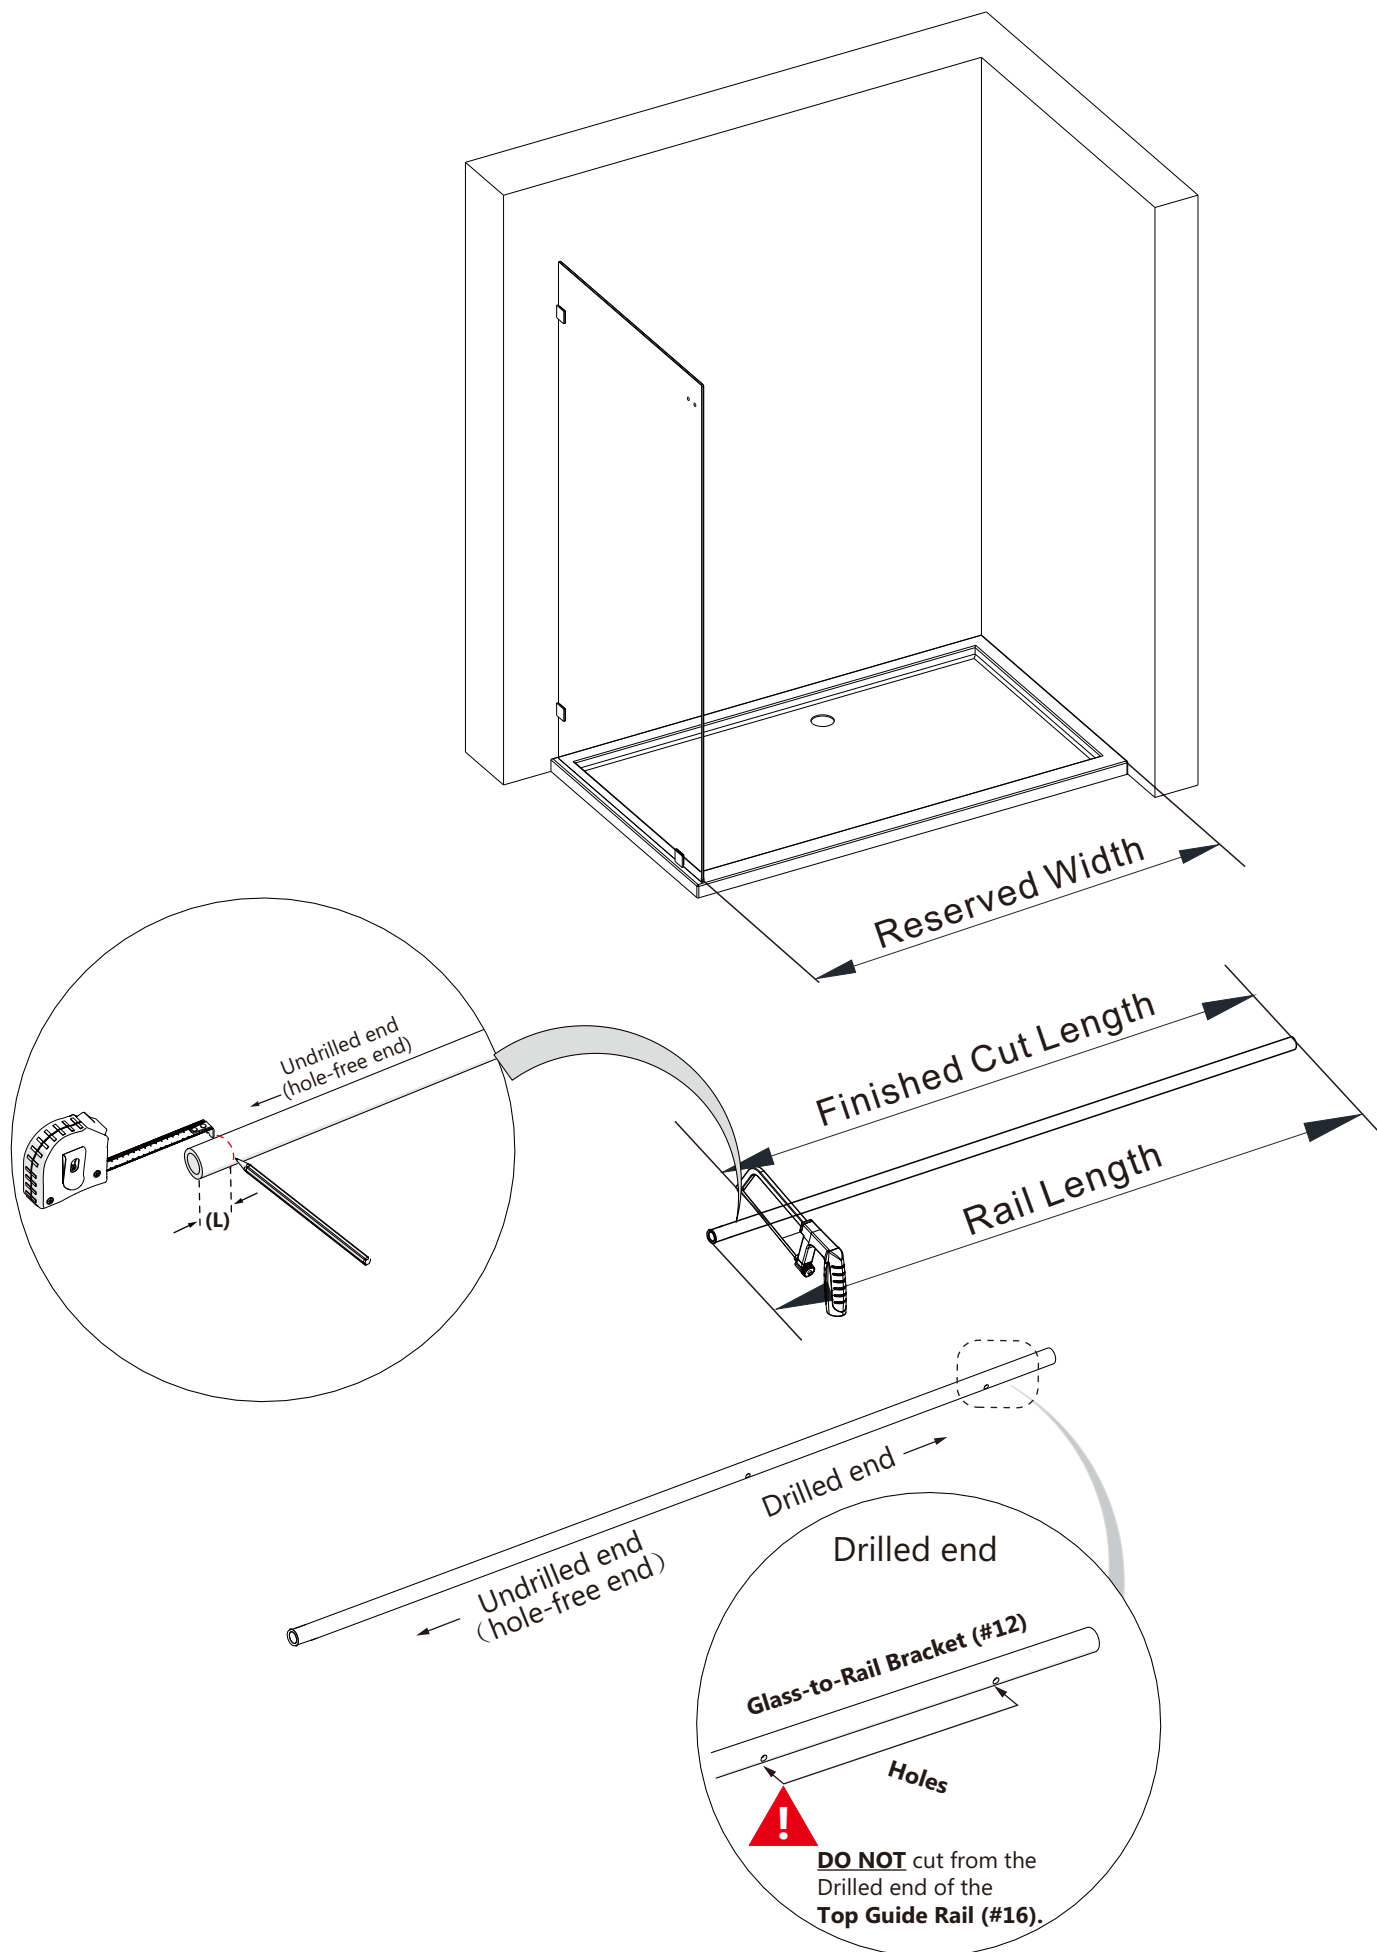


Measure install width cut rail to fit

Reserved Width, Rail Length & Finished Cut Length (Table 2)

NO	Reserved Width	Rail Length	Finished Cut Length
1	44" (1118mm) ~ 45" (1143mm) (Incl. 44 ")	46 7/8 " (1190mm)	42 7/8 " (1089mm) ~ 43 7/8 " (1114mm)
2	45" (1143mm) ~ 46" (1168mm) (Incl. 45 ")	46 7/8 " (1190mm)	43 7/8 " (1114mm) ~ 44 7/8 " (1140mm)
3	46" (1168mm) ~ 47" (1193mm) (Incl. 46 ")	46 7/8 " (1190mm)	44 7/8 " (1140mm) ~ 45 7/8 " (1166mm)
4	47" (1193mm) ~ 48" (1219mm) (Incl. 47 ")	46 7/8 " (1190mm)	45 7/8 " (1166mm) ~ 46 7/8 " (1190mm)
5	48" (1219mm) ~ 49" (1244mm) (Incl. 48 ")	50 7/8 " (1292mm)	46 7/8 " (1191mm) ~ 47 7/8 " (1216mm)
6	49" (1244mm) ~ 50" (1270mm) (Incl. 49 ")	50 7/8 " (1292mm)	47 7/8 " (1216mm) ~ 48 7/8 " (1241mm)
7	50" (1270mm) ~ 51" (1295mm) (Incl. 50 ")	50 7/8 " (1292mm)	48 7/8 " (1241mm) ~ 49 7/8 " (1267mm)
8	51" (1295mm) ~ 52" (1320mm) (Incl. 51 ")	50 7/8 " (1292mm)	49 7/8 " (1267mm) ~ 50 7/8 " (1292mm)
9	52" (1320mm) ~ 53" (1346mm) (Incl. 52 ")	54 7/8 " (1393mm)	50 7/8 " (1292mm) ~ 51 7/8 " (1318mm)
10	53" (1346mm) ~ 54" (1371mm) (Incl. 53 ")	54 7/8 " (1393mm)	51 7/8 " (1318mm) ~ 52 7/8 " (1343mm)
11	54" (1371mm) ~ 55" (1397mm) (Incl. 54 ")	54 7/8 " (1393mm)	52 7/8 " (1343mm) ~ 53 7/8 " (1368mm)
12	55" (1397mm) ~ 56" (1422mm) (Incl. 55 ")	54 7/8 " (1393mm)	53 7/8 " (1368mm) ~ 54 7/8 " (1393mm)
13	56" (1422mm) ~ 57" (1447mm) (Incl. 56 ")	58 7/8 " (1490mm)	54 7/8 " (1393mm) ~ 55 7/8 " (1419mm)
14	57" (1447mm) ~ 58" (1473mm) (Incl. 57 ")	58 7/8 " (1490mm)	55 7/8 " (1419mm) ~ 56 7/8 " (1445mm)
15	58" (1473mm) ~ 59" (1498mm) (Incl. 58 ")	58 7/8 " (1490mm)	56 7/8 " (1445mm) ~ 57 7/8 " (1470mm)
16	59" (1498mm) ~ 60" (1524mm) (Incl. 59 ")	58 7/8 " (1490mm)	57 7/8 " (1470mm) ~ 58 7/8 " (1490mm)
17	60" (1524mm) ~ 61" (1549mm) (Incl. 60 ")	62 7/8 " (1597mm)	58 7/8 " (1490mm) ~ 59 7/8 " (1521mm)
18	61" (1549mm) ~ 62" (1574mm) (Incl. 61 ")	62 7/8 " (1597mm)	59 7/8 " (1521mm) ~ 60 7/8 " (1546mm)
19	62" (1574mm) ~ 63" (1600mm) (Incl. 62 ")	62 7/8 " (1597mm)	60 7/8 " (1546mm) ~ 61 7/8 " (1572mm)
20	63" (1600mm) ~ 64" (1625mm) (Incl. 63 ")	62 7/8 " (1597mm)	61 7/8 " (1572mm) ~ 62 7/8 " (1597mm)
21	64" (1625mm) ~ 65" (1651mm) (Incl. 64 ")	66 7/8 " (1698mm)	62 7/8 " (1597mm) ~ 63 7/8 " (1622mm)
22	65" (1651mm) ~ 66" (1676mm) (Incl. 65 ")	66 7/8 " (1698mm)	63 7/8 " (1622mm) ~ 64 7/8 " (1648mm)
23	66" (1676mm) ~ 67" (1701mm) (Incl. 66 ")	66 7/8 " (1698mm)	64 7/8 " (1648mm) ~ 65 7/8 " (1673mm)
24	67" (1701mm) ~ 68" (1727mm) (Incl. 67 ")	66 7/8 " (1698mm)	65 7/8 " (1673mm) ~ 66 7/8 " (1698mm)
25	68" (1727mm) ~ 69" (1752mm) (Incl. 68 ")	70 7/8 " (1800mm)	66 7/8 " (1698mm) ~ 67 7/8 " (1724mm)
26	69" (1752mm) ~ 70" (1778mm) (Incl. 69 ")	70 7/8 " (1800mm)	67 7/8 " (1724mm) ~ 68 7/8 " (1749mm)
27	70" (1778mm) ~ 71" (1803mm) (Incl. 70 ")	70 7/8 " (1800mm)	68 7/8 " (1749mm) ~ 69 7/8 " (1775mm)
28	71" (1803mm) ~ 72" (1828mm) (Incl. 71 ")	70 7/8 " (1800mm)	69 7/8 " (1775mm) ~ 70 7/8 " (1800mm)

Measure mounting holes for the guide rail bracket

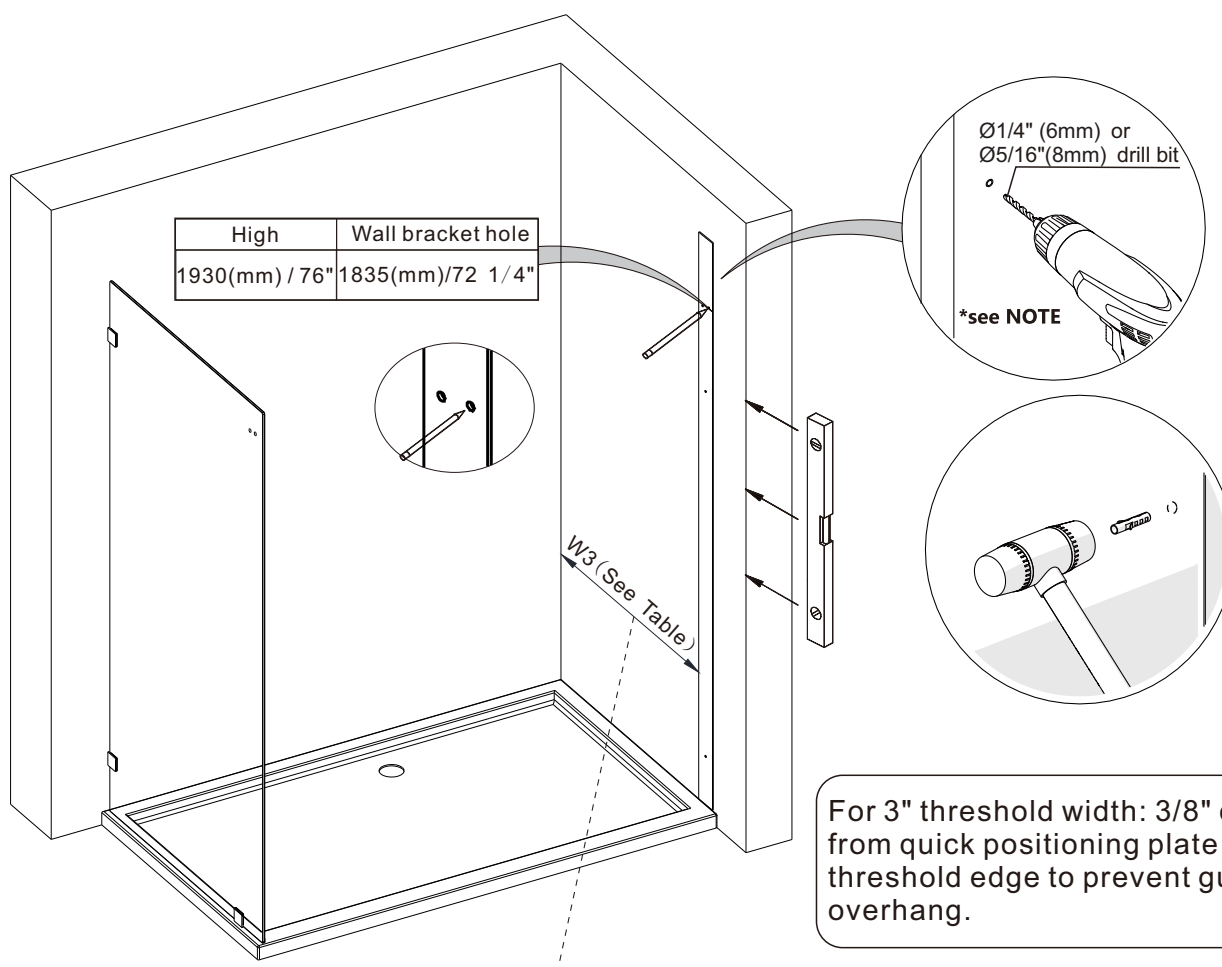

Side clearance between quick positioning panel and wall

Table of Guide Rail

No.	Type	Side panel width	W3
01	shower door	813(mm) / 32"	738mm/29"
02		838(mm) / 33"	763mm/30"
03		863(mm) / 34"	788mm/31"
04		888(mm) / 35"	813mm/32"
05		913(mm) / 36"	838mm/33"



For Guide Rail Brackets:

▪ If a stud is present behind the wall:

drill a Ø1/4" (6mm) hole up to the stud. (recommended)

OR

▪ If no stud is present behind the wall:

drill a Ø5/16" (8mm) hole and install the **Wall Anchor**.

Parts Need


15




Wall Anchor
(5/16"/8mm)

x2

Tools Need

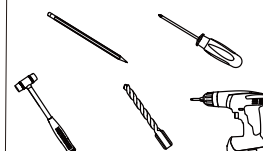

Measure mounting holes for the guide rail bracket

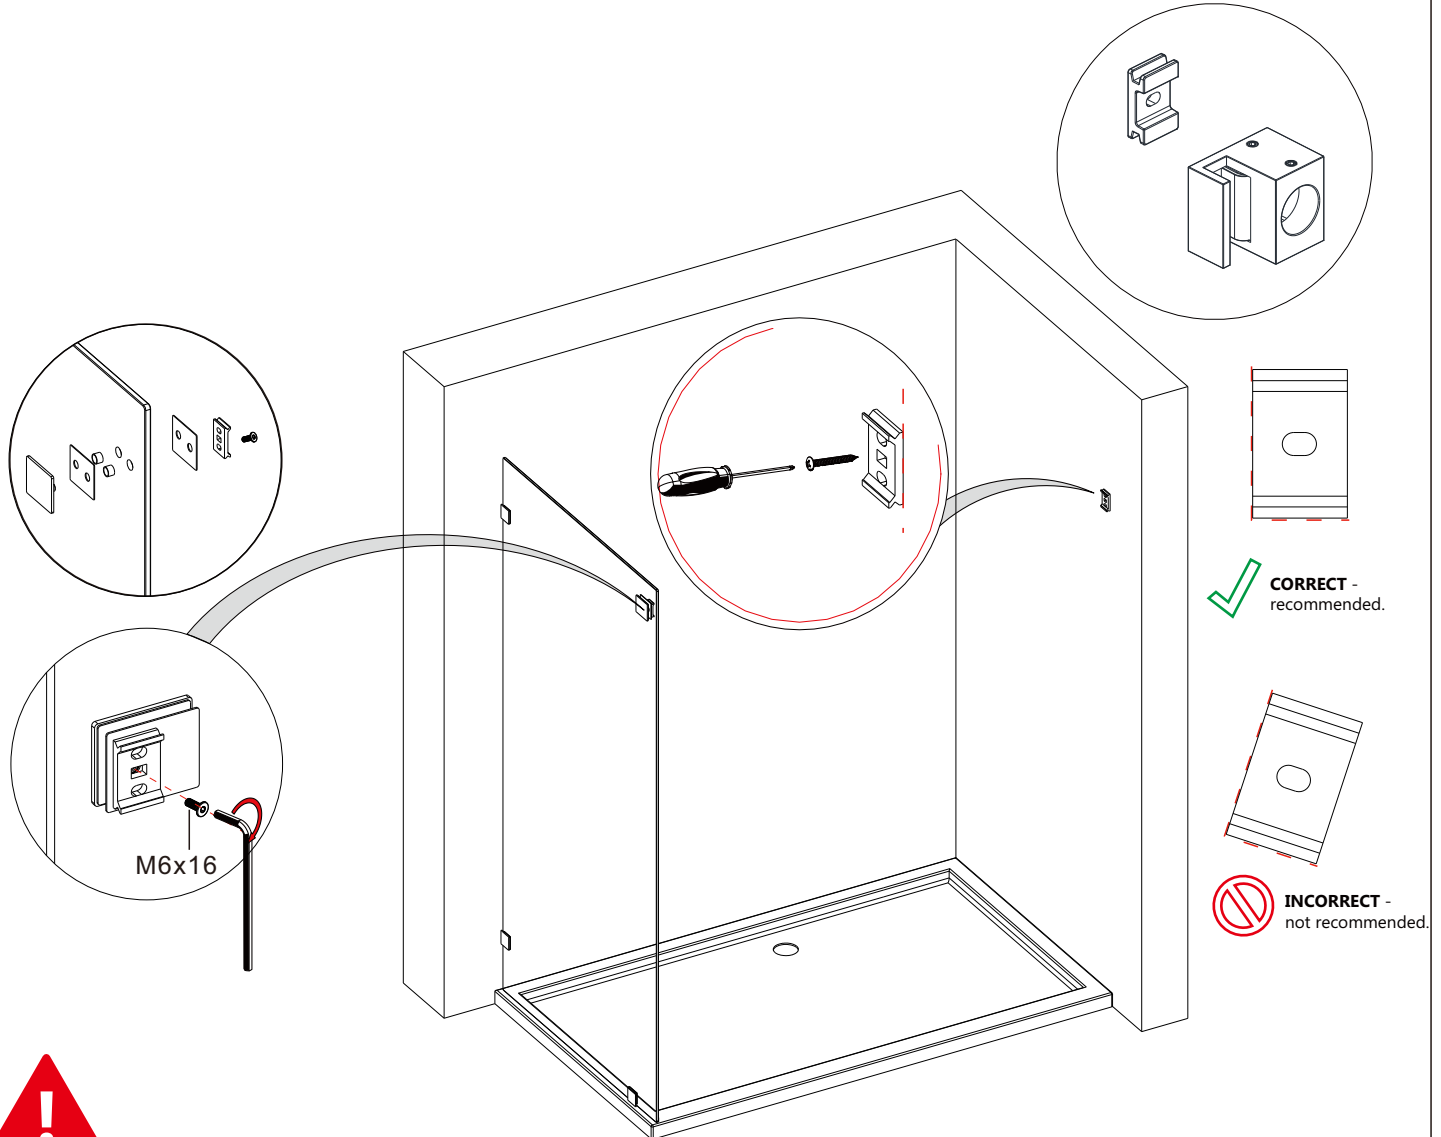


The adjustment set screws within the Guide Rail Bracket (#14) must be aligned vertically for easier access to adjust for level if necessary after the glass is installed. Align the set screws vertically and tighten.

DO NOT attach the handle to the Sliding Glass until instructed.
DO NOT attempt to lift the Sliding Glass with the handle as this may result in damage to the glass and/or serious personal injury. Use a professional grade glass suction cup and an assistant.

Parts Need

18

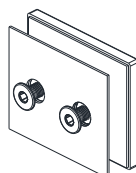


Guide rail bracket with connect cap x1

13





St6x60 Truss Head Screw x2

Tools Need

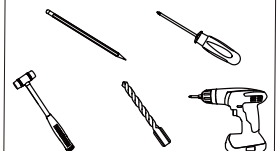

Sliding Glass Roller Installation

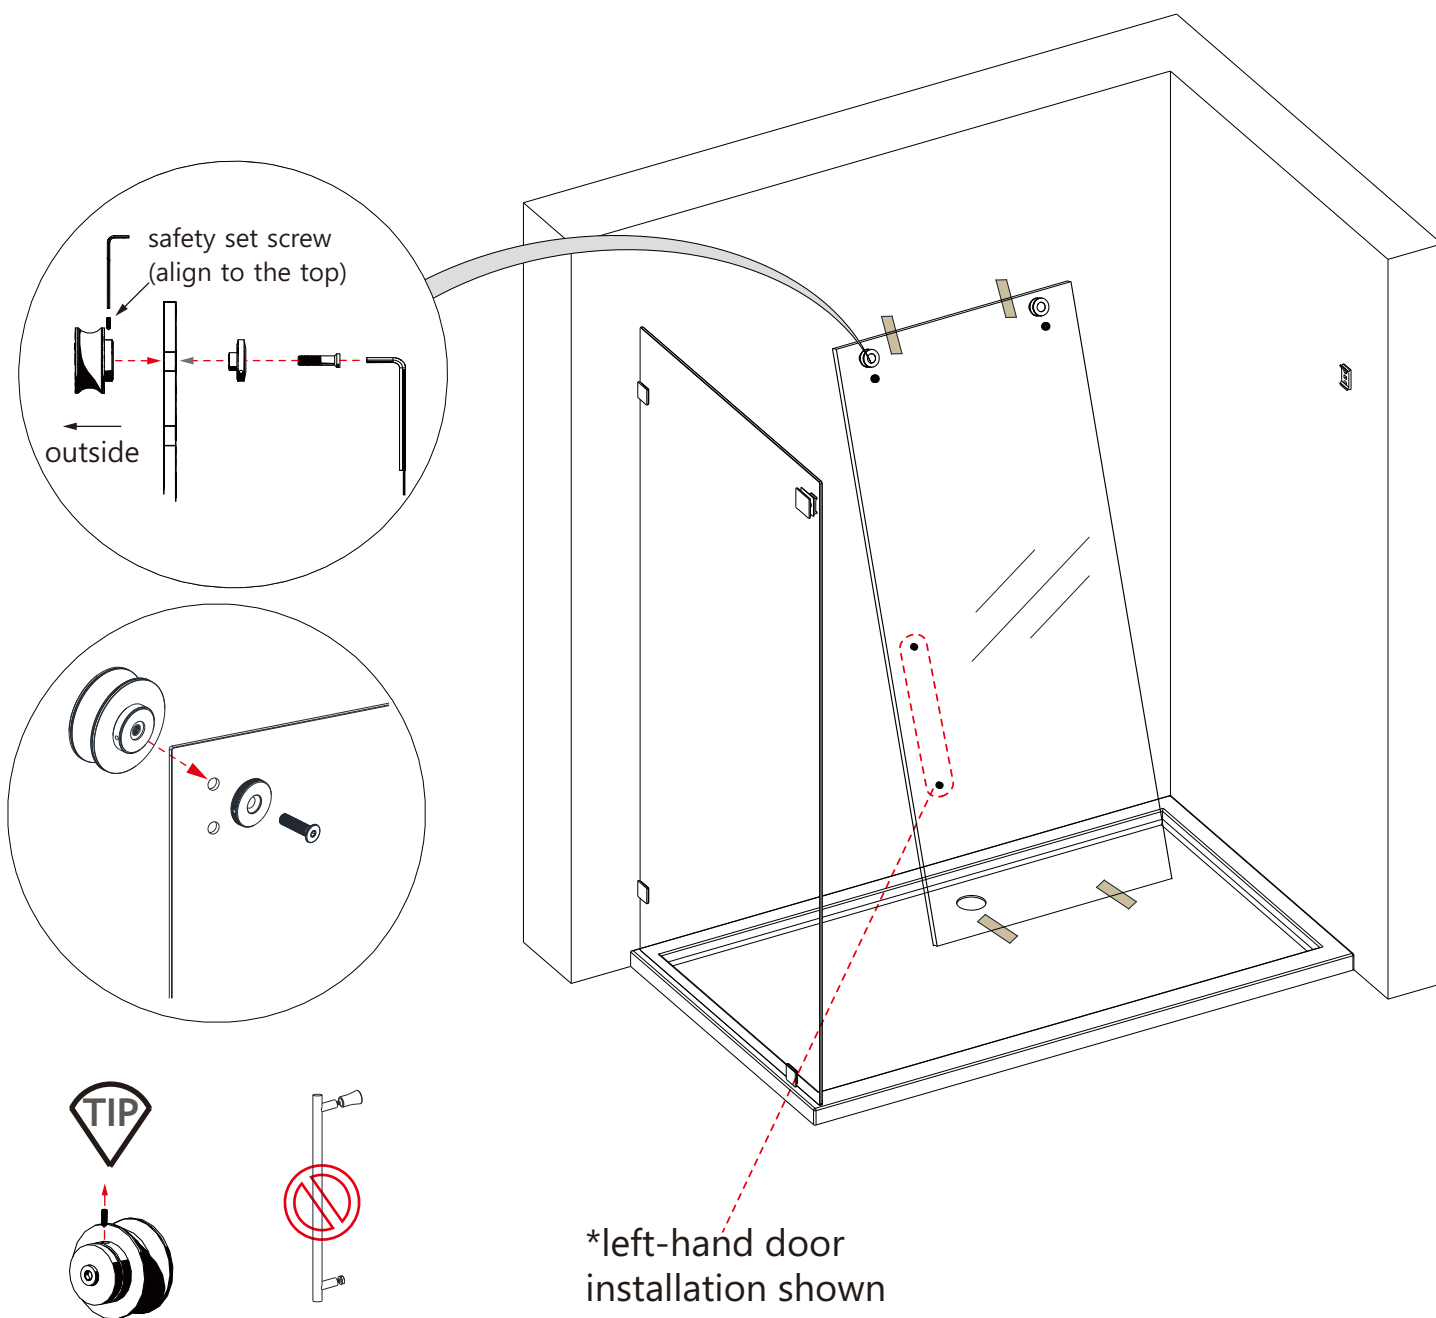

Leave the corner protectors on the glass until it is necessary to remove them

Before you install the **Fixed Glass (#10)**, attach the top **Roller Assemblies (#01)** to the **Sliding Glass (#04)** with the wheels facing outside of the shower.

Align the **safety set screw** towards the top for easier access. Then, take the **Sliding Glass (#04)** into the shower area and lean it against the wall with the handle holes on the correct side. Always use padding to protect the glass and shower surfaces.


Parts Need

01



Roller Assembly x2

19

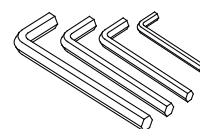



2.5/3/4/5/6

x1set





Top Guide Rail Installation




Ensure the top guide rail is level

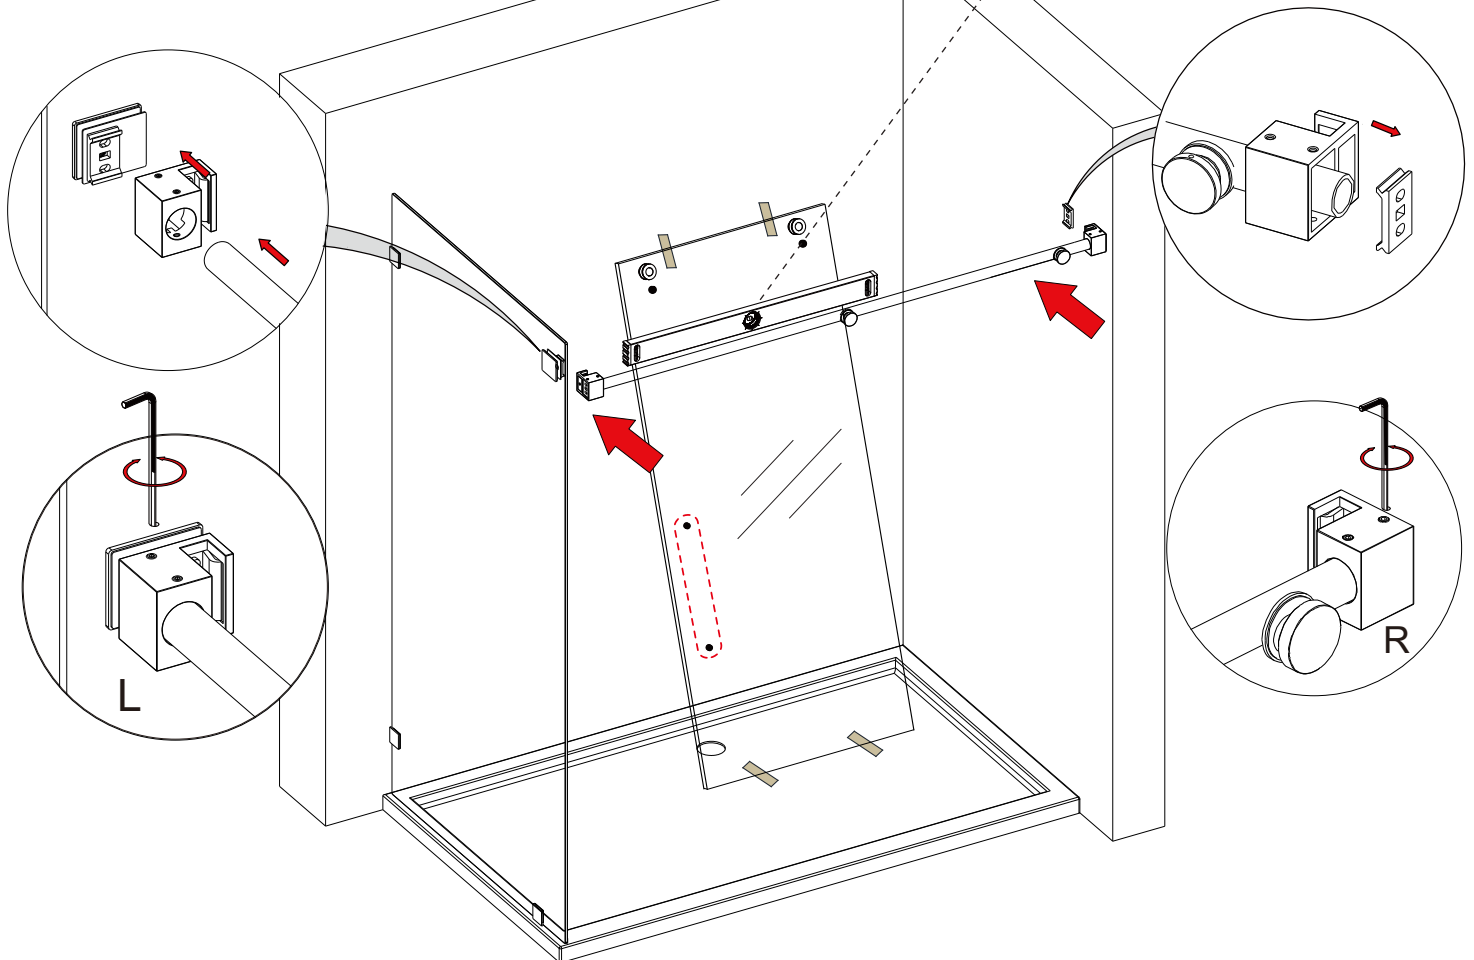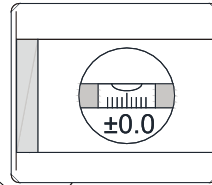

Parts Need

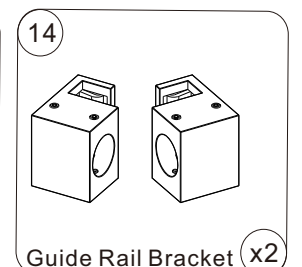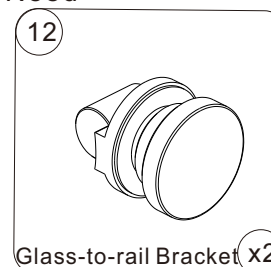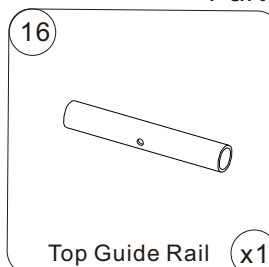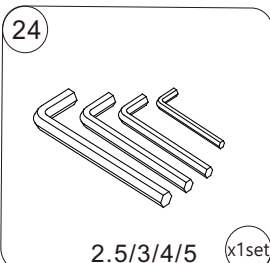


Fixed Glass Installation

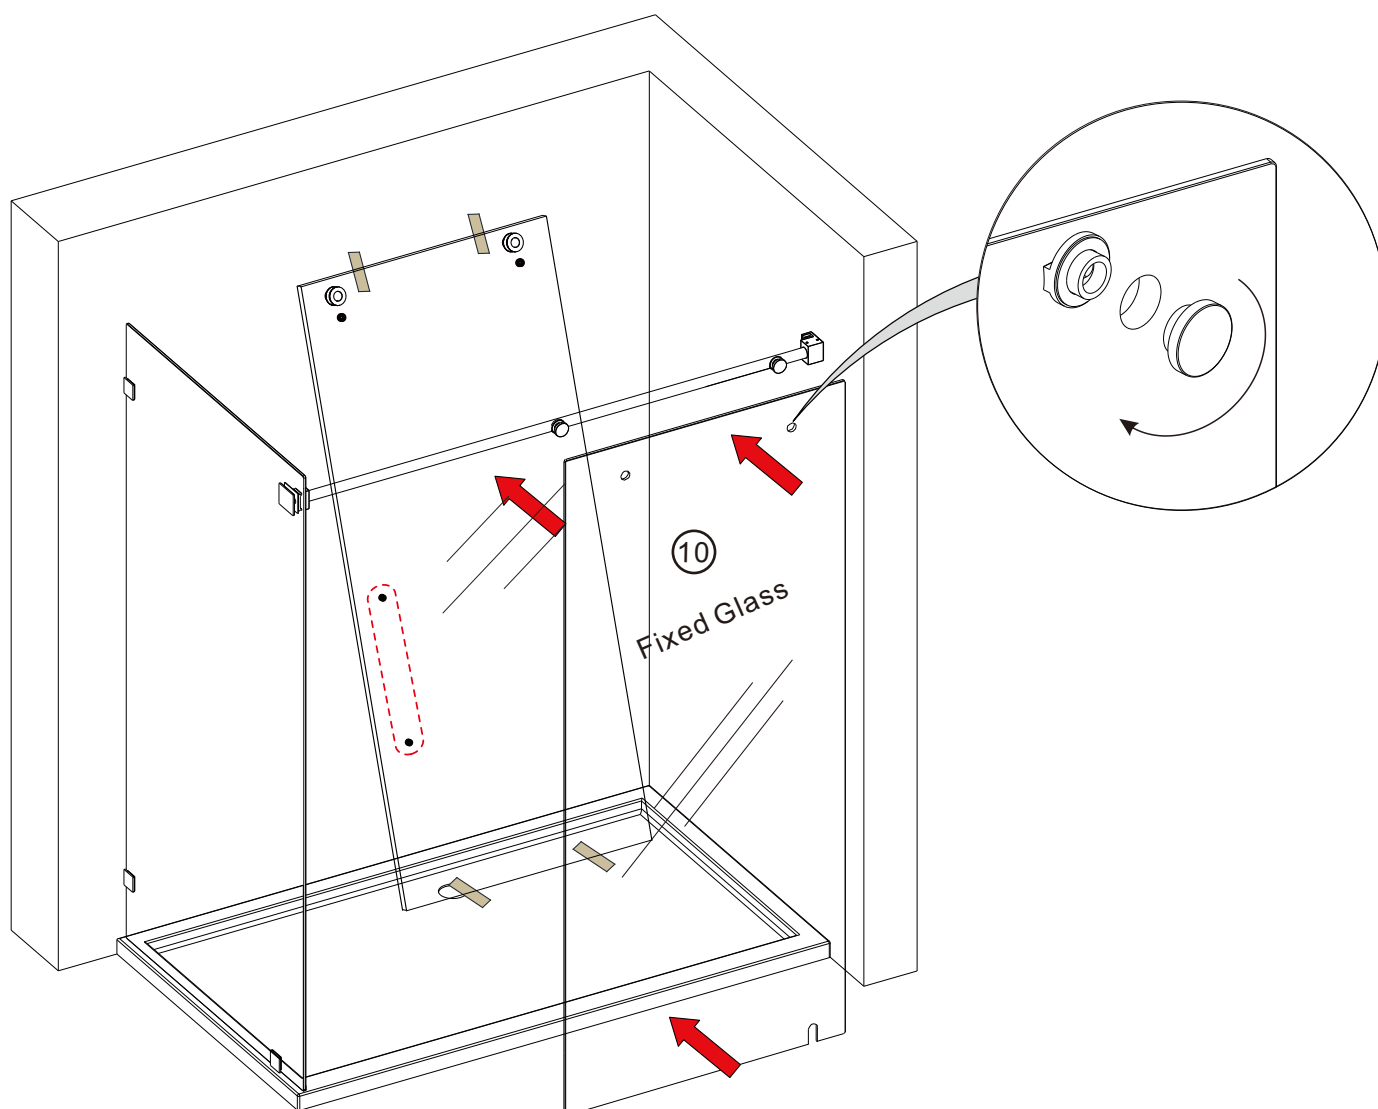


The **Fixed Glass (#10)** must be installed to the **outside** of the **Top Guide Rail (#16)**.

Parts Need

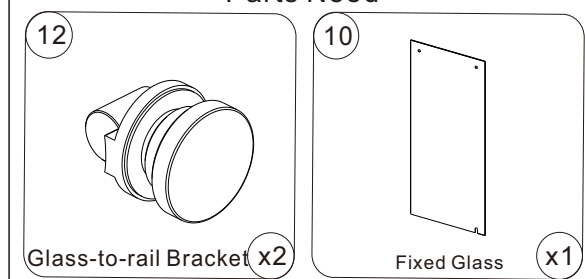

Bottom Threshold Strip & Glass Clamp of Installation

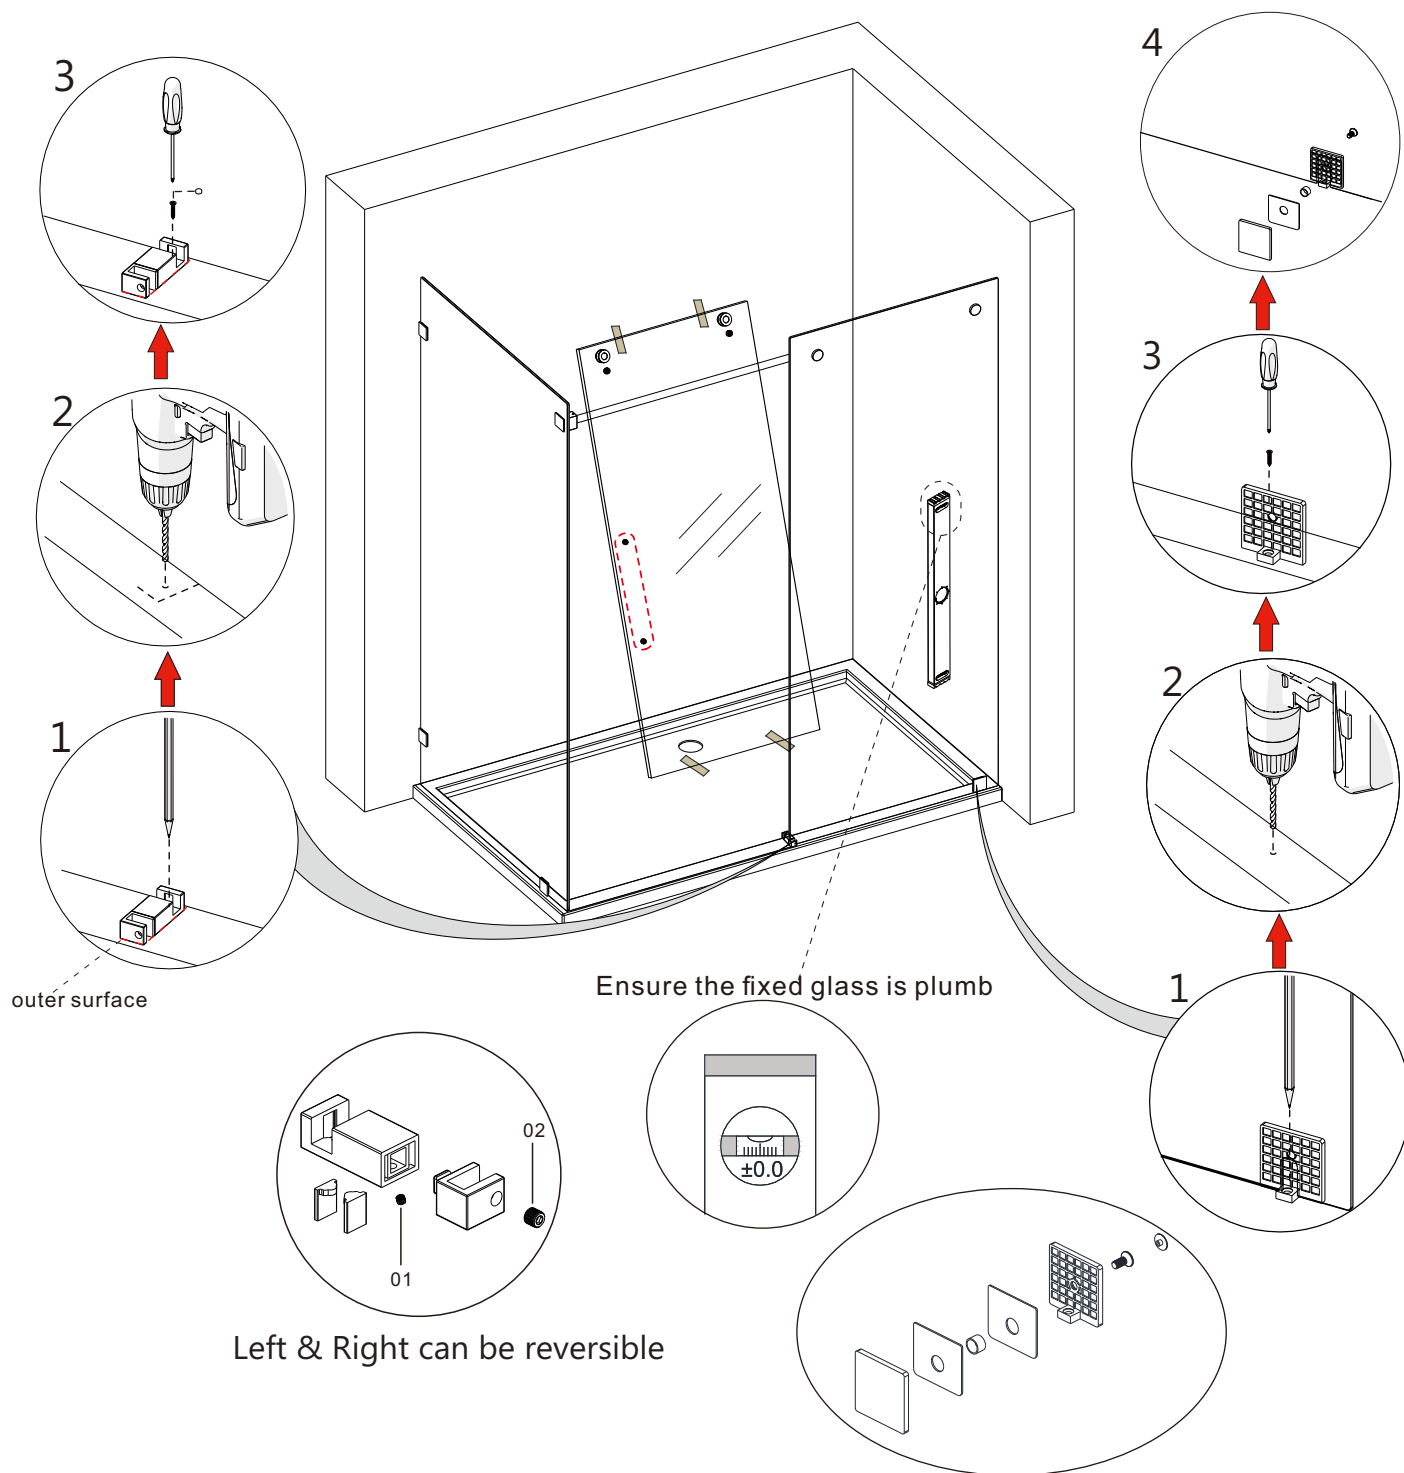

Drill & Screw Recommendations by Installation Case


▪ For installation into an **Acrylic Threshold**:
drill a $\varnothing 1/8"$ (3mm) hole and use the **St4 x 30mm Countersunk Screw (#07)**.

OR

▪ For installation into a **Tile Threshold**:
drill a $\varnothing 3/16"$ (4mm) hole up to the stud
and use the **St4 x 30mm Countersunk Screw (#07)**.

Parts Need


11



Glass Clamp

x1


08

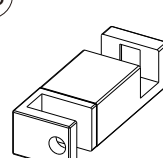



Guide Block

x1

Tools Need

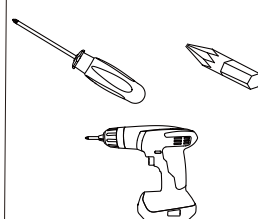


Bottom Threshold Strip Fit & Installation

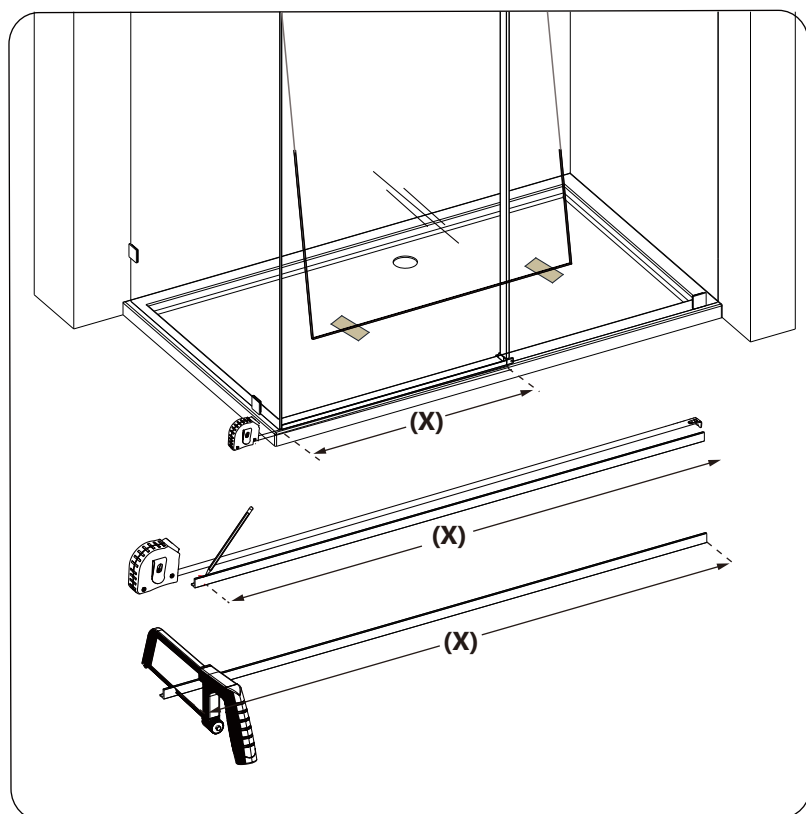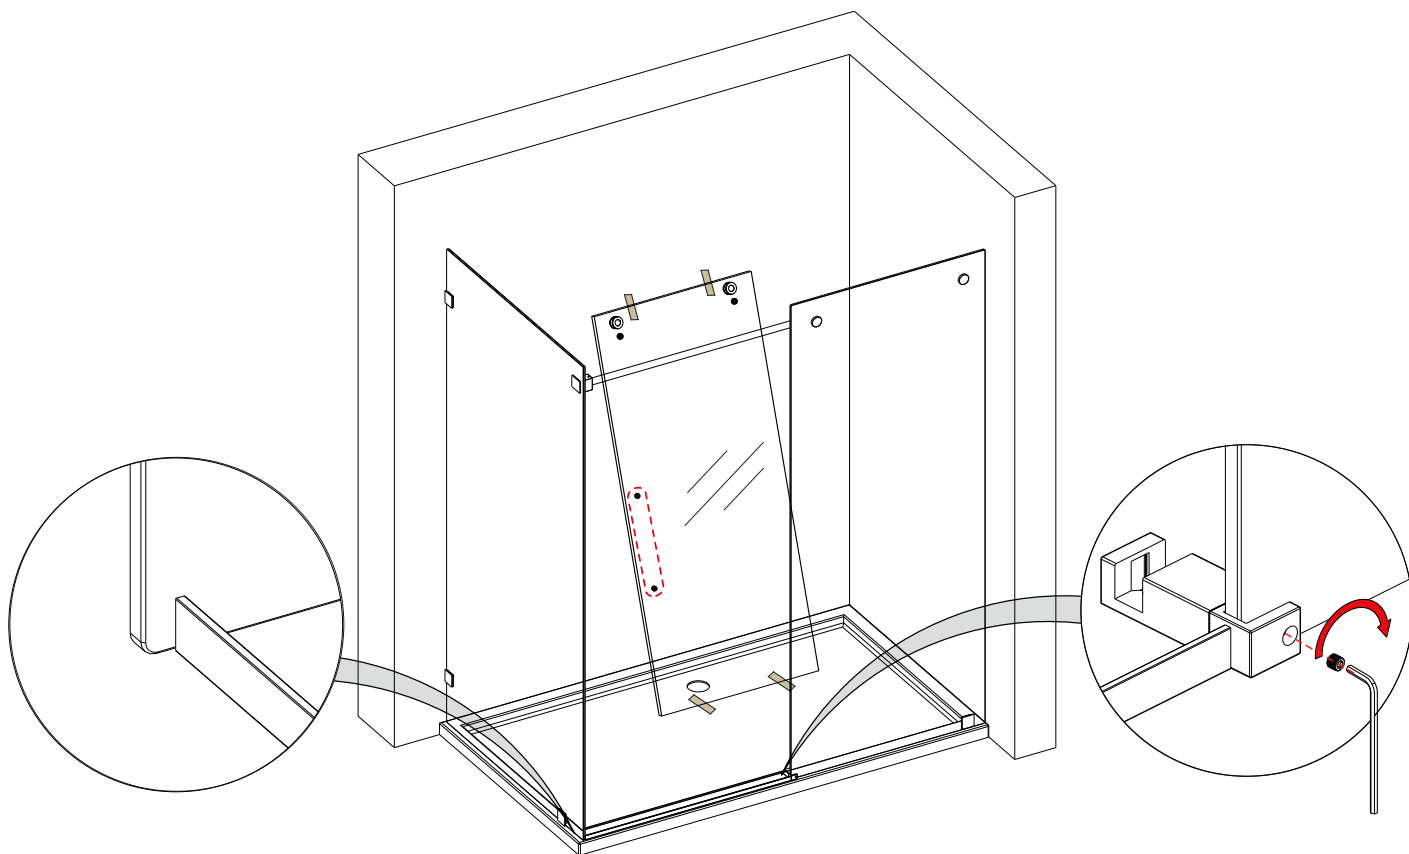

Parts Need

06



Bottom Threshold (x1)




Tools Need



Sliding Glass Installation





Mount roller-fitted sliding glass on top rail; keep grooves snug against rail.

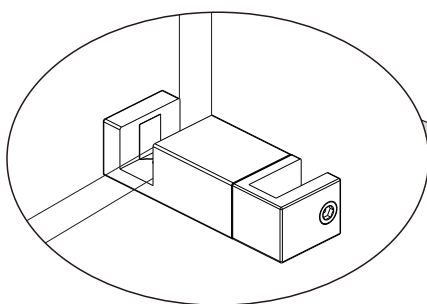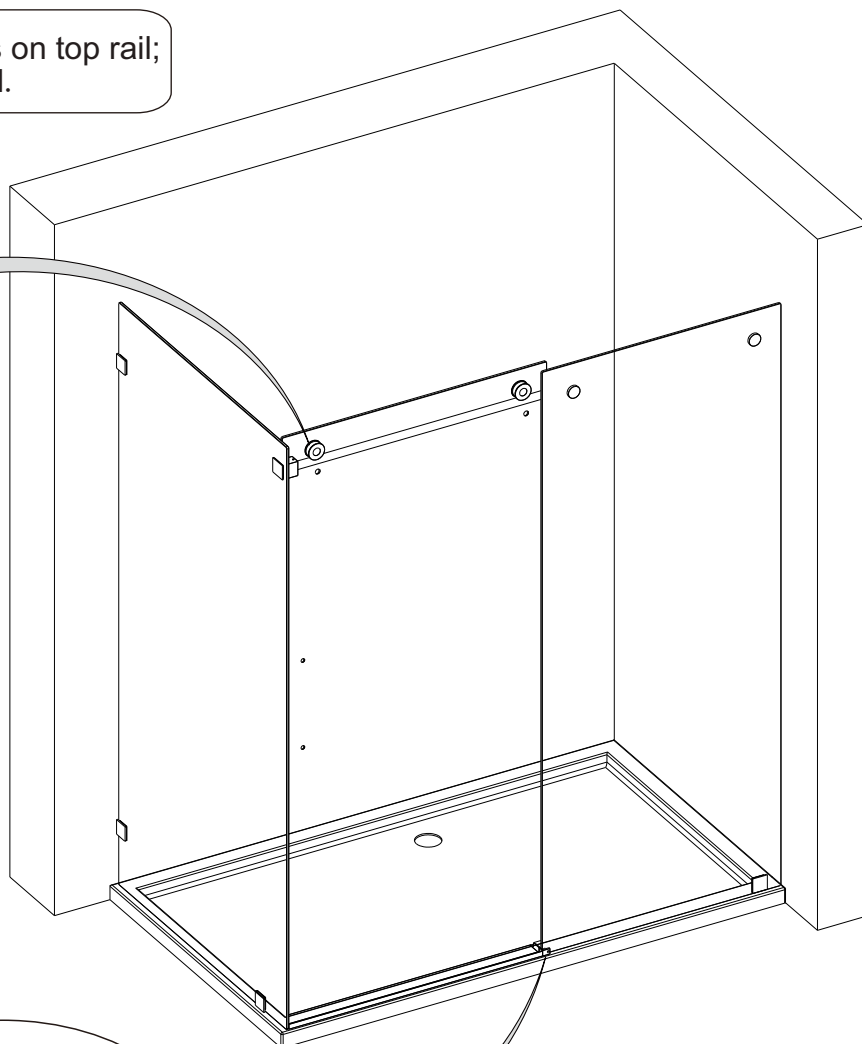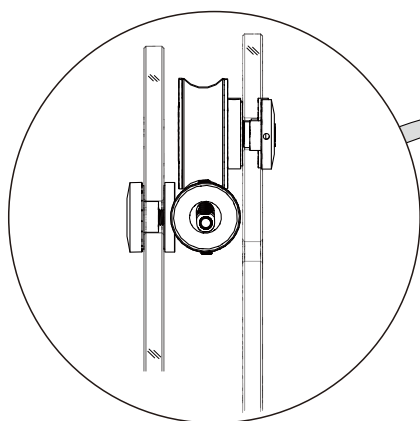


Rest the bottom of the sliding glass in the sliding groove of the floor guide block.

Roller Assembly & Adjustment


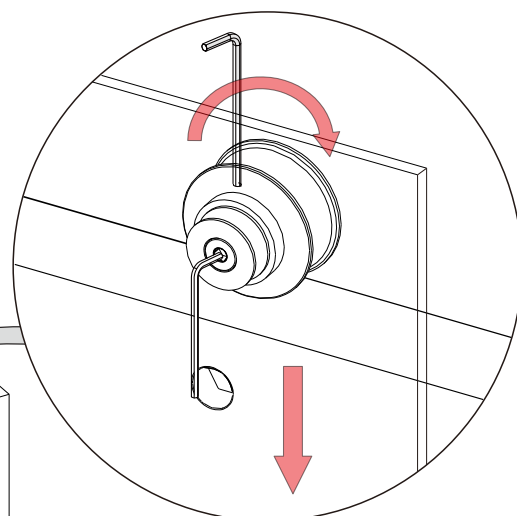
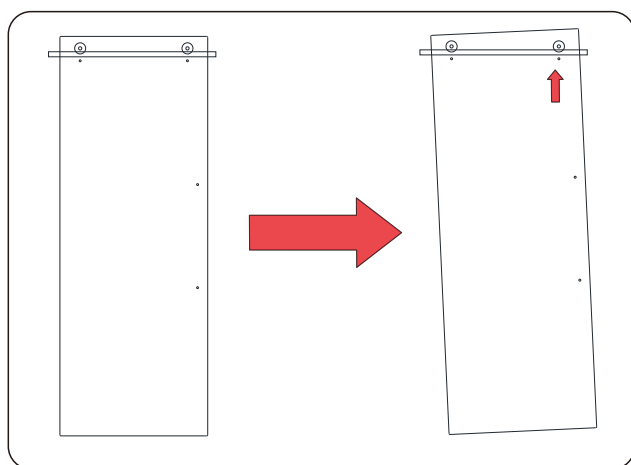


! Back out screws partially

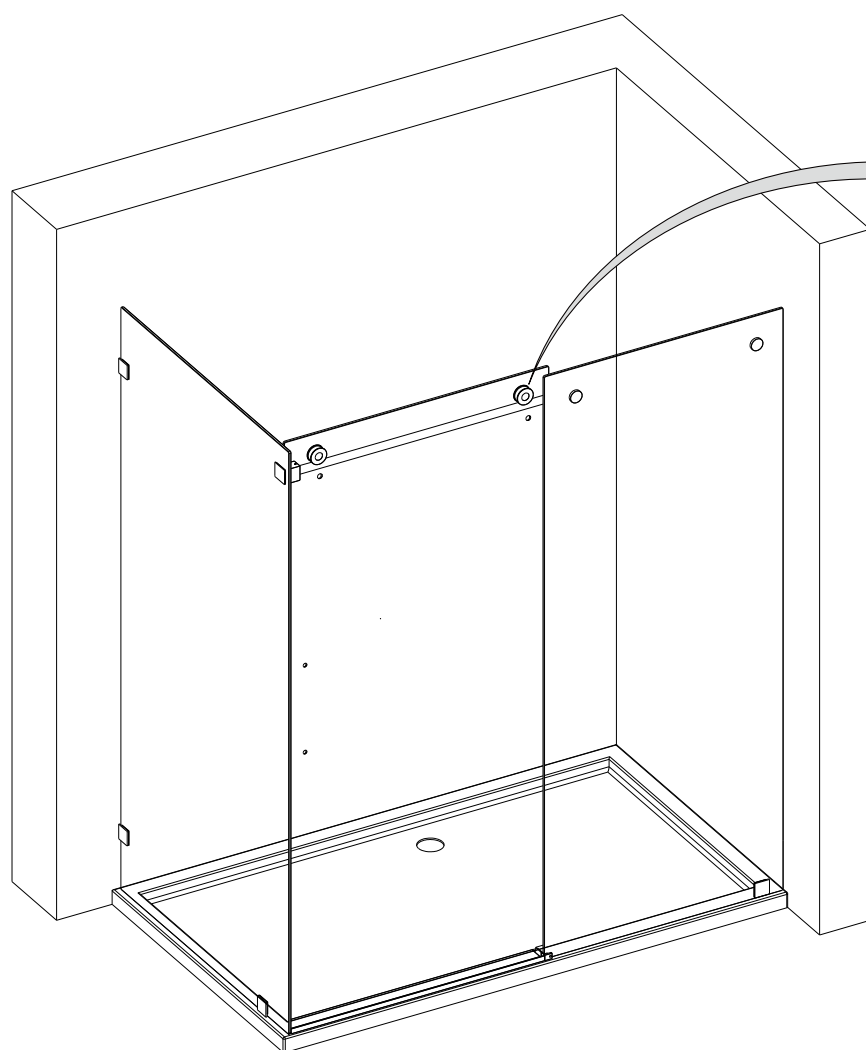

Adjust the right eccentric rollers to conform the sliding glass to snug right wall contact.

Roller Assembly & Adjustment

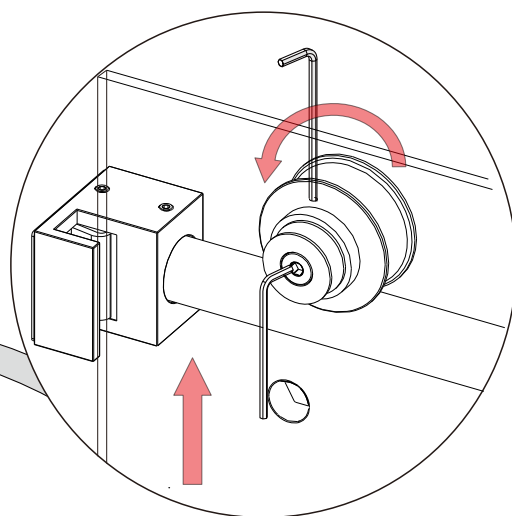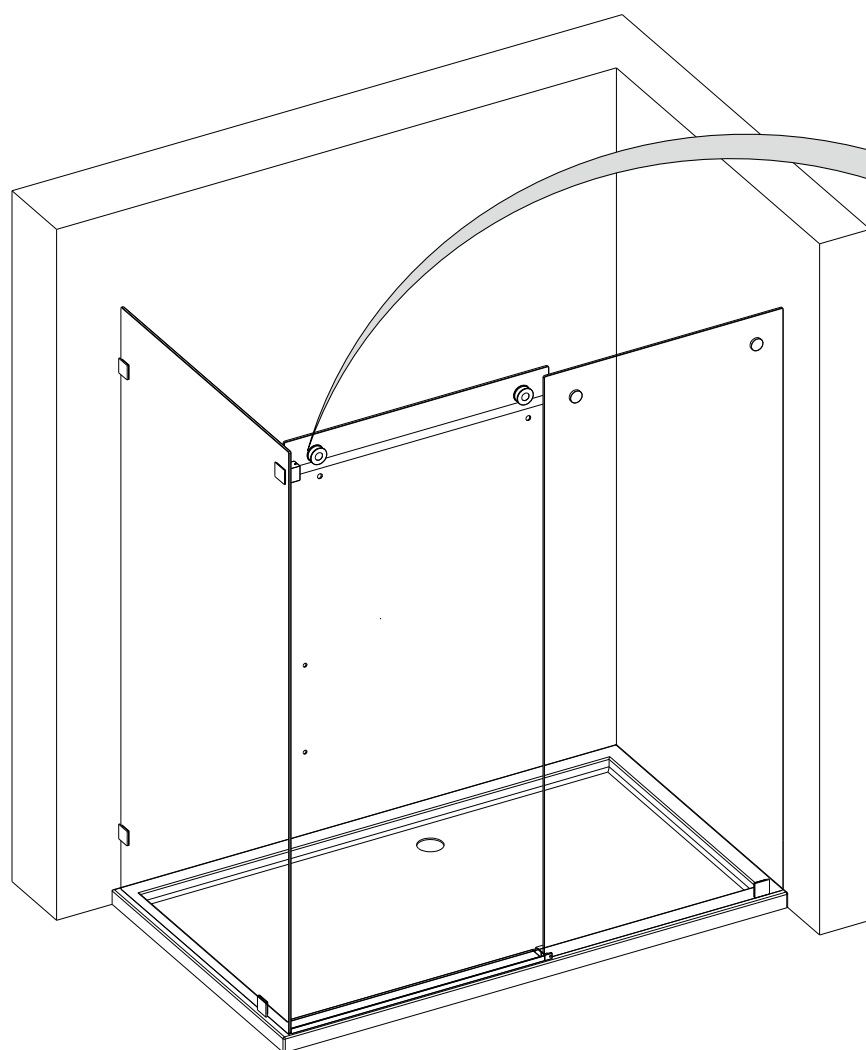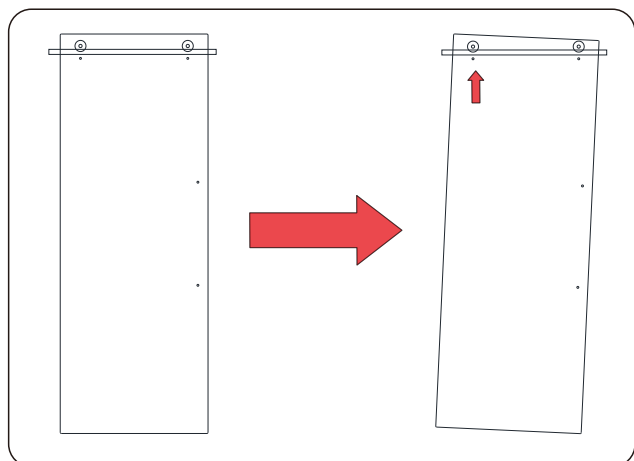


! Back out screws partially




Adjust the left eccentric rollers to conform the sliding glass to snug left wall contact.

Roller Assembly & Adjustment




1、Back out screws partially

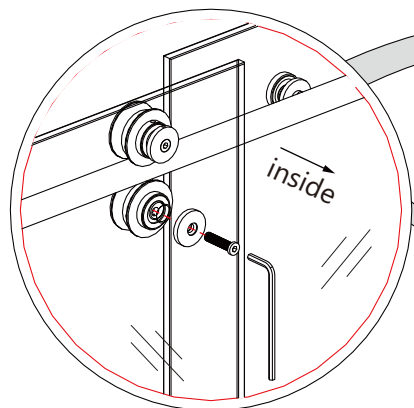


2、Adjust left eccentric rollers to engage snugly with the top rail guide

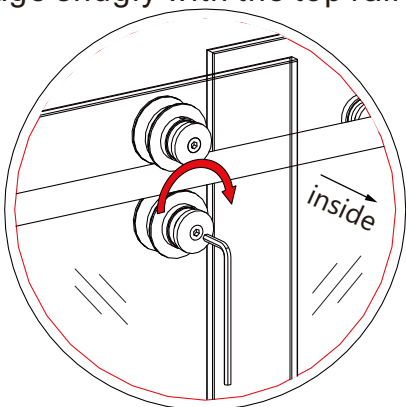

3、Tighten the screws

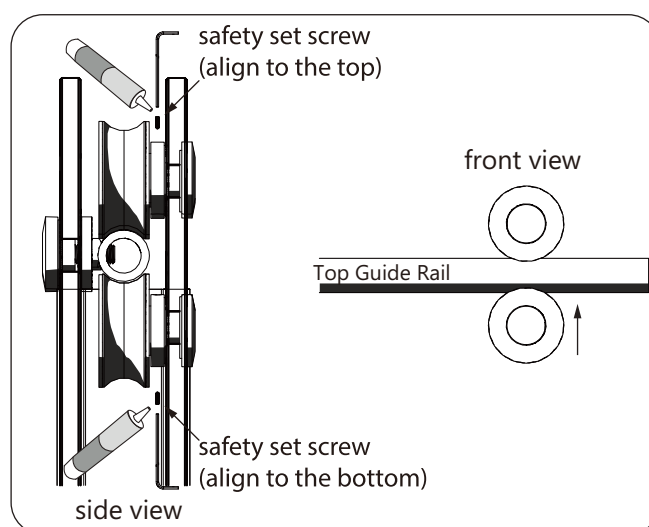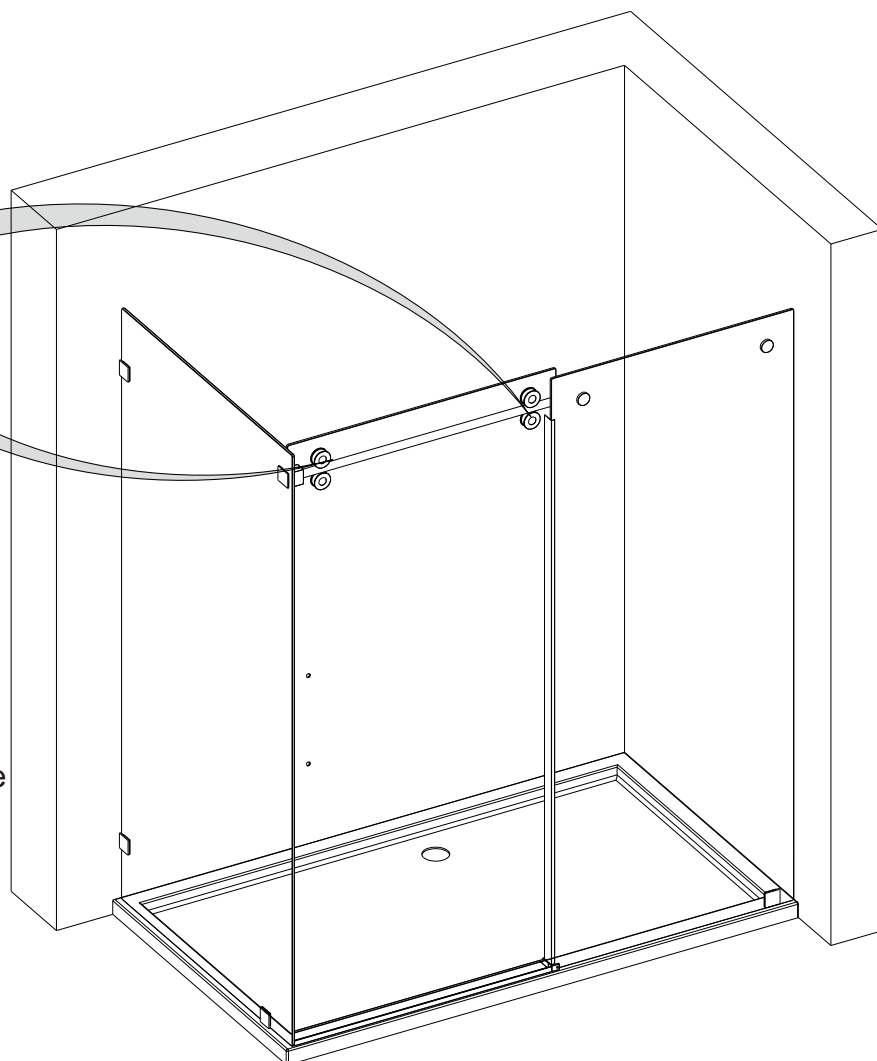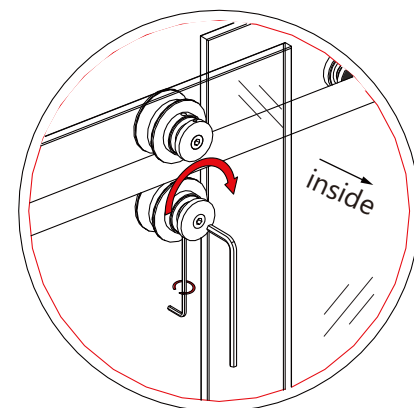




Vinyl Seals & Handle Installation

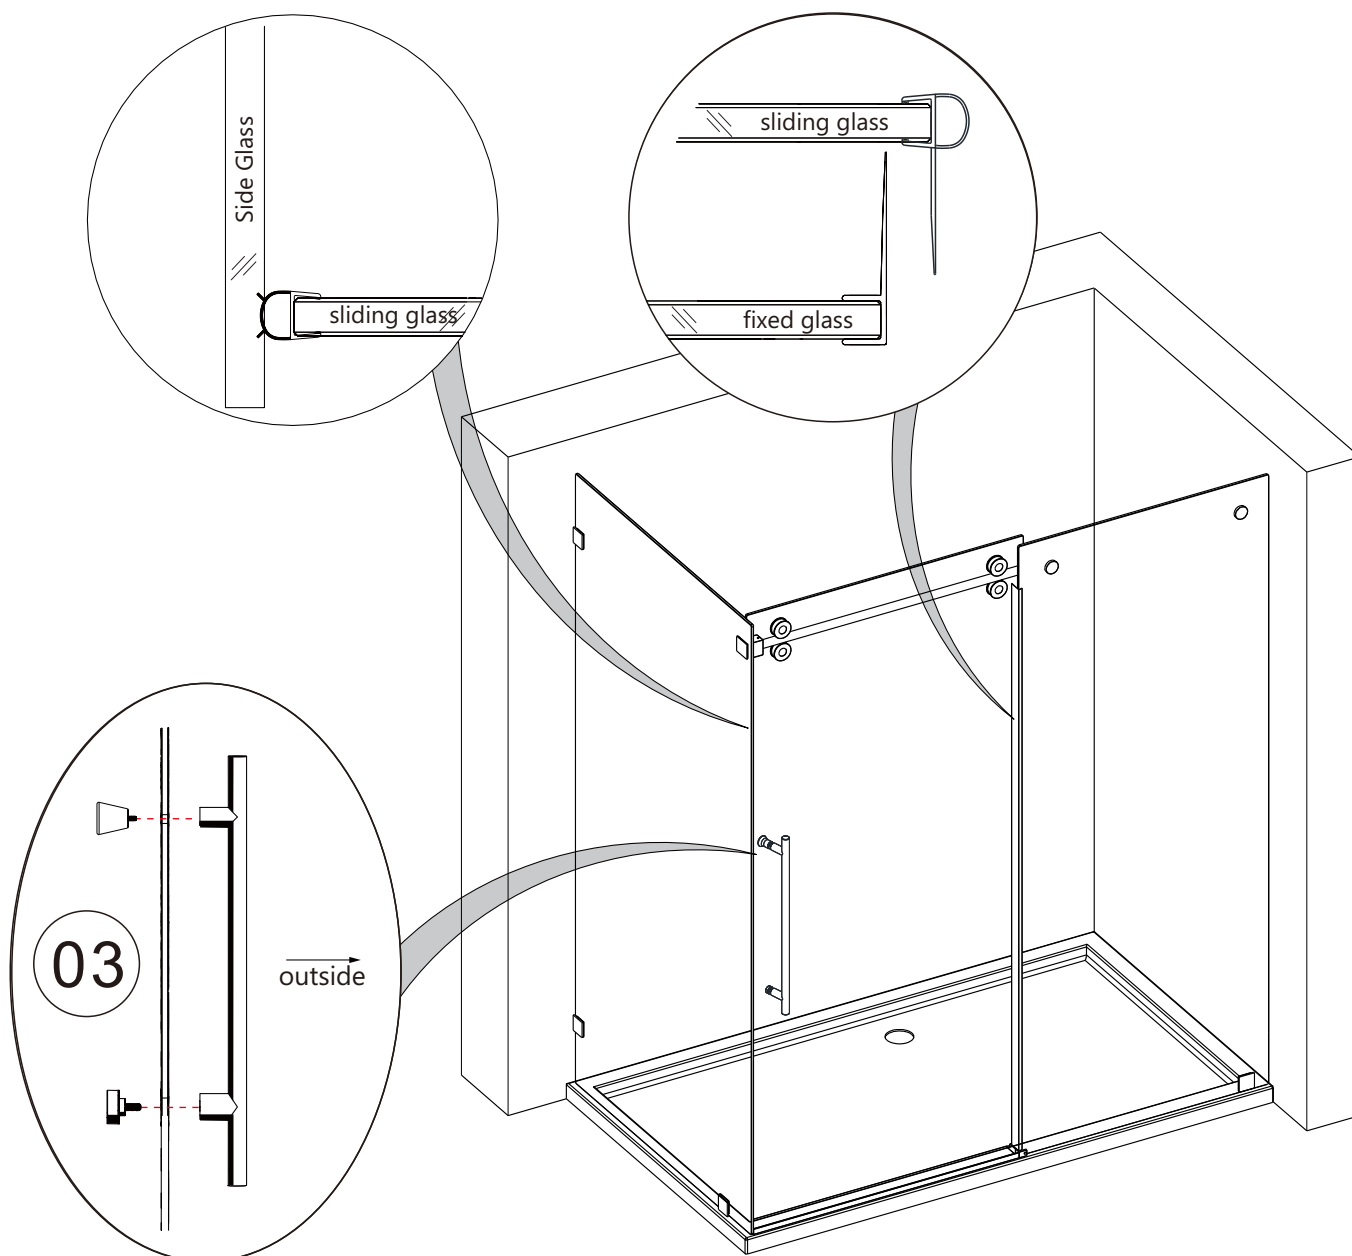

*Left-hand door installation shown.




Use a razor knife to trim the **Vertical Vinyl Strip (#05)** at the top to avoid interfering with the **Lower roller (#01)** and at the bottom where the door meets the **top guide rail (#16)**.

Parts Need				Tools Need
20  Bulb Vinyl Strip x1	17  Vertical Vinyl Strip x1	03  Bulb Vinyl Strip x1	04  Handle x1	

Silicone Application & Curing




The surfaces need to be clean and free of debris before applying silicone.

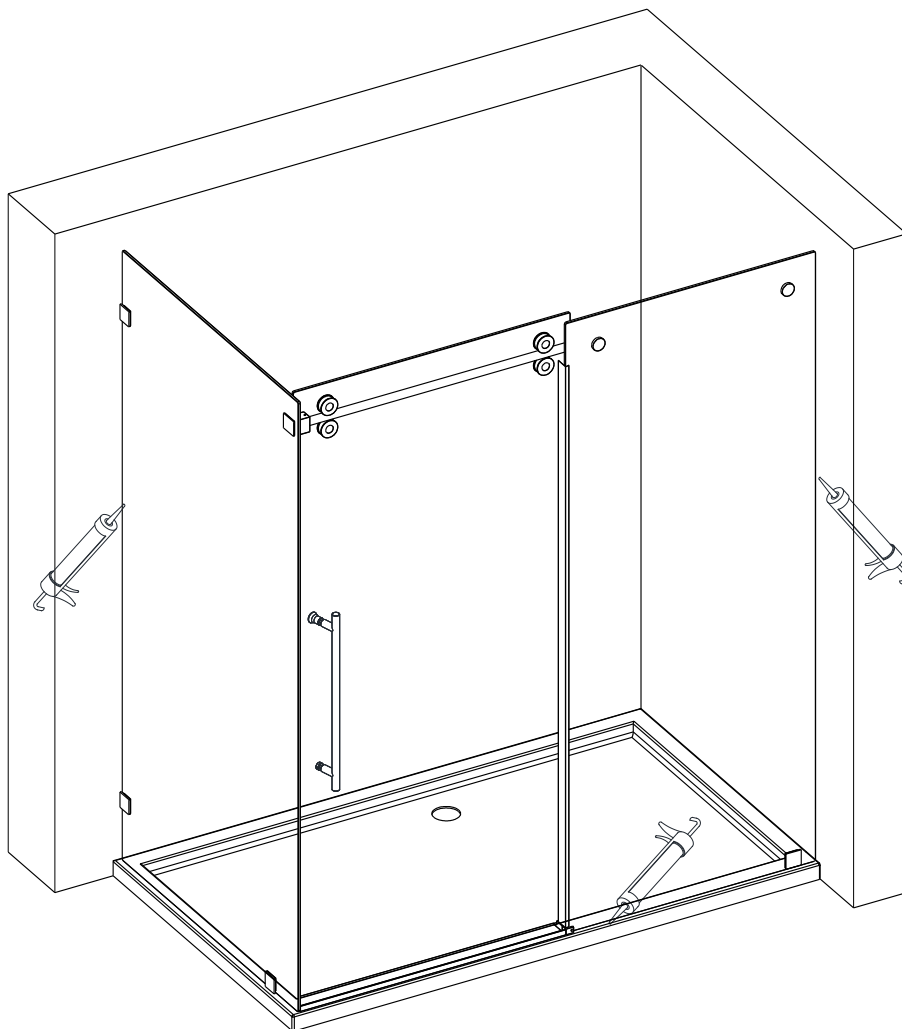

Allow 24 hours for the silicone to cure before using the shower.



DO NOT hang or drape a towel or wash cloth over the Top Guide Rail as this may cause the Roller Assembly wheels to get stuck and possibly cause serious damage or injury.

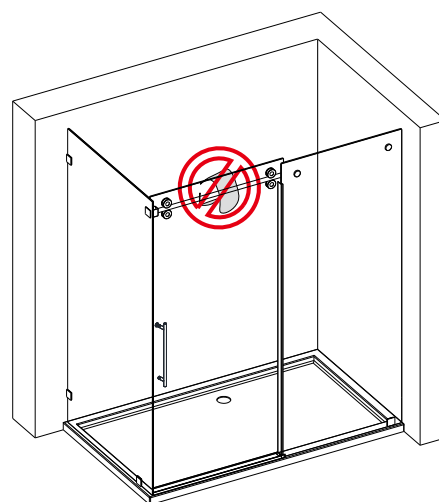

Troubleshooting

Problem/Symptom	Suggested Solution
Missing Parts	•Check all shipping/packaging material for missing parts/components. •Please contact us using the contact information at the bottom of this page.
Top Guide Rail was cut too short or was cut from wrong end during installation.	•The Top Guide Rail (#16) is pre-cut for the model size, and will be shorter than the model width to allow for the Guide Rail Brackets (#14). •If the Top Guide Rail (#16) is cut too short or cut from the wrong end, contact Please contact us using the contact information at the bottom of this page.
Water Leakage	•Confirm the Bottom Threshold (#06), Bulb Vinyl Strip (#01), and the Vertical Vinyl Strips (#05) are installed correctly. •Confirm that the entire unit has been properly sealed with silicone caulk; allow at least 24 hours to allow the silicone to cure and set before using the shower unit. •Direct the shower head/water flow away from the area.
The door rolls open or closed	•Check the Top Guide Rail (#16) for level. Adjust the Guide Rail Brackets (#14) •Adjust the Roller Wheel Assemblies (#01) on the door, if needed, to allow the door to seal evenly against the wall. •To influence the Top Guide Rail (#16) slightly, the innermost Glass-to-Rail Brackets (#12) can be adjusted. •Confirm the Guide Block (#08) is square to the Fixed Glass (#10) and threshold.
The door does not track smoothly	•Confirm the Sliding Glass (#04) is not making contact with the bottom of the Guide Block (#08). •If the Sliding Glass (#04) needs to be raised, adjust the Roller Wheel Assemblies (#01) to raise it. •Be sure that there is nothing on the Top Guide Rail (#16) that could block the Roller Wheel Assemblies (#01). •Check the Bottom Roller Assemblies (#01) are 1/16" beneath the Top Guide Rail (#16) and are not making any contact with the Top Guide Rail (#16).
Mishandled glass	• Always take precautions when handling tempered glass. • A glass suction cup and an assistant are helpful when carrying large, heavy lites of glass. •Never allow tempered glass (especially the edges) to come in contact with any hard surface, which can cause chipping, splintering or complete glass failure. •Any damaged glass should be immediately replaced. •Do not use a shower with damaged glass. •Leave plastic corner protectors on the glass until ready to install. •Always protect the glass once removed from the box by padding the top and bottom of the glass with cardboard, styrofoam or other soft material until ready to install.

Do not return product to store. Contact us with any questions.

Add: 830 N. Central Avenue, Upland CA, 91786

Web: www.ibathwiller.com

Email: supports@ibathwiller.com

TEL: 909-282-5408