


## Etagere Organizer Shelf Linen LED Floor Lamp

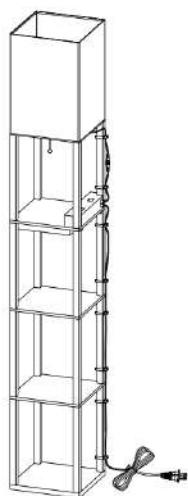

### Ordering Information

Model ID	MF20096
Finish	Veneering
Collection	Classic Floor Lamp Collection

### Specifications

Material	Wood+Fabric+PC
----------	----------------

### Electrical

Voltage	120 V 60Hz
Lead Wire Length	70 3/4"
Switch	Pull-chain Operator Switch

### Primary Information

Light Source	Incandescent / LED
Bulb Included	Included
Bulb base Type	E26
Maximum Power	60W

### Qualifications

Applicable Environment	Dry
Warranty	1 Years
Protection Class	IP20
* Each Shelf Can Take a Maximum Load of 10 Lb.	


### Dimensions

Height	67"
Length	10.25"
Width	10.25"
Weight	10.15 LBS

### Product Features



- DIY assembly, modern minimalist style, classic color scheme.
- The versatile design brings not only a beautiful luminaire, but convenient storage options. The multi-tiered shelves allow you to display vases, books, plants etc to decorate your room.
- Different light bulbs with E26 base can be applied to meet different ambience needs.
- 1 -2 more screws for each types are spared.

### Packing List

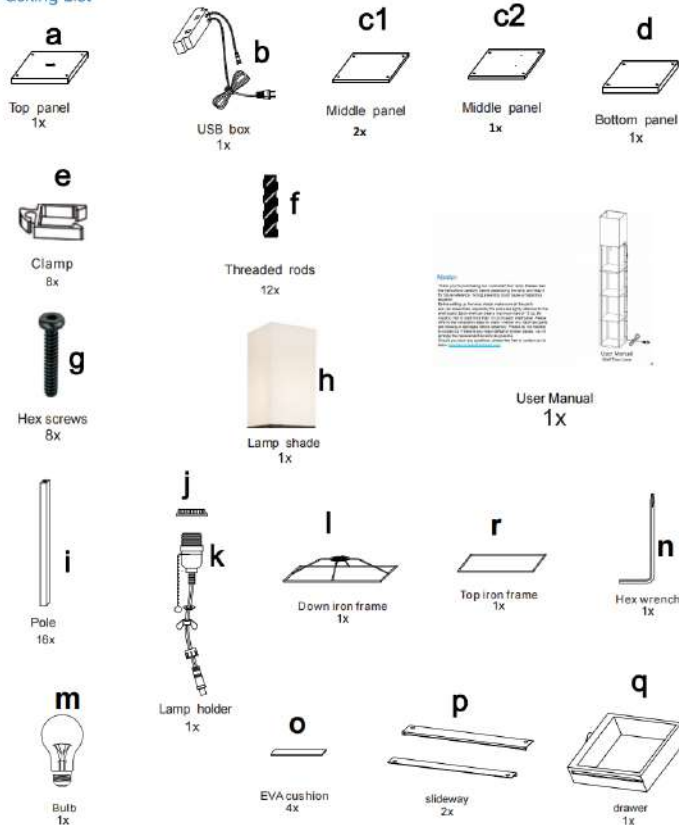


\*Please refer to the installation steps to check if any hardware parts are missing or damaged before the assembly.


Installation Steps

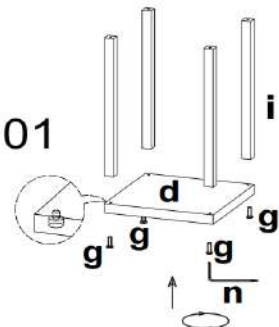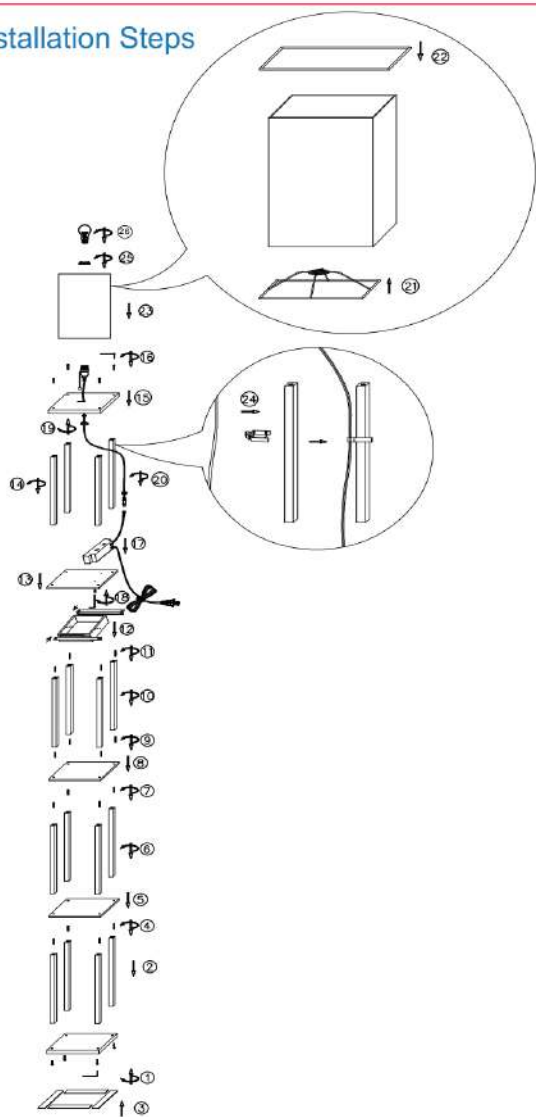


Step1:Fix the bottom panel and the wooden pole firmly with the hex screws.Please note that the sink screw holes are facing down.


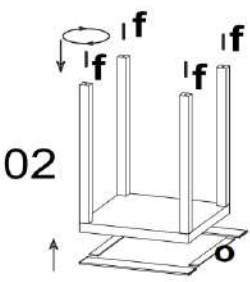


Step 2: Stick the EVA cushion on the bottom of the bottom panel. Rotate the threaded rods and fix them to the tops of the wooden poles.


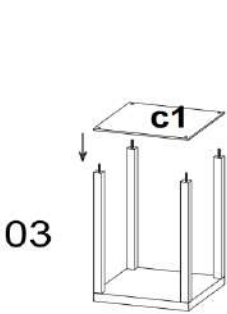


Step 3-4: Put the second panel through the threaded rods and place it on the wooden pole, then screw the other four poles.

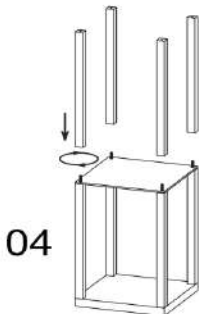


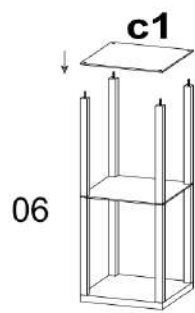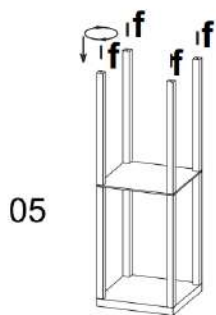


Step 5-6: Tighten the wooden poles and fix them on the second panel, then place the third panel on the four threaded screws. .

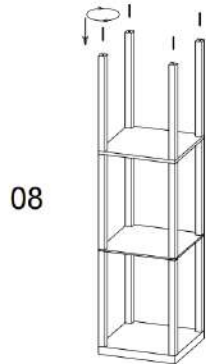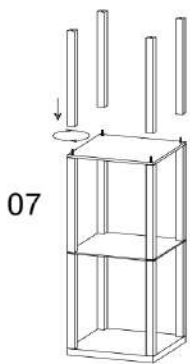


Step 7-8: The same processing as step 5-6.

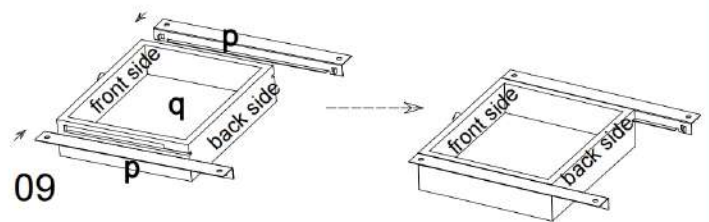


Step 9: Please put the slideways into the drawer's groove at the correct direction.

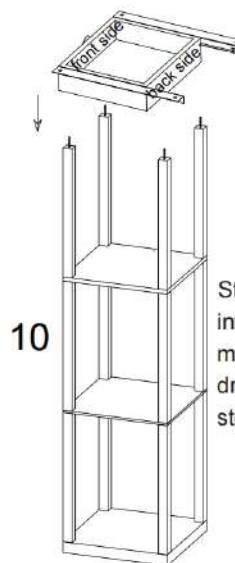


Step 10: Put the sideways and drawer into the four threaded rods as a whole module. Make sure the drawer won't drop down from the slideways before step 11.

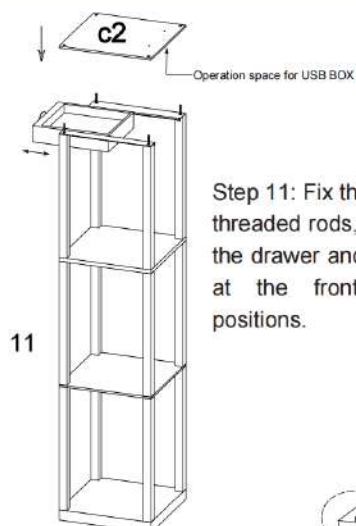


Step 11: Fix the C2 panel into the four threaded rods. Please make sure that the drawer and USB box are installed at the front and back relative positions.

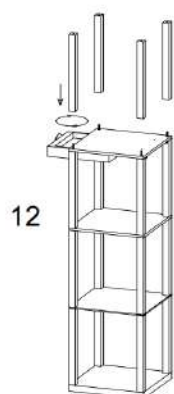


Step 12: Tighten the wooden poles and fix them on the fourth panel.

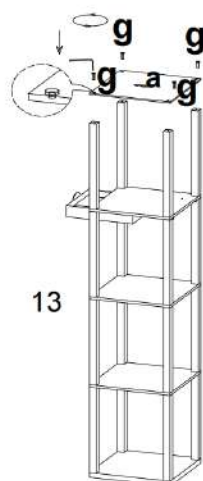



Step 13: Fix the top panel on the poles firmly with the Tool N (Hex wrench side). Please check the surface of the panel make sure the countersunk holes on the top.

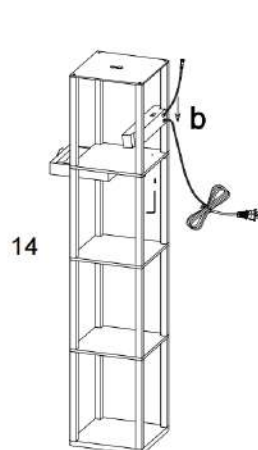


Step 14: Use the tool N (Phillips screwdriver side) to fix the USB box to the storage panel with flat-head screws.

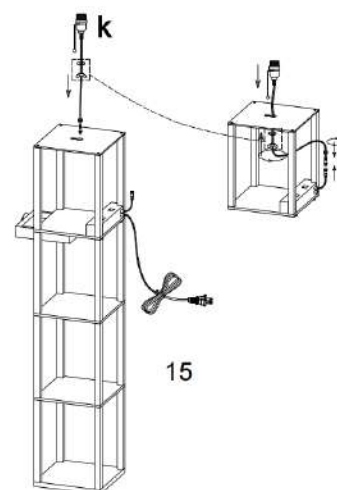

Step 15: Pass the iron washer and the butterfly nut through the middle hole, make sure the iron washer be under the top panel.

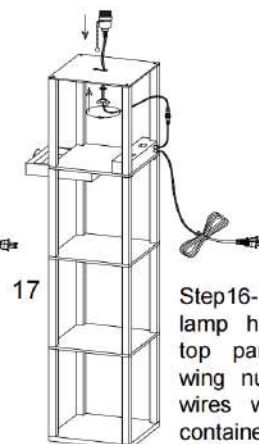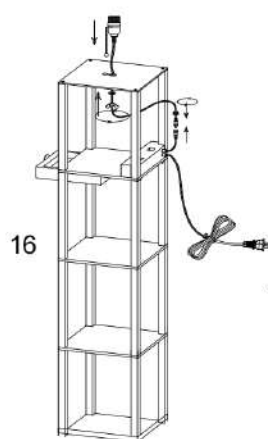


Step 16-17: Fix the lamp holder on the top panel with the wing nut, fasten the wires with the self-contained nut from the USB box.

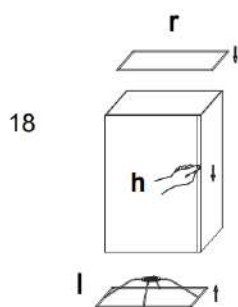


18

Step 18: Stick to the lamp shade with the iron frames.

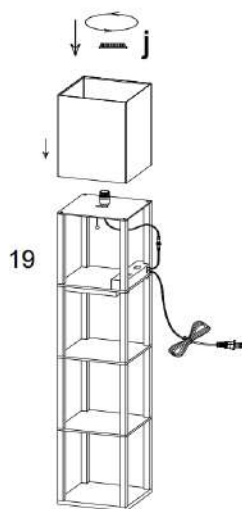

19

Step 19: Fix the lampshade on the lamp holder with the lamp nut. (Unscrew the nut from the holder firstly)

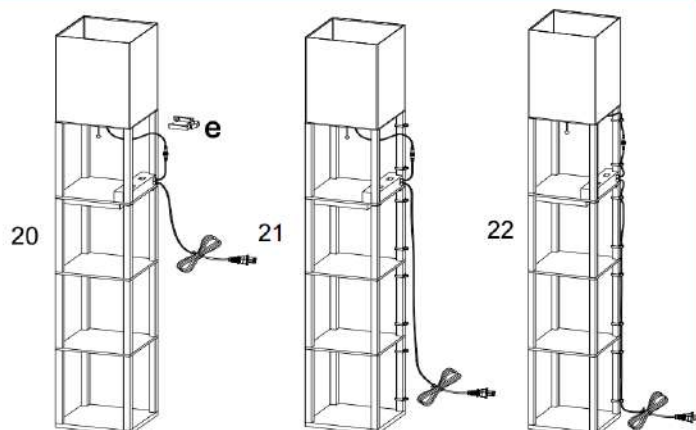


20

21

22

Step 20-22: Clip the wire clamps on the lamp poles and clip the wire into the clamps well.

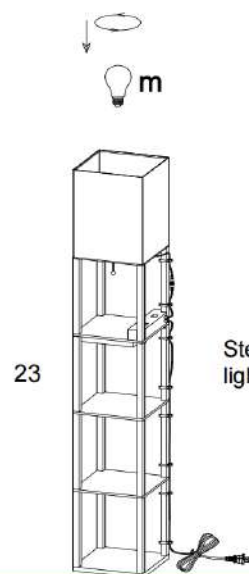

23

Step 23: Install the light bulb, then done