


Open Shelf Bookcase

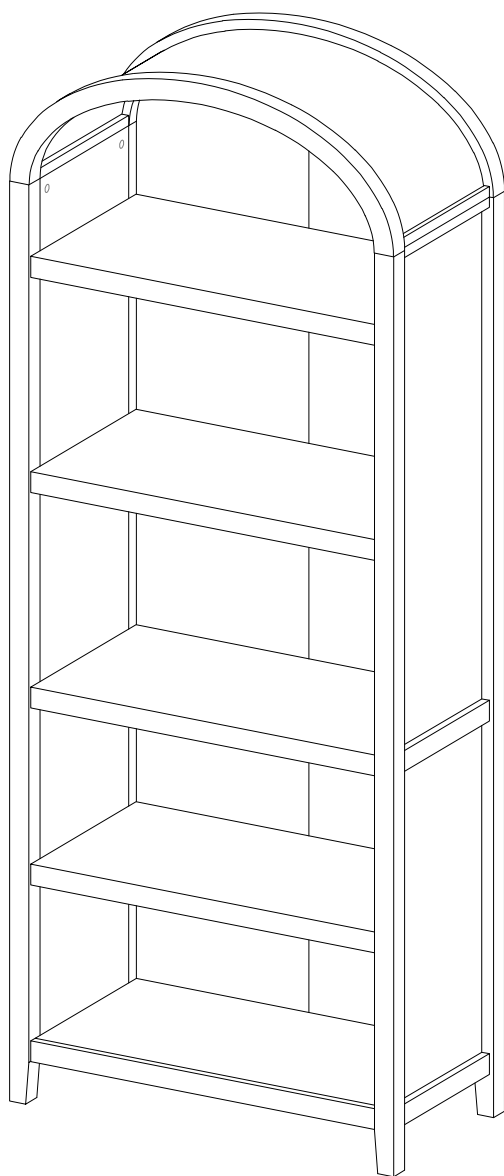

Time to get started


Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check you've got all the pieces and parts before diving in to assembly.

Estimated time for assembly



People recommended for assembly


Make it a team effort! Grab a friend for quicker, easier assembly.

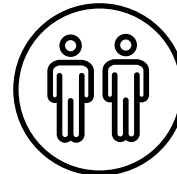

2 People Build


Tools Needed

Grab a Phillips head screwdriver to conquer this assembly

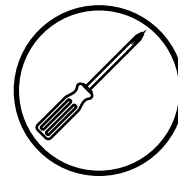


Use power tools with caution

You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under warranty.

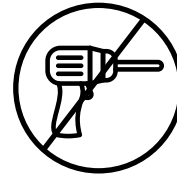


Glue is provided to secure wood dowels in place

When inserting dowels, locate the appropriate hole, place a small amount of glue in the hole, and then insert the dowel. Wipe away excess glue immediately.

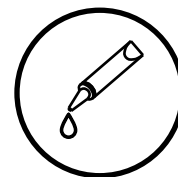


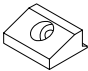






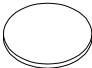



Parts List

Part Number	Description	Quantity
1	Left Panel	1
2	Right Panel	1
3	Top Arched Panel	1
4	Lower Shelf Panel	1
5	Upper Shelf Panel	4
6	Upper Back Panel	1
7	Lower Back Panel	1

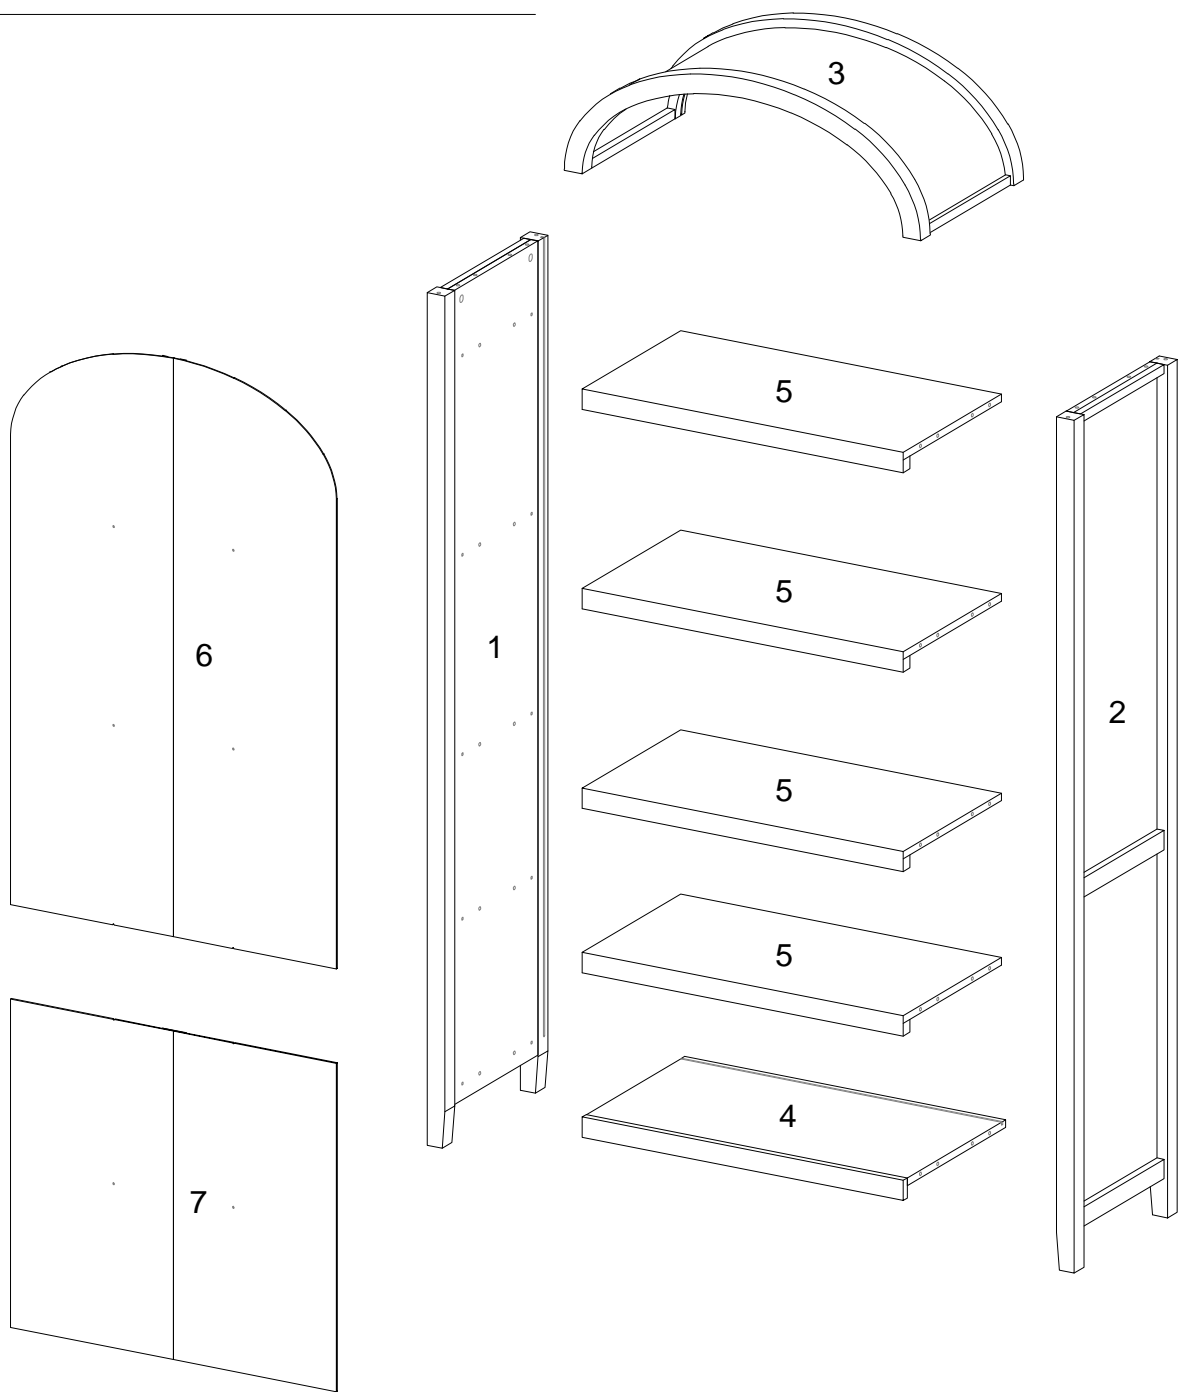


Hardware List

	Part	Size	Name	Quantity
A		8x30mm	Wooden dowel	28
B		6x35mm	Cam Bolt	24
C		15x11mm	Cam Lock	24
D			Plastic Wedge	14
E		3x17mm	Screw	14
F		3x14mm	Screw	8
G		4x25mm	Screw	1
H		4x15mm	Screw	1
J			Wall Anchor	1
K			Plastic strap	1
L		30mm	Sticker	26
M			Glue tube	2

The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.


Step 1

Let's get started, shall we? Start by screwing Cam Bolts (B) into the Left Panel (1) and Right Panel (2). Then, place your Dowels (A) into the dowel holes at the top of both panels.

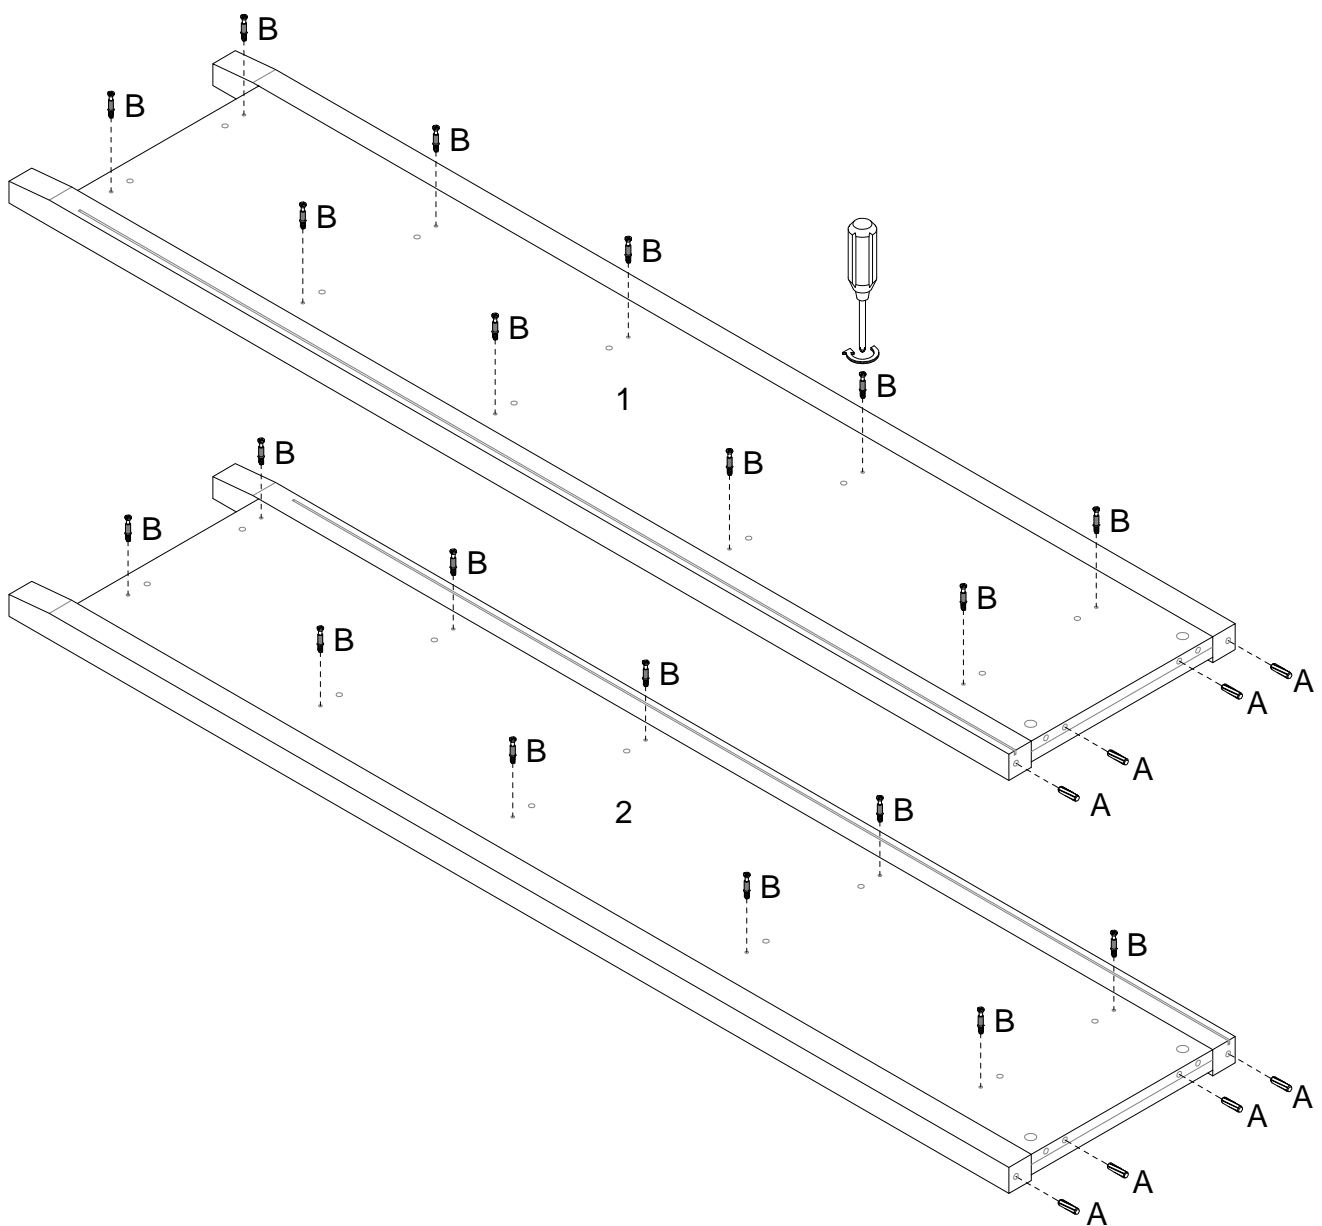


Step 2

Using a screwdriver, screw the Cam Bolts (B) into the Top Arched Panel (3).

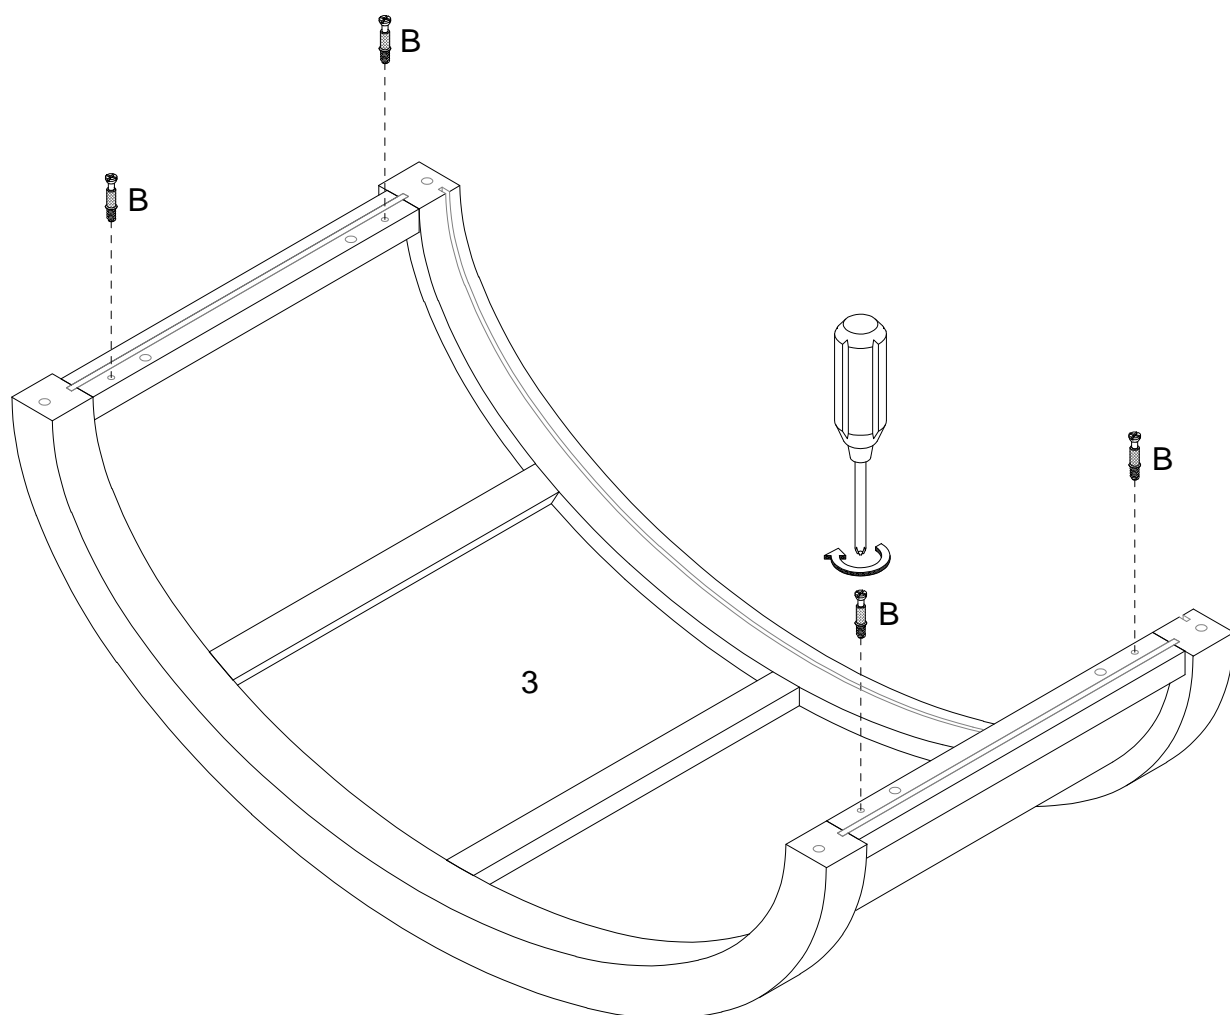



Step 3

Insert Dowels (A) into the Upper Shelf Panels (5) x 4 and Bottom Shelf Panel (4).

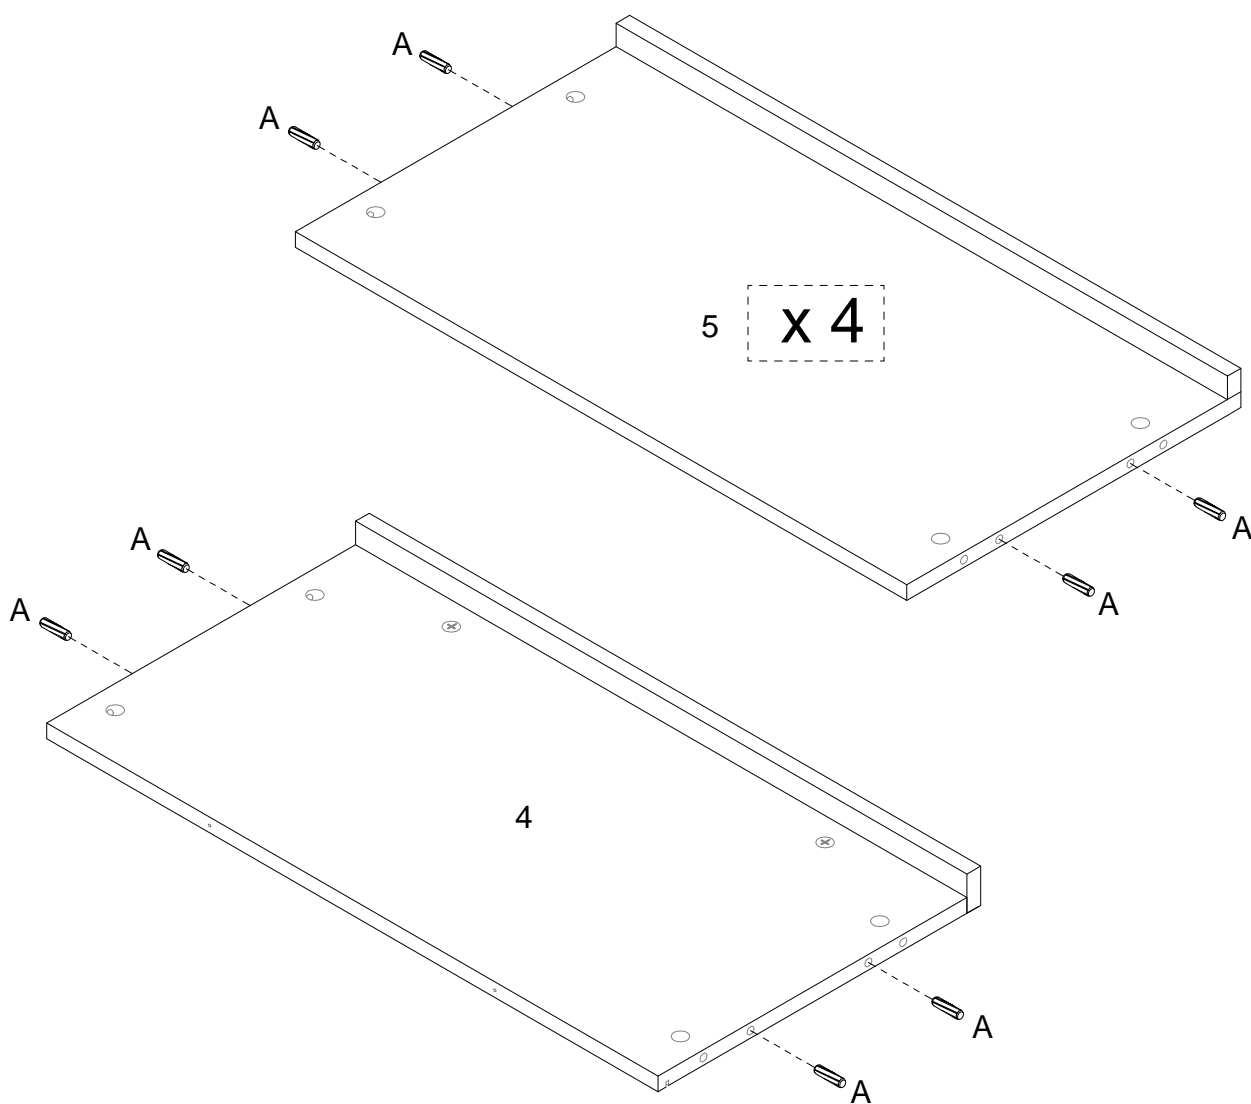

Step 4


Insert Shelf Panels (5) x 4 and (4) into your Left Panel (1). Secure with Cam Locks (C) and tighten with a screwdriver. Tip: Ensure that Bottom Shelf Panel (4) is at the bottom of the panel closest to the legs.

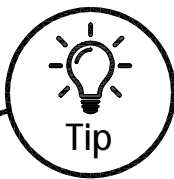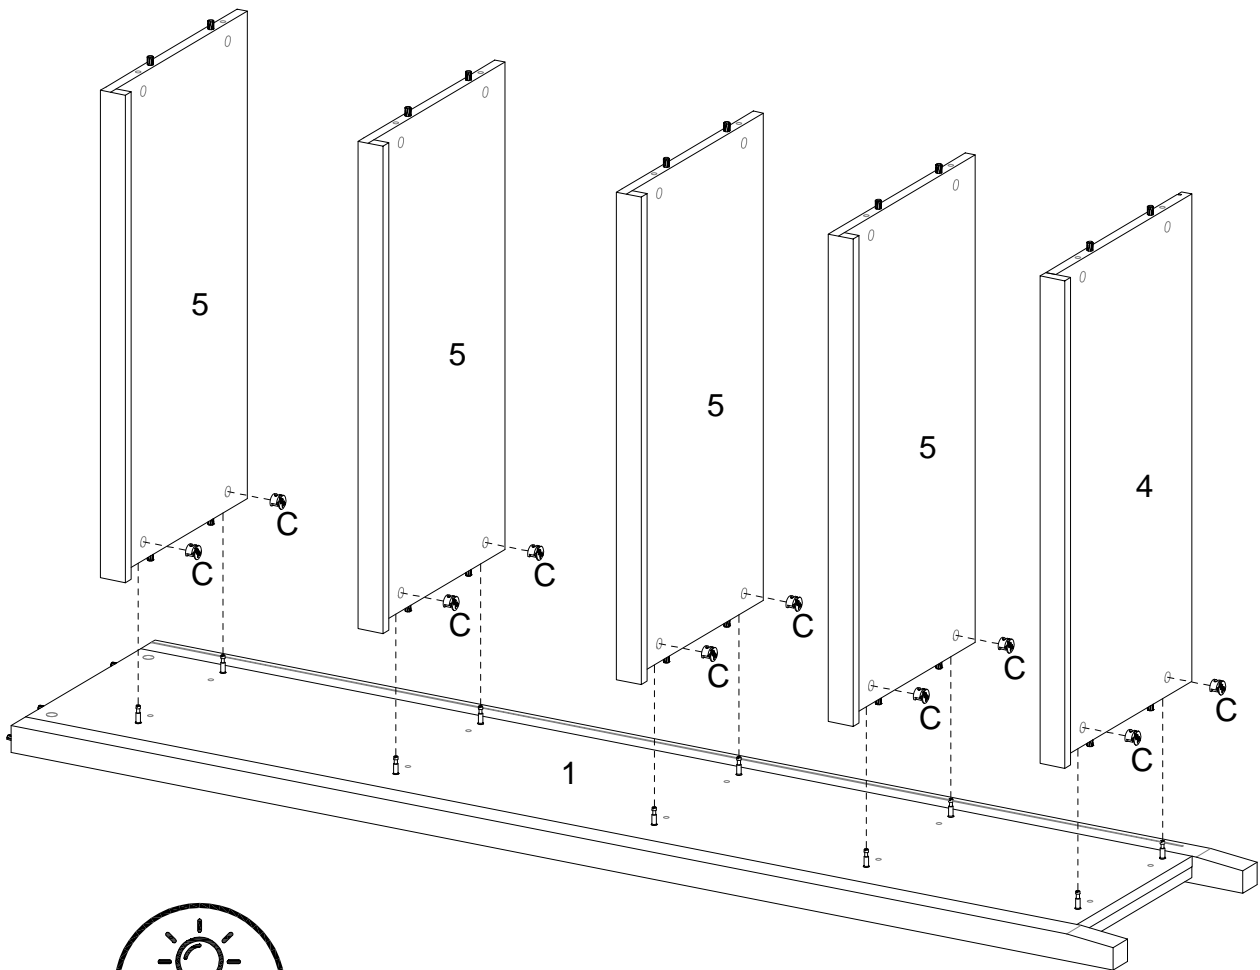


Tip

Cam Locks


Cam Locks help securely join two pieces together. Follow these easy steps.

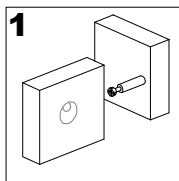

1: Insert Cam Bolt into bolt holes on the flat side. Don't over tighten!

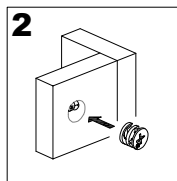


2: Fit the proper holes on the edge of the other part over the Cam Bolts. You should be able to see the cam bolts through the larger hole on the side.

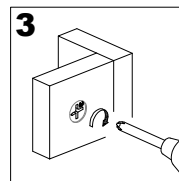

3: On the back of the Cam Lock will be a "C" shape. Insert the Cam Lock so the opening of the "C" fits over the Cam Bolt. Tighten with the screwdriver.


Step 5

Attach Right Panel (2) to Shelf Panels (5) and (4). Secure with Cam Locks (C) and tighten with a screwdriver.

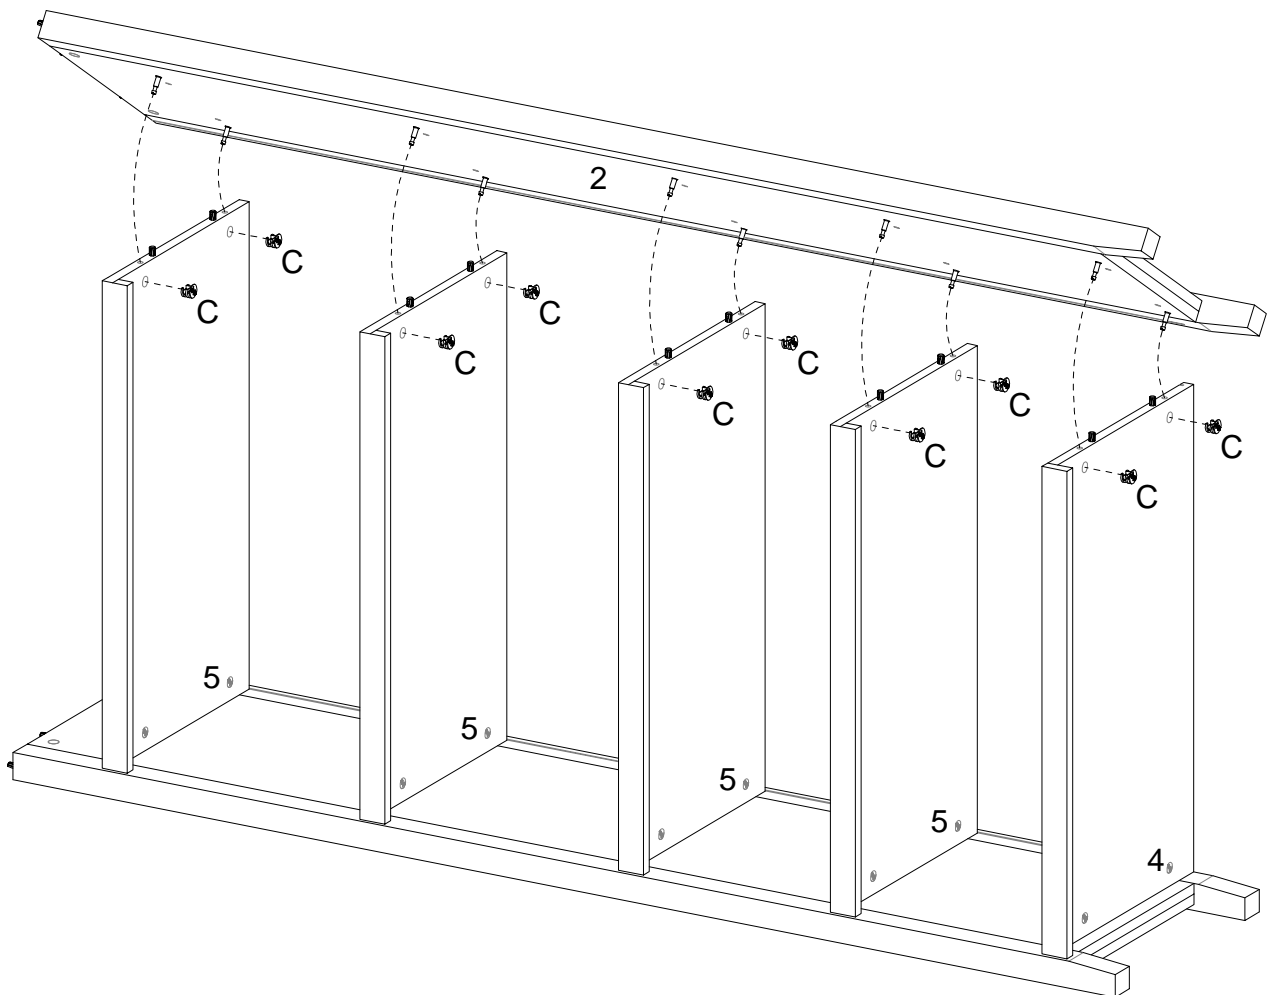


Step 6

Unfold the Upper Back Panel (6) and Lower Back Panel (7). Starting with the Lower Back Panel (7), slide into place using the grooves. Ensure that it fits securely into the bottom groove, and then slide the Upper Back Panel (6) into place.

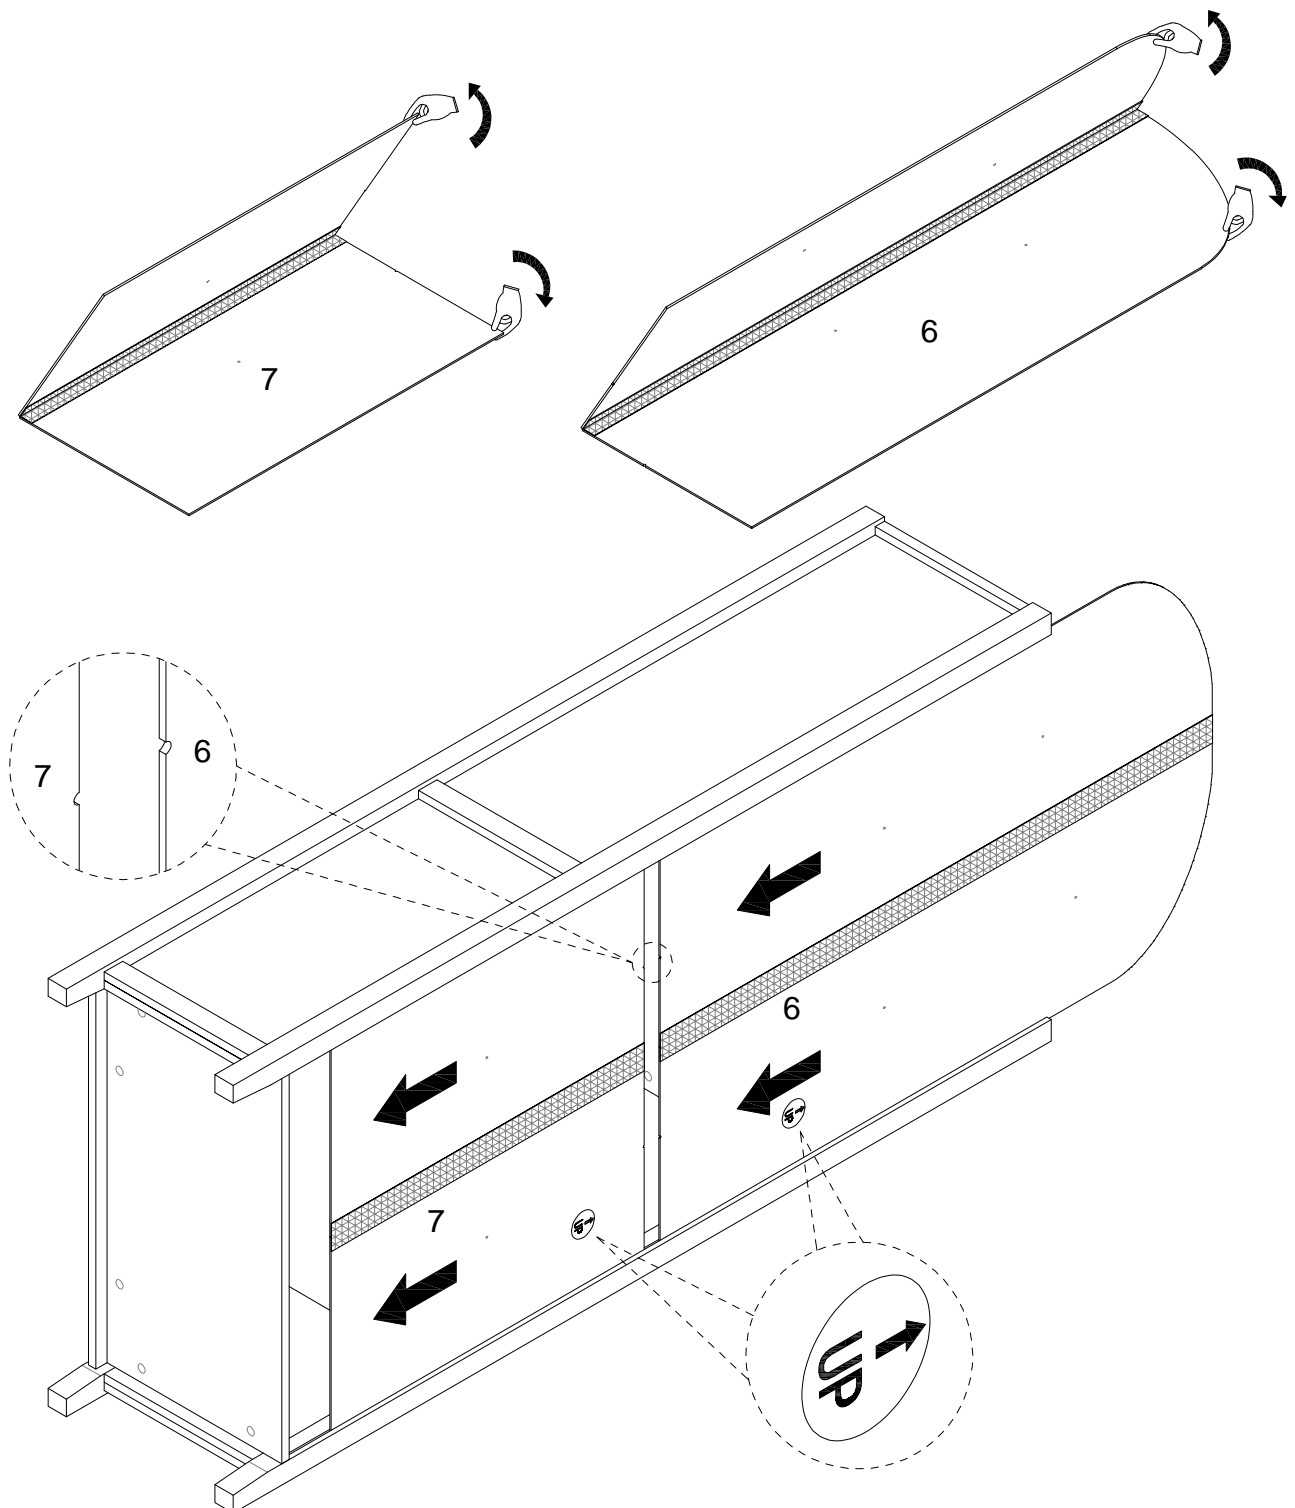


Step 7

Secure the Back Panels by screwing 14mm Screws (F) into the pre-drilled holes.

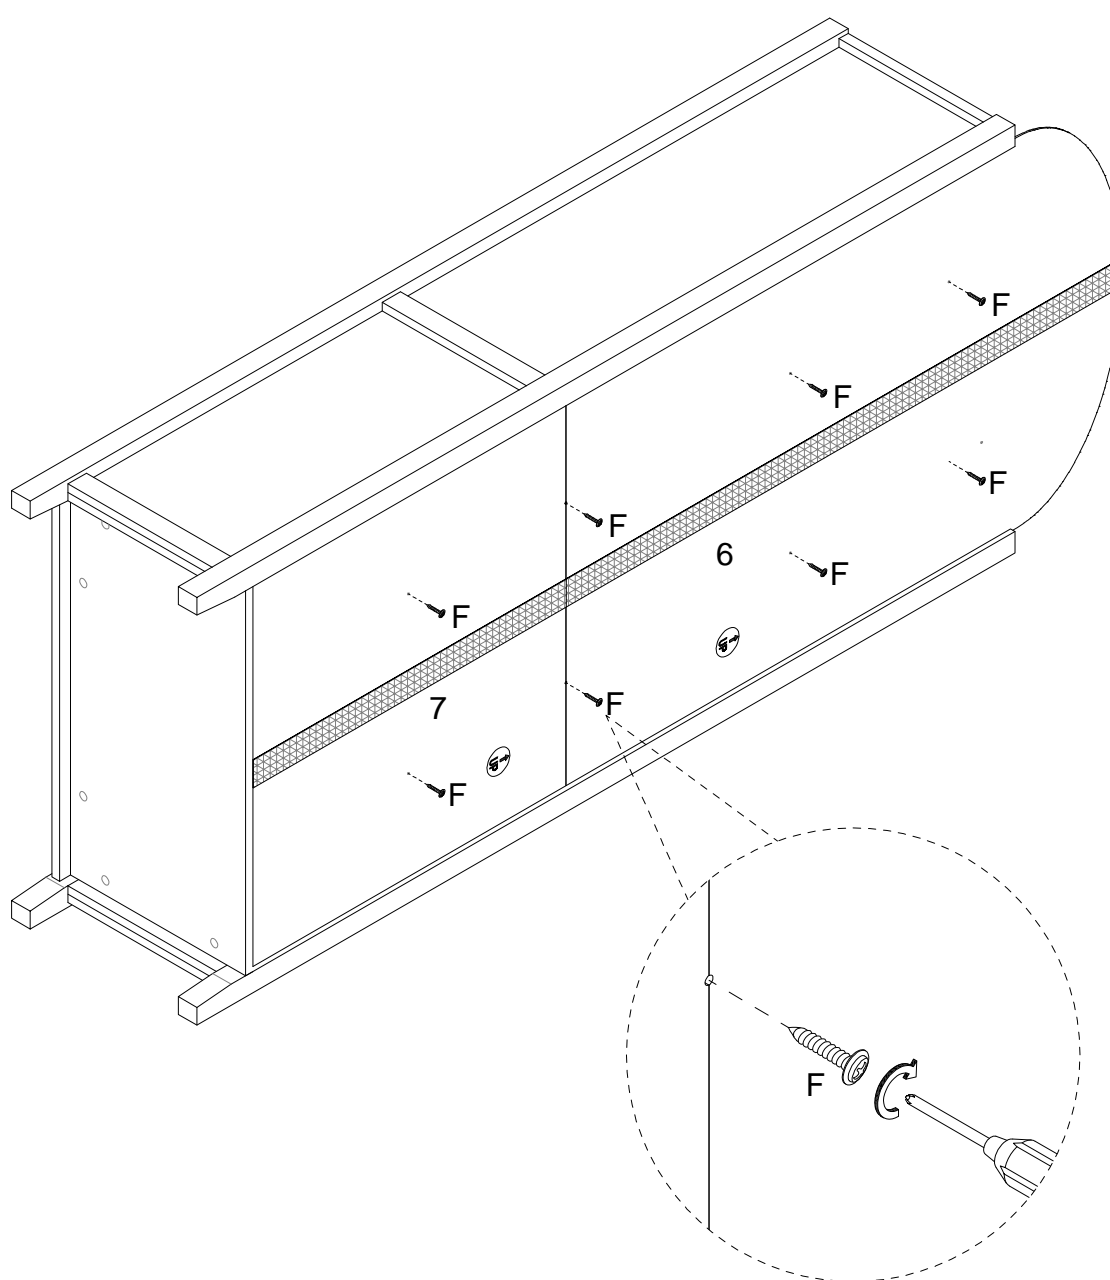


Step 8

With the help of a friend, flip the bookcase upright. Place the Top Arched Panel (3) on top and secure with Cam Locks (C).

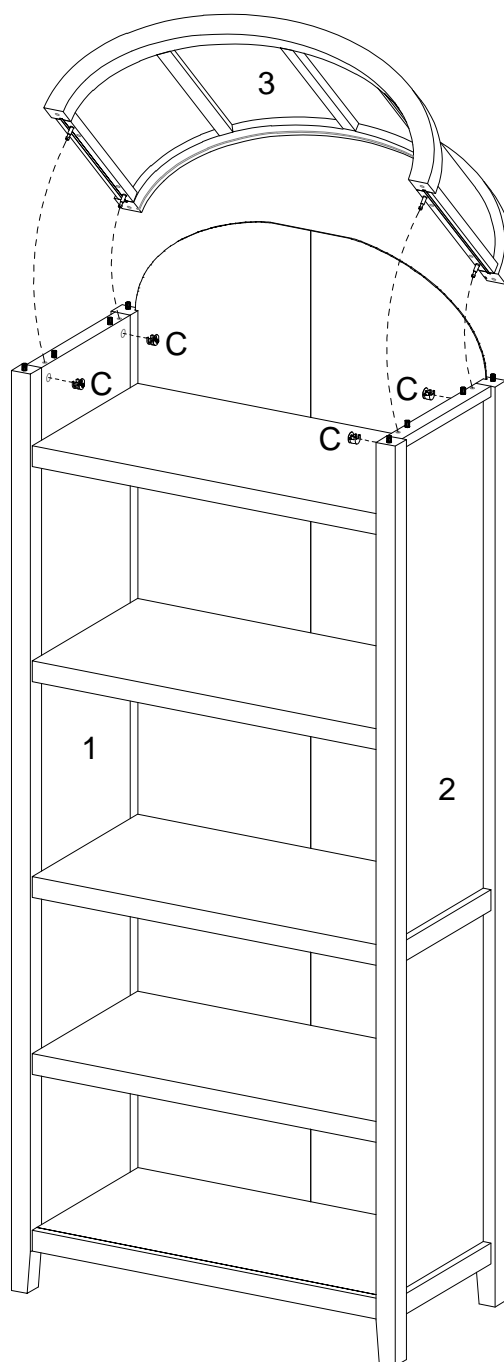


Step 9

Evenly space the Plastic Wedges (D) throughout by inserting into the space between the Side Panels and the Back Panels. Secure the wedges into place using 17mm Screws (E).

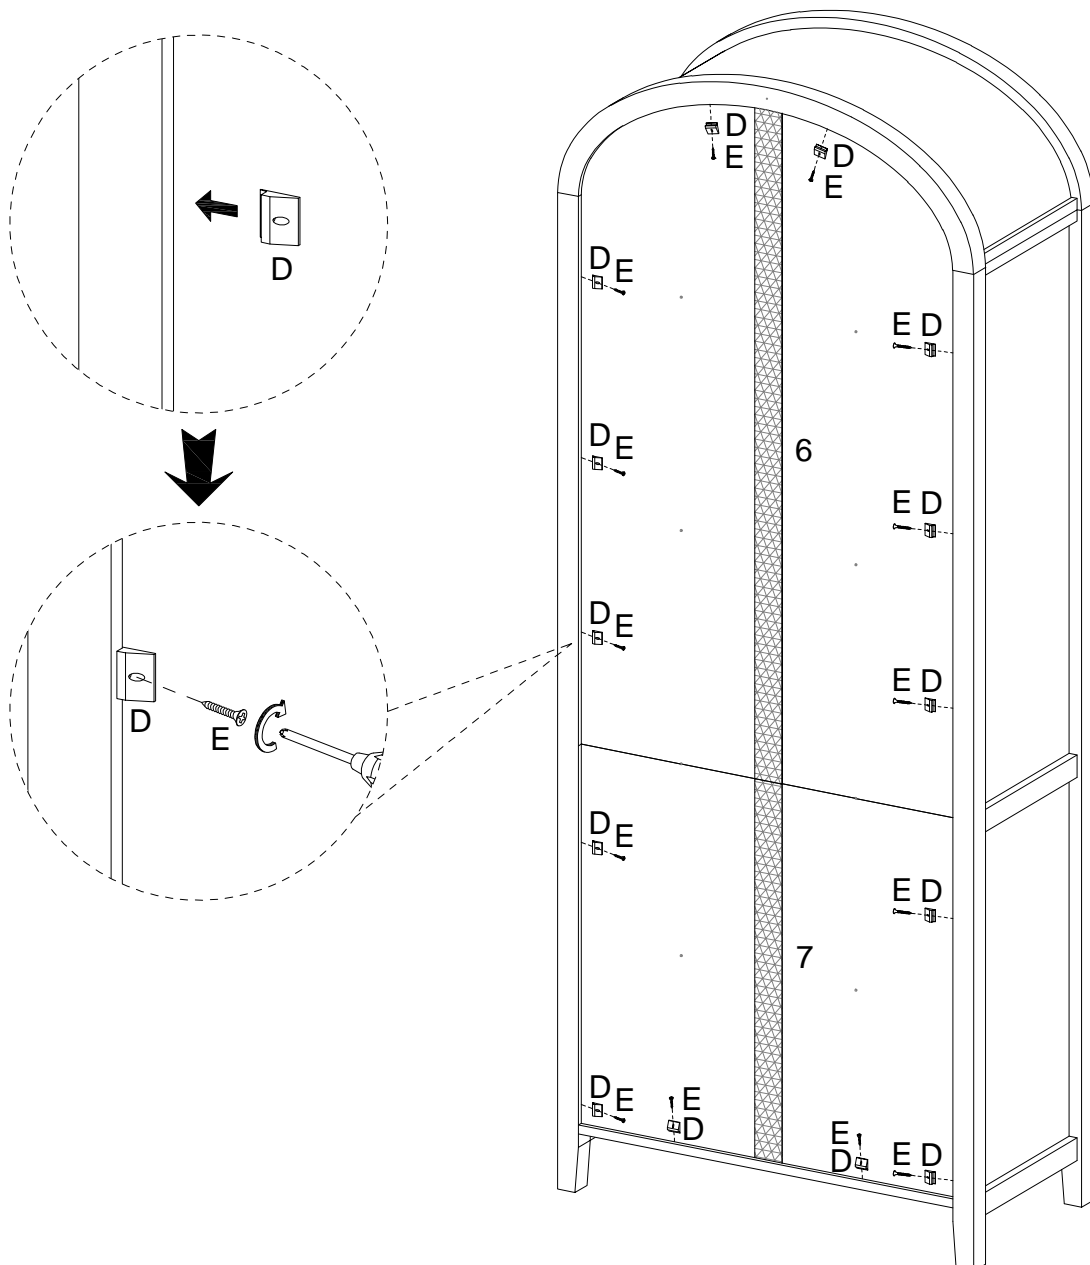


Step 10

Cover all of the visible screw holes with the Stickers (L).

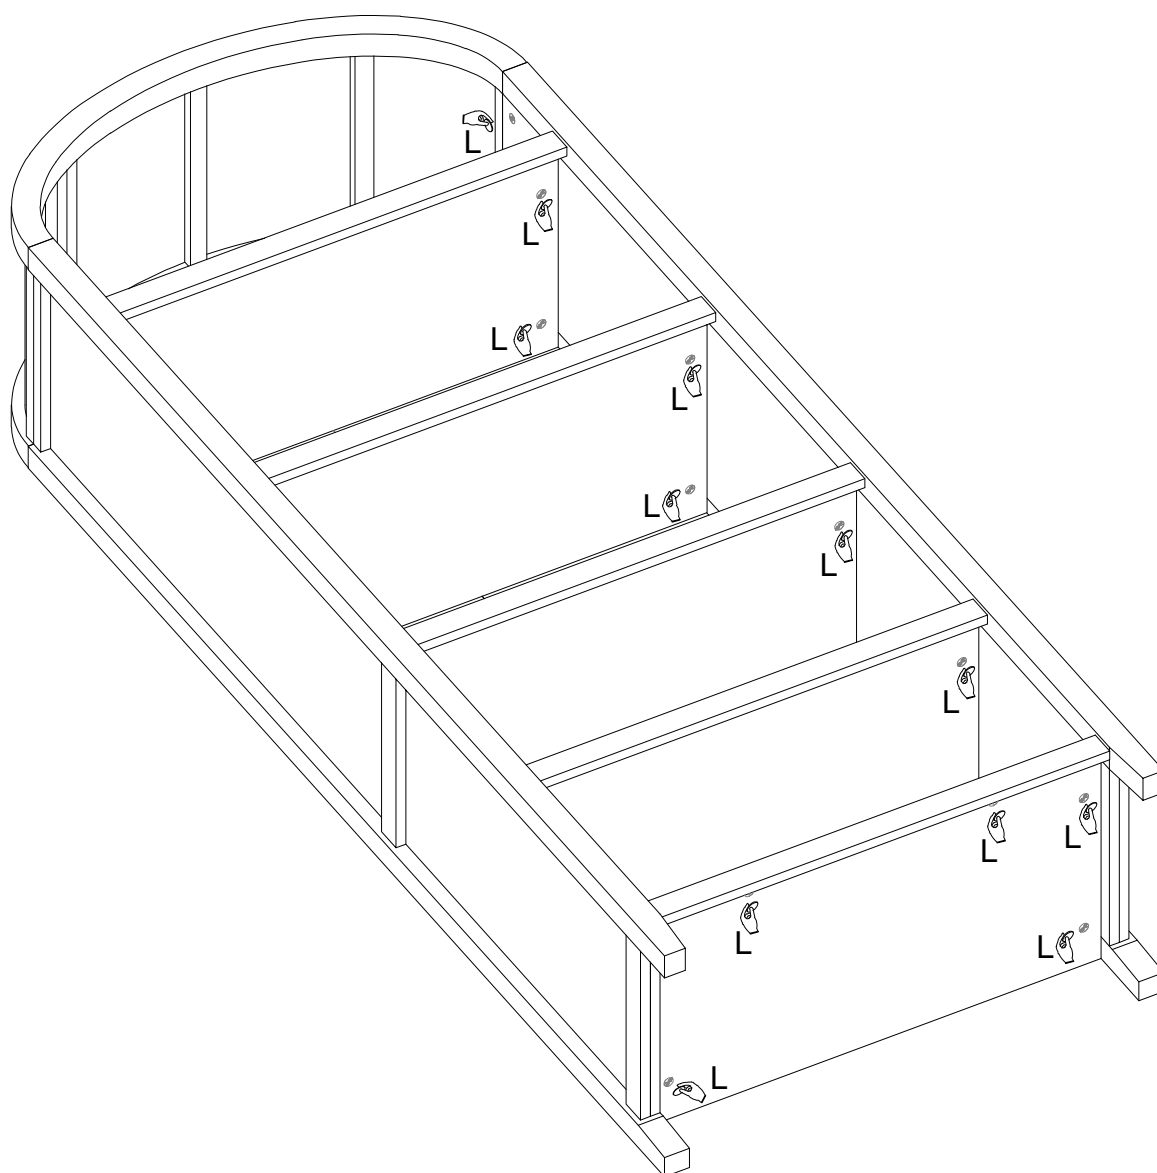



Step 11

Let's secure your bookcase to the wall. Attach your Plastic Strip (K) to your bookcase using the 12mm Screw (H).

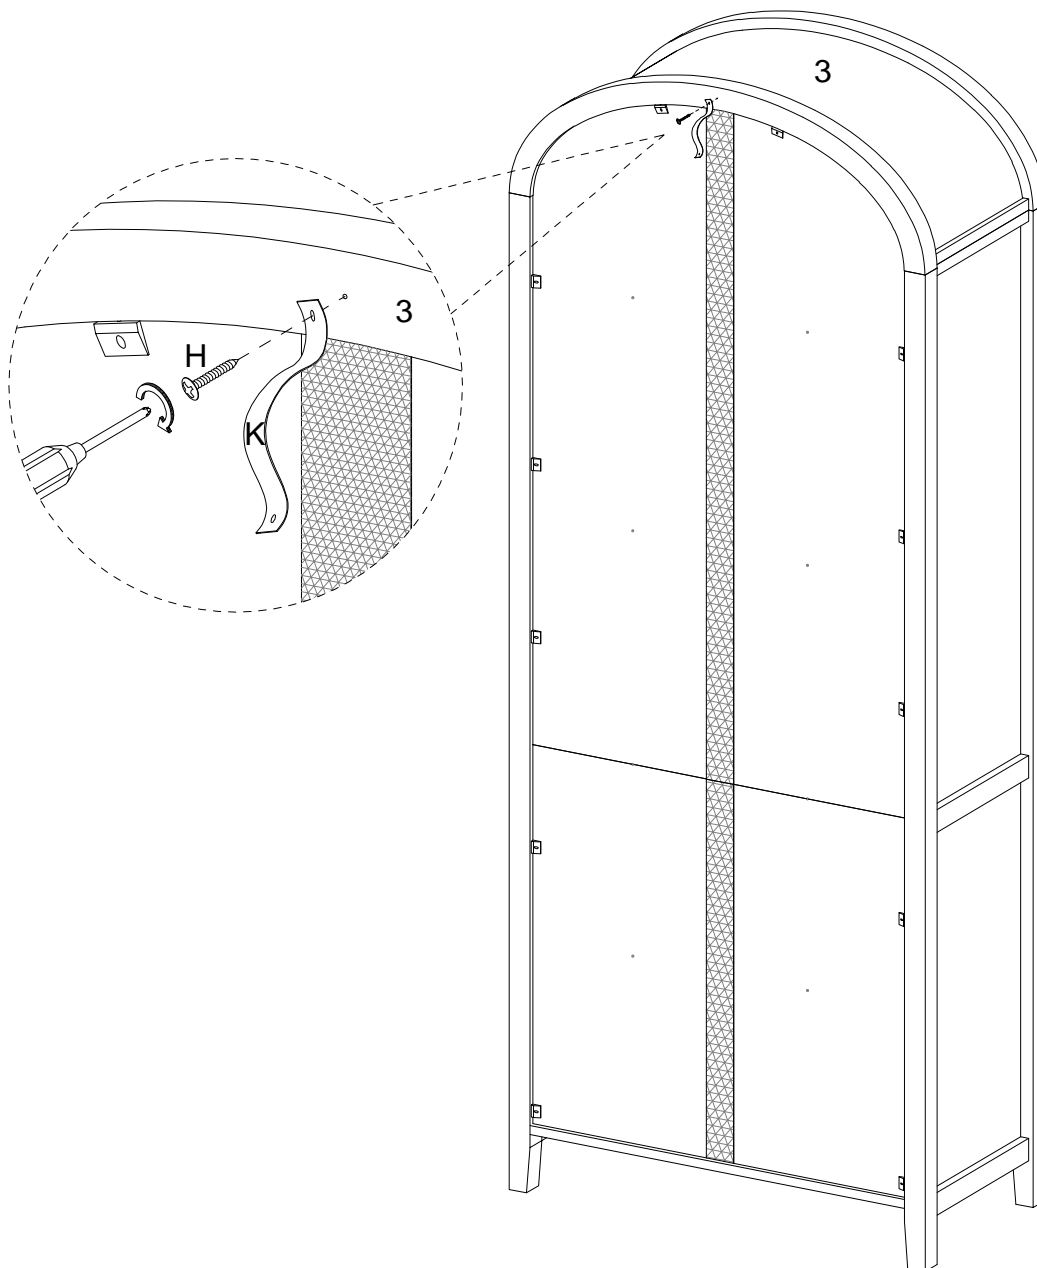

Step 12


Insert the Wall Anchor (J) into the wall. Next, secure your Plastic Strip (K) to the wall using the 25mm Screw (G).
Way to go! You did it!

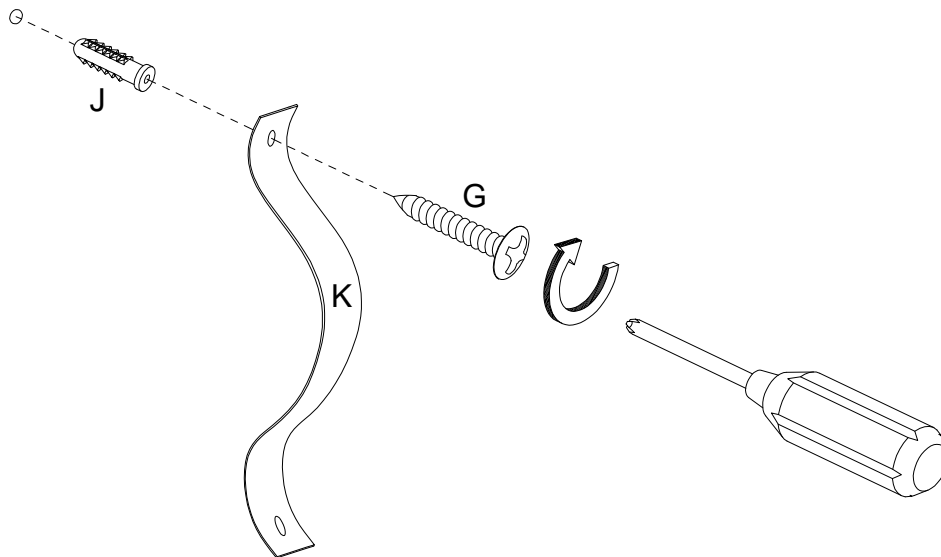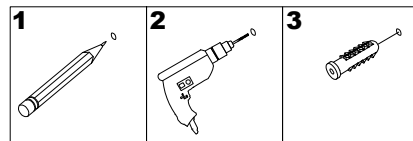

Warning

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

Final Assembly

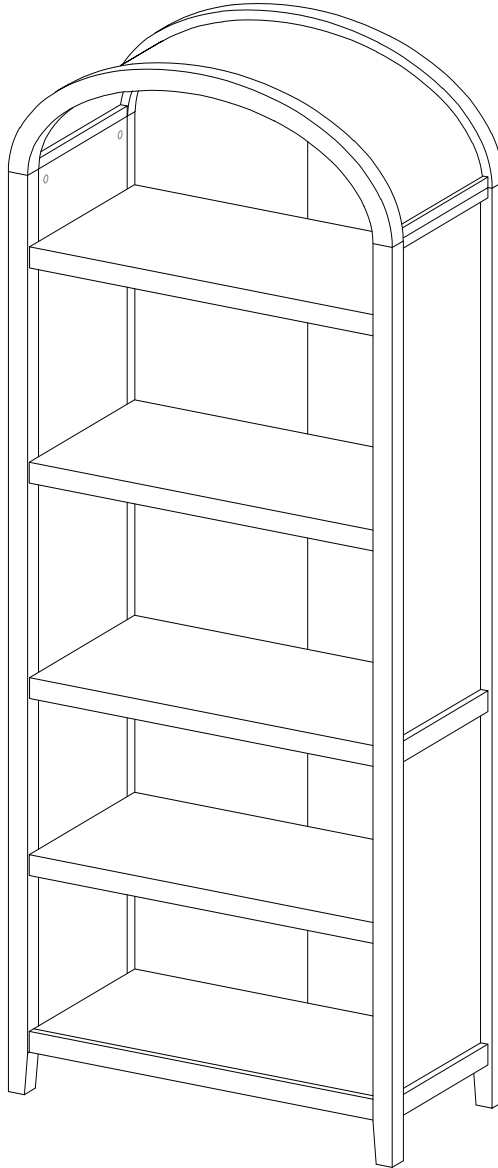

Congratulations on your new piece of furniture!