

## **BAR CHAIR**

### **ASSEMBLY INSTRUCTION**



# Assembly Instruction

## ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.please check to see that all hardware and parts are present prior to start of assembly.
- 3.please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.










## Warning I









- 1.Don't attempt to repair or modify parts that are broken or defective. please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

## PARTS IDENTIFICATION:

Z

## HARDWARE PACKAGE:


A . RIGHT LEG		2 PCS
B . LEFT LEG		2 PCS
C . SIDE CROSS BAR		4 PCS
D . FRONT CROSS BAR		2 PCS
E . CUSHION		2 PCS
F . BACK PANEL		2 PCS
G . DUST COVER		2 PCS

NO	DESCRIPTION	FIGURE	QTY
1	BOLT-SMALL		4 PCS
2	BOLT-MIDDLE		8 PCS
3	BOLT-LARGE		8 PCS
4	LOCK WASHER		20 PCS
5	FLAT WASHER		20 PCS
6	ALLEN WRENCH		1 PC
7	SCREW		12 PCS
8	WOODEN DOWEL		2 PCS

# Assembly Instruction


## STEP 1

Compose the RIGHT LEG/LEFT LEG and FRONT CROSS BAR as a LEG frame and use SCREW to fix them together by ALLEN WRENCH.

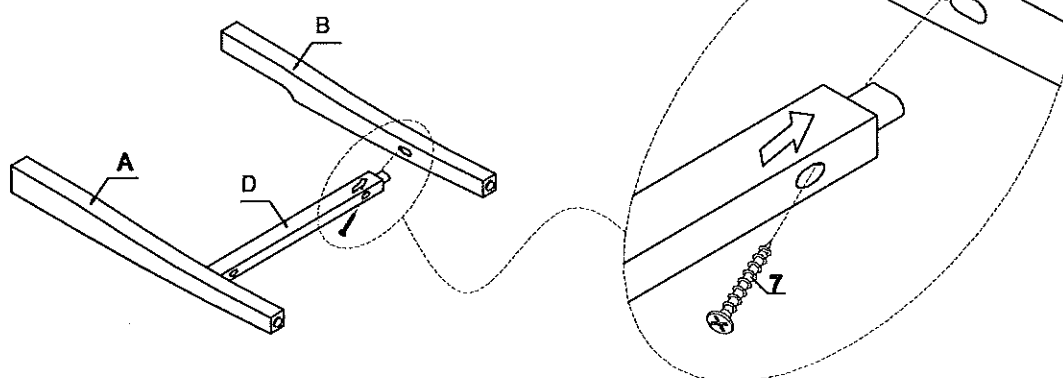

## STEP 2


Combine the FRONT LEGS and CUSHION together. Use FLAT WASHER, LOCKWASHER and BOLT-MIDDLE, fasten by ALLEN WRENCH.

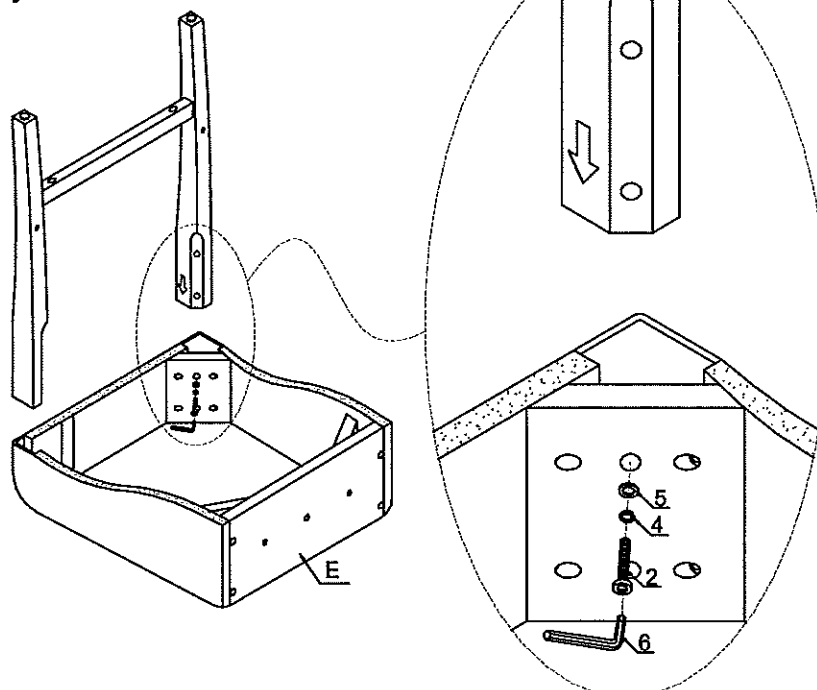

# Assembly Instruction


## STEP 3

Insert the **SIDE CROSS BAR** on **LEG** frame and fasten **SCREW** to fix together.

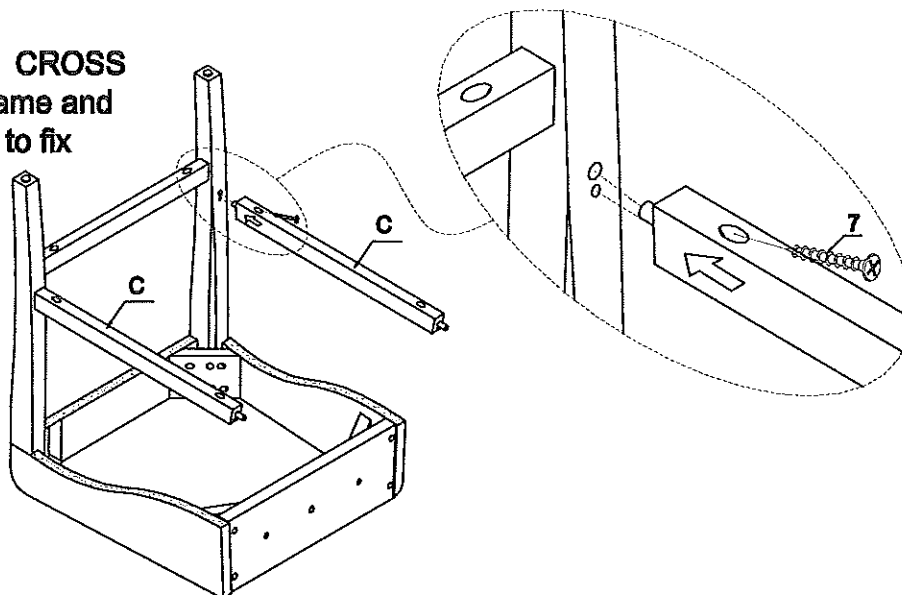

## STEP 4


Combine the **FRONT LEGS** and **CUSHION** together. Use **FLAT WASHER**, **LOCKWASHER** and **BOLT-MIDDLE**, fasten by **ALLEN WRENCH**.

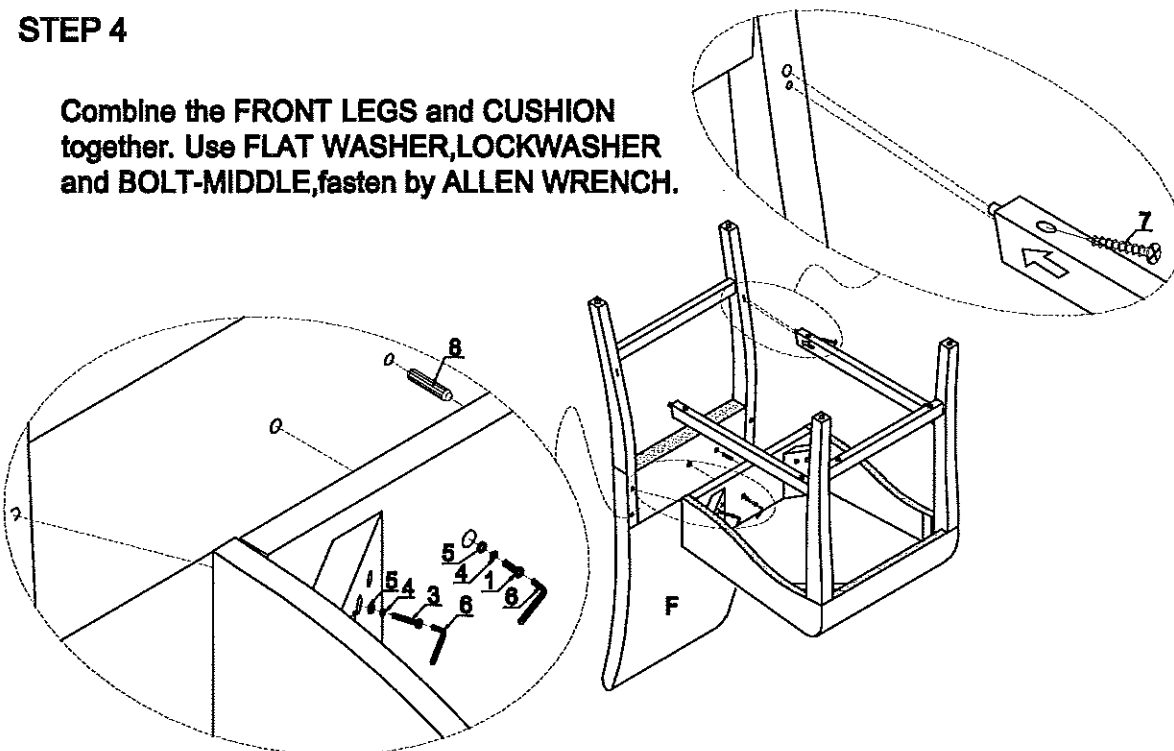

# Assembly Instruction

## STEP 5

Put on the DUST COVER  
underneath the CUSHION.

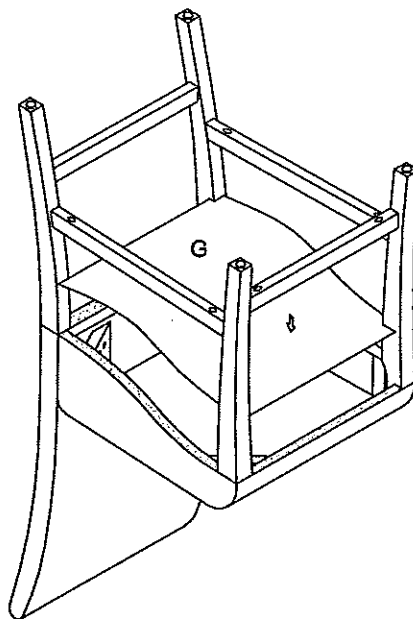

## STEP 6

Assembly complete.

