


# GLOBAL PROCUREMENT AND MARKETING LIMITED

## Batley Medium Radiator Cover

Assembly Instructions – Please keep for future reference

RADBATMWT

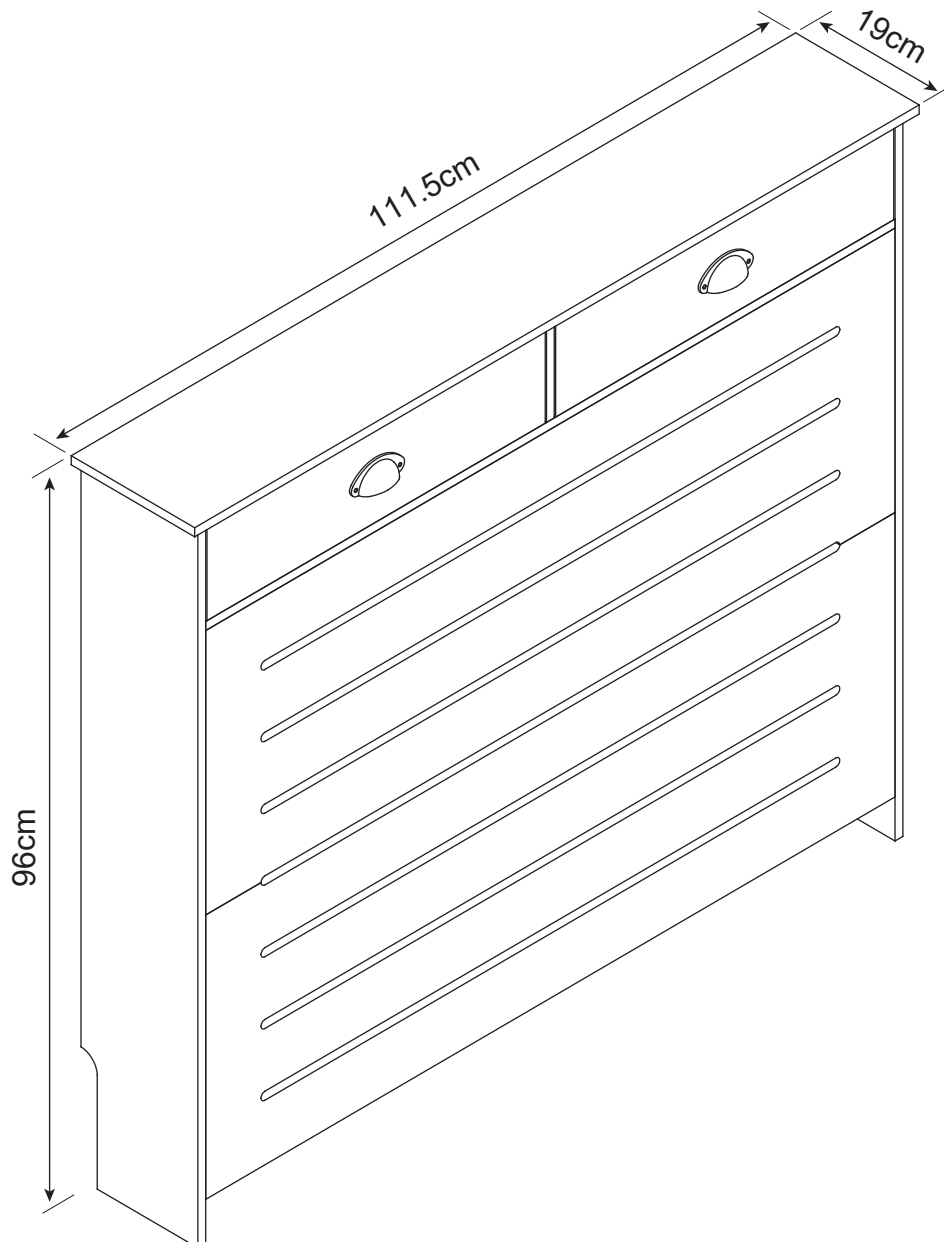

| Dimensions      | No. people | Assembly Time     | SKU #     |
|-----------------|------------|-------------------|-----------|
| Width: 111.5 cm |            | 45 mins (approx.) | RADBATMWT |
| Depth: 19 cm    |            |                   |           |
| Height: 96 cm   |            |                   |           |

*thank you*

For purchasing this  
**GPM Limited**  
product

### Important

- PLEASE READ THESE INSTRUCTIONS FULLY BEFORE STARTING ASSEMBLY
- PLEASE DO NOT THROW THE PACKAGING AWAY UNTIL YOU ARE SATISFIED WITH PURCHASE, GOODS NEED TO BE RETURNED IN ORIGINAL PACKAGING.

If you need help or have damaged or missing parts, please email [aftersales@gpmfurniture.co.uk](mailto:aftersales@gpmfurniture.co.uk)

## Safety and Care Advice

### Important

- PLEASE READ THESE INSTRUCTIONS FULLY BEFORE STARTING ASSEMBLY
- PLEASE DO NOT THROW THE PACKAGING AWAY UNTIL YOU ARE SATISFIED WITH PURCHASE, GOODS NEED TO BE RETURNED IN ORIGINAL PACKAGING.

- Check you have all the components and tools listed on pages 4 and 5.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.




### Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

If kept outside please ensure in the winter months that the product is correctly covered or put away into a dry environment to prevent corrosion, weathering or damage.


If your product is not designed to be outside, we recommend that it is always kept indoors in a dry environment.

### SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

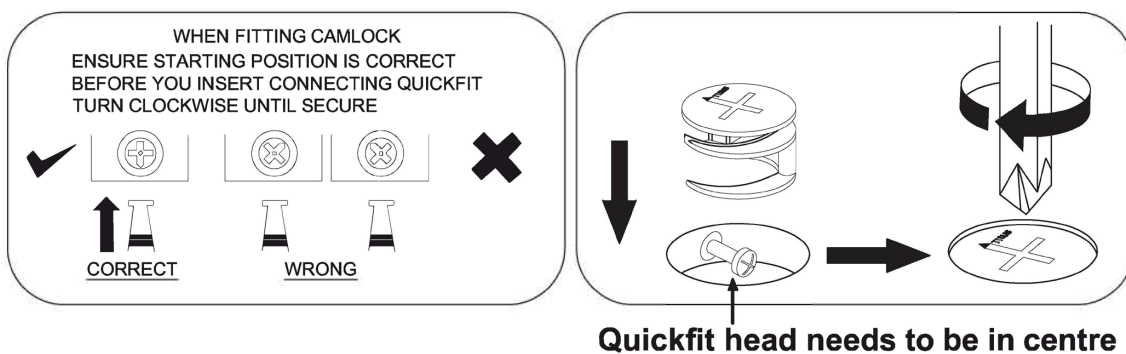

#### QUICKFIT


Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

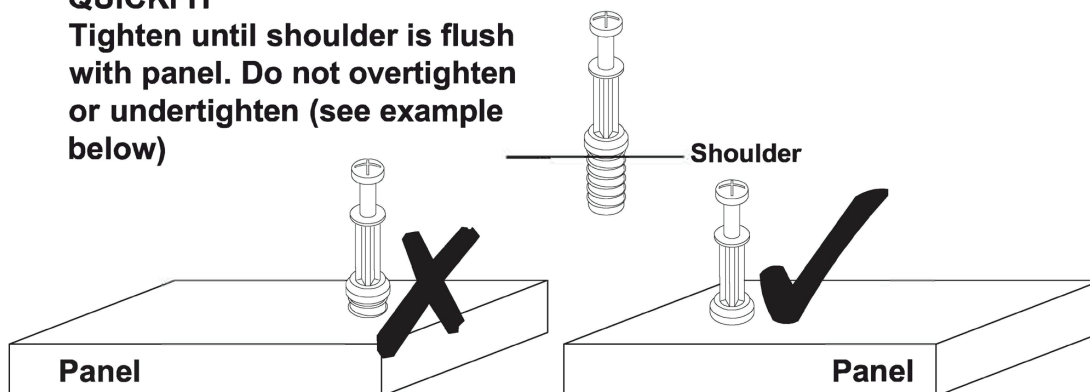

If you are unhappy with the product and wish to return it, please follow the retailer's returns procedure.

# Exploded View

If you have damaged or missing components,  
email: [aftersales@gpmfurniture.co.uk](mailto:aftersales@gpmfurniture.co.uk)

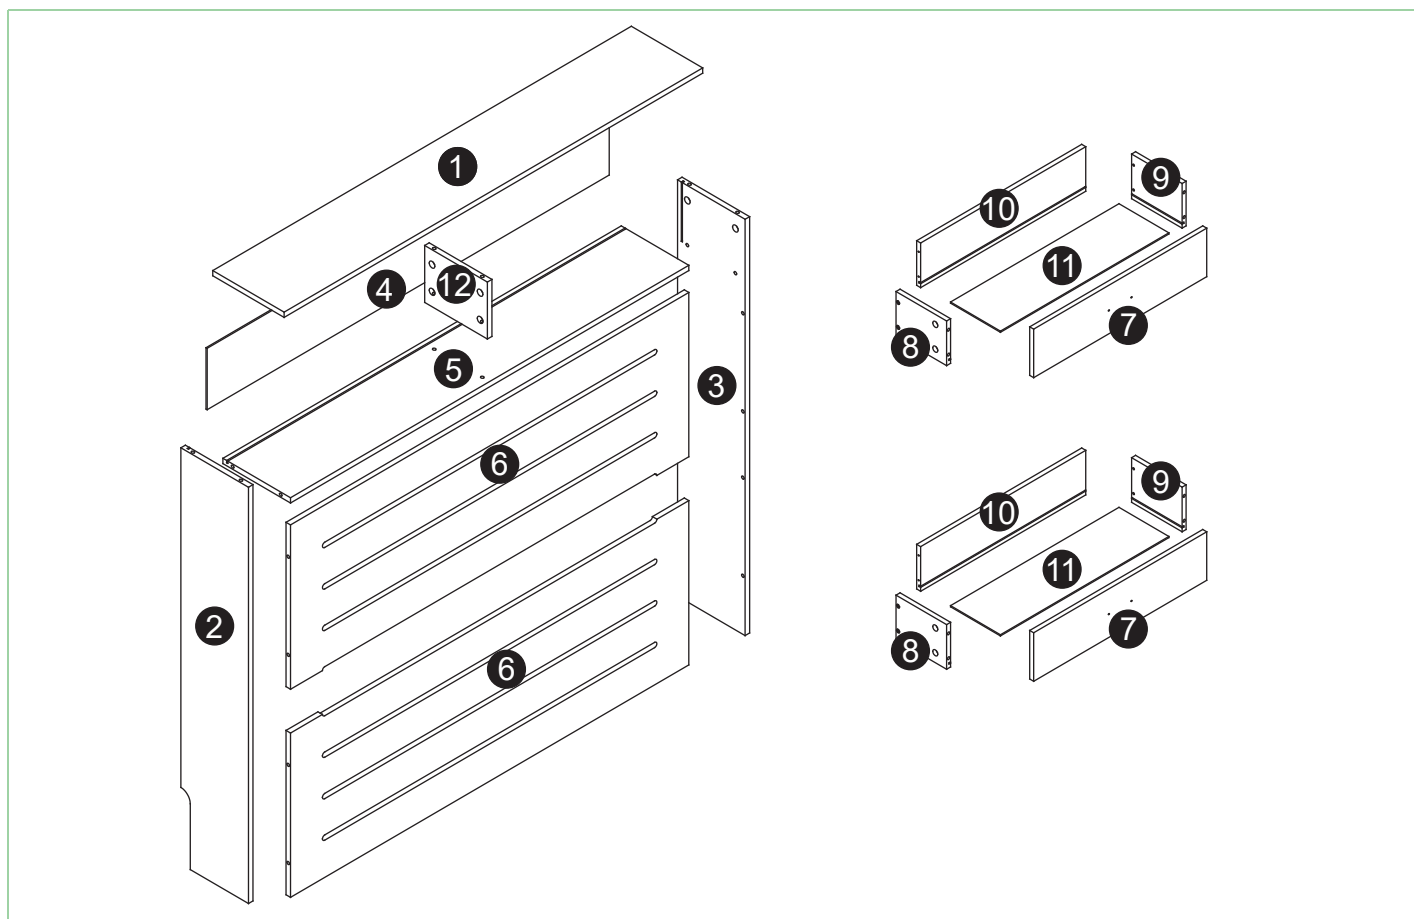

## Components - Panels

Please check that you have all the components listed below before constructing your item.

| Part No | Description         | Qty | Size (mm) | Thickness (mm) |
|---------|---------------------|-----|-----------|----------------|
| 1       | TOP PANEL           | 1   | 1115x190  | 12             |
| 2       | LEFT PANEL          | 1   | 950x180   | 12             |
| 3       | RIGHT PANEL         | 1   | 950x180   | 12             |
| 4       | TOP BACK PANEL      | 1   | 1069x138  | 3              |
| 5       | TOP BOTTOM PANEL    | 1   | 1061x180  | 12             |
| 6       | FRONT PANEL         | 2   | 1061x375  | 12             |
| 7       | DRAWER FRONT PANEL  | 2   | 520x124   | 12             |
| 8       | DRAWER SIDE PANEL   | 2   | 152x115   | 12             |
| 9       | DRAWER SIDE PANEL   | 2   | 152x115   | 12             |
| 10      | DRAWER BACK PANEL   | 2   | 496x115   | 12             |
| 11      | DRAWER BOTTOM PANEL | 2   | 502x146   | 3              |
| 12      | VERTICAL SHELF      | 1   | 164x130   | 12             |

**Important** – Please read these instructions fully before starting assembly









If you need help or have damaged or missing parts, please email [aftersales@gpmfurniture.co.uk](mailto:aftersales@gpmfurniture.co.uk)

# Components - Fixings


If you have damaged or missing components,  
email: [aftersales@gpmfurniture.co.uk](mailto:aftersales@gpmfurniture.co.uk)

**Please check that you have all the components listed below before constructing your item.**


**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
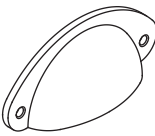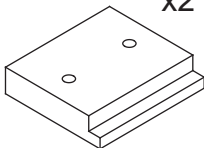
|     |                                                                                                            |     |                                                                                                      |     |                                                                                                        |     |                                                                                                               |
|-----|------------------------------------------------------------------------------------------------------------|-----|------------------------------------------------------------------------------------------------------|-----|--------------------------------------------------------------------------------------------------------|-----|---------------------------------------------------------------------------------------------------------------|
| (A) | CAM lock dowel<br>x28<br> | (B) | CAM lock<br>x28<br> | (C) |  x2                  | (D) | Screw<br>x6<br><br>M3x12mm |
| (E) | Screw<br>x8<br>           | (F) |  x2                 | (G) | Wood block<br>x2<br> | (H) | Screw<br>x4<br>            |
| (I) | Wall anchor<br>x4<br>    |     |                                                                                                      |     |                                                                                                        |     |                                                                                                               |

## Tools Required



**Ruler** – Use this to measure your screws (mm)

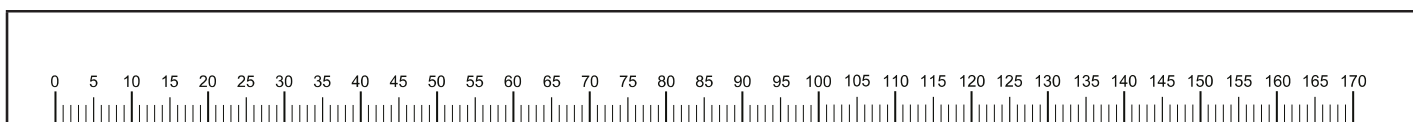

**Important** – Please read these instructions fully before starting assembly



If you need help or have damaged or missing parts, please email [aftersales@gpmfurniture.co.uk](mailto:aftersales@gpmfurniture.co.uk)

# Assembly Instructions


If you have damaged or missing components,  
email: [aftersales@gpmfurniture.co.uk](mailto:aftersales@gpmfurniture.co.uk)

01

Ex8

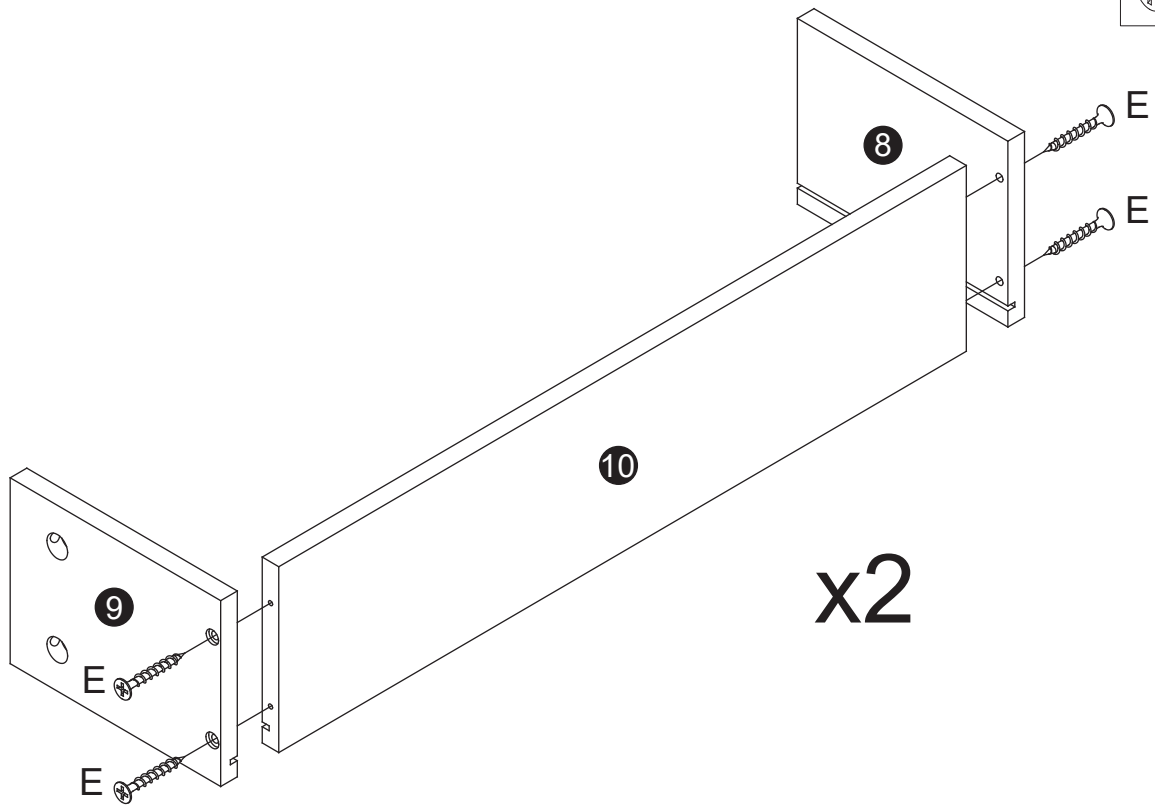


02

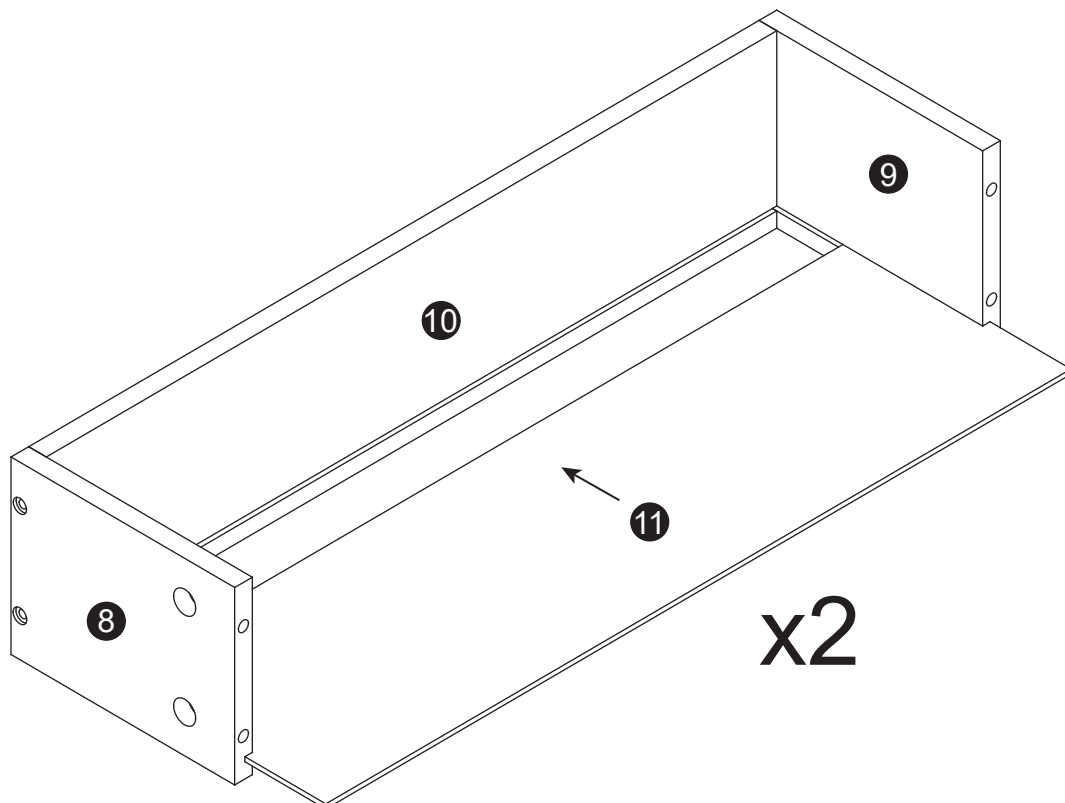


03

Ax8



Bx8


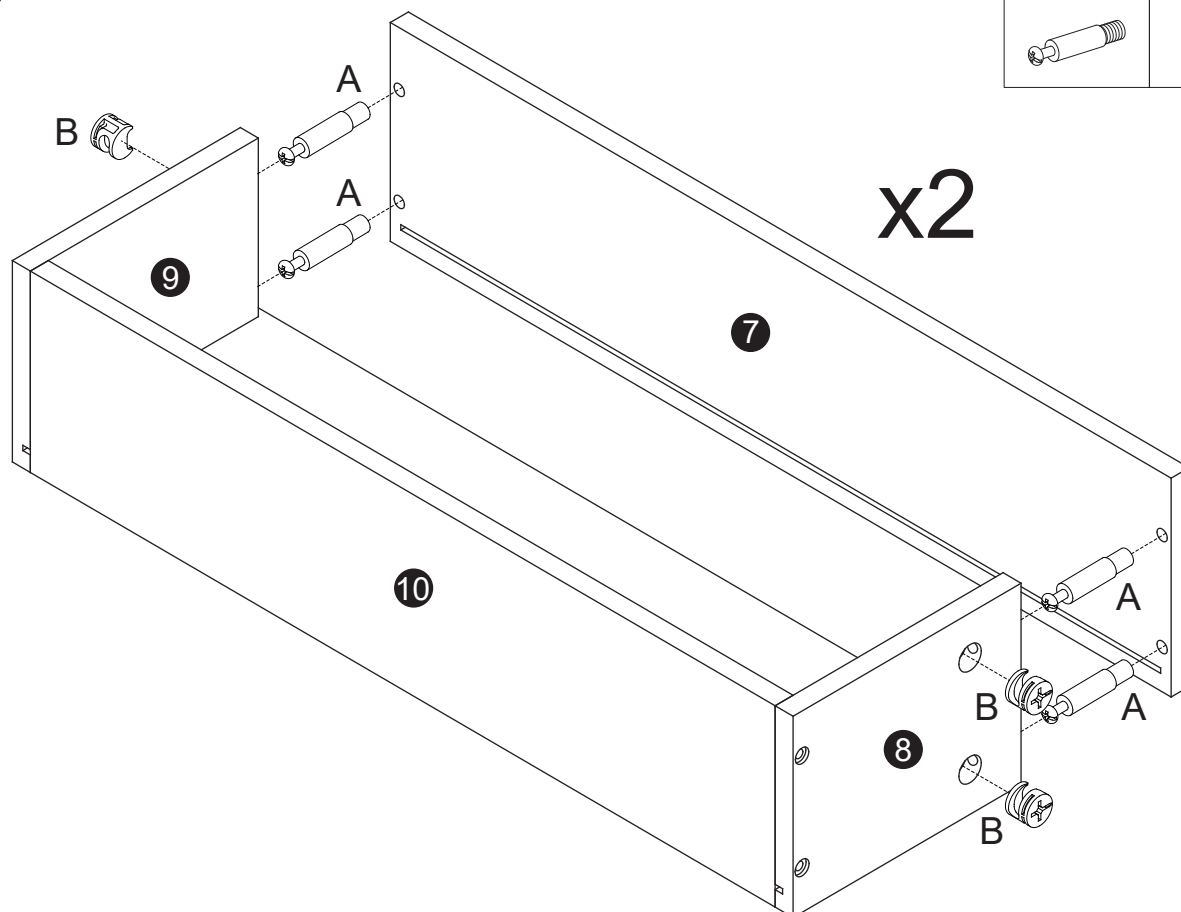


04


Dx4




Fx2

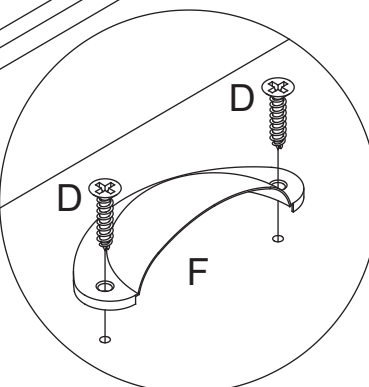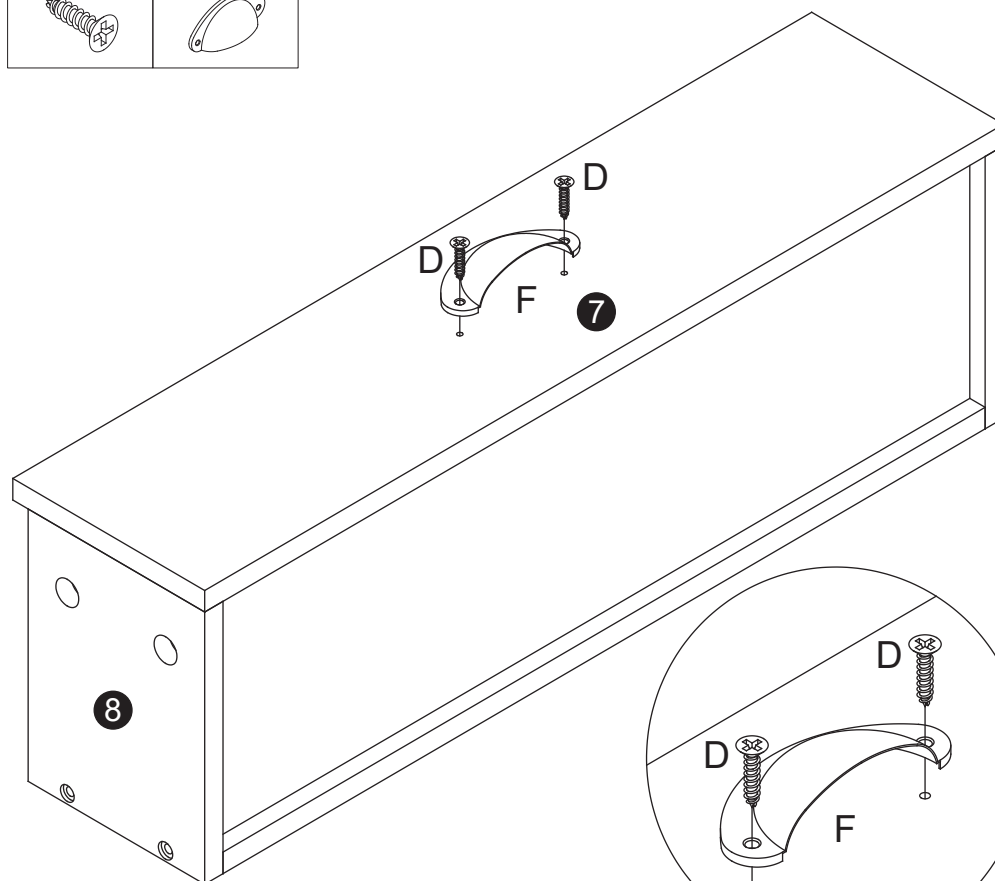

05

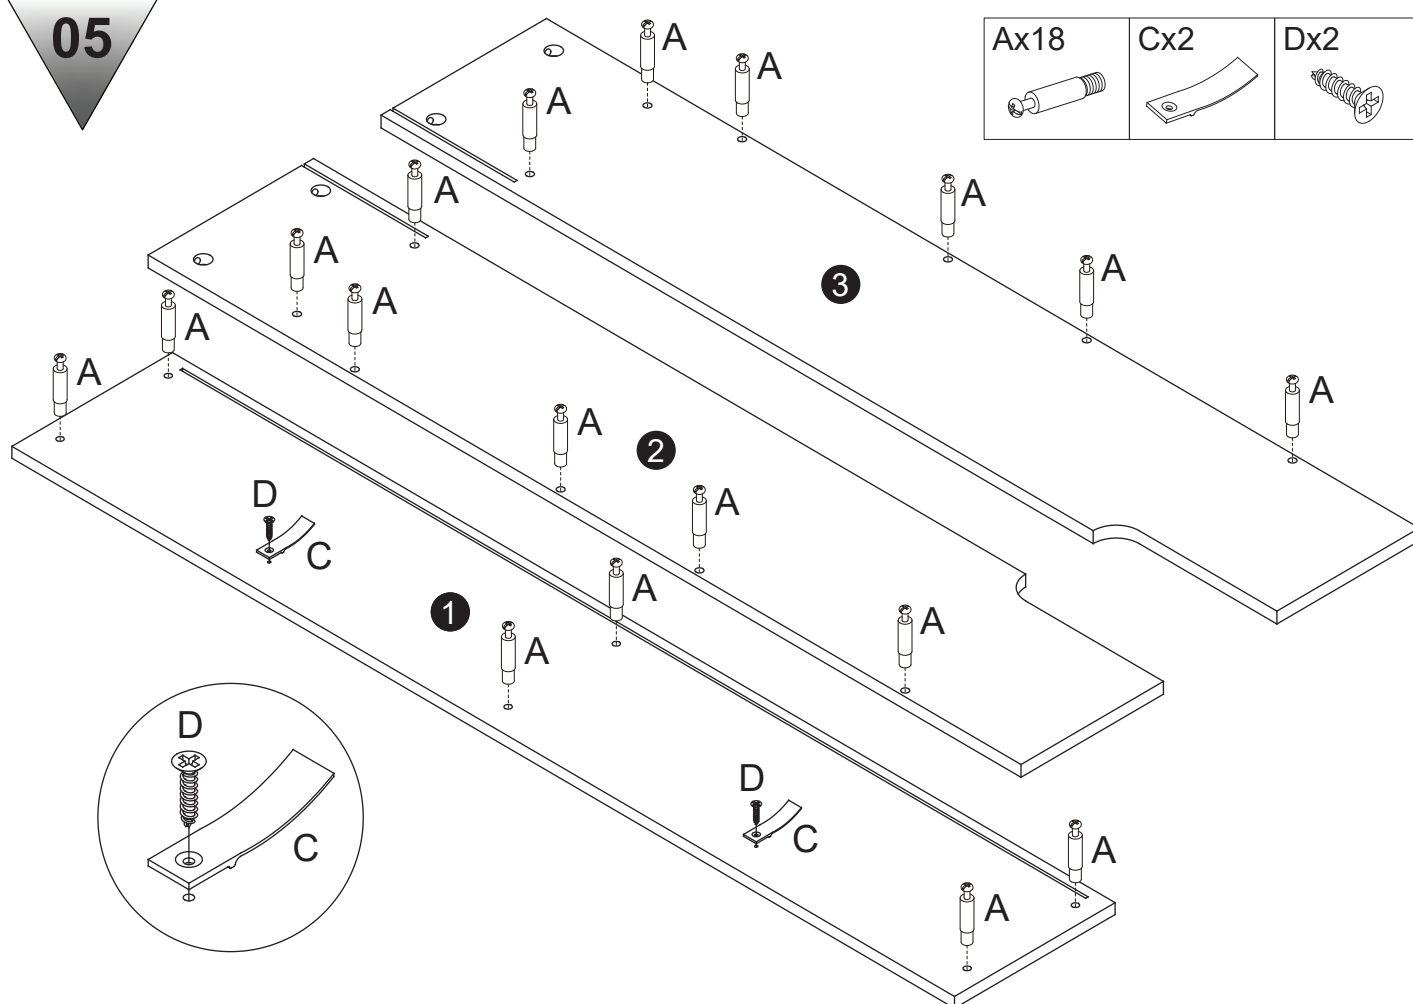


06

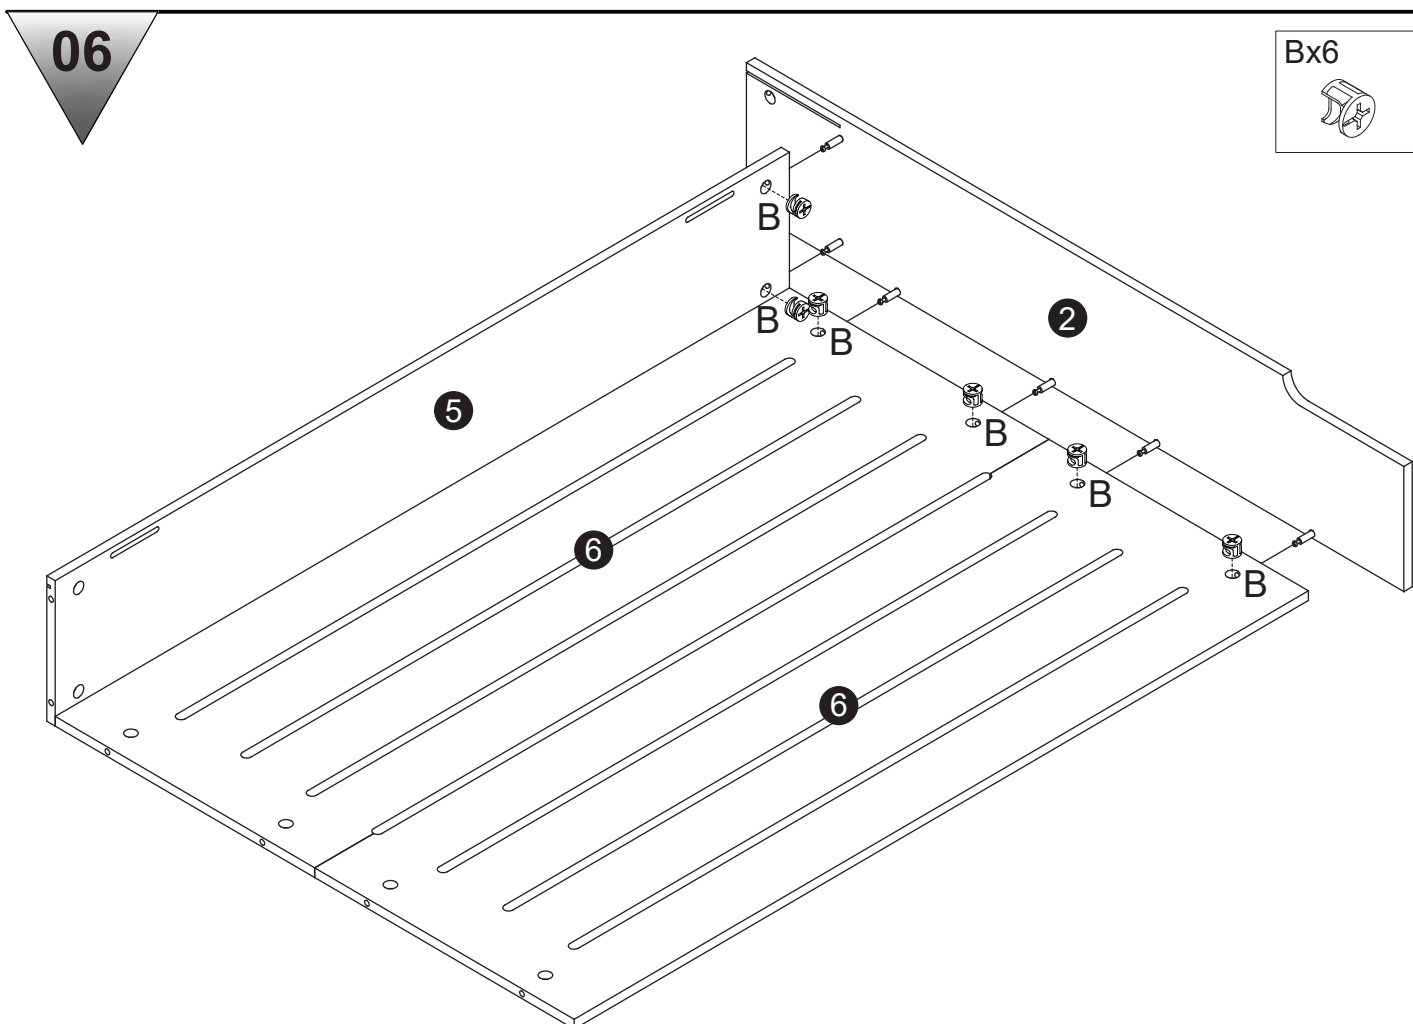

07



Bx6

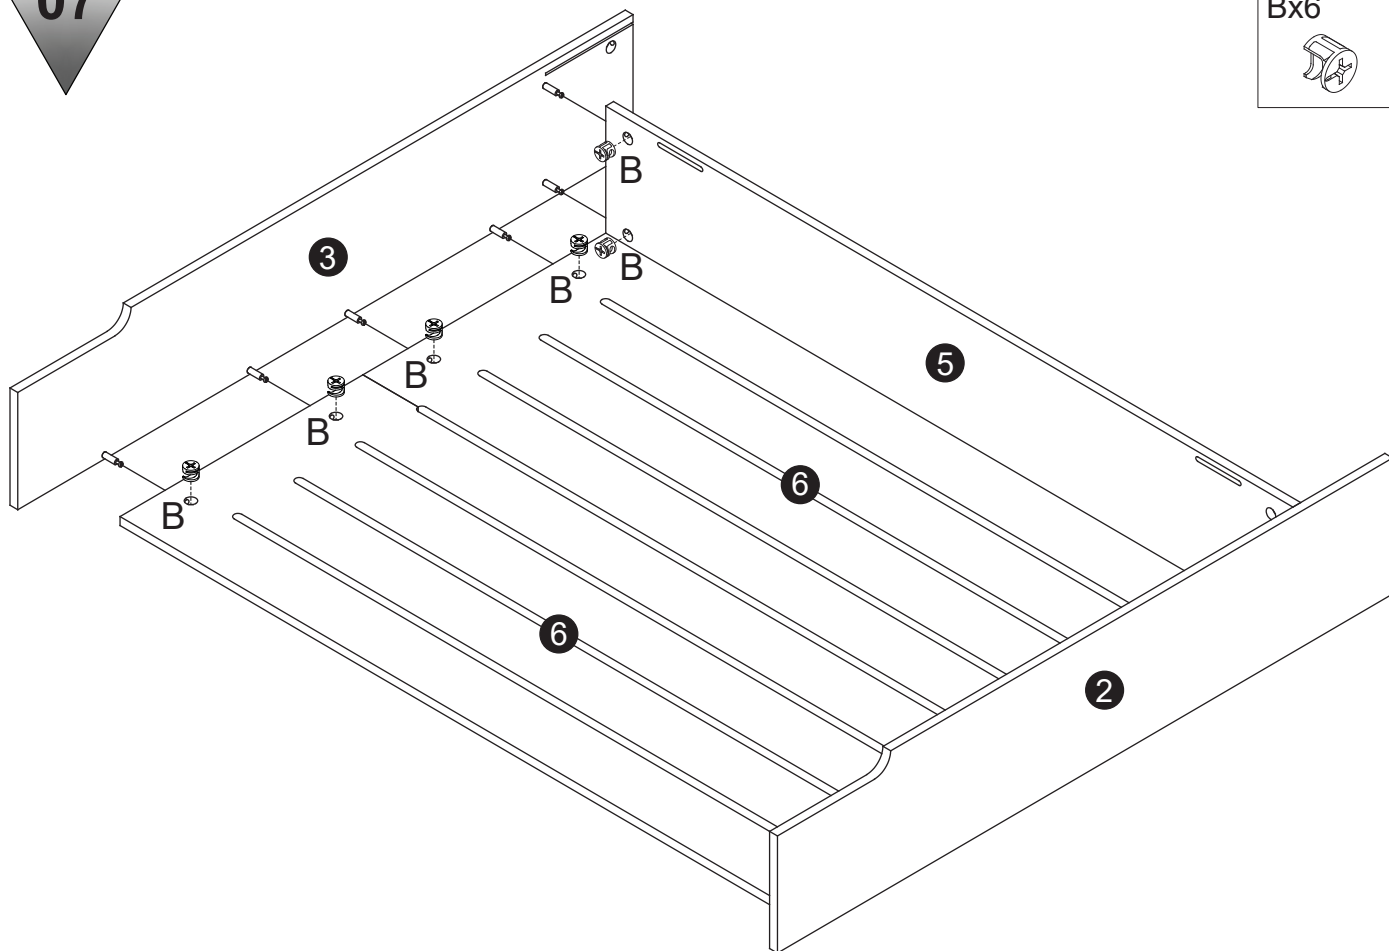

08


Ax2

Bx2

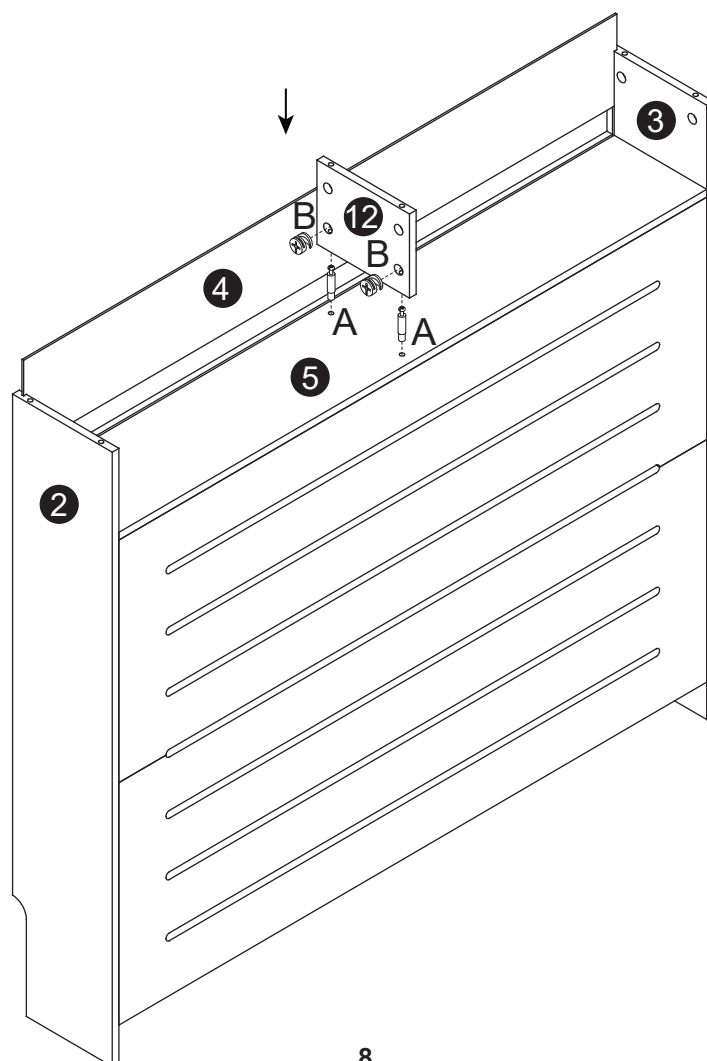


09







Bx6

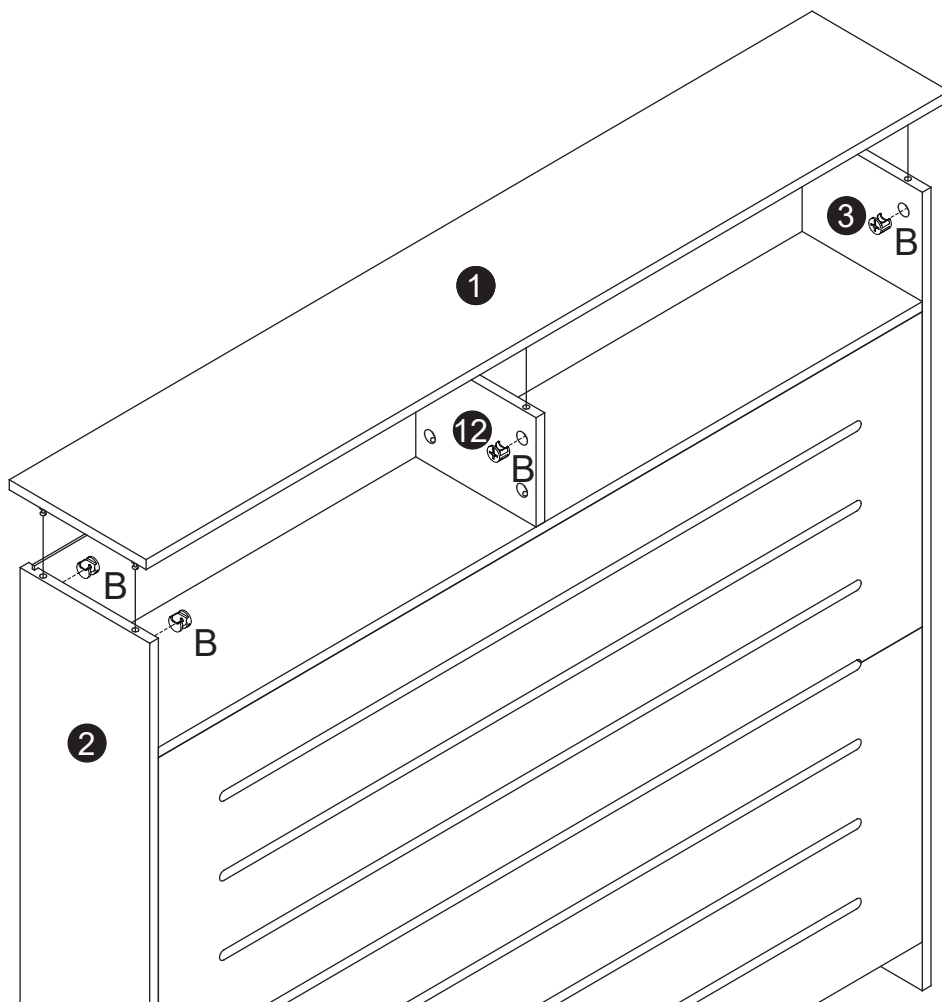

10

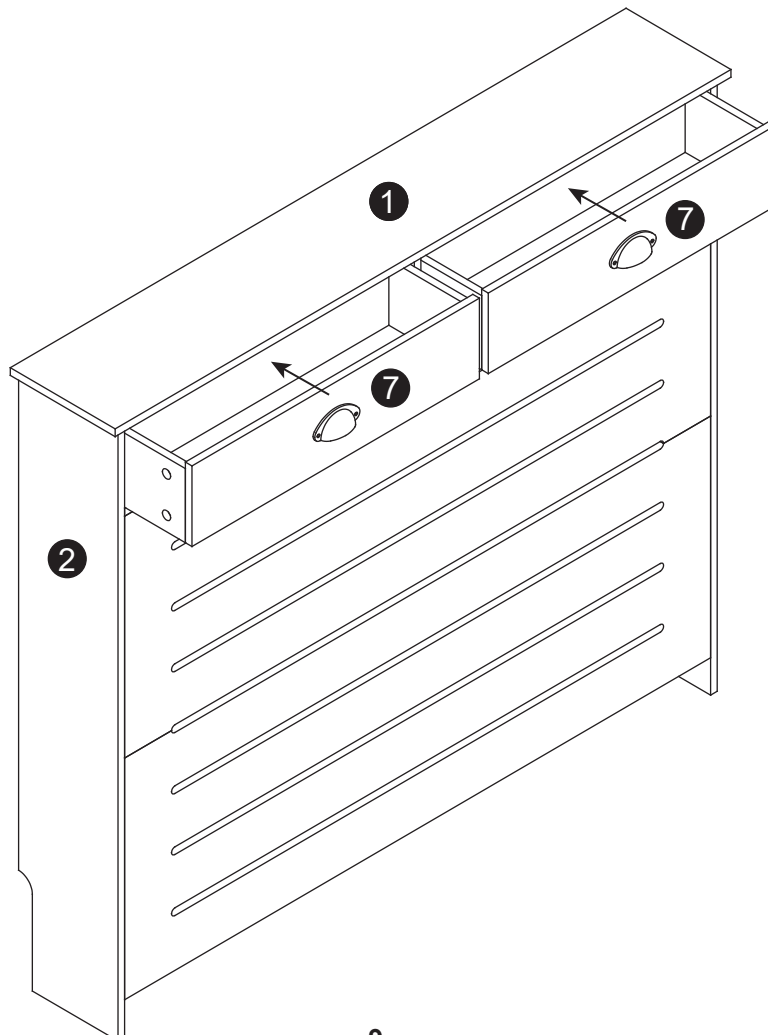

11

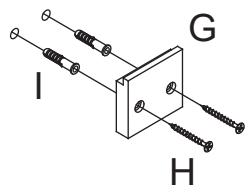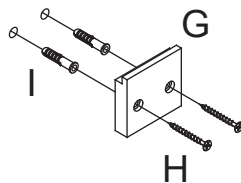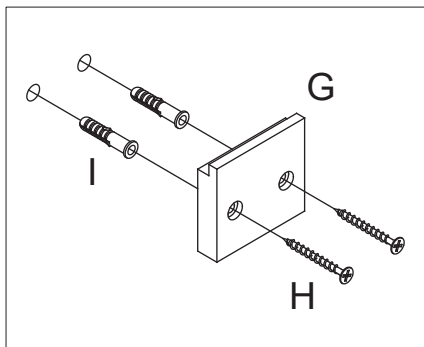

12

