



ASSEMBLY GUIDE

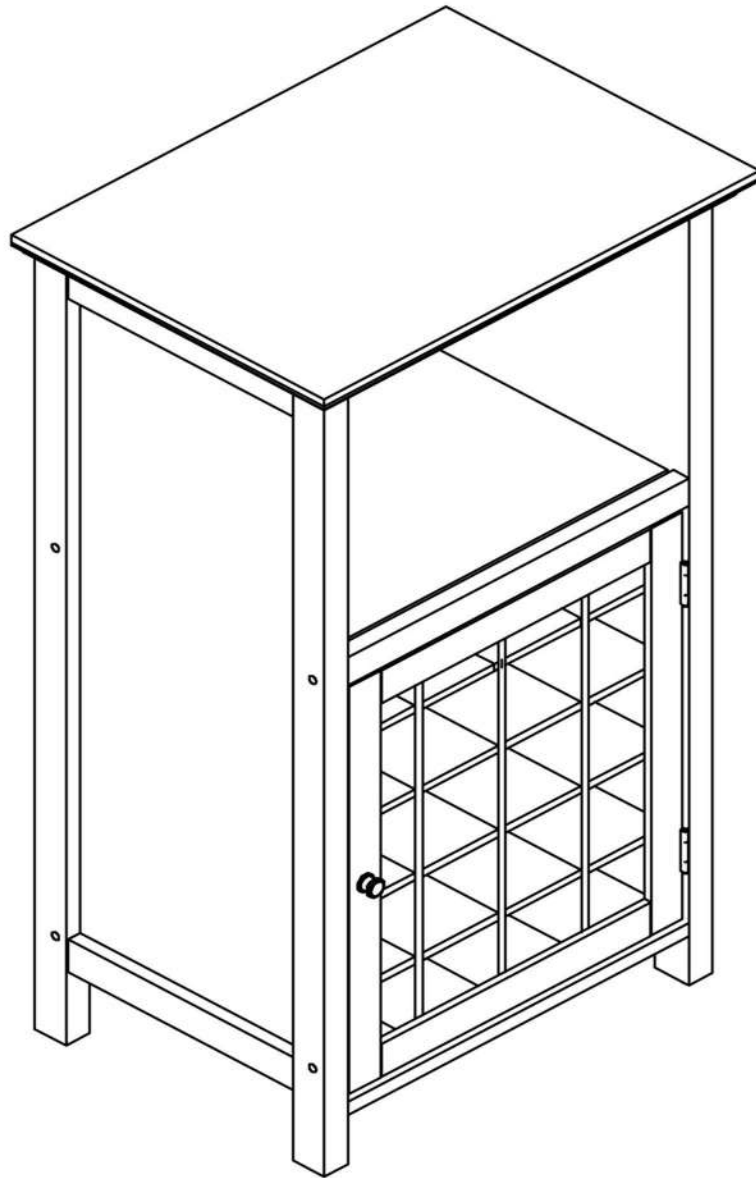

Note: This instruction booklet contains important safety information, please read and keep for future reference.

PARTS IDENTIFICATION

- Ensure that all parts and components are located before beginning assembly. Parts are labeled to help distinguish similar parts from each other. Use this PARTS IDENTIFICATION to help identify similar parts.
- Assemble on a soft surface to prevent damage to the product finish.
- Two people are needed for assembly.
- Estimated assembly time is approximately 1.5 hours.

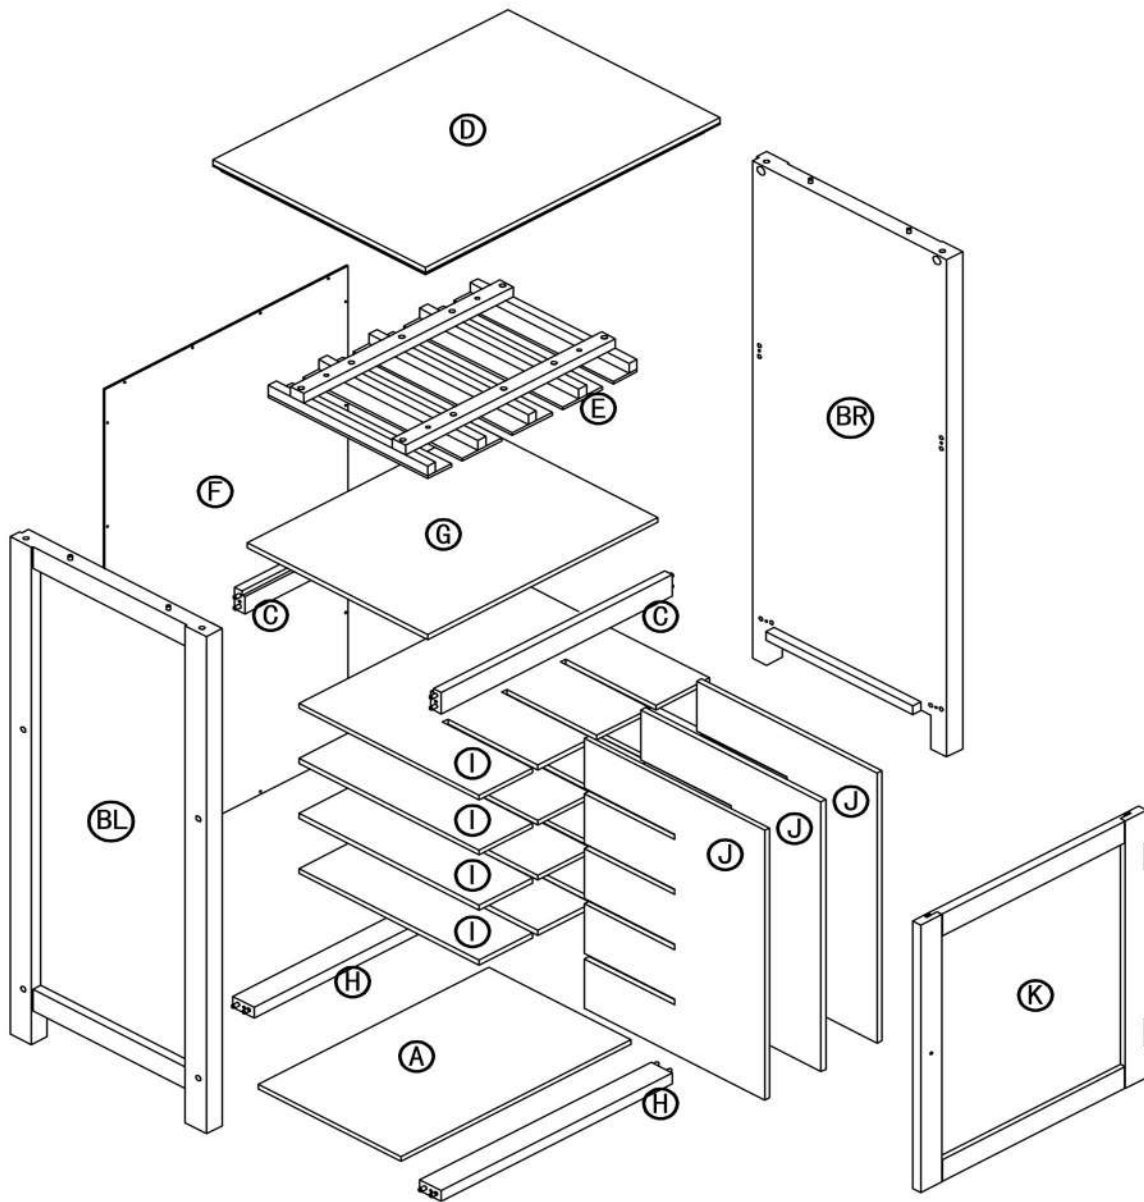

(A)BOTTOM BOARD-1PC

(C)BAR-2PCS

(F)BACK PANEL-1PC

(I)PANEL-4PCS

(BL)LEFT PANEL-1PC

(D)COVER BOARD-1PC

(G)SHELF BOARD-1PC

(J)PANEL-3PCS


(BR)RIGHT PANEL-1PC

(E)RAIL-1PC

(H)BAR-2PCS

(K)DOOR-1PC

HARDWARE IDENTIFICATION

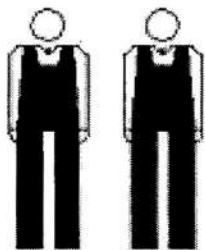

TOOL REQUIRED



PHILLIPS HEAD
SCREWDRIVER



SHORT FLAT
SCREWDRIVER

(R1) PLASTIC CAP-8PCS



(R3) FLAT HEAD SCREW
ST2.9X12-24PCS



(R5) CAM BOLT-4PCS



(R7) KNOB-1PC



(R2) FLAT HEAD SCREW
ST3.5X40-8PCS



(R4) NUT-8PCS





(R6) CAM LOCK-4PCS



(R8) FLAT HEAD SCREW
ST3.5X30-4PCS





CAM LOCK SYSTEM

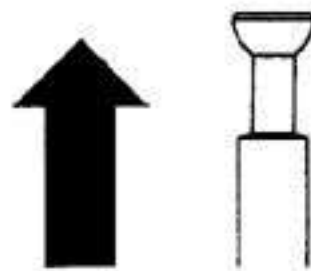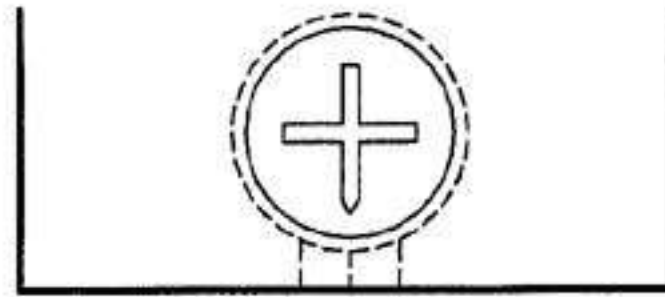

(1)


CORRECT

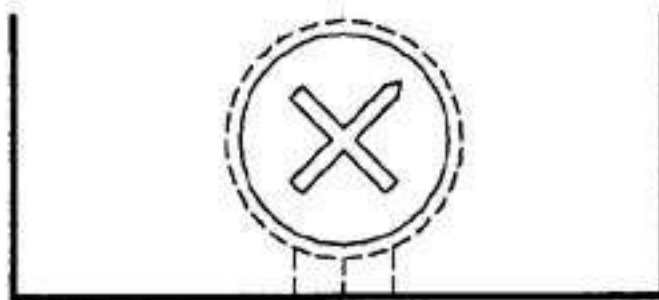

(2)

WRONG

Ensure starting position is correct, adjust cam bolt by pushing or pulling during assembly. Turn clockwise until secure.

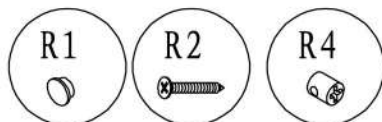


(R2)FLAT HEAD SCREW
ST3.5X40:8PCS



(R1)PLASTIC CAP:8PCS





(R4)NUT:8PCS





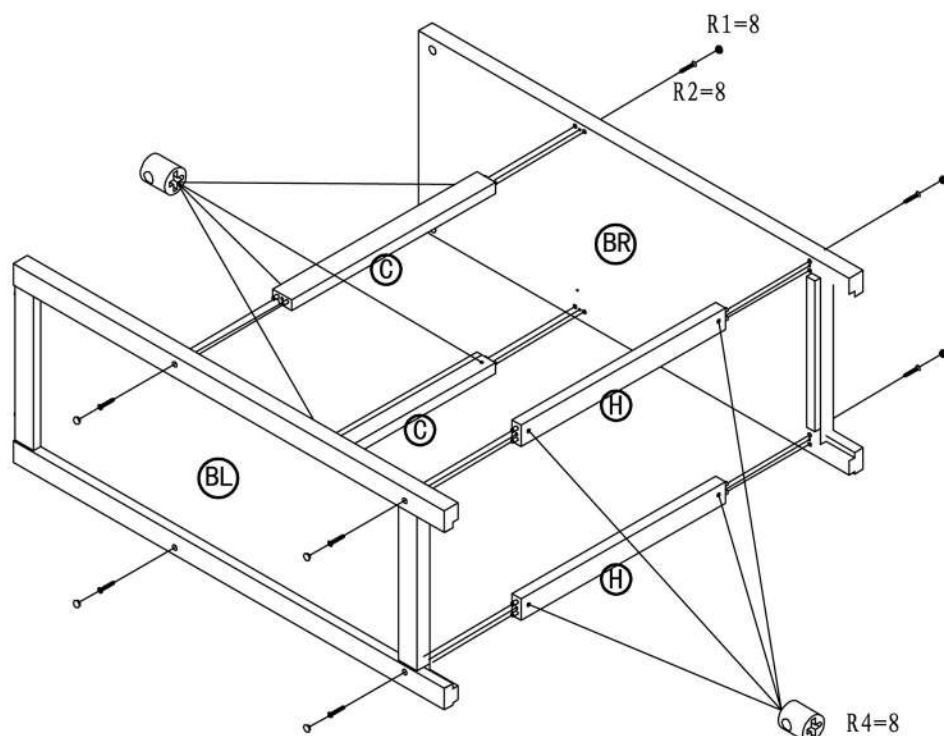


1. a)Attach bar C, bar H to left panel BL and right panel BR.

b)Fasten bar C , bar H to left panel BL using 4 flat head screw R2 (ST3.5X40), and 4 nut R4 then insert 4 plastic cap R1.

c)Fasten bar C, bar H to right panel BR, using 4 flat head screw R2(ST3.5X40), and 4 nut R4 then insert 4 plastic cap R1.

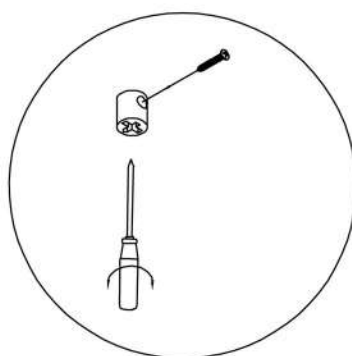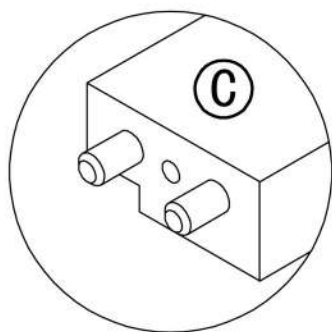

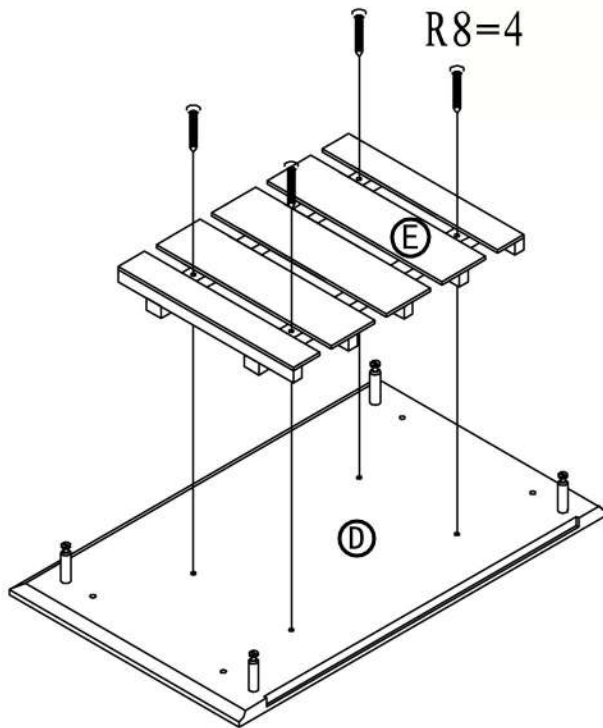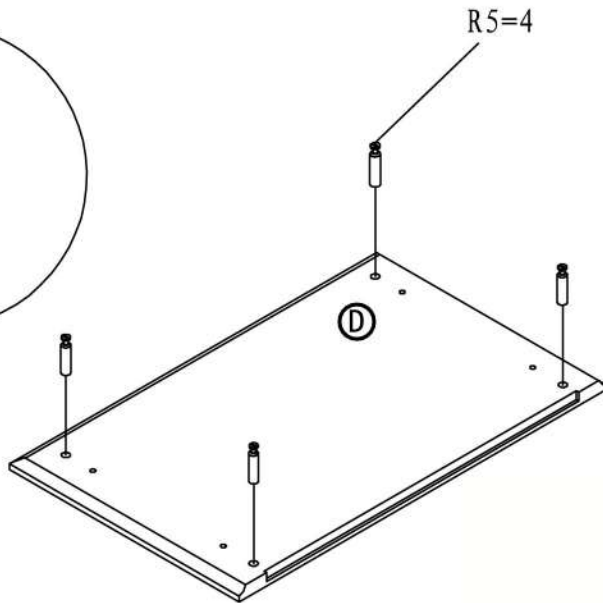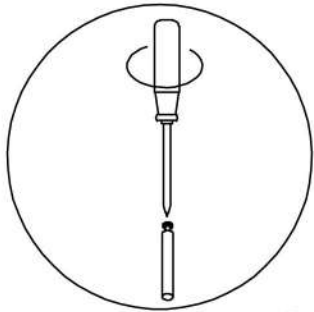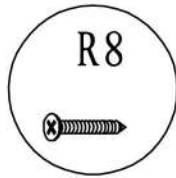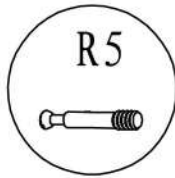

(R5)CAM BOLT:4PCS




(R8)FLAT HEAD SCREW
ST3.5X30:4PCS





2. a)Fasten 4 cam bolt R5 to cover board D.


b)Fasten rail E to cover board D using 4 flat head screw R8 (ST3.5X30).

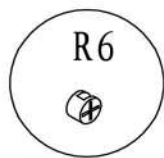

(R6)CAM LOCK:4PCS

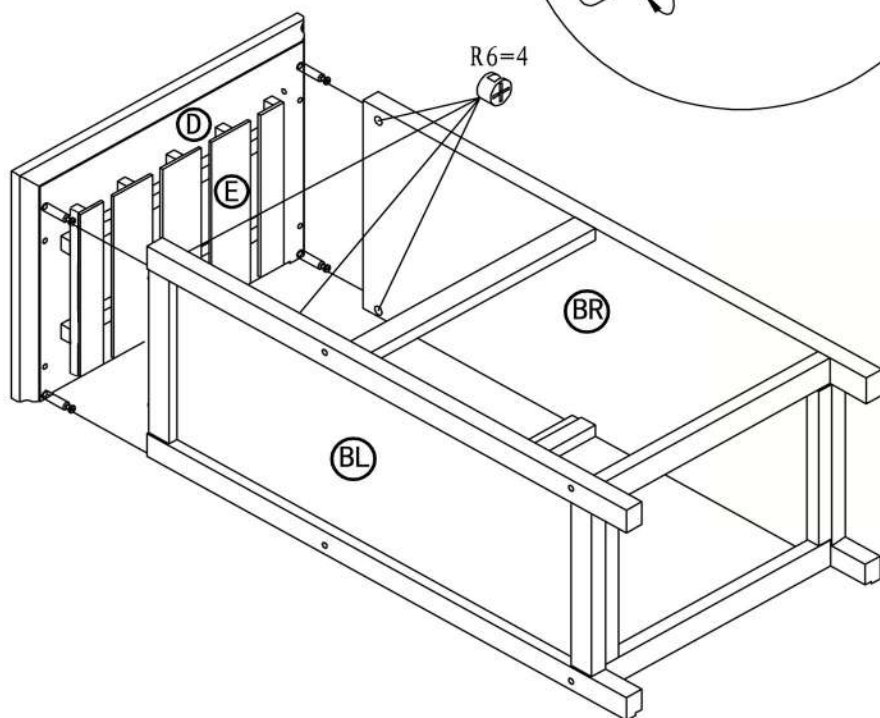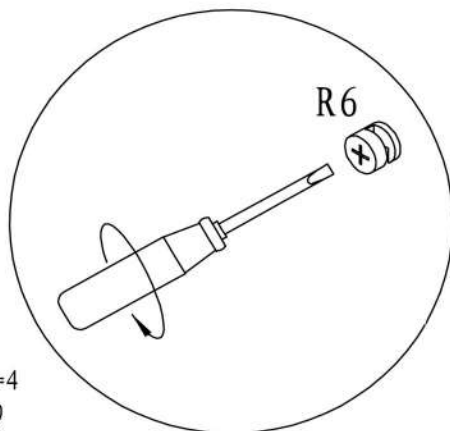


3. a) Fasten cover board D to left and right panel BL&BR, using 4 cam lock R6.

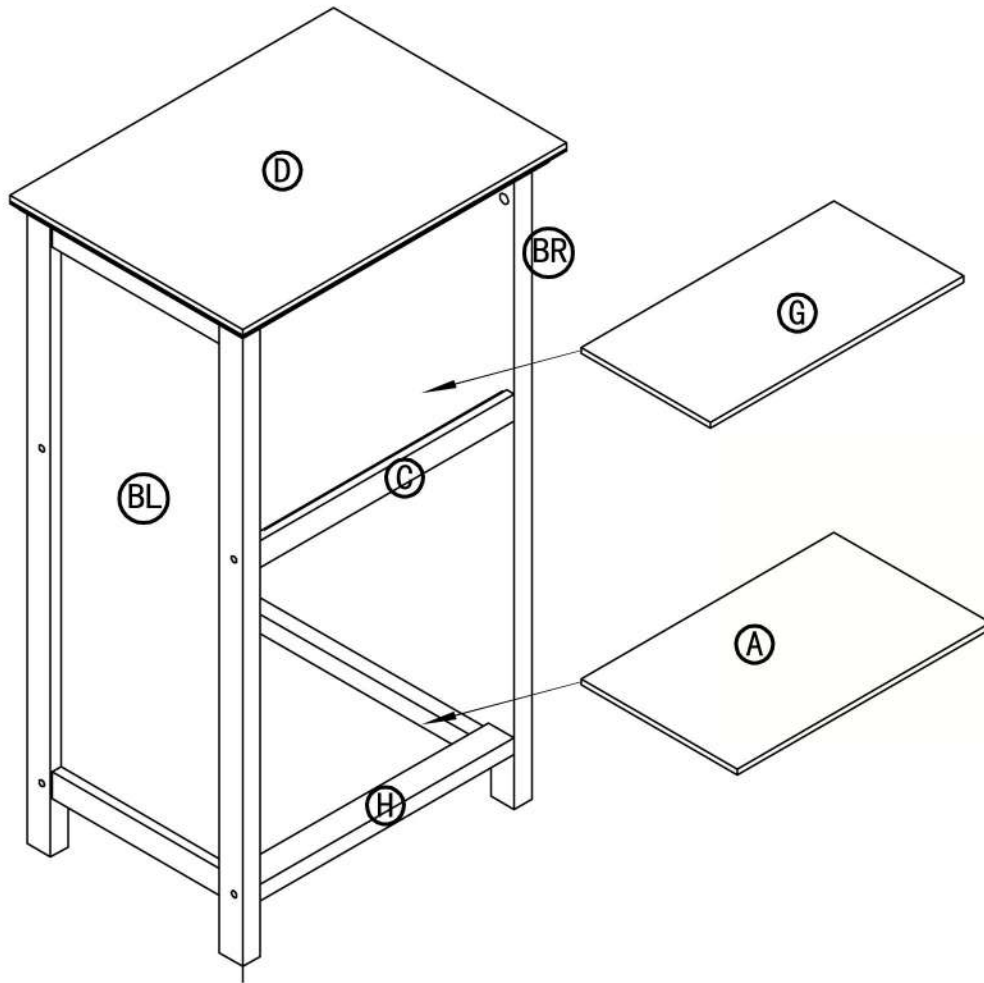


4. a) Attach shelf board G on bar C,


b) Attach bottom board A on bar H.

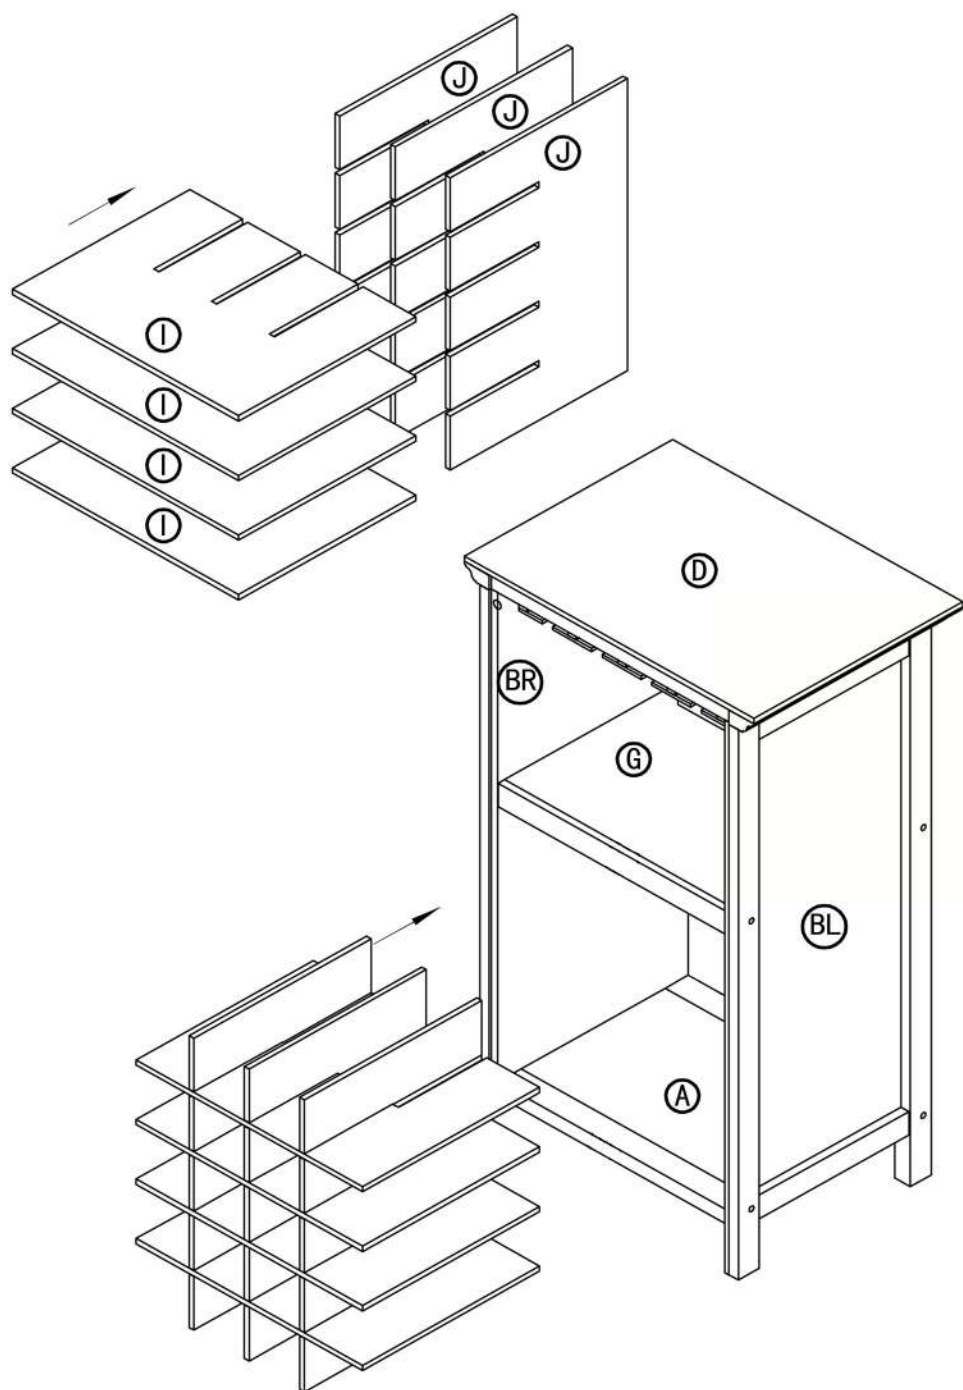


5 . a) Insert 4 panel I into 3 panel J.

b) Put panel I&J on bottom board A.

(R3)FLAT HEAD SCREW
ST2.9X12:18PCS 

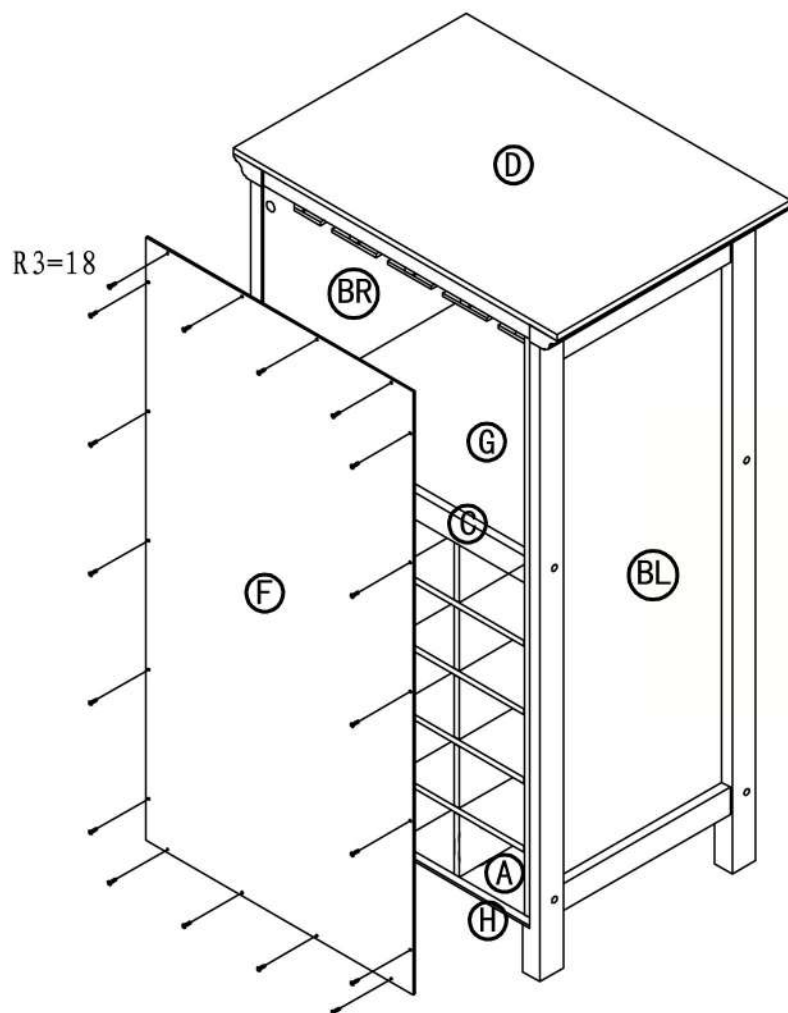


6. a)Fasten back panel F to left panel BL, right panel BR, cover board D, bar H using 18 flat head screw R3 (ST2.9X12).

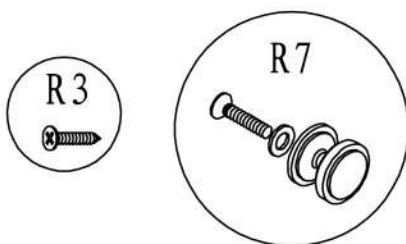

(R3)FLAT HEAD SCREW
ST2.9X12:6PCS

(R7)DOOR KNOB:1PC

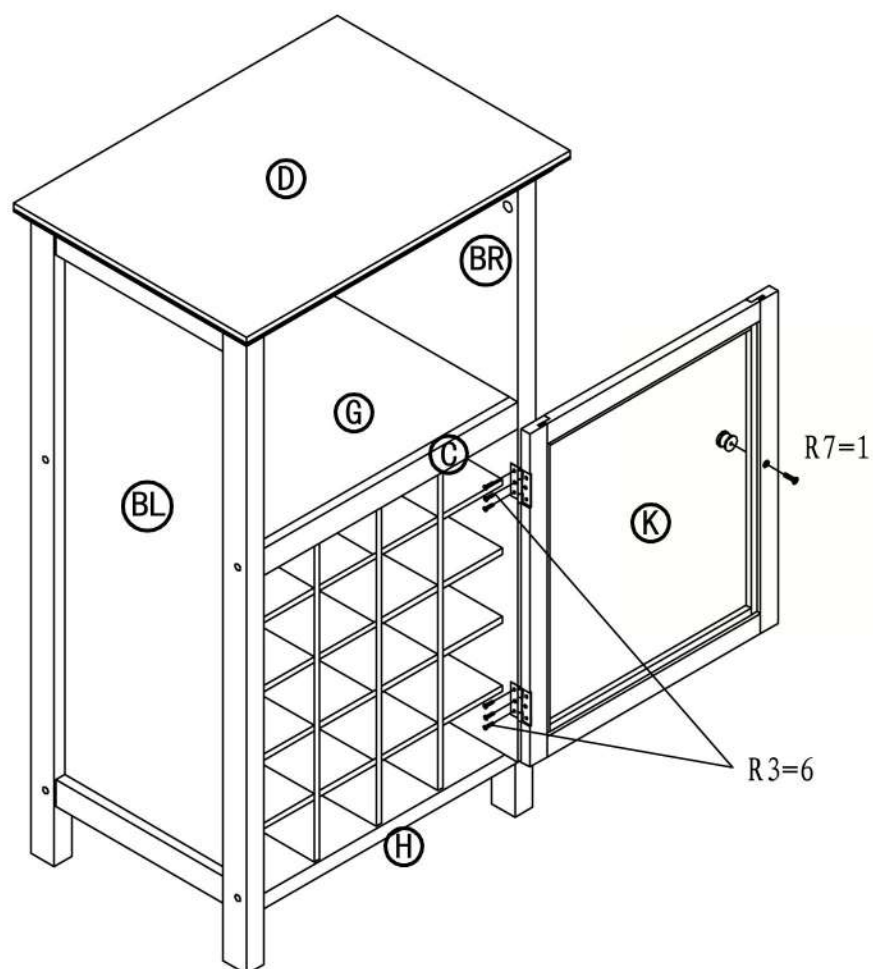

7 . a)Fasten door K to right panel
BR, using 6 flat head screw
R3(ST2.9x12).

b)Fasten 1 door knob R7 to
door K.

Care and Maintenance of your Furniture

- 1.Ensure metal plated hinges are kept dry to avoid rusting.
- 2.Please periodically check all fittings and re-tighten as necessary.
- 3.Wipe occasionally with a soft cloth slightly dampened with water.Then buff with a dry clean soft cloth.
- 4.Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.