


# ASSEMBLY GUIDE

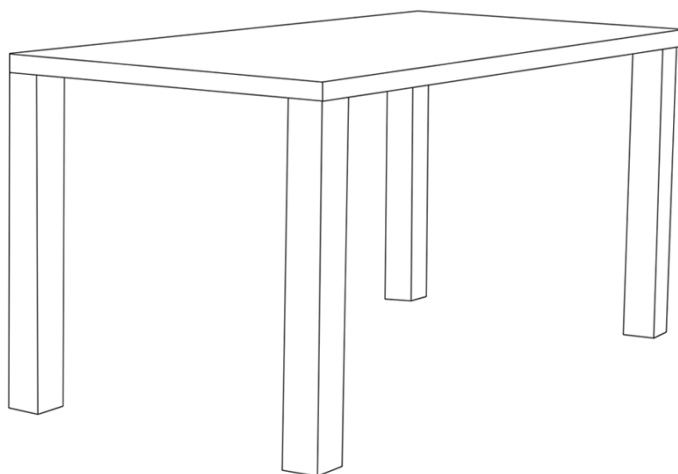

**Important - Please read these instructions fully before starting assembly**



### **SAFETY AND CARE ADVICE**



### **NO POWER TOOLS**

#### **SAFETY AND CARE ADVICE**

- Check you have all the components and tools listed.
- Remove all fittings from the plastic bags and separate them into their groups.
- We do not recommend the use of power drills/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers and Allen keys.
- Keep children and animals away from the work area, small parts could cause choking if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Assemble the item as close to its final position (in the same room) as possible.
- Do not overtighten the nuts to avoid causing damage to the threads.
- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit
- This product should not be discarded with household waste. Take to your local authority waste disposal centre

## IMPORTANT INFORMATION



45 MINUTE  
BUILD



MAXIMUM  
CAPACITY 100Kg




TWO  
PERSON




IMPORTANT  
STEP





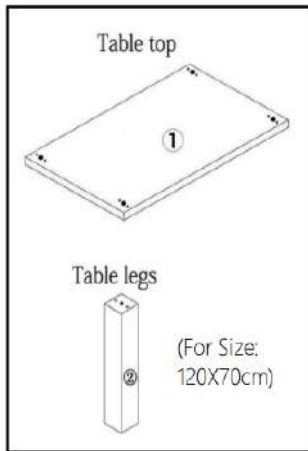

PLEASE CHECK CAREFULLY AND MAKE SURE YOU HAVE ALL FITTINGS AND TOOLS LISTED BELOW BEFORE YOU START.

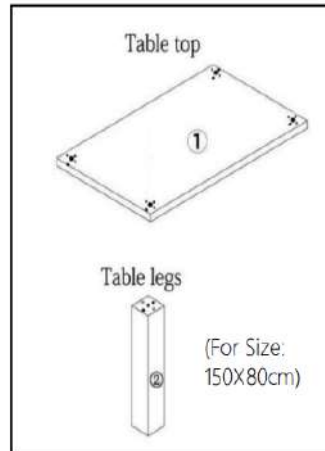① x1



② x4




<p>(A)</p>  <p>M8x725mm Threaded Rod X4</p>	<p>(B)</p>  <p>X16 (For 150X80cm) X8 (For 120X70cm)</p> <p>M8x30mm Wooden Dowel</p>	<p>(C)</p>  <p>M8x22mm Metal Washer X4</p>
<p>(D)</p>  <p>M8mm Nut X4</p>	<p>(E)</p>  <p>M14mm Box Spanner X1</p>	<p>(F)</p>  <p>Φ30PVC Stickers X4</p>


**NOTE:** The quantities above are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

## STEP 1


**ATTENTION:** Put the pieces on a soft flat surface e.g. a carpet to avoid scratching or bumping. Make sure that you have all pieces and components ready to build the table. Firstly insert threaded rods (A) and wooden dowel (B) into the assemble holes of the table top (part 1).

 **ATTENTION:** Be careful not to over-screw beyond the thread stops.

For size  
120X70cm

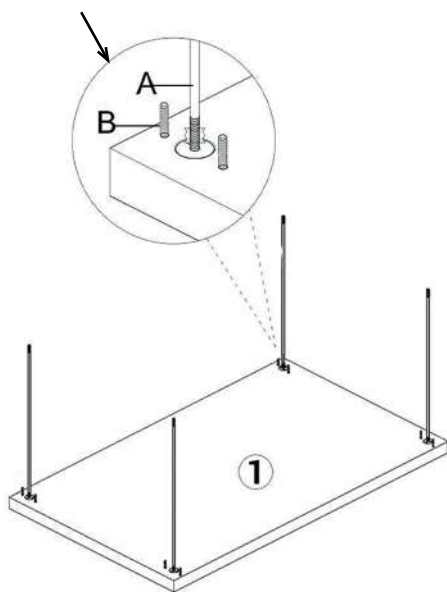


For size  
150X80cm

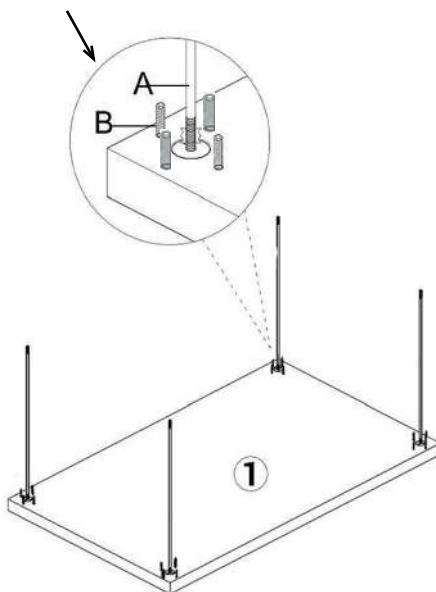


## STEP 2

Place the table legs (part 2) over the threaded rods as shown, use Fixing (C), (D), and Box Spanner (E) to tighten. Then put the Sticker (F).

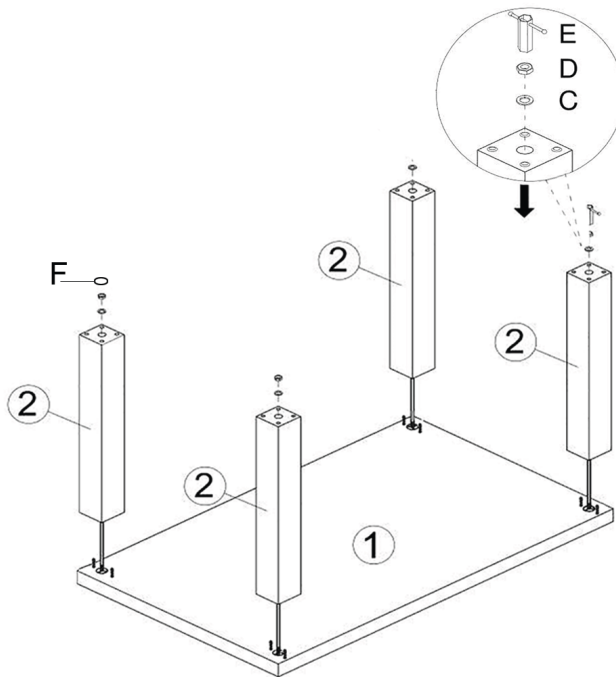

## STEP 3

**ATTENTION:** With help,  
turn the table around to  
complete assembly

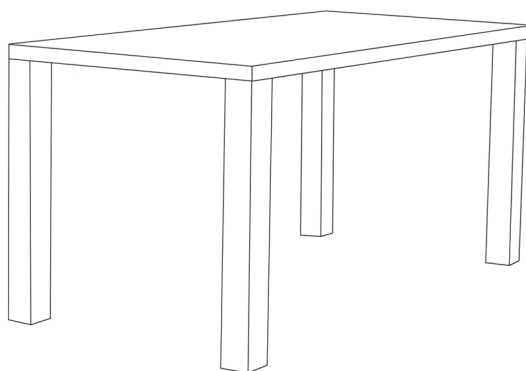



## OUR 2 YEAR\* GUARANTEE

our products come with a 2 year guarantee  
to give you peace of mind shopping

\*excludes some garden furniture items  
which have a 1 year guarantee



## WHAT THE GUARANTEE COVERS



**PRE-INSERTED FIXINGS**  
e.g. lose metal threads



**FAULTY JOINTS**  
e.g. legs bending



**EXTERNAL FIXING FAULTS**  
e.g. bonding/glue



**STRUCTURAL INTEGRITY**  
e.g. the frame of the  
product