




























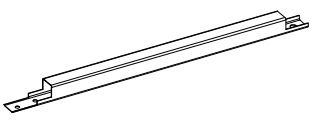


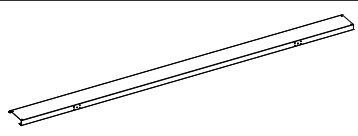




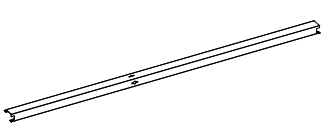









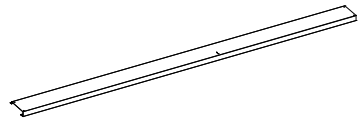

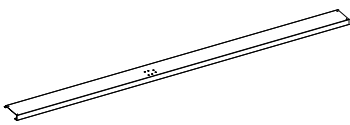

























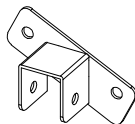
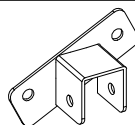









NO.	PART.	Qty.
1L		1
1R		1
2L		2
2R		2
2		2
3L		1
3R		1
3		1
4		8
4B		6
5		4
6L		1
6R		1
6		1








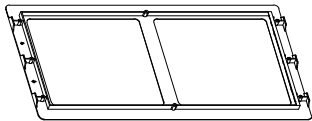



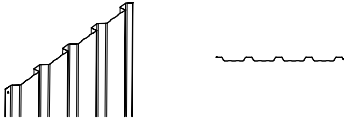

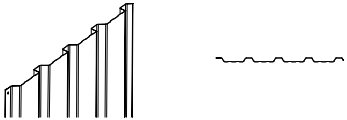
NO.	PART.	Qty.
7F		2
7B		2
7		2
8L		1
8R		1
9L		1
9R		1
9		3
10		2
10L		2
10R		2
11L		2
11R		2
12L		2















NO.	PART.	Qty.
12R		2
13		2
14		1
15		2
16		2
16X		1
17L		1
17R		1
18L		1
18R		1
18		3
18F		2
19		2
19L		2










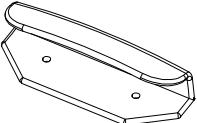












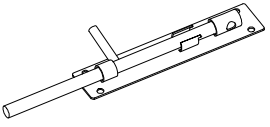





NO.	PART.	Qty.
19R		2
20L		2
20R		2
21		4
21X		2
22		1
22X		1
23		1
23X		1
24		6
26		4
27		6
28		8
29		5



















NO.	PART.	Qty.
30		4
31		4
32		2
33		2
34		4
35		1
36		2
37		1
38		1
38L		1
38R		1
39		2
40L		1
40R		1







NO.	PART.	Qty.
41		4
41L		1
41R		1
42L		2
42R		2
43		4
44		1
45L		1
45R		1
46		5
47		4
48		2
49		1
50L		2

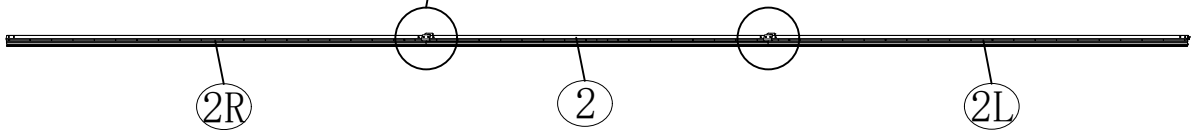
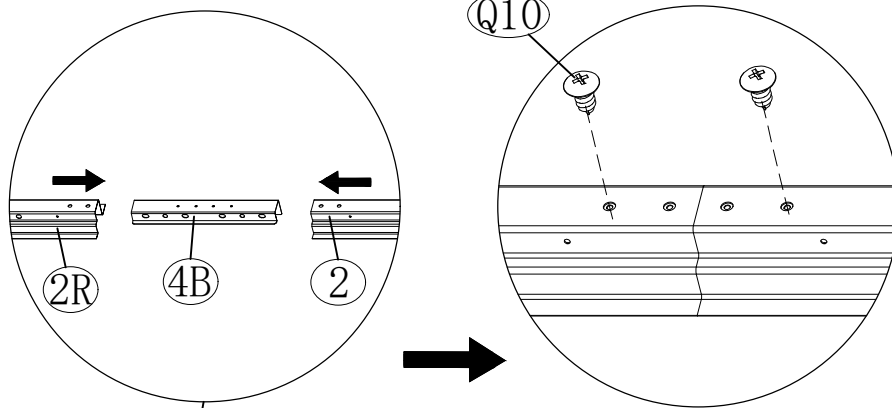
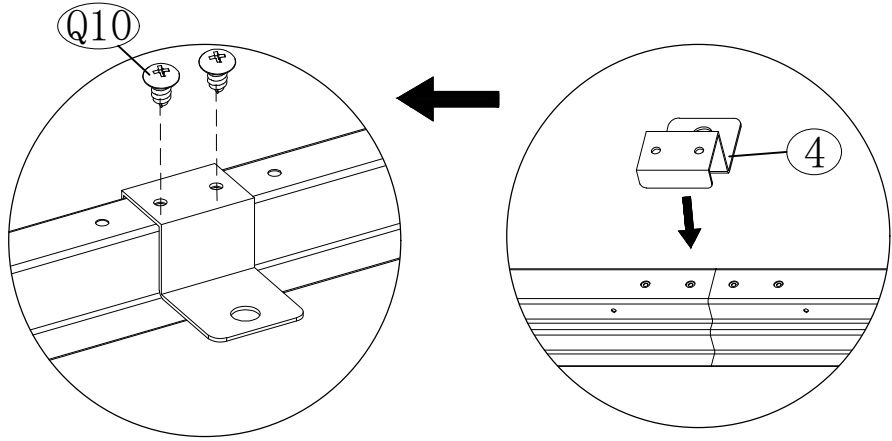
NO.	PART.	Qty.
50R		2
51		2
52		1
53		2
54		2
55		3
56		1
F12		4
F13		4
F14		4
W7		4
W2		2
W3		9
W5		23

NO.	PART.	Qty.
C3		2
C4		2
W1L		1
W1R		1
W2L		1
W2R		1
W3L		1
W3R		1
W4L		1
W4R		1
W5L		1
W5R		1
W6L		1
W6R		1







NO.	PART.	Qty.	NO.	PART.	Qty.
D4		30	Q35B		1
M1		6	Q35C		1
M2		1	Q47A		1
C		4	Q47B		1
F		4	Q46		1
Q1		4	Q10		667
Q2		2	Q32		196
Q3		4	Q43		1
Q4		4	Q38		24
Q33A		4	Q49		20
Q33B		4	Q13		180
Q34		4	Q39		35
Q35		1	Q40		5
Q35A		1	Q41		32

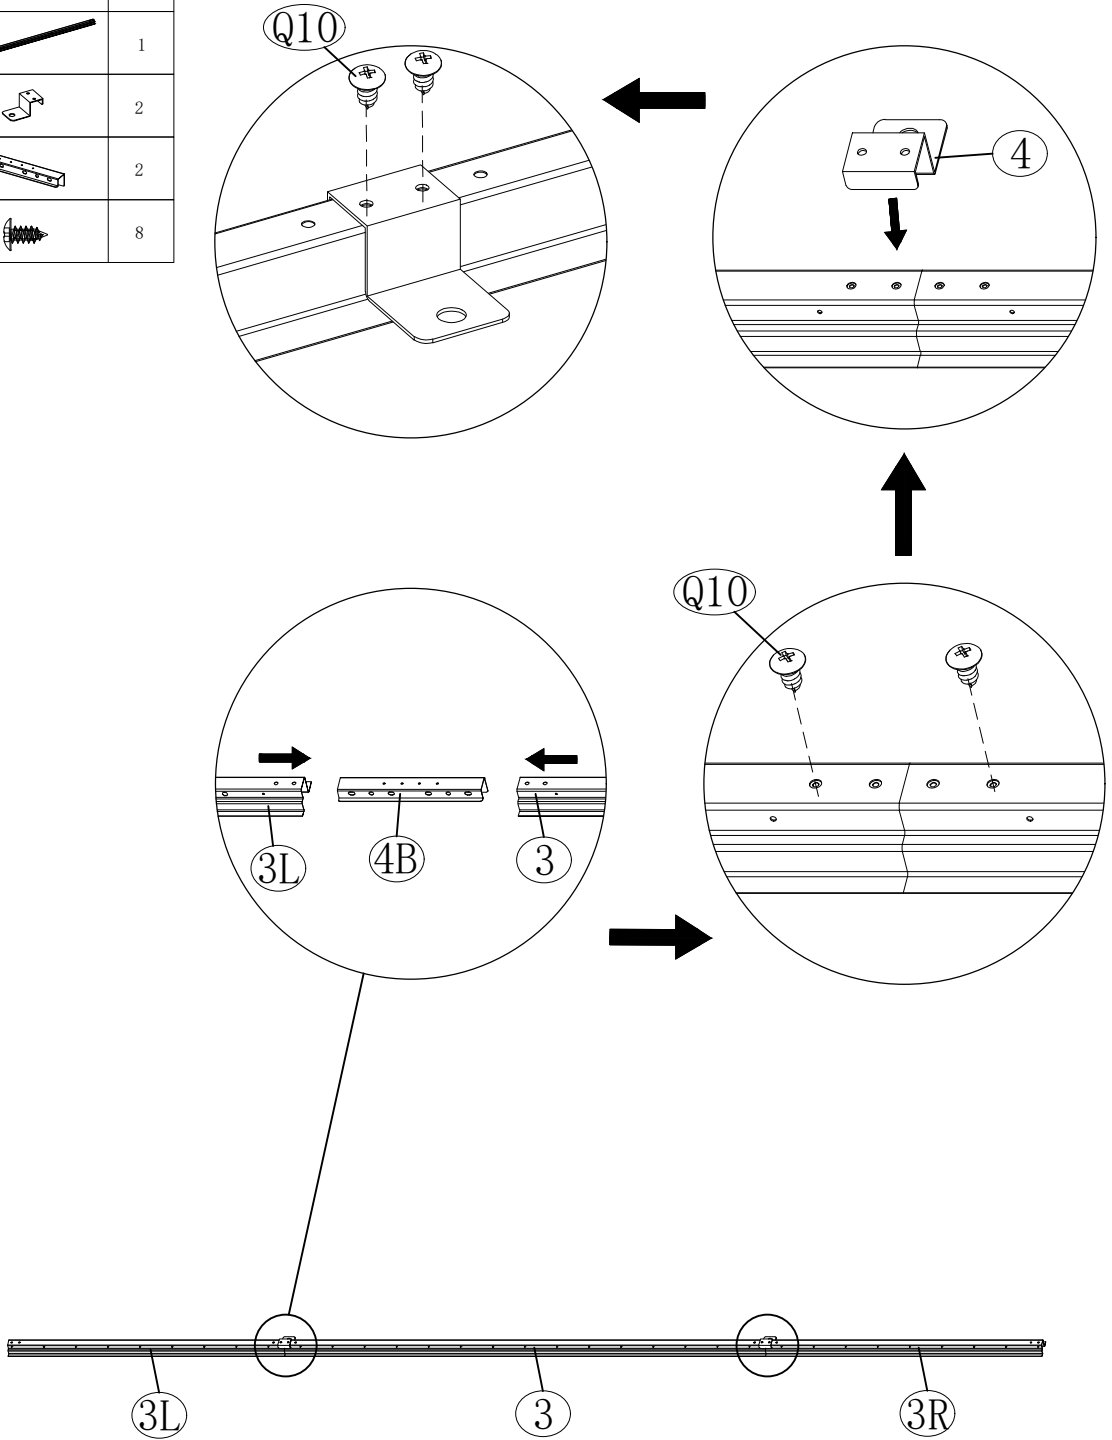
NO.	PART.	Qty.	NO.	PART.	Qty.
Q44		8	Q20		92
Q45		12	Q21		12
Q37		20	Q22		2
Q36		59	Q23		1
Q42		72	Q24		1
Q54		44	Q25		1
Q17		99	Q26		1
Q18		578	Q27		1
Q19		180	S15		1







NO.	PART.	Qty.
2L		2
2R		2
2		2
4		4
4B		4
Q10		16

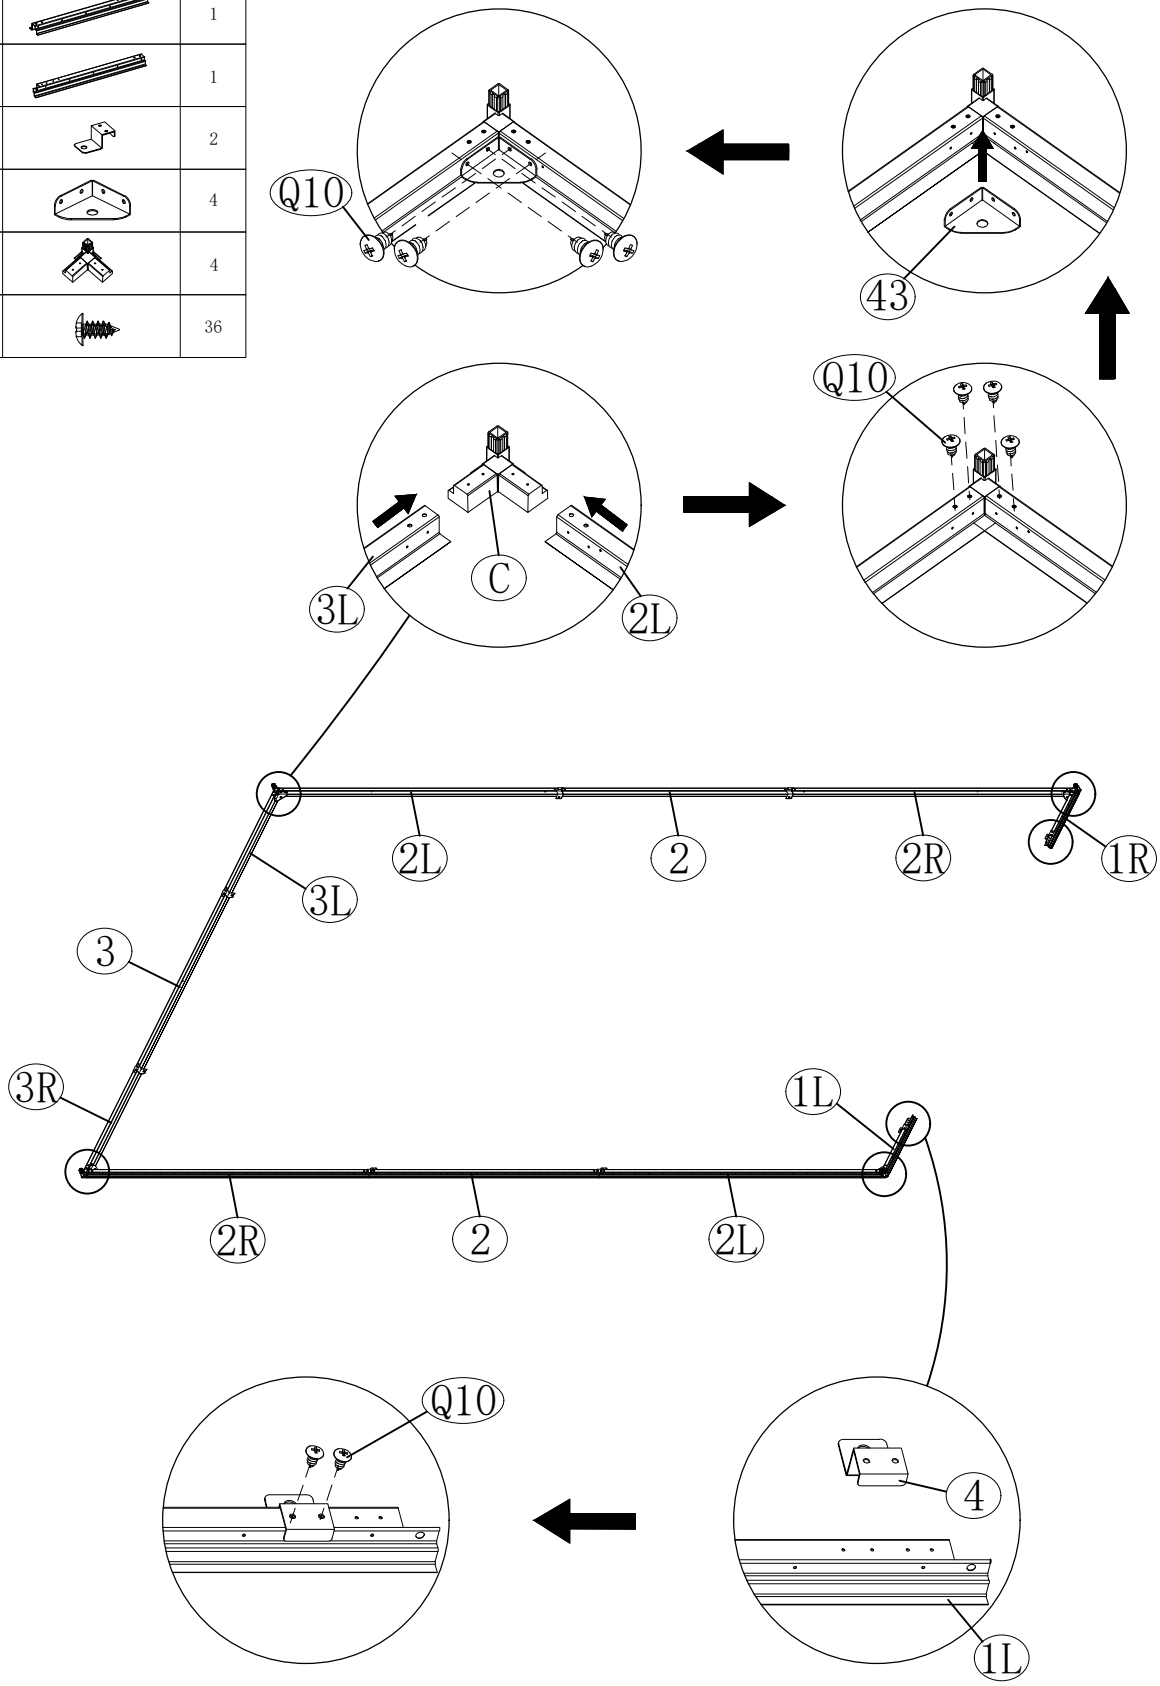







**X2**

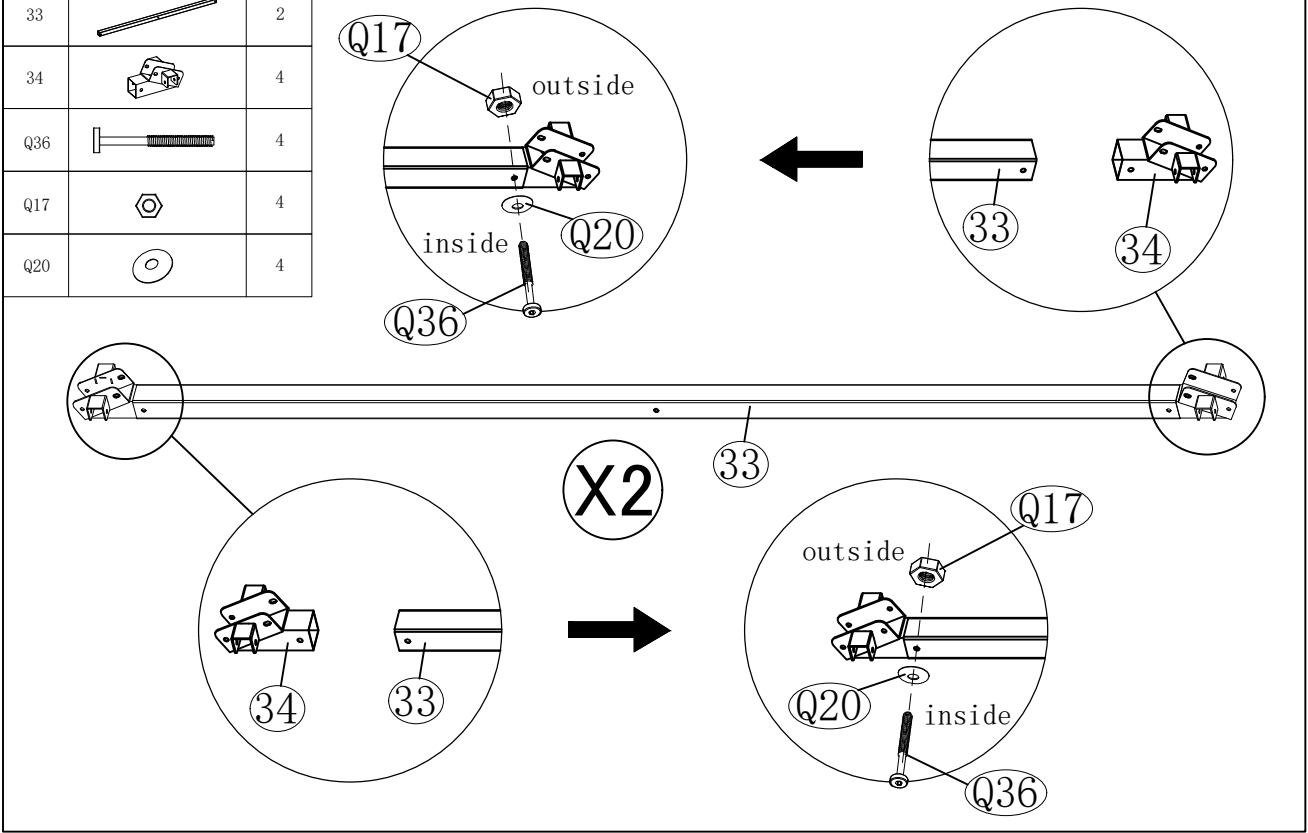
NO.	PART.	Qty.
3L		1
3R		1
3		1
4		2
4B		2
Q10		8










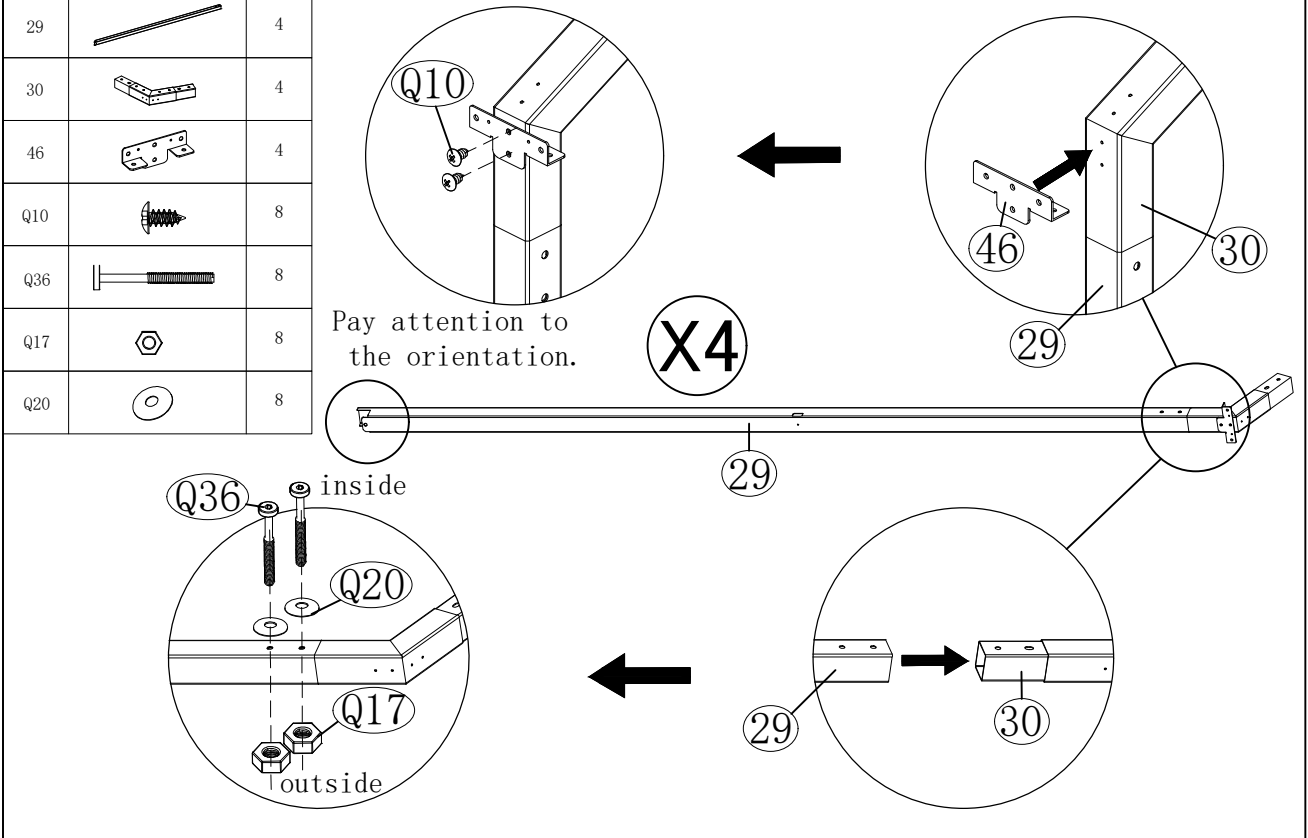
NO.	PART.	Qty.
1L		1
1R		1
4		2
43		4
C		4
Q10		36









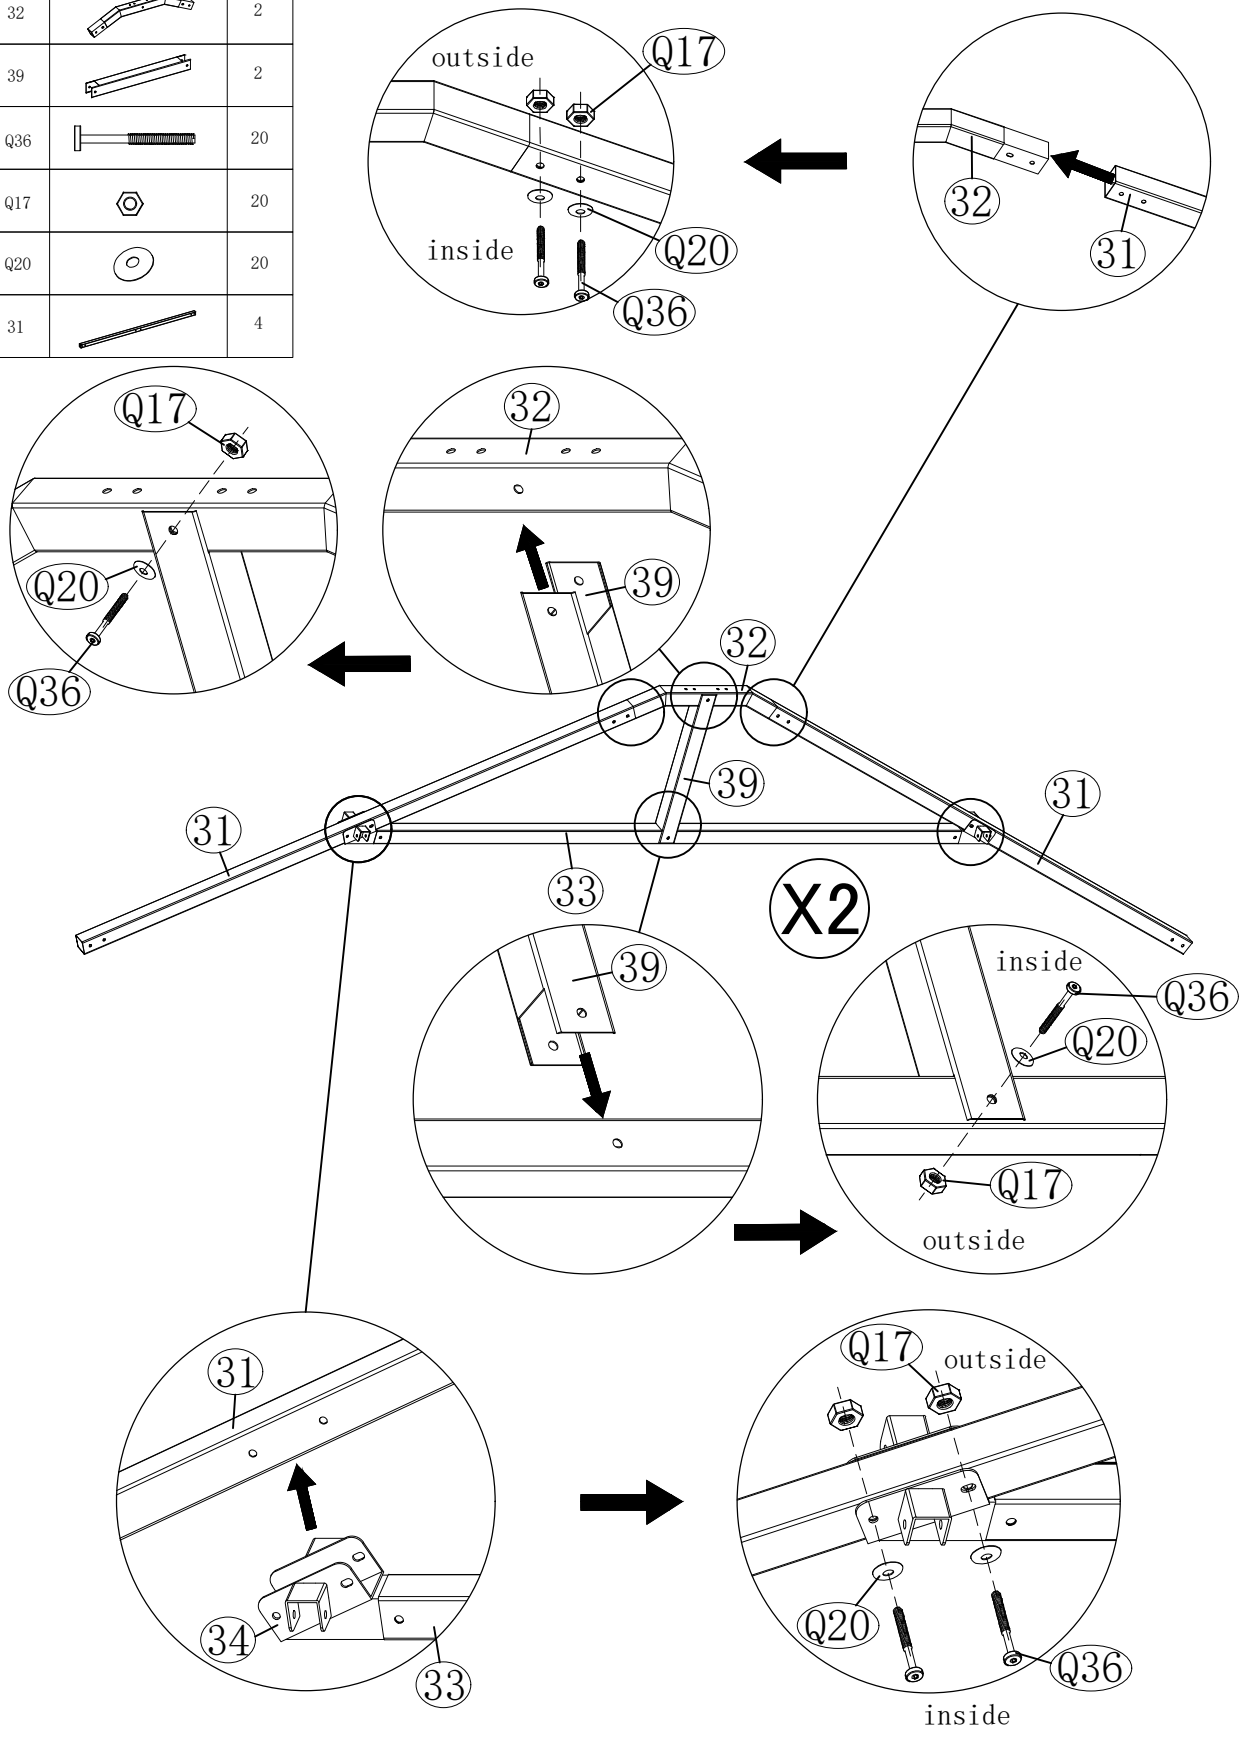
NO.	PART.	Qty.
33		2
34		4
Q36		4
Q17		4
Q20		4






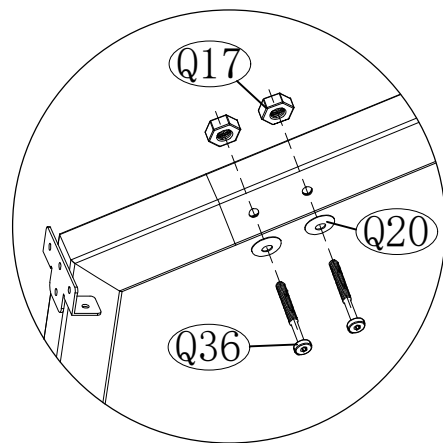
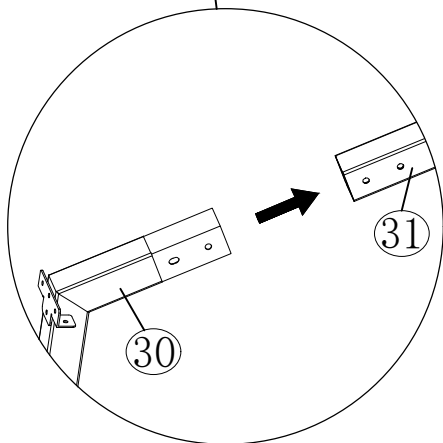
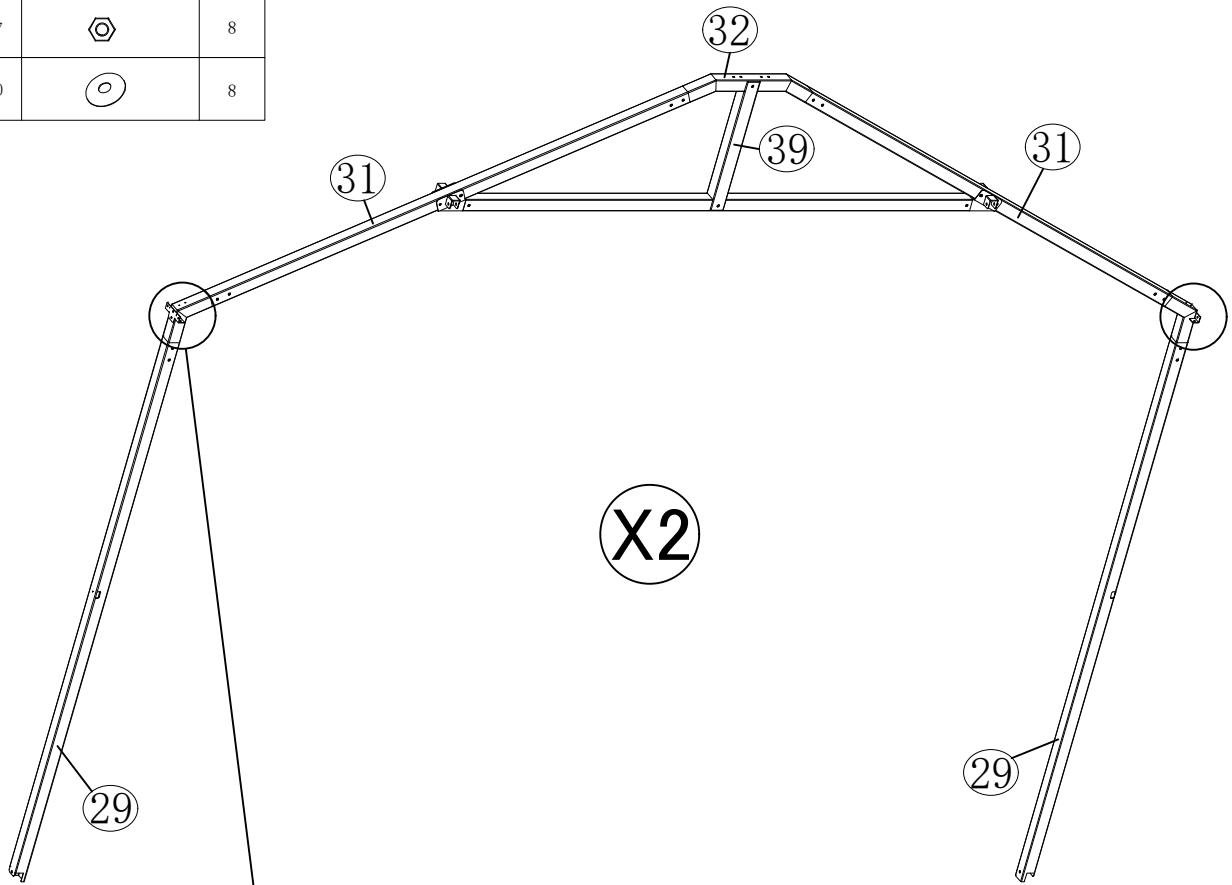
NO.	PART.	Qty.
29		4
30		4
46		4
Q10		8
Q36		8
Q17		8
Q20		8






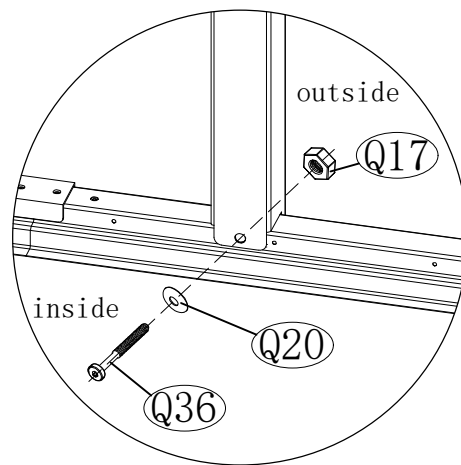
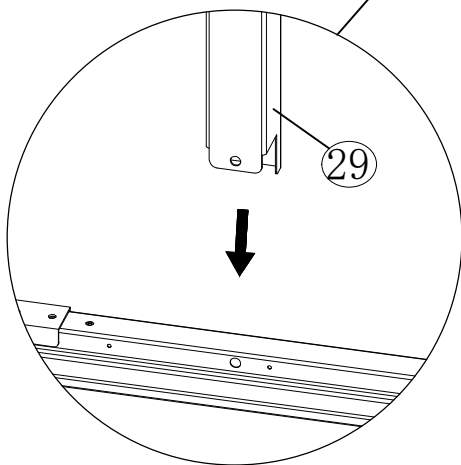
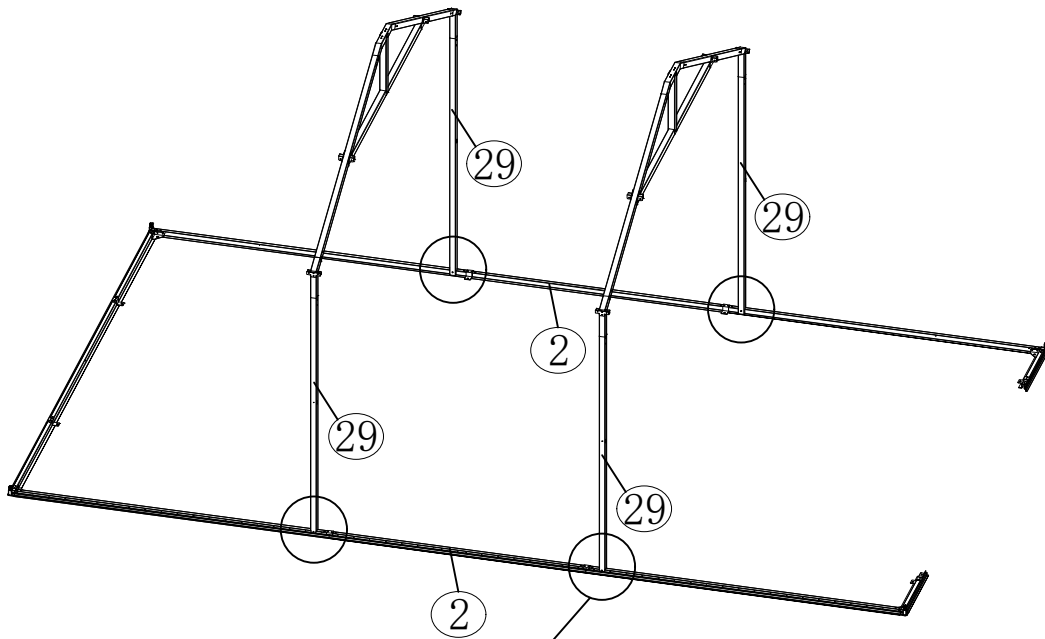
NO.	PART.	Qty.
32		2
39		2
Q36		20
Q17		20
Q20		20
31		4









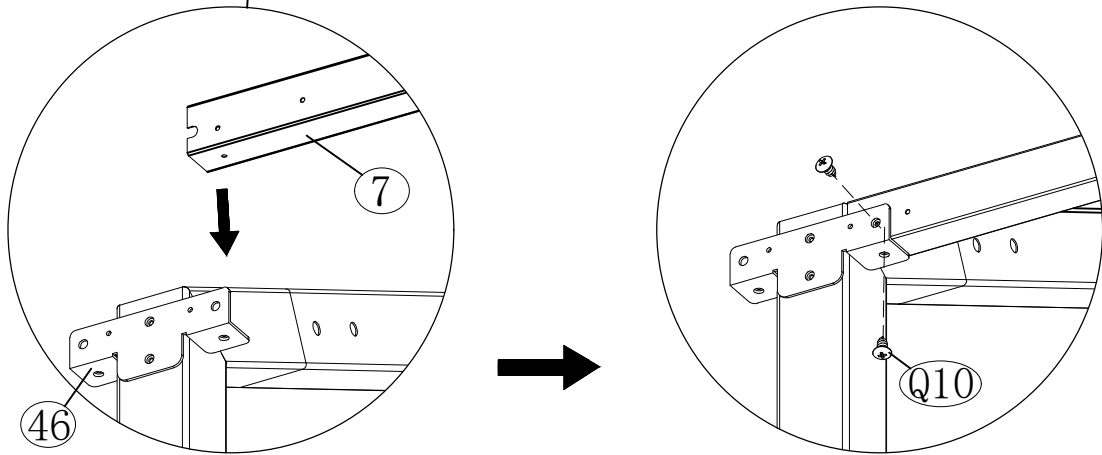
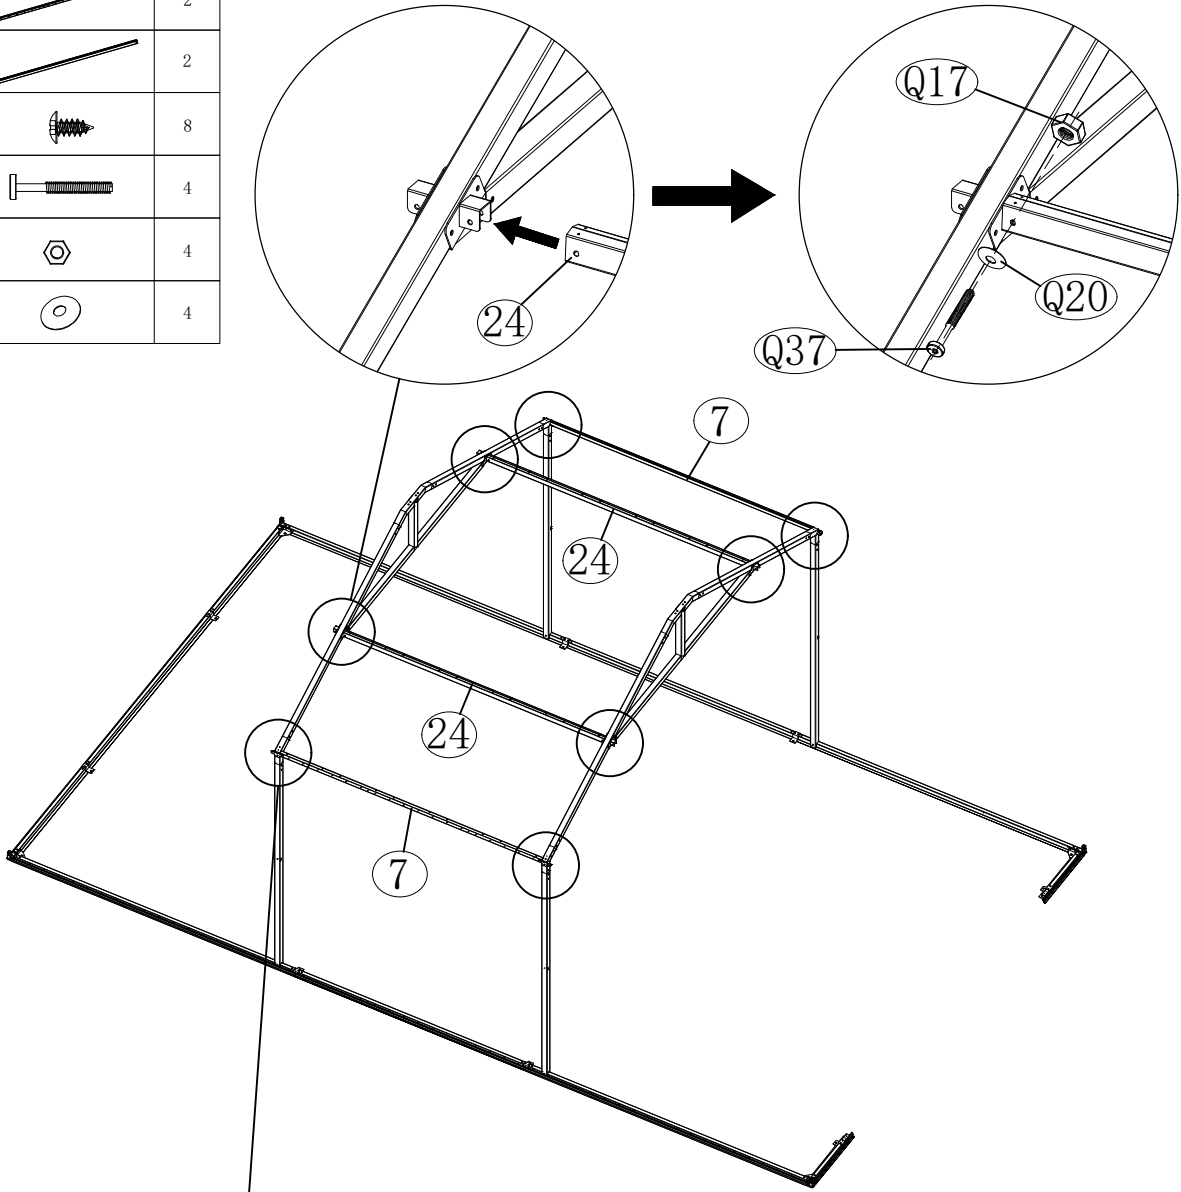
NO.	PART.	Qty.
Q36		8
Q17		8
Q20		8







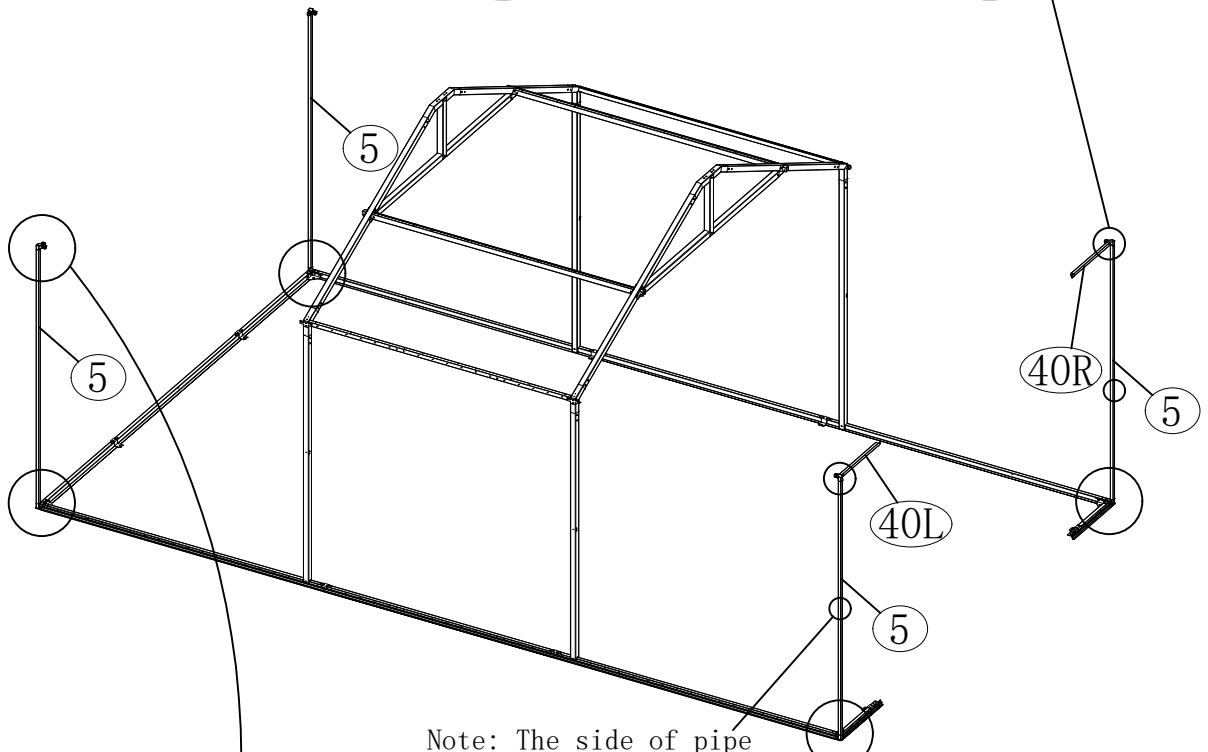
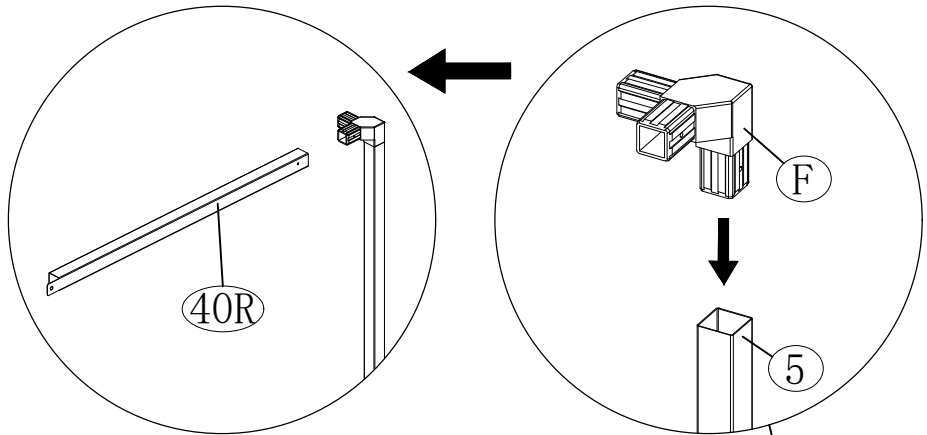
NO.	PART.	Qty.
Q36		4
Q17		4
Q20		4



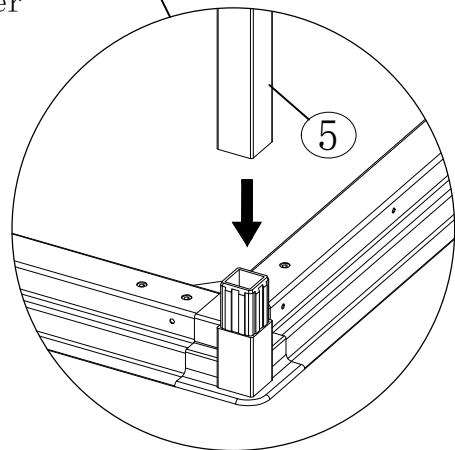
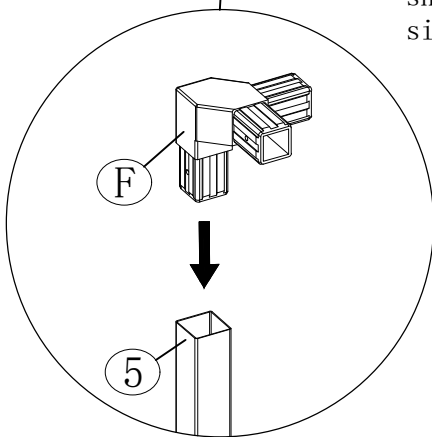
NO.	PART.	Qty.
7		2
24		2
Q10		8
Q37		4
Q17		4
Q20		4






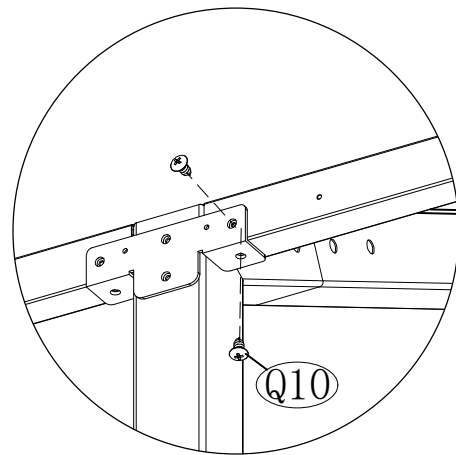
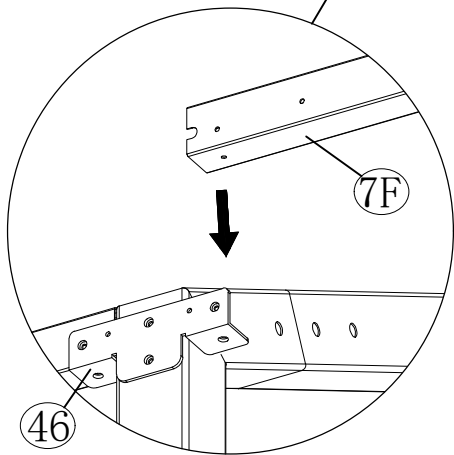
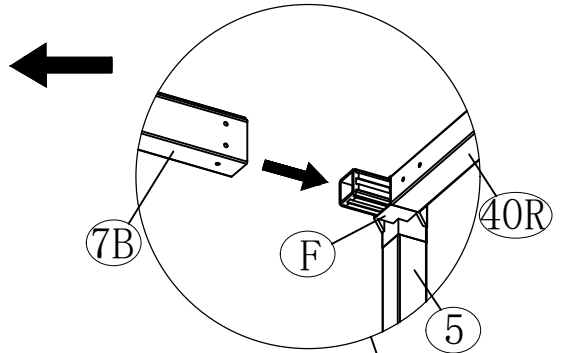
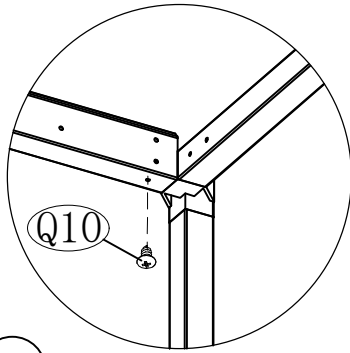
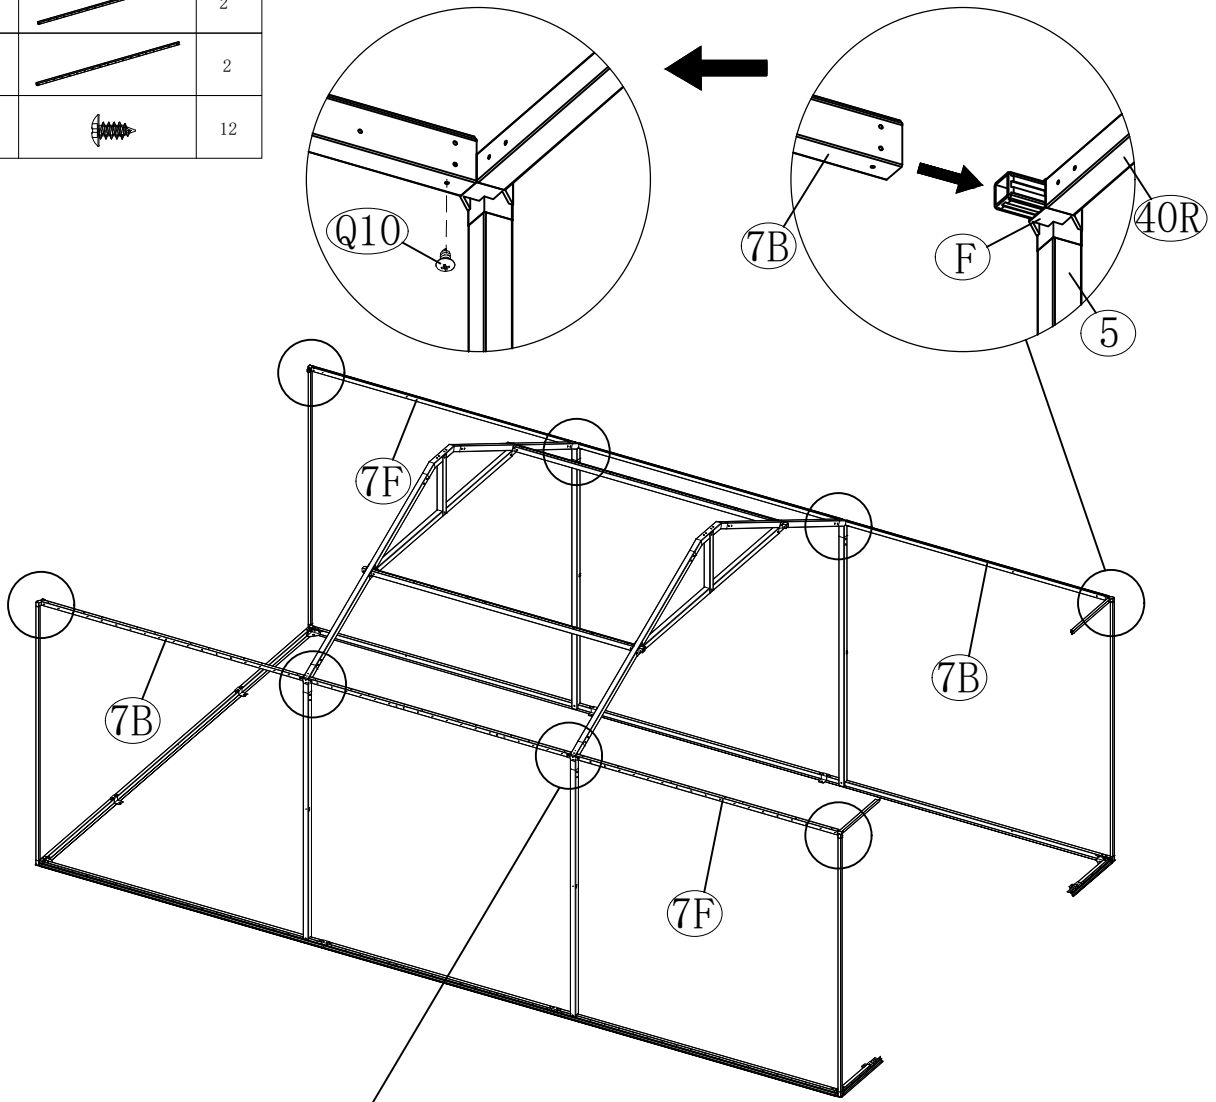
NO.	PART.	Qty.
5		4
F		4
40L		1
40R		1



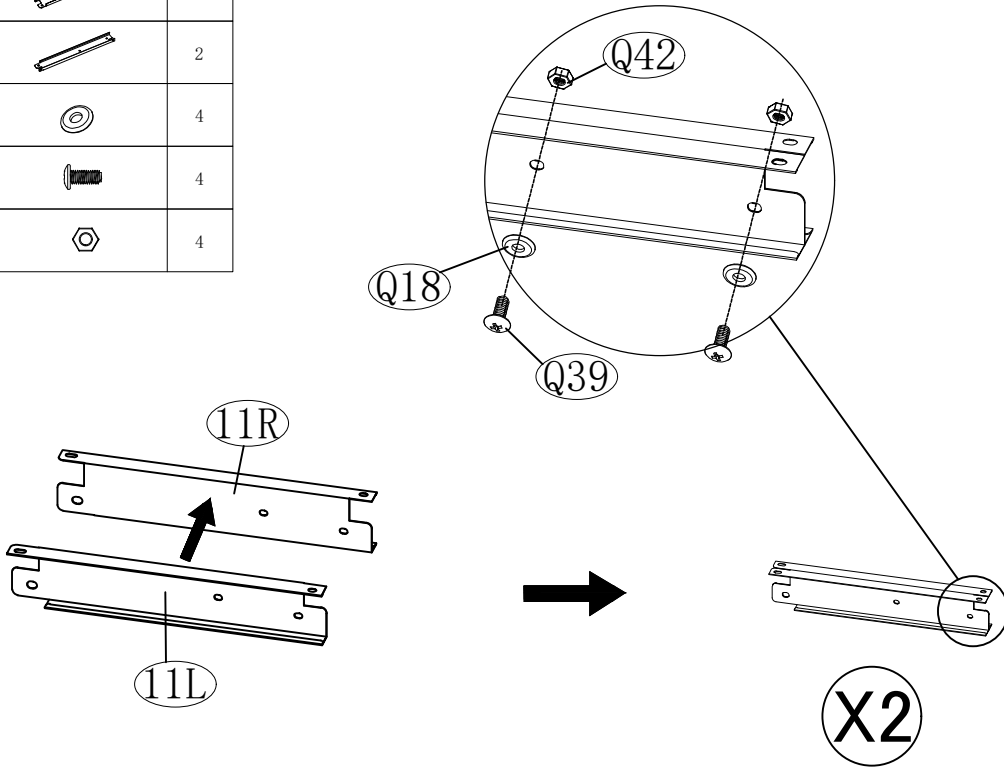
Note: The side of pipe No. 5 with the hole should face the inner side of the garage.



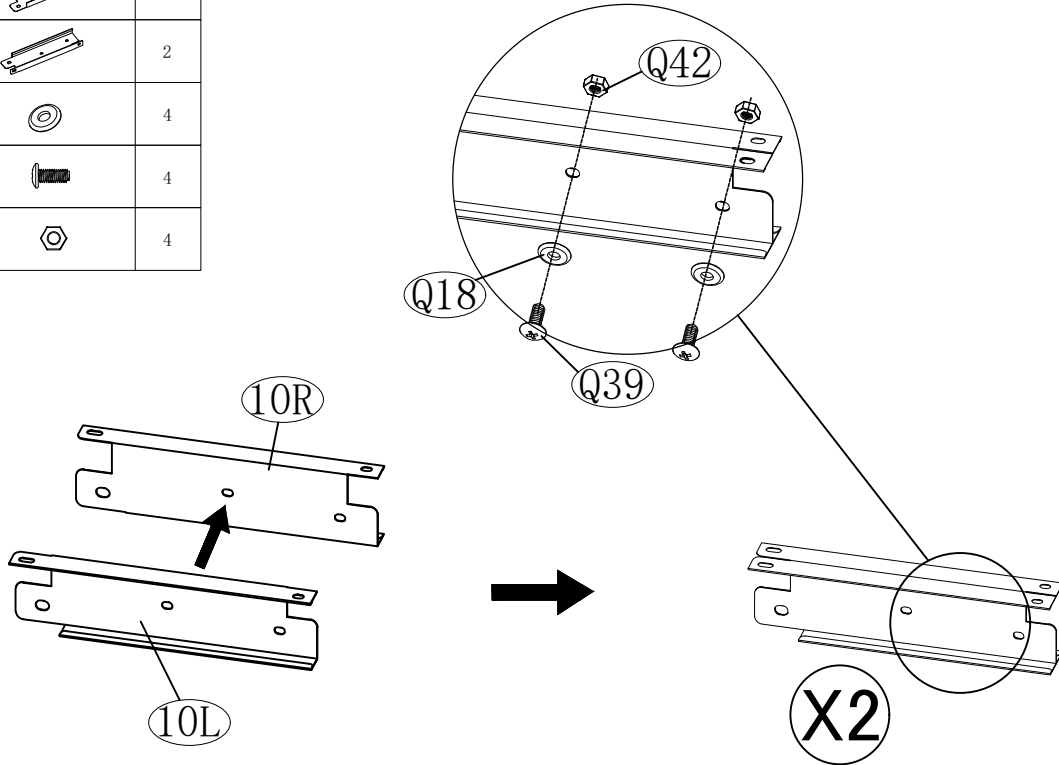
NO.	PART.	Qty
7F		2
7B		2
Q10		12

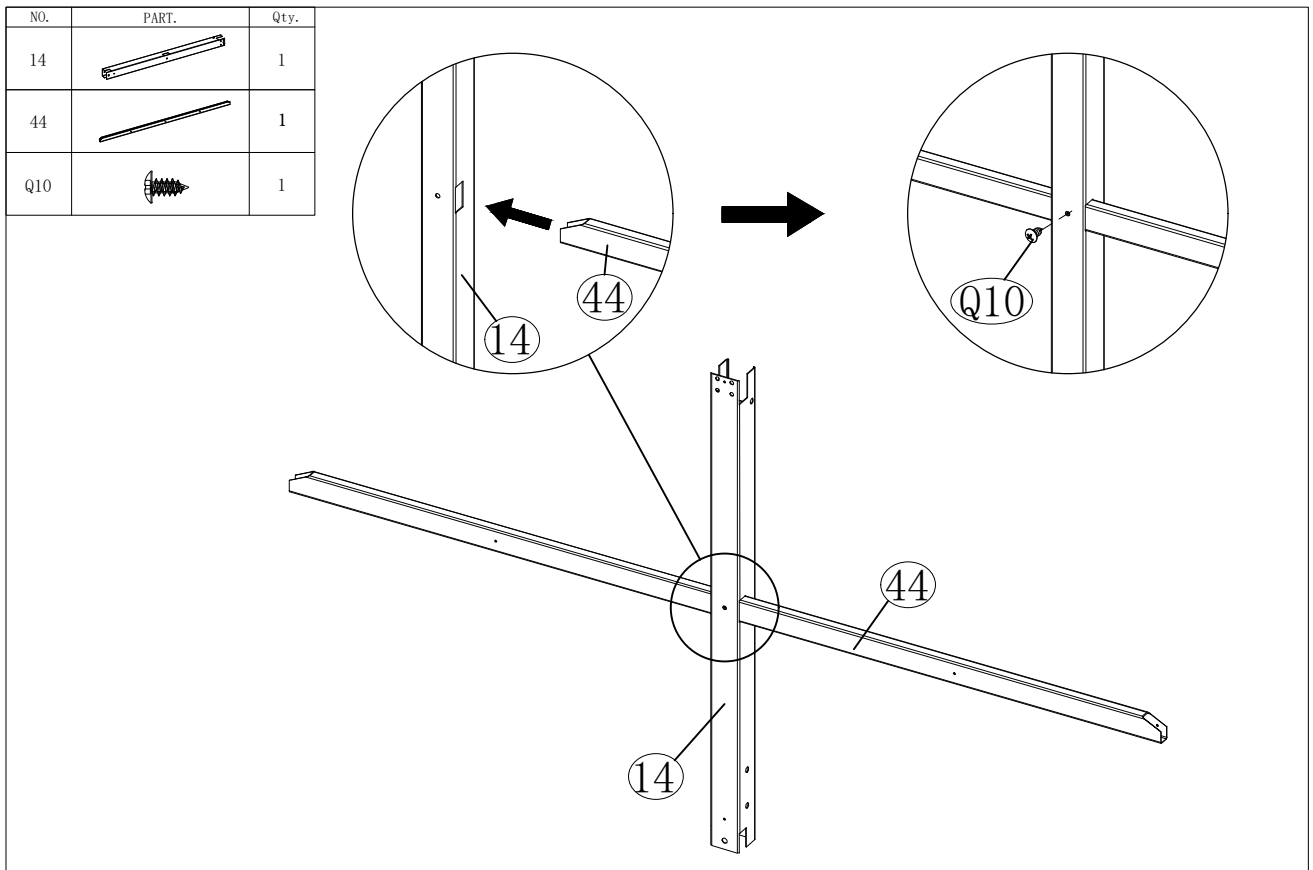
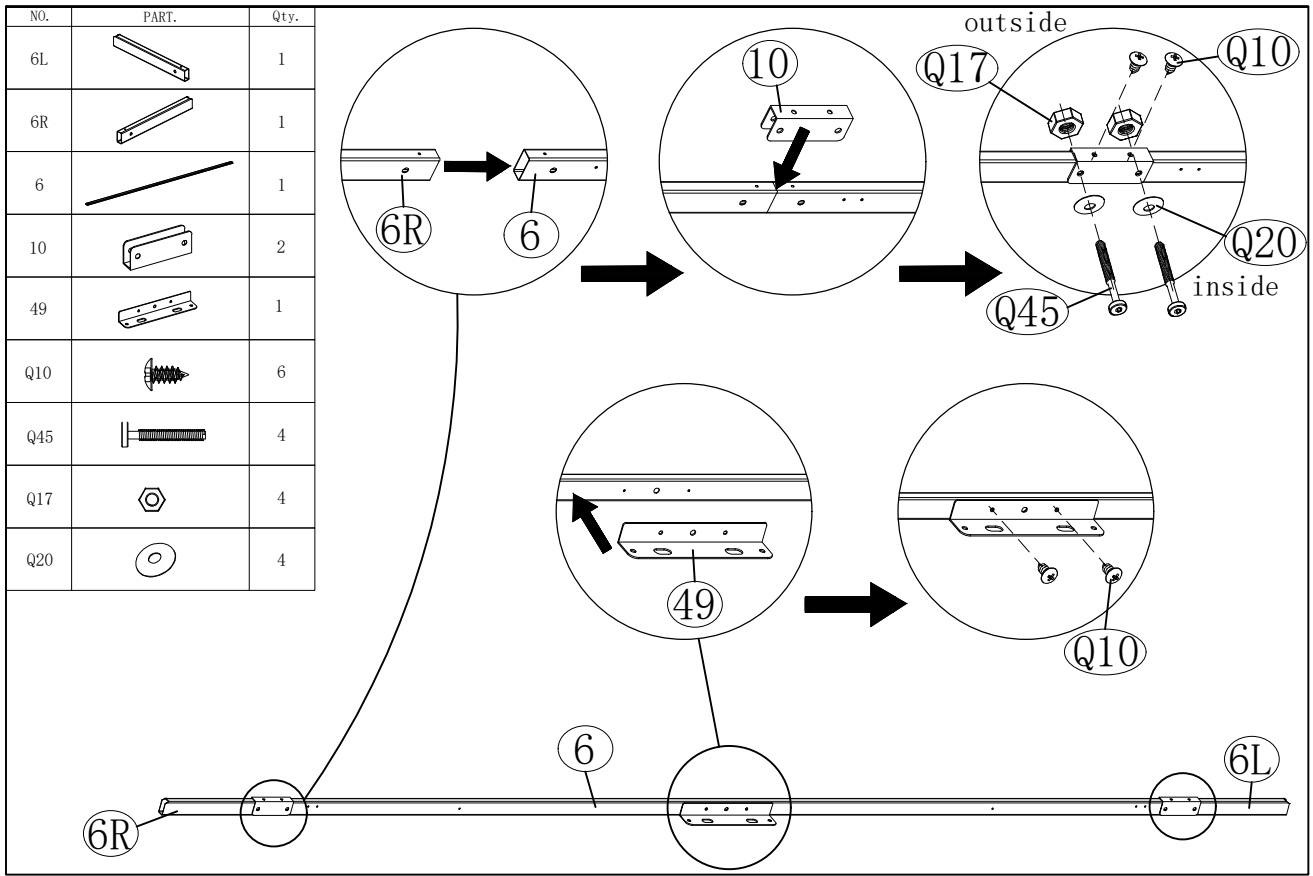











NO.	PART.	Qty.
11L		2
11R		2
Q18		4
Q39		4
Q42		4

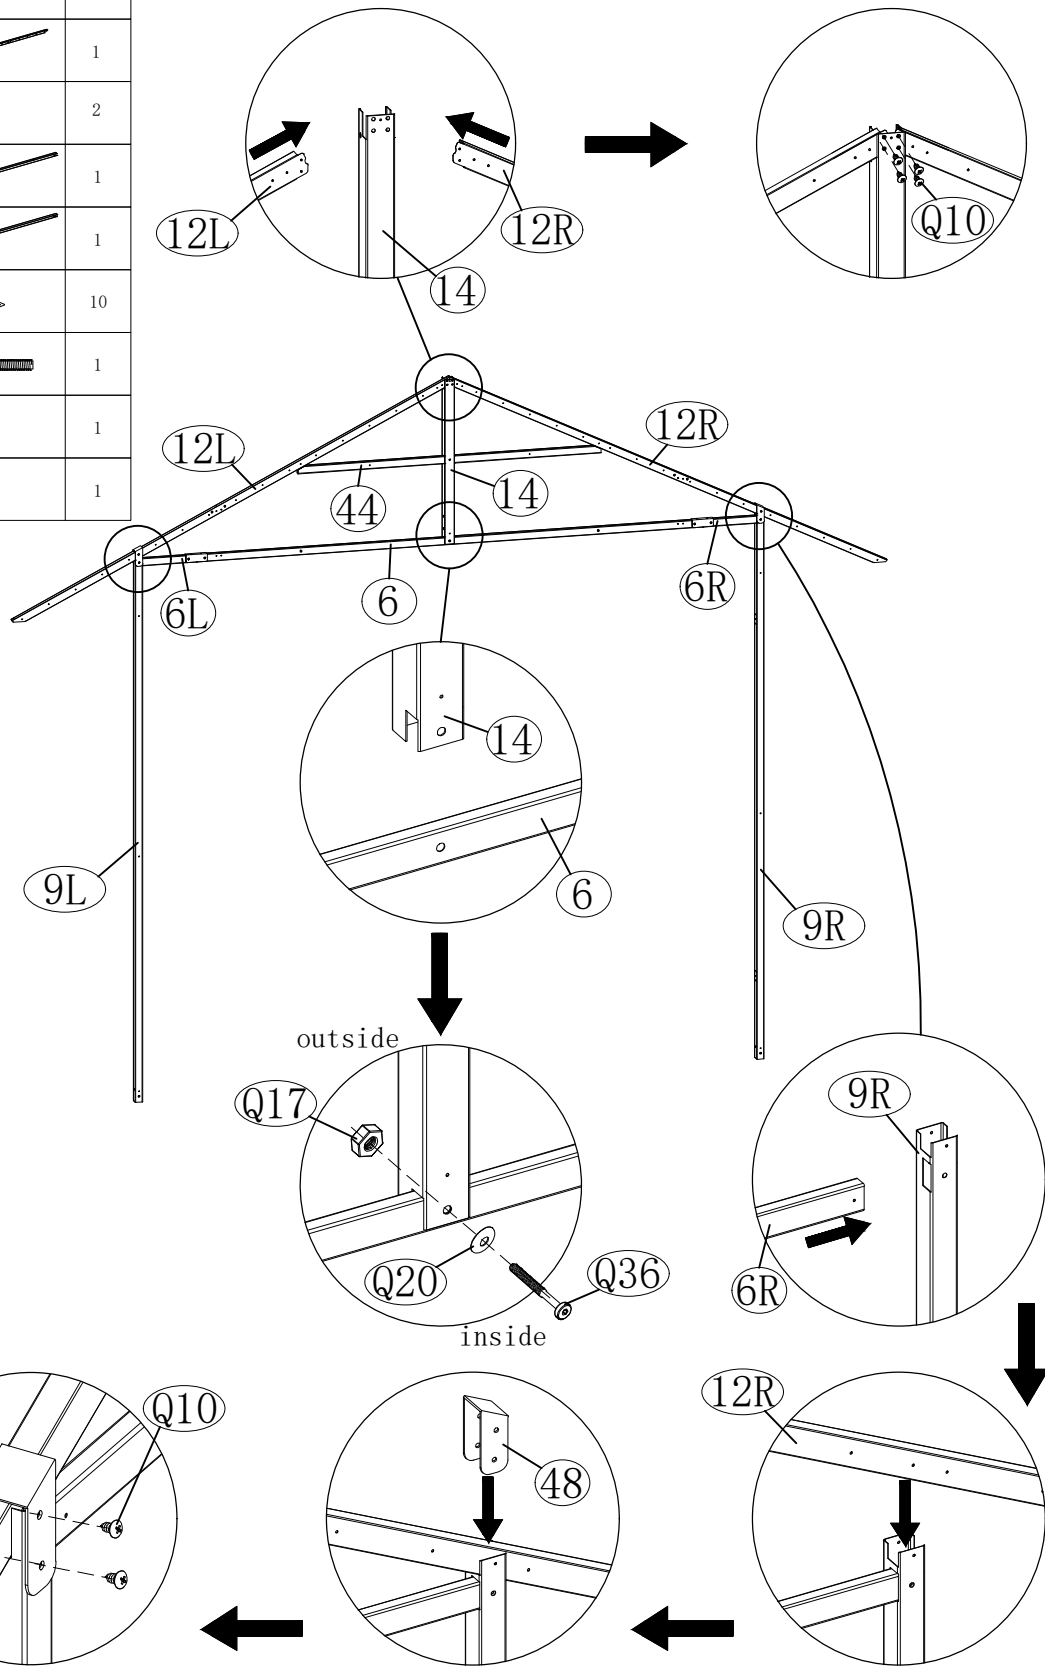


NO.	PART.	Qty.
10L		2
10R		2
Q18		4
Q39		4
Q42		4

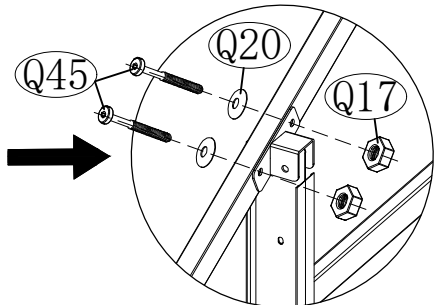
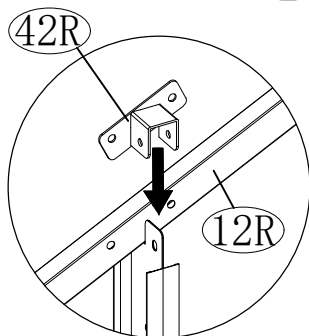
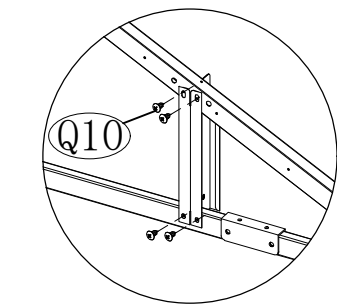
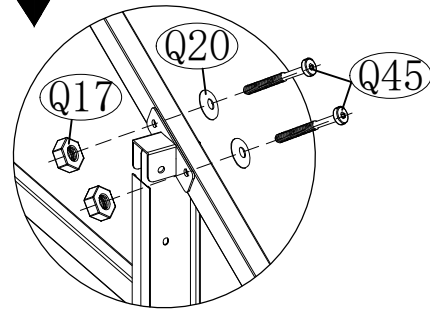
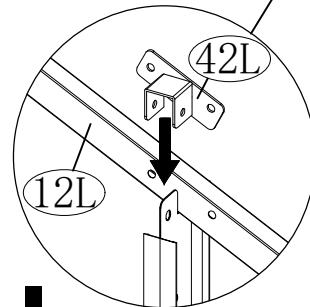
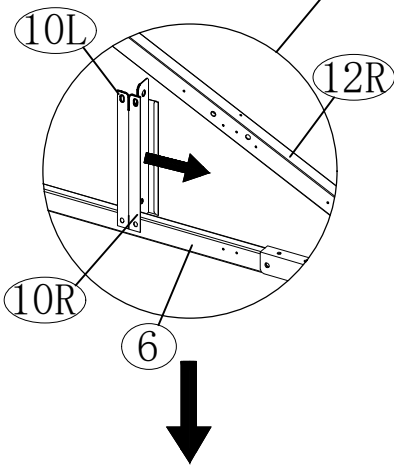
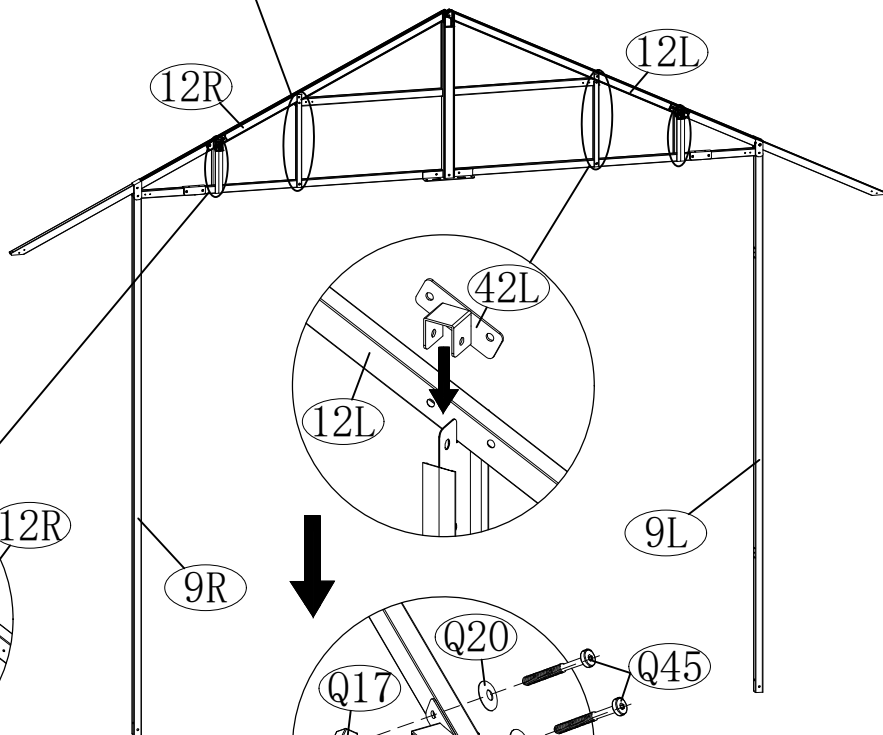
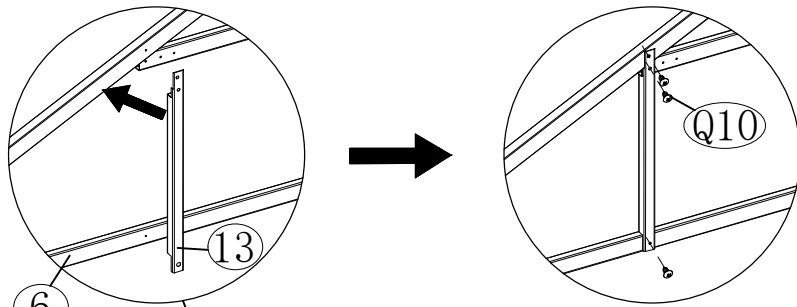




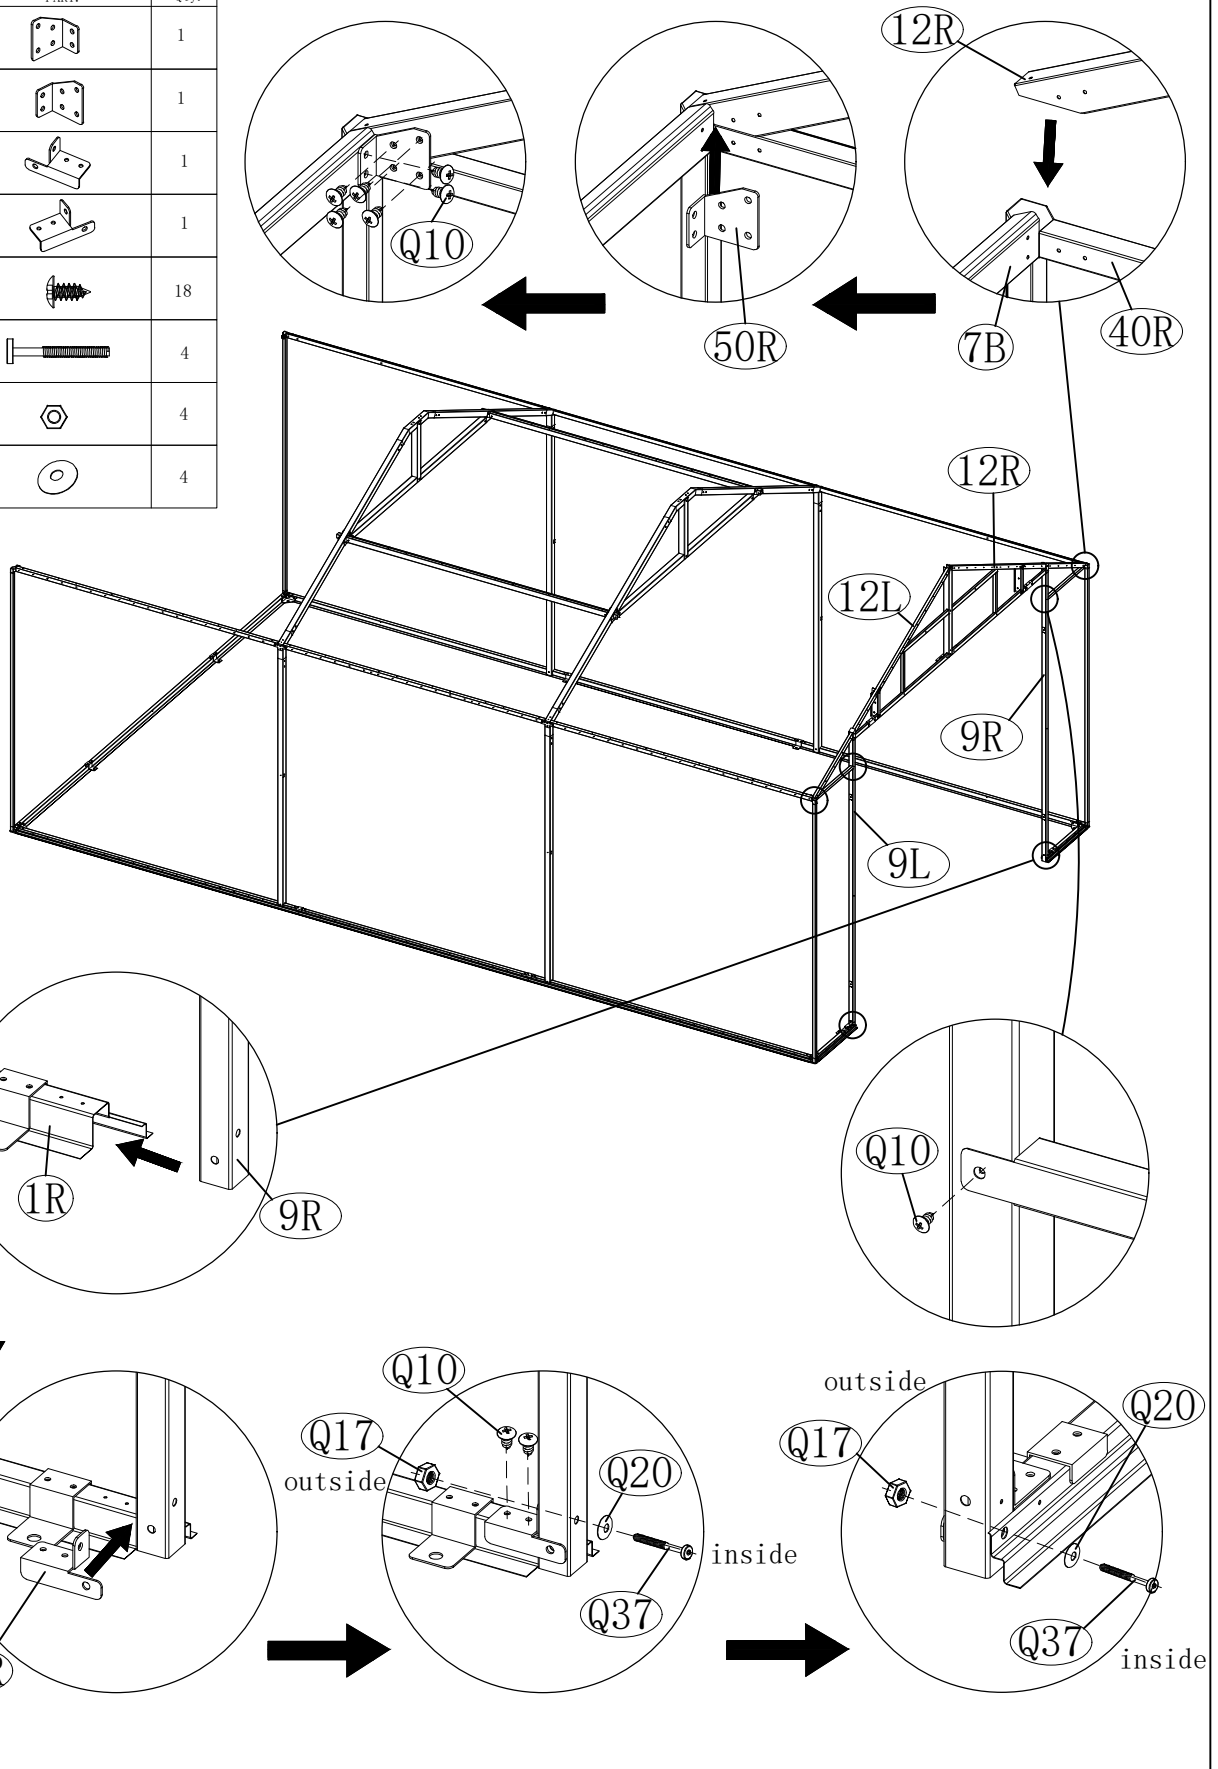
NO.	PART.	Qty.
12L		1
12R		1
48		2
9L		1
9R		1
Q10		10
Q36		1
Q17		1
Q20		1






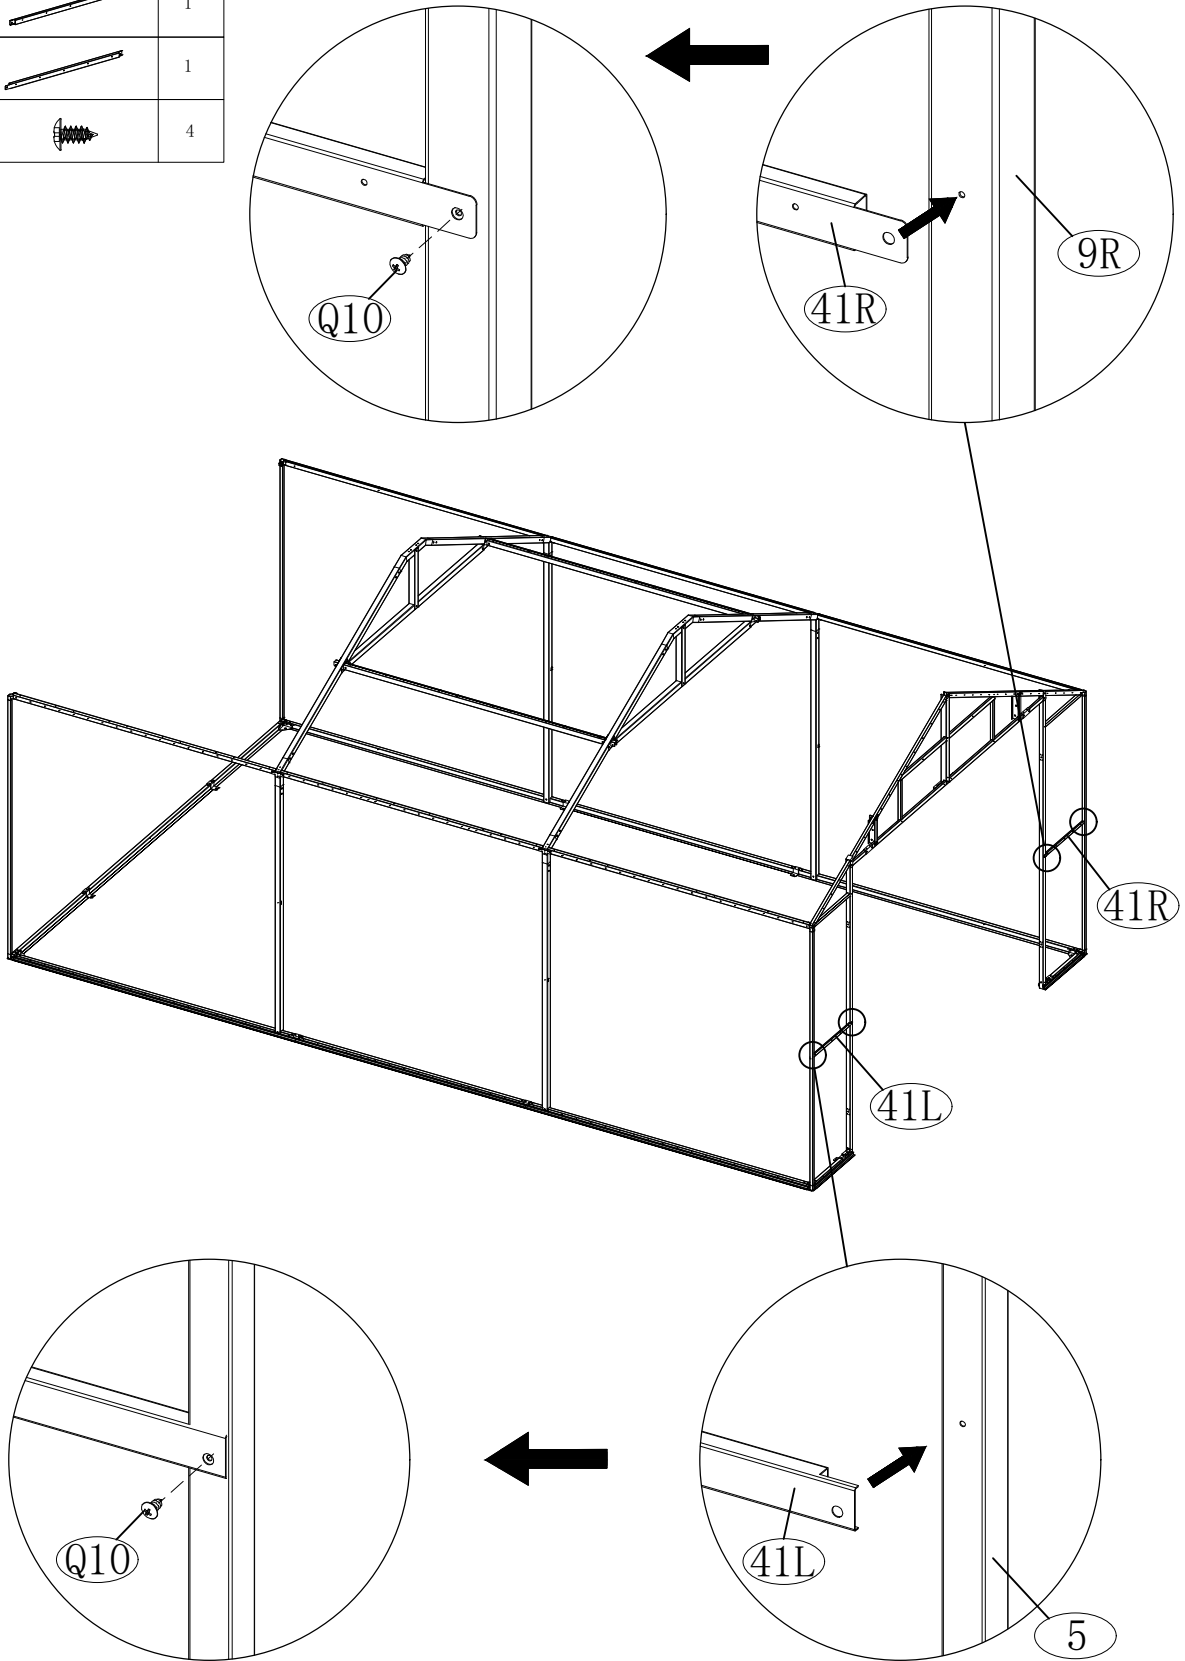
NO.	PART.	Qty.
13		2
42L		1
42R		1
Q10		14
Q45		4
Q17		4
Q20		4











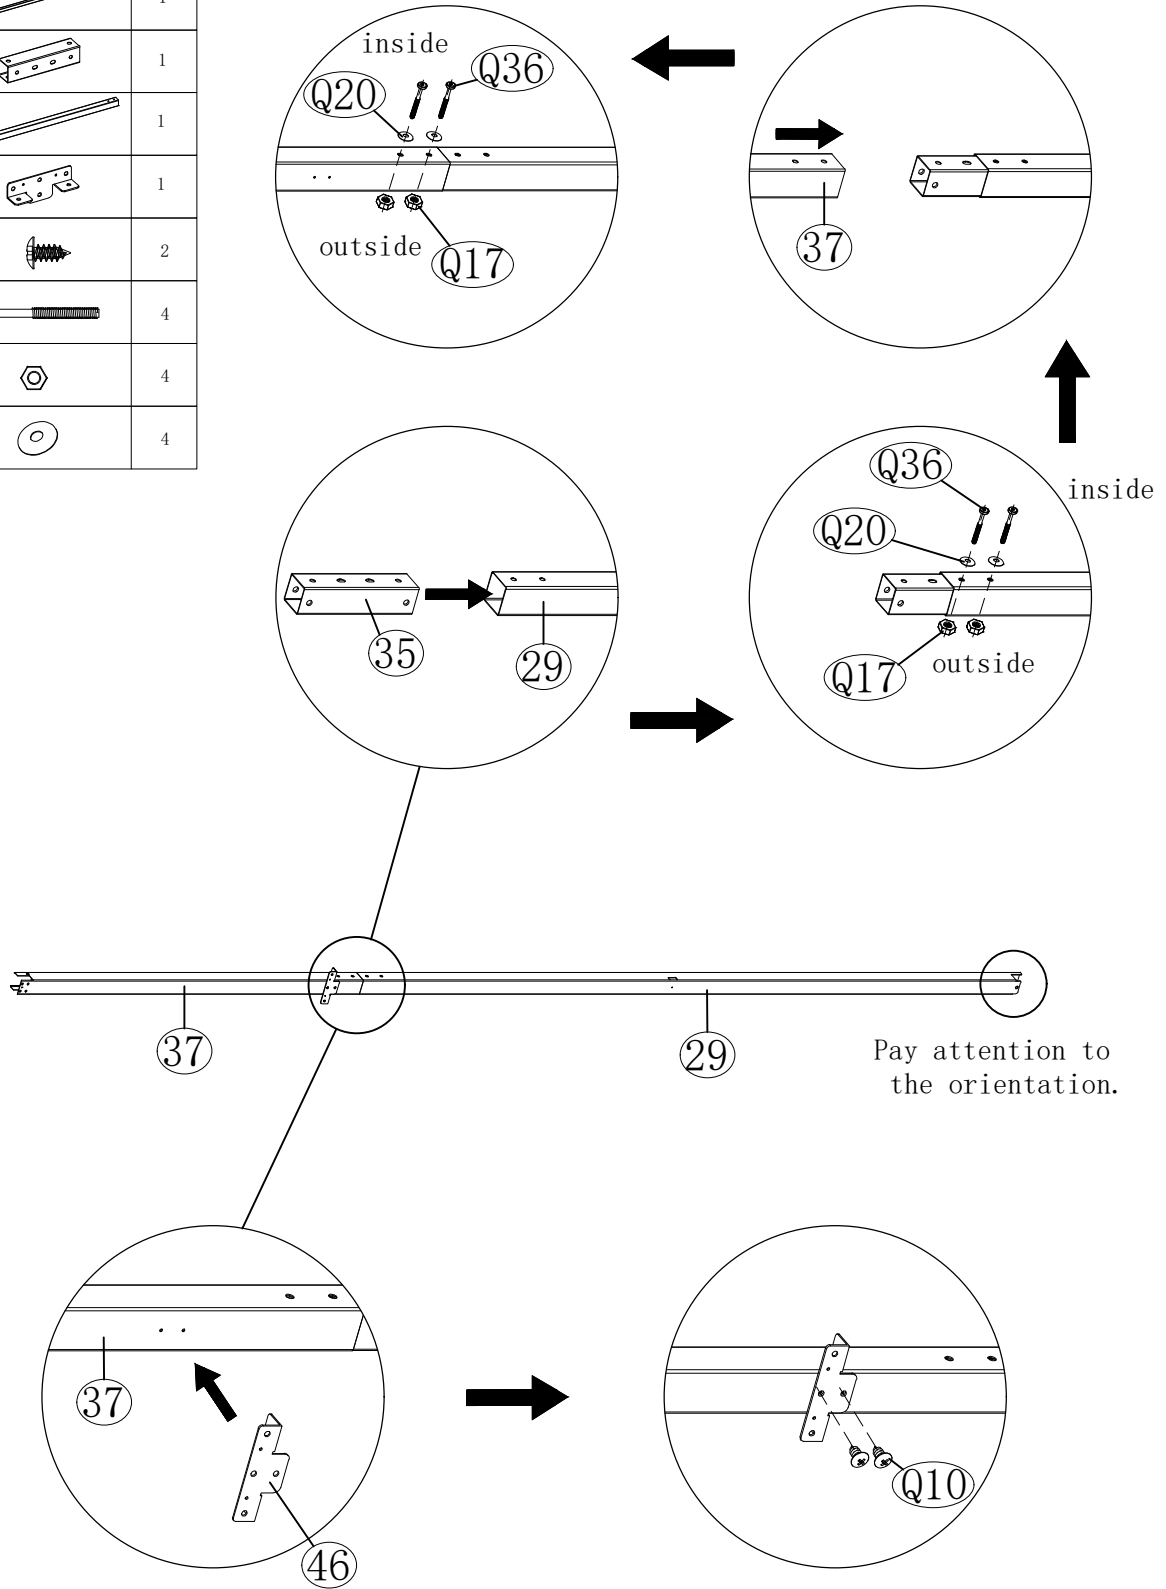
NO.	PART.	Qty.
50L		1
50R		1
45L		1
45R		1
Q10		18
Q37		4
Q17		4
Q20		4










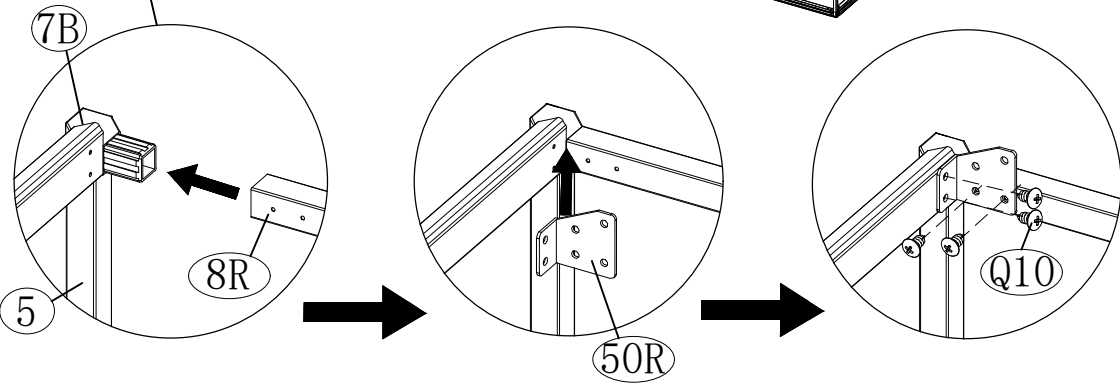
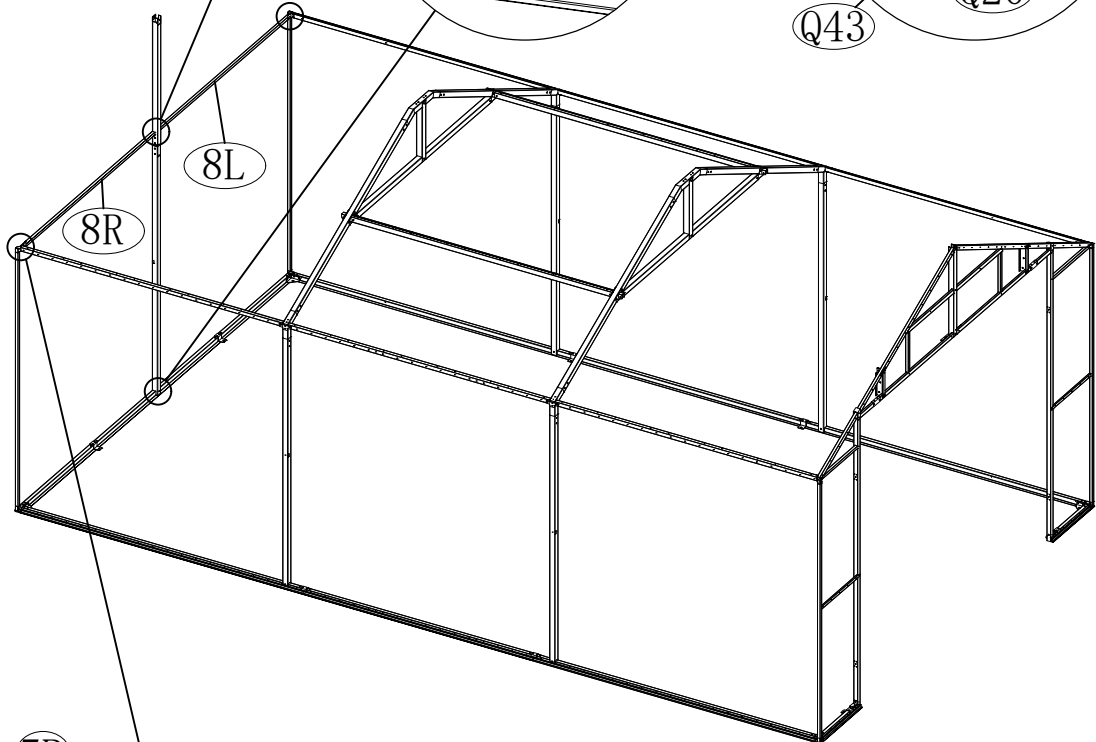
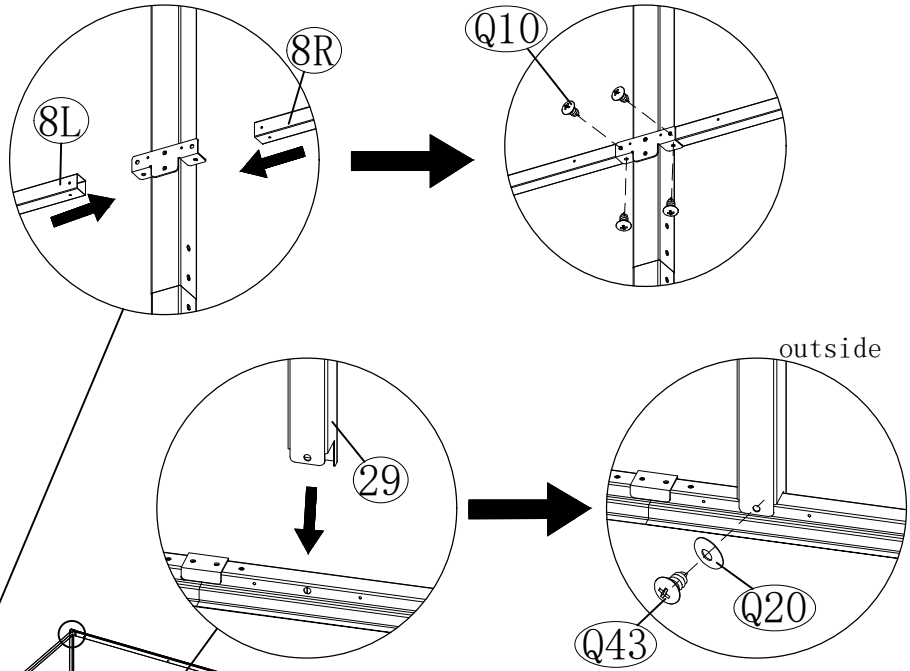
NO.	PART.	Qty.
41L		1
41R		1
Q10		4






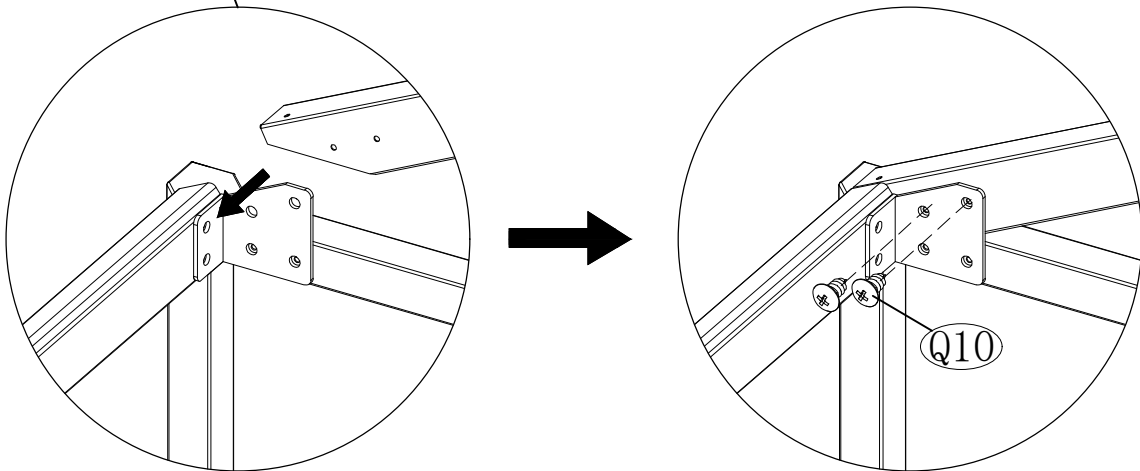
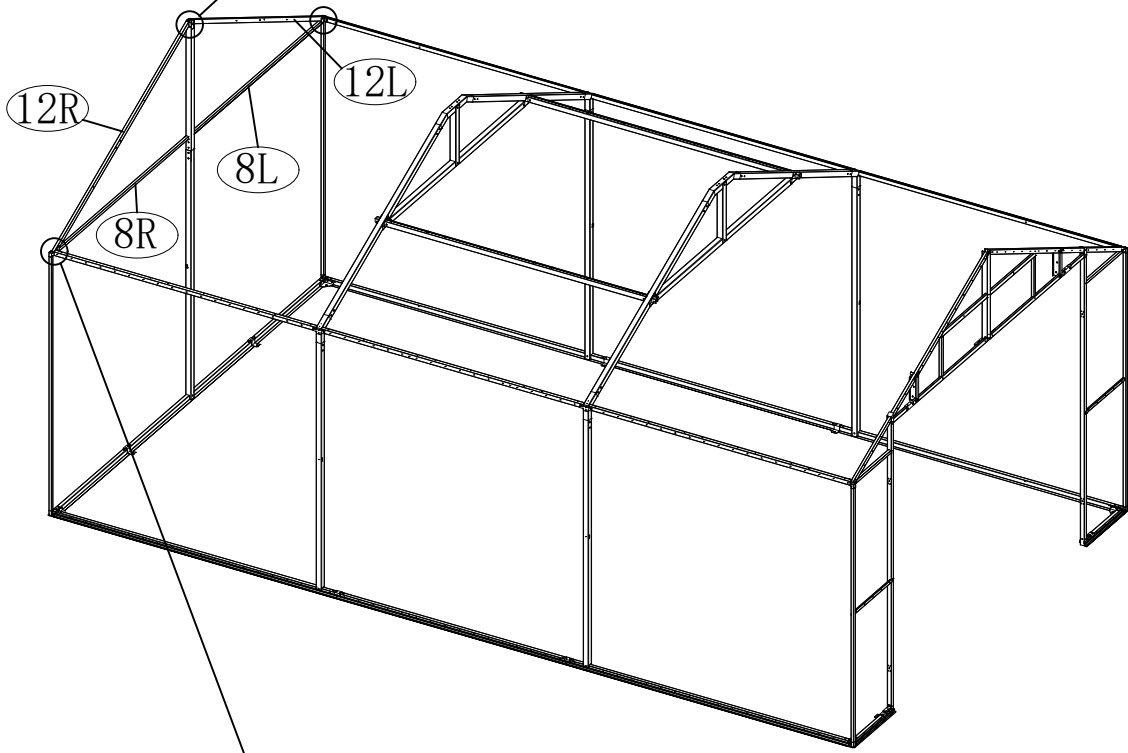
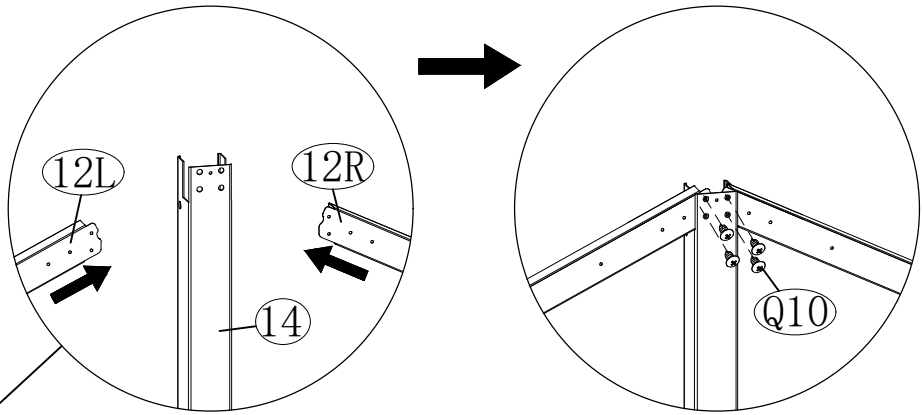
NO.	PART.	Qty.
29		1
35		1
37		1
46		1
Q10		2
Q36		4
Q17		4
Q20		4



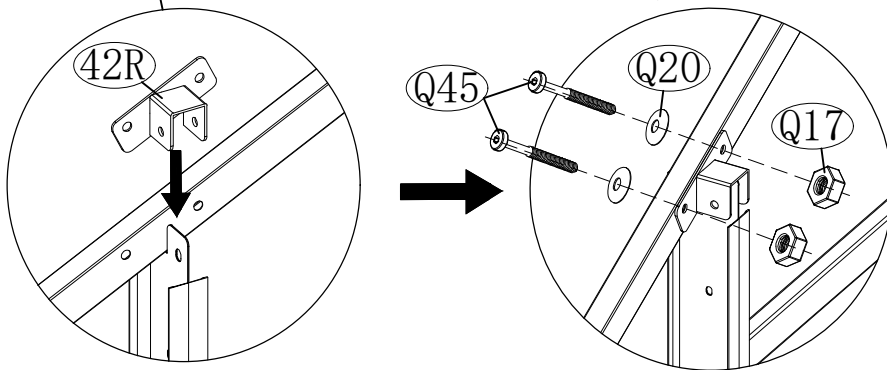
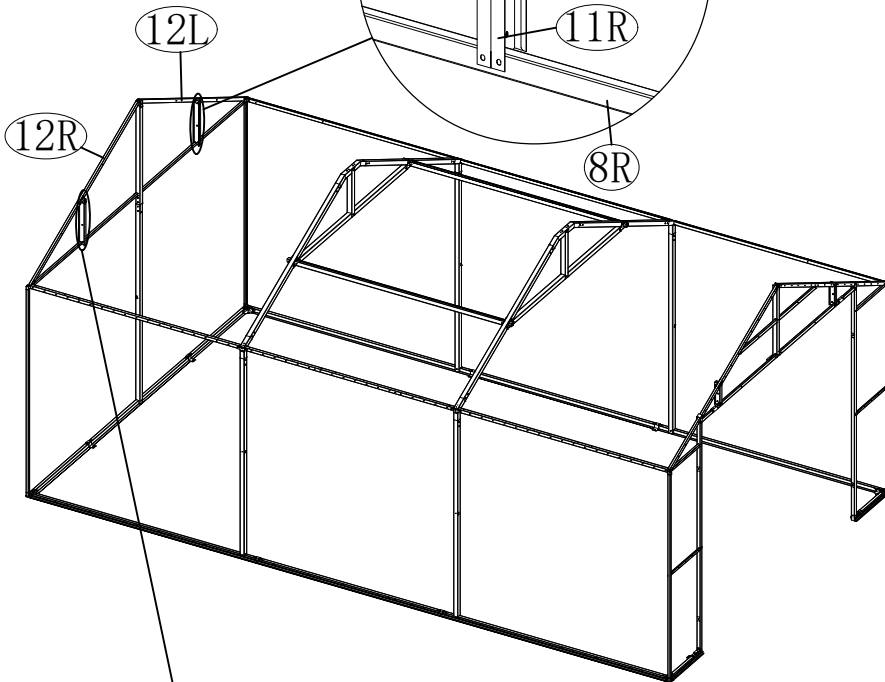
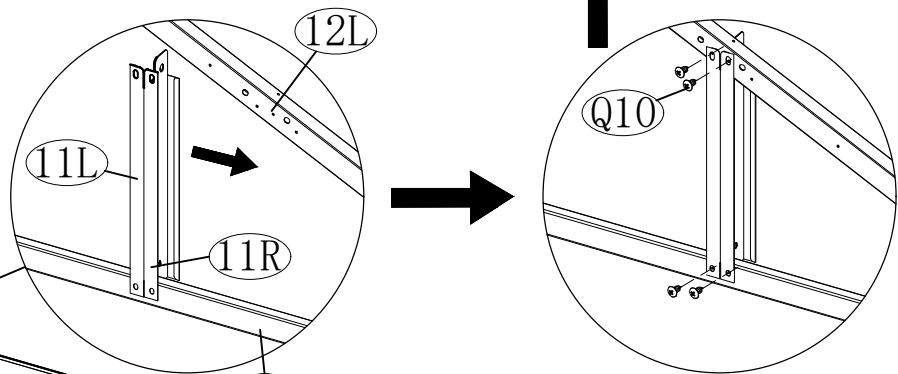
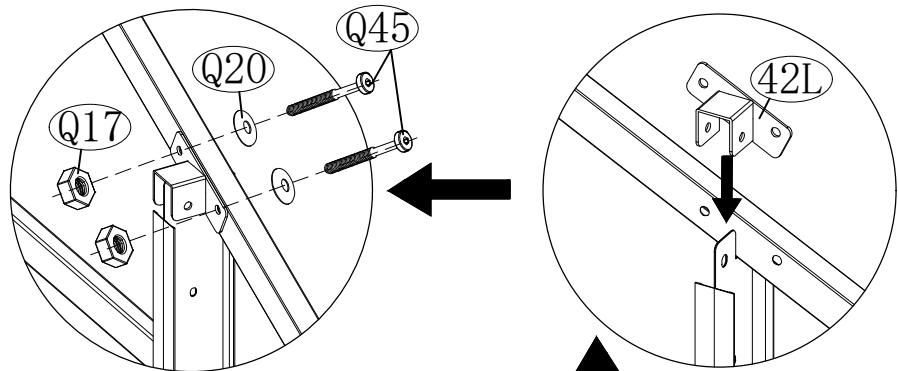
NO.	PART.	Qty.
8L		1
8R		1
50L		1
50R		1
Q10		12
Q43		1
Q20		1






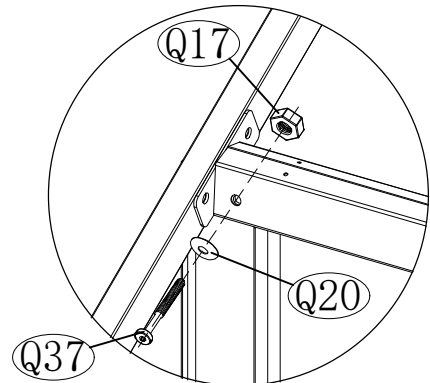
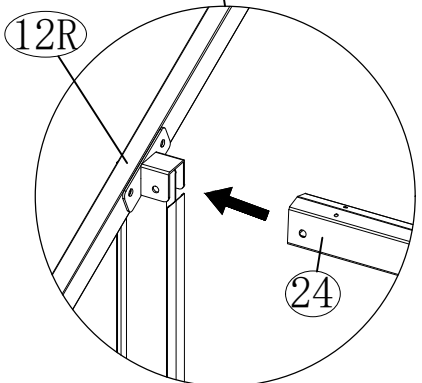
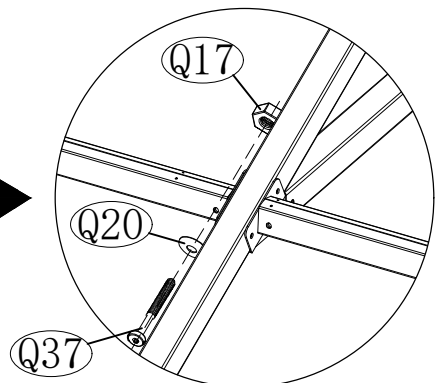
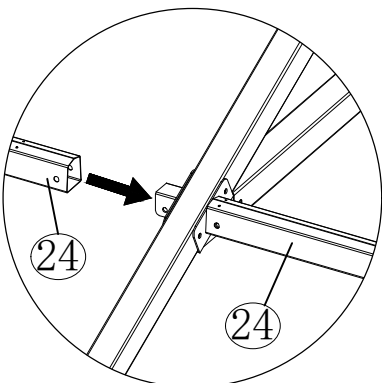
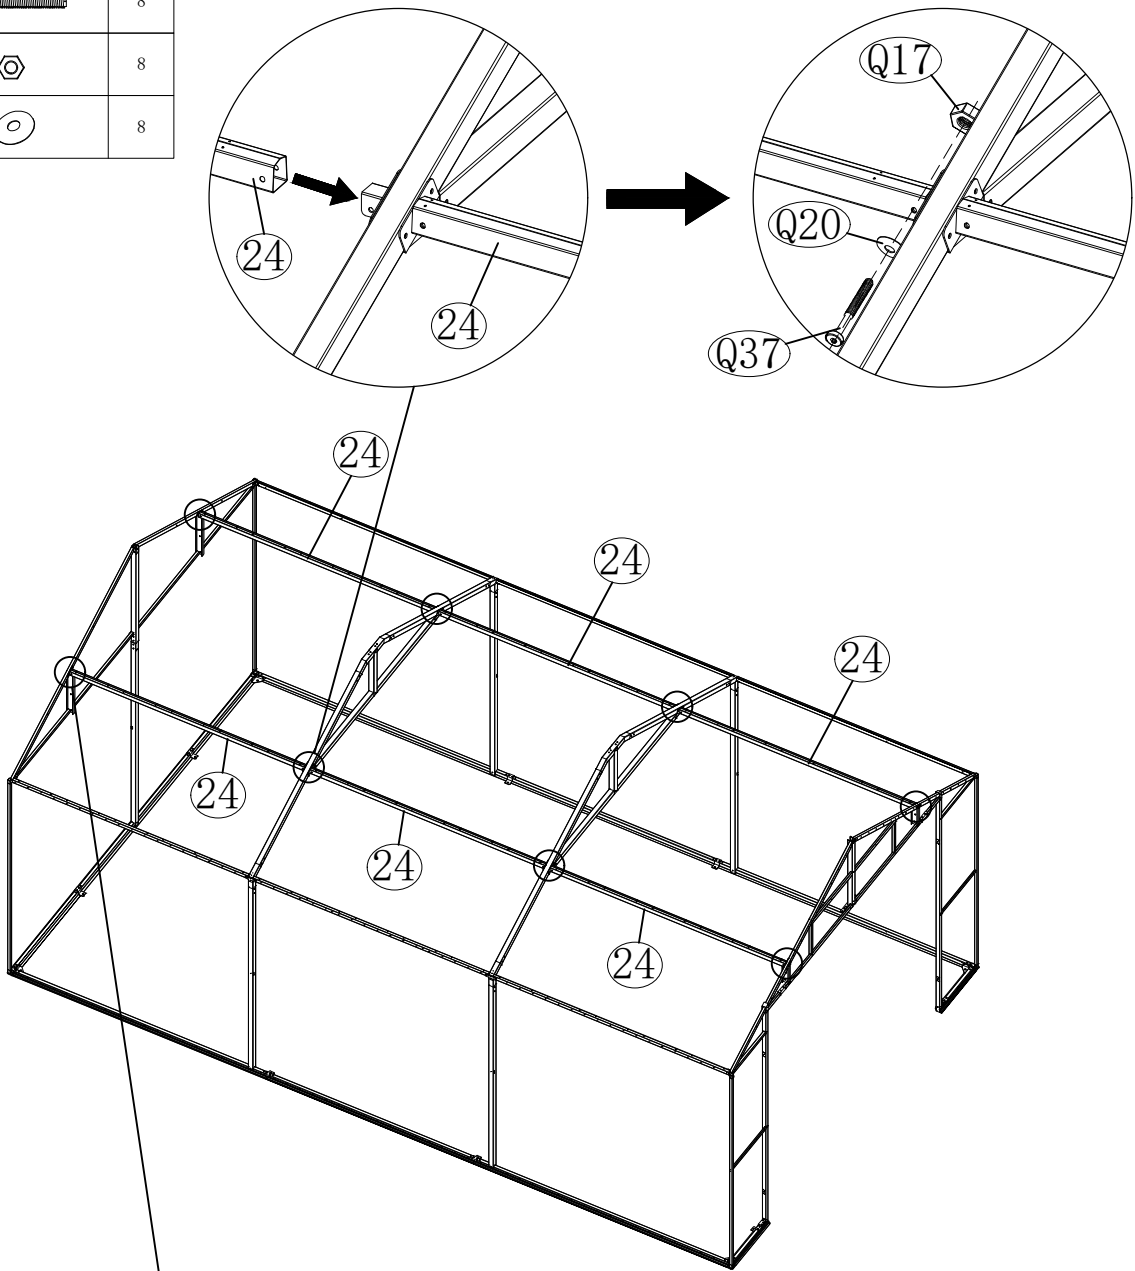
NO.	PART.	Qty.
12L		1
12R		1
Q10		8









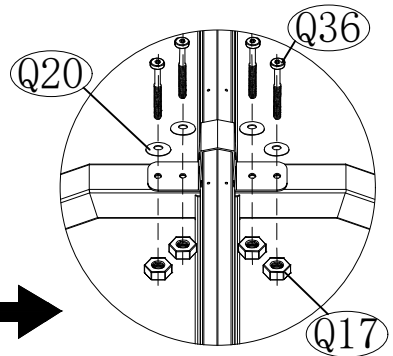
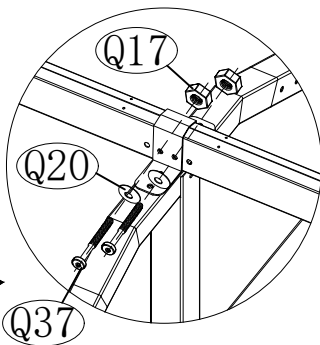
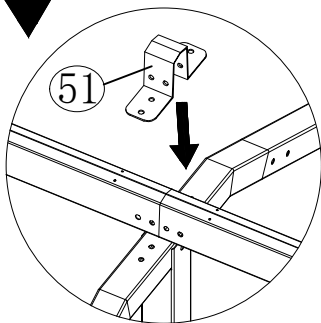
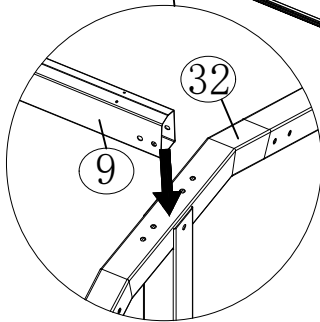
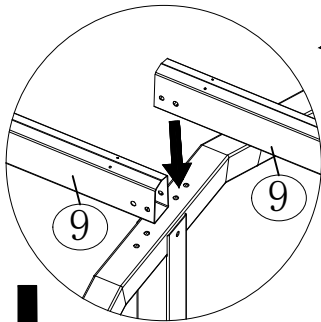
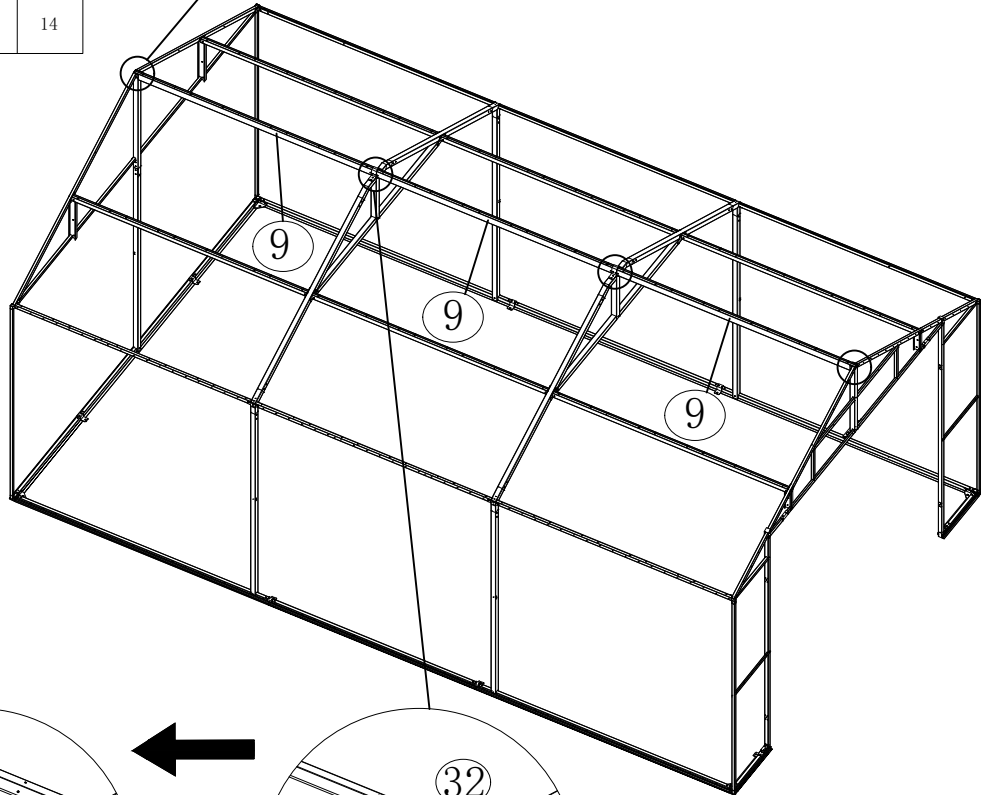
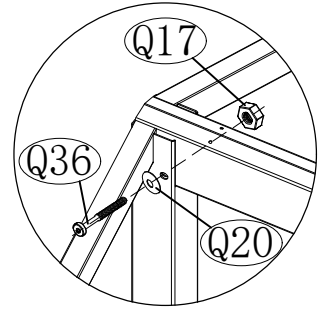
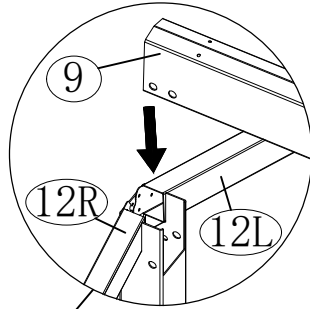
NO.	PART.	Qty.
42L		1
42R		1
Q10		8
Q45		4
Q17		4
Q20		4



NO.	PART.	Qty.
Q37		8
Q17		8
Q20		8



NO.	PART.	Qty.
9		3
51		2
Q36		10
Q37		4
Q17		14
Q20		14

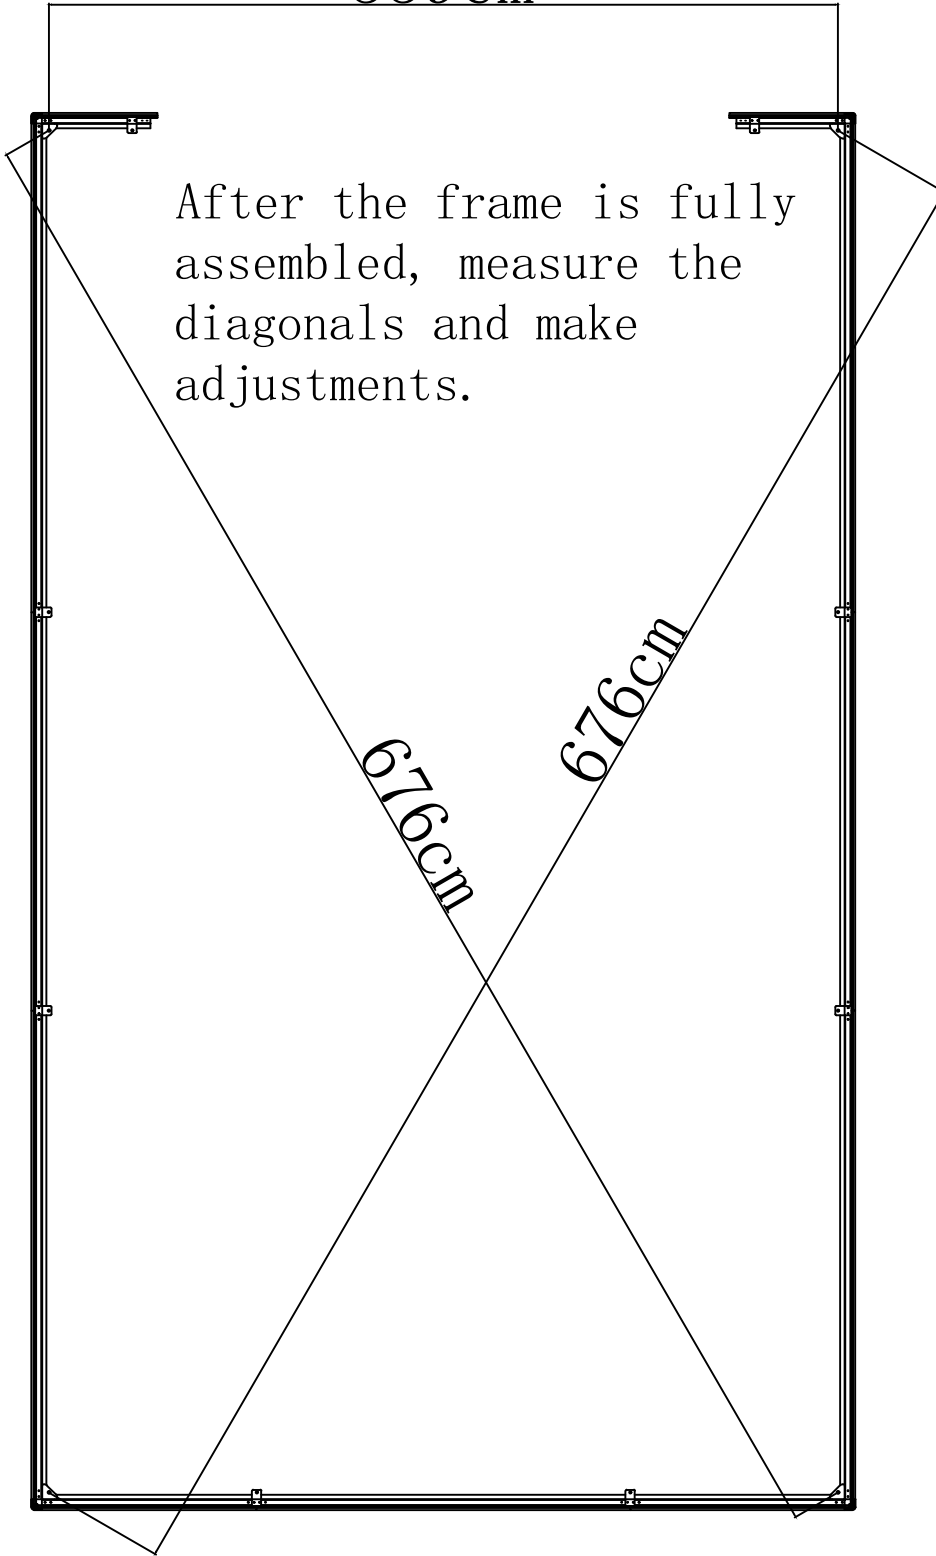





339cm

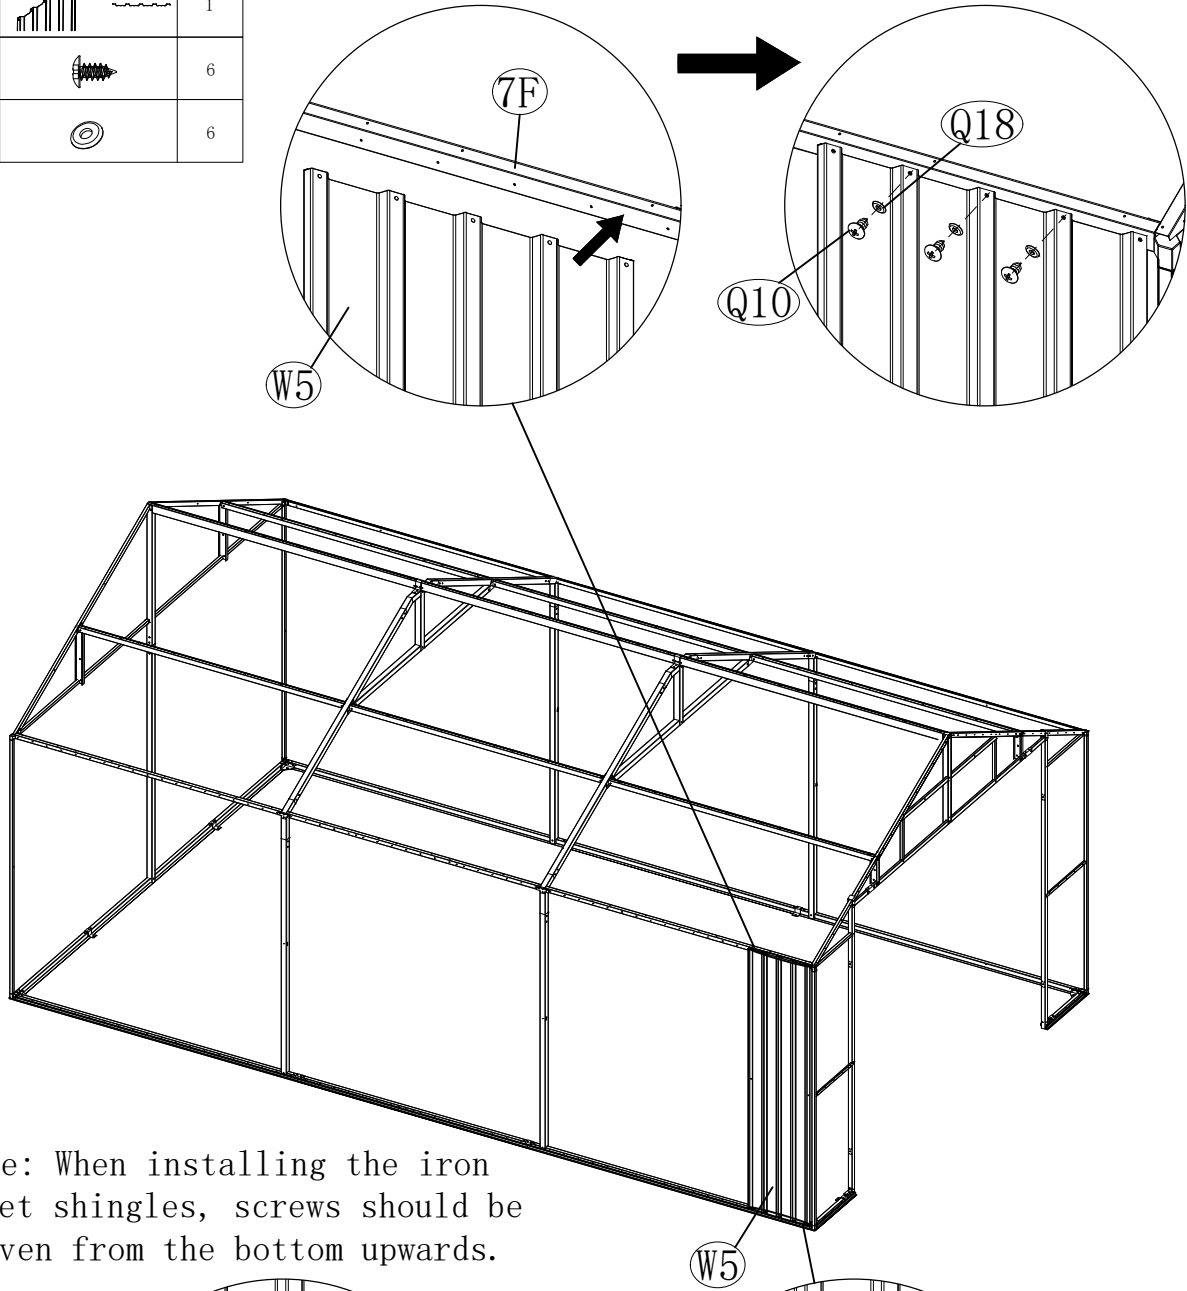
After the frame is fully assembled, measure the diagonals and make adjustments.

676cm

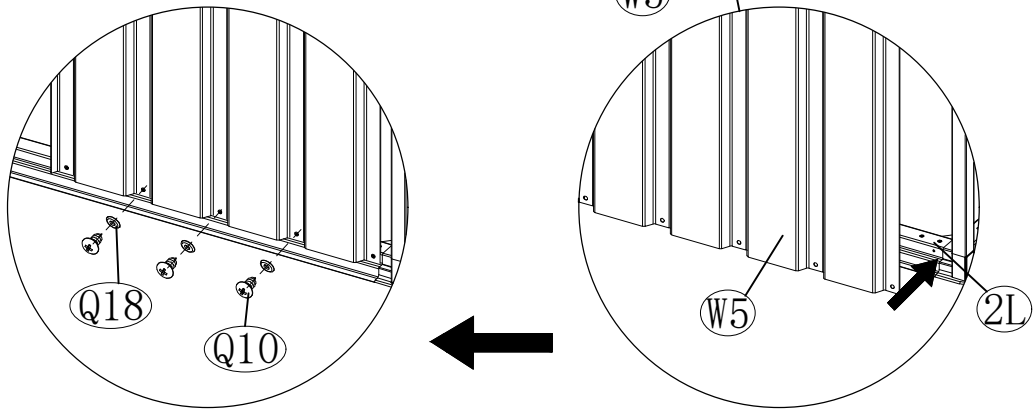
676cm






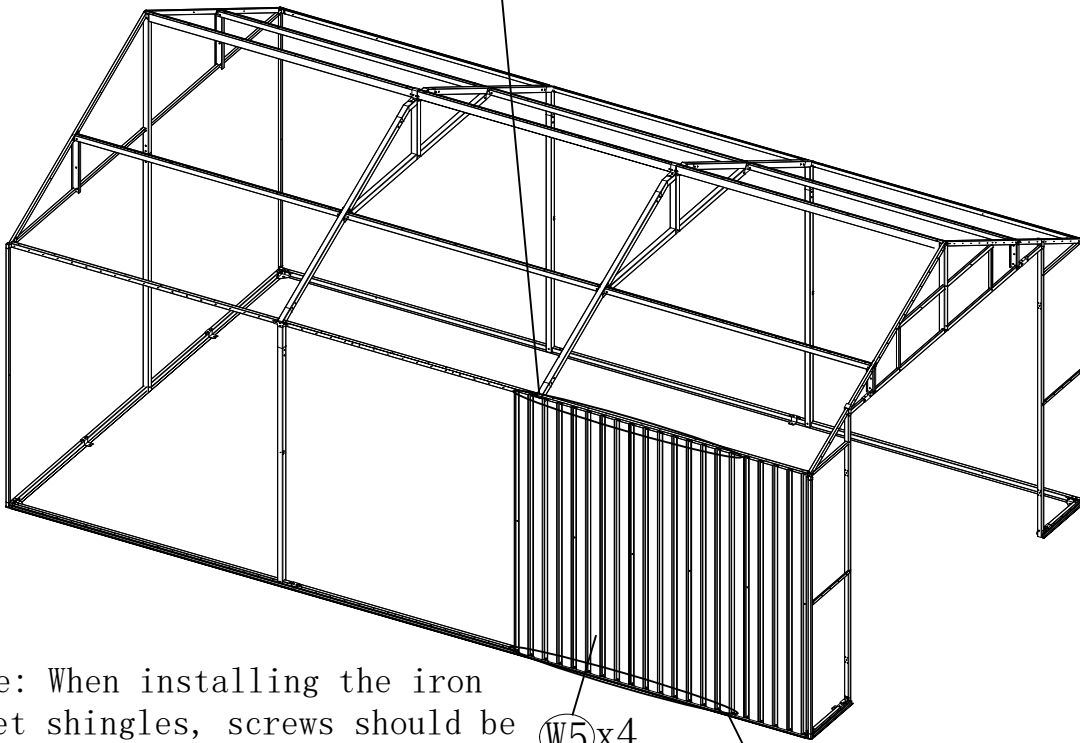
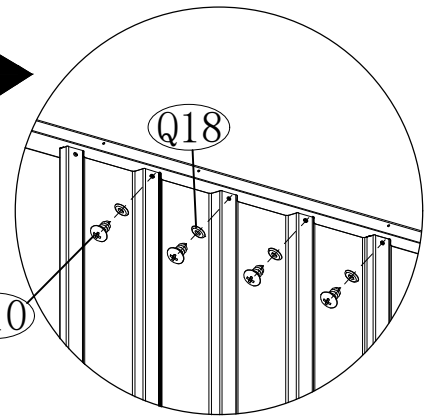
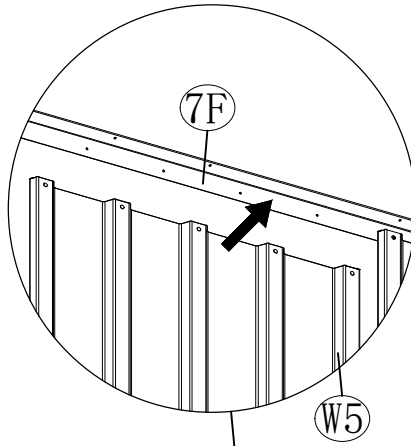
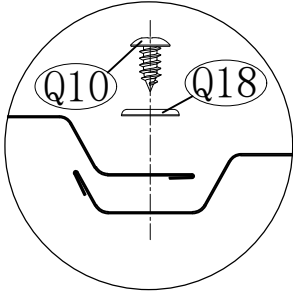
NO.	PART.	Qty.
W5		1
Q10		6
Q18		6



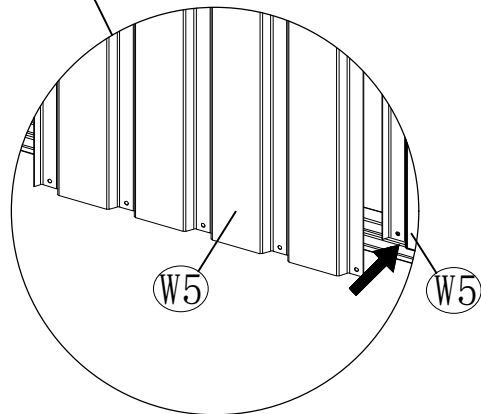
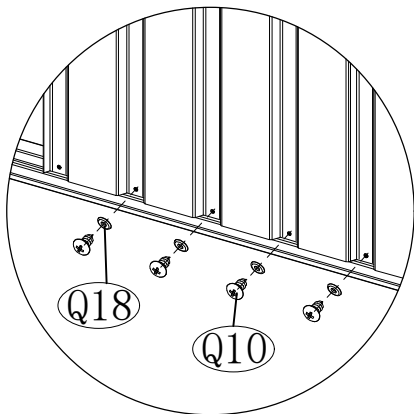
Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.





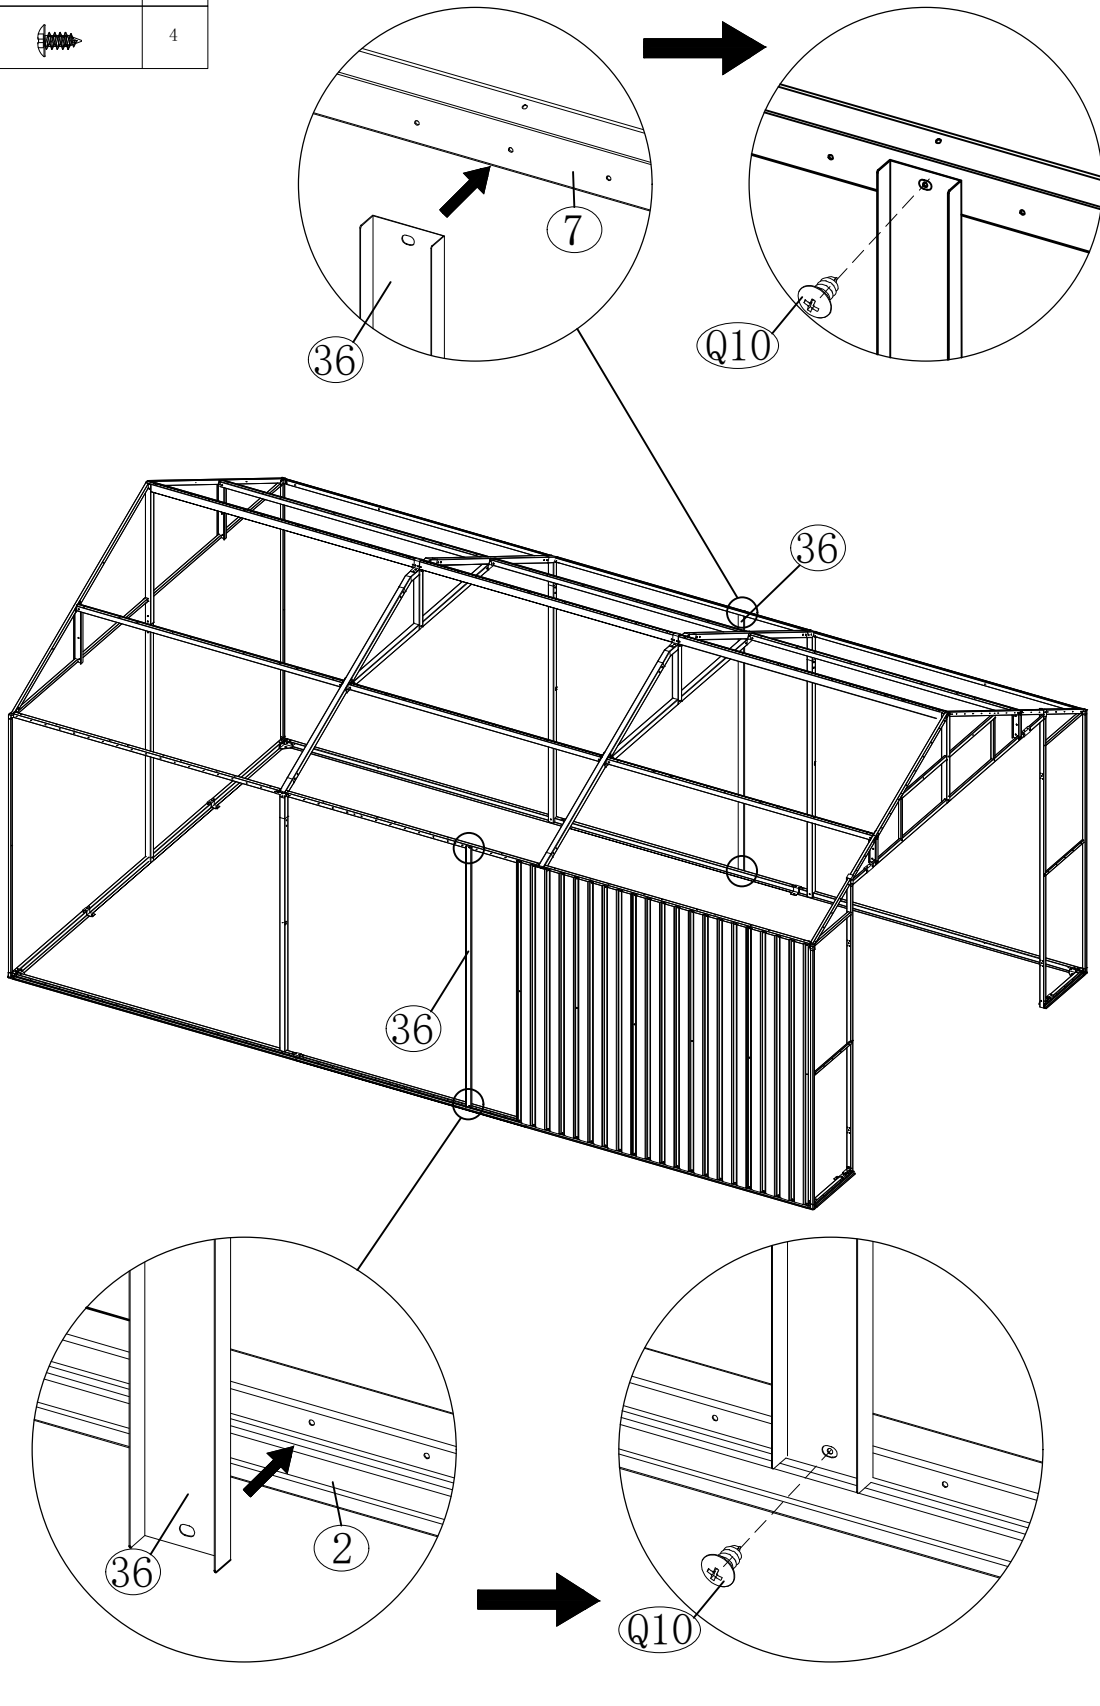
NO.	PART.	Qty.
W5		4
Q10		32
Q18		32







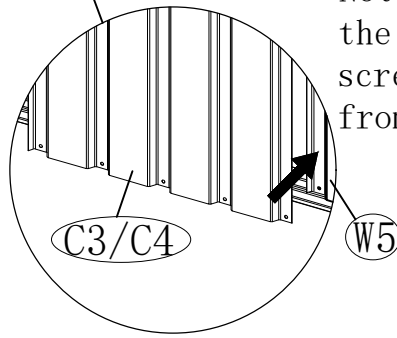
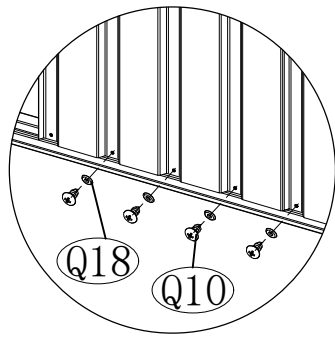
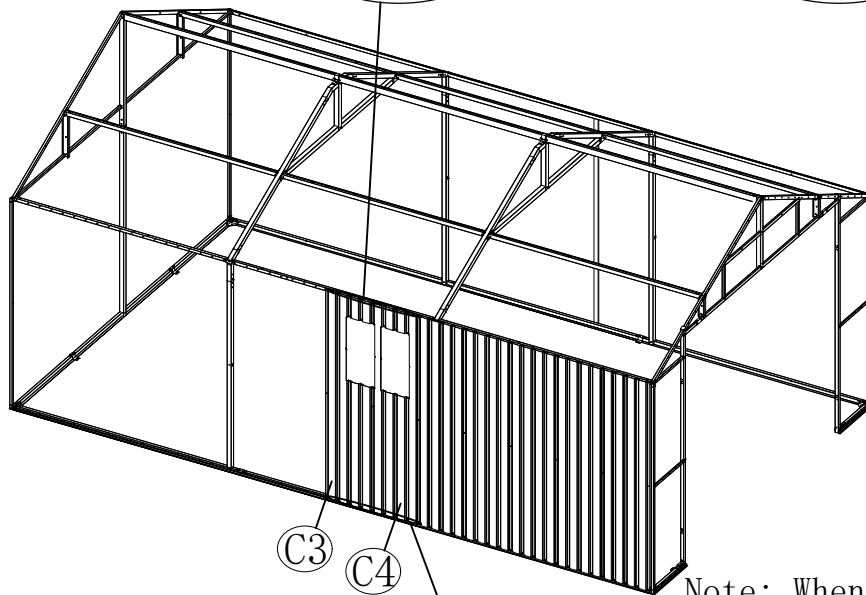
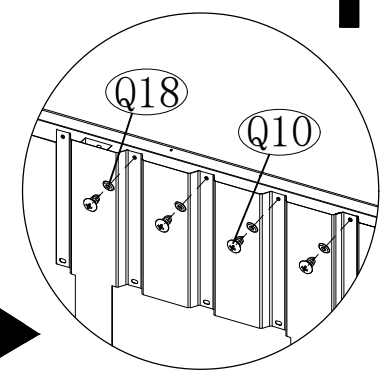
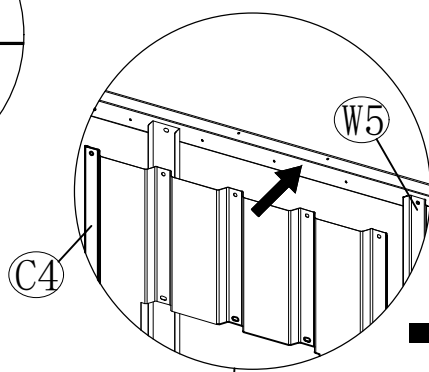
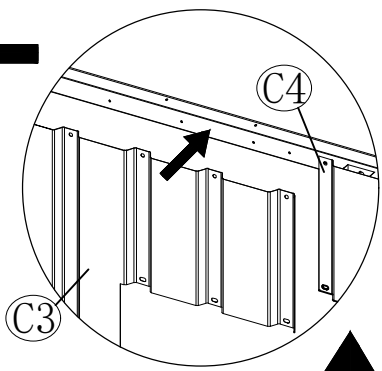
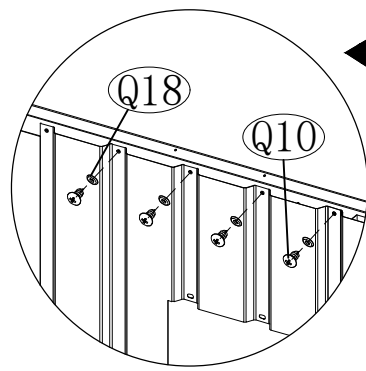
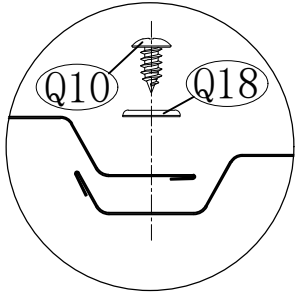
Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards. (W5)x4






NO.	PART.	Qty.
36		2
Q10		4

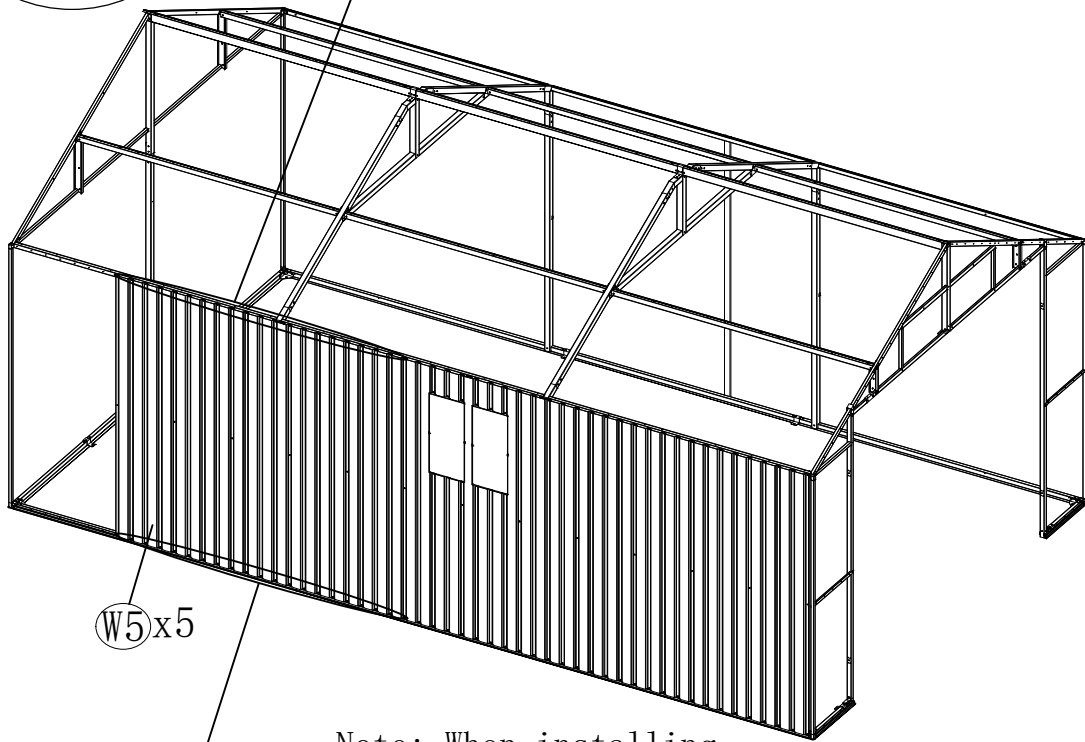
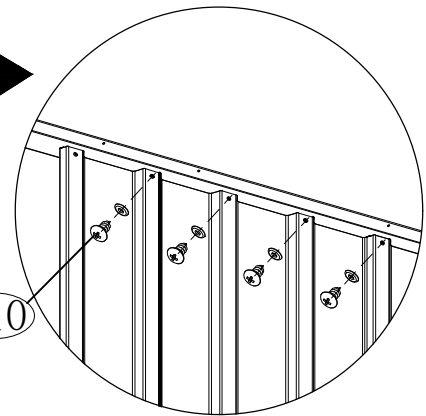
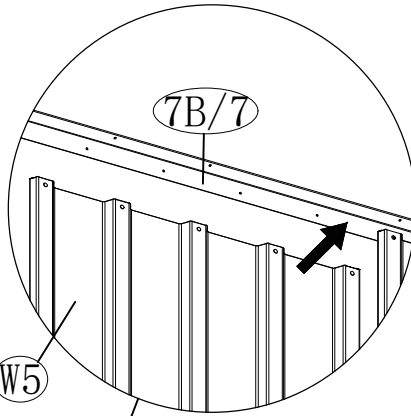
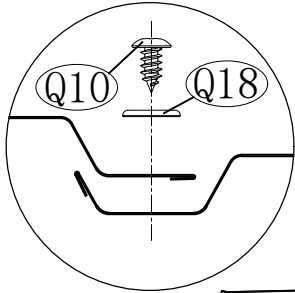


NO.	PART.	Qty.
C3		1
C4		1
Q10		16
Q18		16

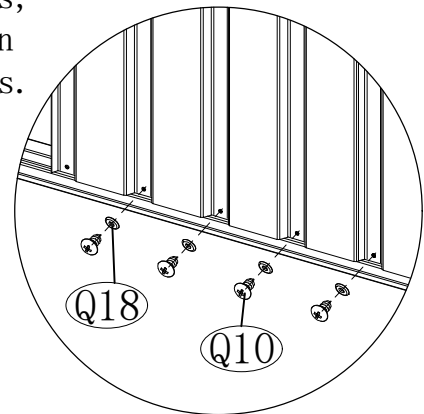
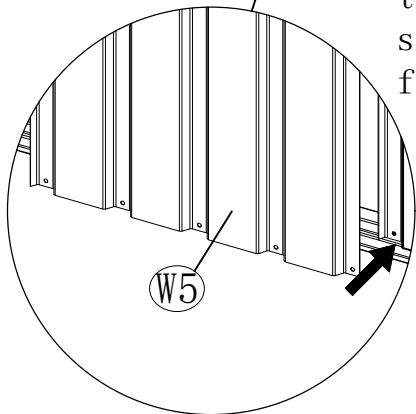








Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.

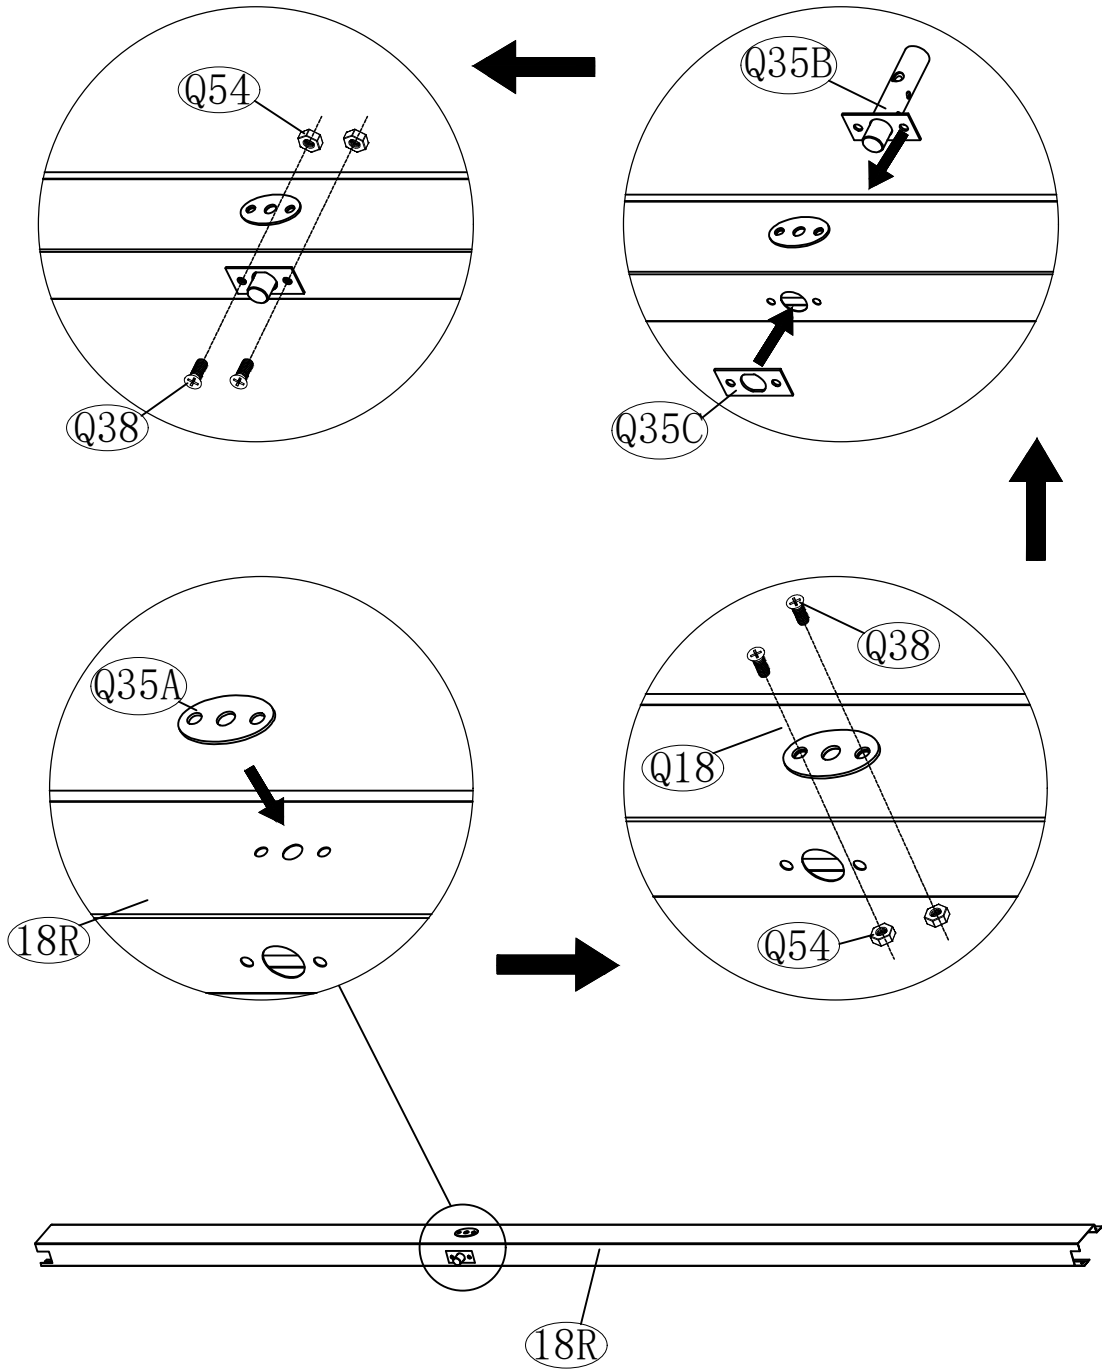
NO.	PART.	Qty.
W5		5
Q10		40
Q18		40





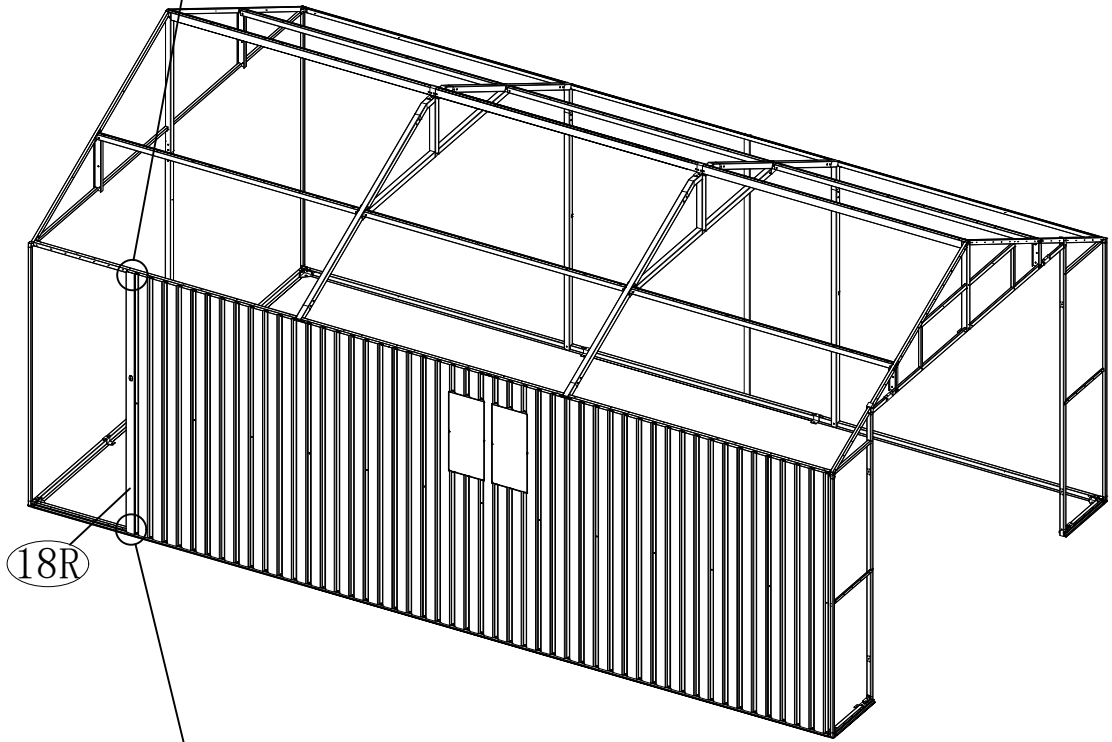
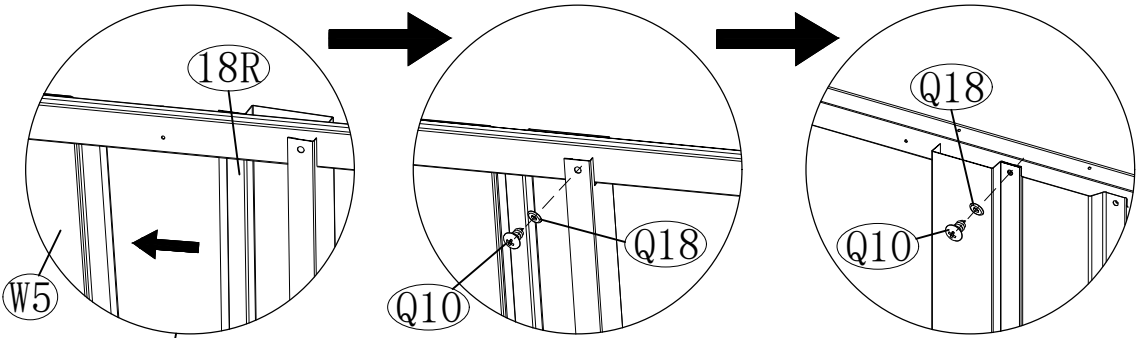
Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.



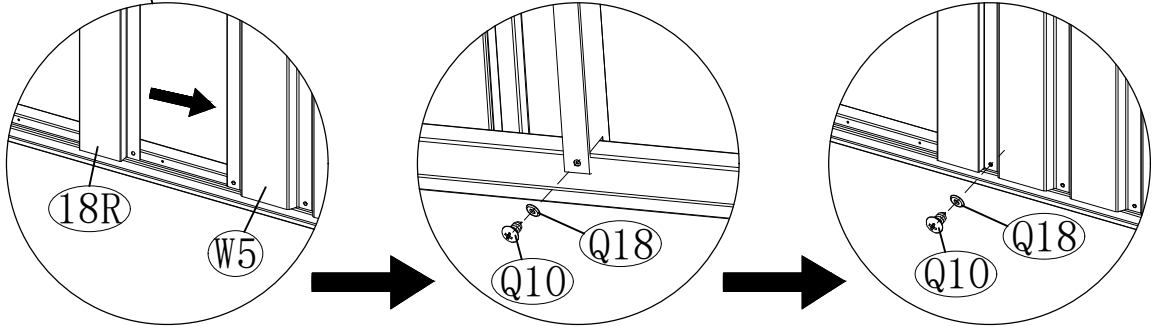
NO.	PART.	Qty.	NO.	PART.	Qty.
18R		1	Q35A		1
Q38		4	Q35B		1
Q54		4	Q35C		1





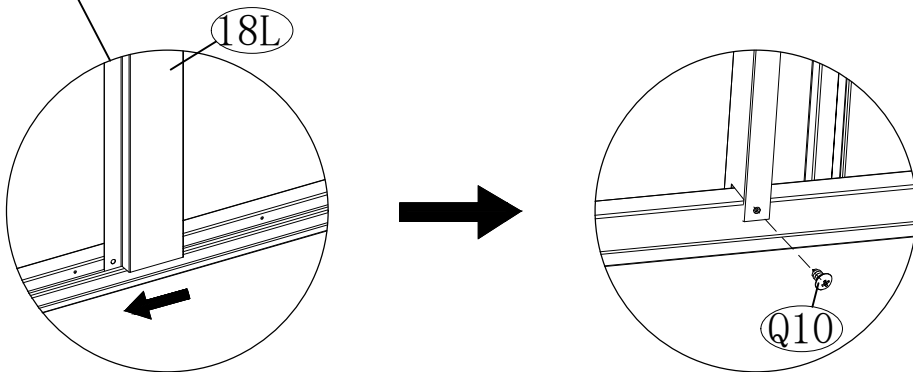
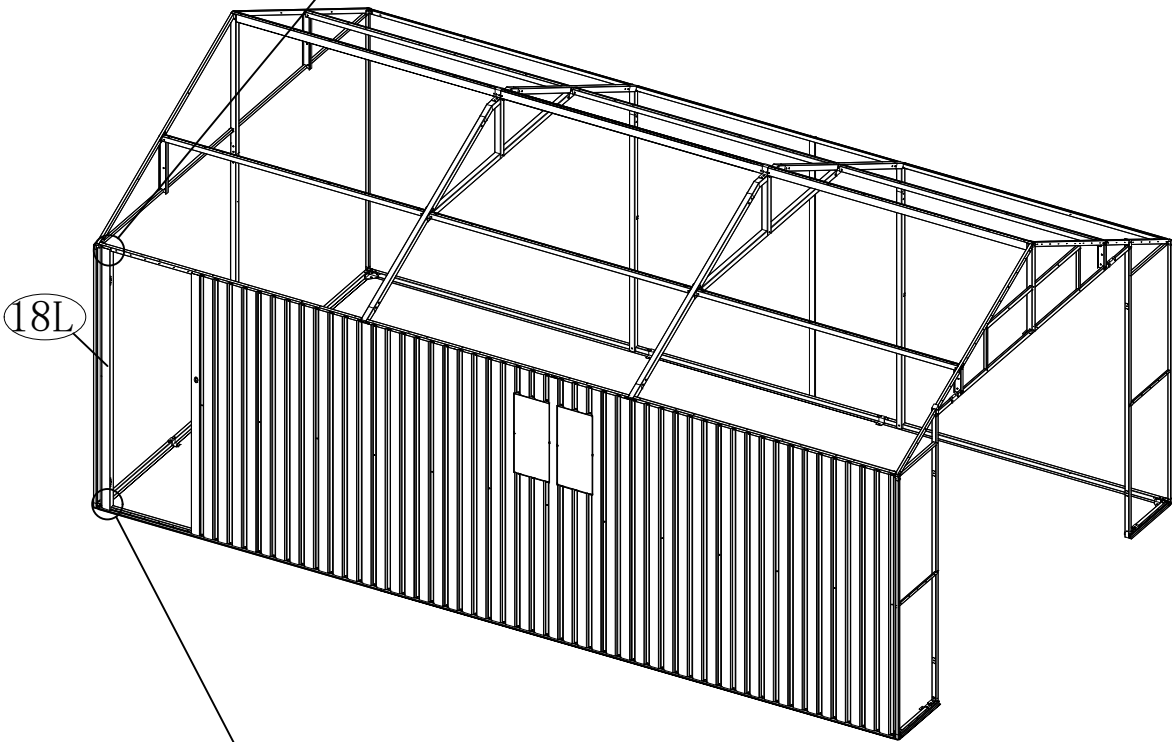
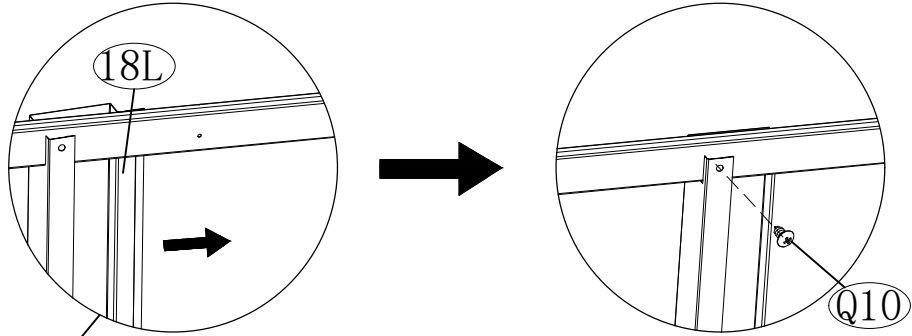
NO.	PART.	Qty.
Q10		4
Q18		4






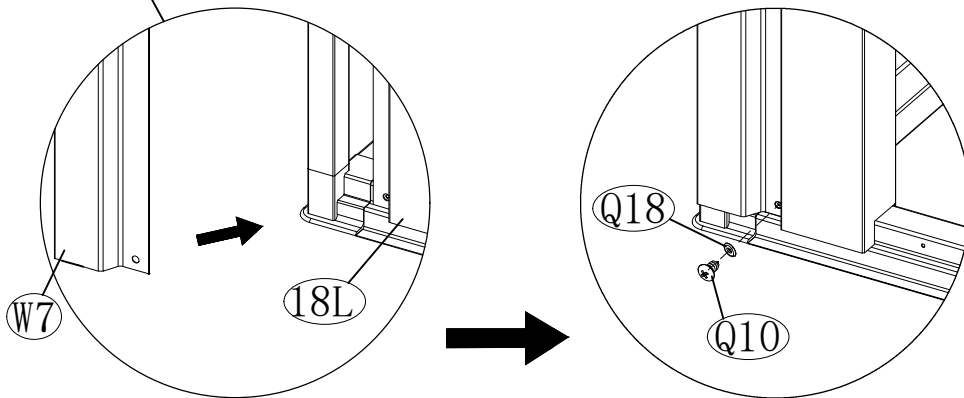
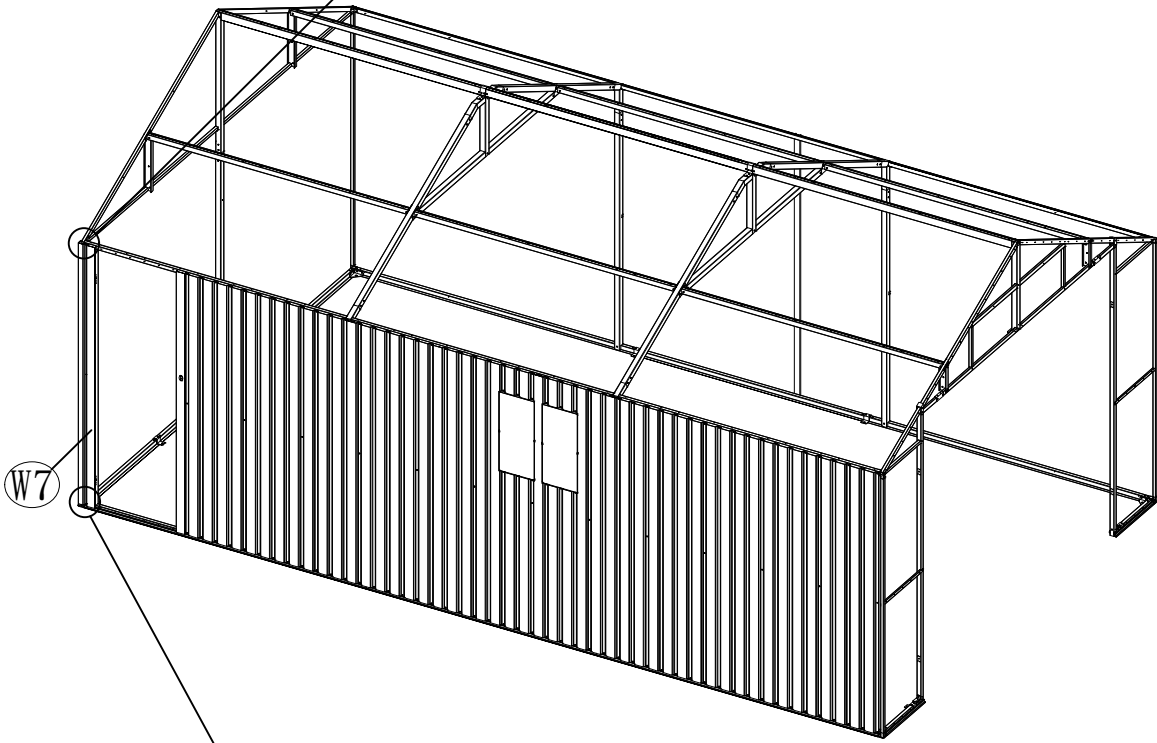
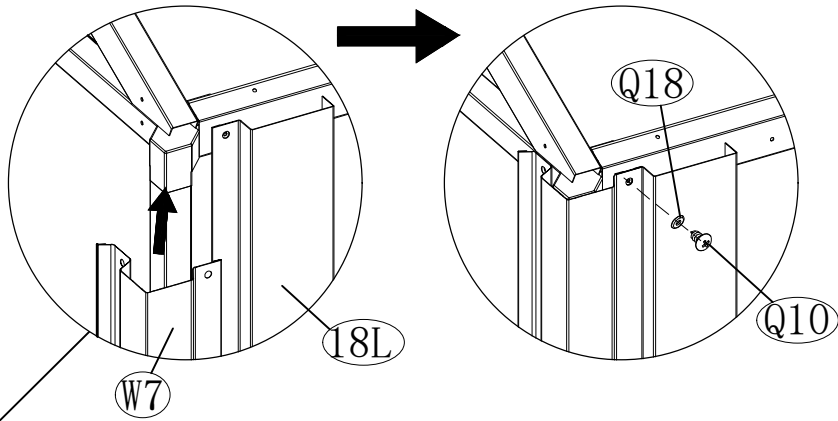
18R





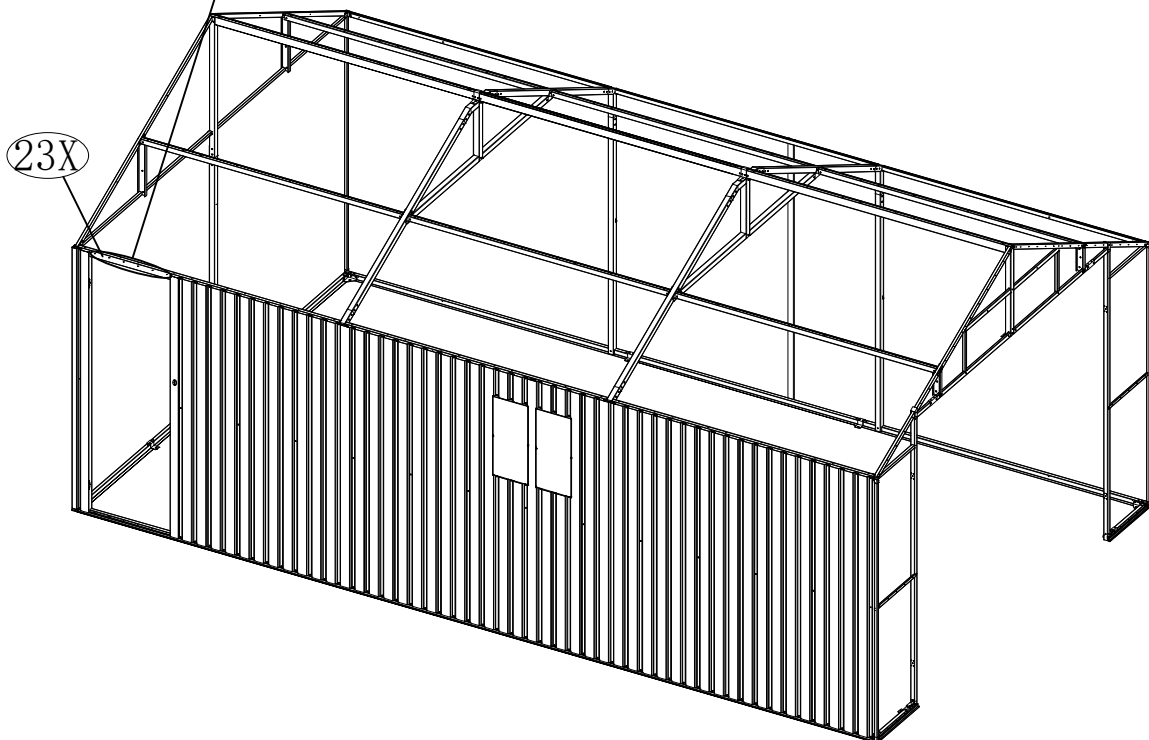
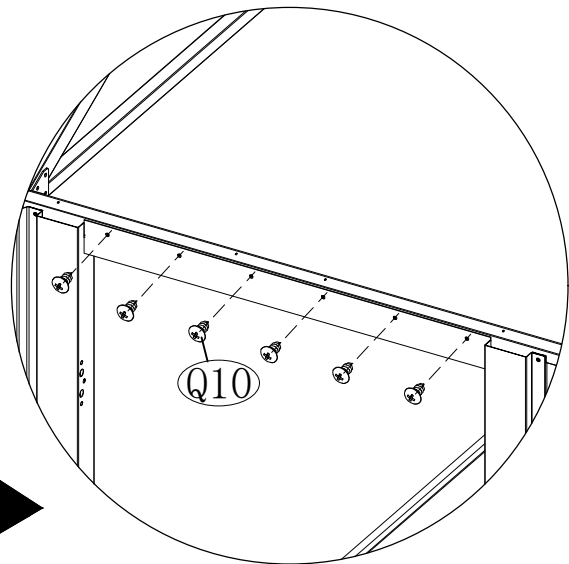
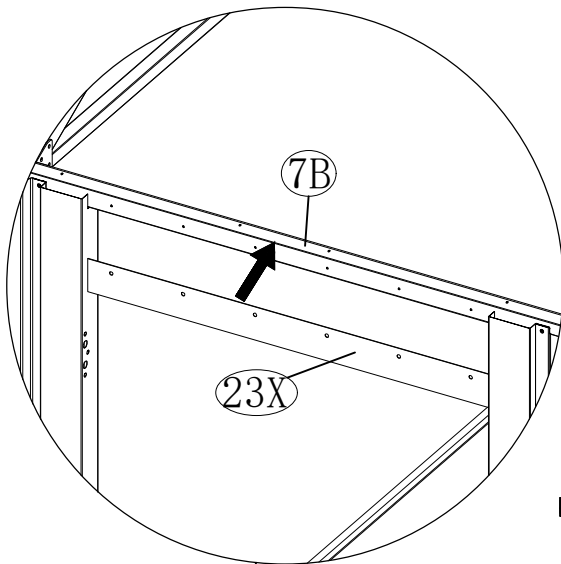
NO.	PART.	Qty.
18L		1
Q10		2







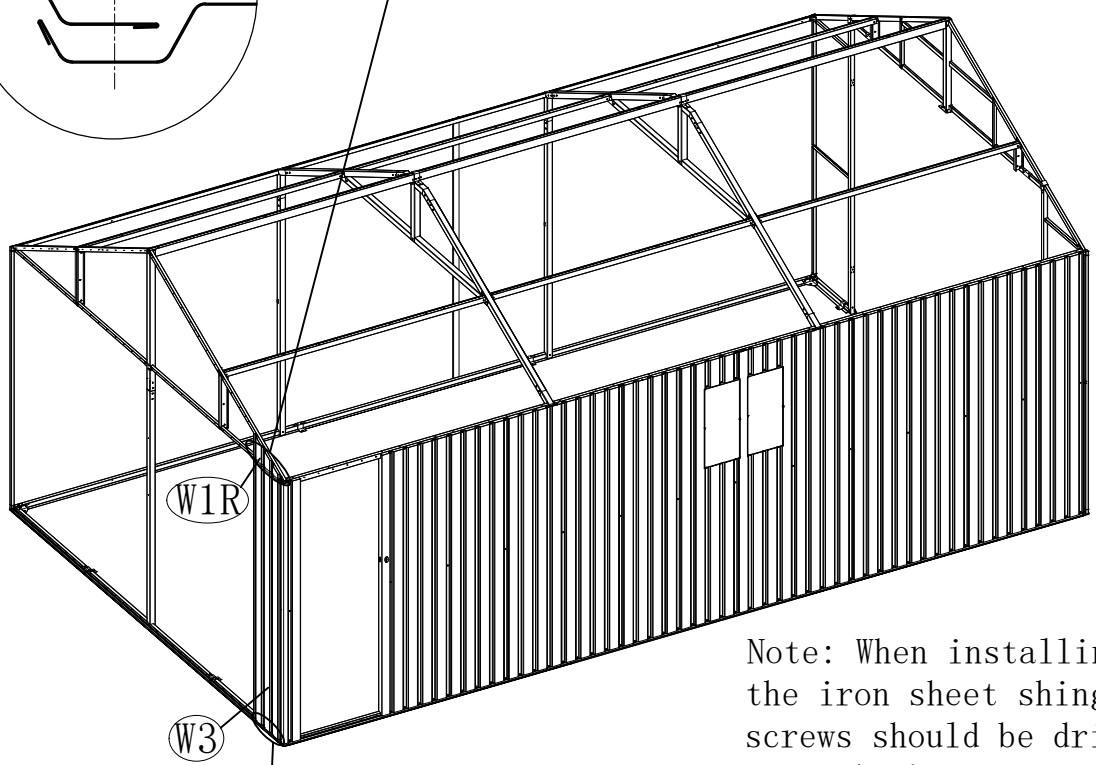
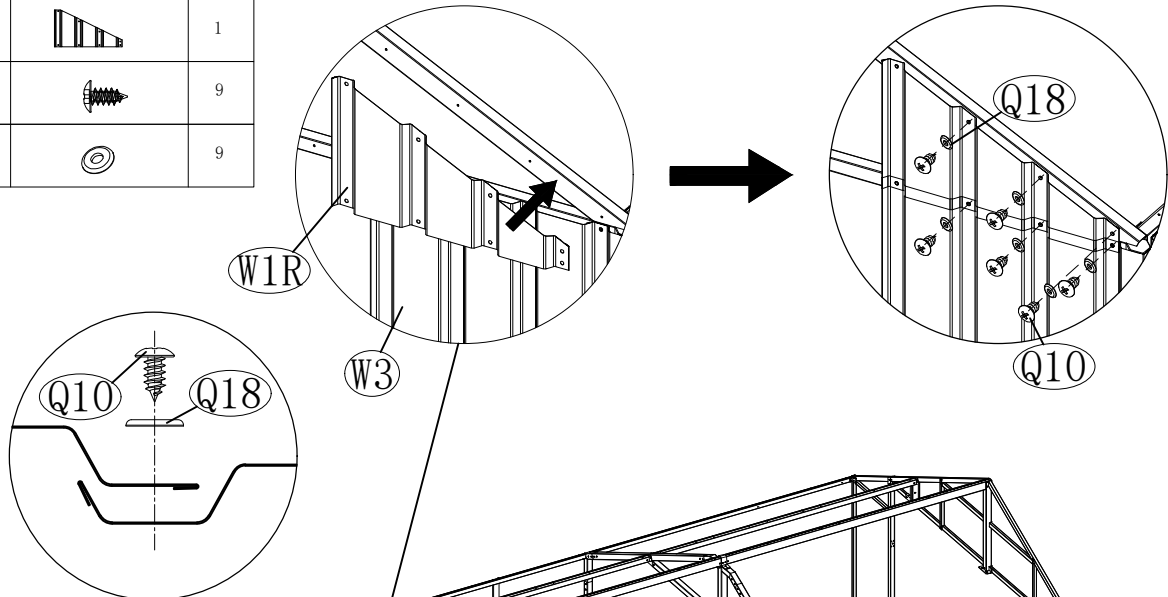
NO.	PART.	Qty.
W7		1
Q10		2
Q18		2



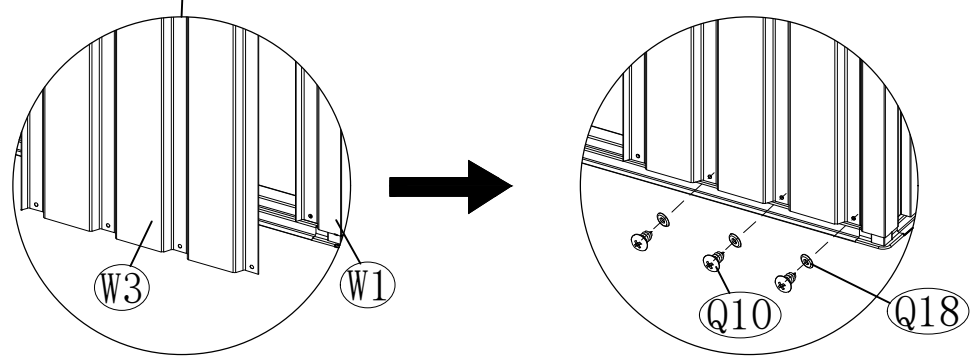
NO.	PART.	Qty.
23X		1
Q10		6









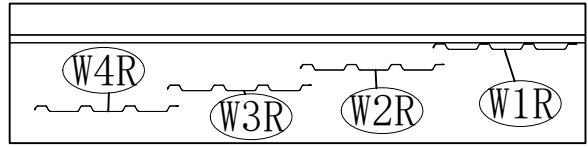
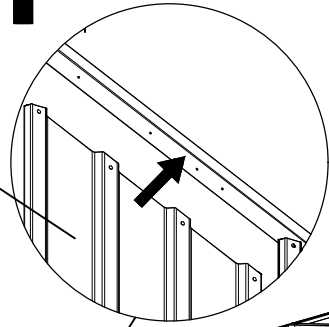
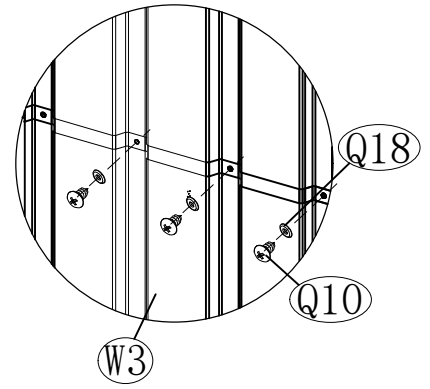
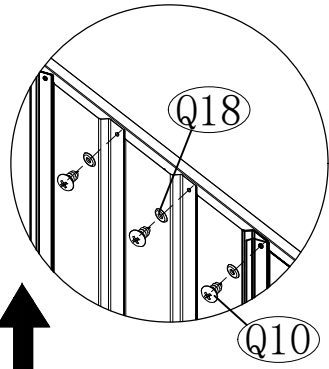
NO.	PART.	Qty.
W3		1
W1R		1
Q10		9
Q18		9



Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.

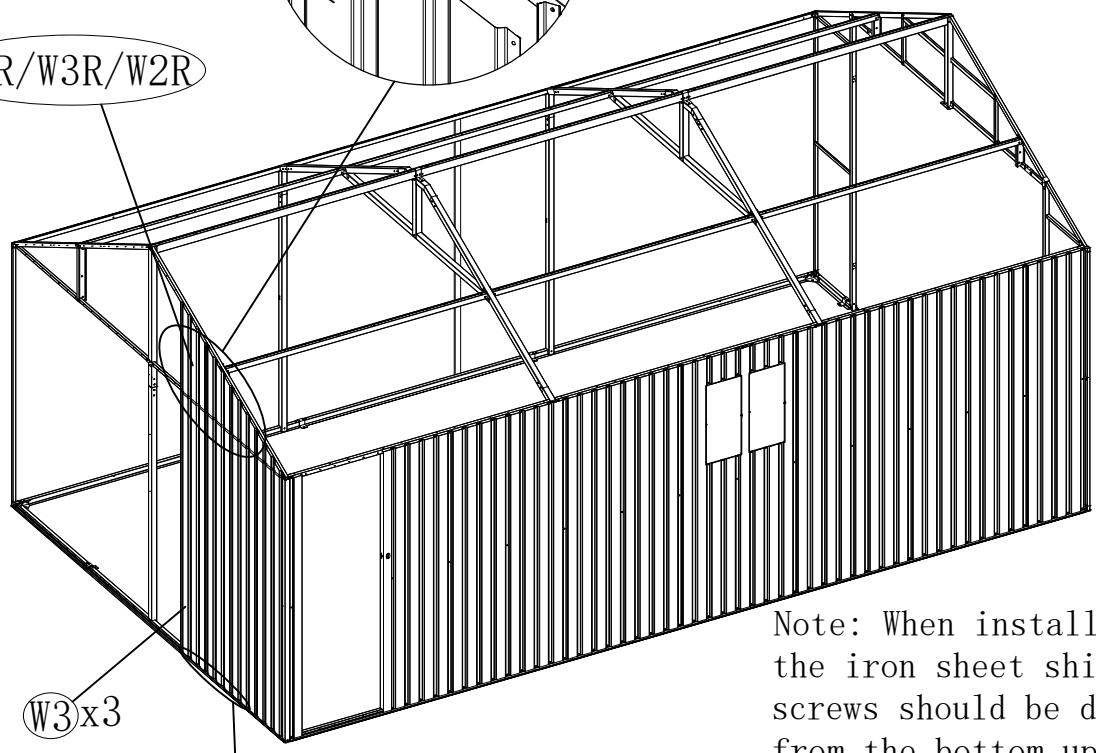


NO.	PART.	Qty.
W3		3
W2R		1
W3R		1
W4R		1
Q10		27
Q18		27

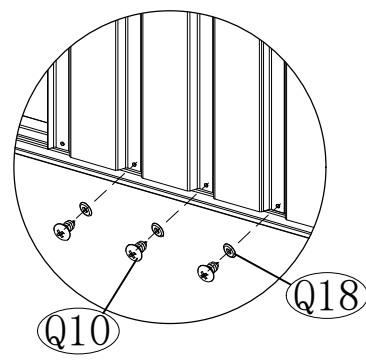
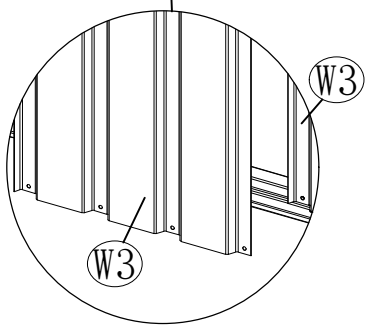






W4R/W3R/W2R

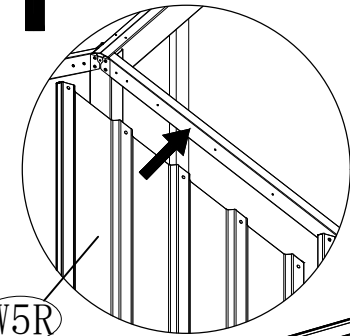
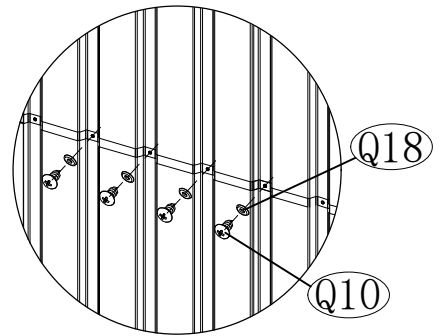
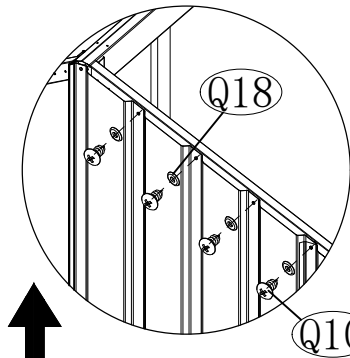
W4R/W3R/W2R



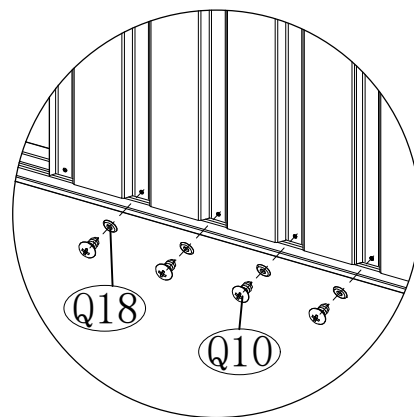
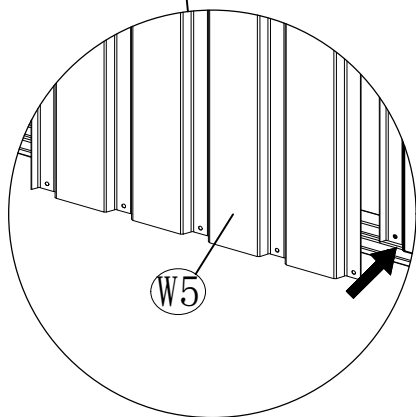
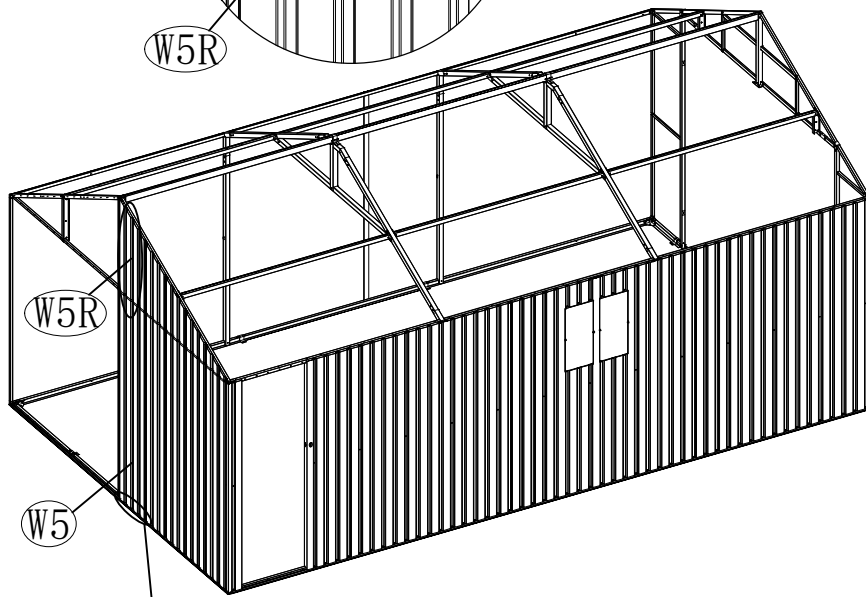
Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.







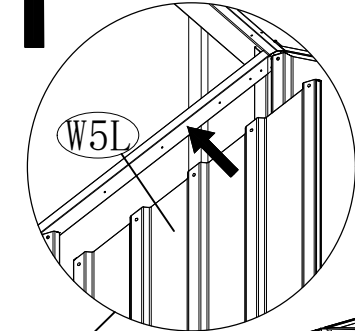
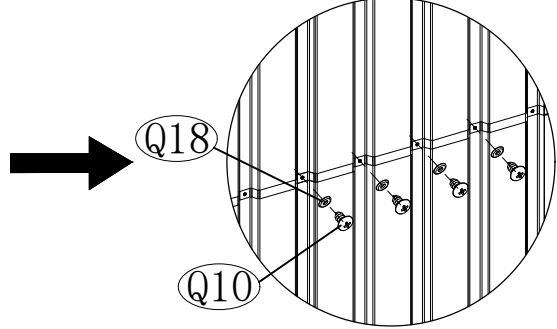
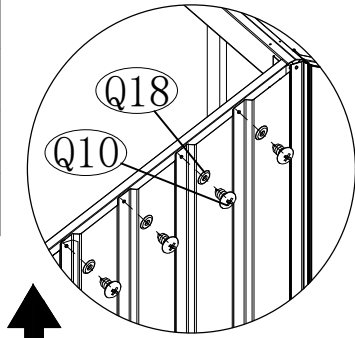
NO.	PART.	Qty.
W5		1
W5R		1
Q10		12
Q18		12



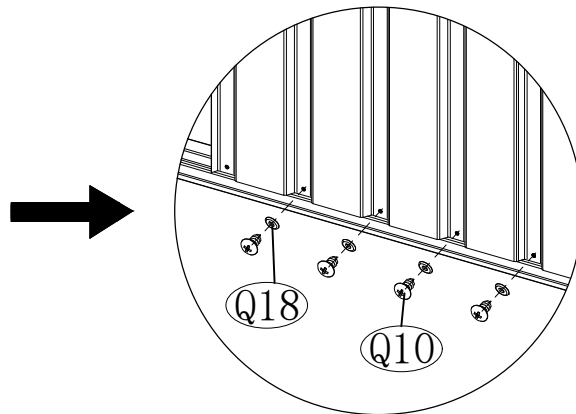
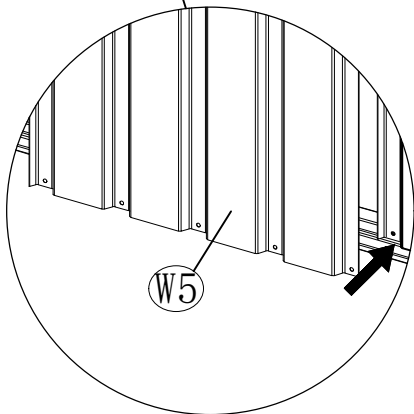
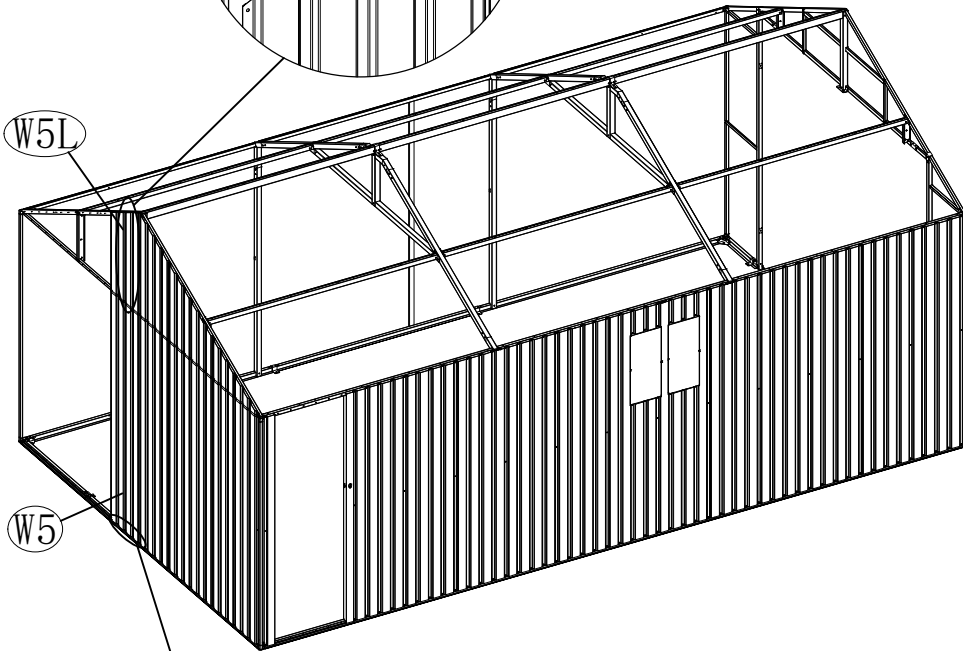
Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.









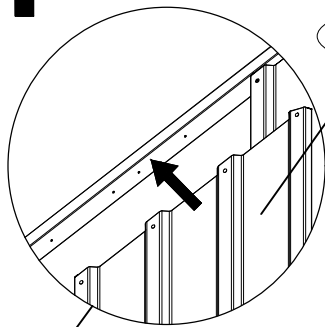
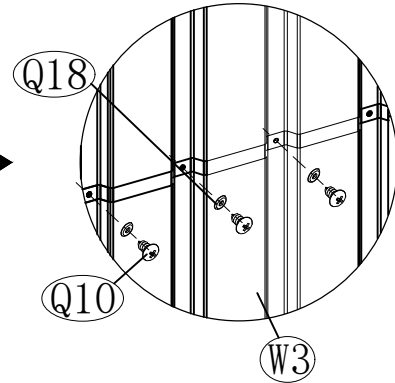
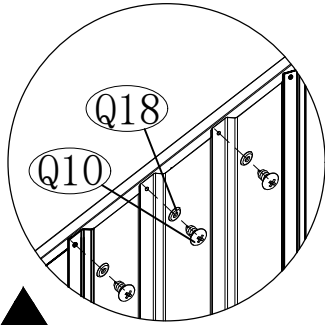
NO.	PART.	Qty.
W5		1
W5L		1
Q10		12
Q18		12



Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.



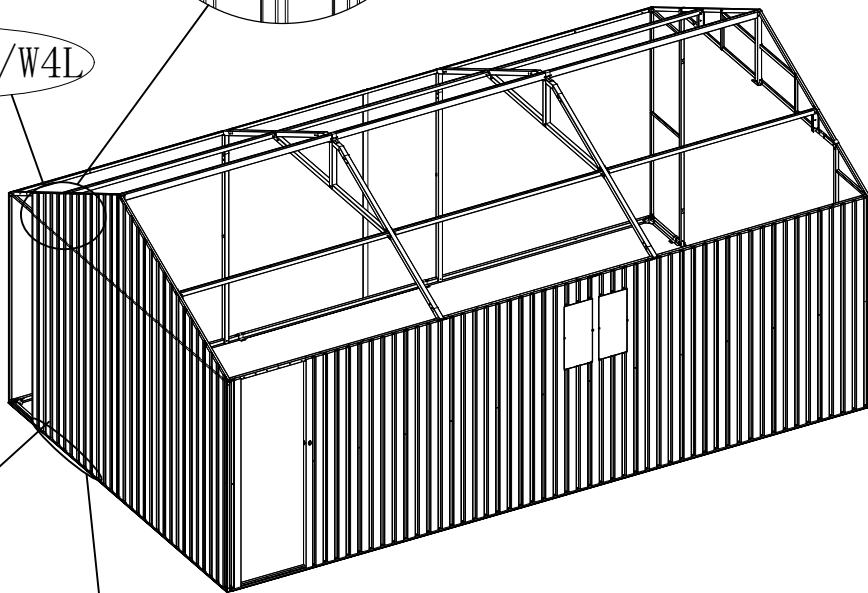
NO.	PART.	Qty.
W3		3
W2L		1
W3L		1
W4L		1
Q10		27
Q18		27



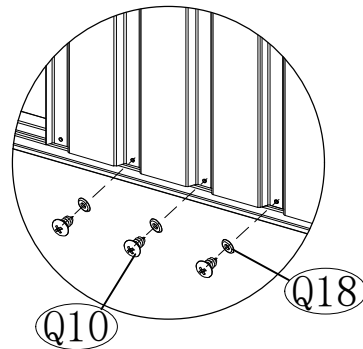
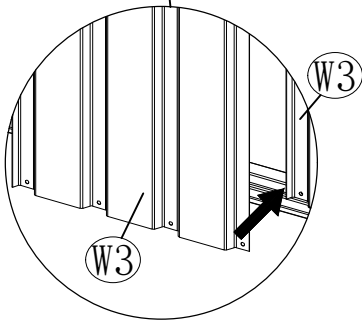
W2L/W3L/W4L





Note: When installing the iron sheet shingles, the screws should be driven from the bottom upwards.

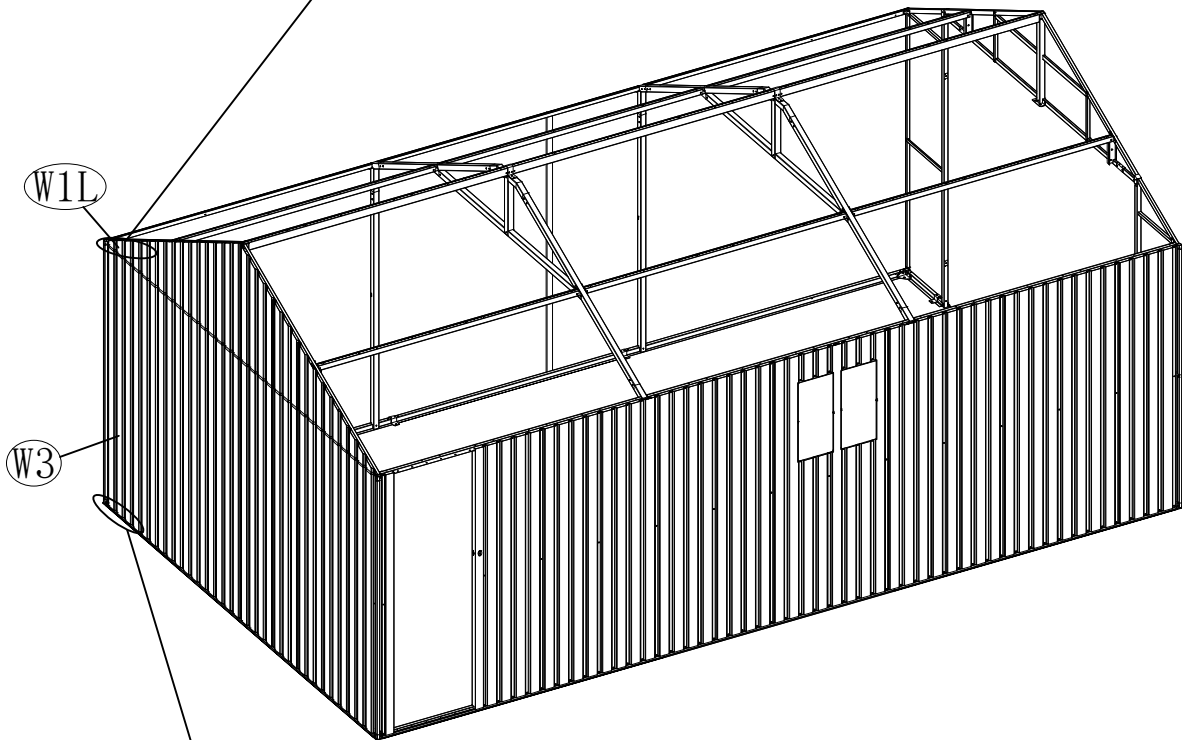
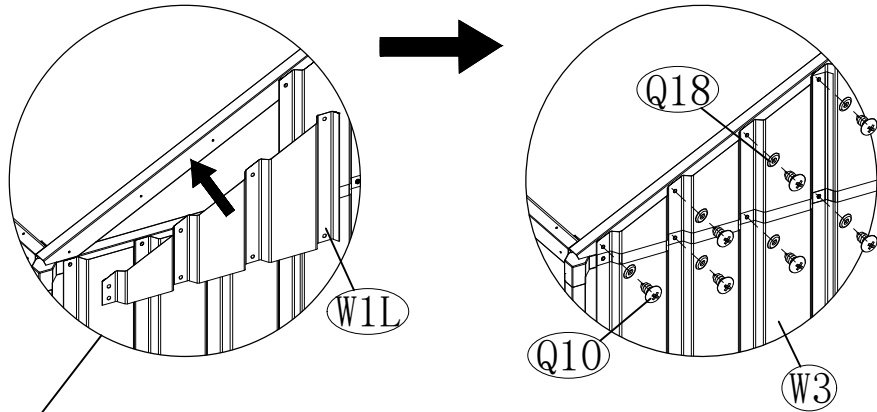
W2L/W3L/W4L



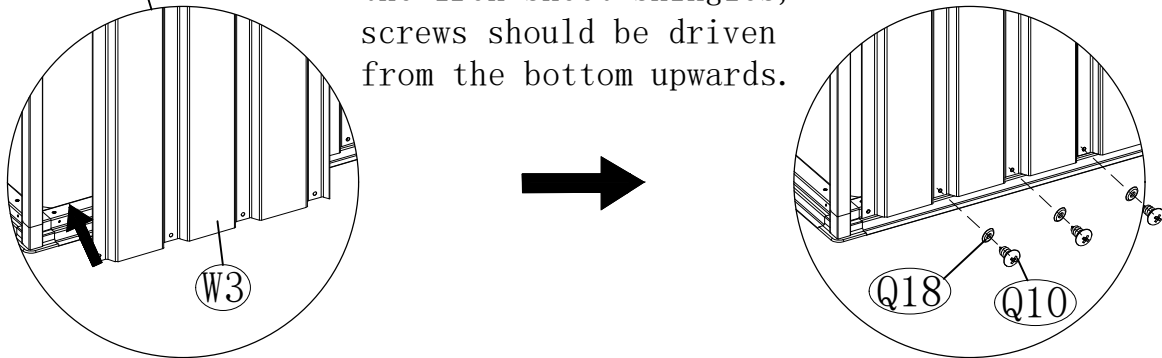
W3x3






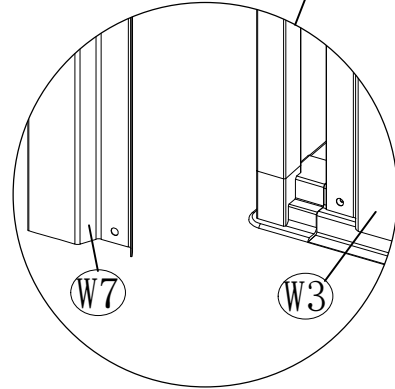
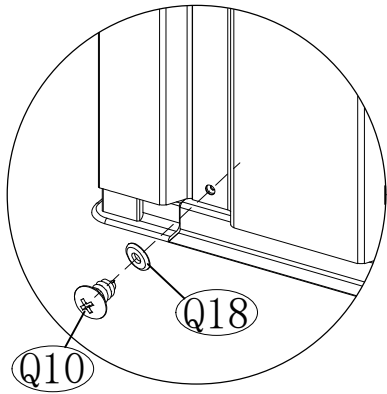
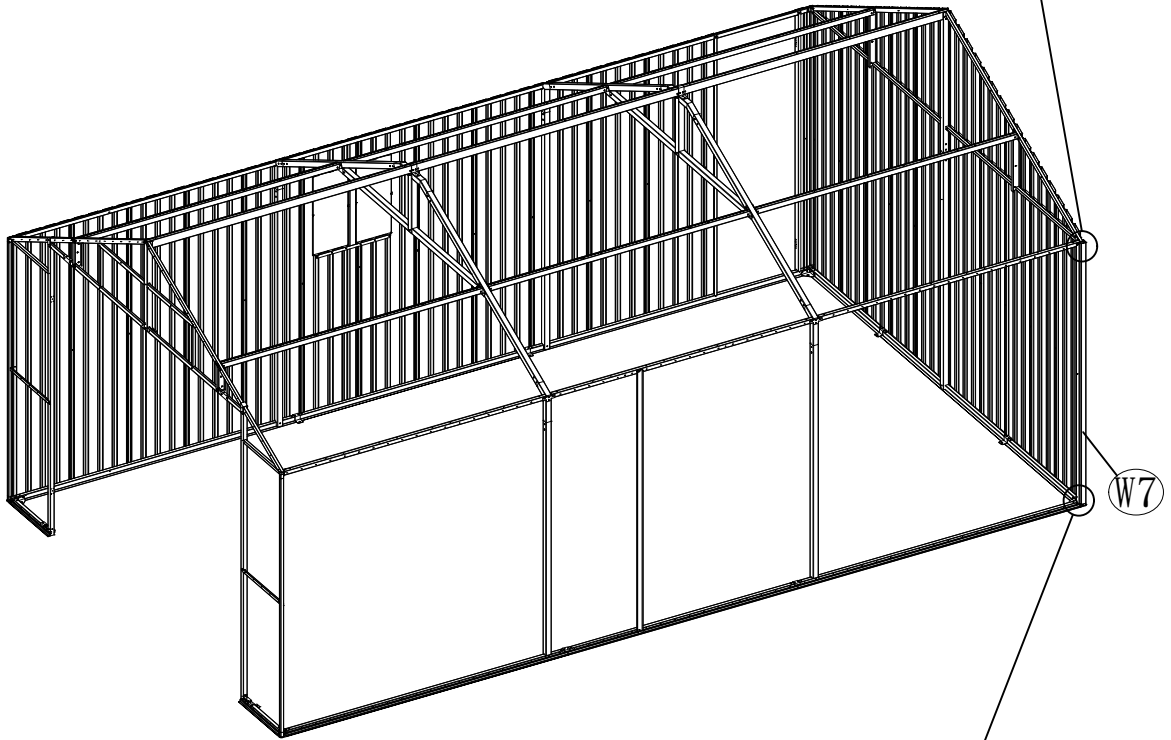
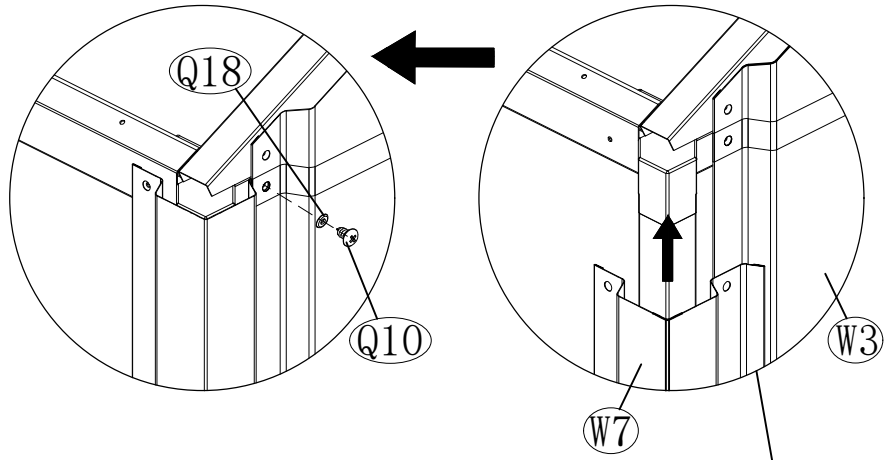
NO.	PART.	Qty.
W3		1
W1L		1
Q10		10
Q18		10






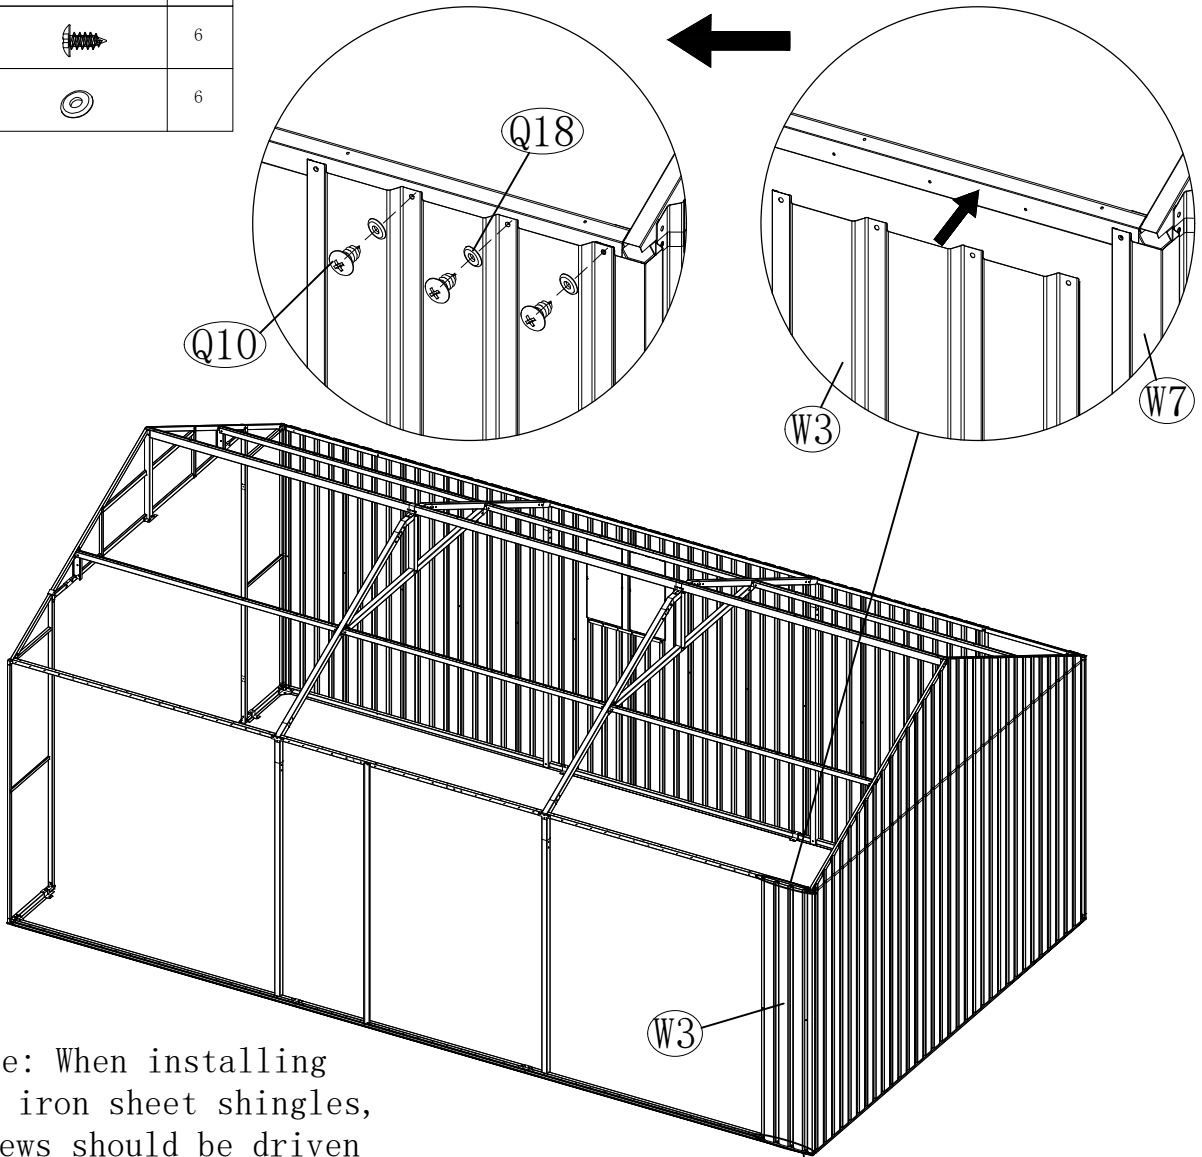
Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.



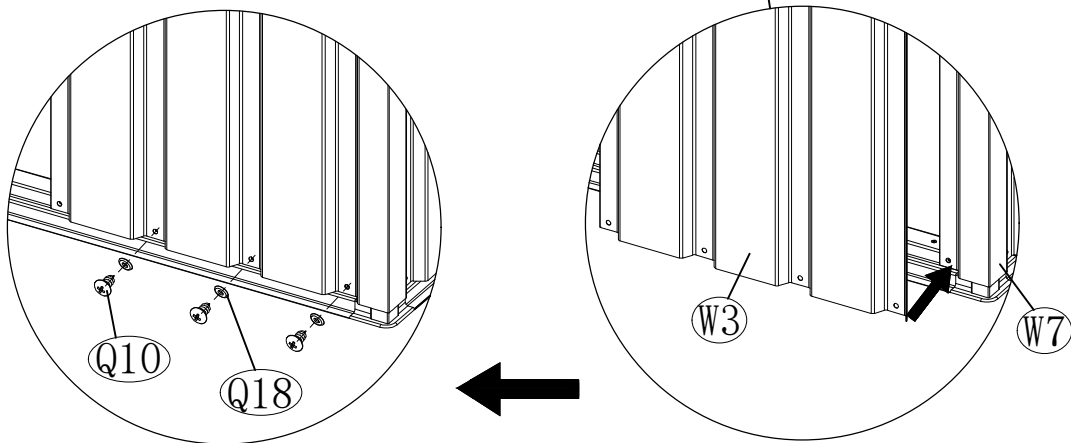
NO.	PART.	Qty.
W7		1
Q10		2
Q18		2






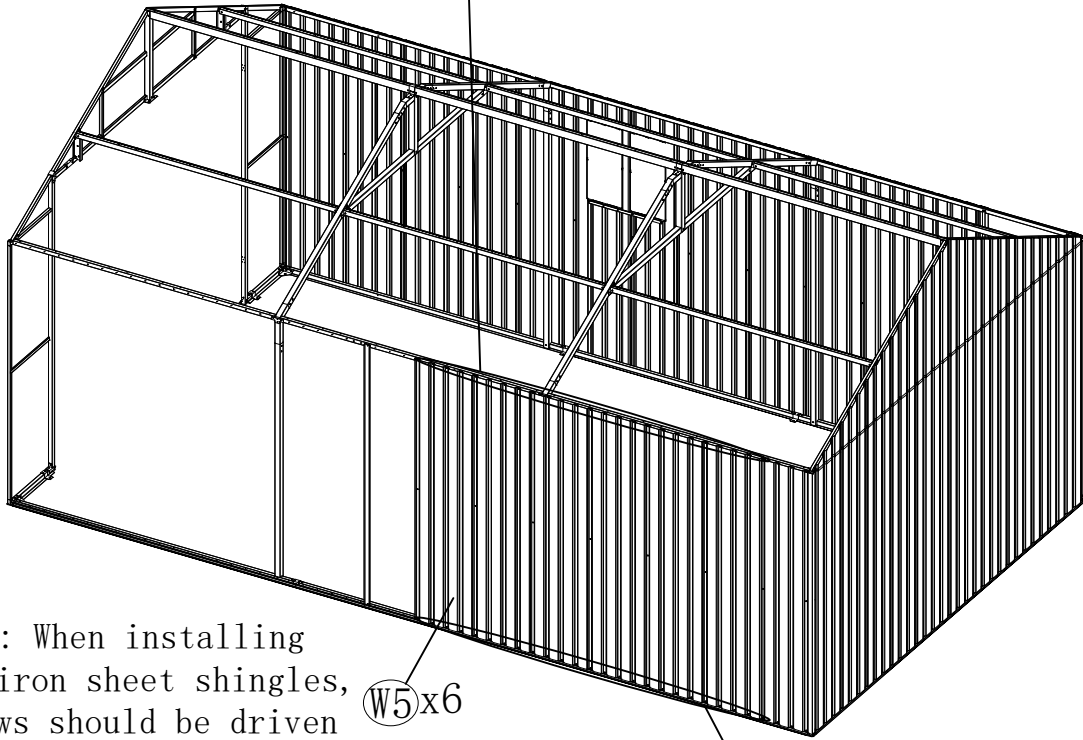
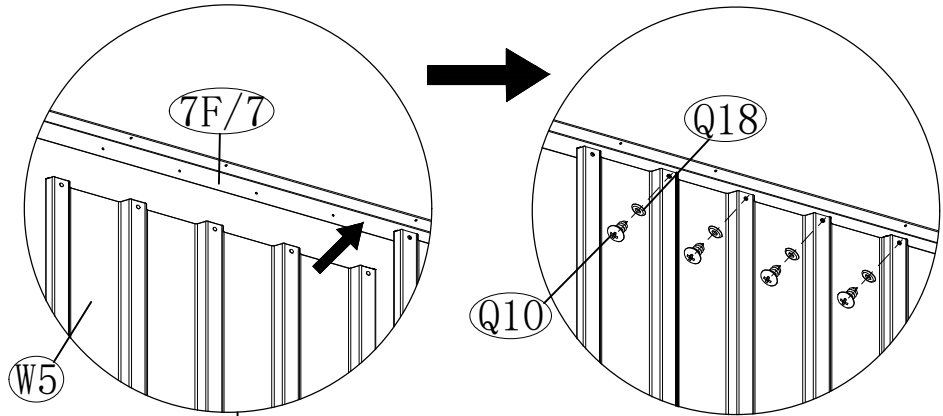
NO.	PART.	Qty.
W3		1
Q10		6
Q18		6



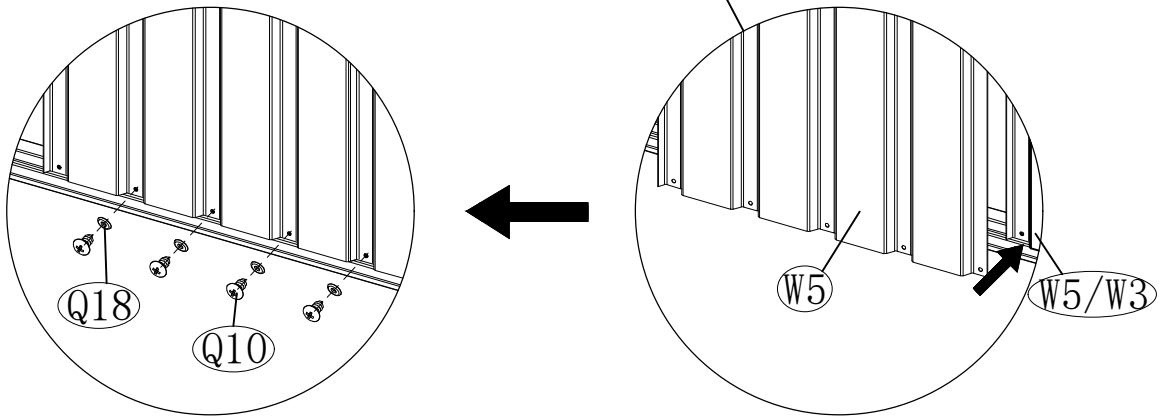
Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.



NO.	PART.	Qty.
W5		6
Q10		48
Q18		48

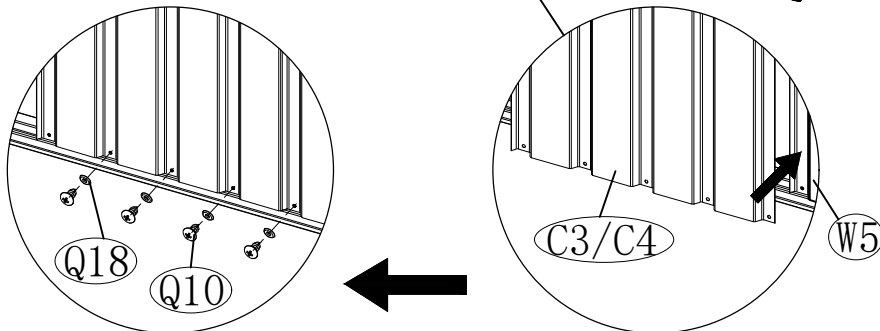
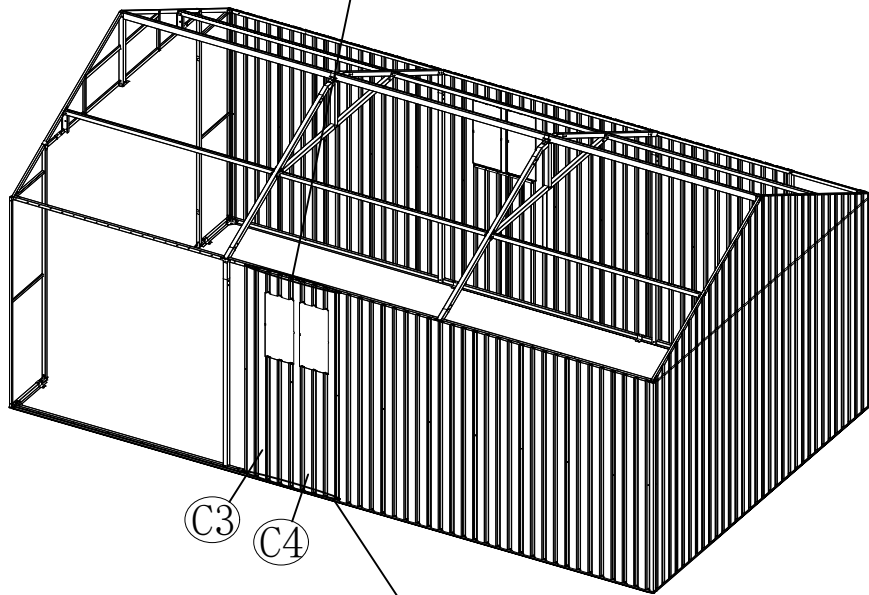
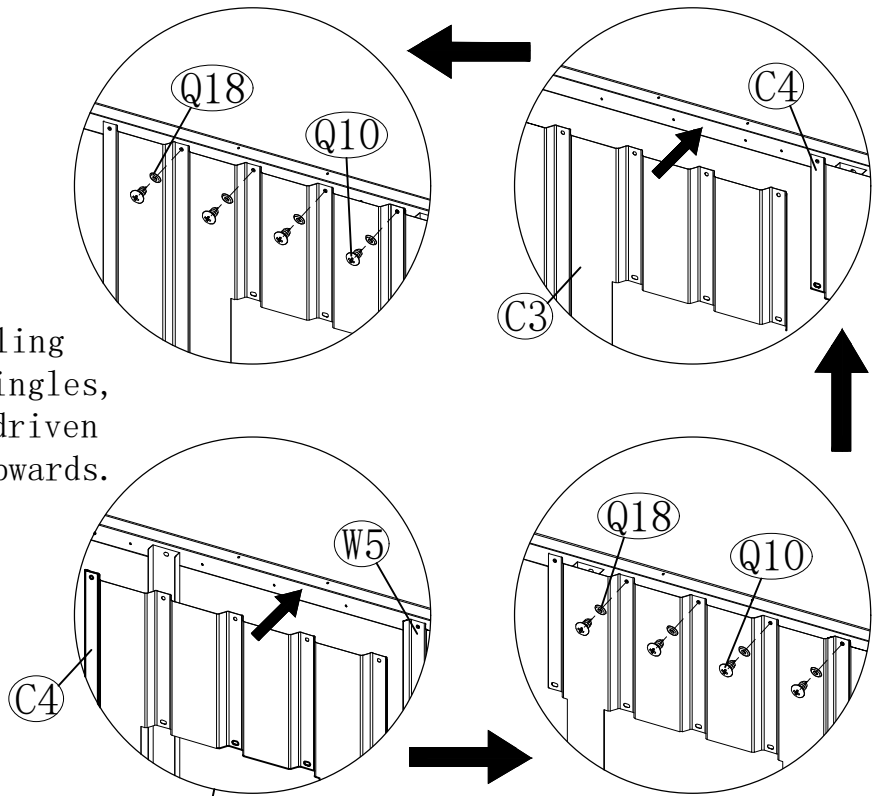





Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards. W5x6

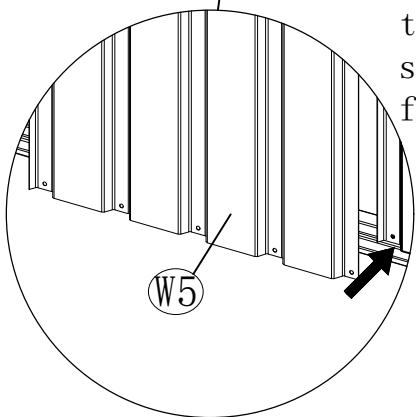
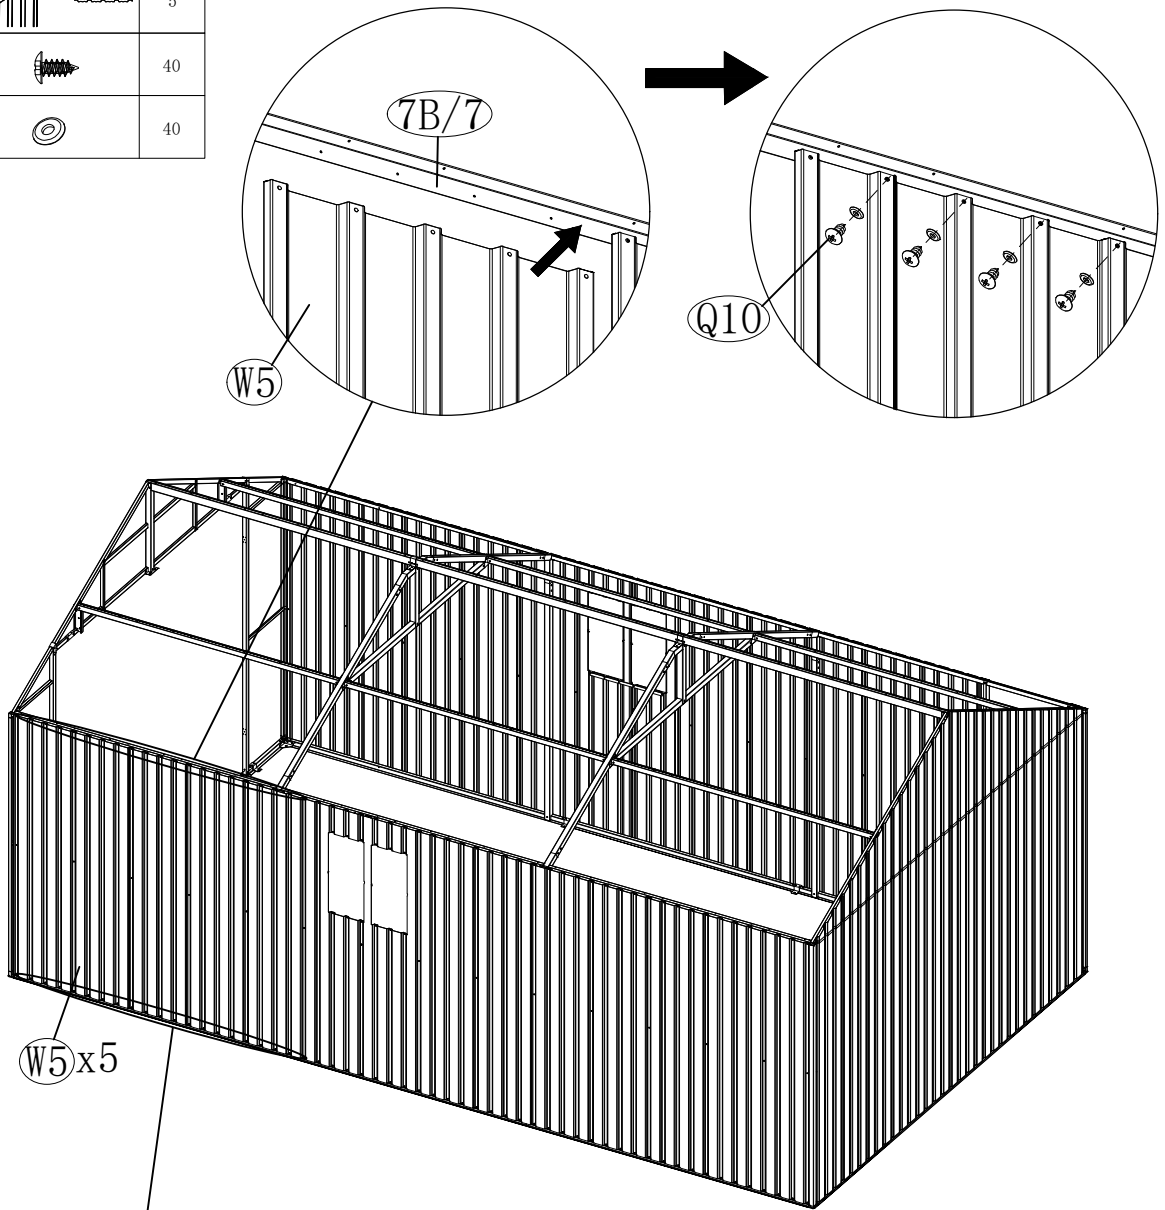


NO.	PART.	Qty.
C3		1
C4		1
Q10		16
Q18		16

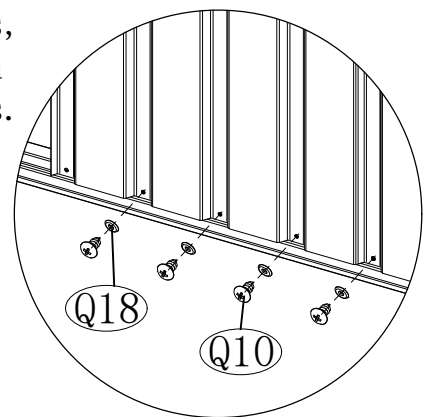
Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.








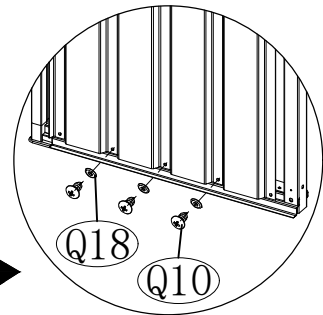
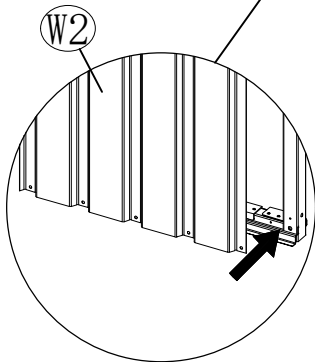
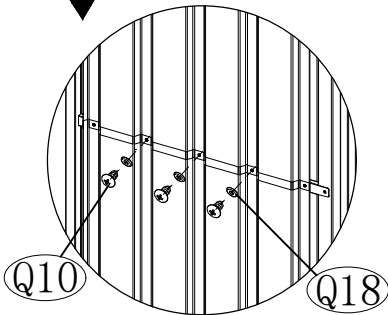
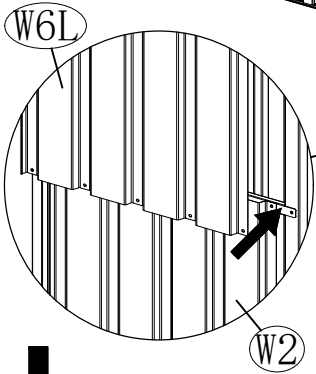
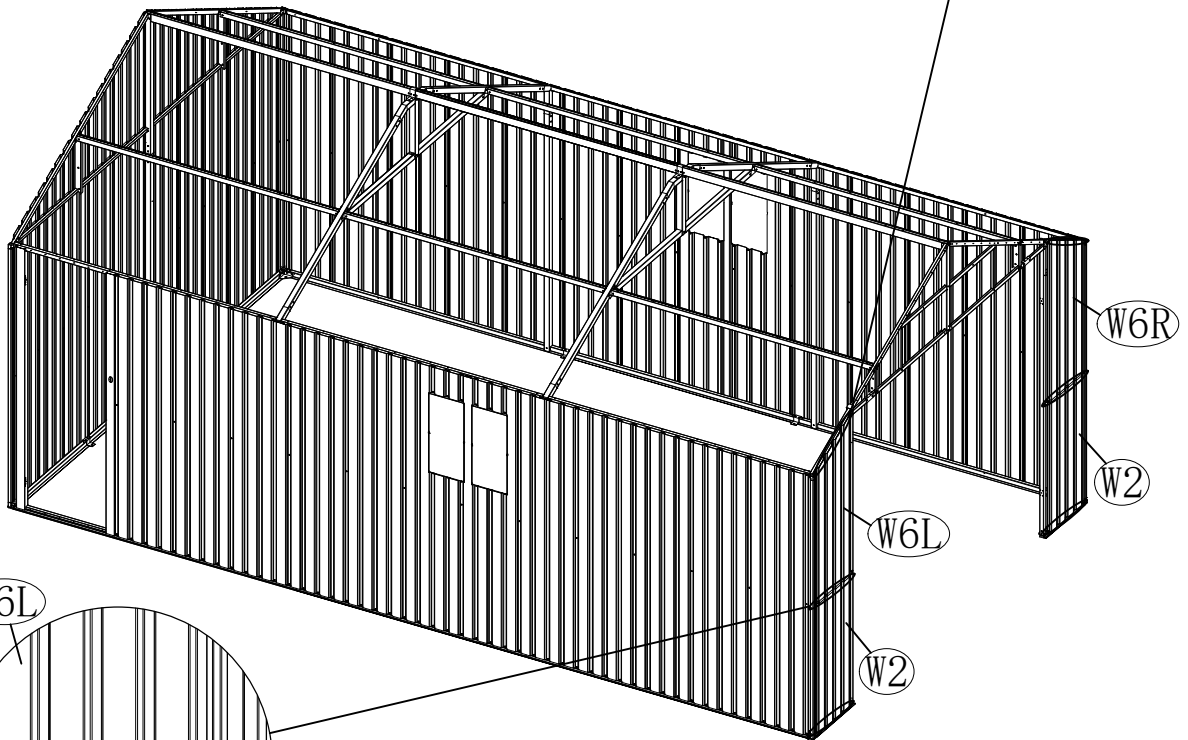
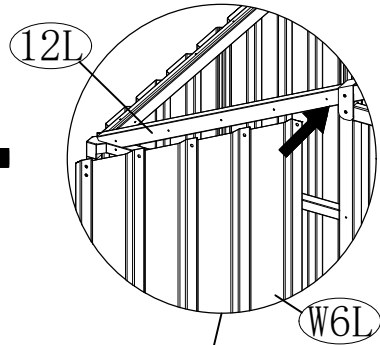
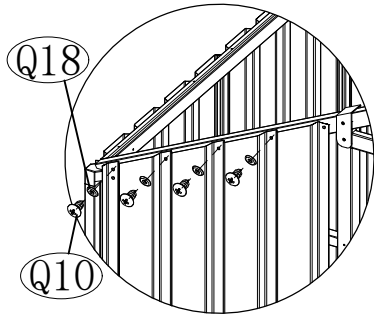
NO.	PART.	Qty.
W5		5
Q10		40
Q18		40







Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.

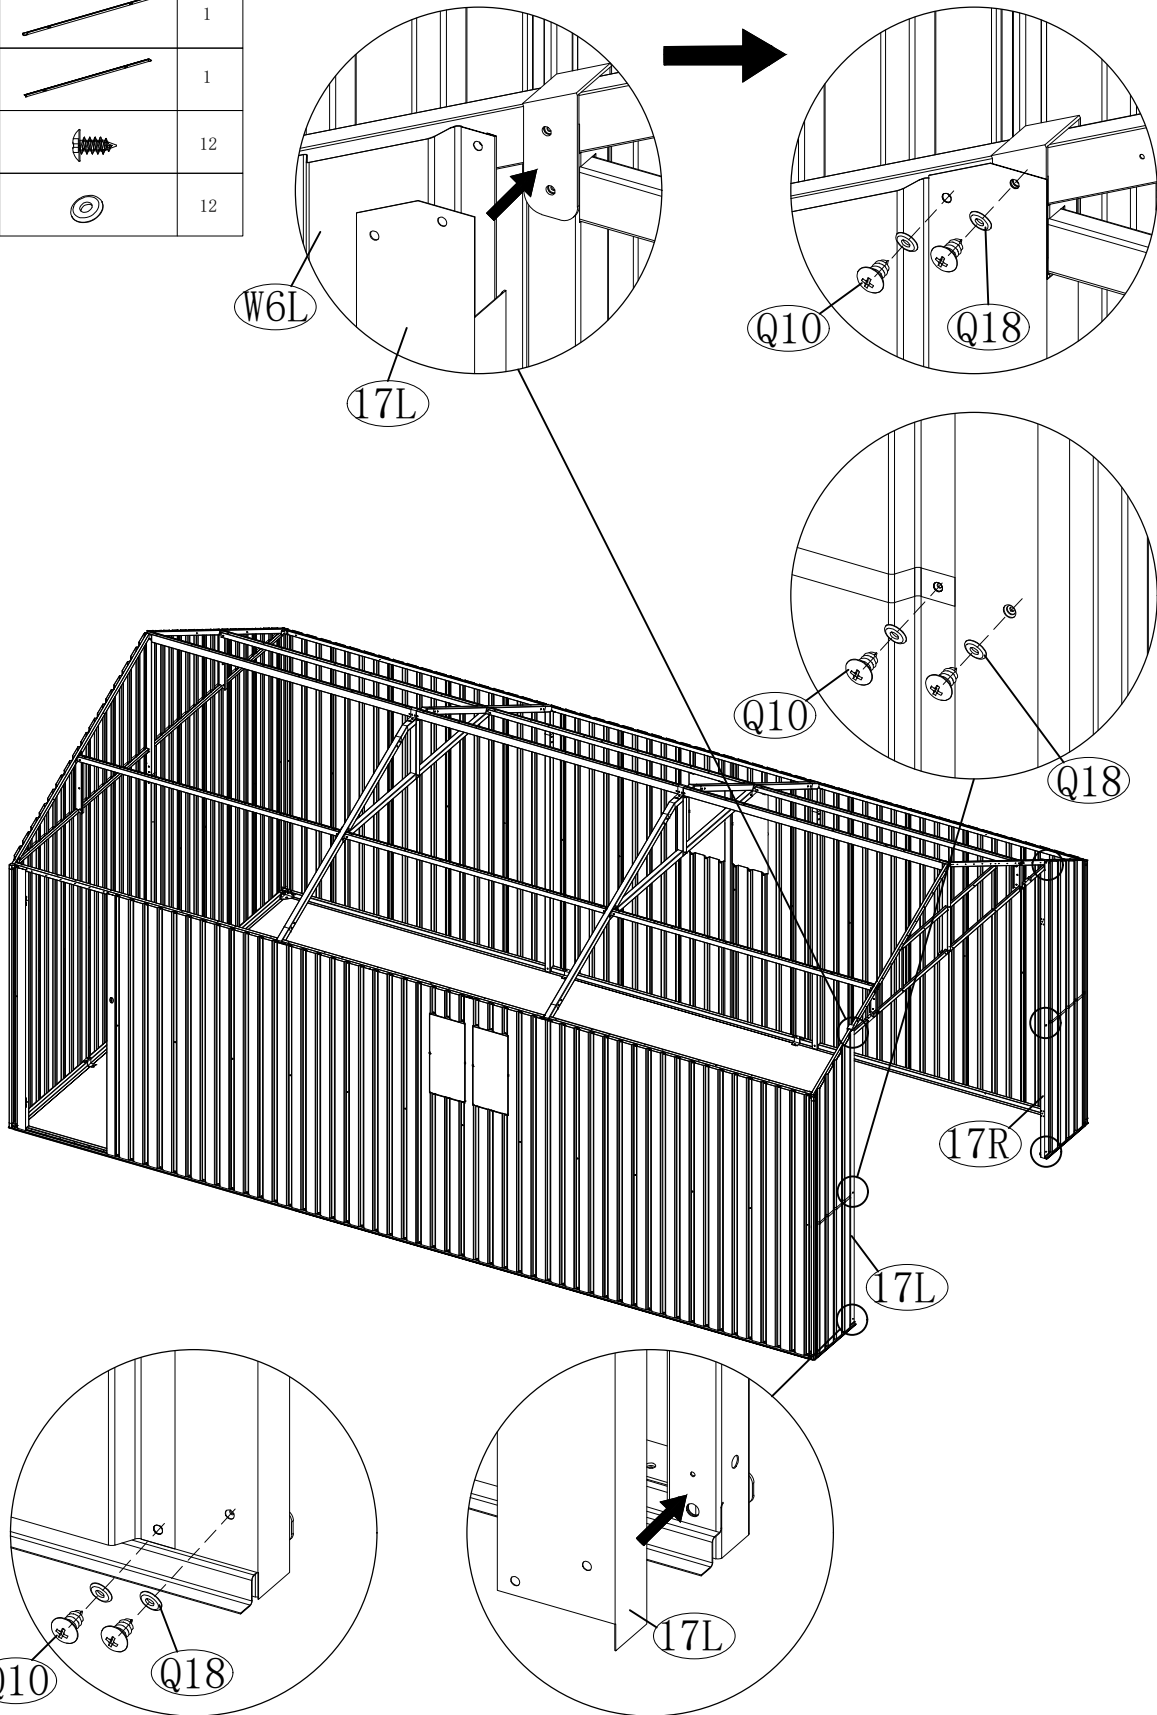





NO.	PART.	Qty.
W2		2
W6L		1
W6R		1
Q10		20
Q18		20

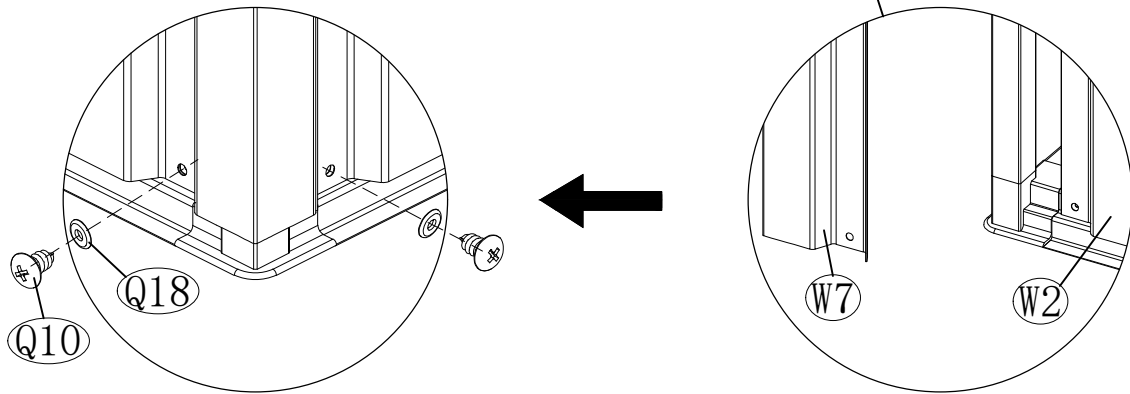
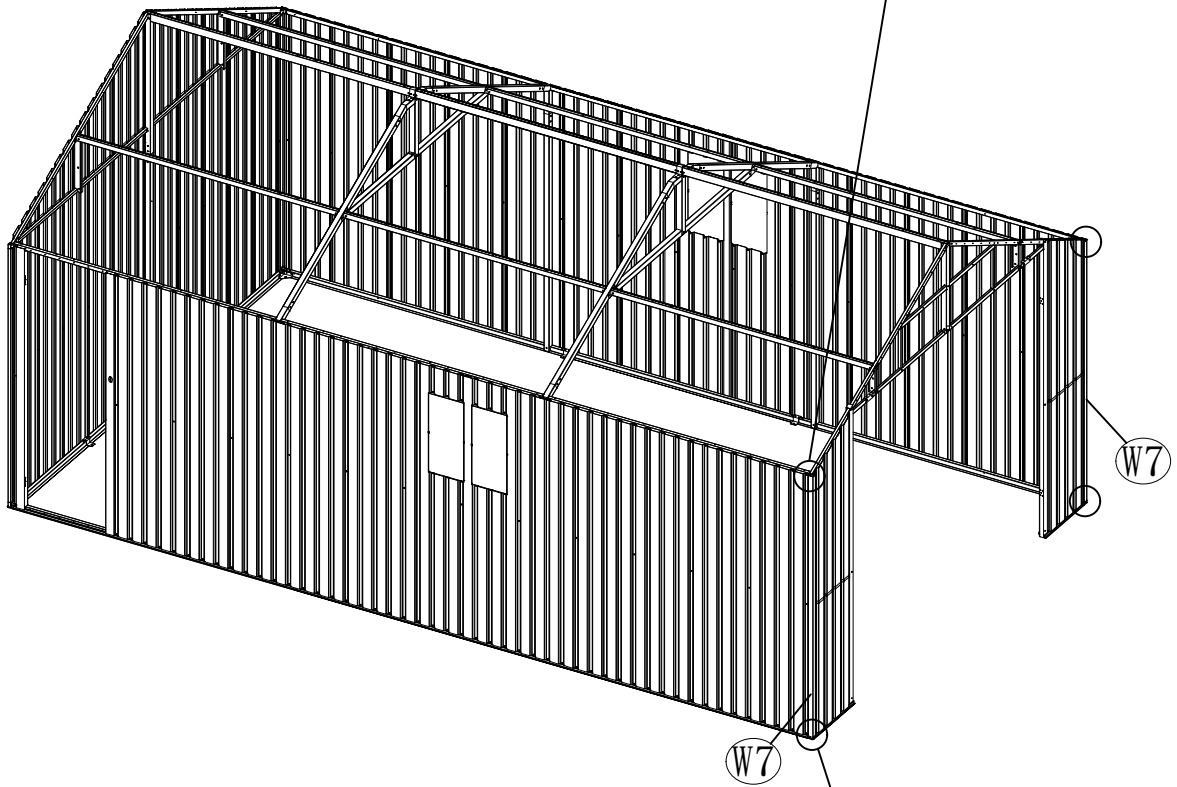
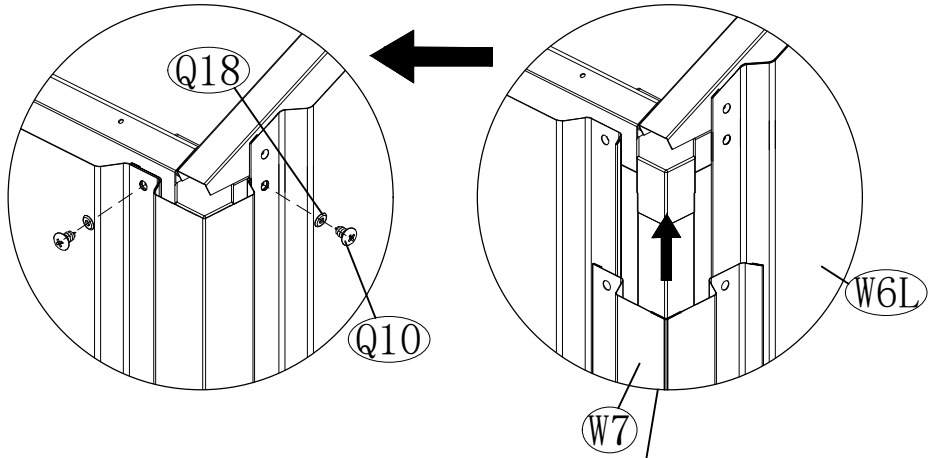






Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.

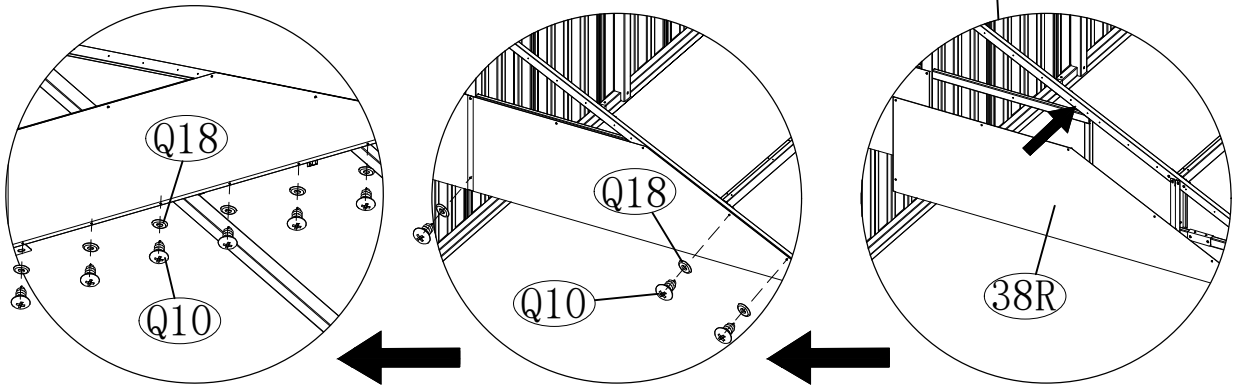
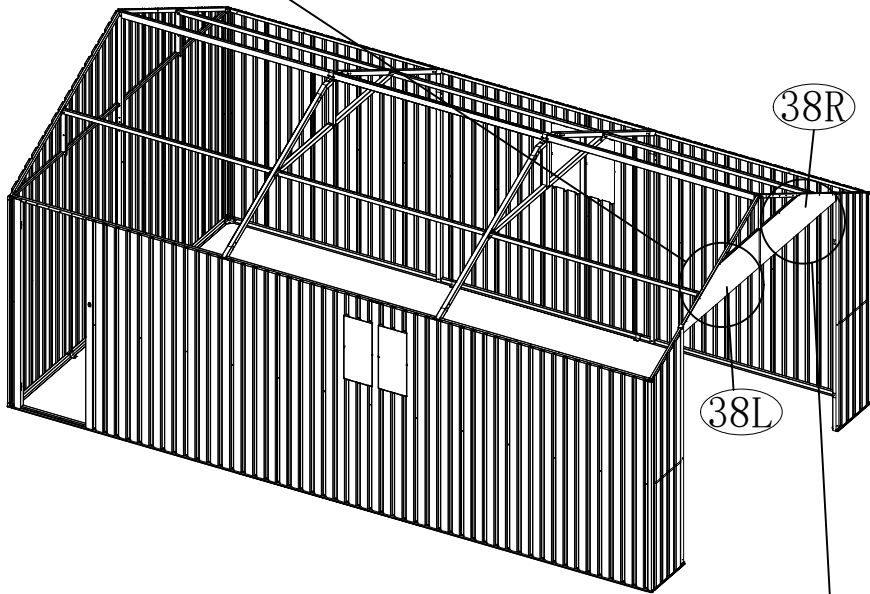
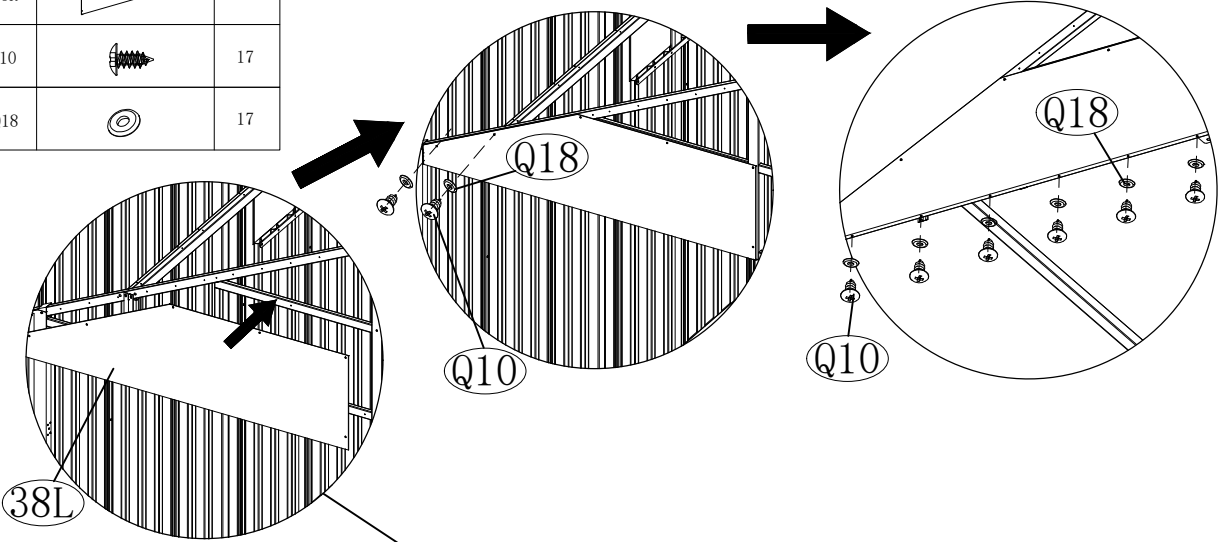
NO.	PART.	Qty.
17L		1
17R		1
Q10		12
Q18		12






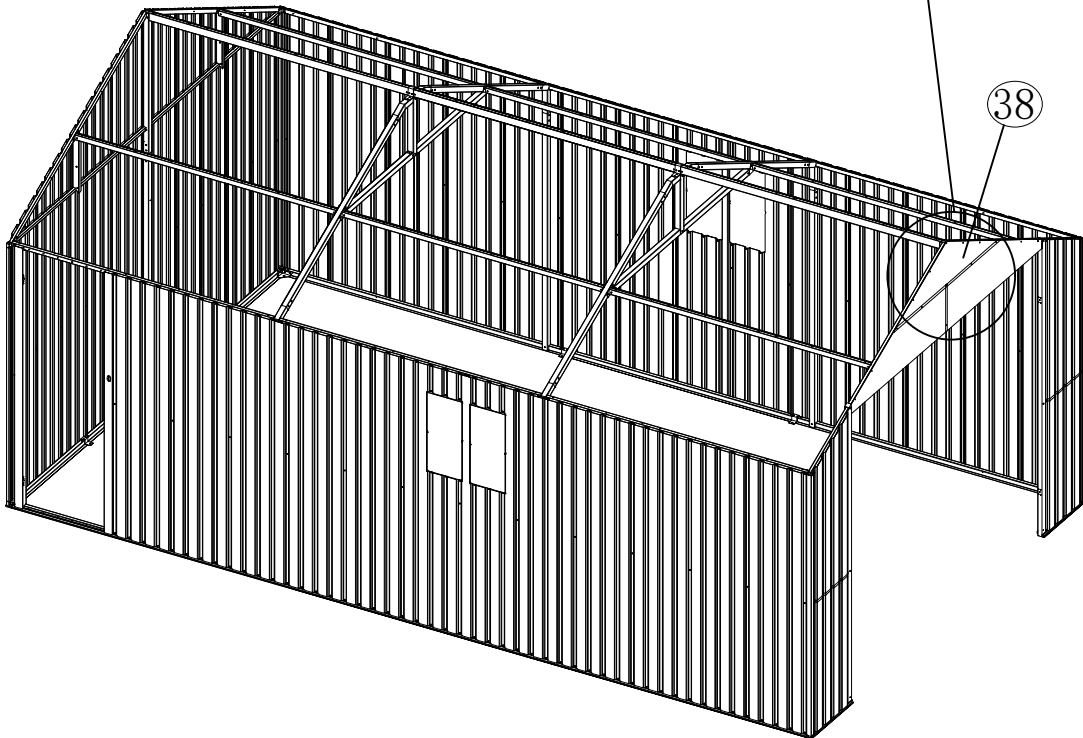
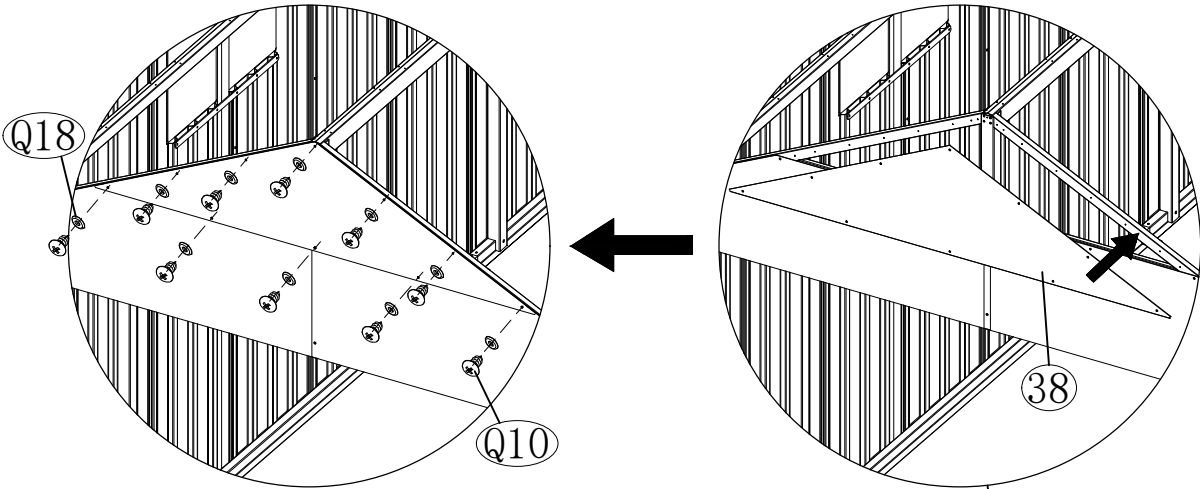
NO.	PART.	Qty.
W7		2
Q10		8
Q18		8



NO.	PART.	Qty.
38L		1
38R		1
Q10		17
Q18		17



NO.	PART.	Qty.
38		1
Q10		10
Q18		10

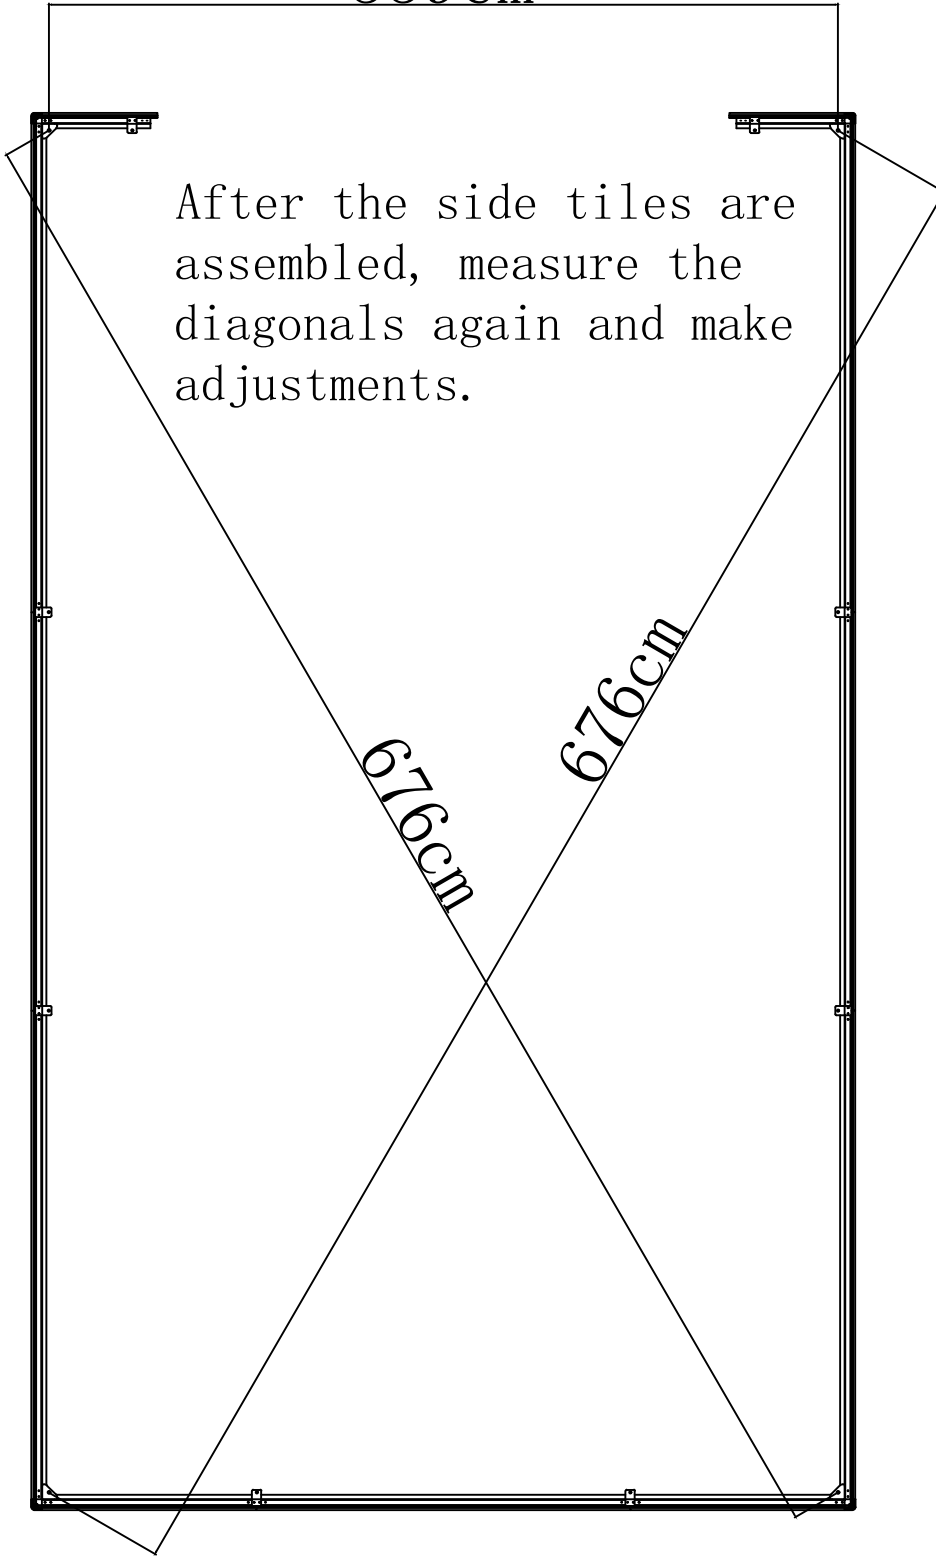





339cm

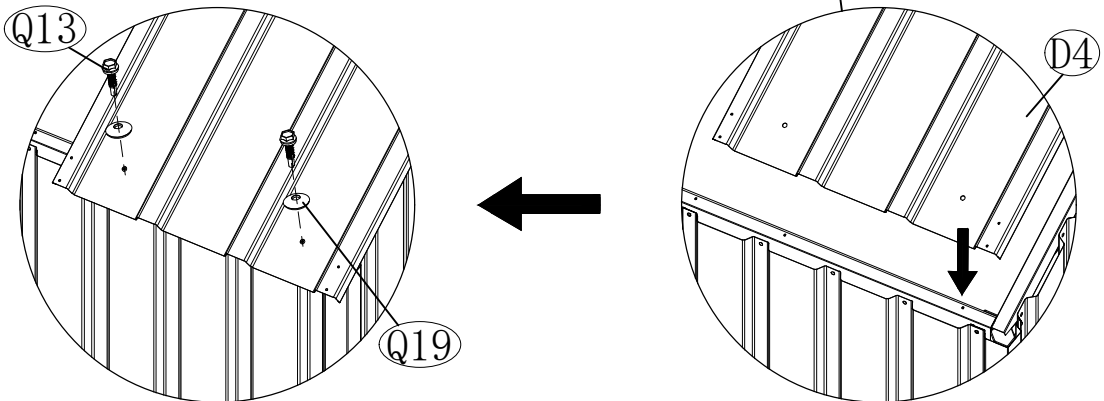
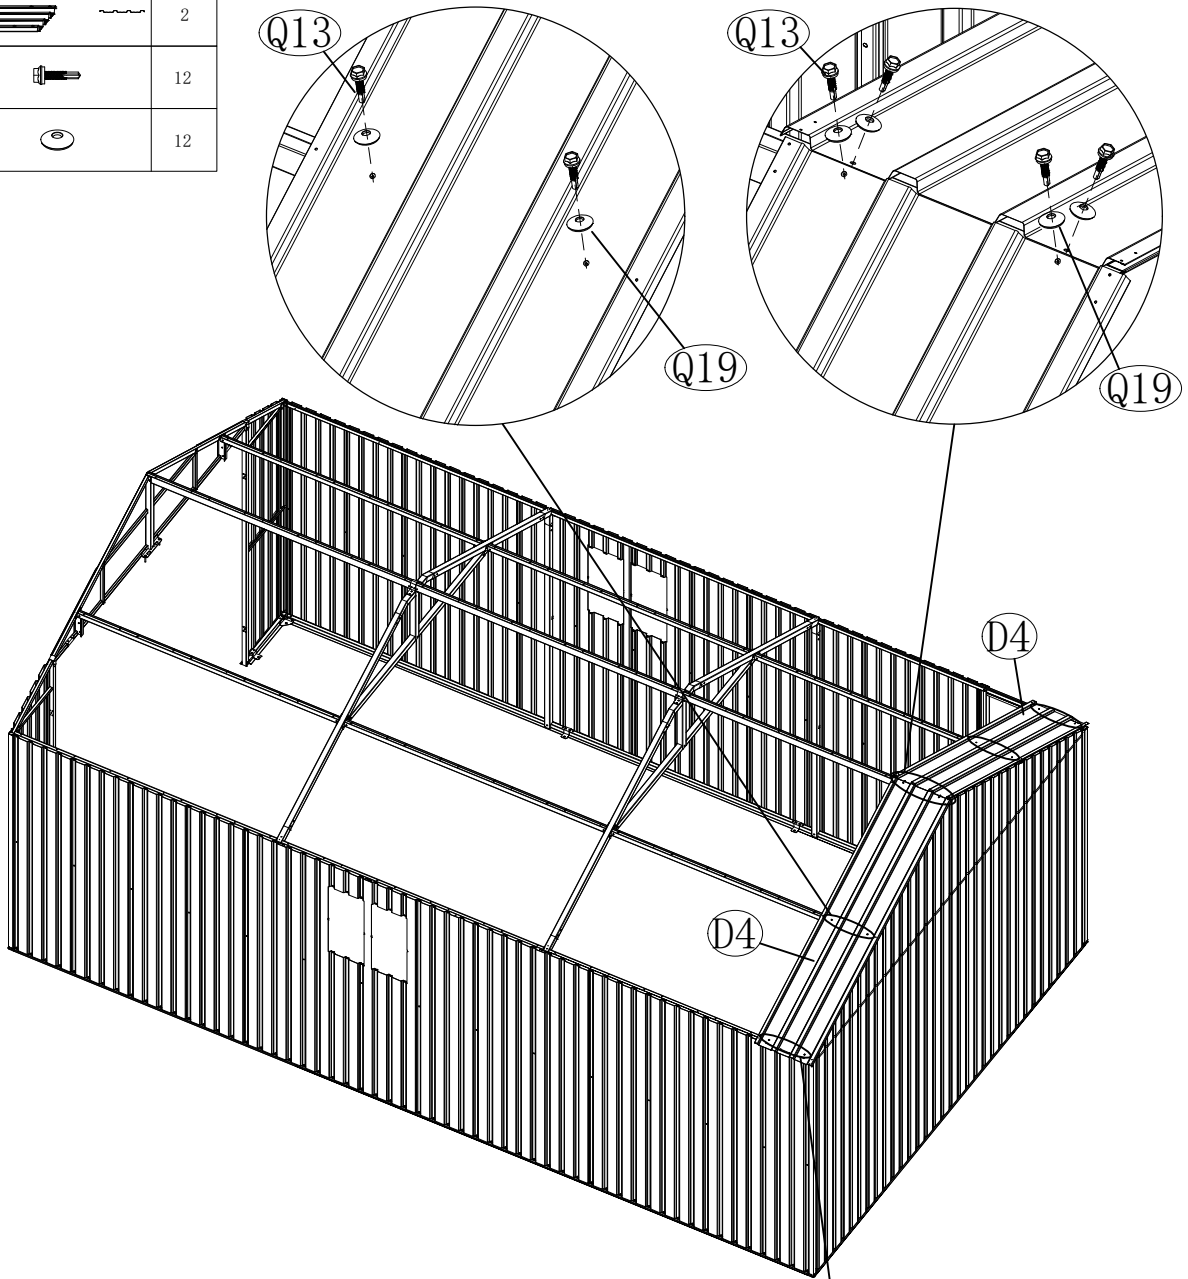
After the side tiles are assembled, measure the diagonals again and make adjustments.






676cm

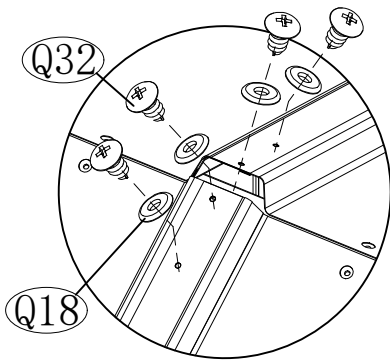
676cm



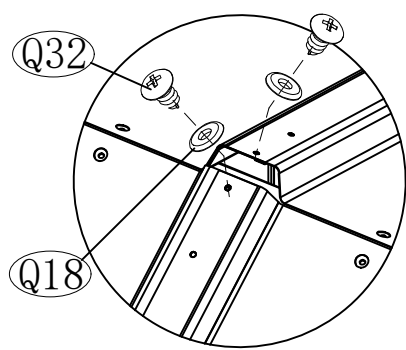
NO.	PART.	Qty.
D4		2
Q13		12
Q19		12



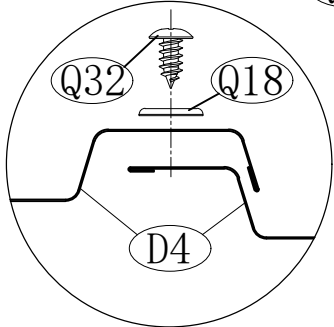
NO.	PART.	Qty.
D4		6
Q32		20
Q13		36
Q18		20
Q19		36



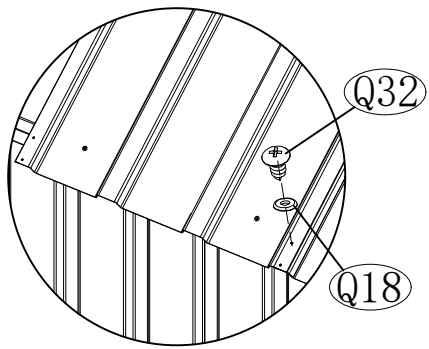
a1 x1



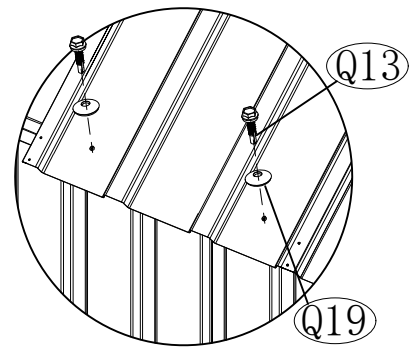
a2 x2



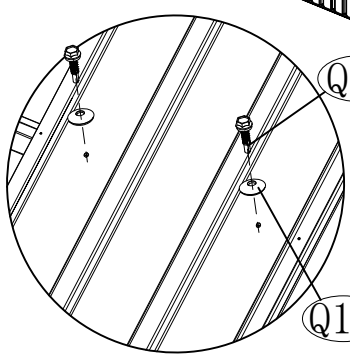
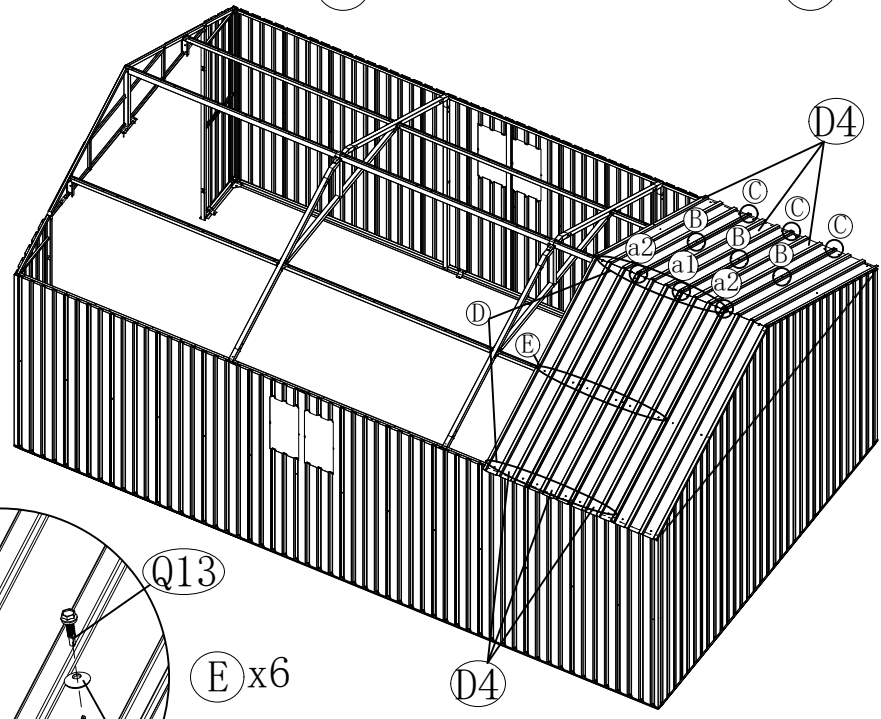
B x6



C x6






D x6

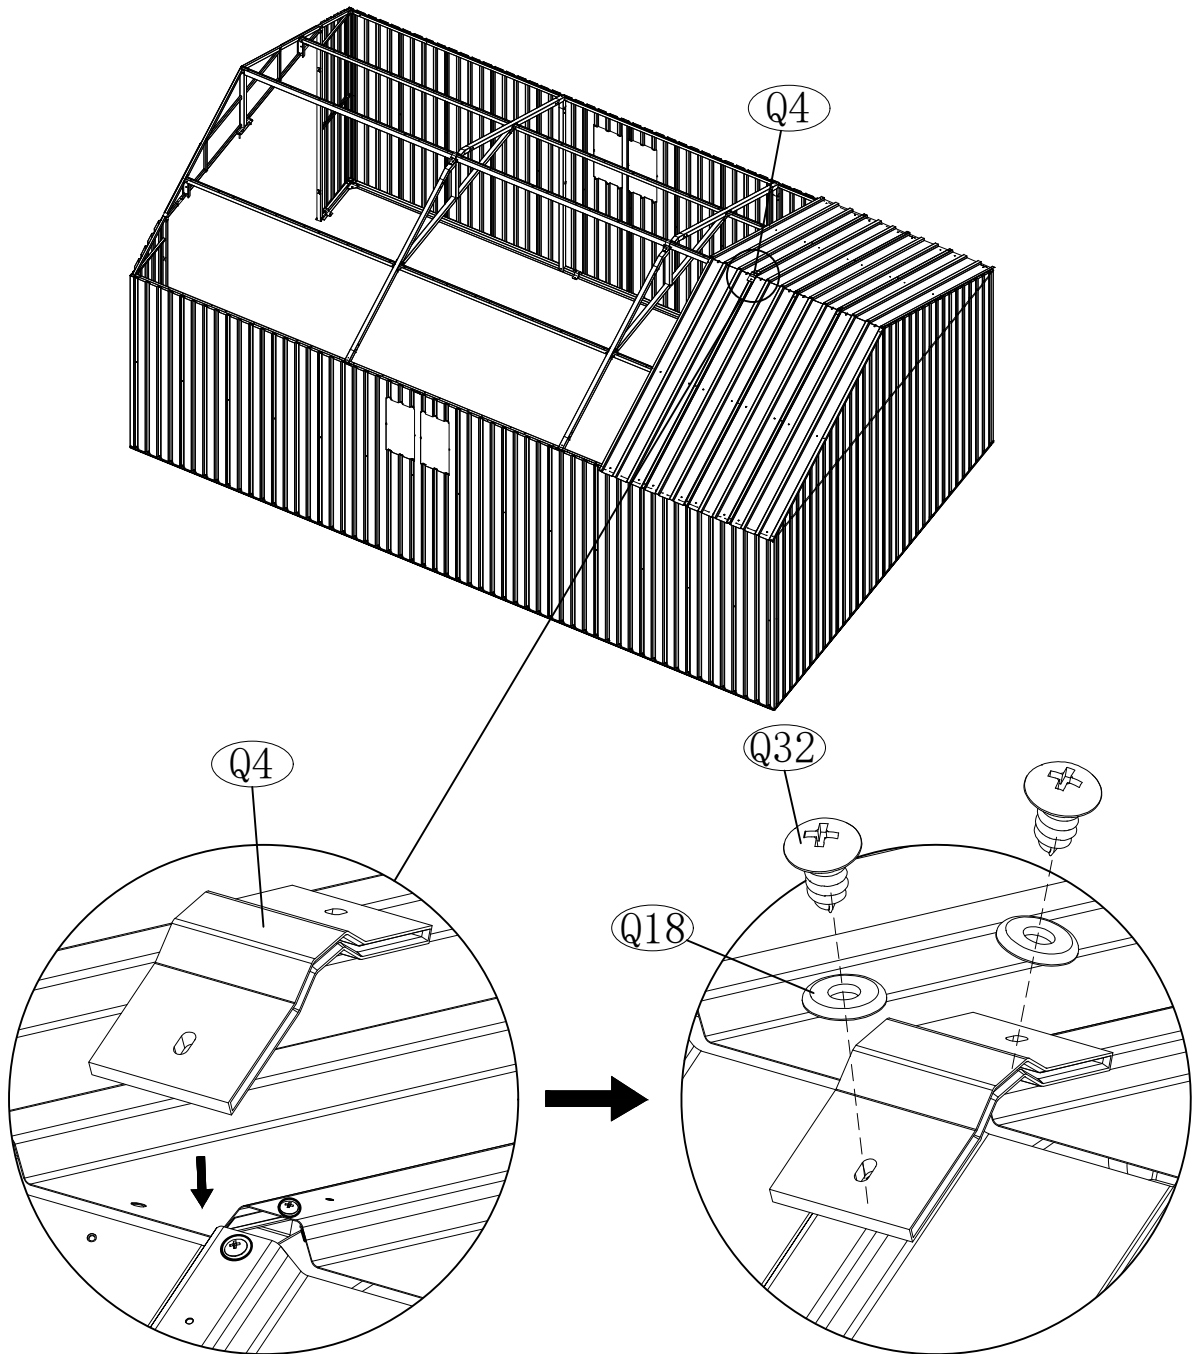







E x6

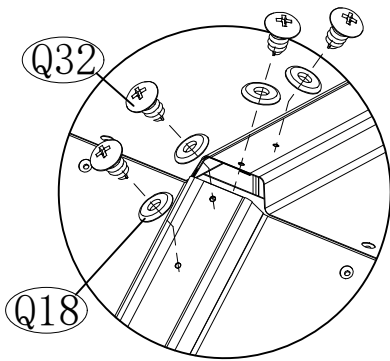
D4

NO.	PART.	Qty.
Q4		1
Q32		2
Q18		2

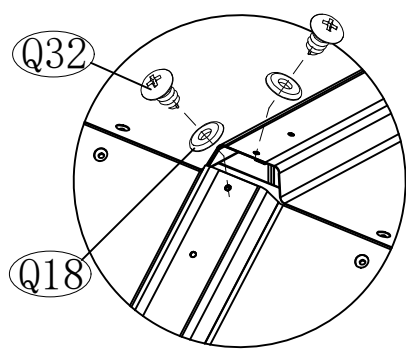
Install plastic Q4 between the 3th and 4th pieces



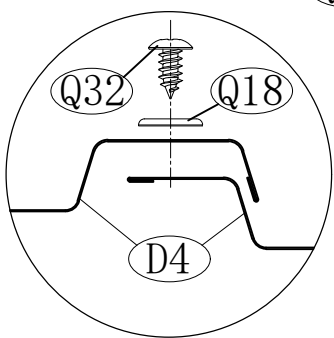
NO.	PART.	Qty.
D4		4
Q32		14
Q13		24
Q18		14
Q19		24



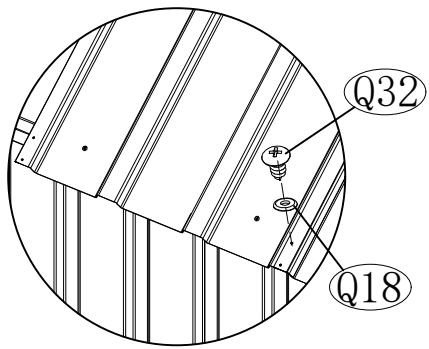
a1 x1



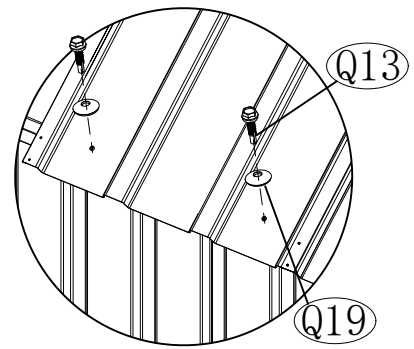
a2 x1



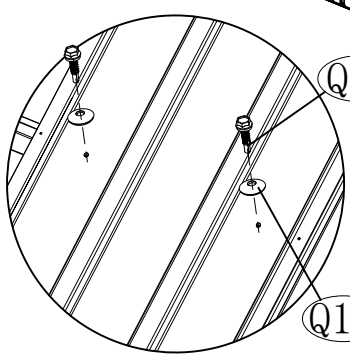
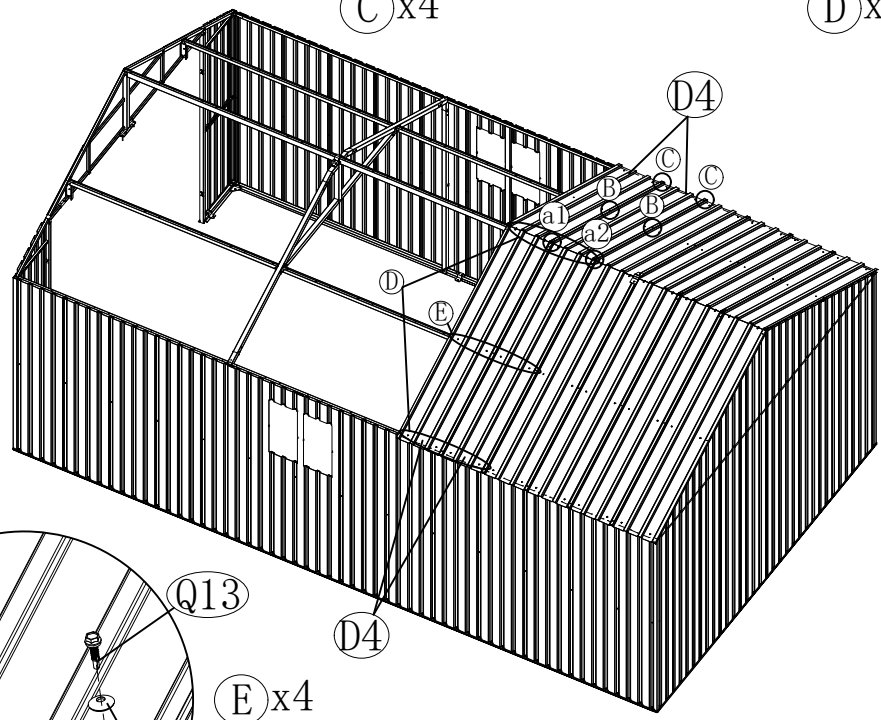
B x4






C x4

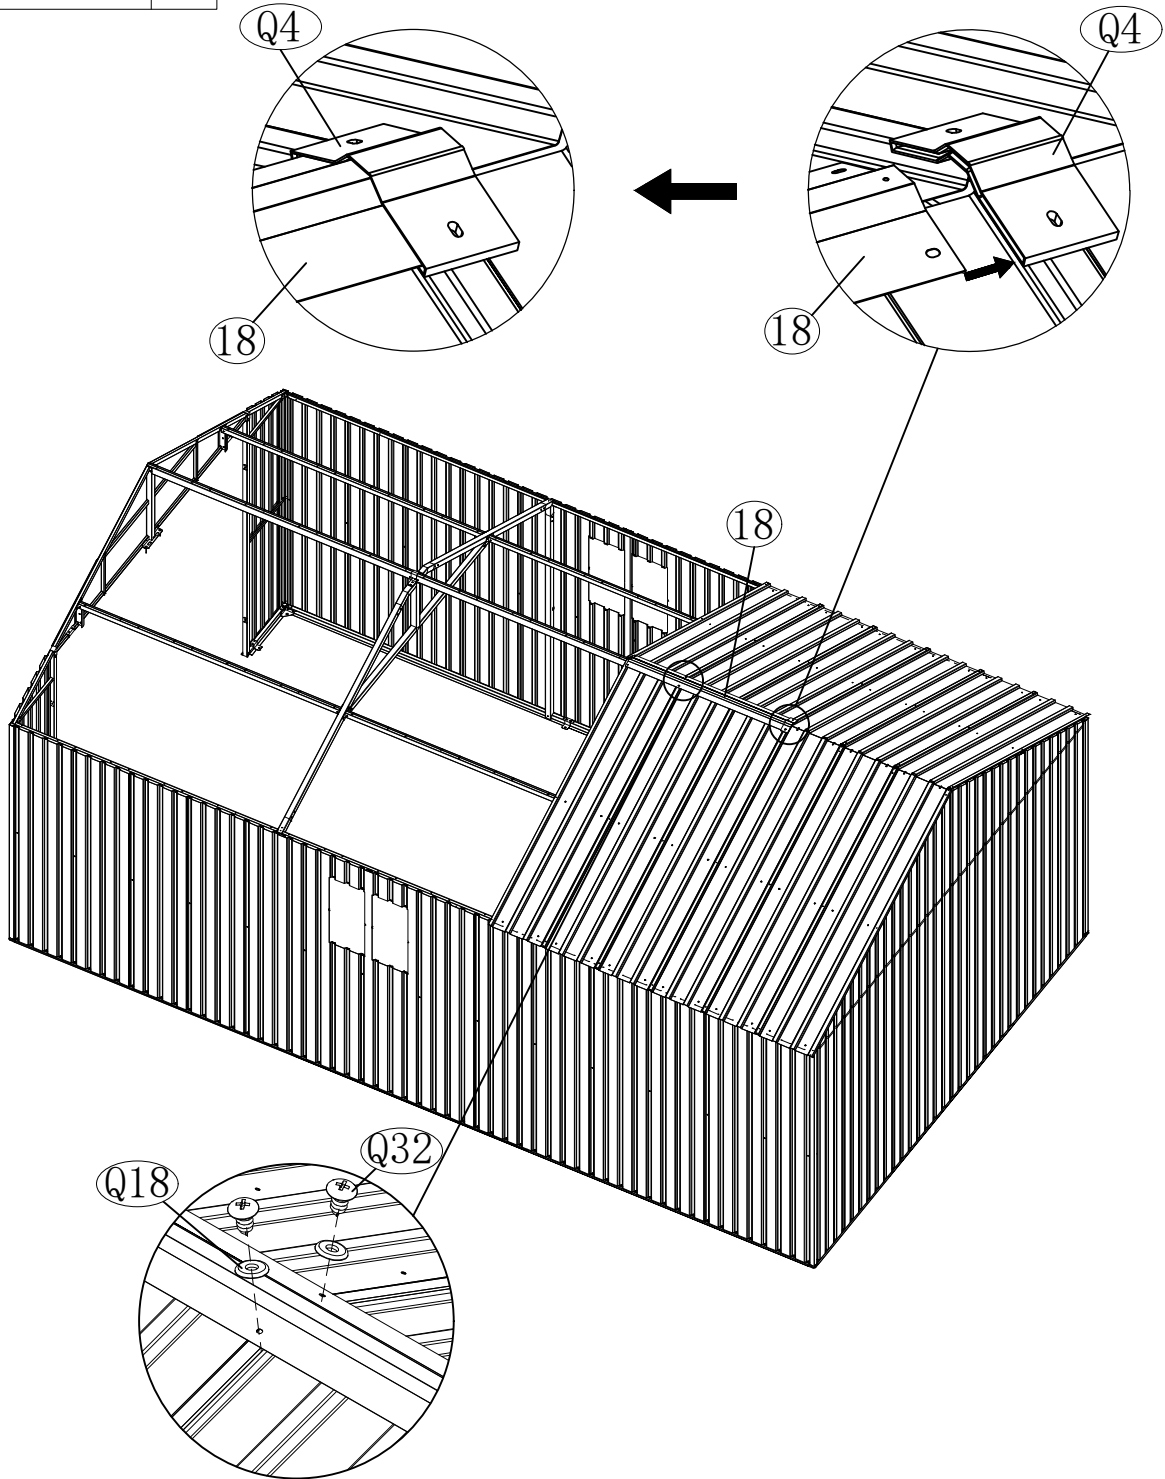







D x4

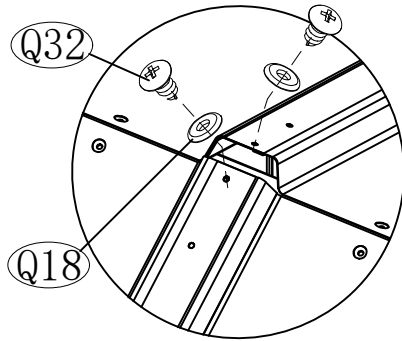


E x4

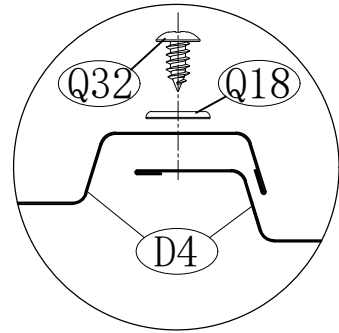
NO.	PART.	Qty.
18		1
Q32		2
Q18		2



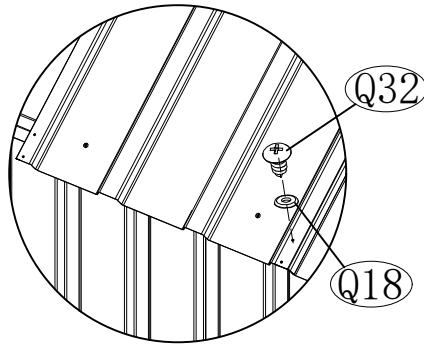
NO.	PART.	Qty.
D4		2
Q32		6
Q13		12
Q18		6
Q19		12



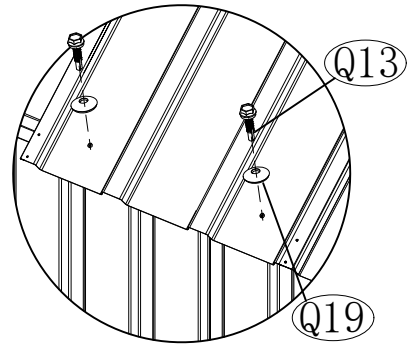
(a2) x1



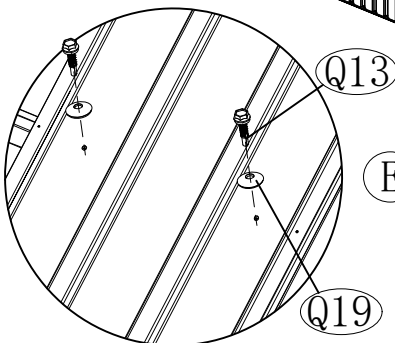
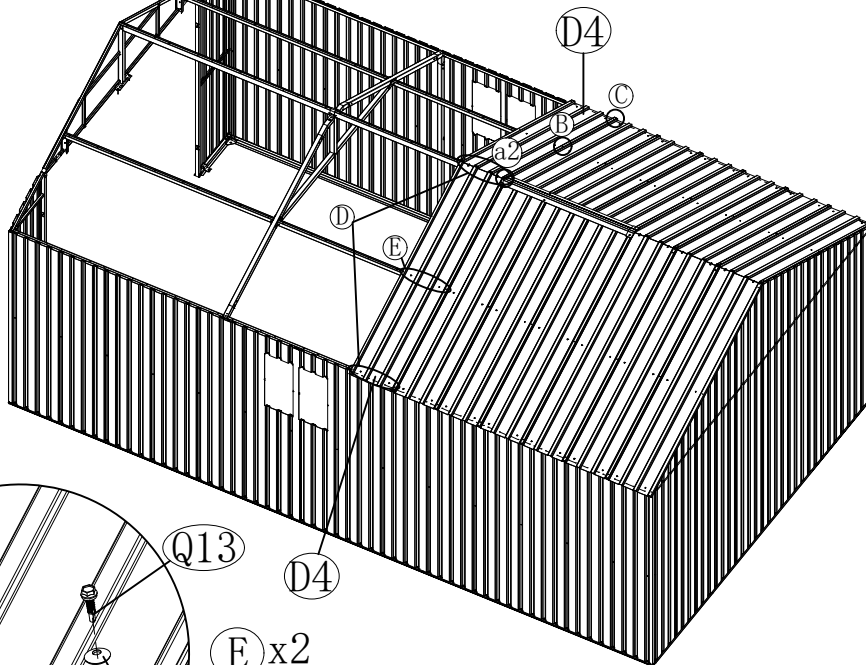
(B) x2






(C) x2



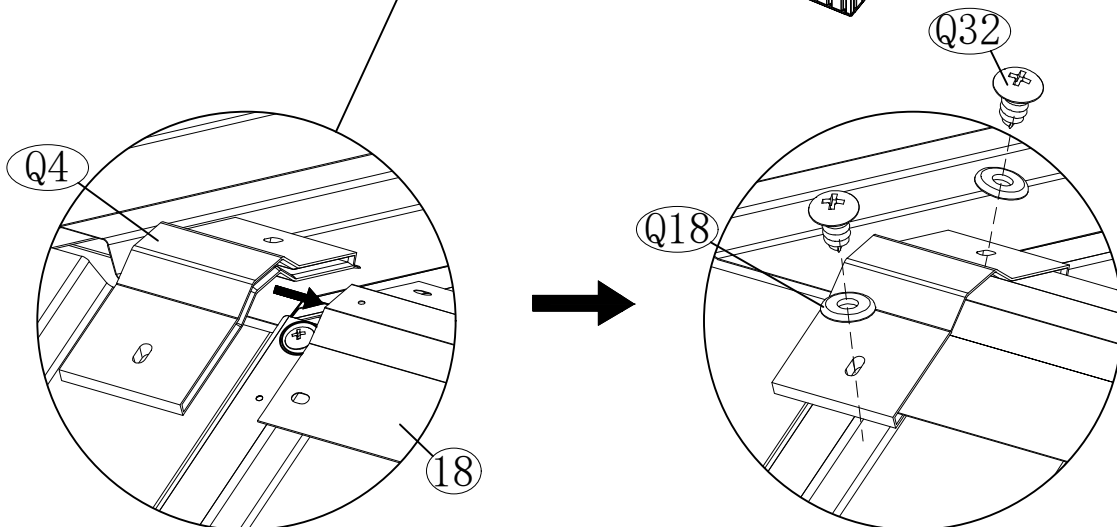
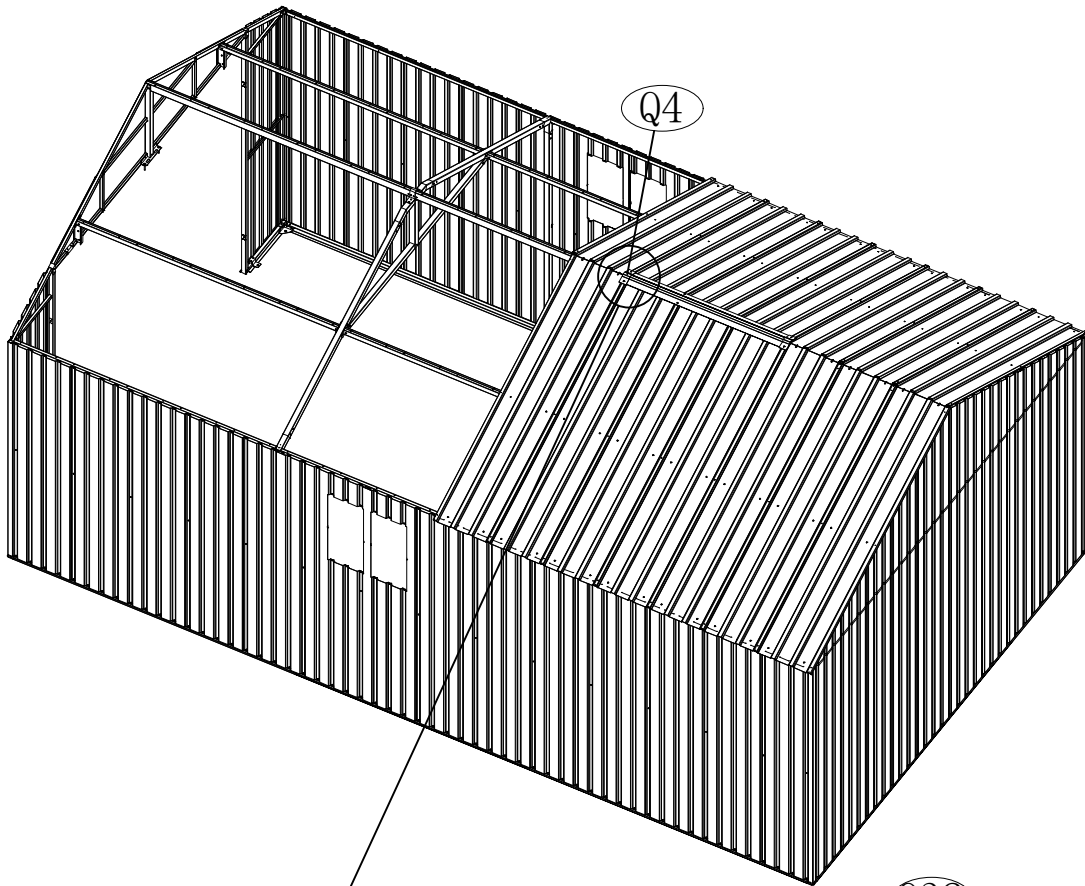
(D) x2








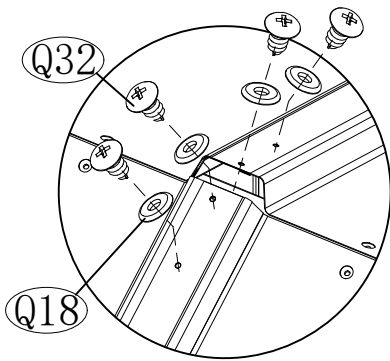
(E) x2

NO.	PART.	Qty.
Q4		1
Q32		2
Q18		2

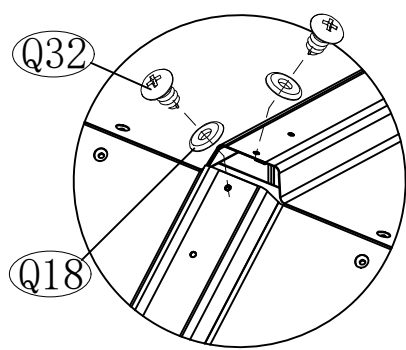
Install plastic Q4 between the 6th and 7th pieces



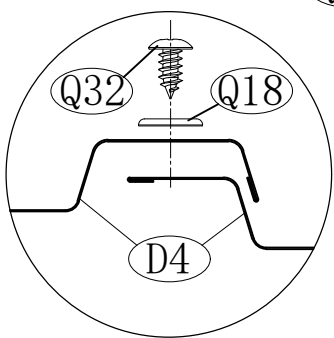
NO.	PART.	Qty.
D4		4
Q32		14
Q13		24
Q18		14
Q19		24



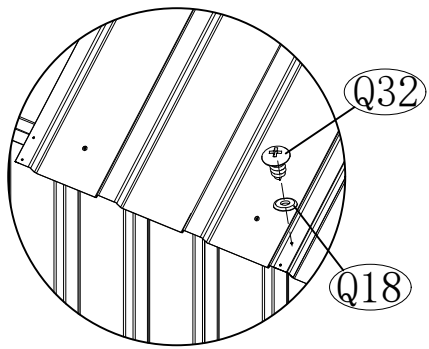
a1 x1



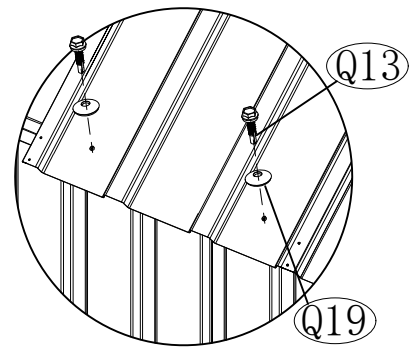
a2 x1



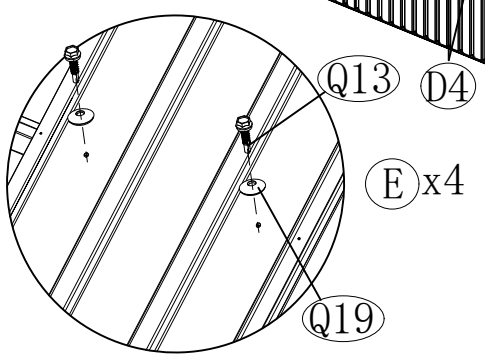
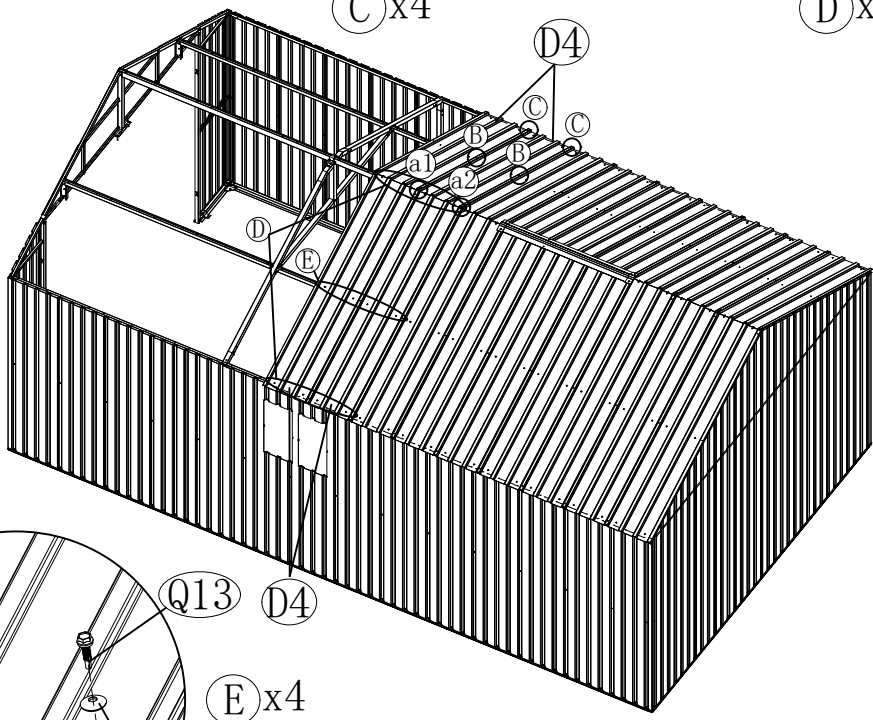
B x4






C x4

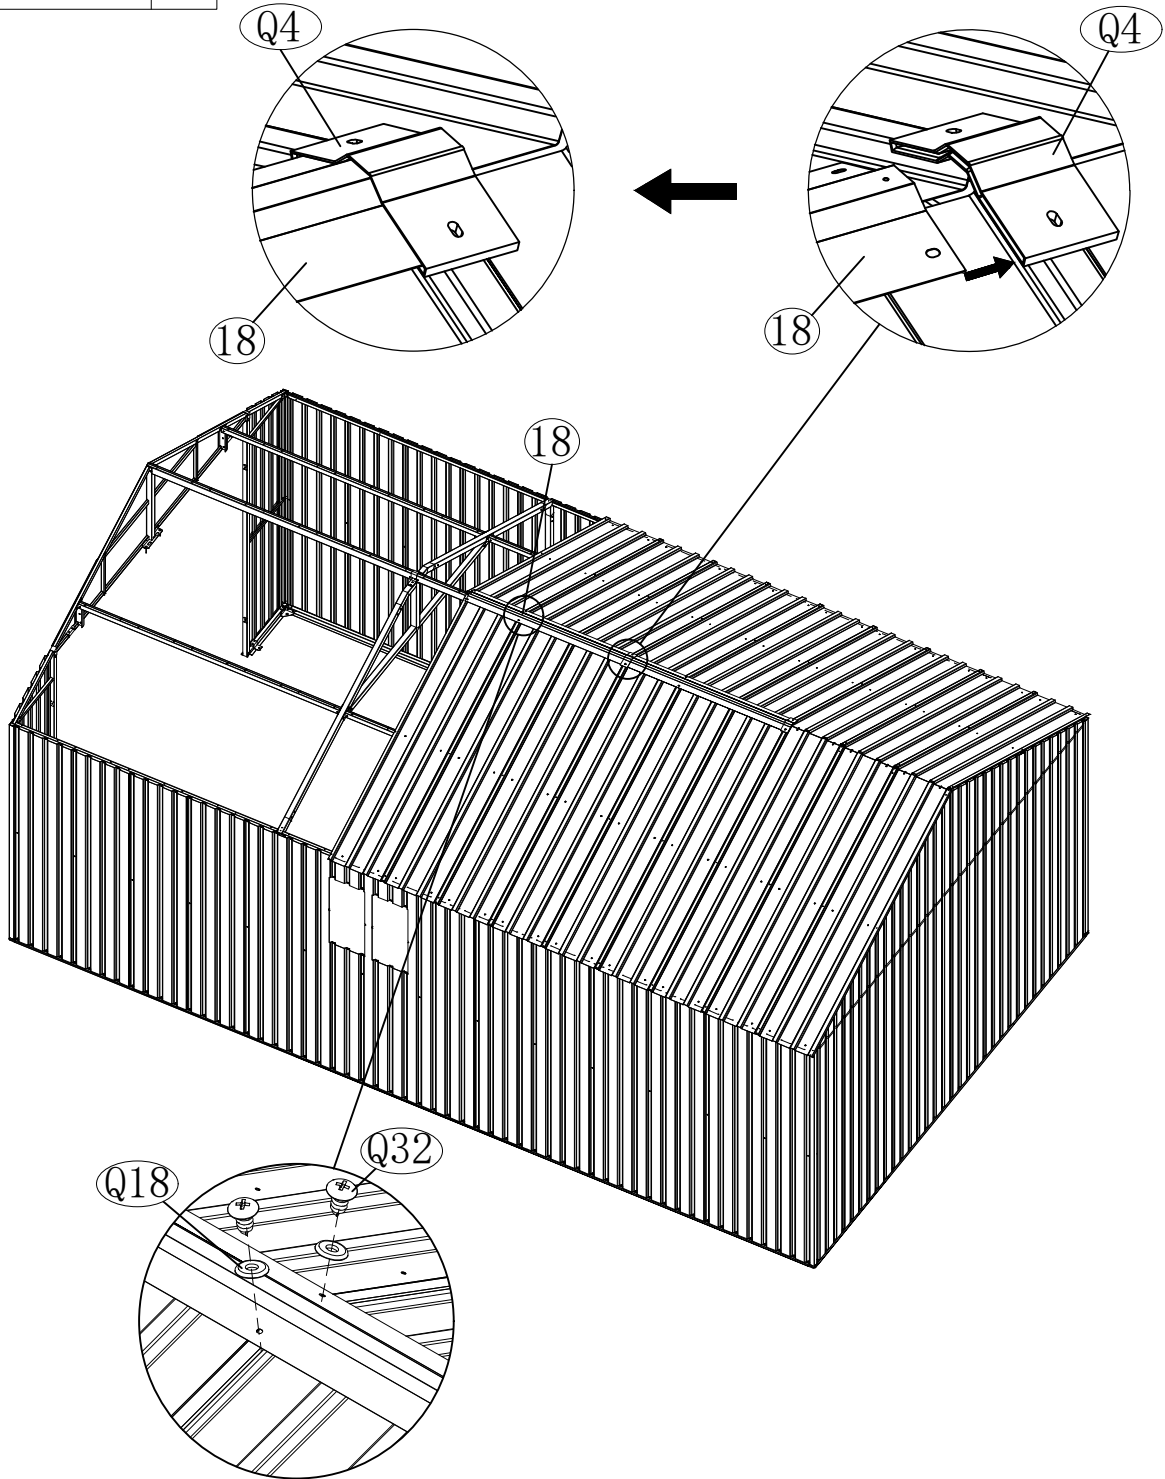







D x4

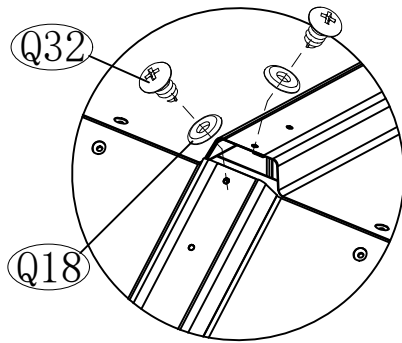


E x4

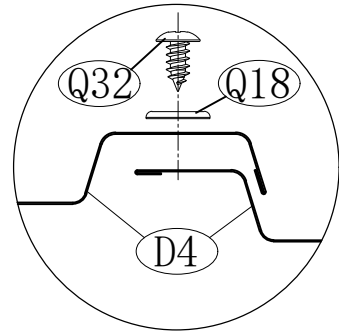
NO.	PART.	Qty.
18		1
Q32		2
Q18		2



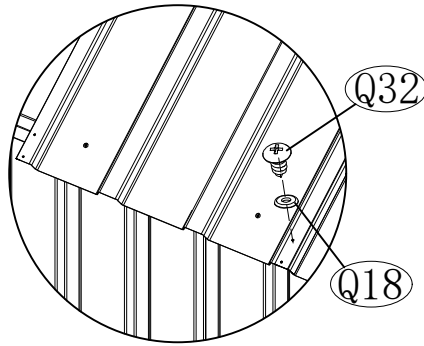
NO.	PART.	Qty.
D4		2
Q32		6
Q13		12
Q18		6
Q19		12



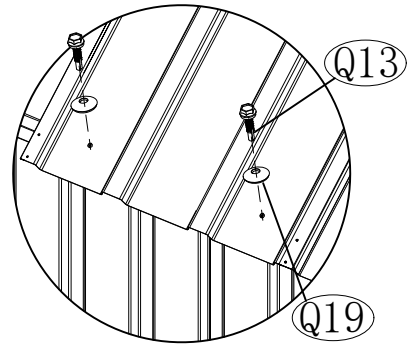
a2 x1



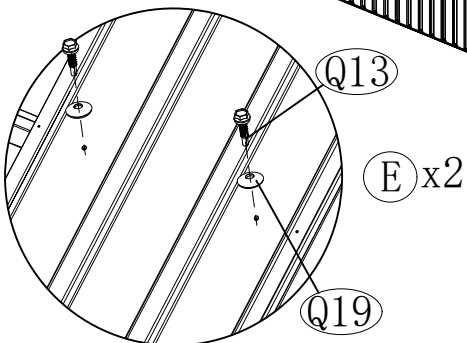
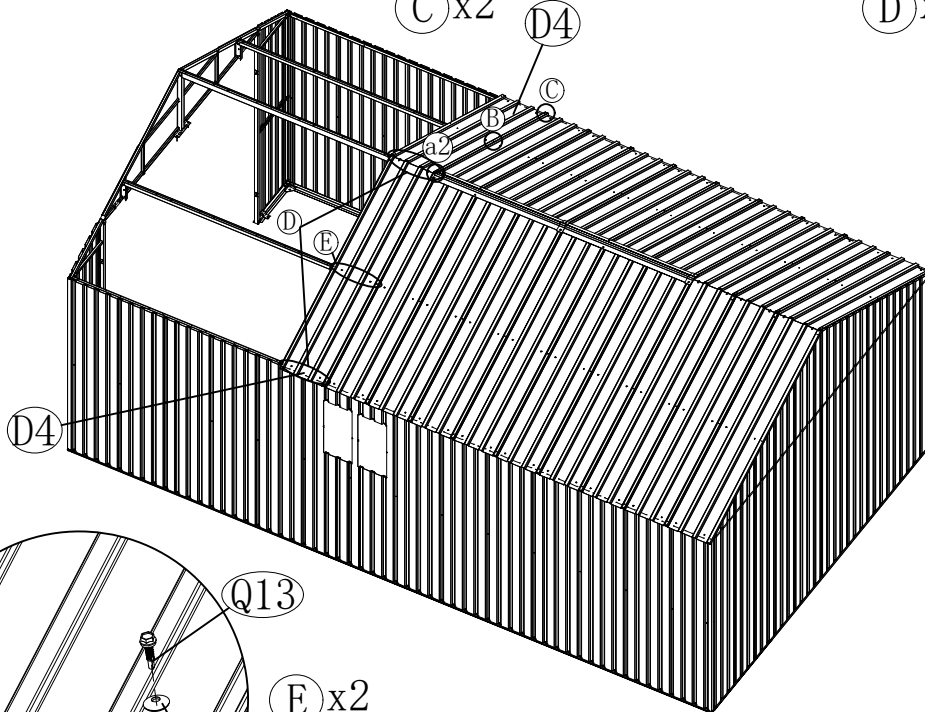
B x2






C x2



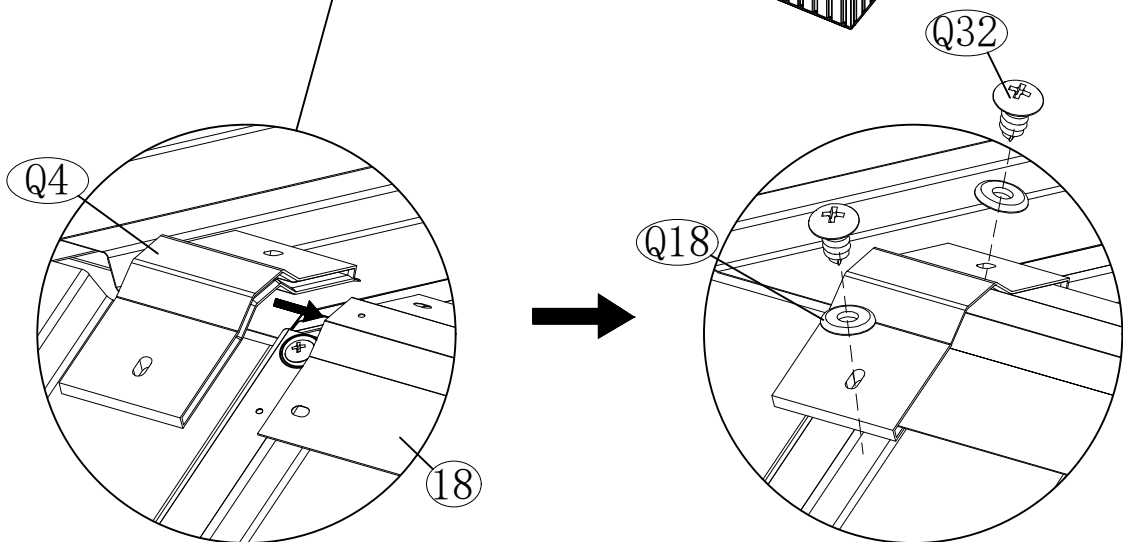
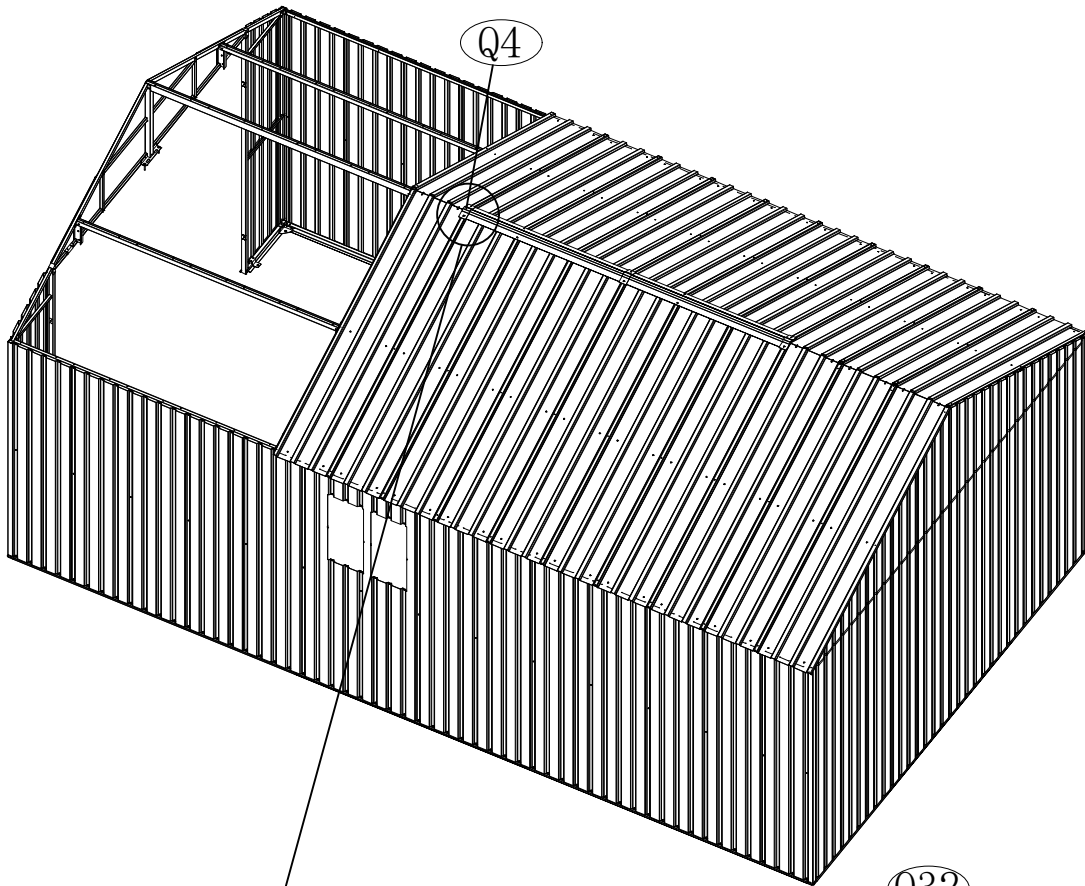
D x2








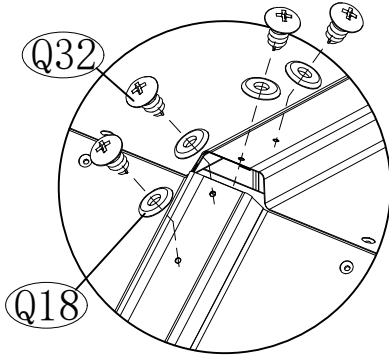
E x2

NO.	PART.	Qty.
Q4		1
Q32		2
Q18		2

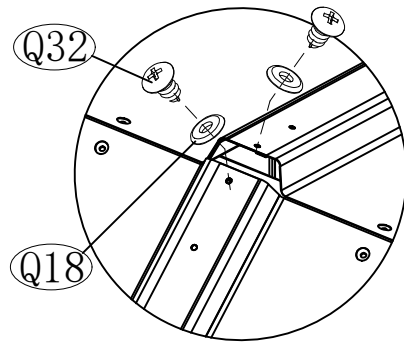
Install plastic Q4 between the 9th and 10th pieces



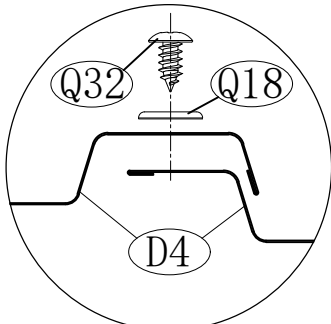
NO.	PART.	Qty.
D4		4
Q32		14
Q13		24
Q18		14
Q19		24



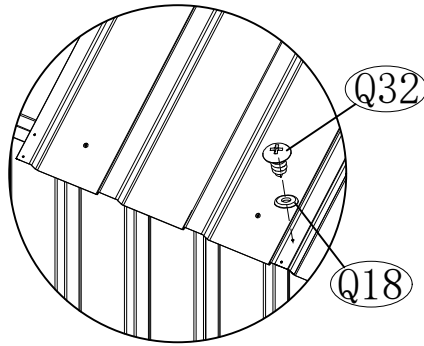
(a1) x1



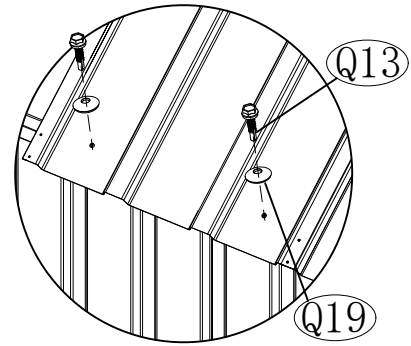
(a2) x1



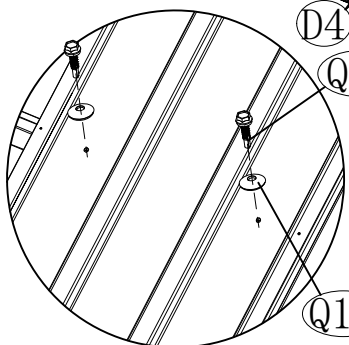
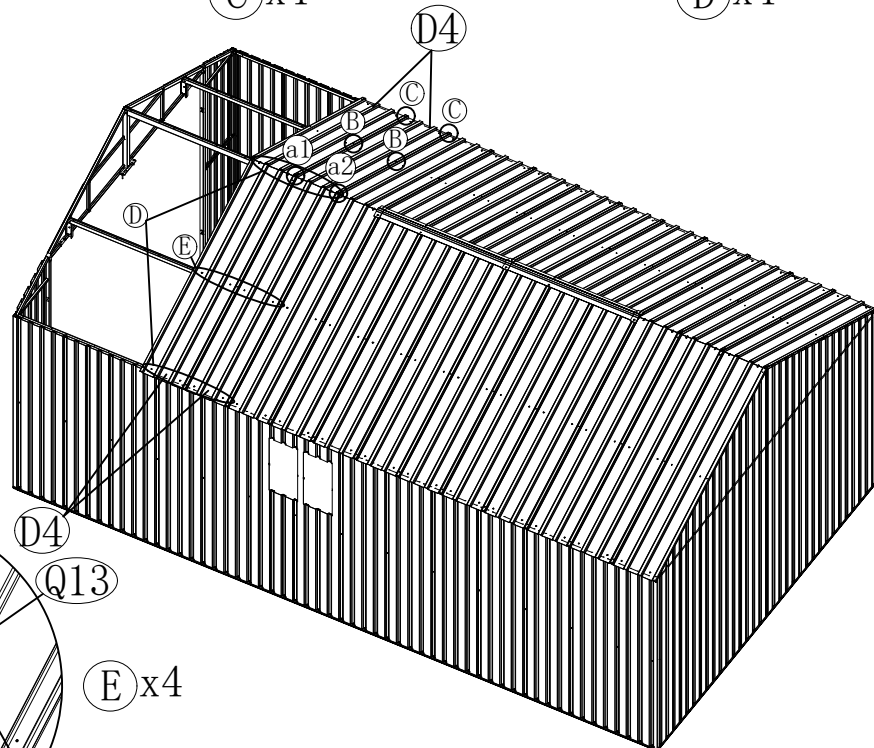
(B) x4






(C) x4

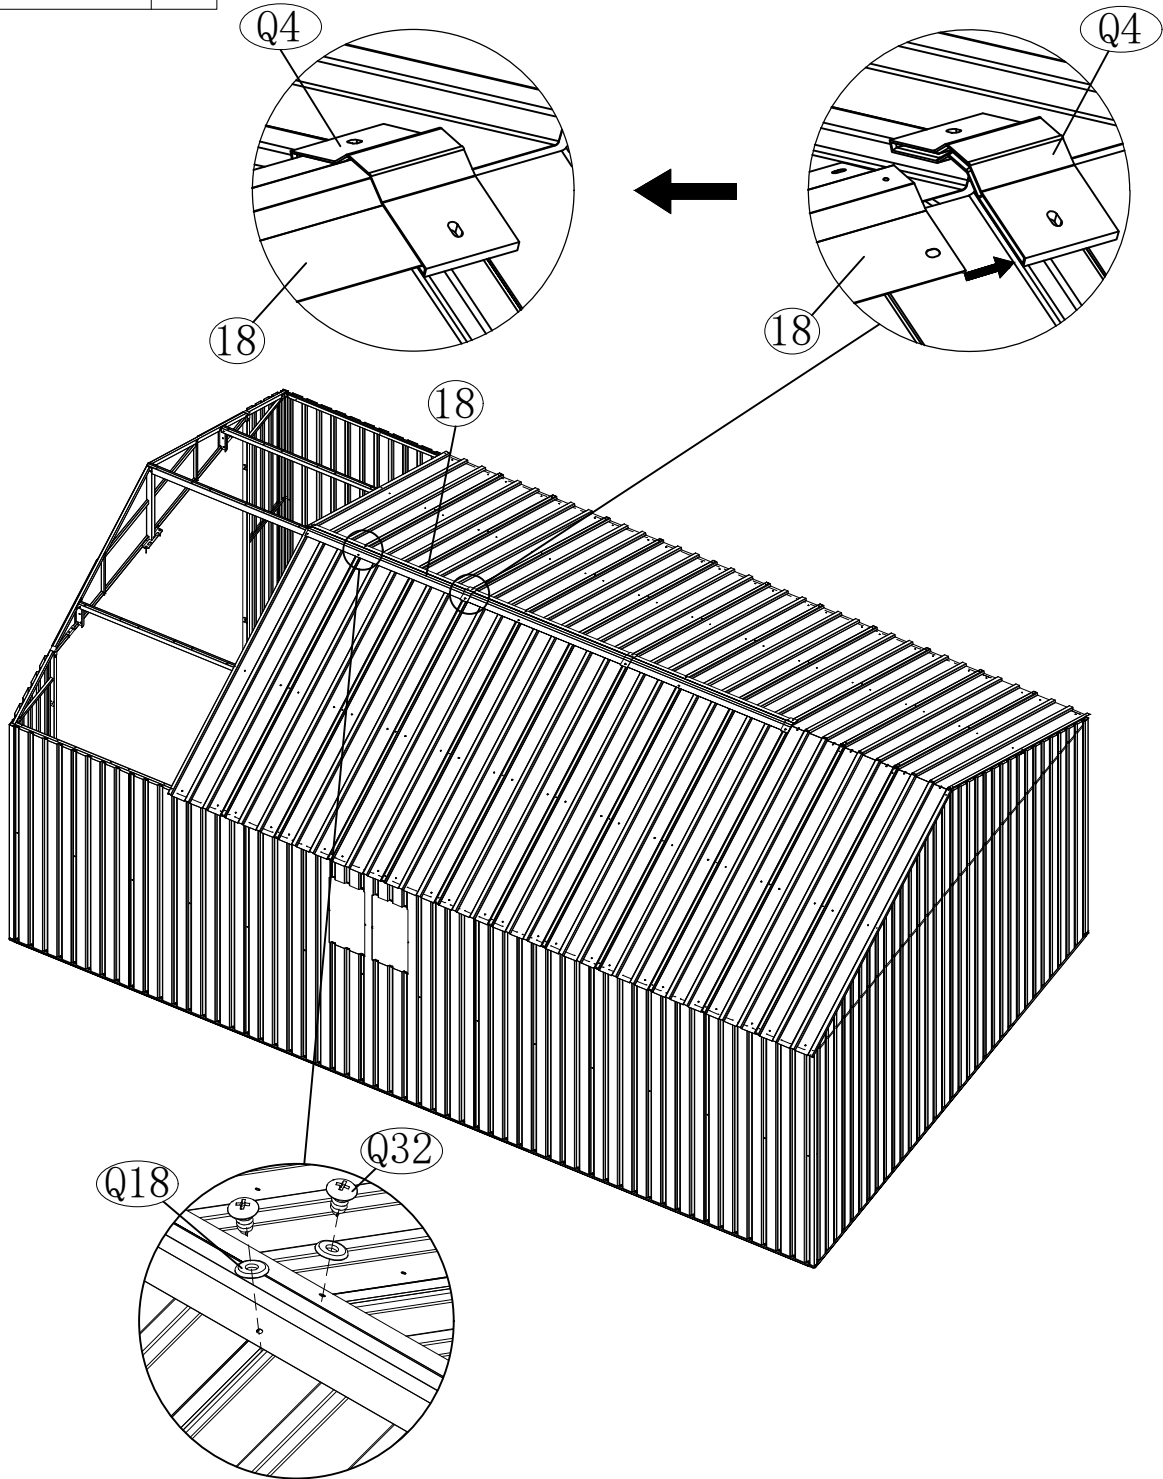







(D) x4

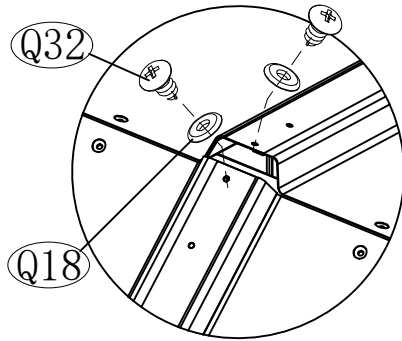


(E) x4

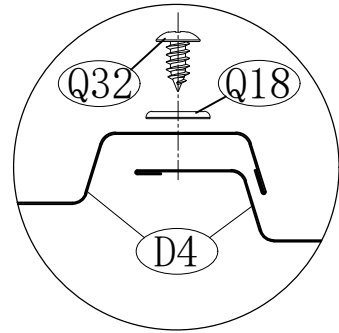
NO.	PART.	Qty.
18		1
Q32		2
Q18		2



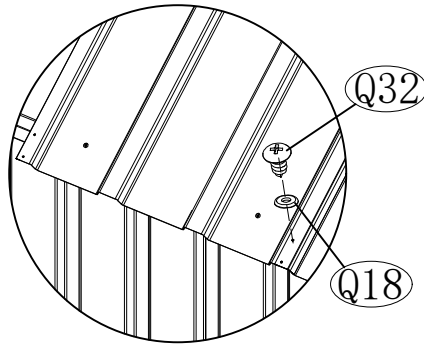
NO.	PART.	Qty.
D2		2
Q32		6
Q13		12
Q18		6
Q19		12



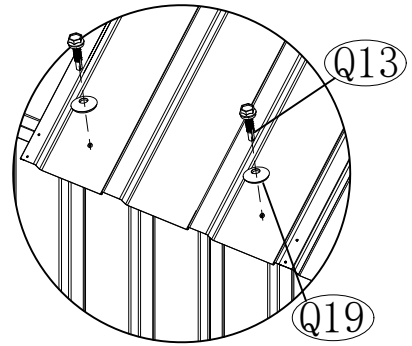
a2 x1



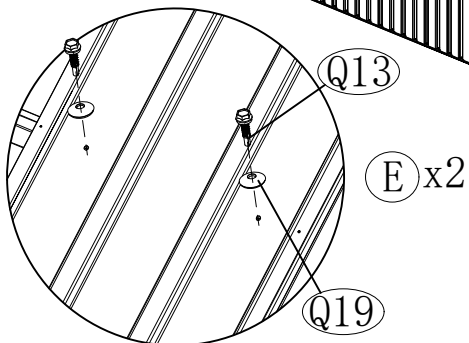
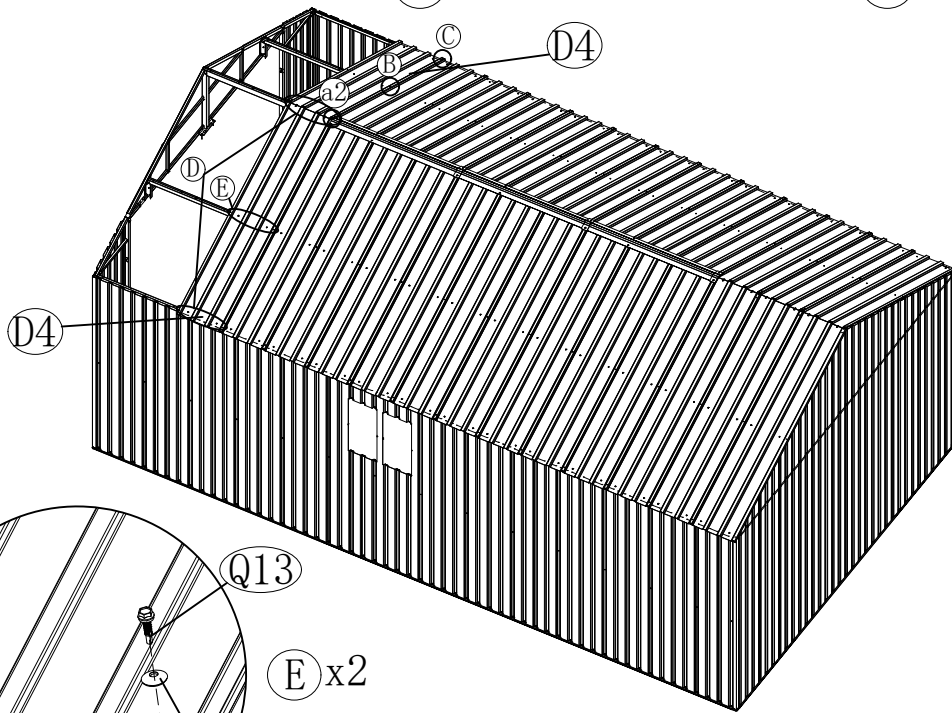
B x2






C x2



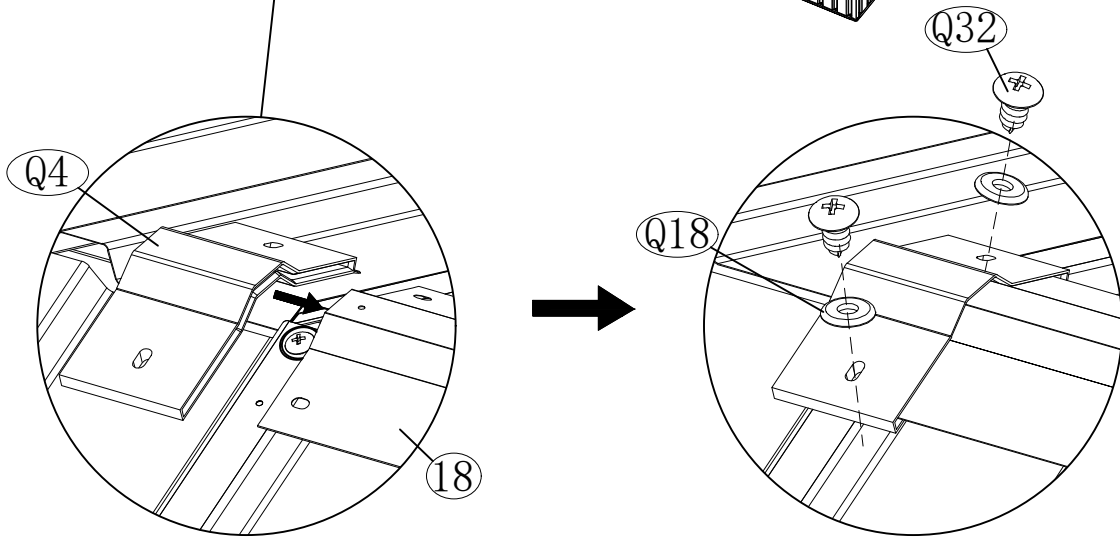
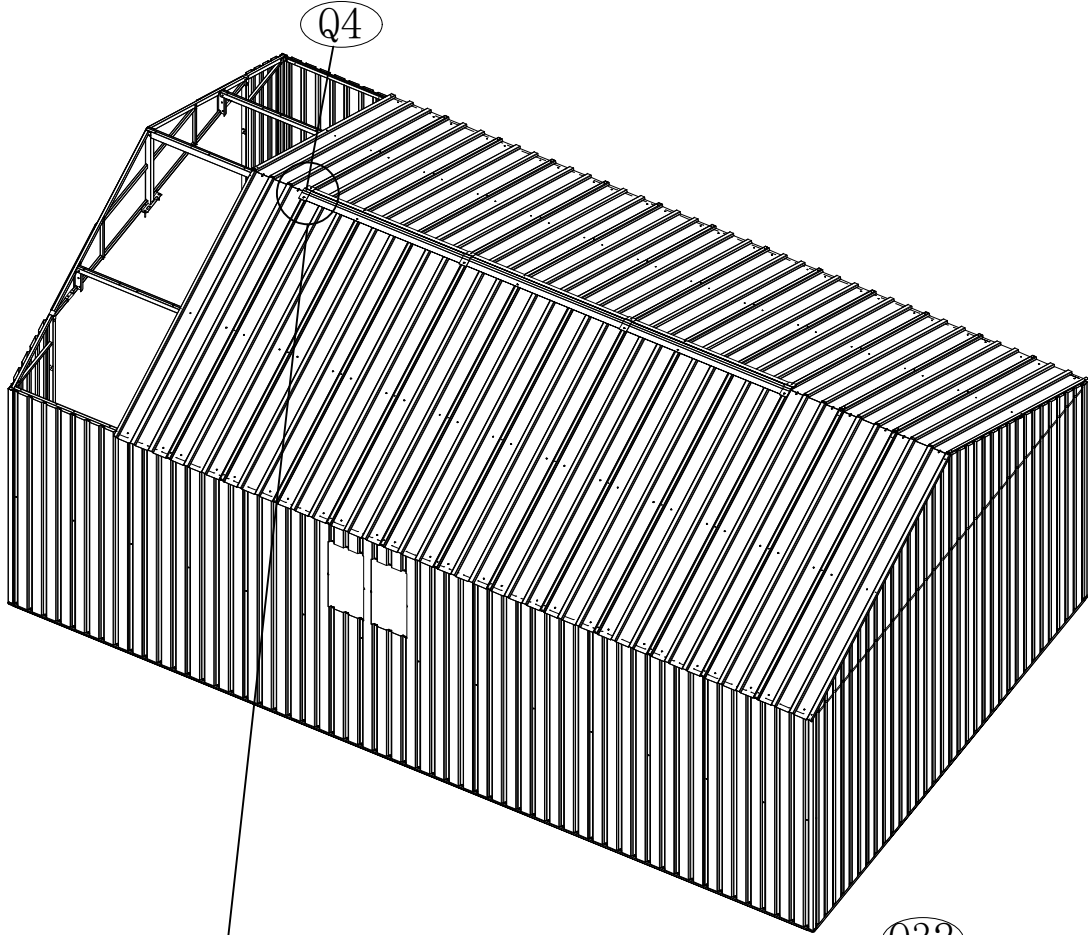
D x2








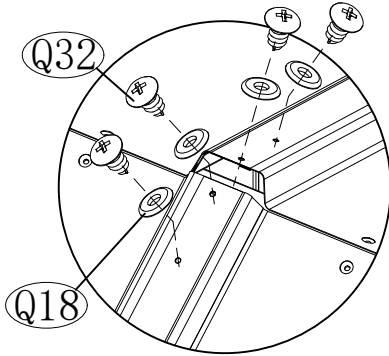
E x2

NO.	PART.	Qty.
Q4		1
Q32		2
Q18		2

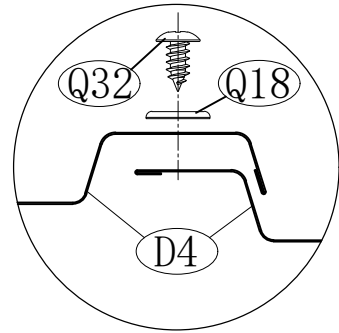
Install plastic Q4 between the 12th and 13th pieces



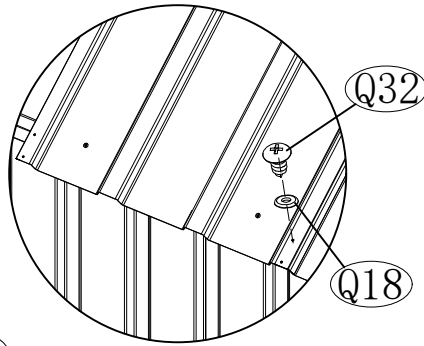
NO.	PART.	Qty.
D4		2
Q32		8
Q13		12
Q18		8
Q19		12



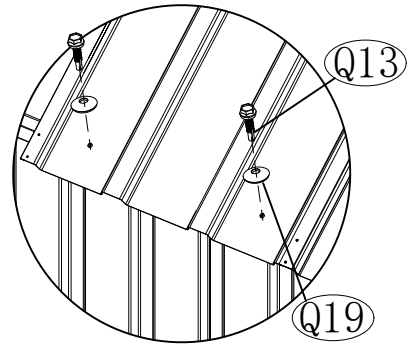
(a) x1



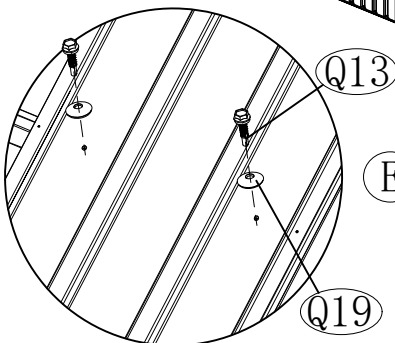
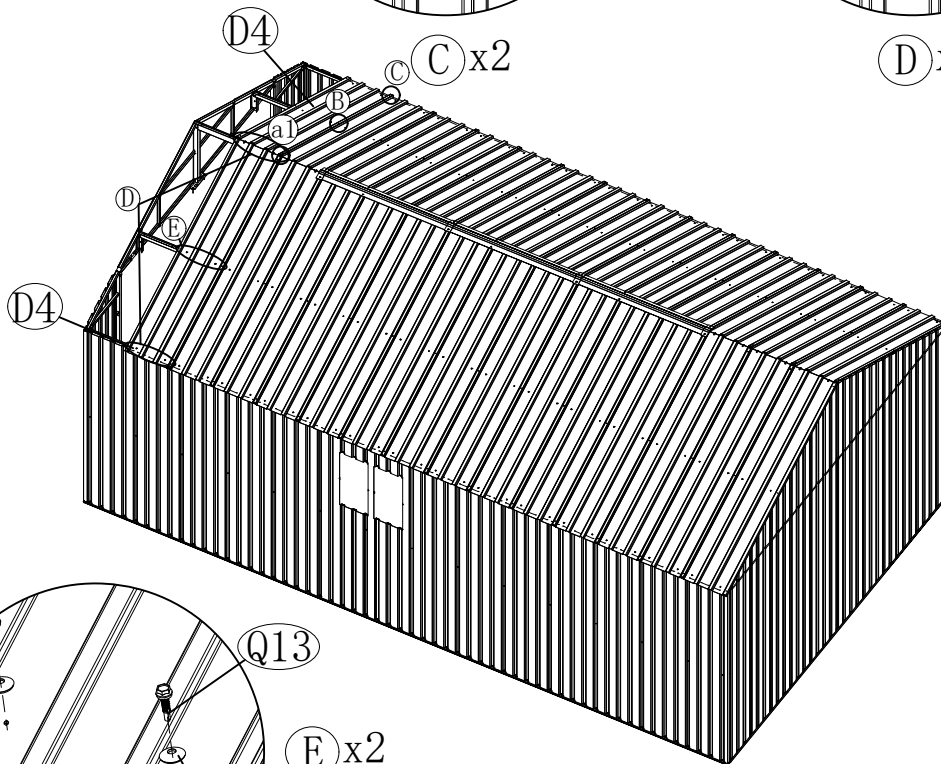
(B) x2








(C) x2

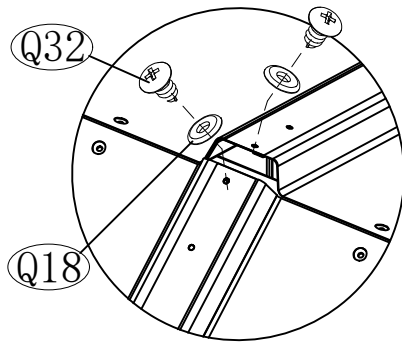


(D) x2

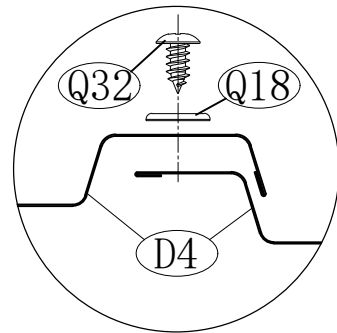


(E) x2

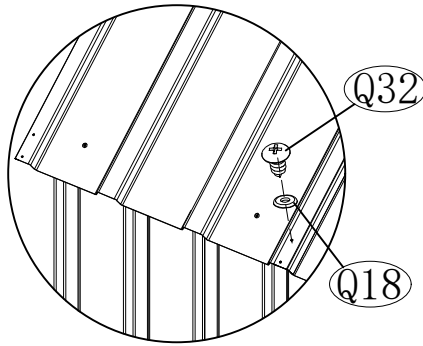
NO.	PART.	Qty.
D4		2
Q32		6
Q13		12
Q18		6
Q19		12



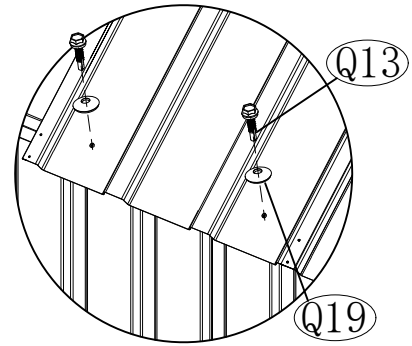
a2 x1



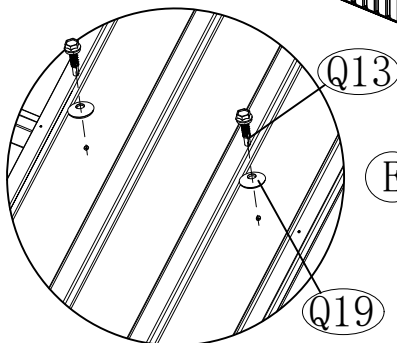
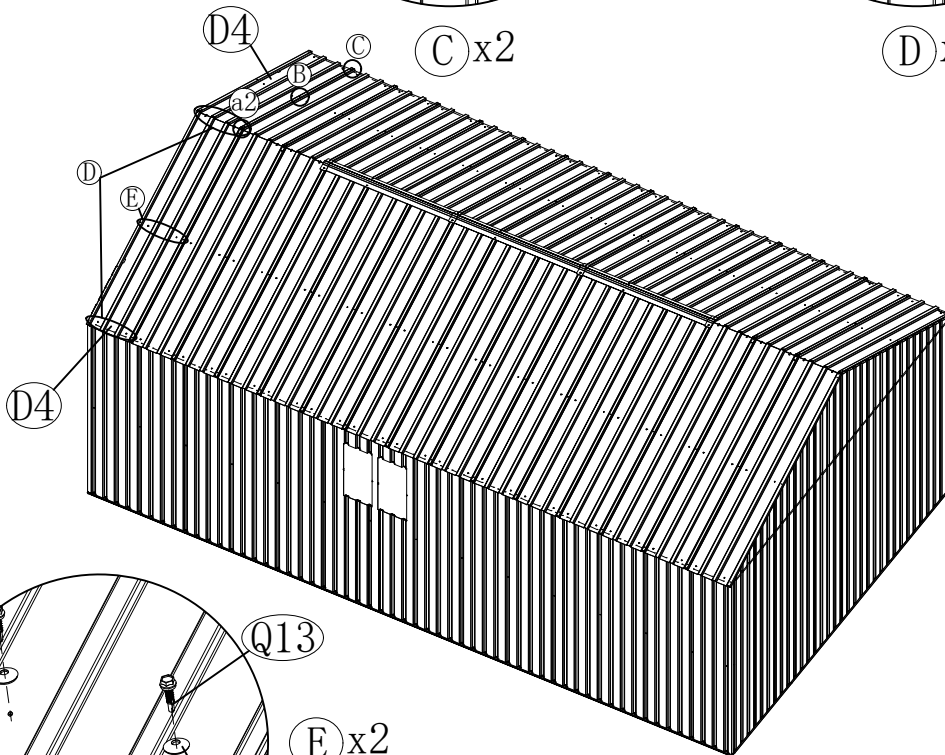
B x2







C x2

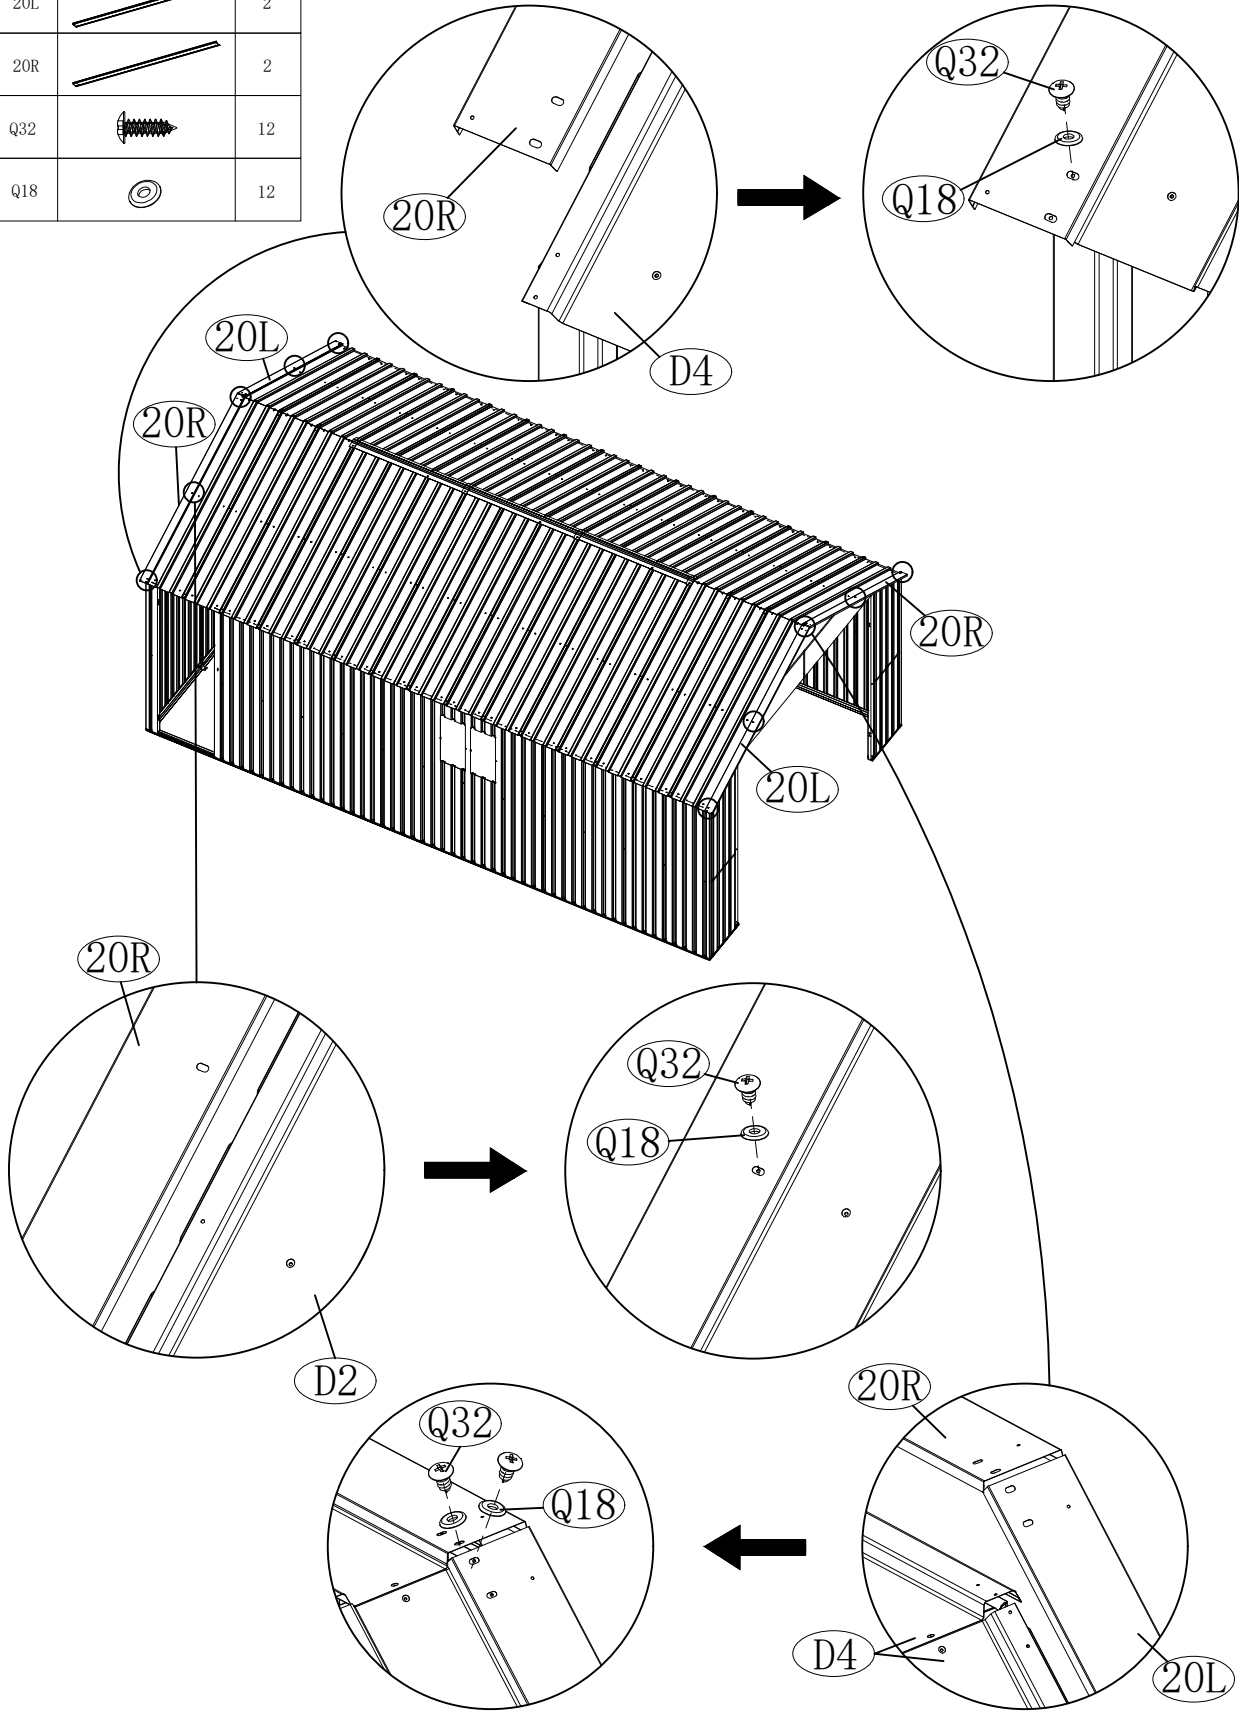





D x2

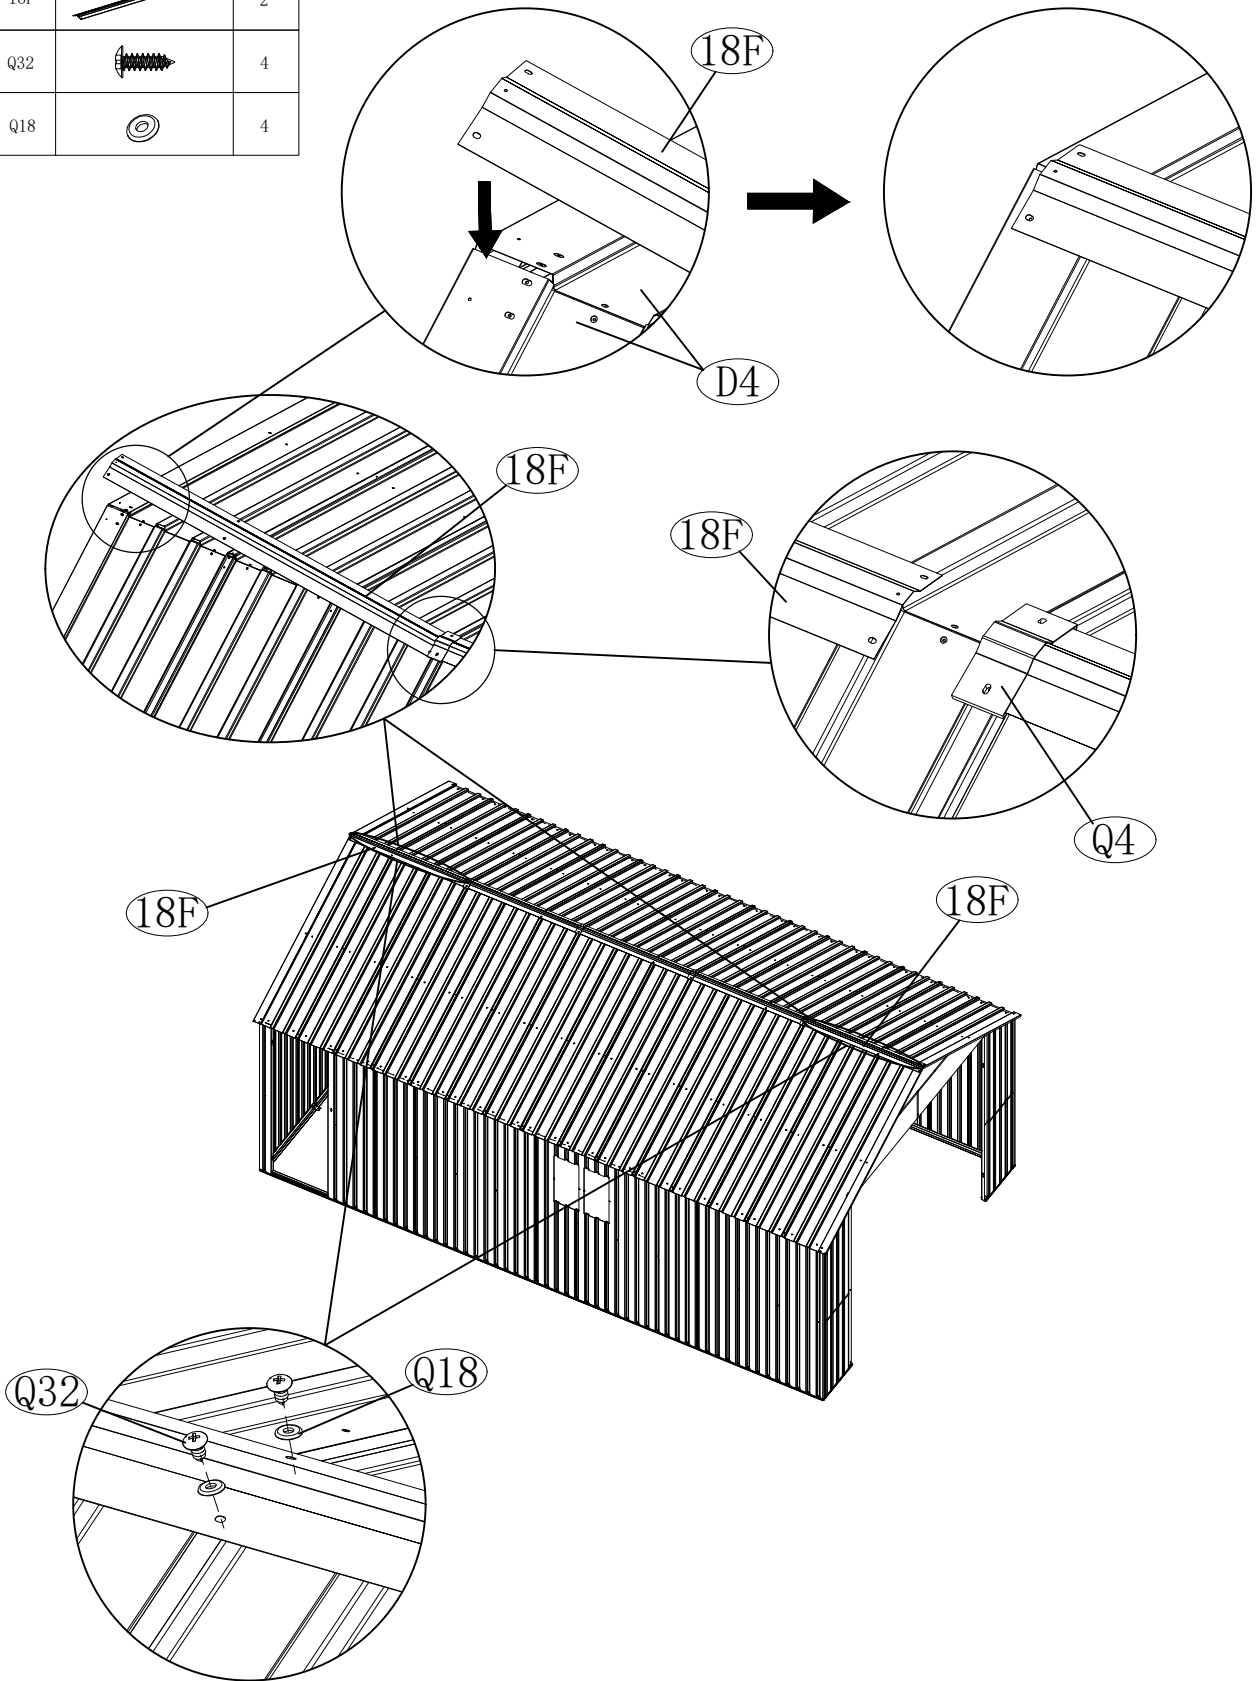





E x2

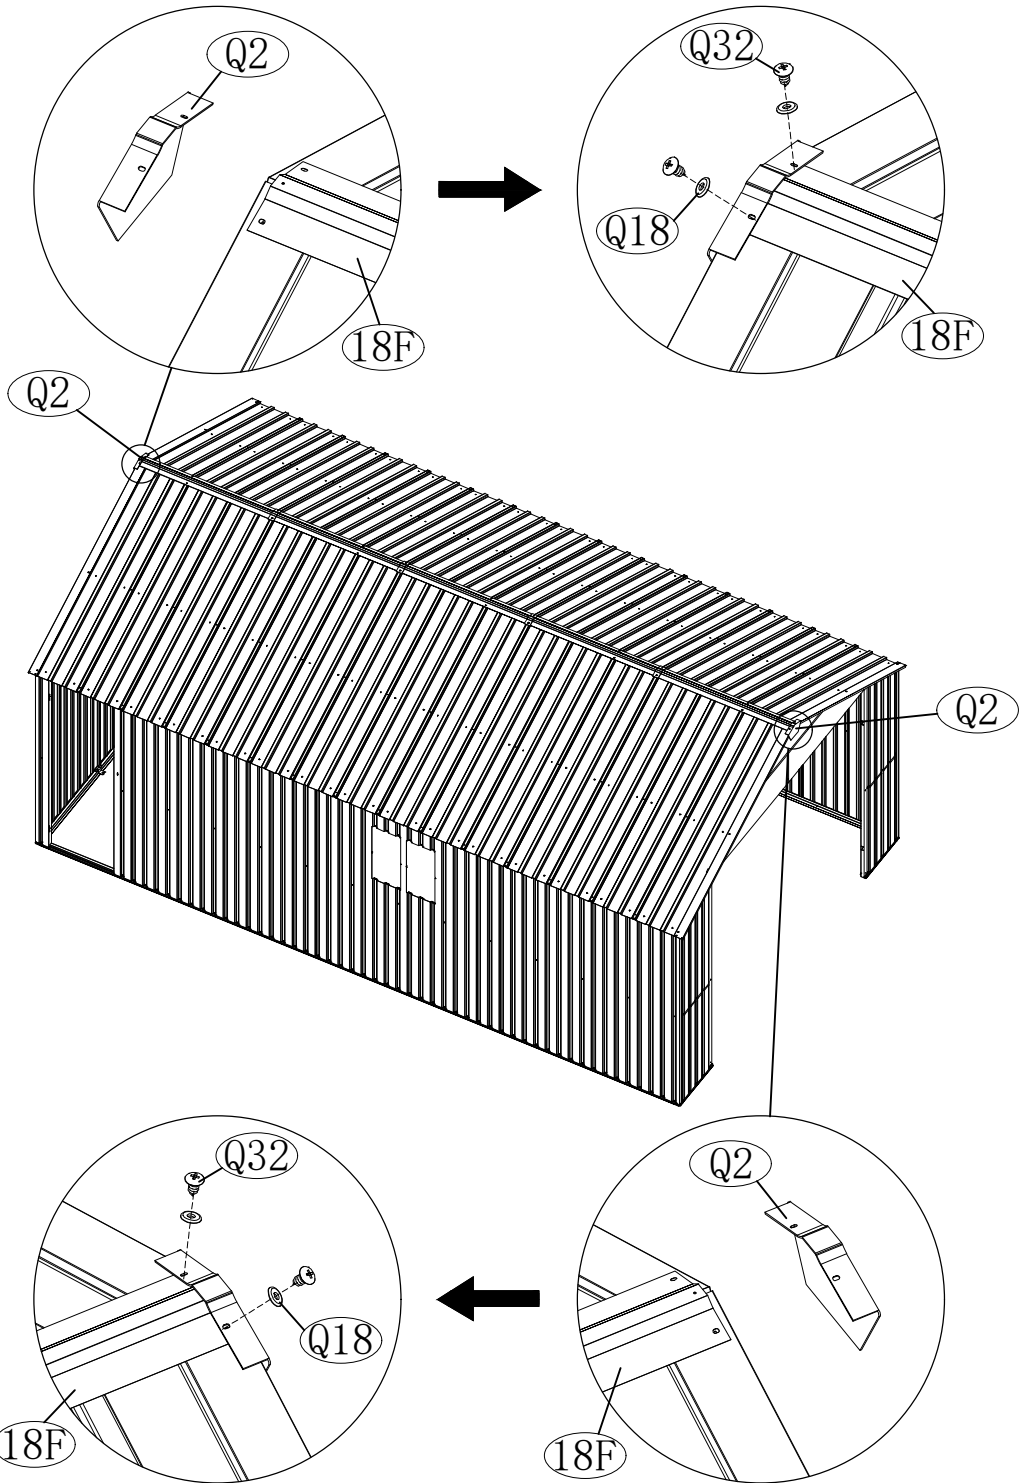
NO.	PART.	Qty.
20L		2
20R		2
Q32		12
Q18		12







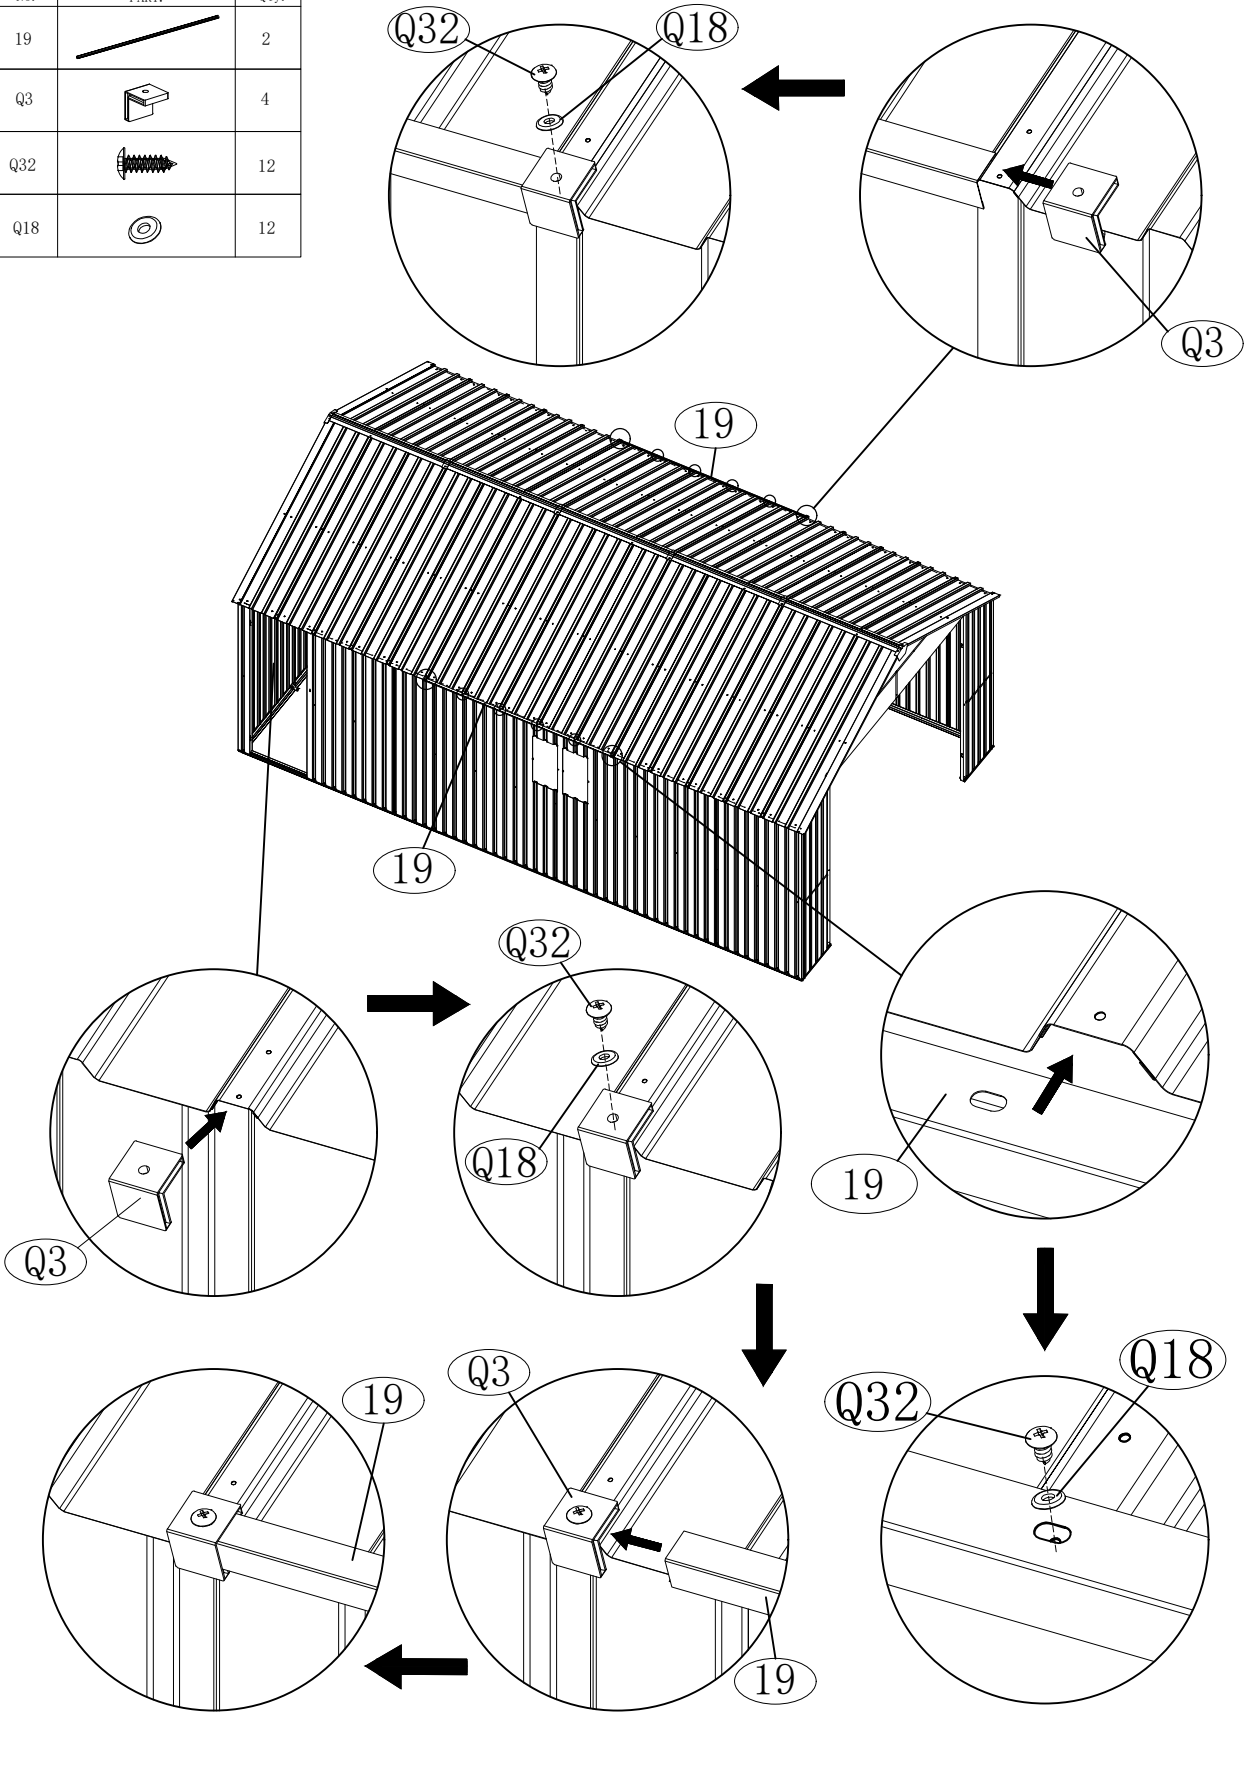
NO.	PART.	Qty.
18F		2
Q32		4
Q18		4








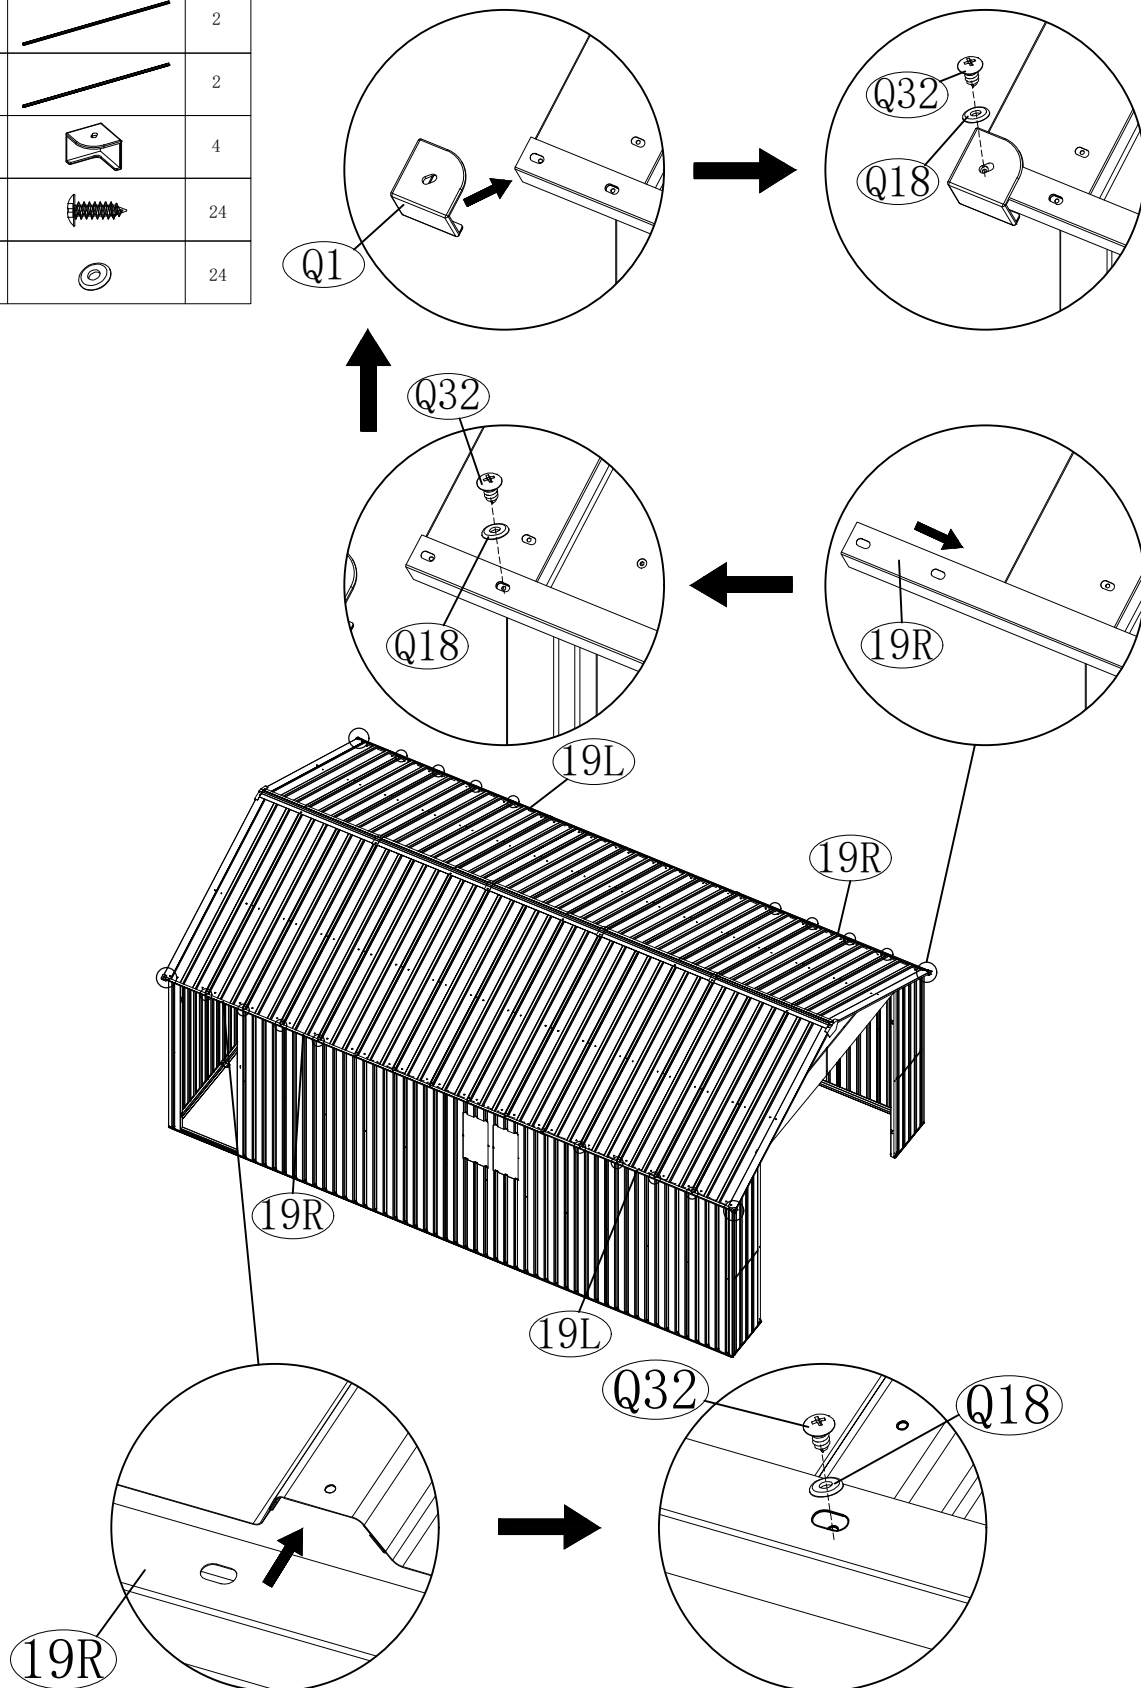
NO.	PART.	Qty.
Q2		2
Q32		4
Q18		4









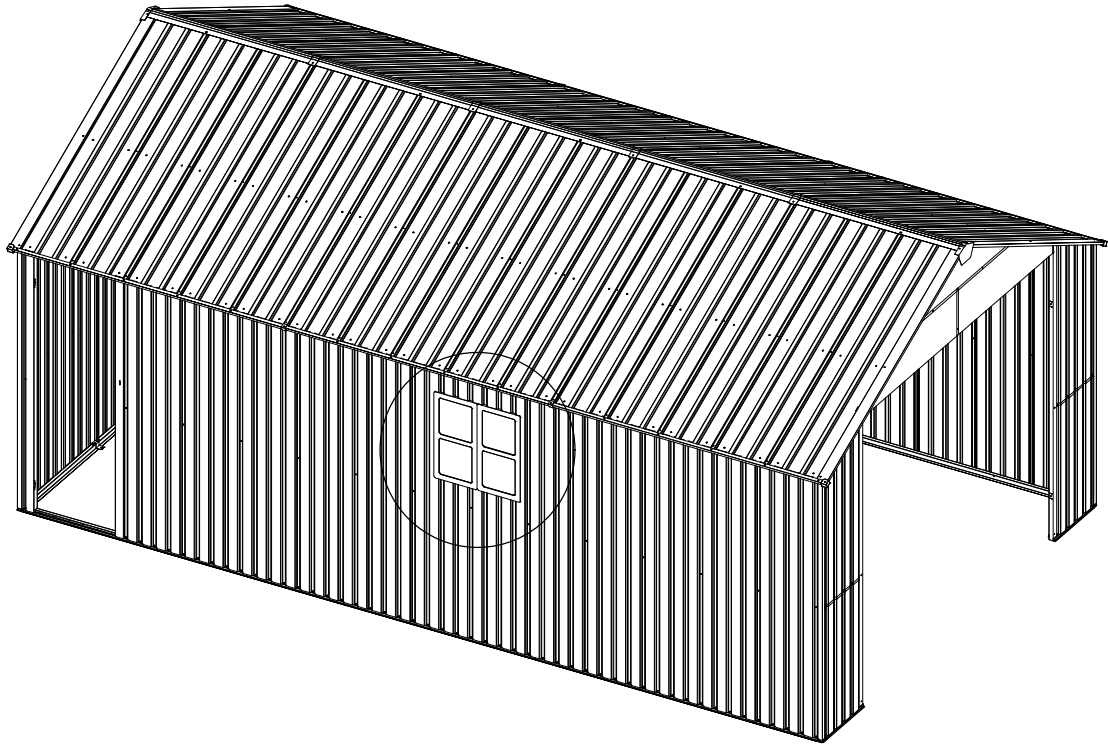
NO.	PART.	Qty.
19		2
Q3		4
Q32		12
Q18		12



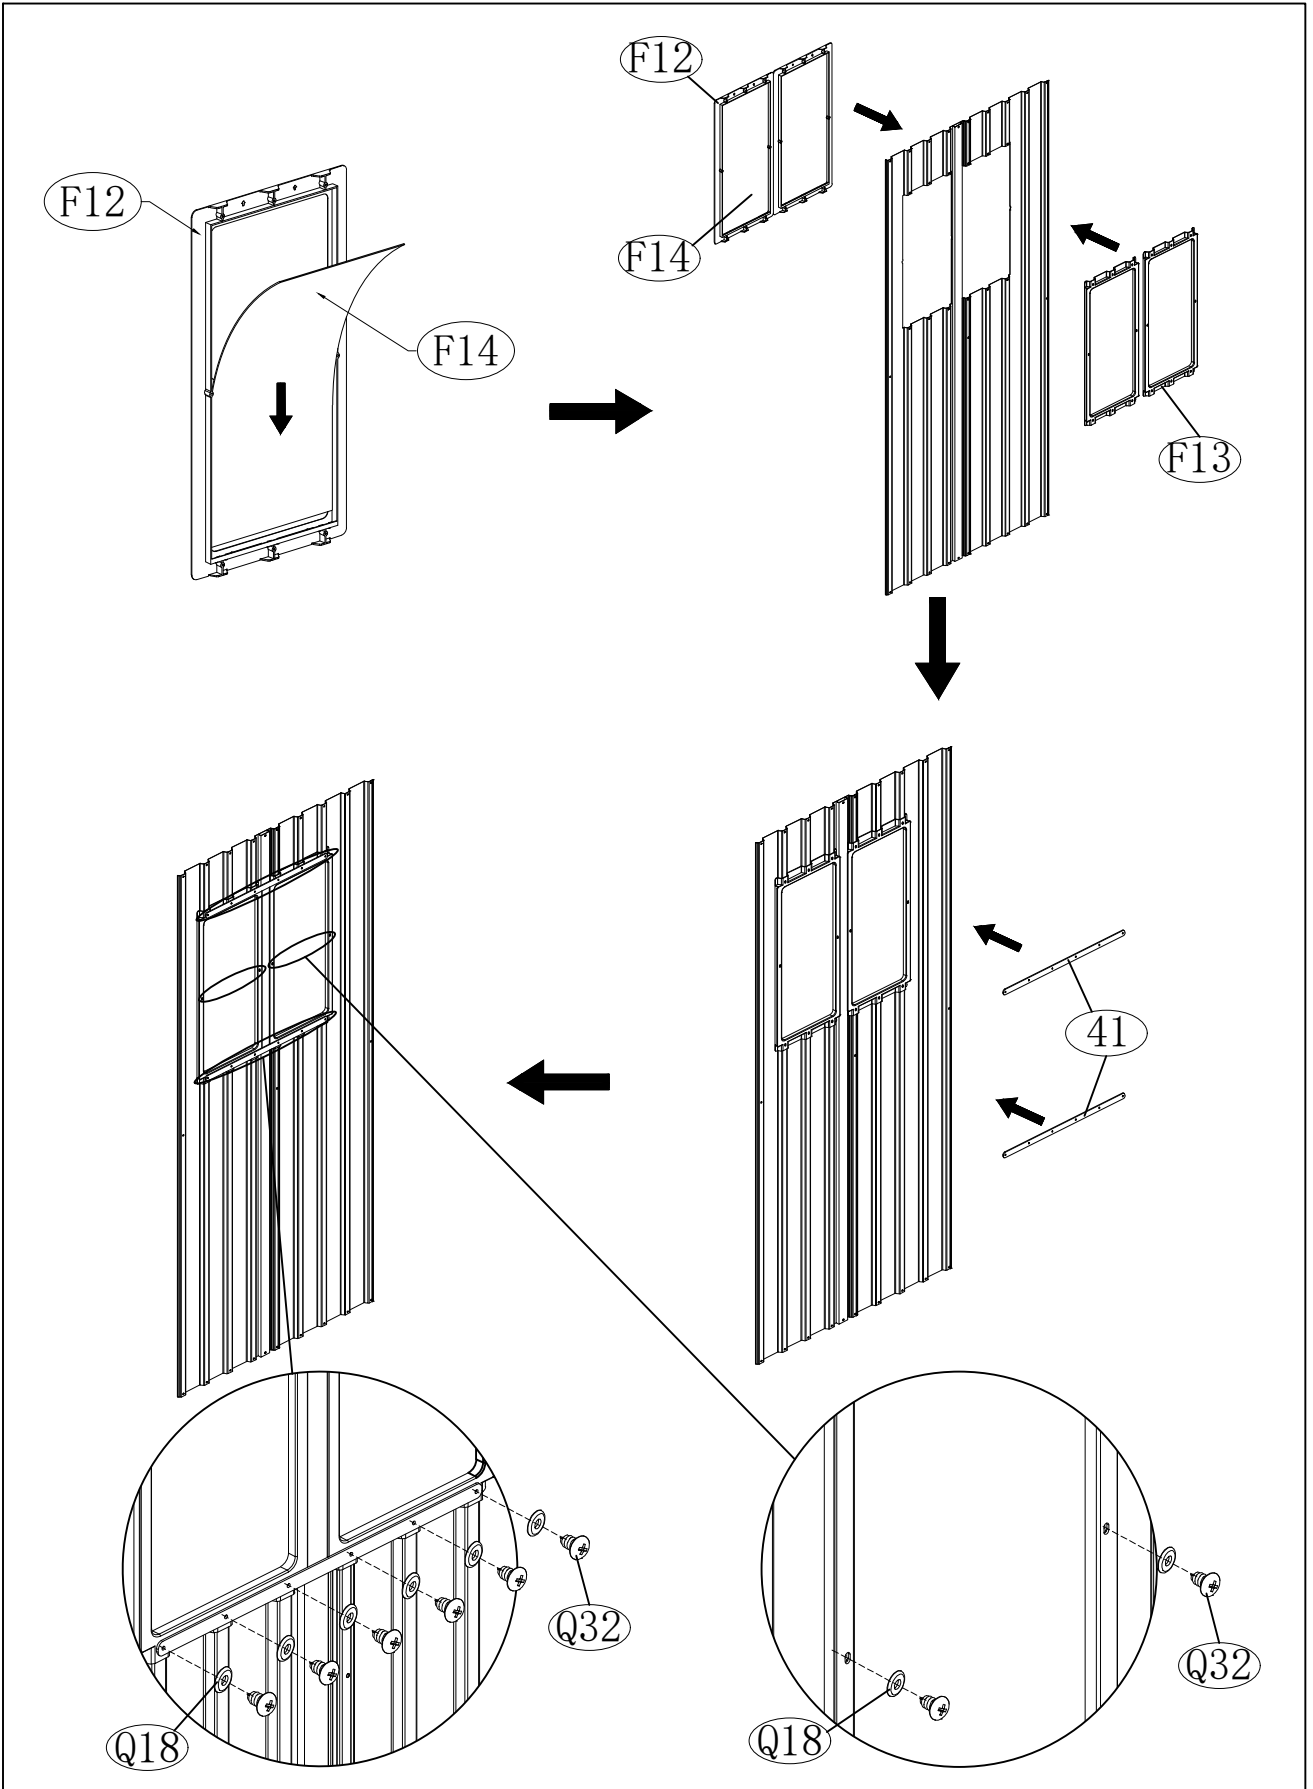
NO.	PART.	Qty.
19L		2
19R		2
Q1		4
Q32		24
Q18		24








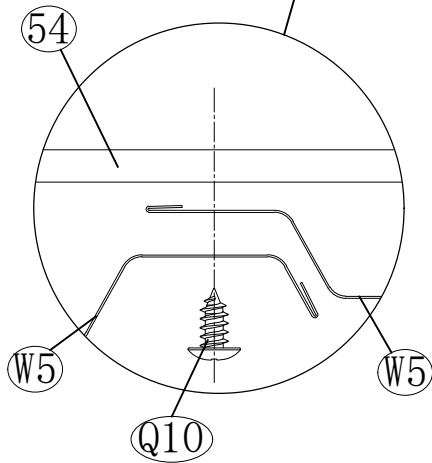
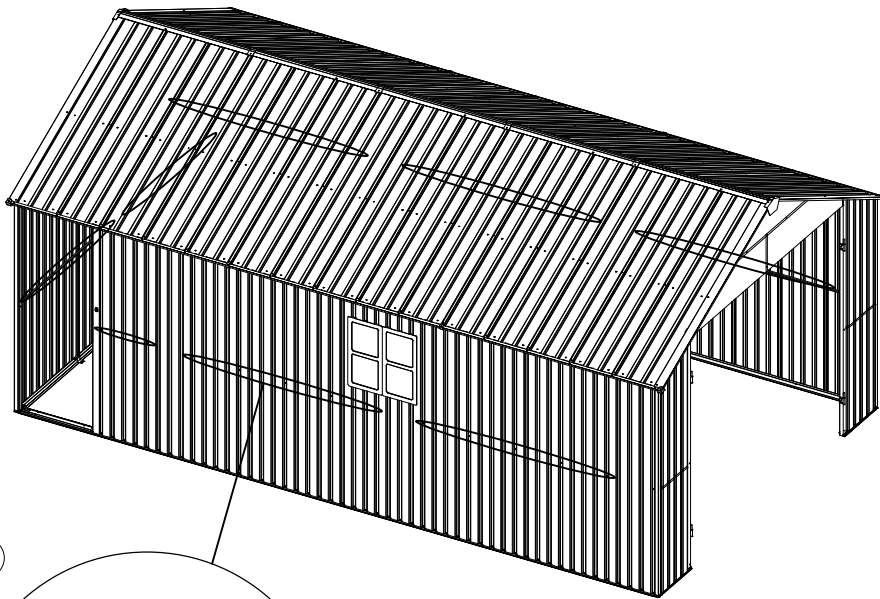
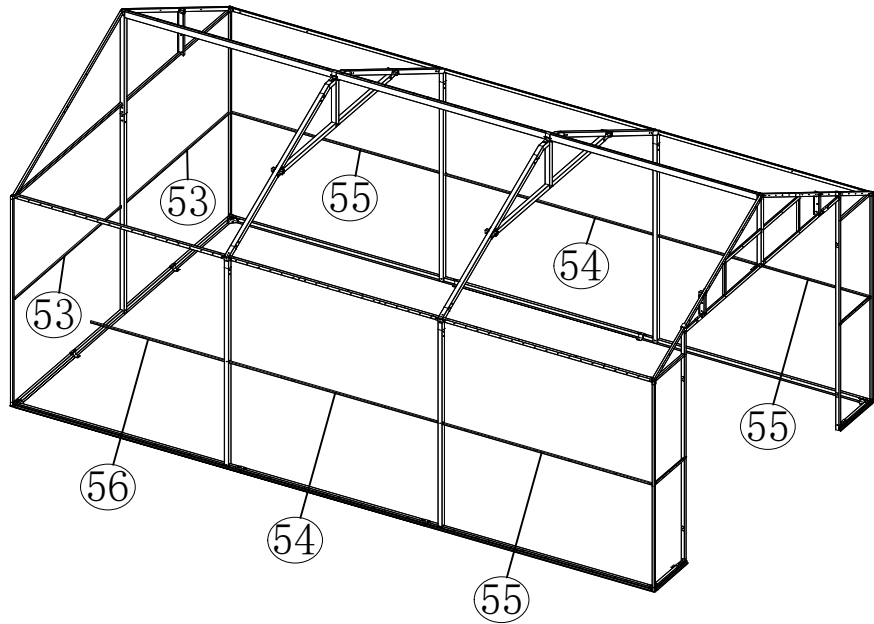
NO.	PART.	Qty.
F12		4
F13		4
F14		4
41		4
Q32		32
Q18		32








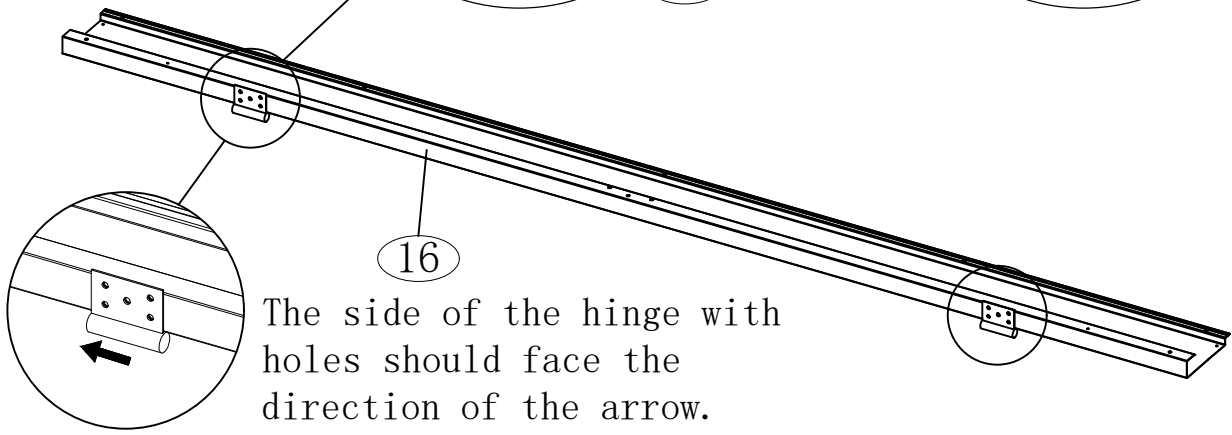
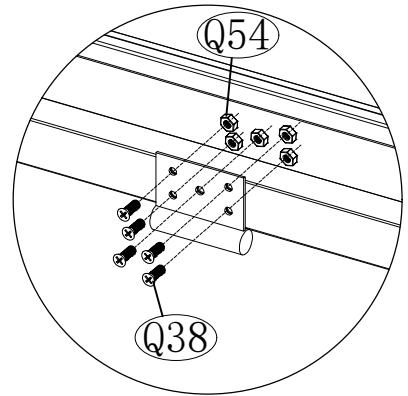
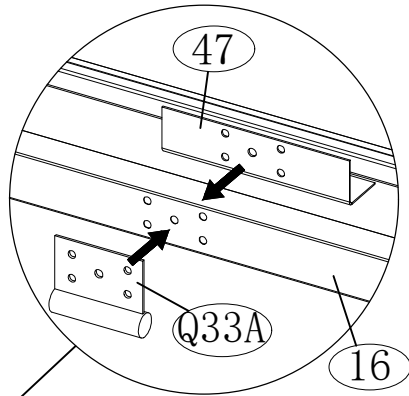
Detailed steps are on the next page.








NO.	PART.	Qty.
53		2
54		2
55		3
56		1
Q10		38

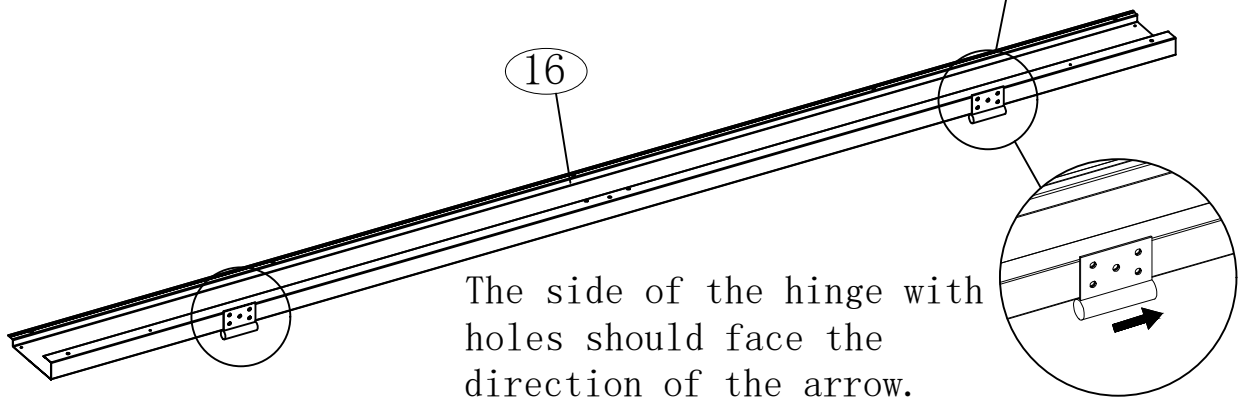
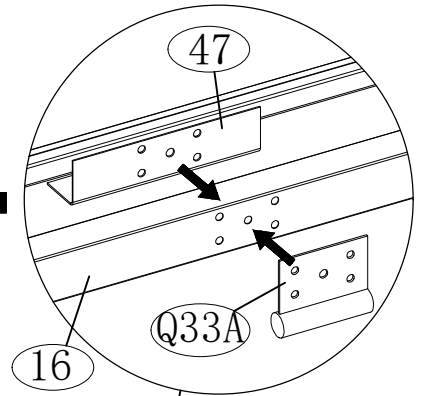
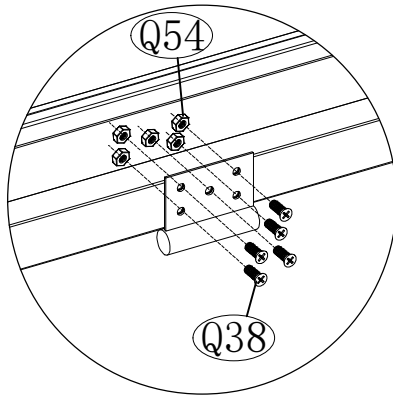


NO.	PART.	Qty.
16		1
47		2
Q33A		2
Q38		10
Q54		10





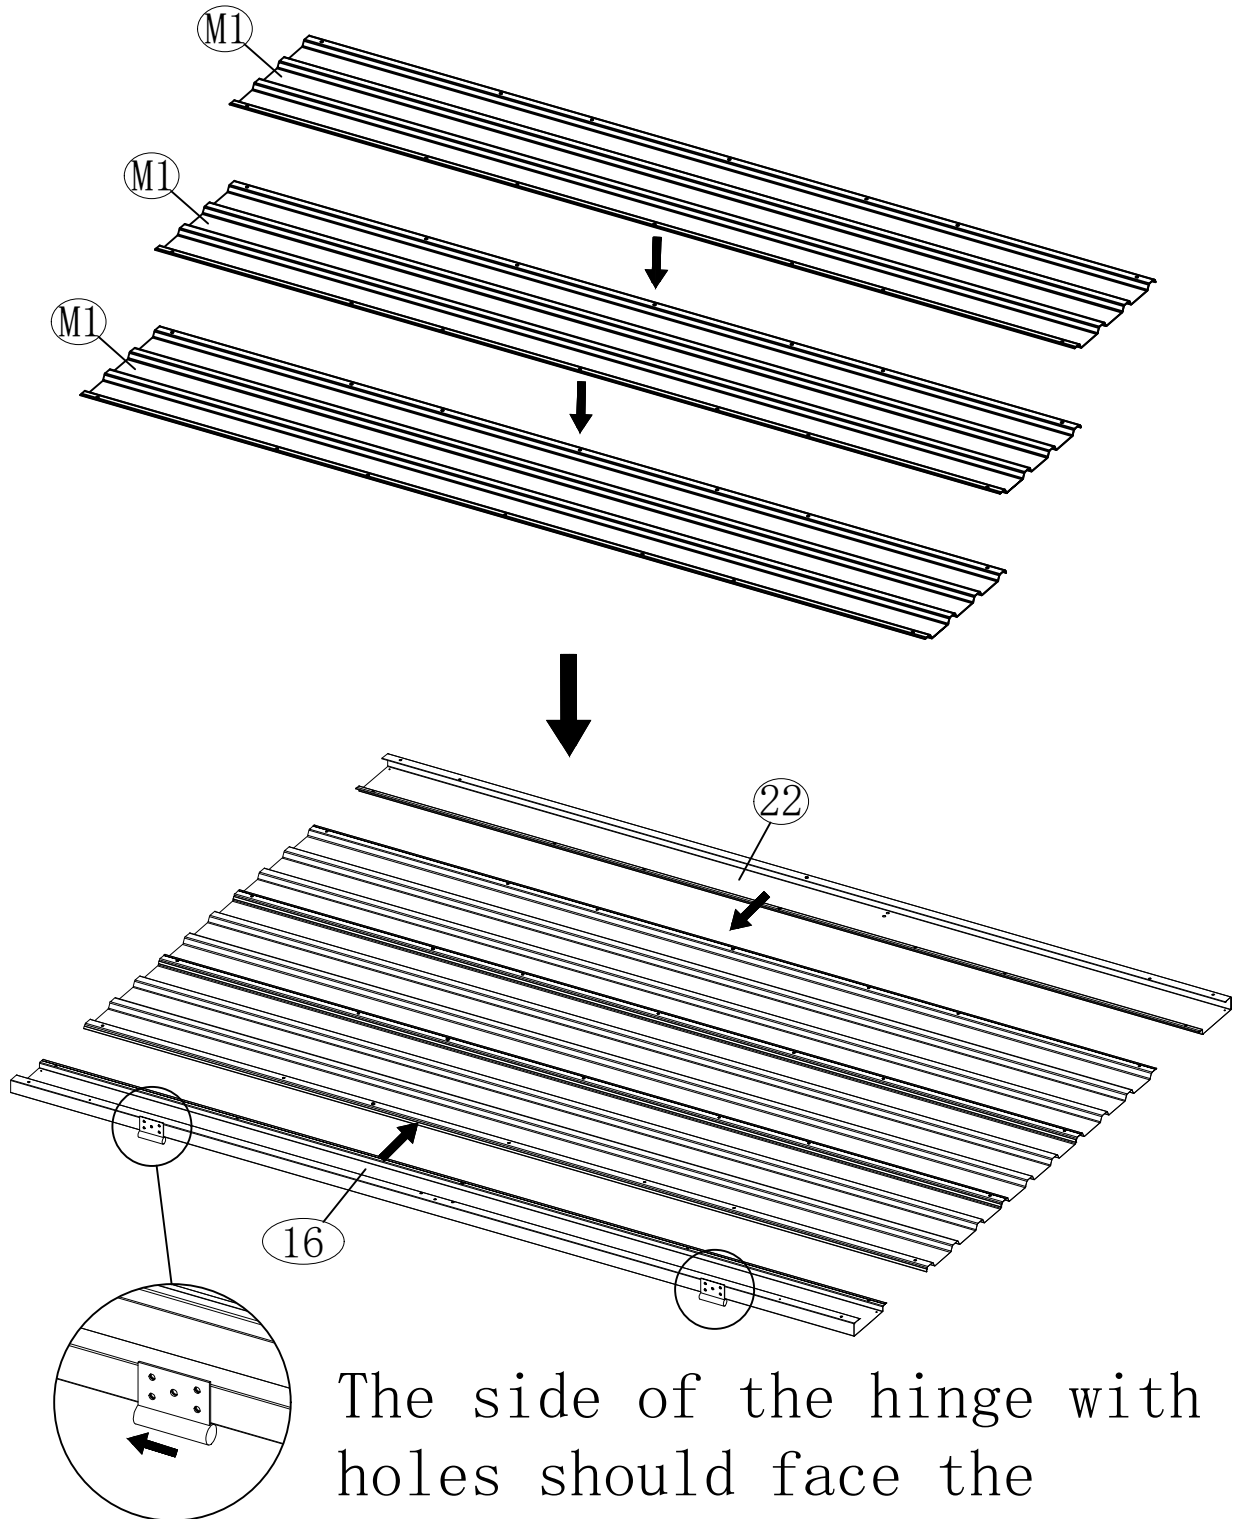
The side of the hinge with holes should face the direction of the arrow.

NO.	PART.	Qty.
16		1
47		2
Q33A		2
Q38		10
Q54		10





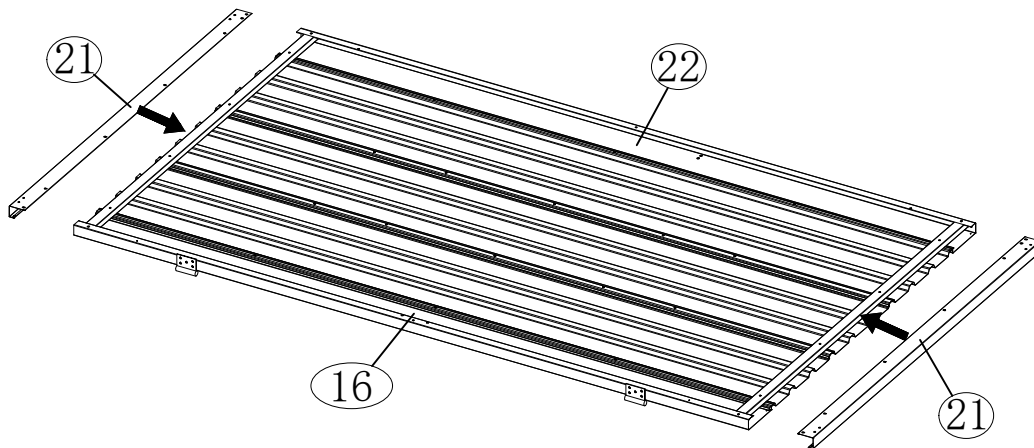
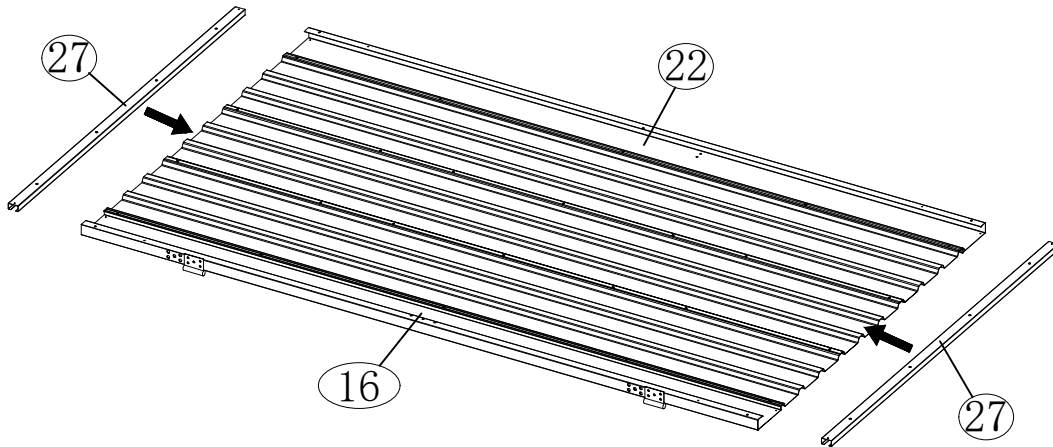
The side of the hinge with holes should face the direction of the arrow.




NO.	PART.	Qty.
22		1
M1		3



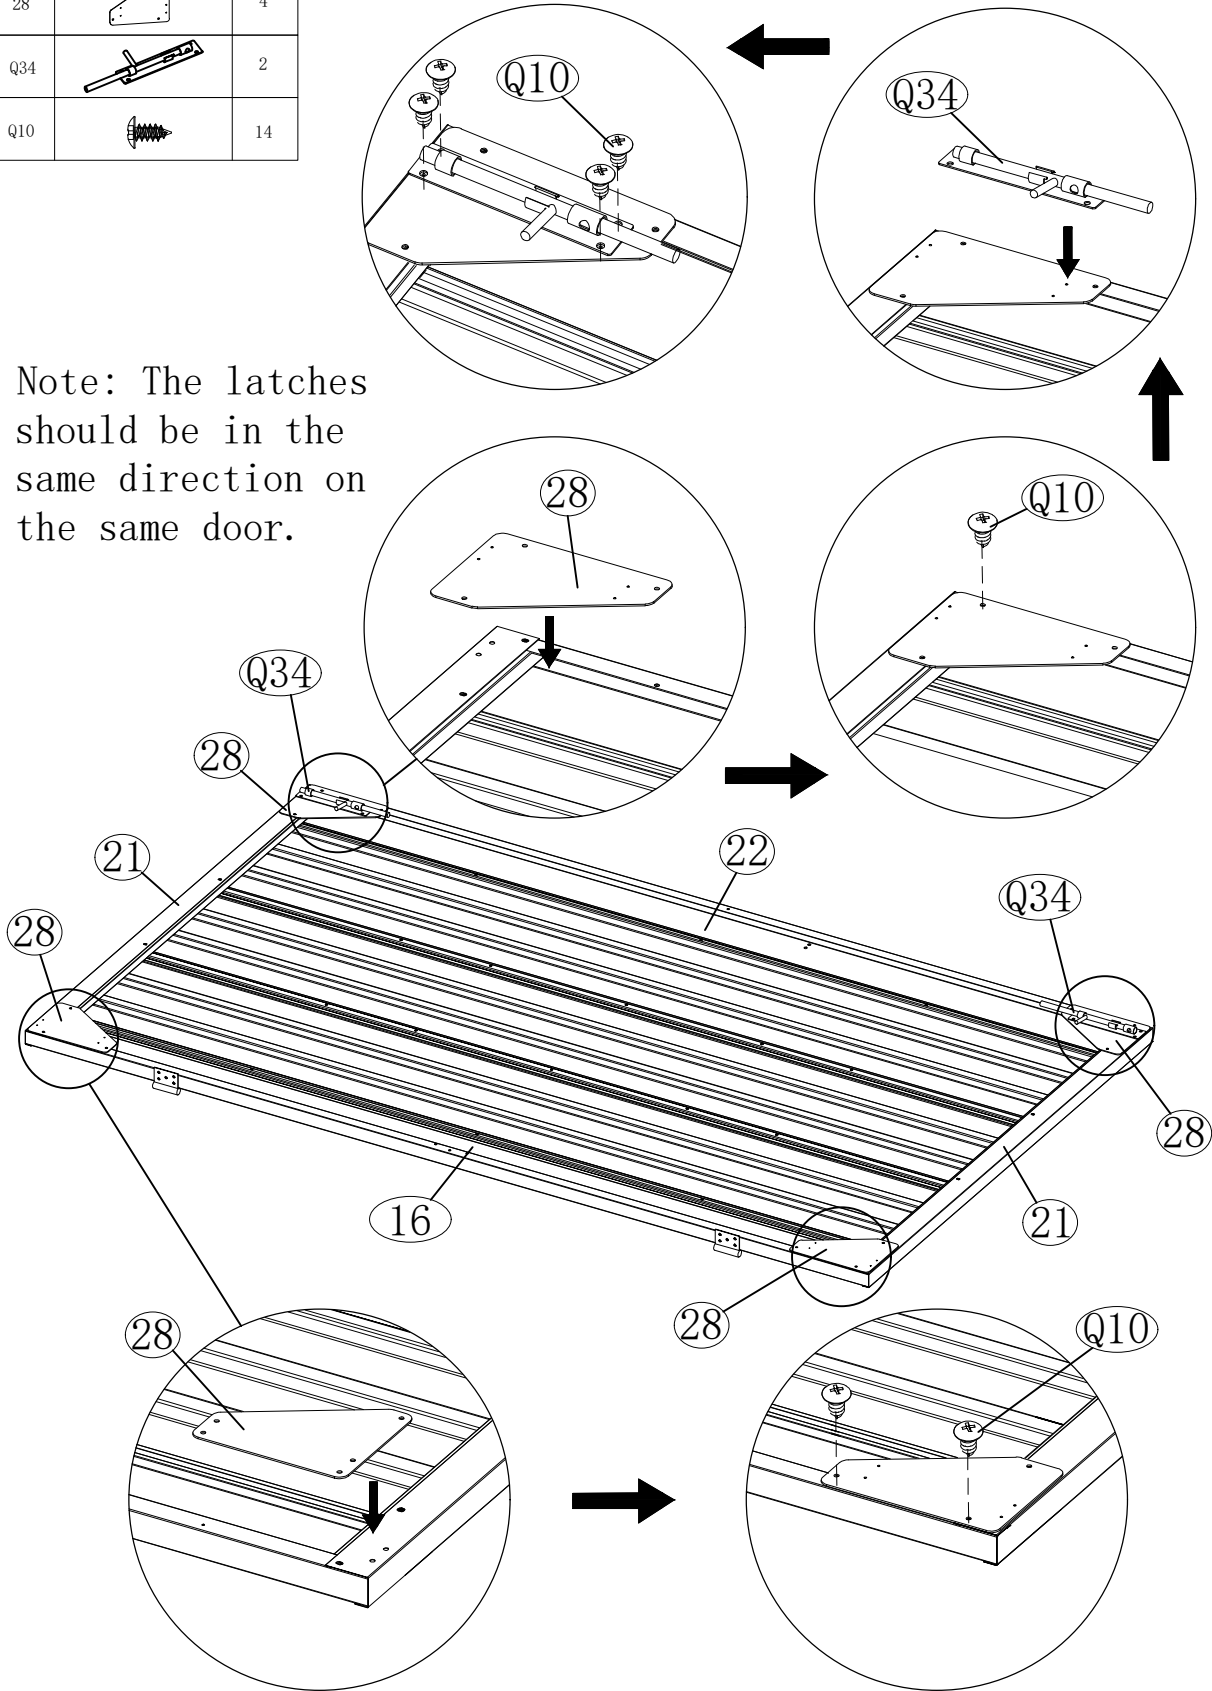
The side of the hinge with holes should face the direction of the arrow.



NO.	PART.	Qty.
21		2
27		2

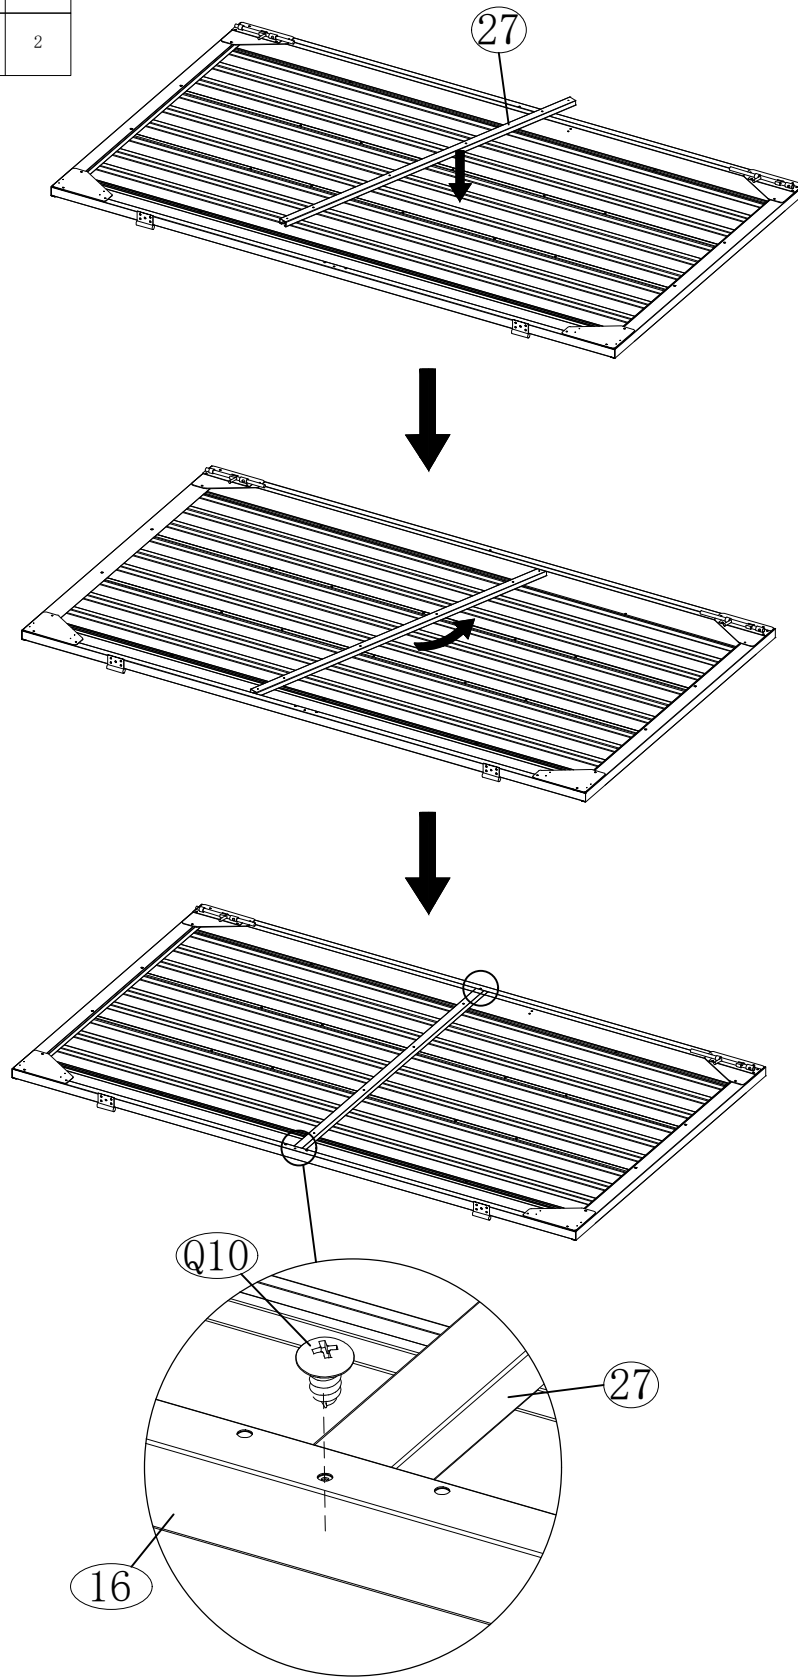




NO.	PART.	Qty.
28		4
Q34		2
Q10		14

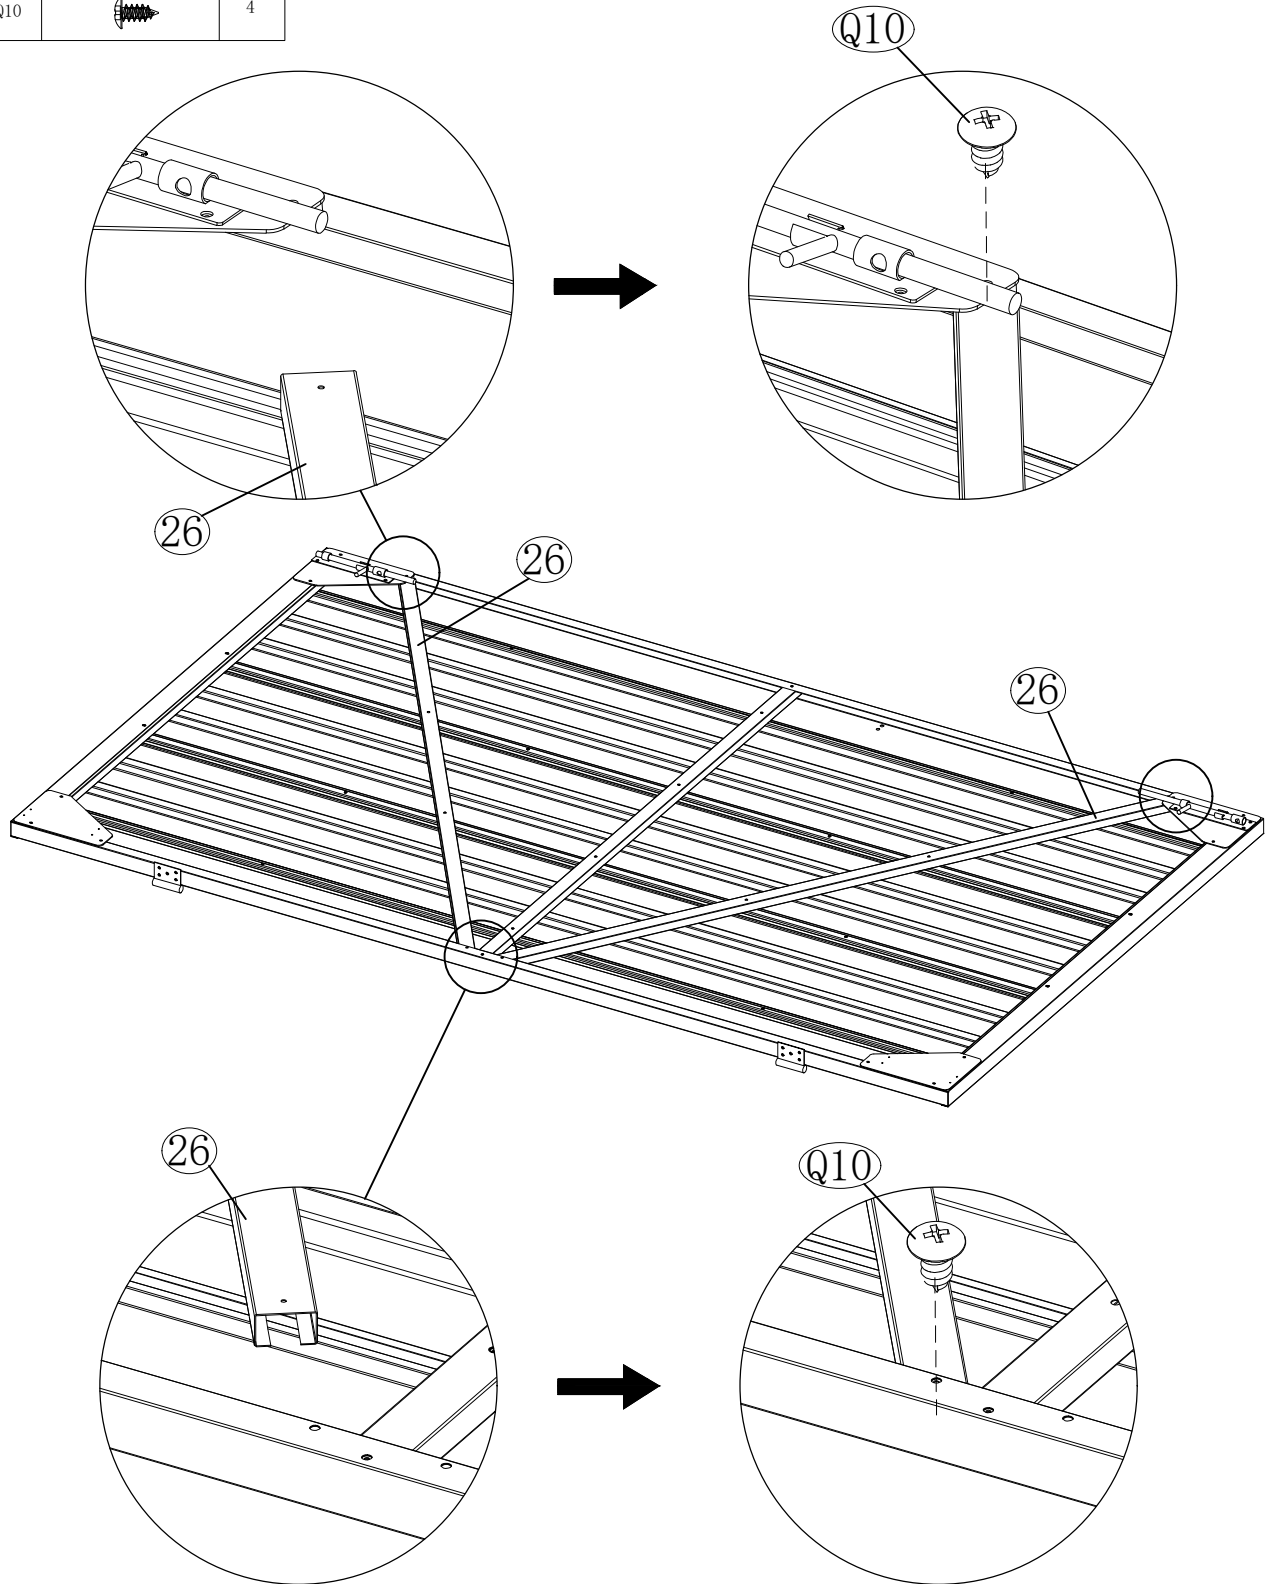
Note: The latches should be in the same direction on the same door.






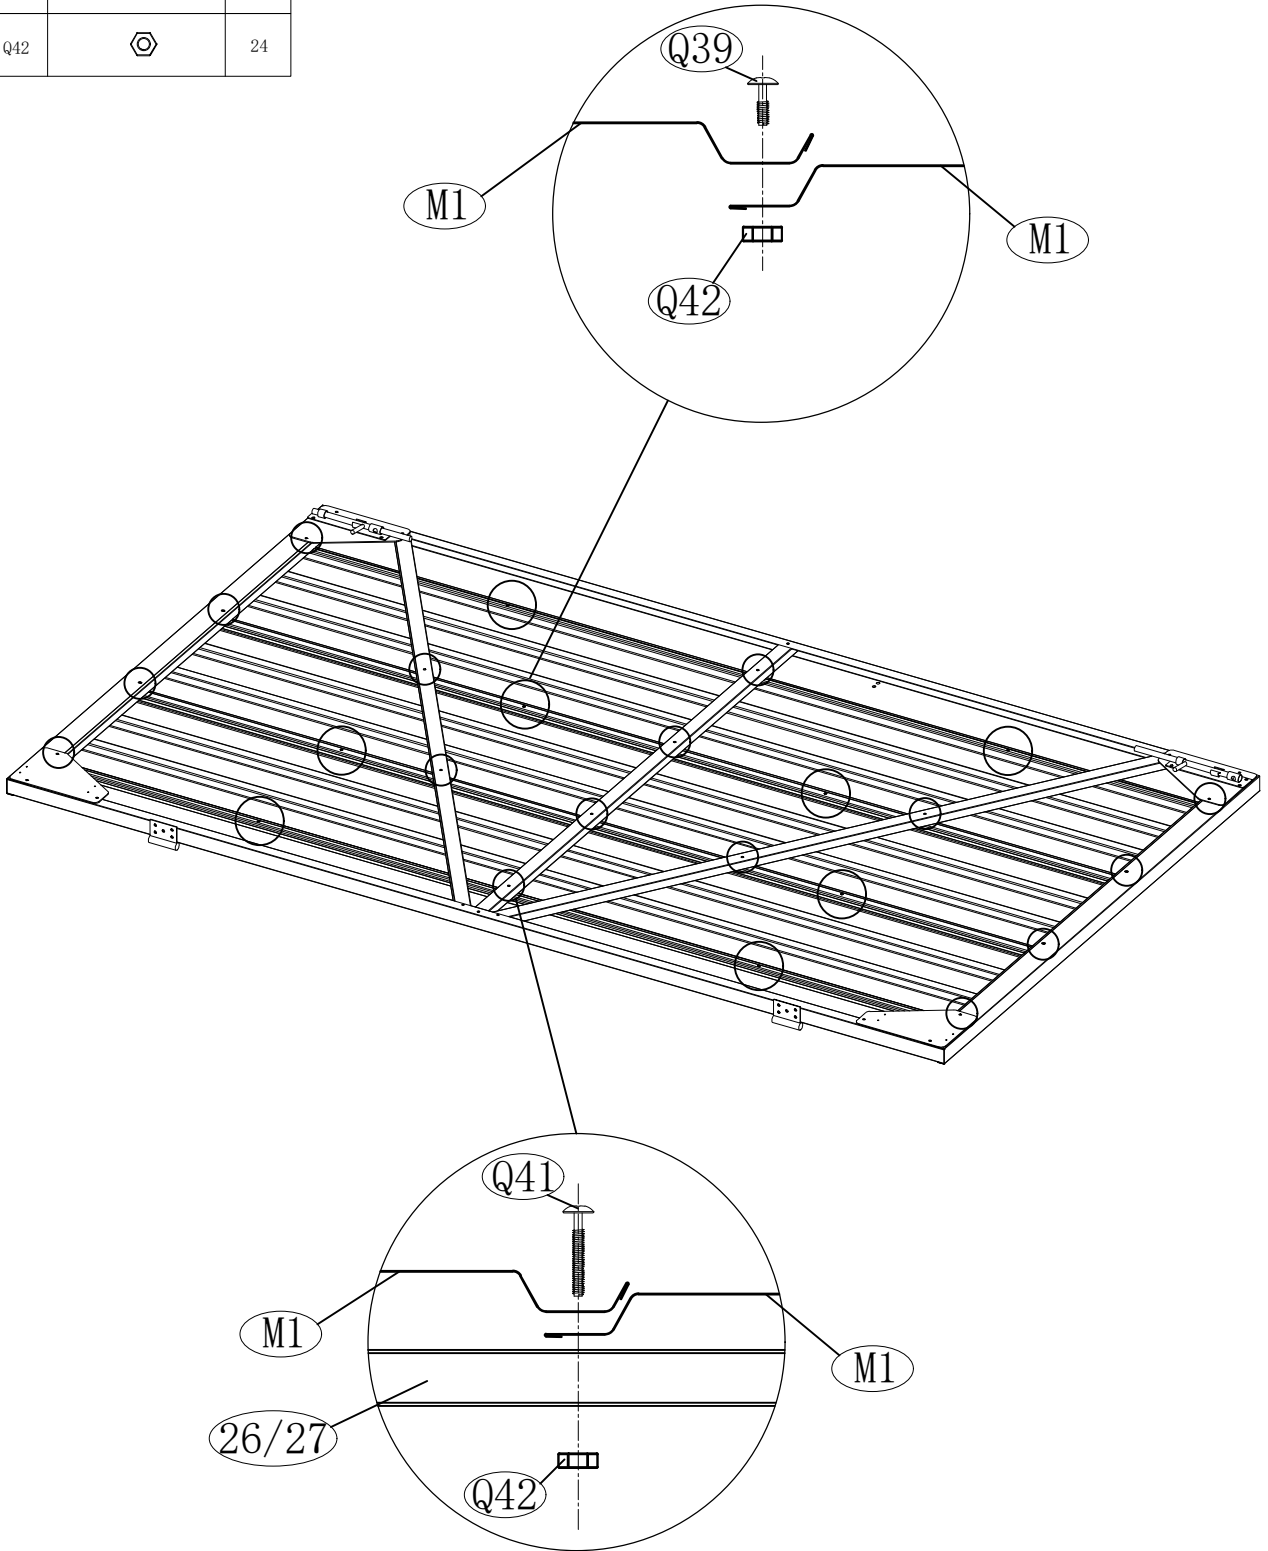
NO.	PART.	Qty.
27		1
Q10		2







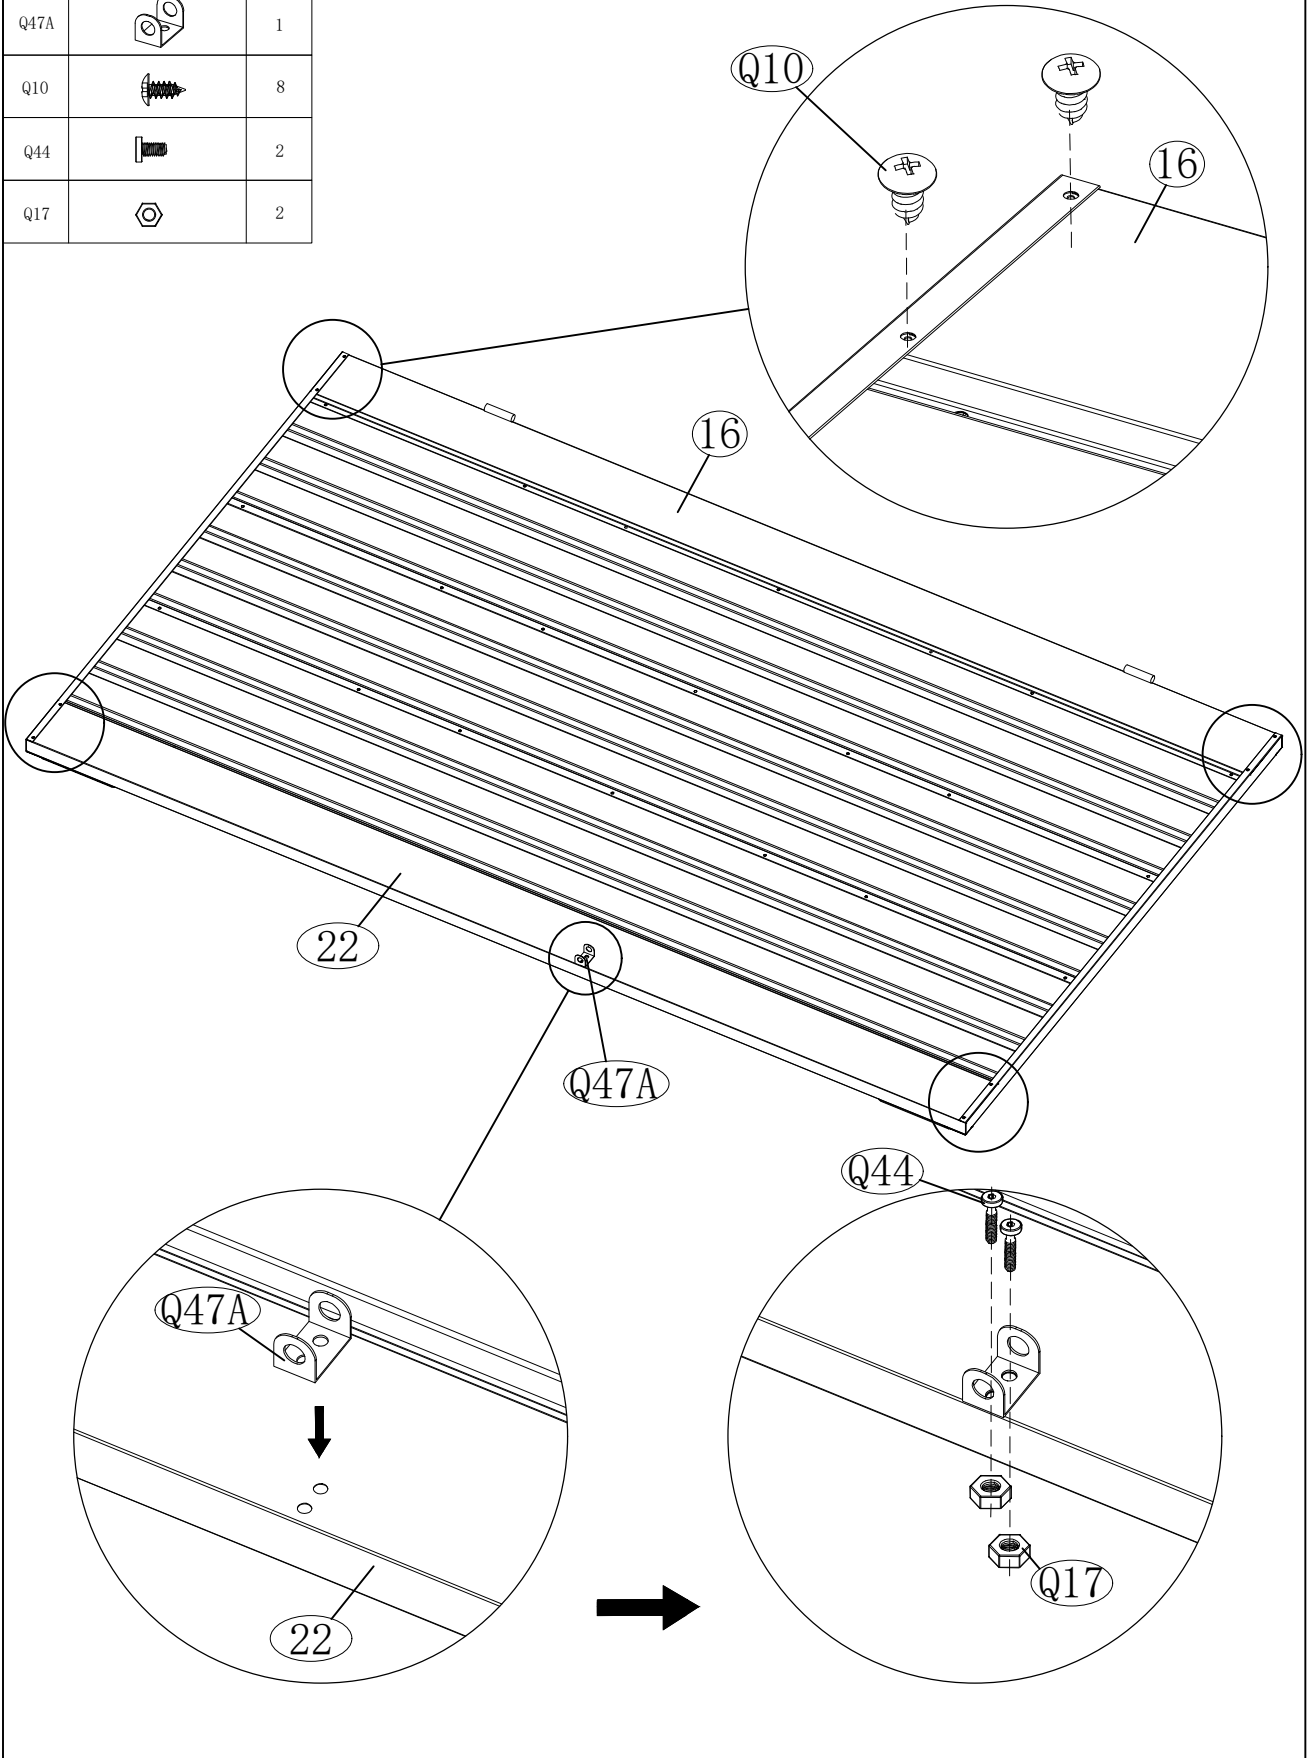
NO.	PART.	Qty.
26		2
Q10		4





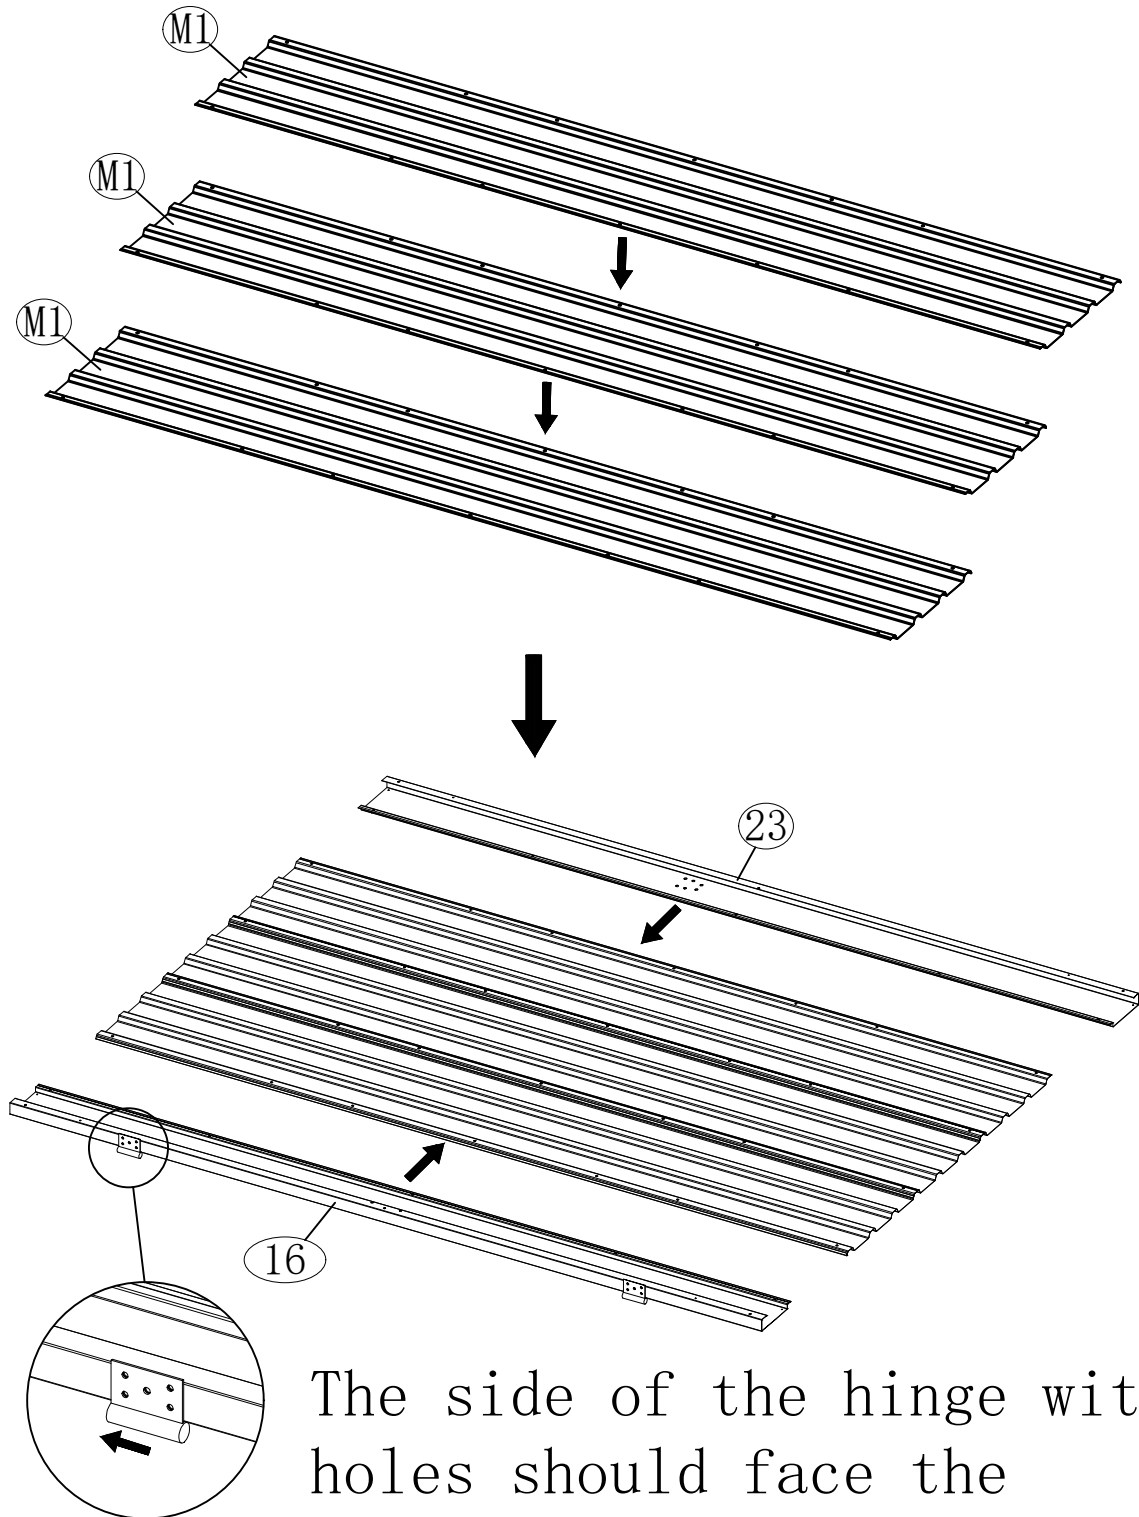
NO.	PART.	Qty.
Q39		8
Q41		16
Q42		24





NO.	PART.	Qty.
Q47A		1
Q10		8
Q44		2
Q17		2

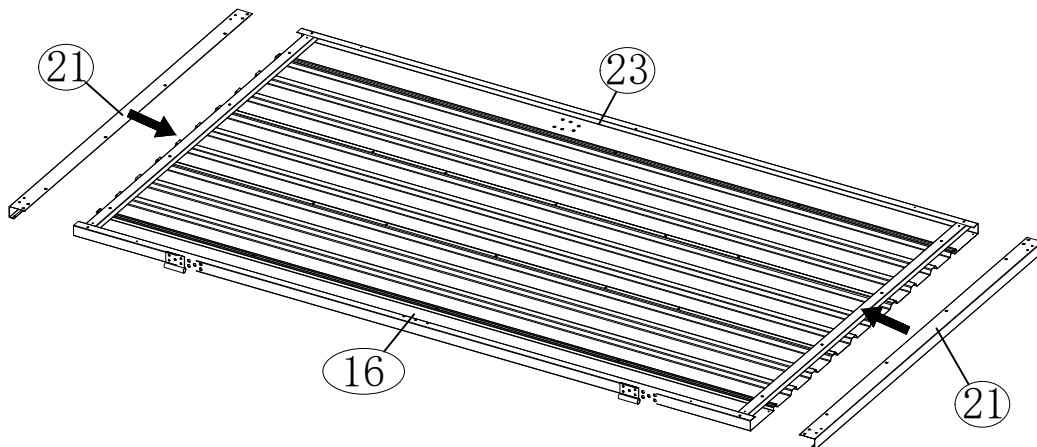
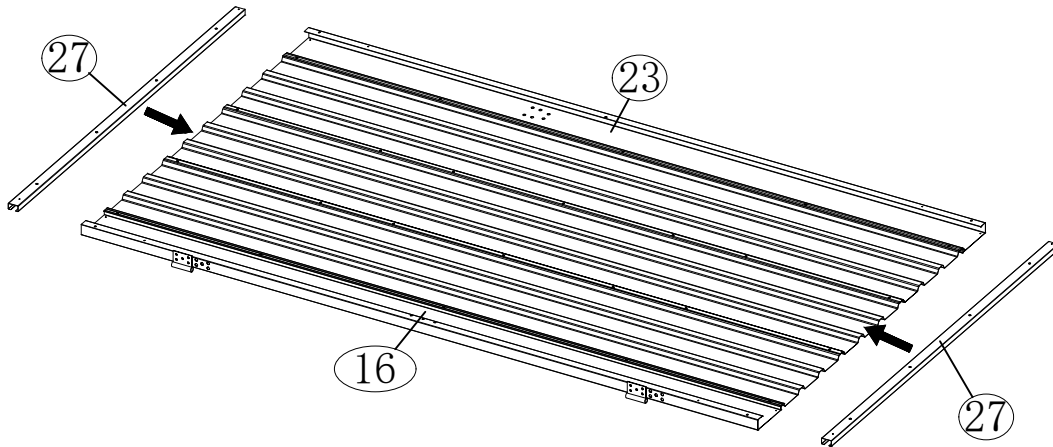





NO.	PART.	Qty.
23		1
M1		3



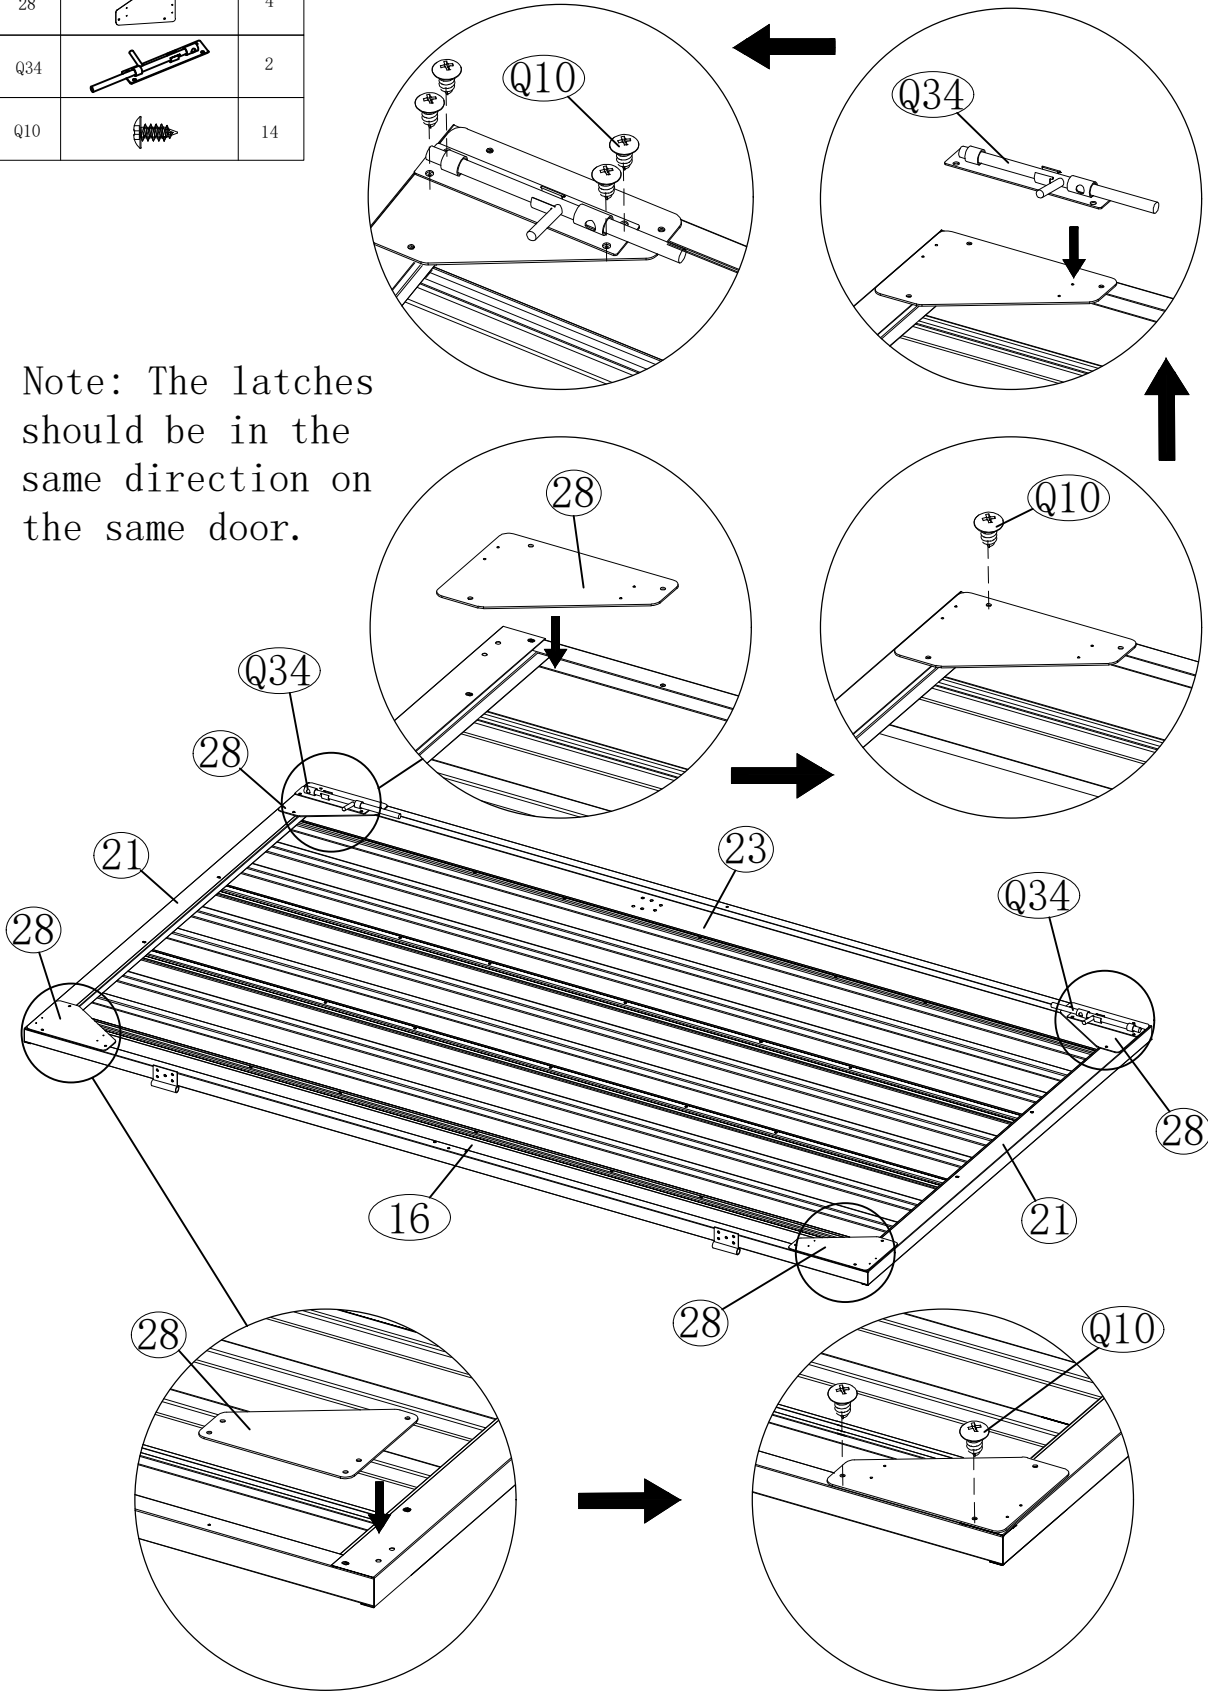
The side of the hinge with holes should face the direction of the arrow.



NO.	PART.	Qty.
21		2
27		2

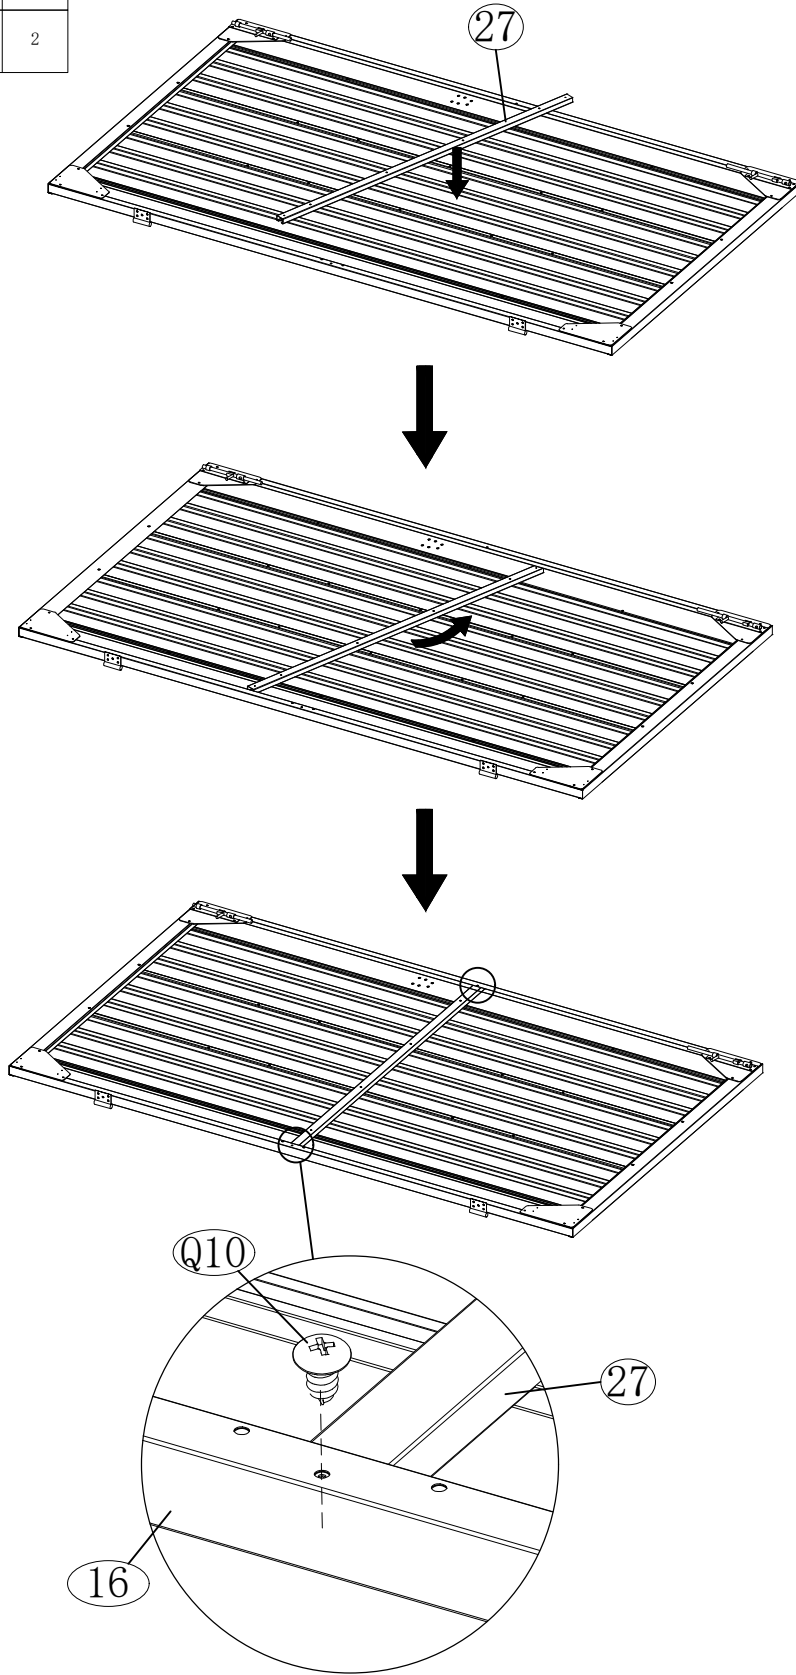




NO.	PART.	Qty.
28		4
Q34		2
Q10		14

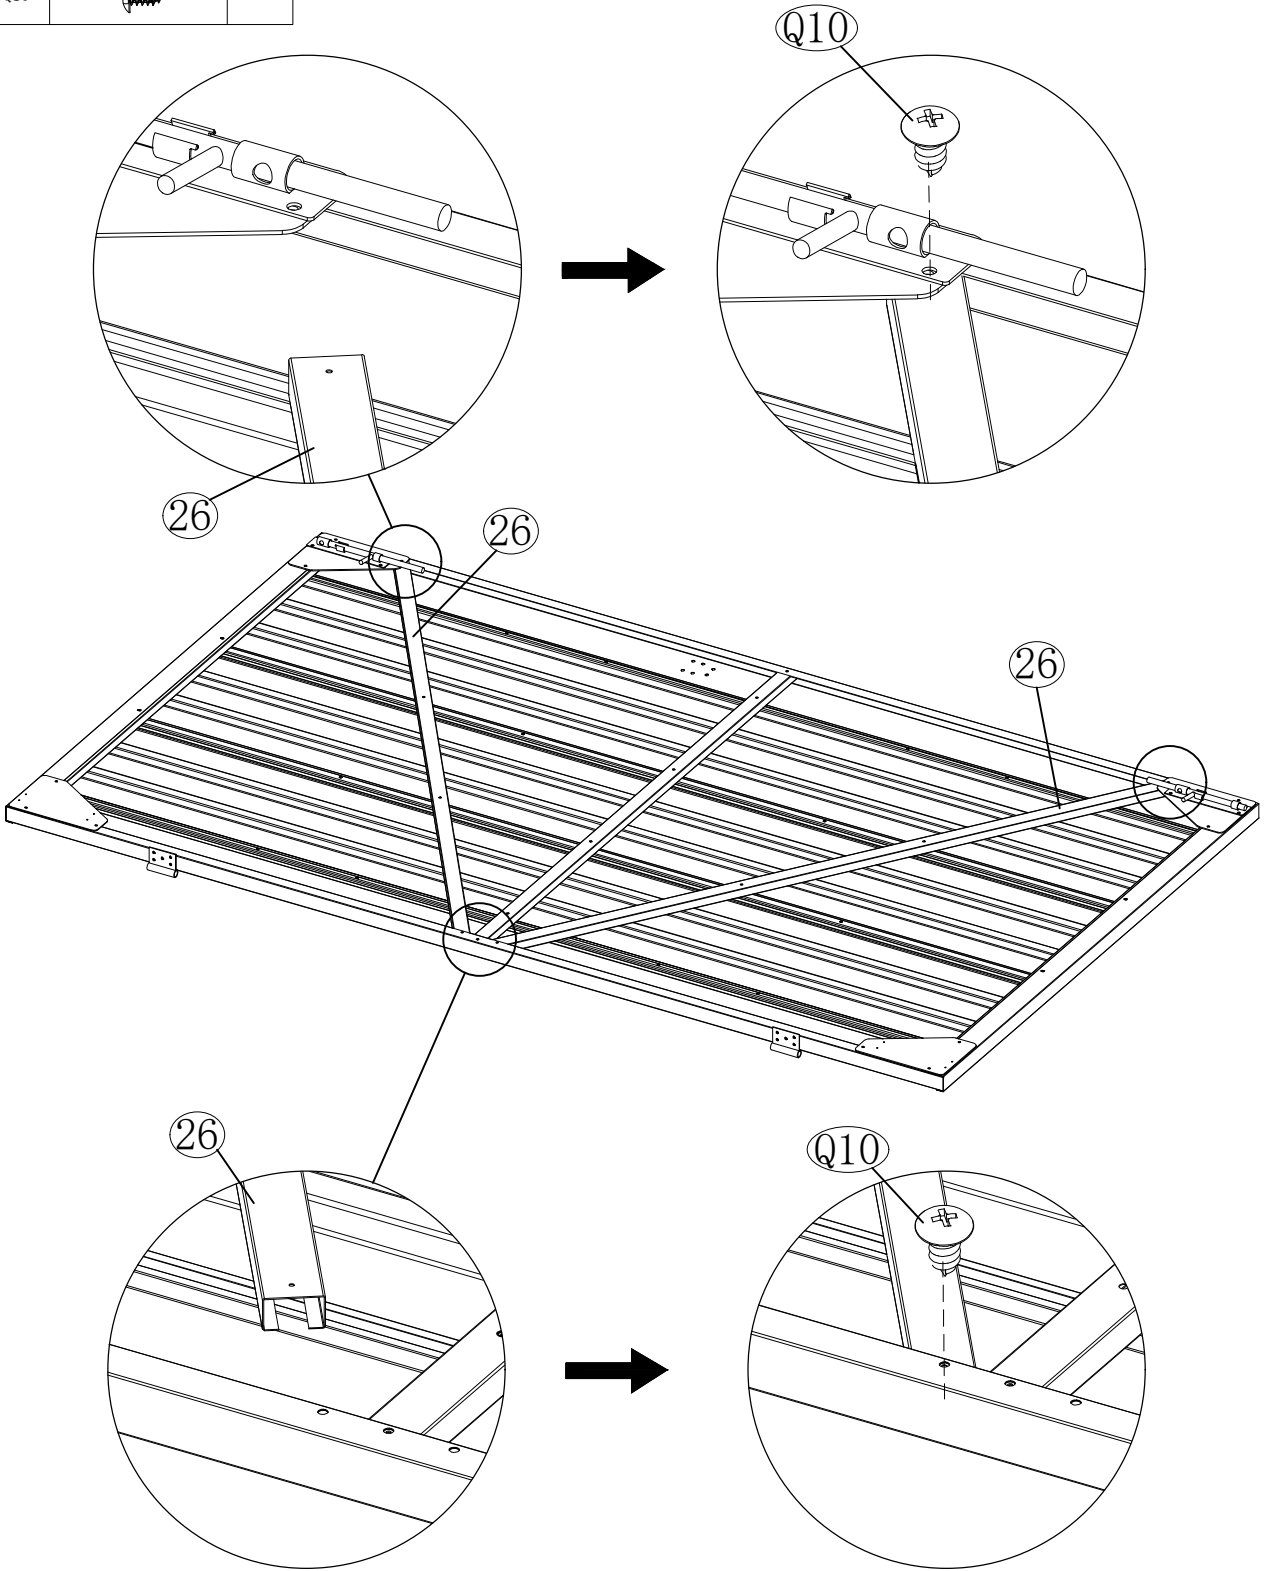
Note: The latches should be in the same direction on the same door.






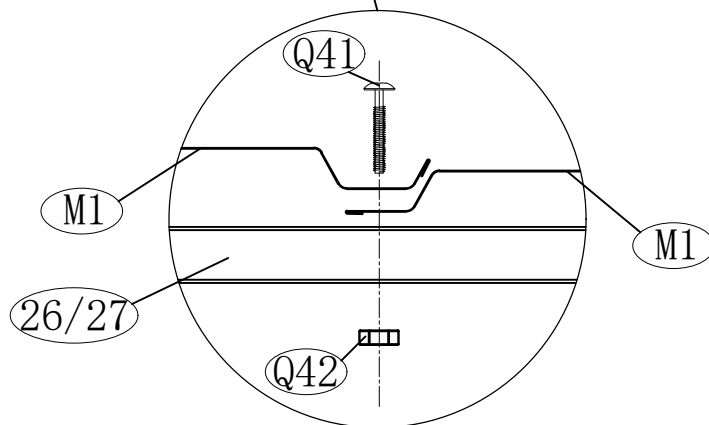
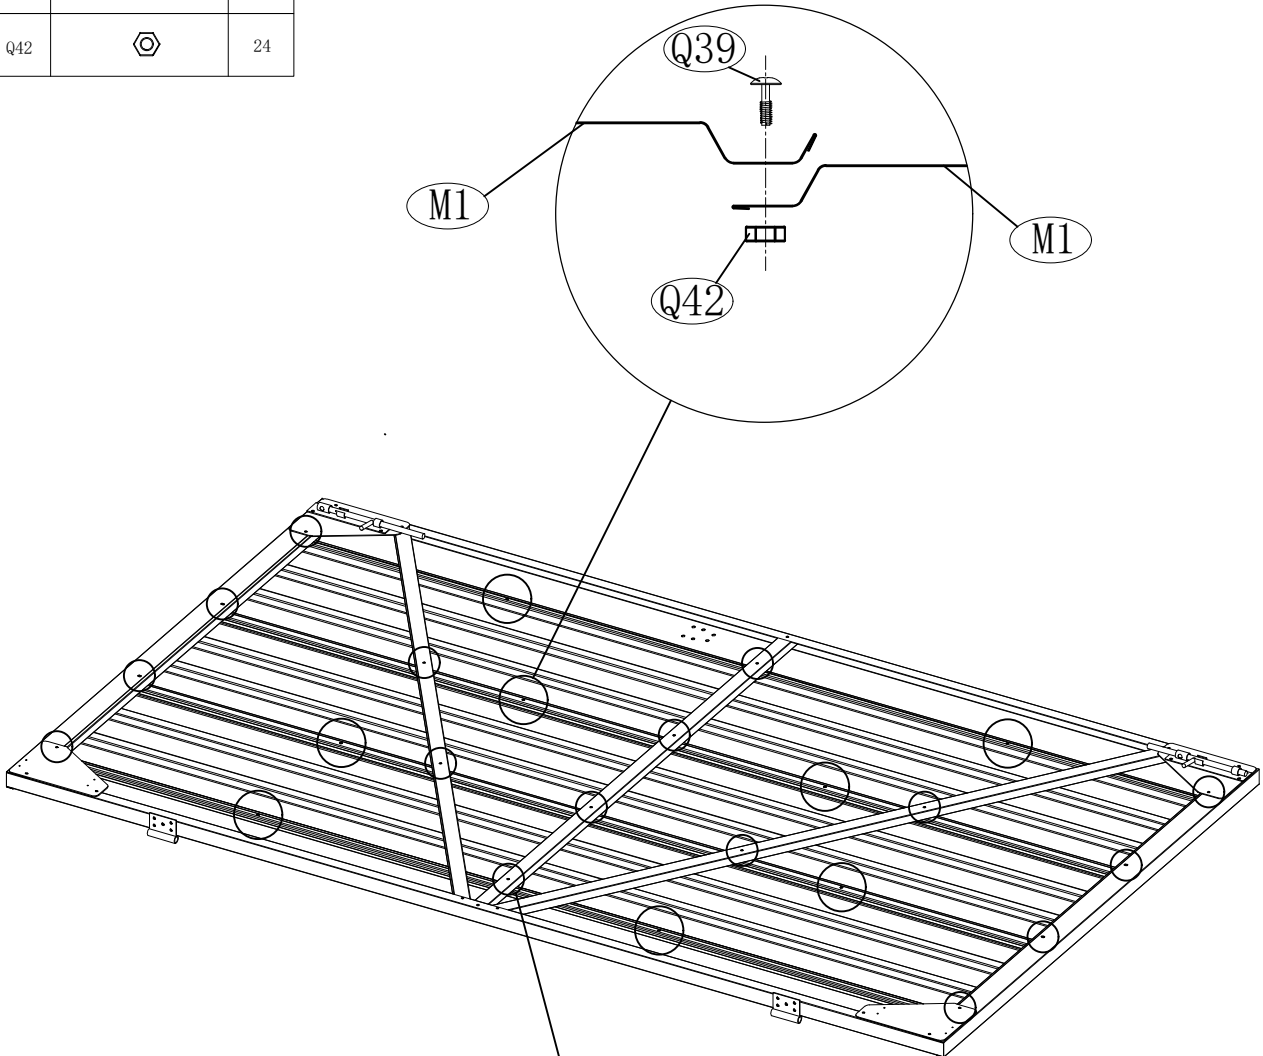
NO.	PART.	Qty.
27		1
Q10		2







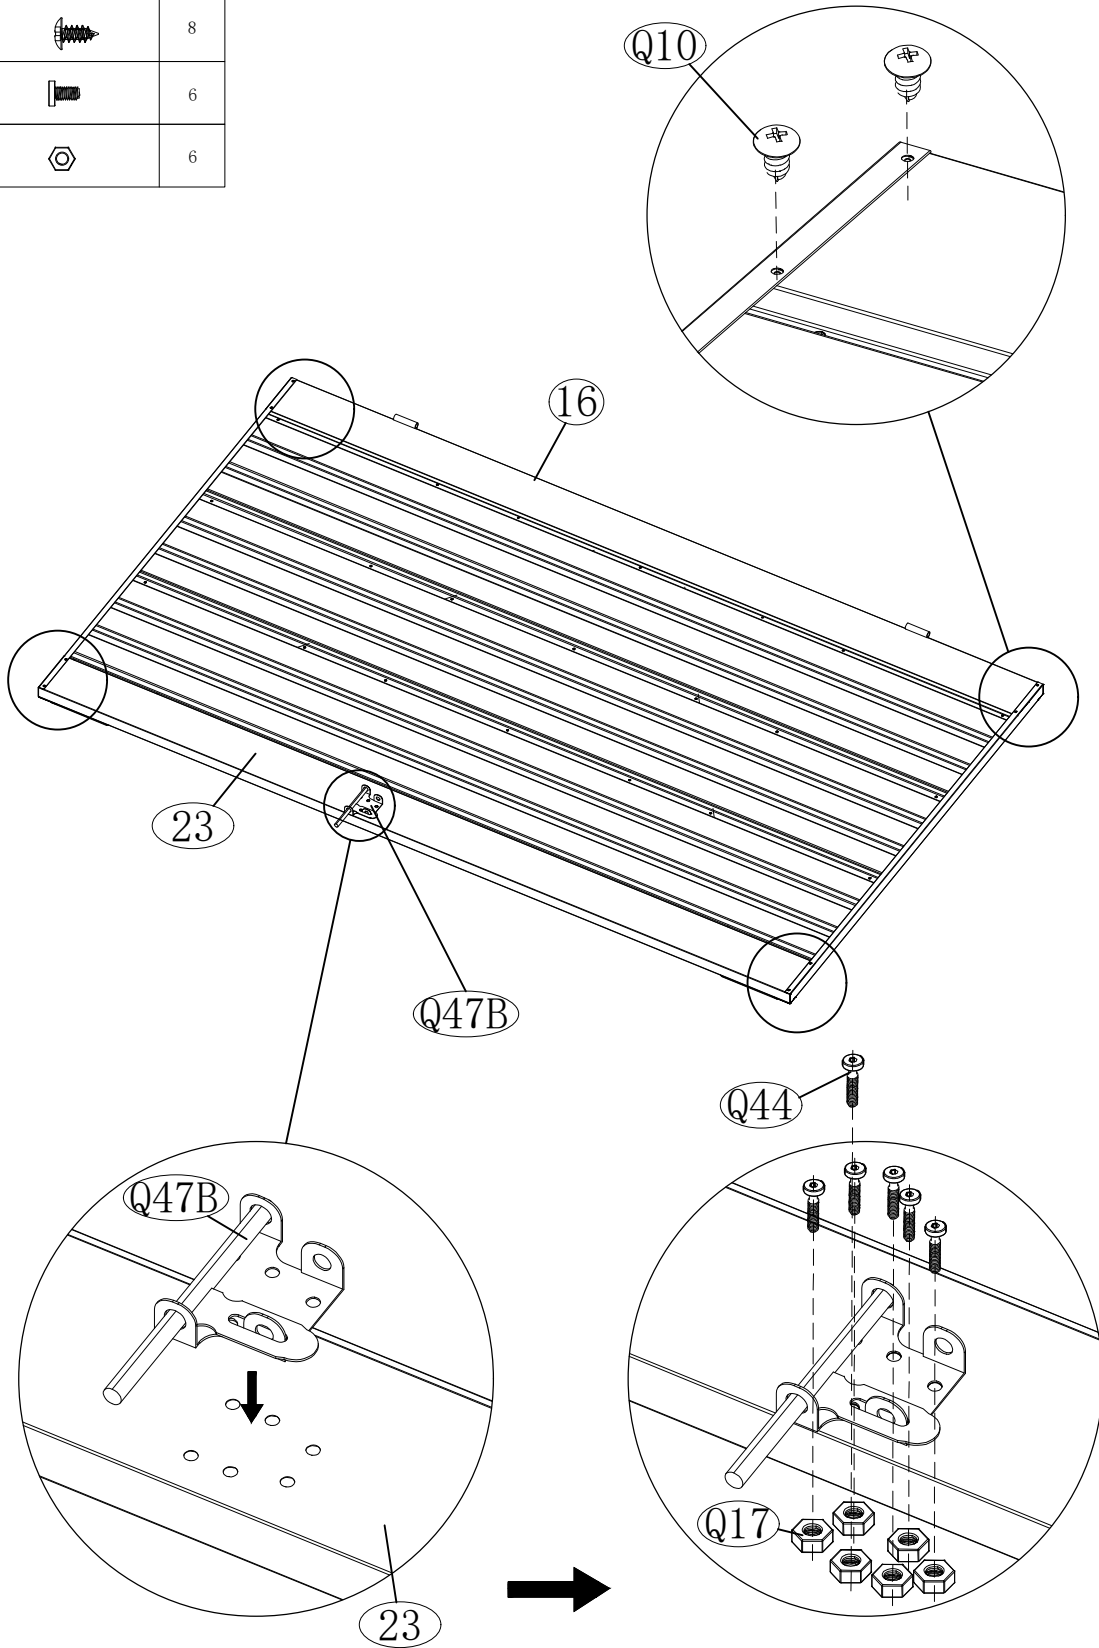
NO.	PART.	Qty.
26		2
Q10		4








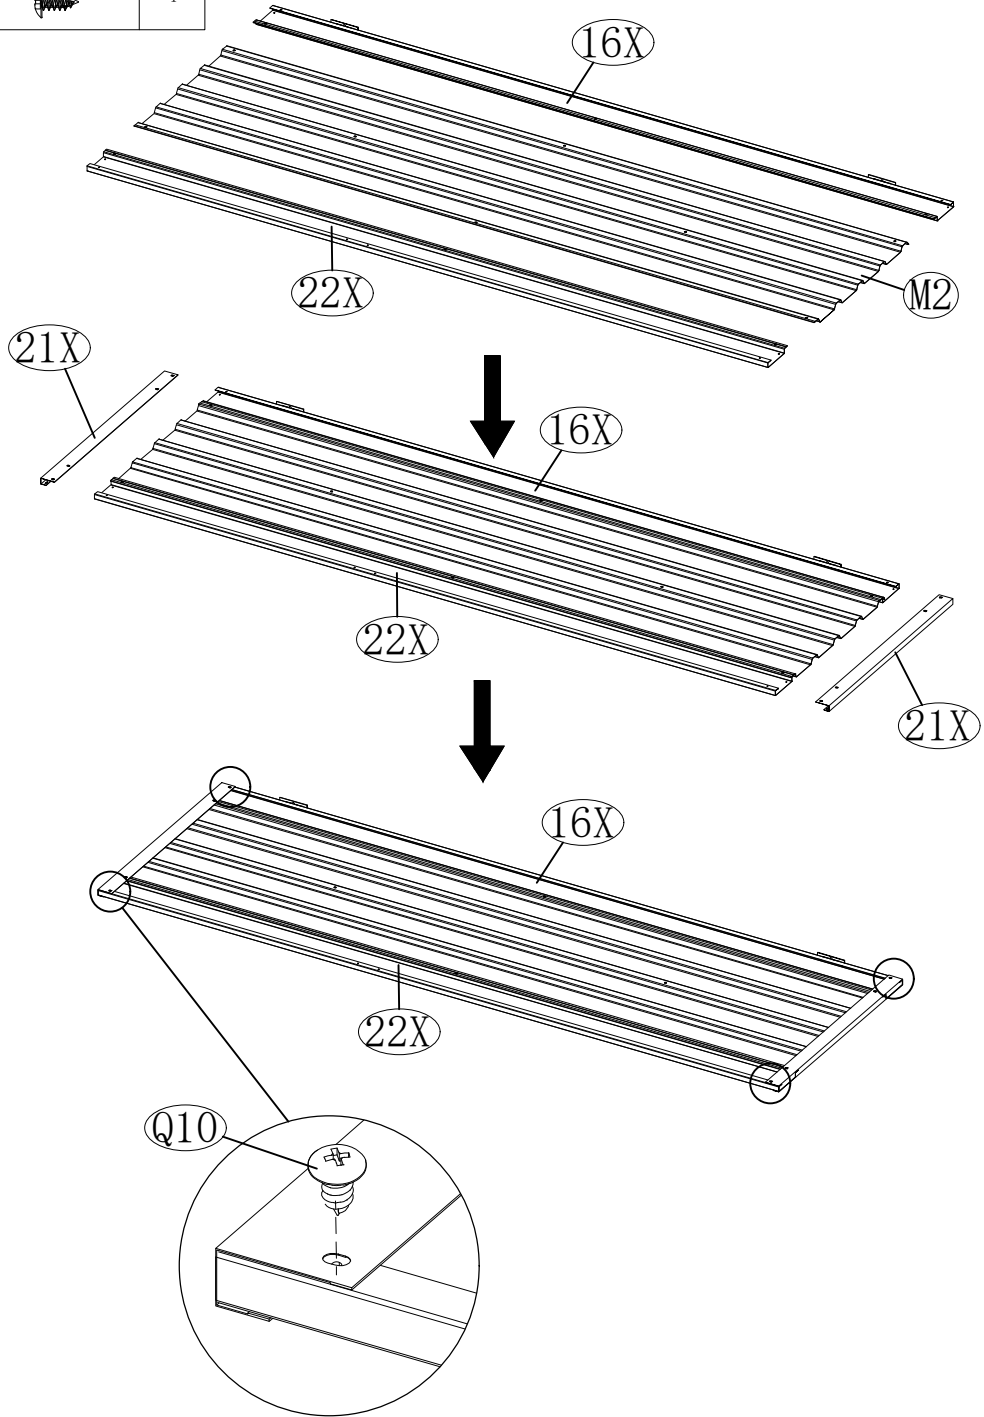
NO.	PART.	Qty.
Q39		8
Q41		16
Q42		24








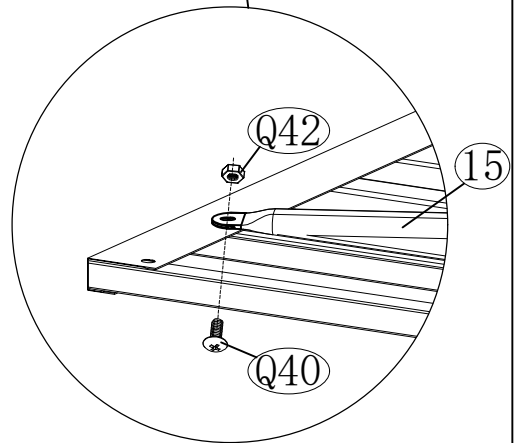
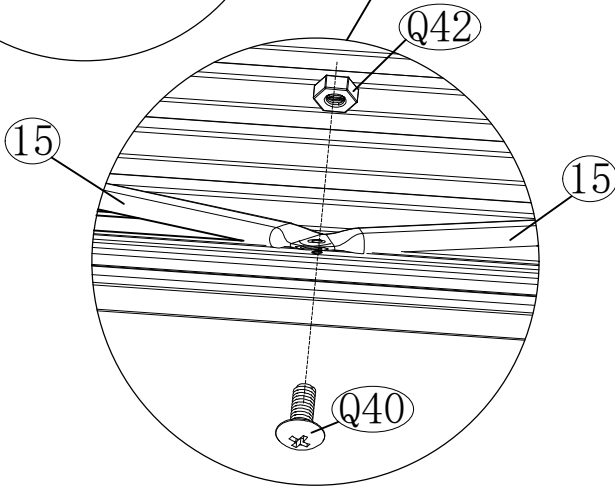
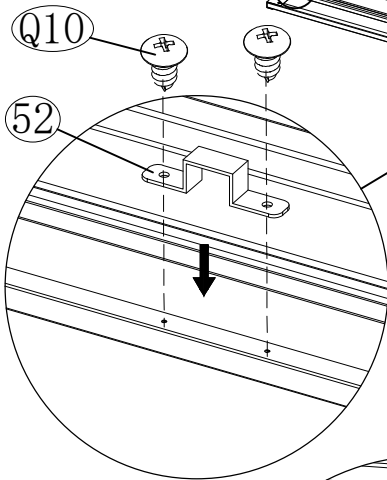
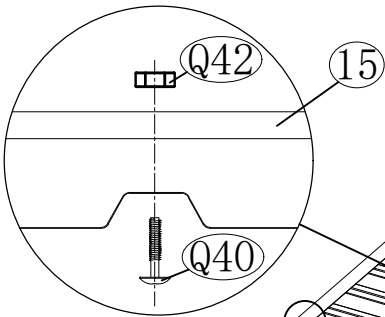
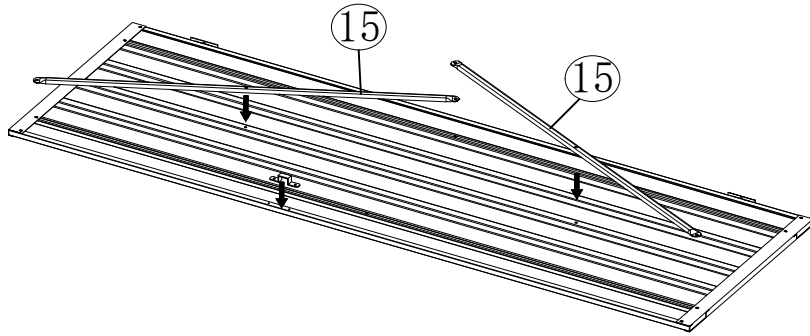
NO.	PART.	Qty.
Q47B		1
Q10		8
Q44		6
Q17		6







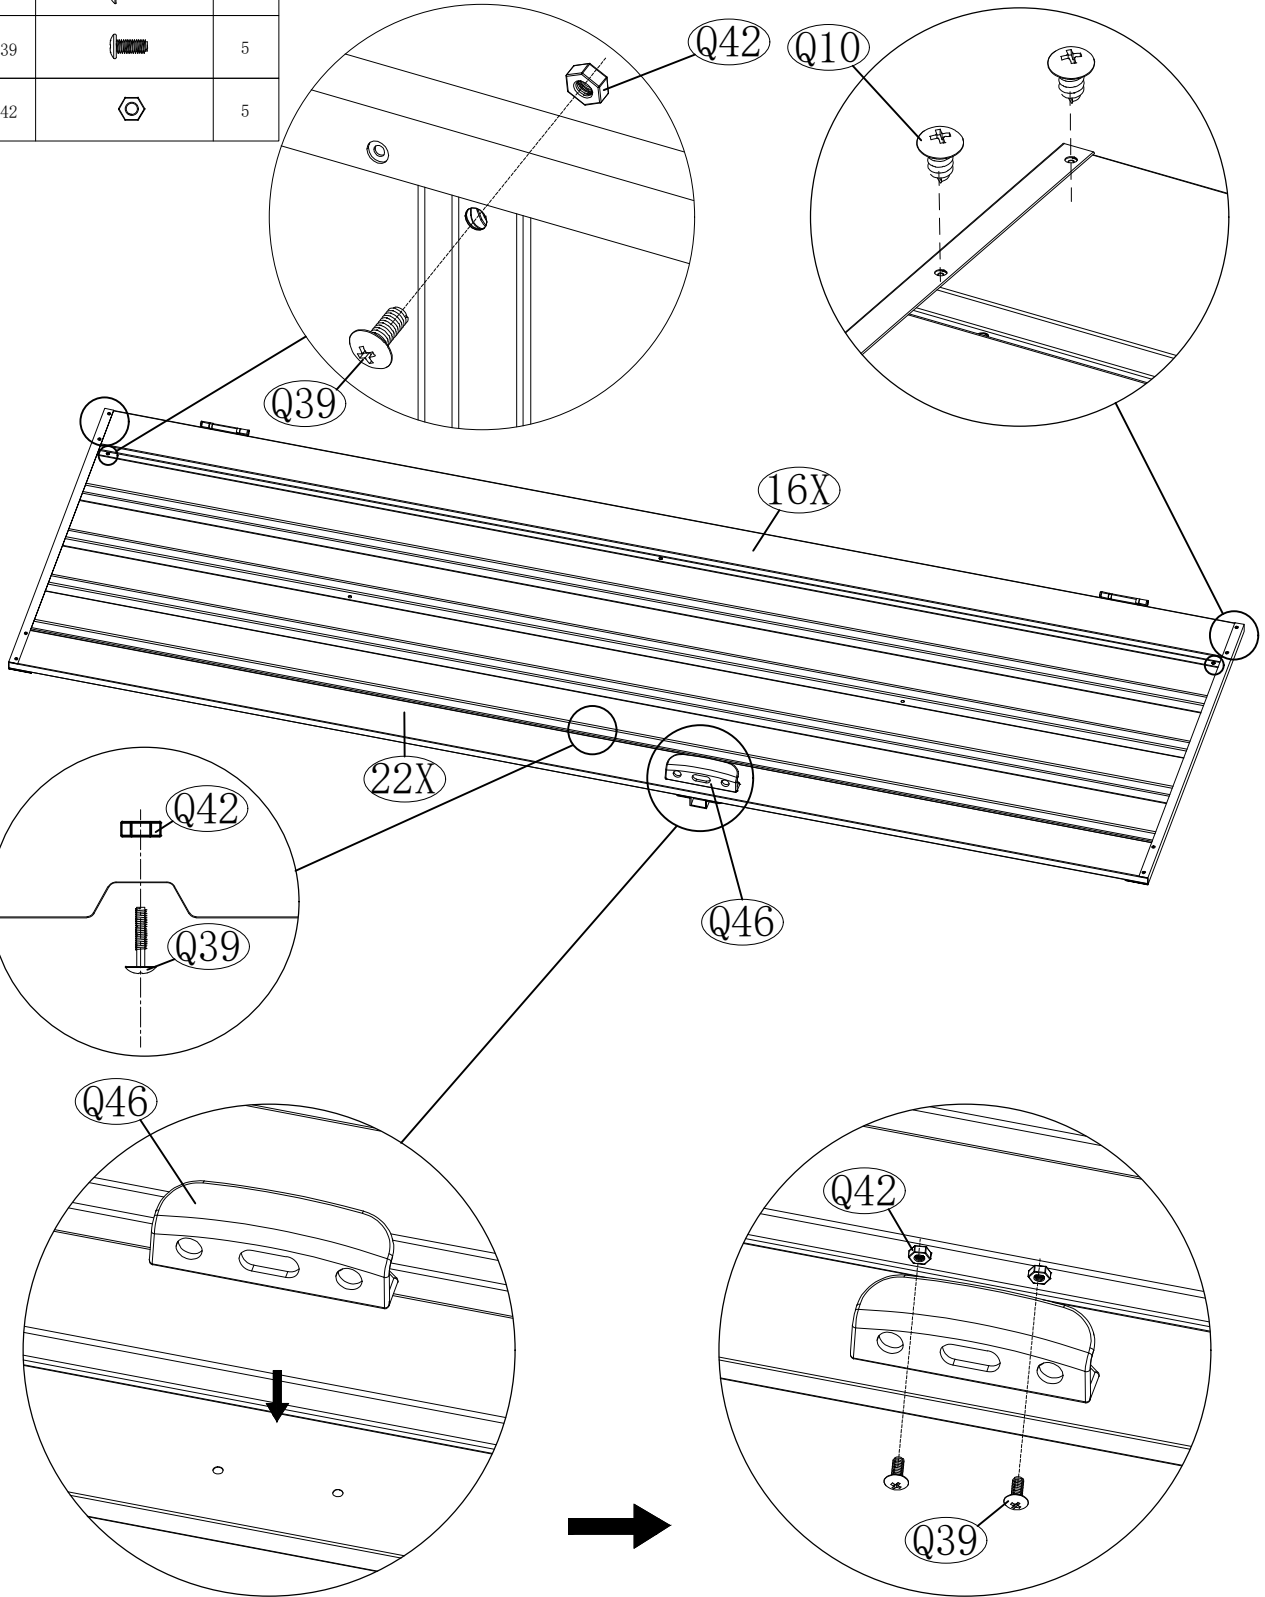
NO.	PART.	Qty.
16X		1
21X		2
22X		1
M2		1
Q10		4





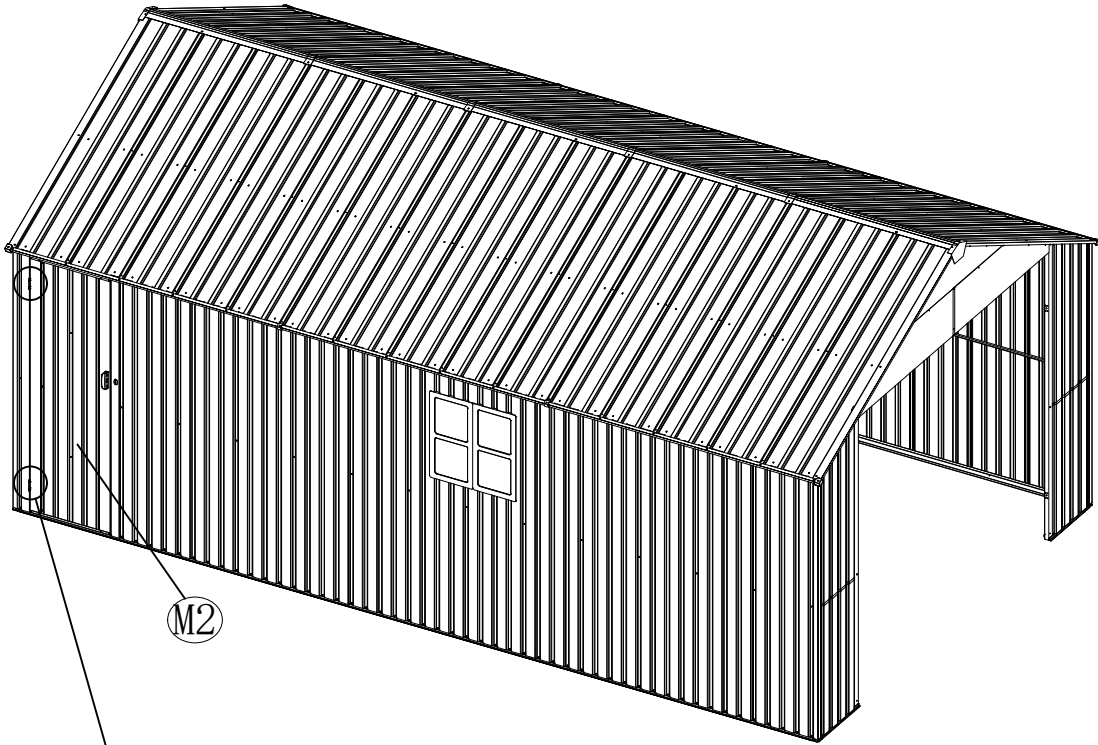
NO.	PART.	Qty.
15		2
52		1
Q10		2
Q40		5
Q42		5



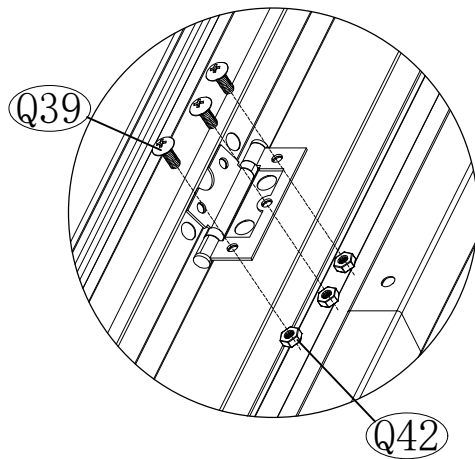
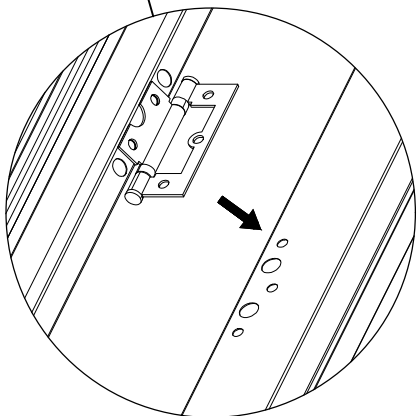
NO.	PART.	Qty.
Q46		1
Q10		8
Q39		5
Q42		5



NO.	PART.	Qty.
Q39		6
Q42		6



M2



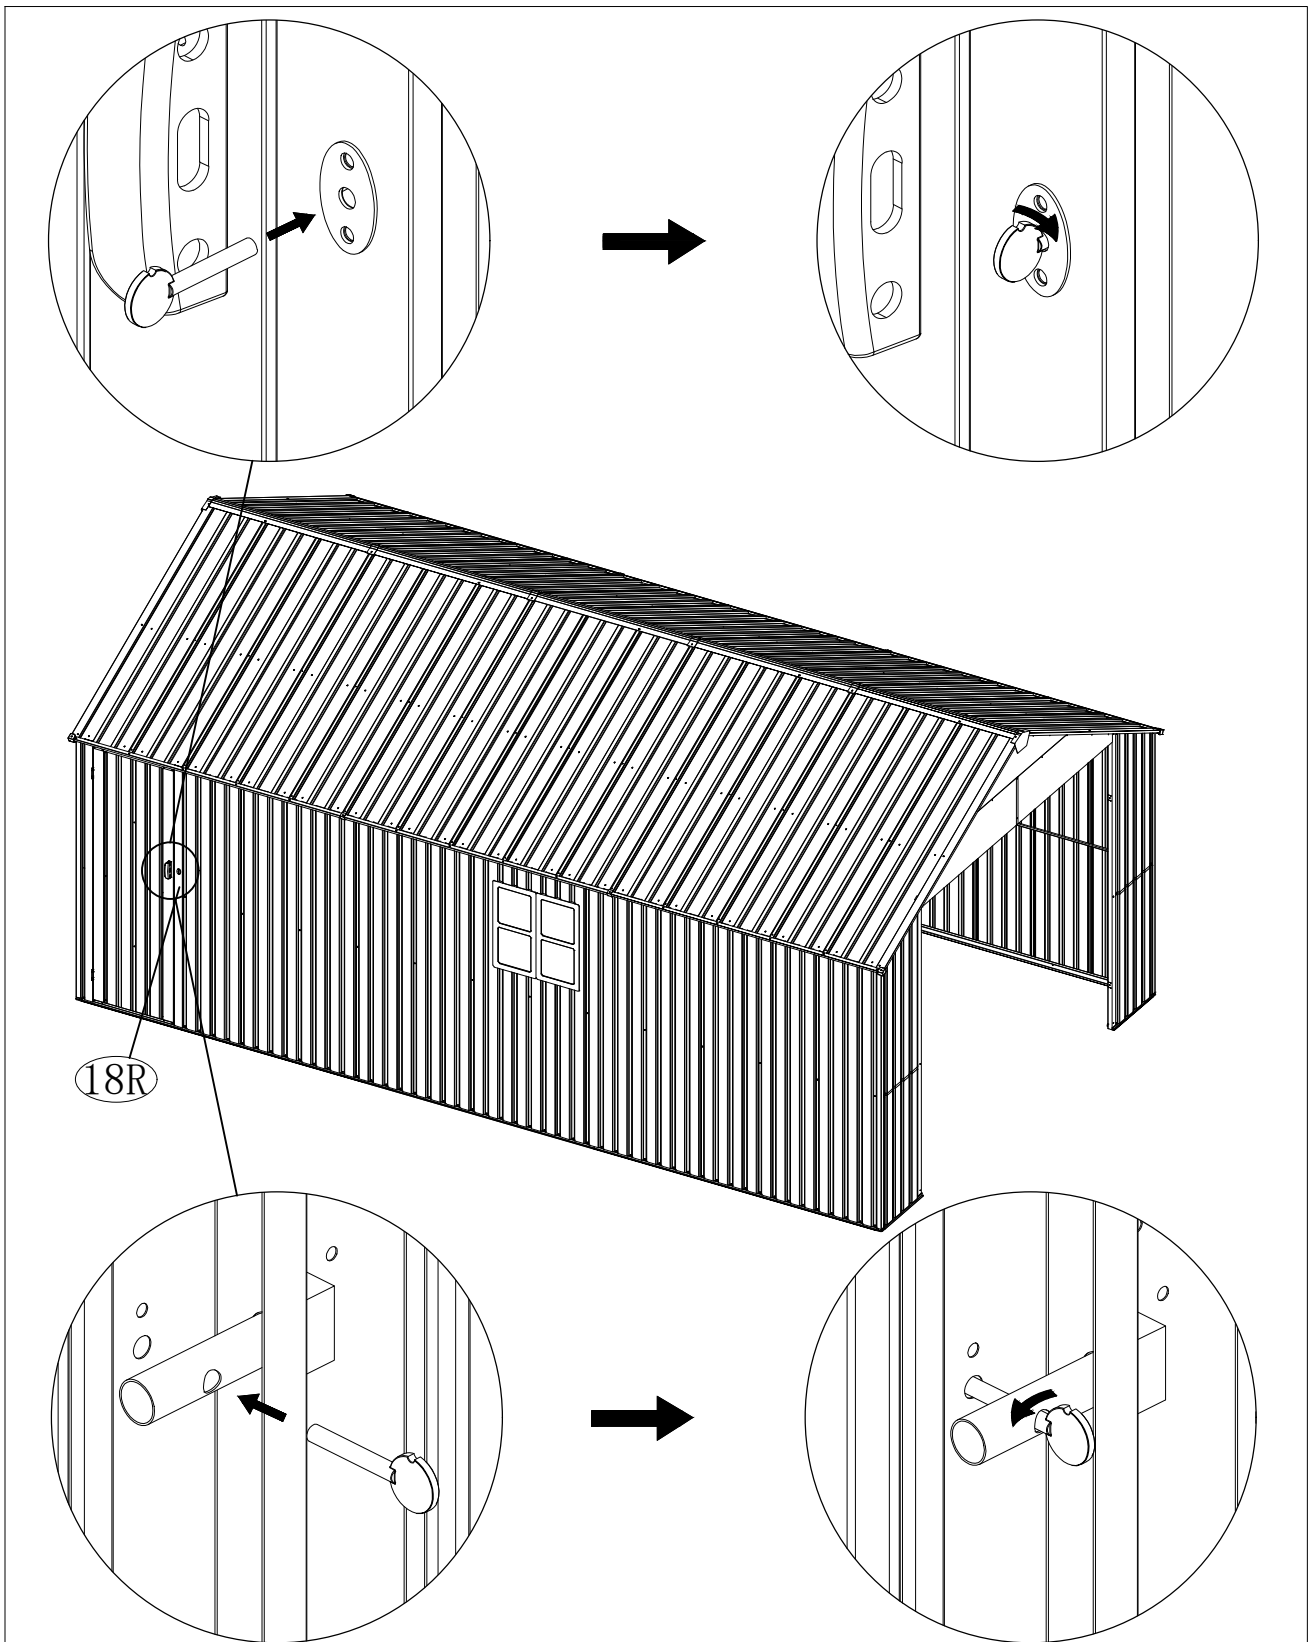



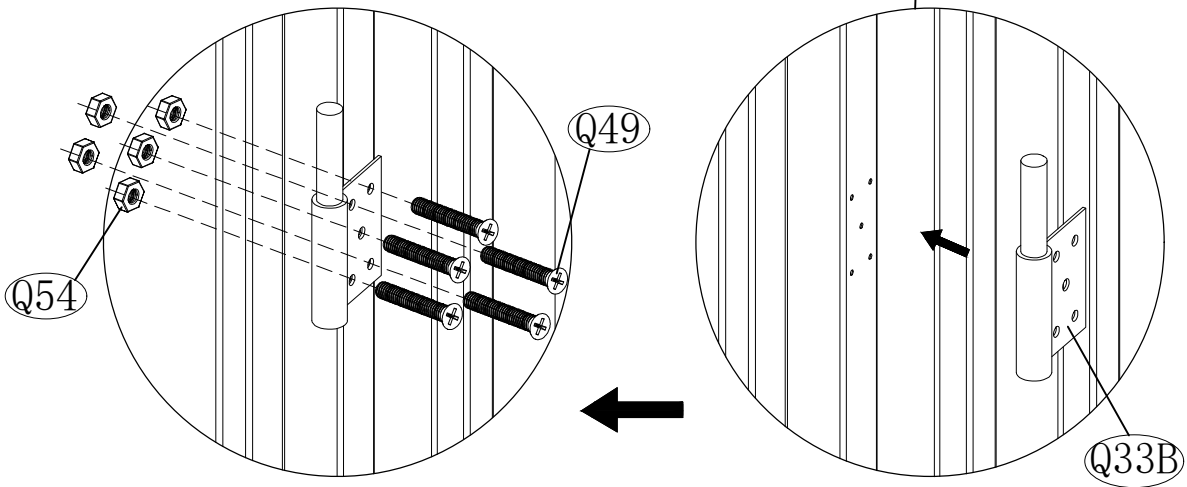
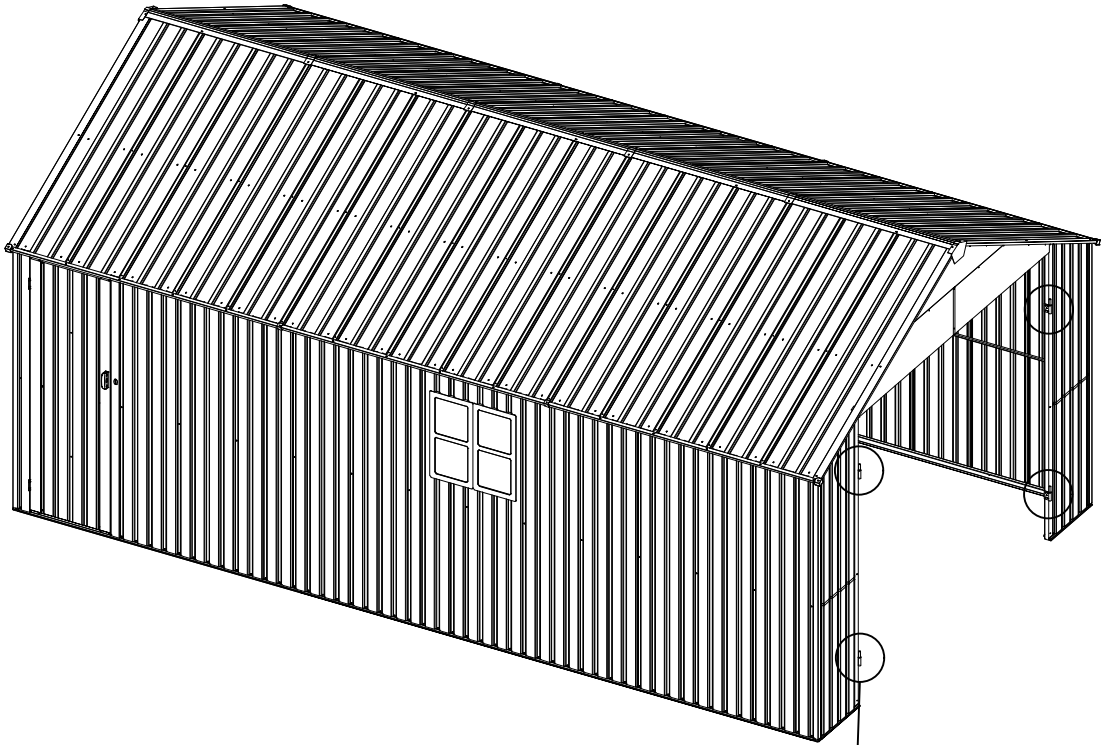
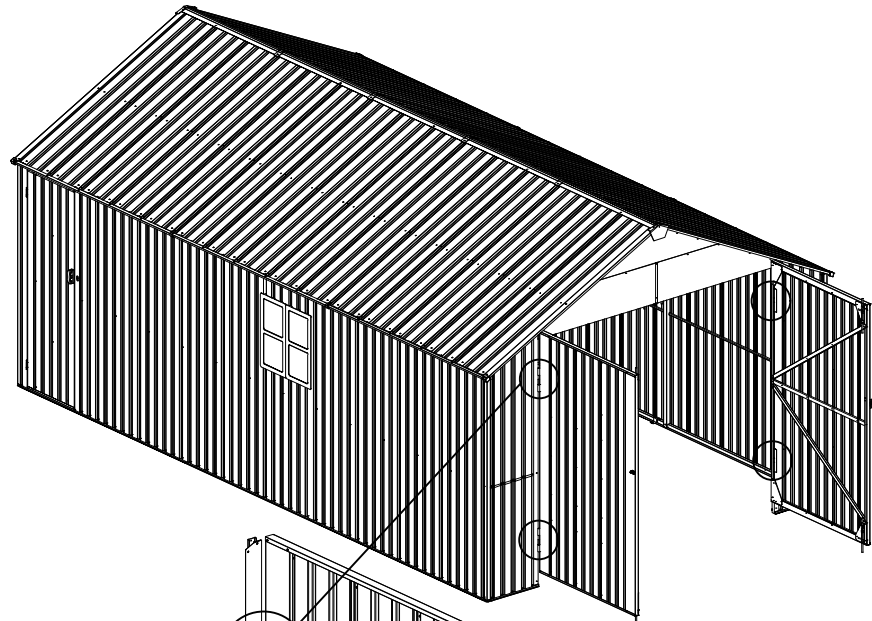


Diagram of unlocking the side door from both inside and outside.

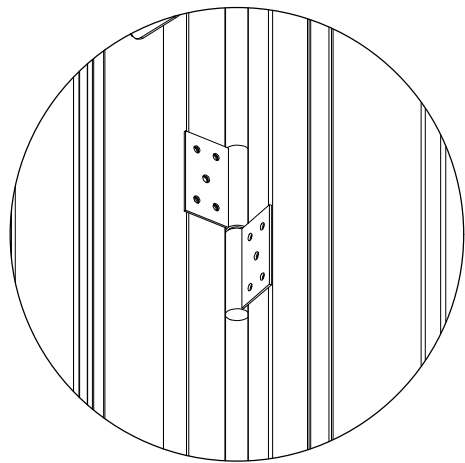
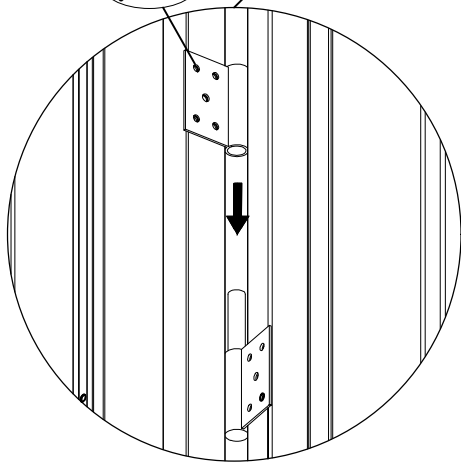
NO.	PART.	Qty.
Q33B		4
Q49		20
Q54		20




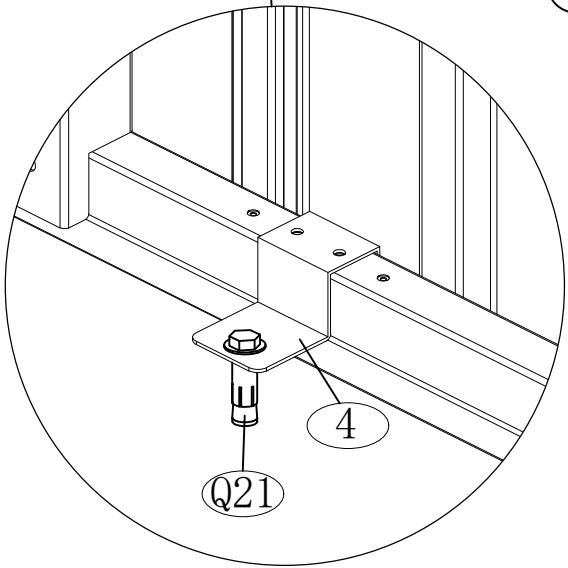
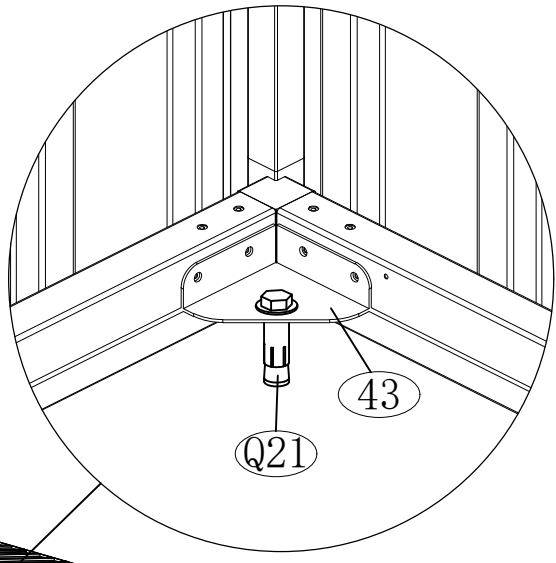
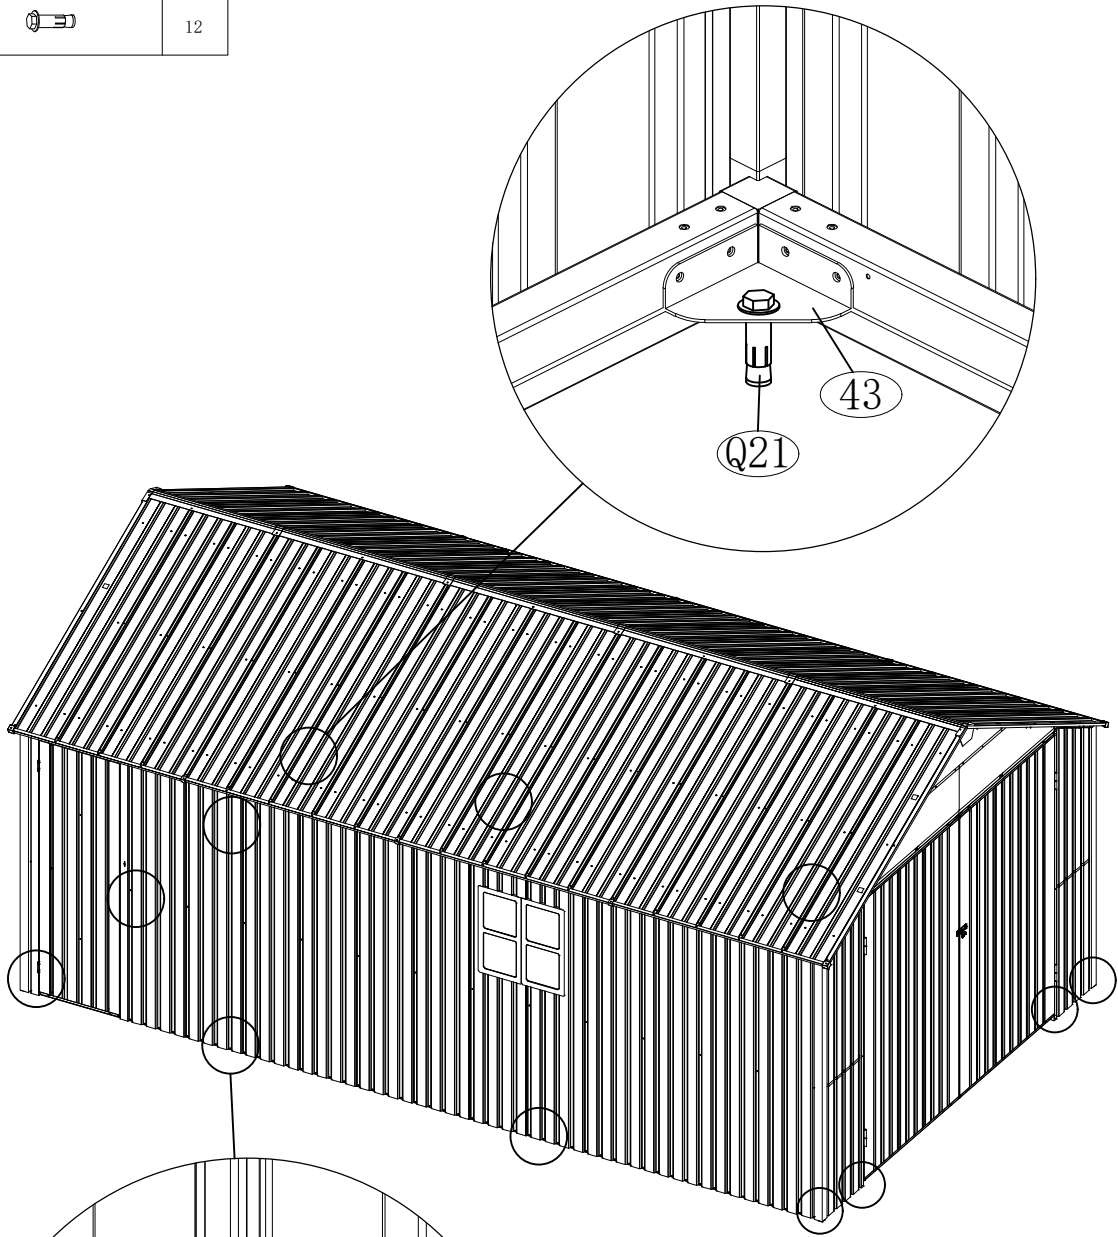


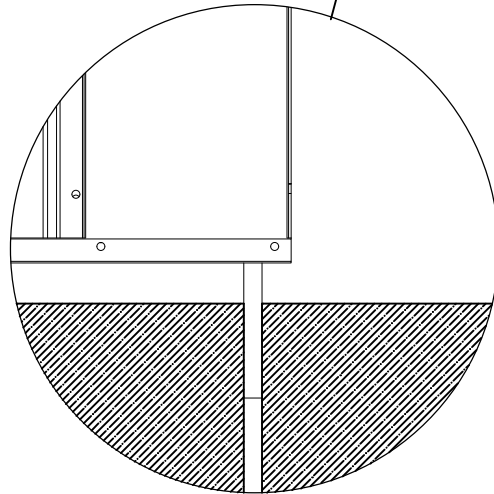
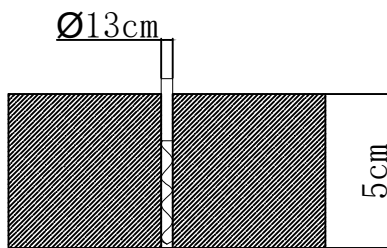
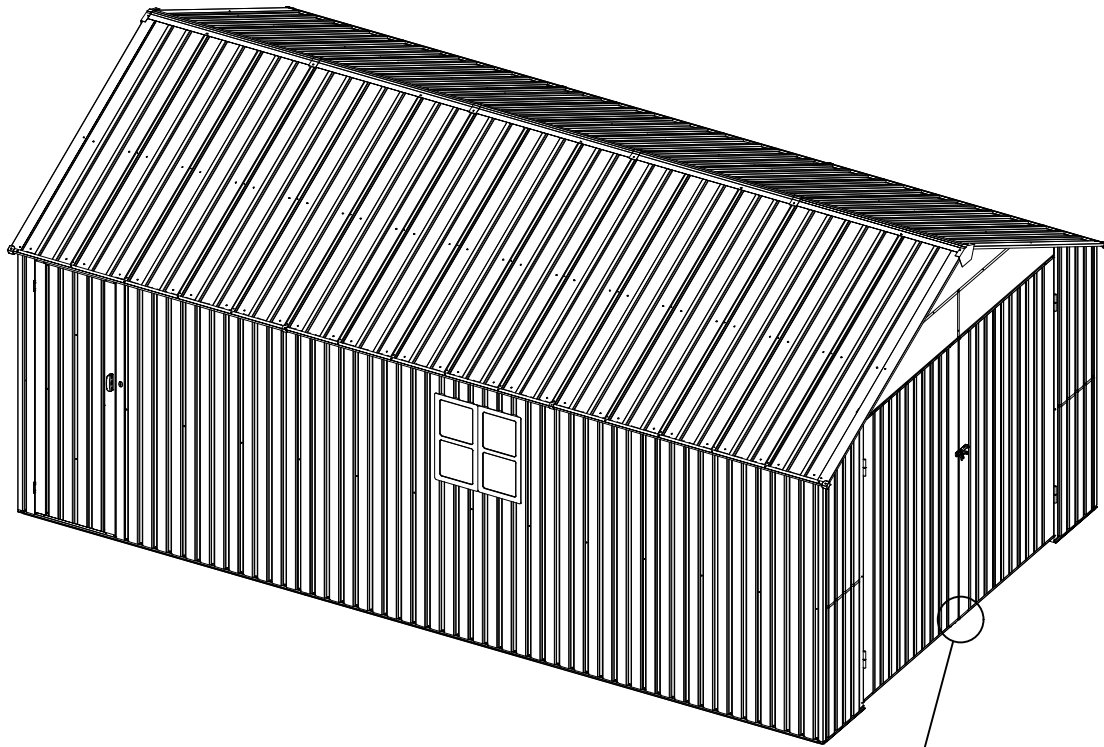
M1

Q33A

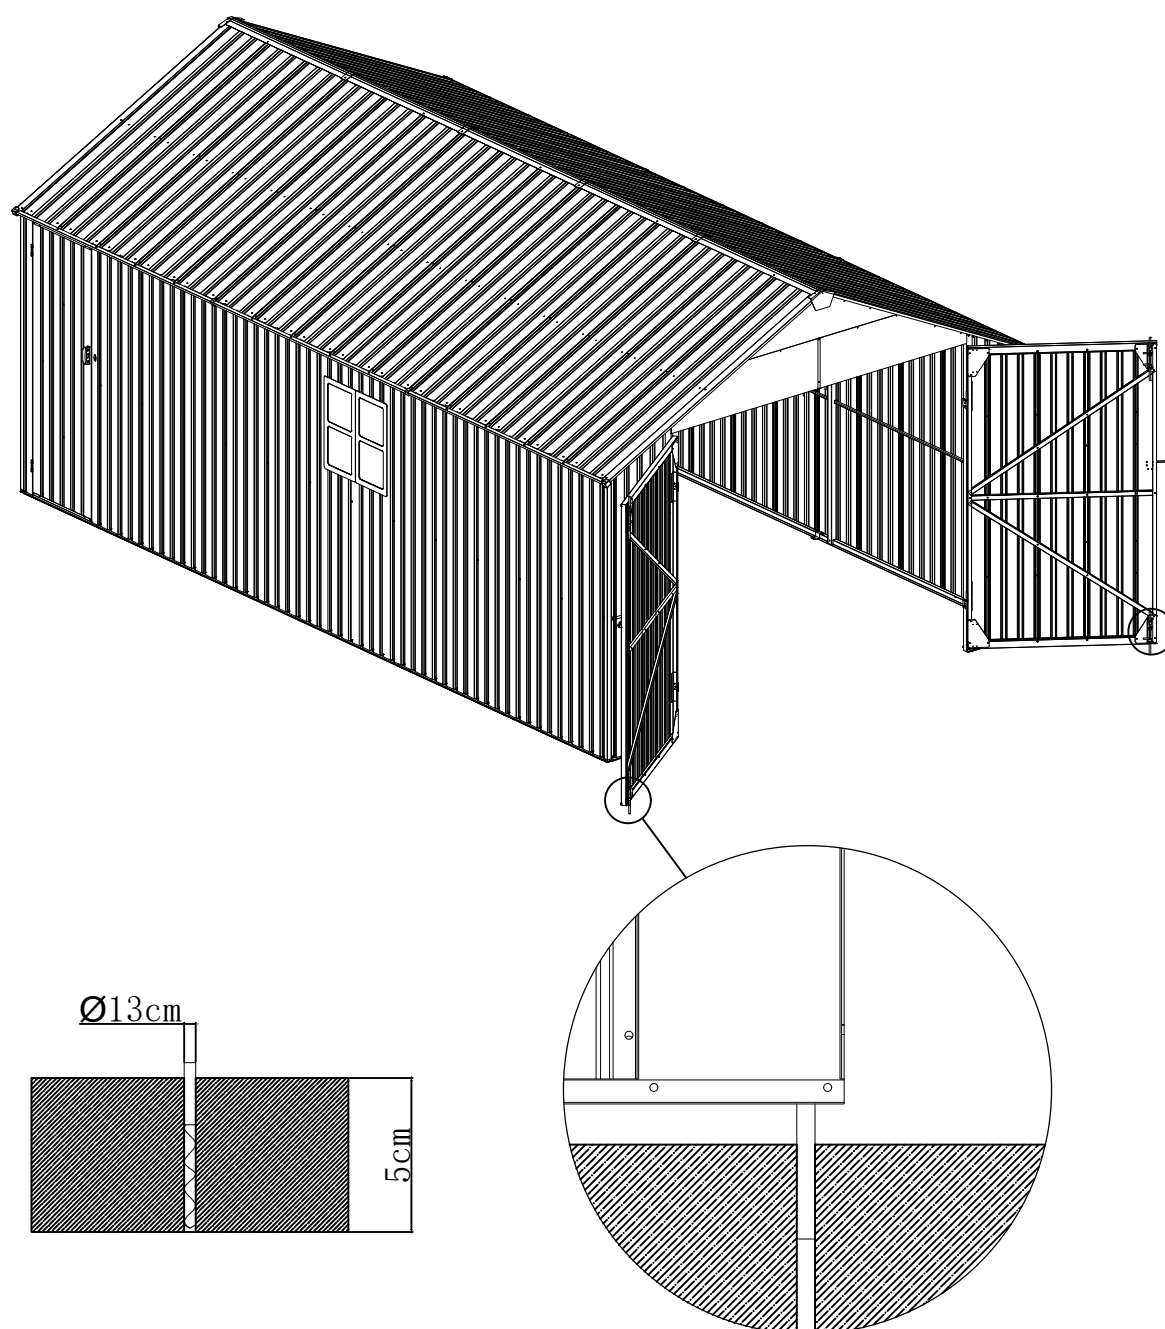


NO.	PART.	Qty.
Q21		12





Note: At the positions where the gate opens and closes, holes with a diameter of 13 cm should be drilled on the ground to restrict the gate. This is to prevent unnecessary losses caused by strong winds.



Note: At the positions where the gate opens and closes, holes with a diameter of 13 cm should be drilled on the ground to restrict the gate. This is to prevent unnecessary losses caused by strong winds.