




FL-10180-WH BELFORT 5 DRAWER  
DRESSING TABLE WITH LIGHTS

UPC# 792105877563

### ASSEMBLY INSTRUCTIONS

Made In Vietnam










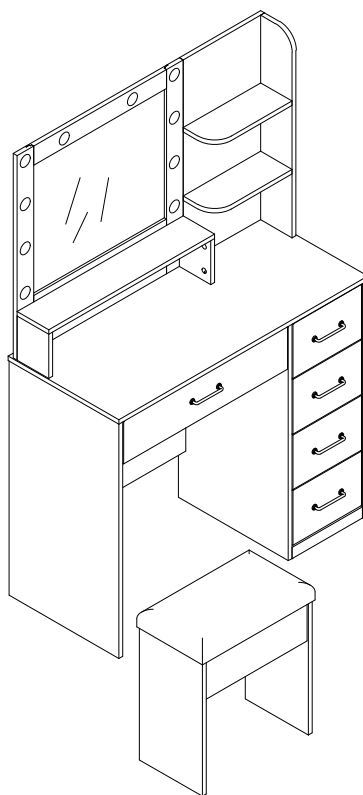

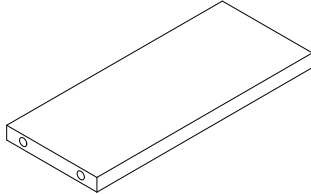


**Questions, problems, missing parts?** Before returning to your retailer, call our customer service department at 1-888-315-6658, 8 a.m - 5 p.m. EST, Monday-Friday.


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

NOTE: In order to prevent damage during assembly, please assemble this item with at least two people.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

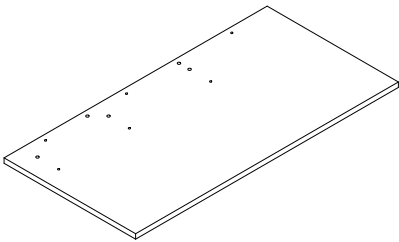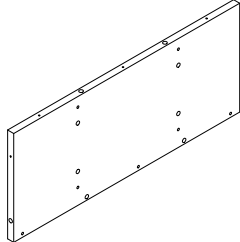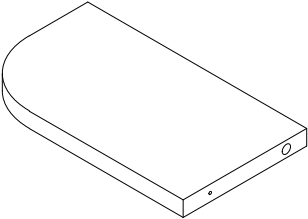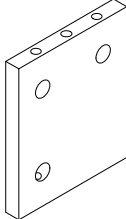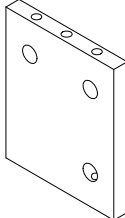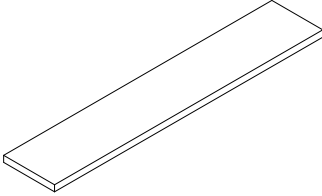
PARTS LIST		
<b>1</b>  TOP PANEL-1PC	<b>2</b>  TOP LEFT PANEL-1PC	<b>3</b>  UPPER BACK PANEL-1PC
<b>4</b>  RIGHT SHELFs -2PCS	<b>5</b>  SMALL LEFT STAND PANEL-1PC	<b>6</b>  SMALL RIGHT STAND PANEL-1PC
<b>7</b>  MIRROR FRAME-1PC	<b>8</b>  LEFT SHELF-1PC	<b>9</b>  LEFT SIDE PANEL-1PC
<b>10</b>  RIGHT SIDE PANEL-1PC	<b>11</b>  STAND PANEL-1PC	<b>12</b>  FRONT RAIL-1PC

13

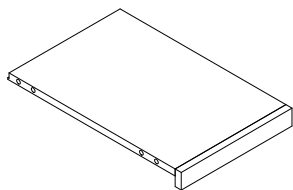


BOTTOM PANEL-1PC

14

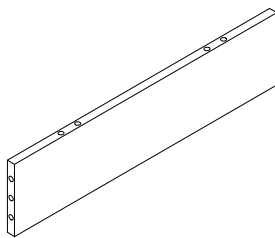


UPPER BACK RAIL-1PC

15

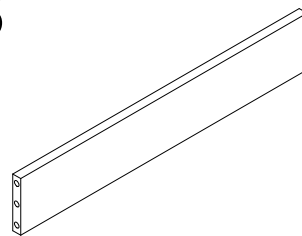


LOWER BACK RAIL-1PC

16




BACK PANEL-1PC


17

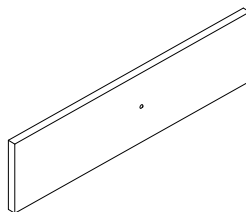BIG DRAWER  
FRONT PANEL-1PC


18

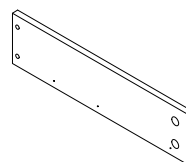BIG DRAWER  
LEFT PANEL-1PC


19

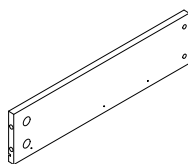BIG DRAWER  
RIGHT PANEL-1PC


20

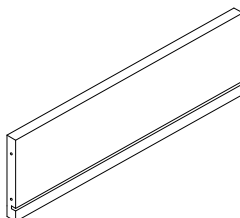BIG DRAWER  
BACK PANEL-1PC


21

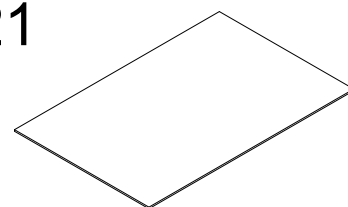BIG DRAWER  
BOTTOM PANEL-1PC


22

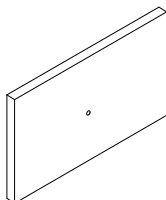SMALL DRAWER  
FORNT PANEL-4PCS


23

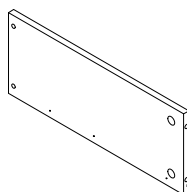SMALL DRAWER  
LEFT PANEL-4PCS


24

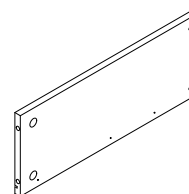SMALL DRAWER  
RIGHT PANEL-4PCS


25

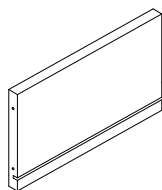SMALL DRAWER  
BACK PANEL-4PCS

26

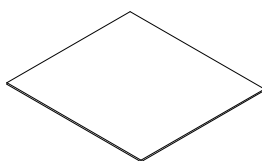
SMALL DRAWER  
BOTTOM PANEL-4PCS

27

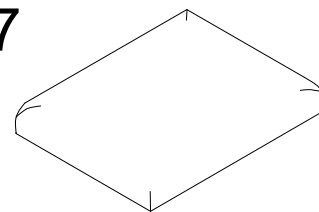


SEAT FRAME-1PC

28









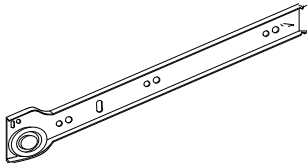
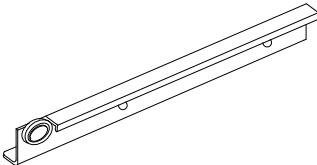
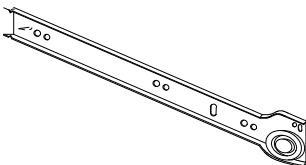
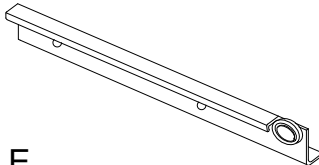








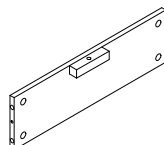



CHAIR SIDE PANEL-2PCS

29



CHAIR  
FRONT/BACK PANEL-2PCS

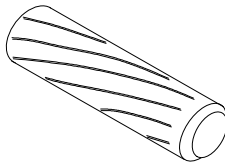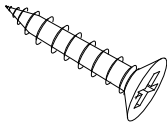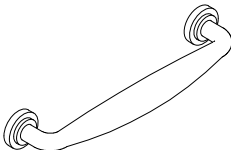30
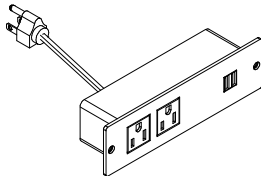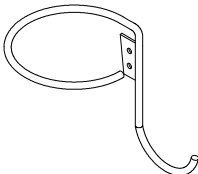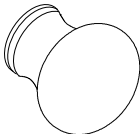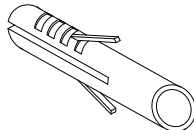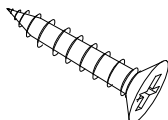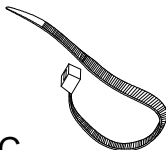
<div>A</div> <div></div> <div>CAM-BOLTS - 39PCS</div>	<div>B</div> <div></div> <div>CAM-LOCKS-39PCS</div>	<div>C</div> <div></div> <div>DOWELS-44PCS</div>	
<div>D</div> <div><div>Ø8*30mm</div></div> <div>SCREWS - 18PCS</div>	<div>E</div> <div><div>Ø6*12mm</div></div> <div>SCREWS - 90PCS</div>	<div>F</div> <div></div> <div>HANDLE - 5PCS</div>	
<div>G</div> <div><div>Ø8*15mm</div></div> <div>BOLT - 10PCS</div>	<div>H</div> <div><div>Ø6*25mm</div></div> <div>SCREW - 20PCS</div>	<div>I</div> <div></div> <div>FEMALE SLIDING LEFT-5PCS</div>	
<div>J</div> <div></div> <div>MALE SLIDING LEFT-5PCS</div>	<div>K</div> <div></div> <div>FEMALE SLIDING RIGHT-5PCS</div>	<div>L</div> <div></div> <div>MALE SLIDING RIGHT-5PCS</div>	
<div>M</div> <div></div> <div>SMALL CAM-BOLTS - 20PCS</div>	<div>N</div> <div></div> <div>SMALL CAM-LOCKS - 20PCS</div>	<div>O</div> <div></div> <div>SOCKET-1PC</div>	
<div>P</div> <div></div> <div>HANGER-1PC</div>	<div>Q</div> <div></div> <div>LED LIGHT - 10PCS</div>	<div>R</div> <div></div> <div>ANCHORS-4PCS</div>	
<div>T</div> <div><div>Ø8*38mm</div></div> <div>SCREW-4PCS</div>	<div>U</div> <div></div> <div>HOOKS-4PCS</div>	<div>V</div> <div></div> <div>PLASTIC BELTS-2PCS</div>	<div>W</div> <div></div> <div>CAM TOOL-1PC</div>



**NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.**

NOTE: ● UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

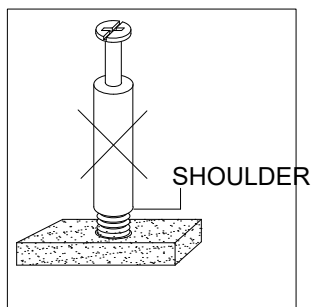
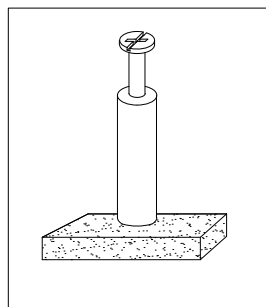


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.



## HOW TO USE THE CAM-TOOL

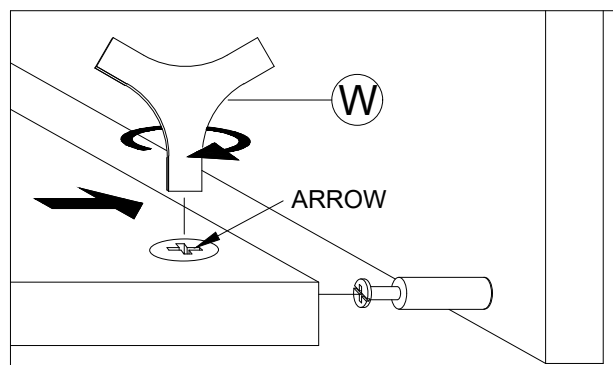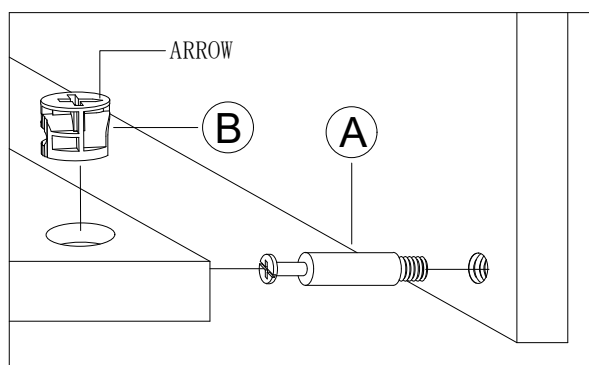



NOTE: ● THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

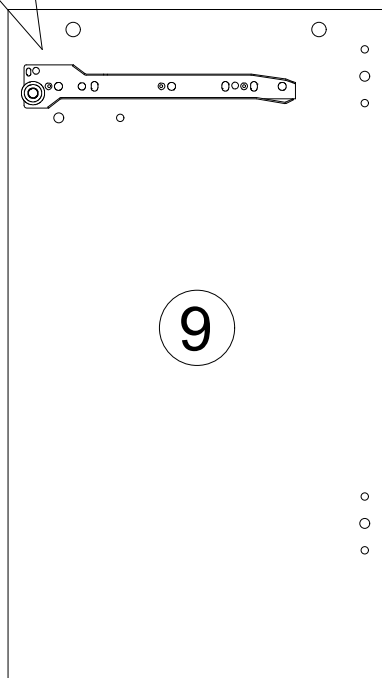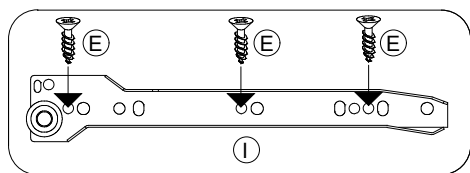



9

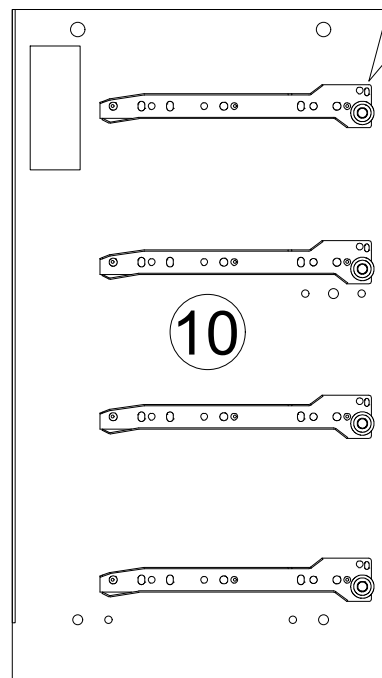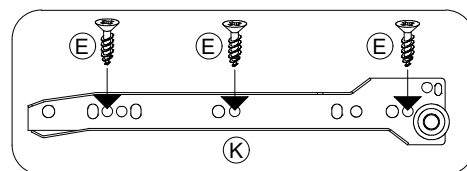

10

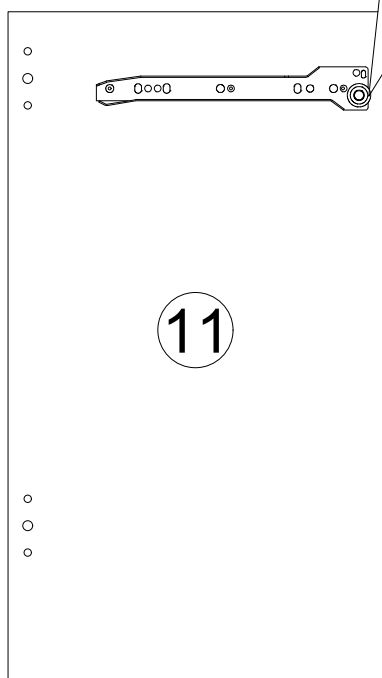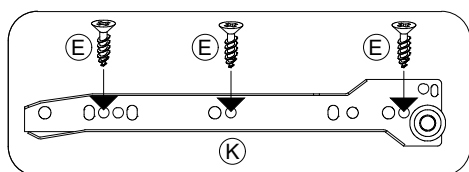

11

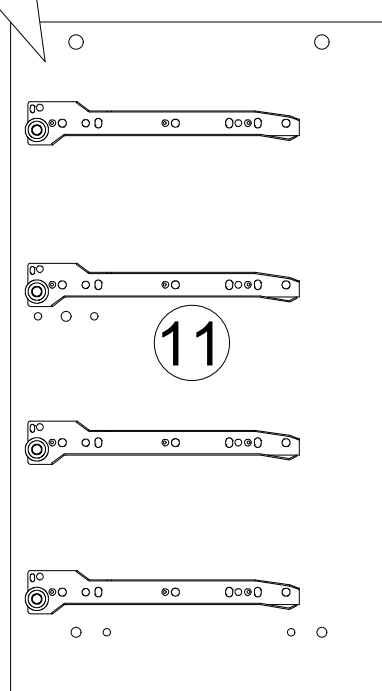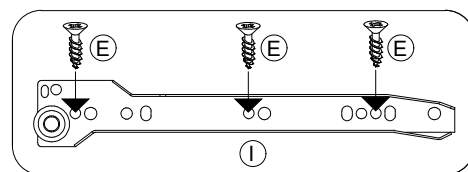


11

## LEFT SIDE

## RIGHT SIDE


1).ASSEMBLE THE FEMALE SLIDING (I/K).

- PLACE THE FEMALE SLIDING (I/K) INTO THE HOLES IN THE PANEL (9/10/11) AND ATTACH USING 30 SCREW (E).

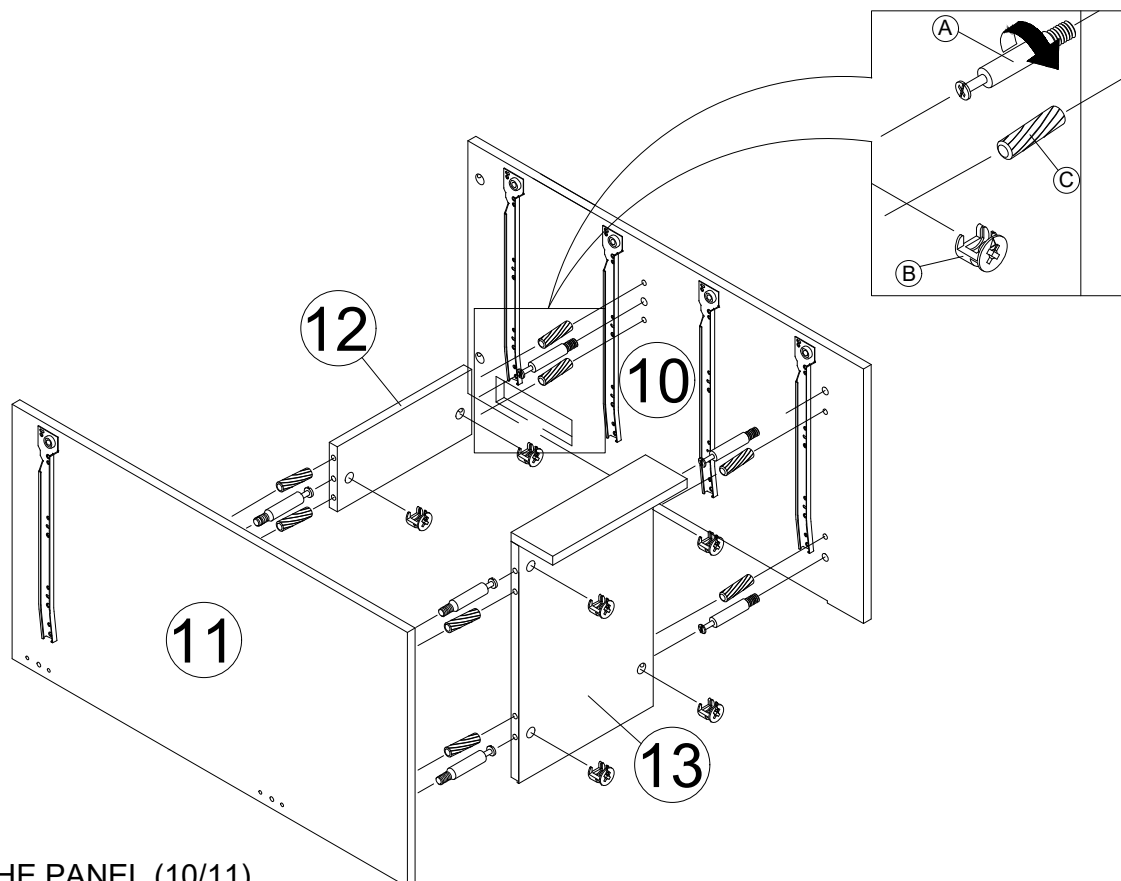


## 2).ASSEMBLE THE PANEL (10/11).

- ROTATE 6 CAM-BOLTS(A) INTO THE HOLES IN THE PANEL (10/11).
- PLACE THE FRONT RAIL (12), BOTTOM PANEL (13) AND 8 DOWELS (C) INTO THE HOLES IN THE PANEL (10/11) AND ATTACH USING 6 CAM LOCK (B).

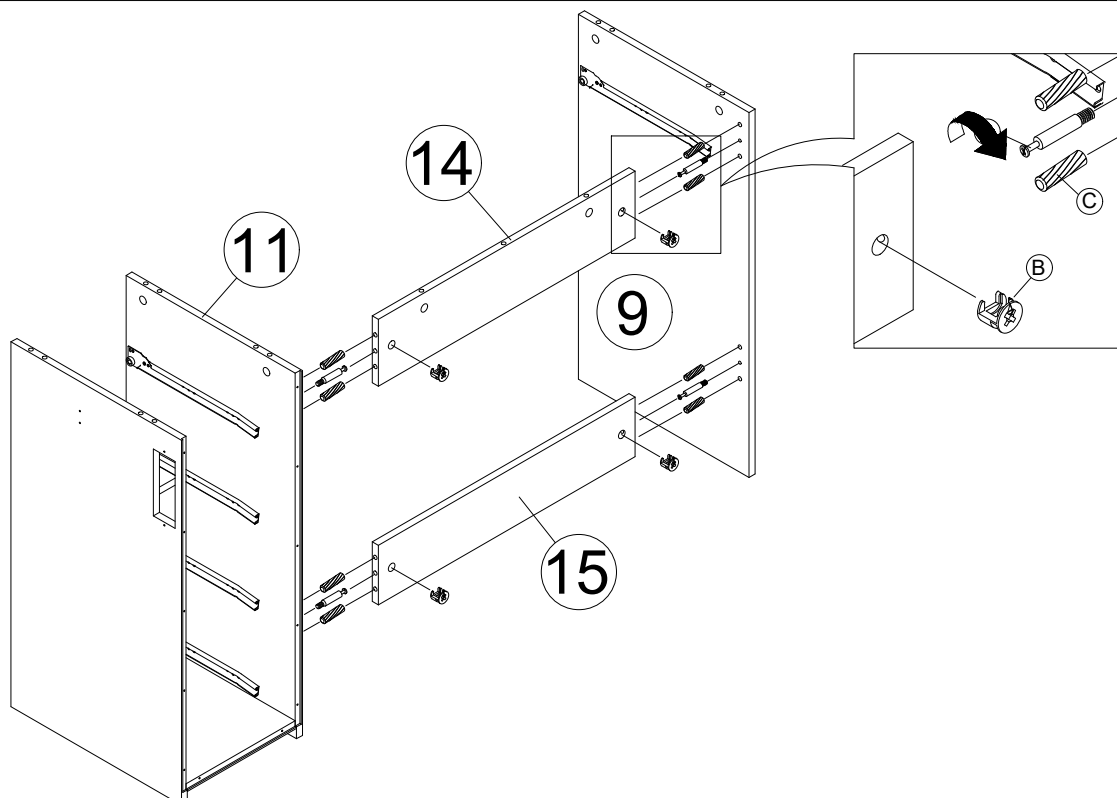


## 3).ASSEMBLE THE PANEL (9) AND RAIL )14/15).

- ROTATE 4 CAM-BOLTS (A) INTO THE HOLES IN THE PANEL (9/11).
- PLACE THE RAIL (13/14/16) AND 12 DOWELS (C) INTO THE HOLES IN THE PANEL (11/12) AND ATTACH USING 8 CAM LOCK (B).

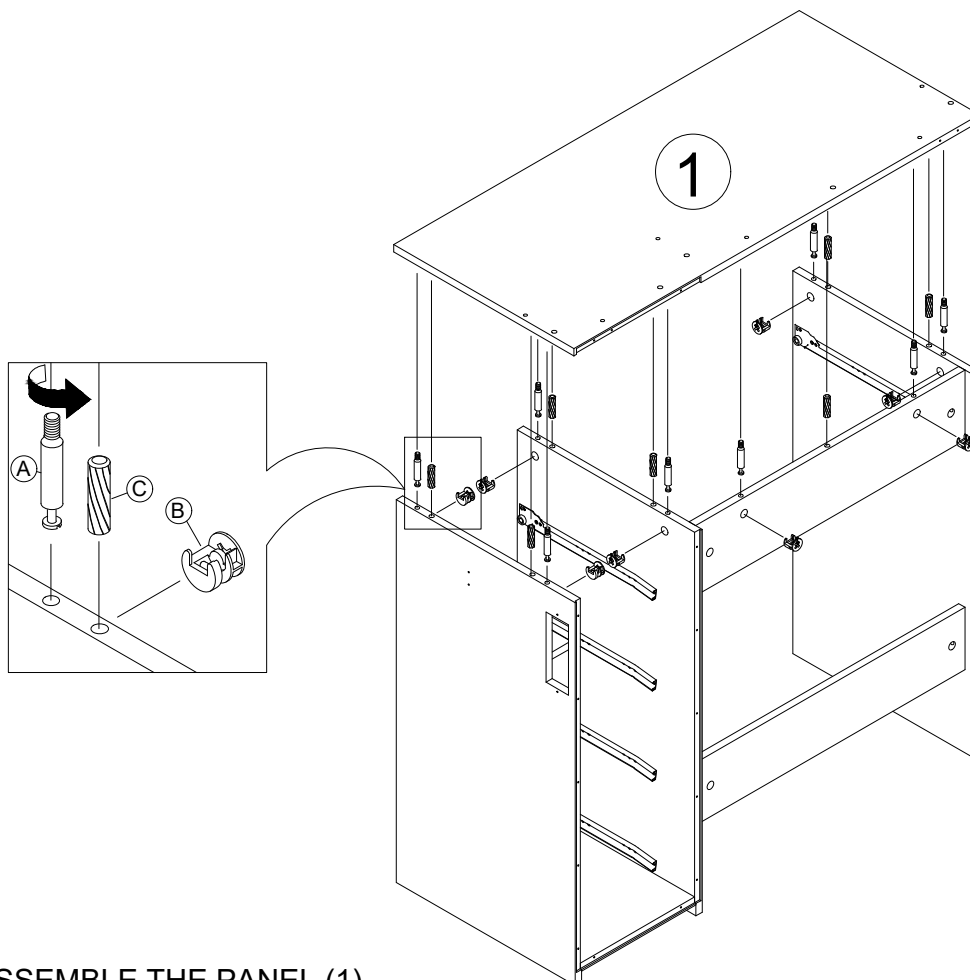

#### 4).ASSEMBLE THE PANEL (1).


- ROTATE 8 CAM-BOLTS(A) INTO THE HOLES IN THE PANEL (1).
- PLACE THE PANEL (1) AND 7 DOWELS (C) INTO THE HOLES IN THE MAIN BODY AND ATTACH USING 8 CAM LOCK (B).

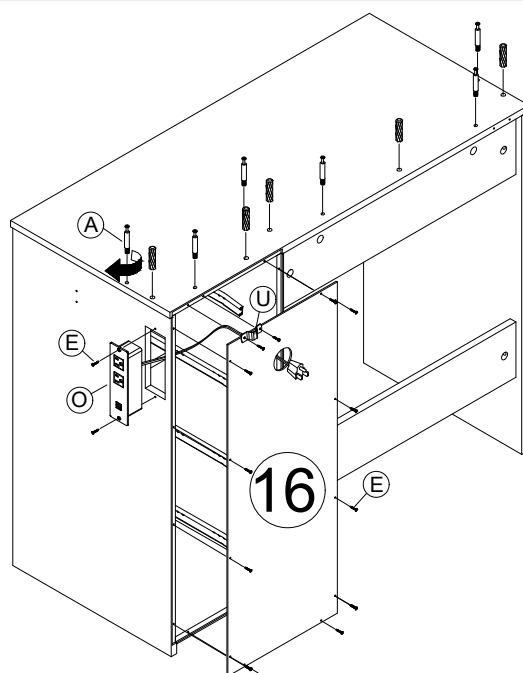

#### 5).ASSEMBLE THE BACK PANEL (16) AND SOCKET (P).


- ROTATE 6 CAM-BOLTS(A) INTO THE HOLES IN THE PANEL (1).
- PLACE THE PANEL (16), SOCKET (O), 5 DOWELS (C) AND 1 HOOK (U) INTO THE HOLES IN THE MAIN BODY AND ATTACH USING 15 SCREWS (E).



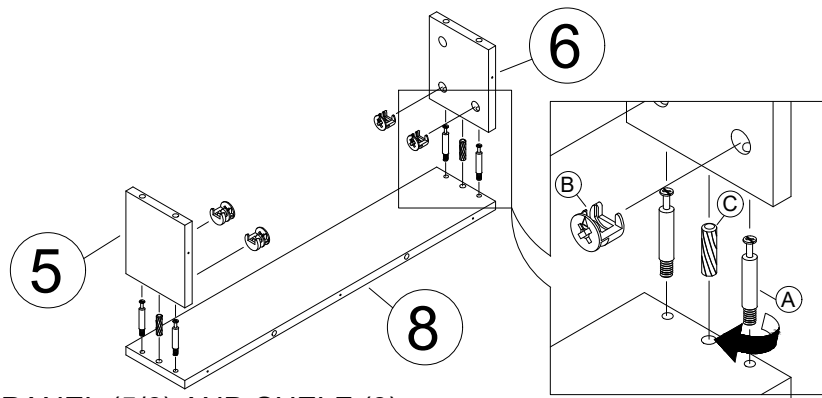


#### 6).ASSEMBLE THE PANEL (5/6) AND SHELF (8).

- ROTATE 4 CAM-BOLTS(A) INTO THE HOLES IN THE SHELF (8).
- PLACE THE PANEL (5/6) AND 2 DOWELS (C) INTO THE HOLES IN THE SHELF (8) AND ATTACH USING 2 CAM-LOCKS (B).

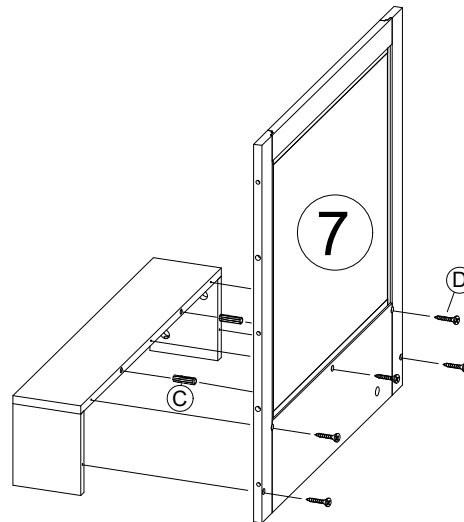


#### 7).ASSEMBLE THE MIRROR FRAME (7)

- PLACE THE SHELF (8) AND 2 DOWELS (C) INTO THE HOLES IN THE FRAME (7) AND ATTACH USING 5 SCREW (D).

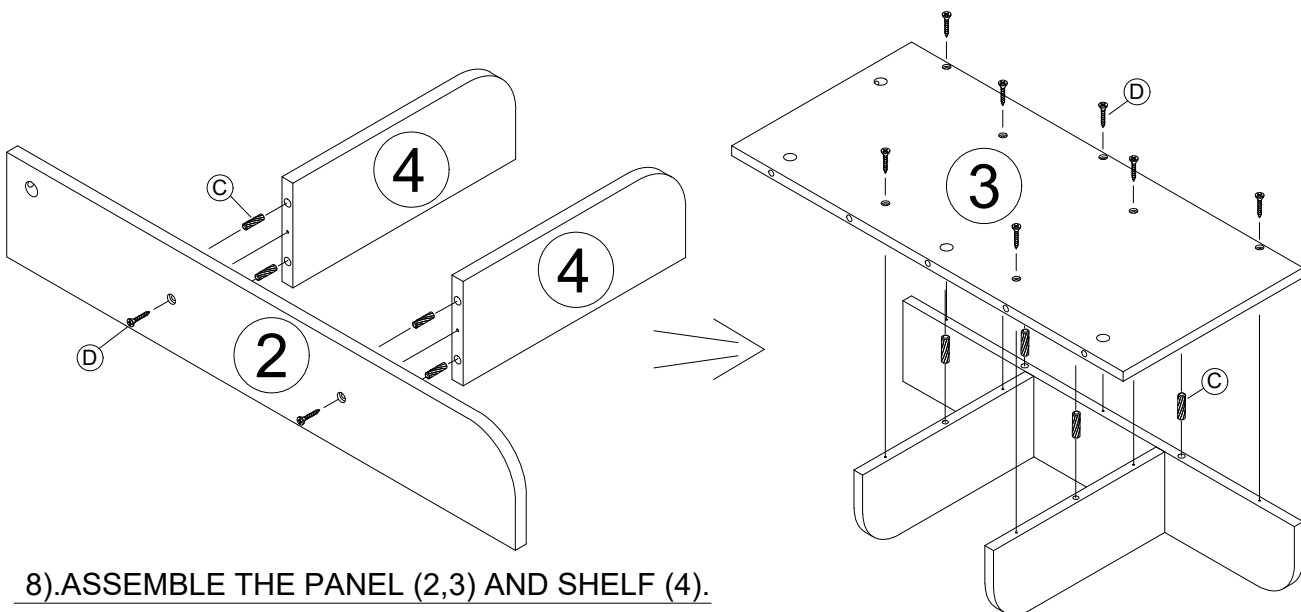


#### 8).ASSEMBLE THE PANEL (2,3) AND SHELF (4).

- PLACE 2 SHELF (4) AND 2 DOWELS (C) INTO THE HOLES IN THE PANEL (2) AND ATTACH USING 4 SCREW (D).
- PLACE THE PANEL (3) AND 4 DOWELS (C) INTO THE HOLES IN THE PANEL (2) AND ATTACH USING 7 SCREW (D).

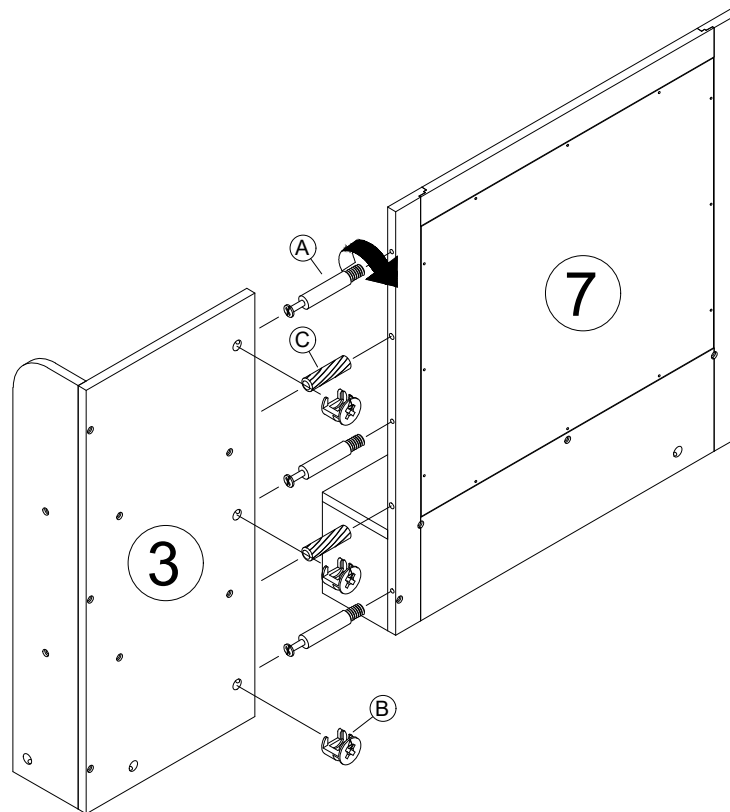


**9).ASSEMBLE THE PANEL 3) AND FRAME (7).**

- ROTATE 3 CAM-BOLTS (A) INTO THE HOLES IN THE FRAME (7).
- PLACE THE PANEL (3) AND 2 DOWELS (C) INTO THE HOLES IN THE FRAME (7) AND ATTACH USING 3 CAM-LOCKS (B).

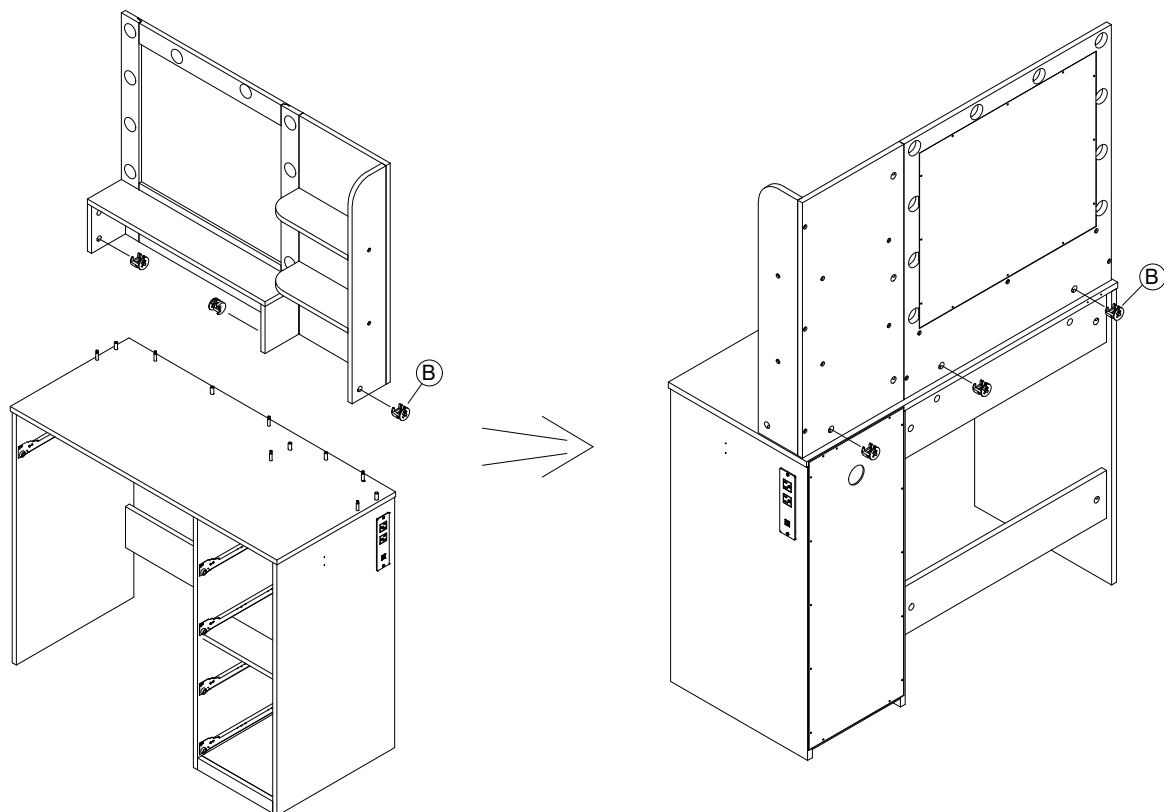


**10).ASSEMBLE THE TOP AND BASE.**

- PLACE THE TOP INTO THE HOLES IN THE BASE AND ATTACH USING 6 CAM-LOCKS (B).

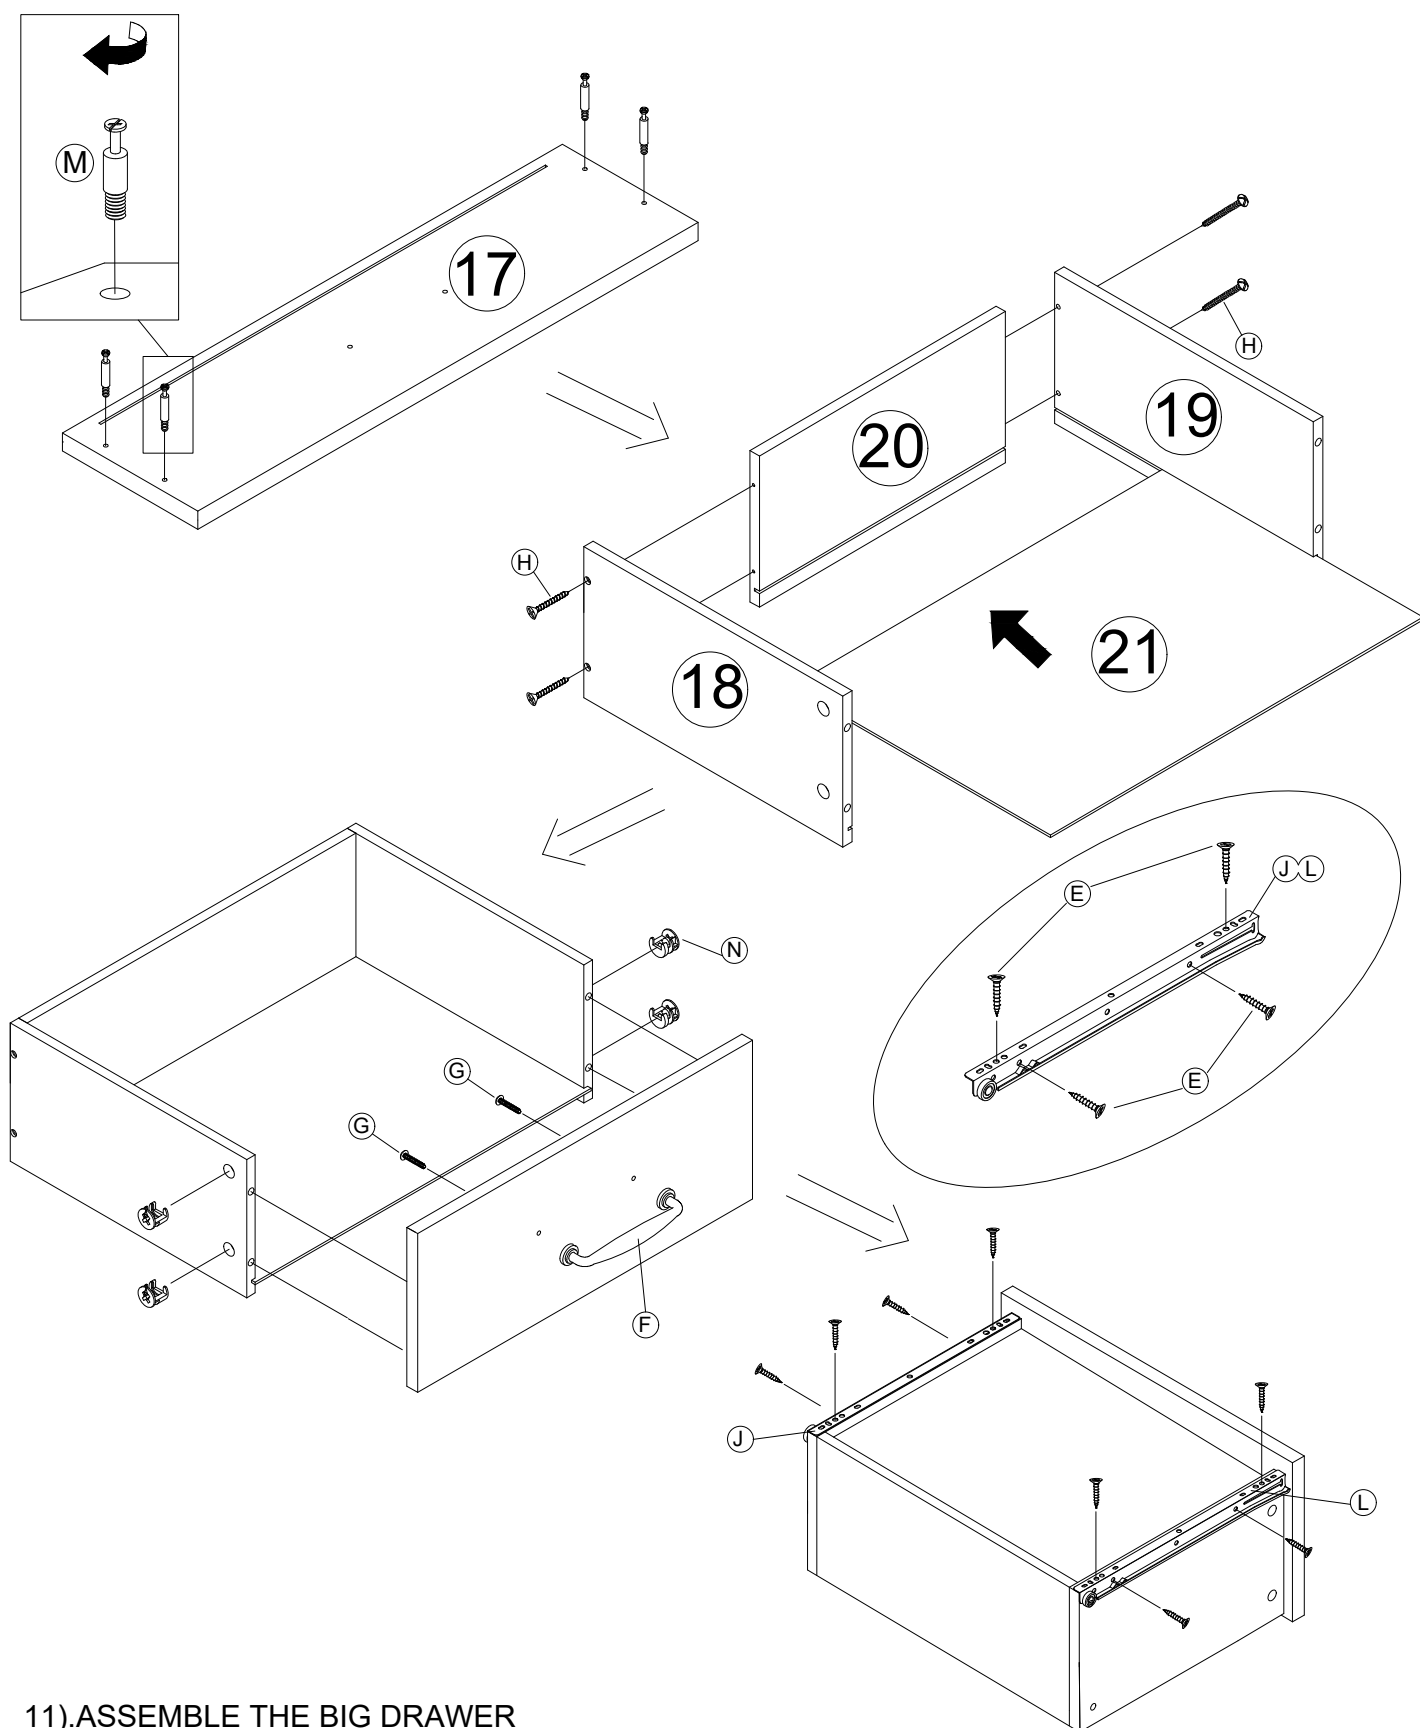

### 11).ASSEMBLE THE BIG DRAWER


- ROTATE 4 SMALL CAM-BOLTS (M) INTO THE HOLES IN THE BIG DRAWER FRONT PANEL(17).
- ATTACH THE DRAWER BACK (20) AND DRAWER LEFT/RIGHT (18/19) USING 4 SCREWS (H).
- PLACE THE BIG DRAWER FRONT PANEL (17) INTO THE HOLES IN THE DRAWER LEFT/RIGHT (18/19) AND ATTACH USING 4 SMALL CAM-LOCKS (N).
- PLACE THE SLIDING (J),(L) INTO THE HOLES IN THE DRAWER SIDE PANEL(18/19) AND USING 8 SCREWS (E).

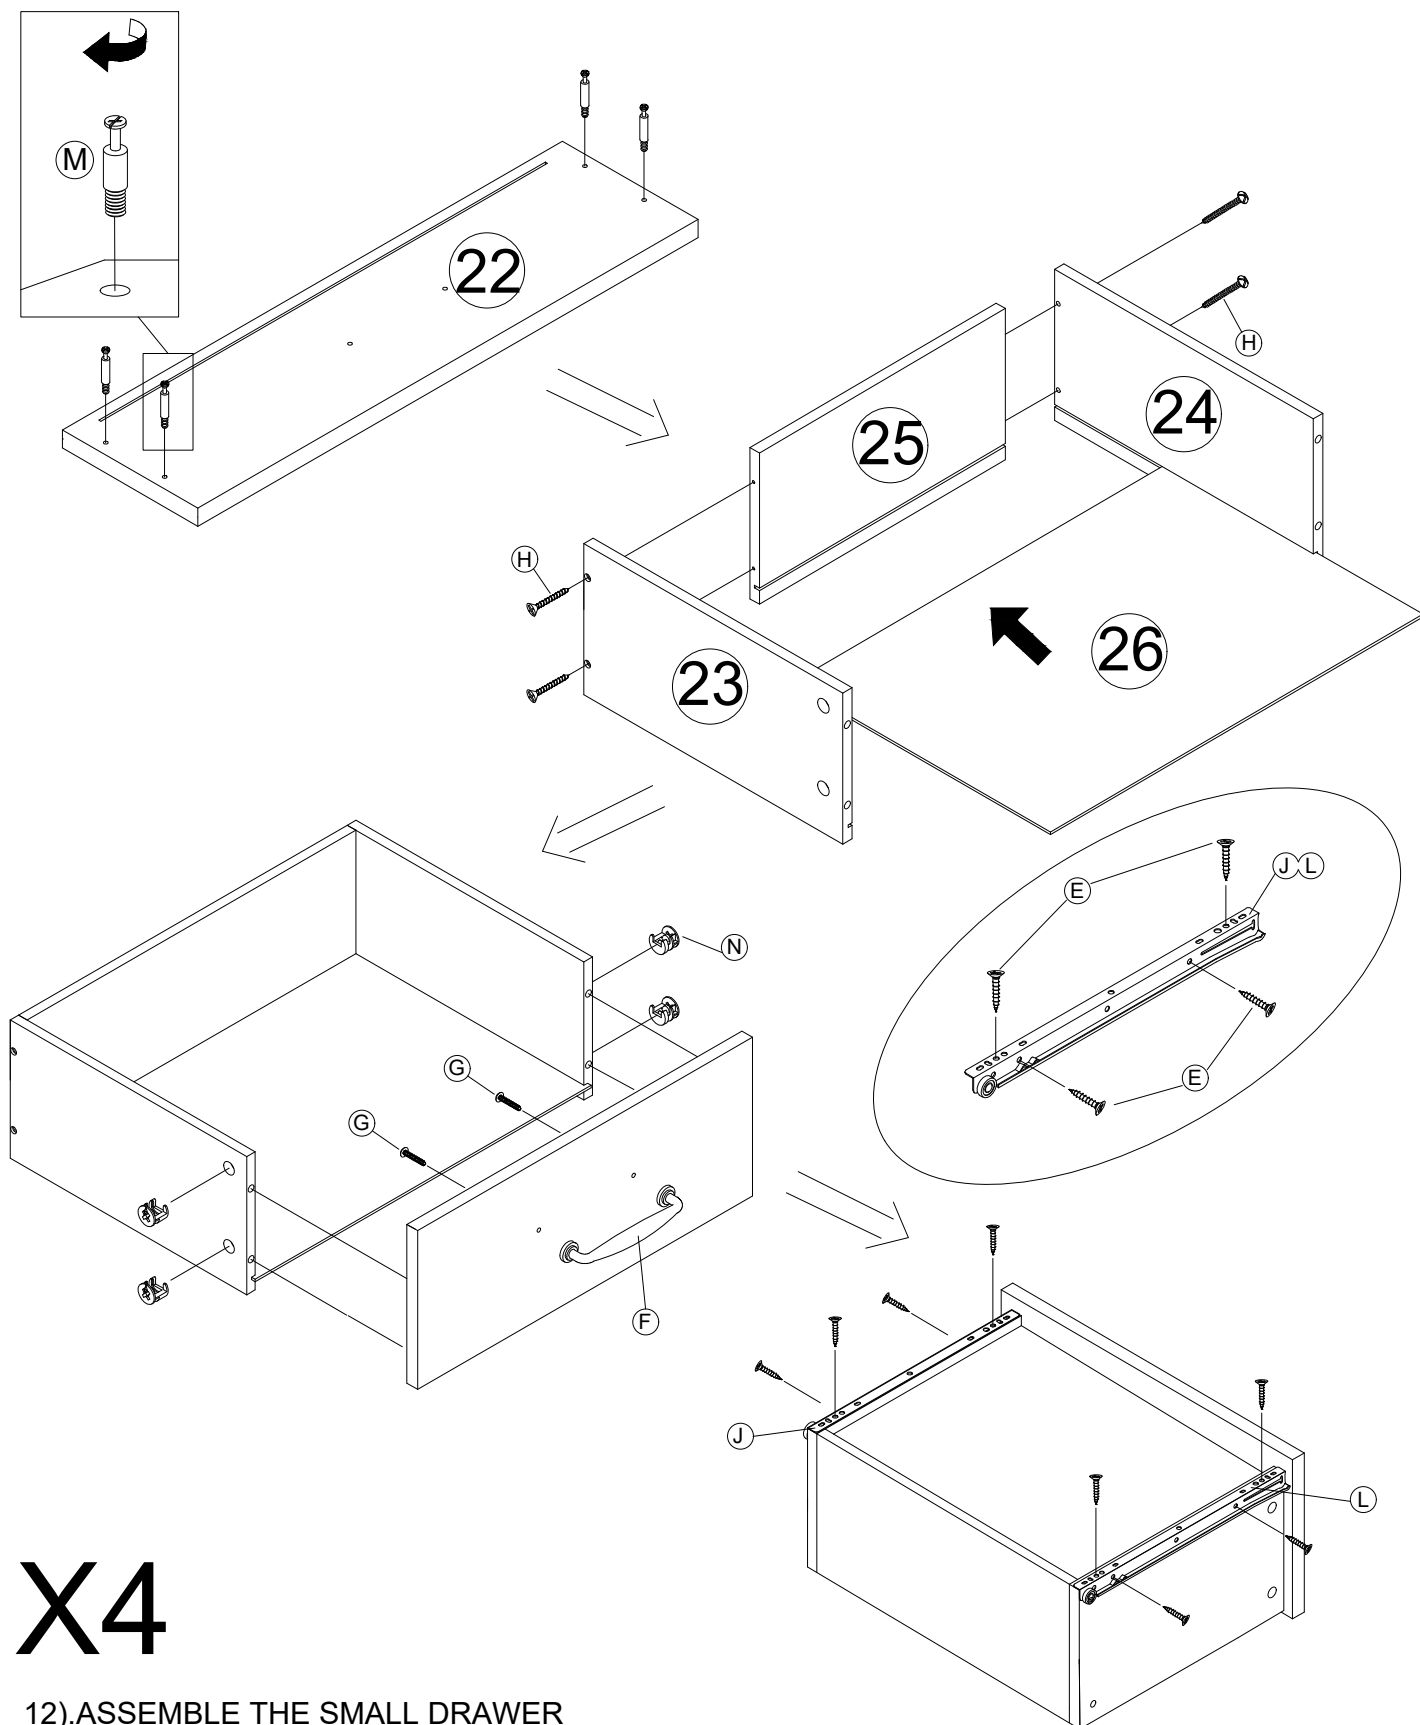

# X4


## 12).ASSEMBLE THE SMALL DRAWER

- ROTATE 16 SMALL CAM-BOLTS (M) INTO THE HOLES IN THE BIG DRAWER FRONT PANEL(22).
- ATTACH THE DRAWER BACK (25) AND DRAWER LEFT/RIGHT (23/24) USING 16 SCREWS (H).
- PLACE THE BIG DRAWER FRONT PANEL (22) INTO THE HOLES IN THE DRAWER LEFT/RIGHT (23/24) AND ATTACH USING 16 SMALL CAM-LOCKS (N).
- PLACE THE SLIDING (J),(L) INTO THE HOLES IN THE DRAWER SIDE PANEL(23/24) AND USING 32 SCREWS (E).

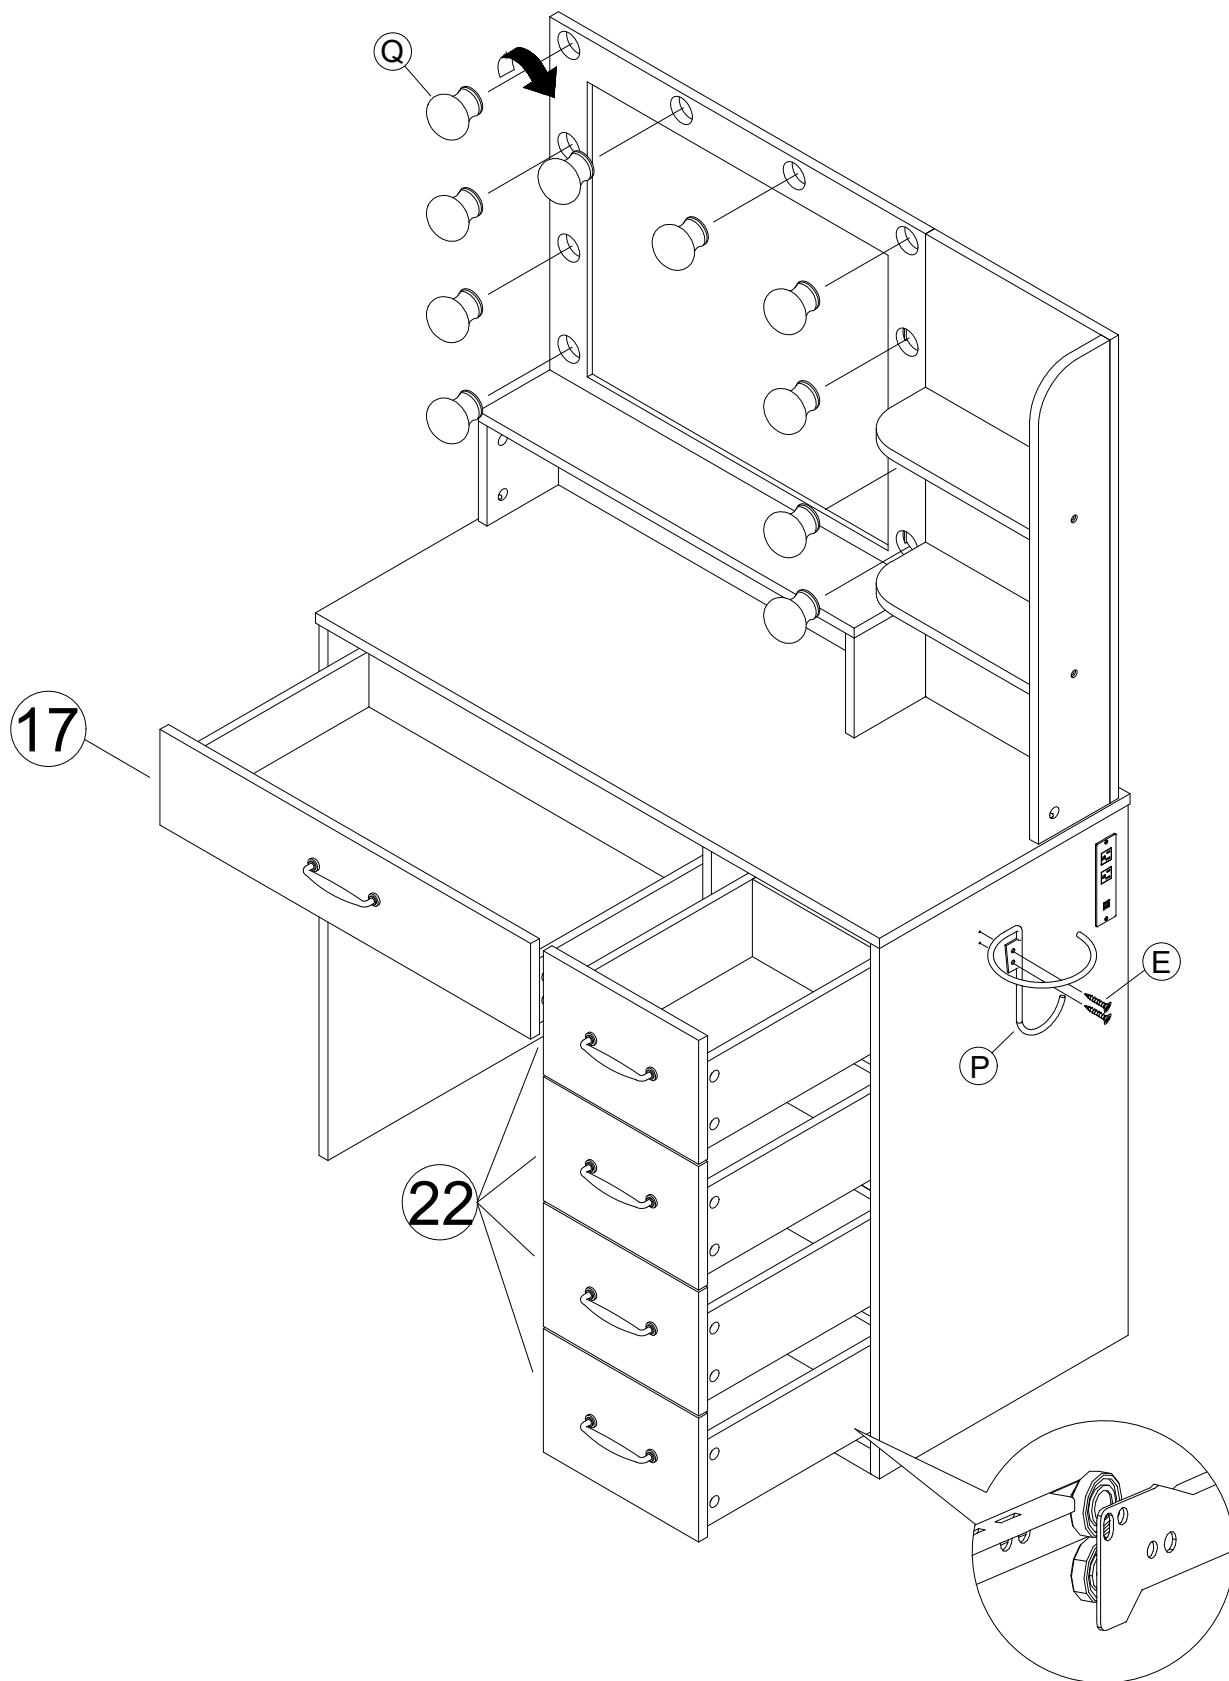



**13).ATTACH THE DRAWERS, LED LIGHTS (Q) AND HANGER (P).**

- SLIDE THE DRAWERS INTO THE SLIDERS-OUTS.
- ROTATE LED LIGHTS (Q) INTO THE HOLES IN THE MIRROR FRAME (7).
- PLACE THE HANGER (P) INTO THE HOLES IN THE MAIN BODY AND ATTACH USING 2 CREWS (E).

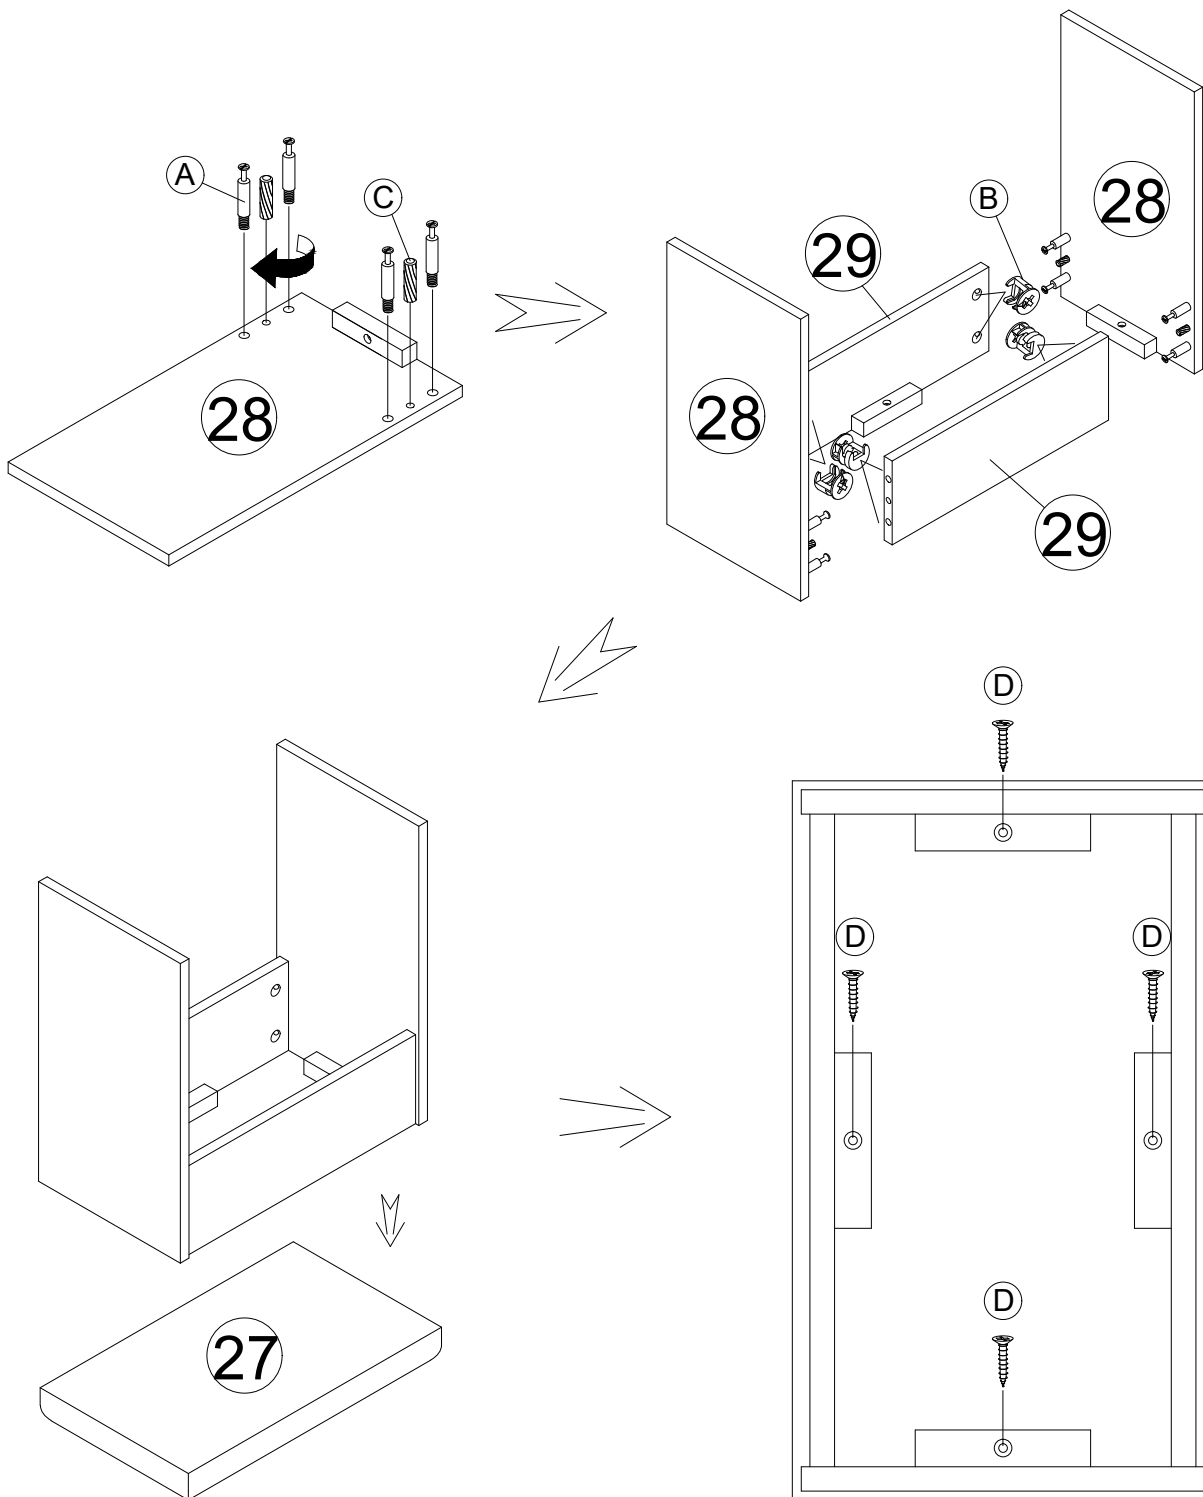

#### 14).ASSEMBLE THE STOOL.

- INSERT 4 DOWELS (C) INTO THE HOLES IN THE SIDE CHAIRS (27).
- ROTATE 8 CAM-BOLTS (A) INTO THE HOLES IN THE SIDE CHAIRS (27).
- PLACE THE CAMBOLTS (A) AND DOWELS (C) INTO THE HOLES IN THE FRONT/BACK CHAIRS (28) AND ATTACH USING 8 CAM-LOCKS (B)
- PLACE THE CHAIR BODY IN THE SEAT FRAME (27) AND ATTACH USING 4 SCREWS (D).

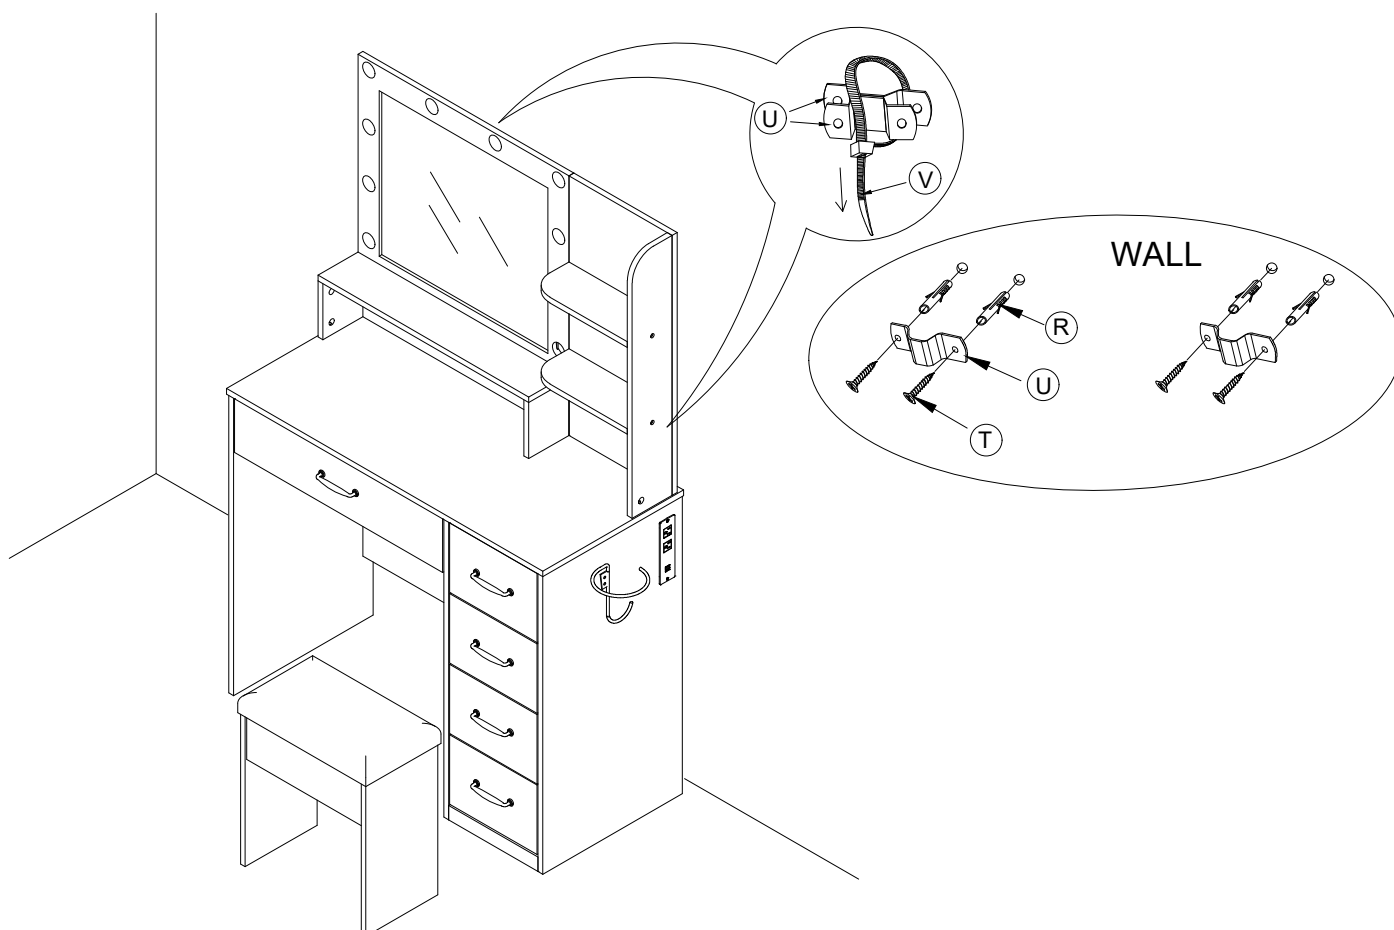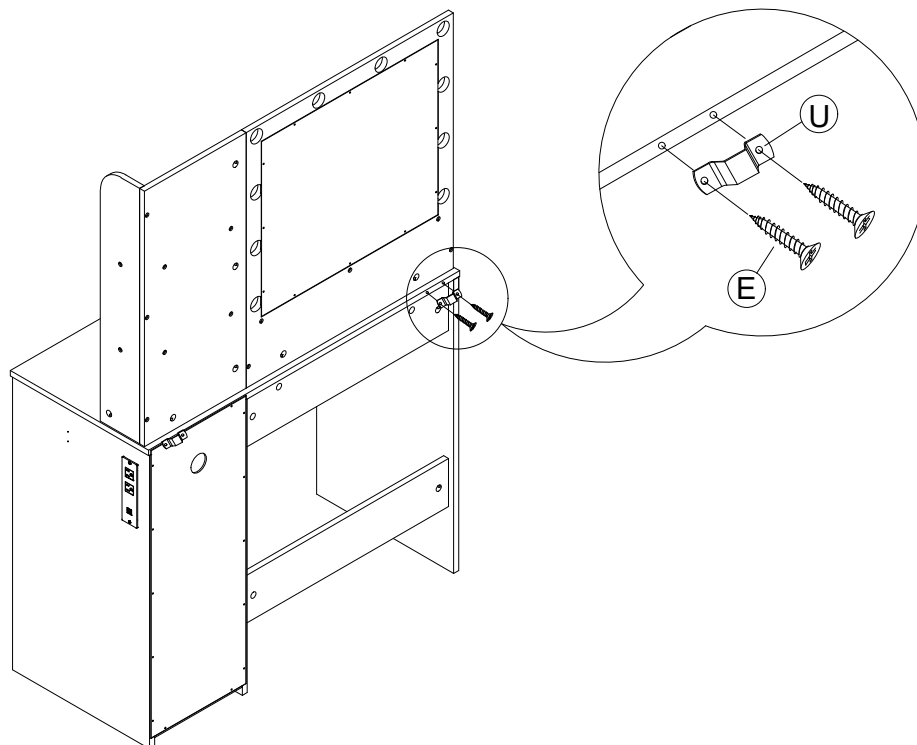

#### 15).ASSEMBLE THE ANTI-TIP HARDWARE.

- ATTACH HOOKS (U) USING 2 SCREWS (E) IN THE PREDRILLED HOLES OF REAR TOP PANEL (1).
- DRILL 4 HOLES INTO THE WALL, PLEASE REFER TO THE REAR TOP FRAME HOLE DISTANCE AND HEIGHT.
- PUT 4 ANCHORS (R) INTO THE HOLES IN THE WALL, AND ROTATE 4 SCREWS (T) INTO THE GECKOS (R).
- CONNECT THE TWO HOOKS (U) WITH A PLASTIC BELT (V).