



Assembly Instructions

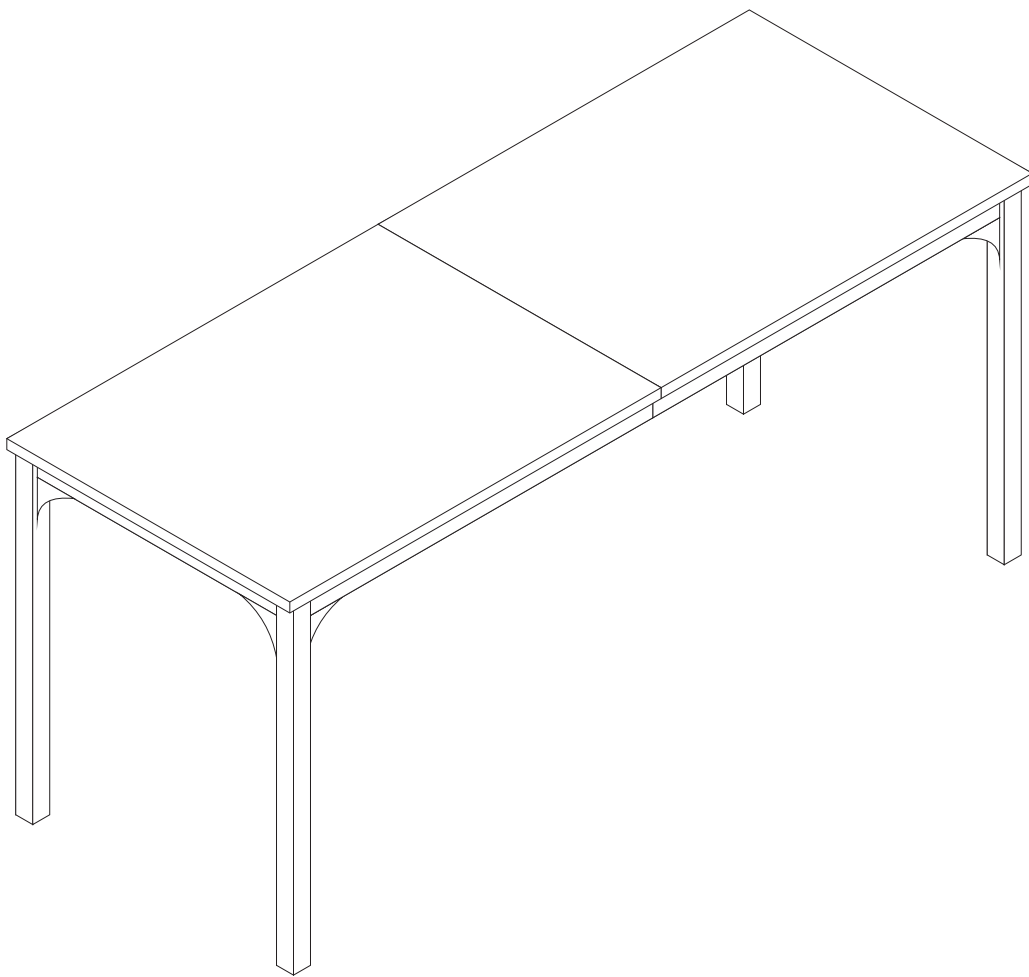

Contact Us




We're here to help you.

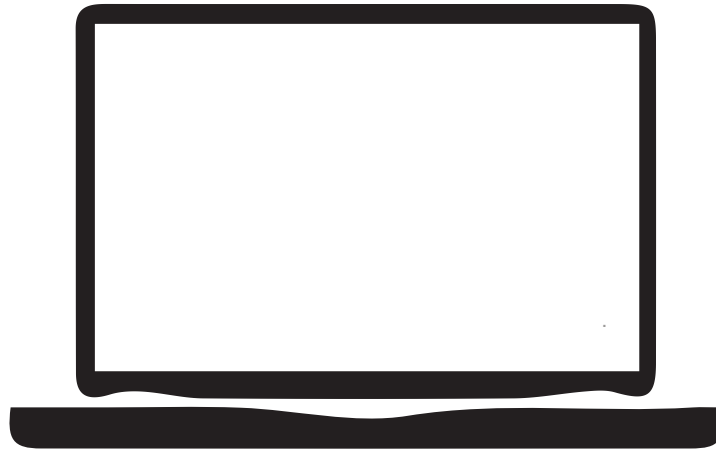

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

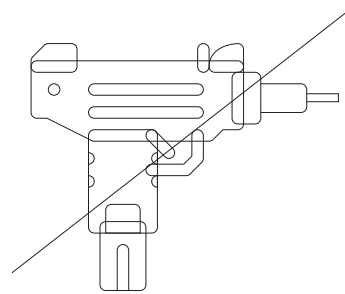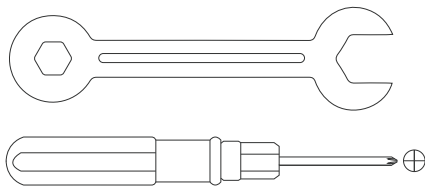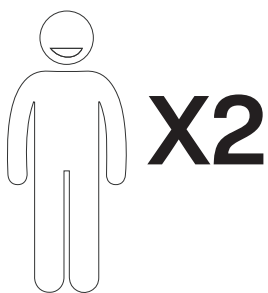



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

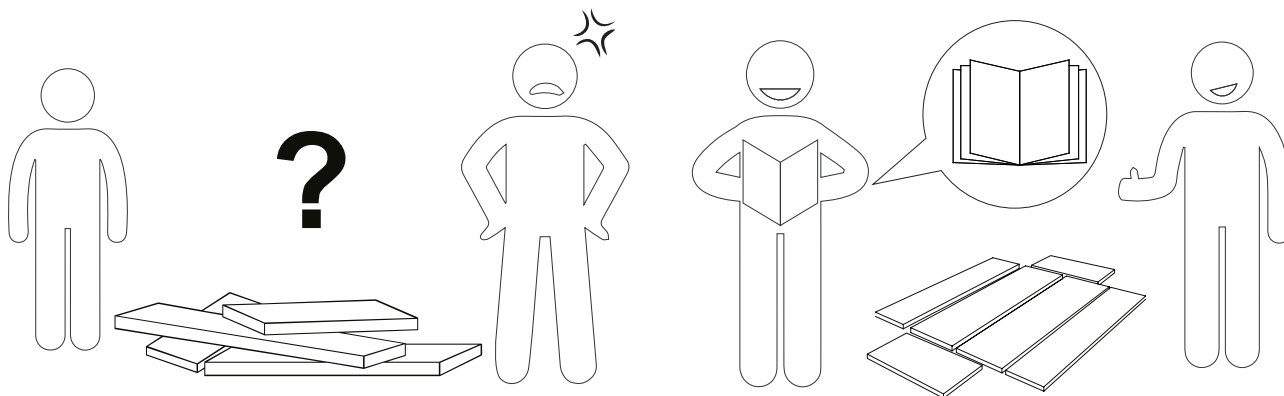

Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.

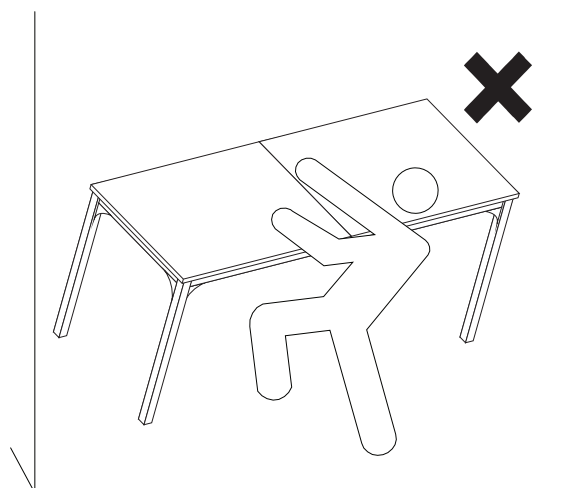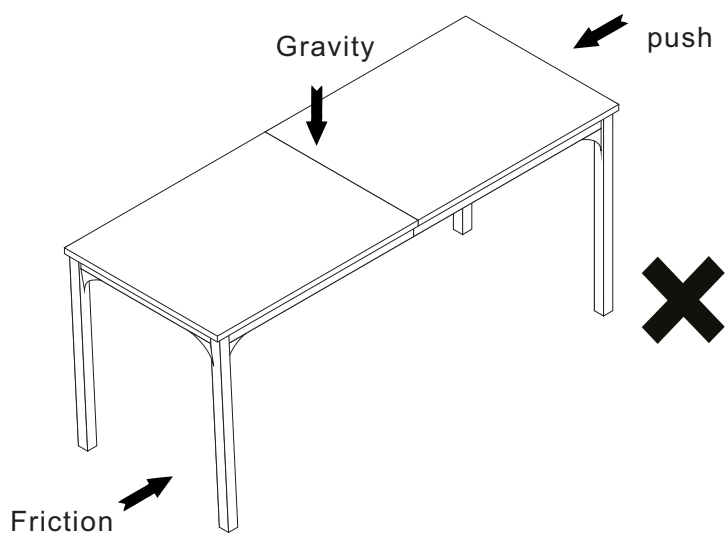






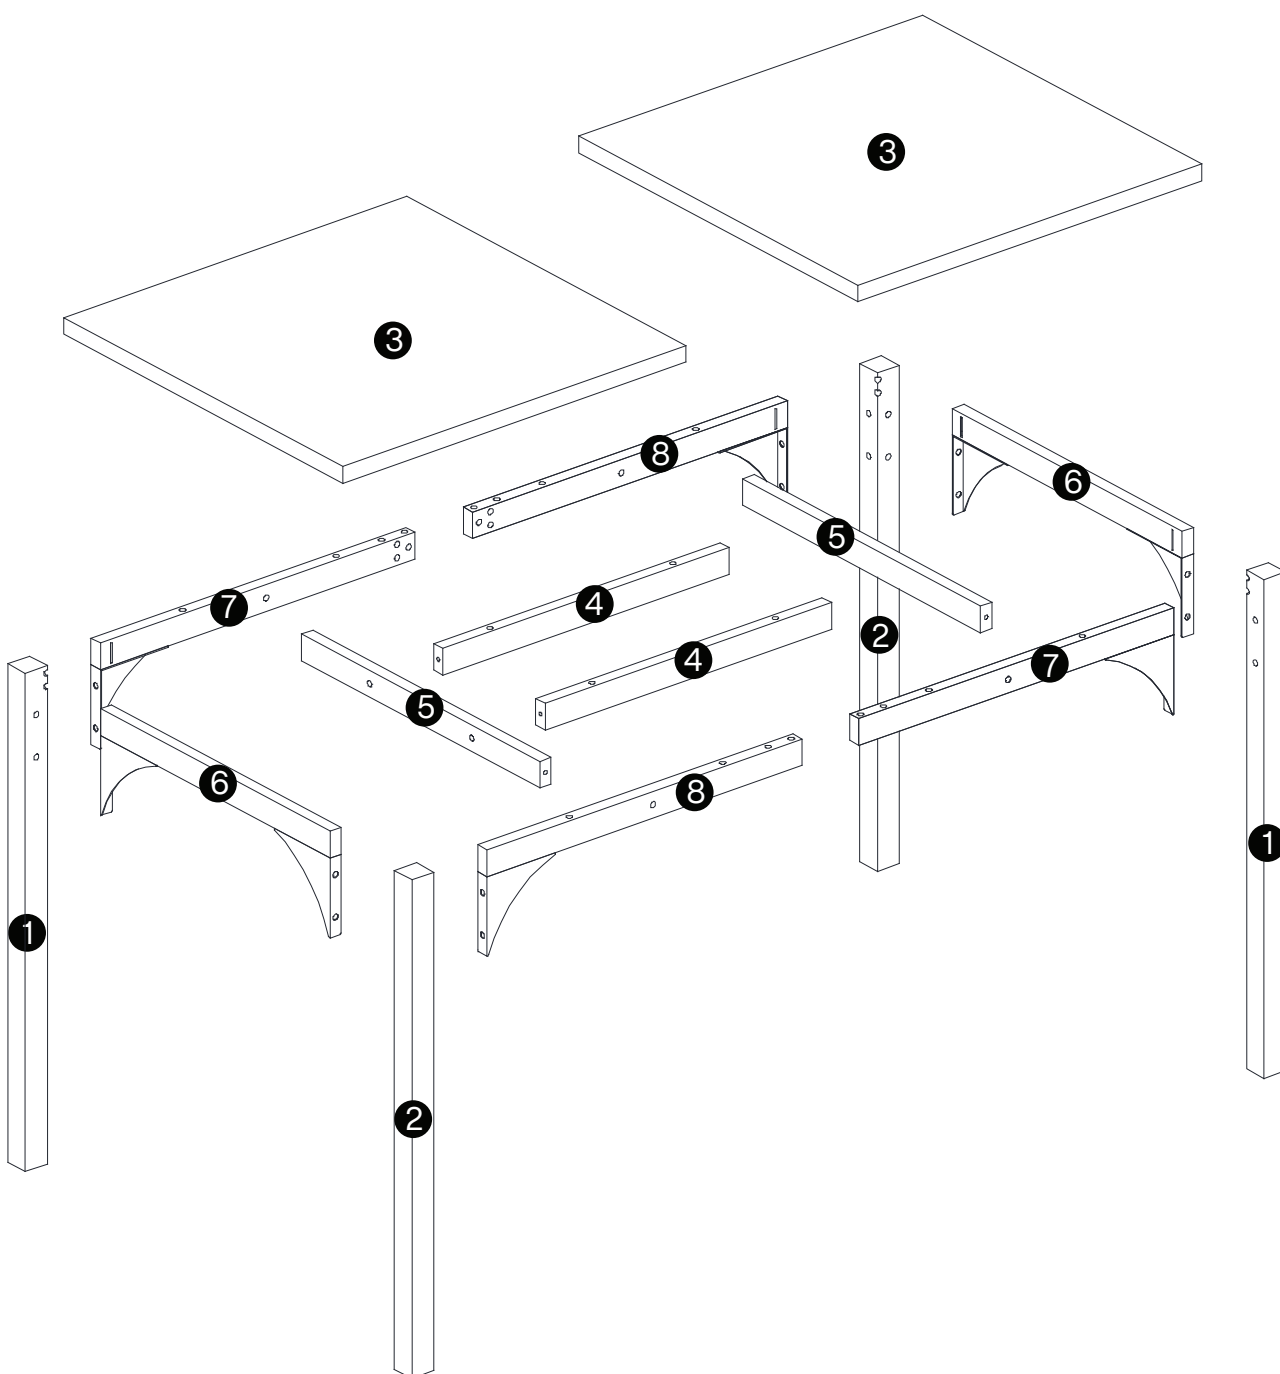







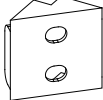

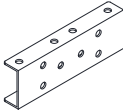

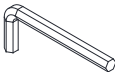
⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.


Parts List

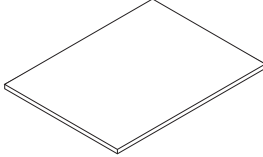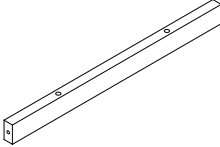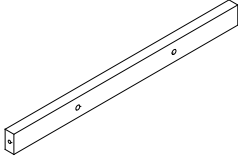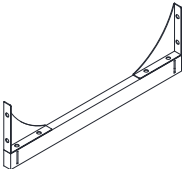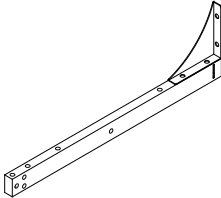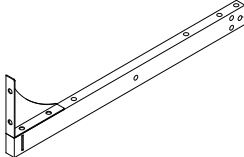


 <p>1 2 pcs</p>	 <p>2 2 pcs</p>	 <p>3 2 pcs</p>	 <p>4 2 pcs</p>	 <p>5 2 pcs</p>
 <p>6 2 pcs</p>	 <p>7 2 pcs</p>	 <p>8 2 pcs</p>		


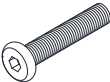
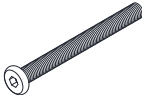
Hardware List

A	B	C	D	E	F	G	H
 <p>M8x40mm</p>	 <p>M6x60mm</p>	 <p></p>	 <p></p>	 <p>M8x20mm</p>	 <p></p>	 <p>M4</p>	 <p>M5</p>
16 pcs	12 pcs	4 pcs	4 pcs	36 pcs	2 pcs	1 pc	1 pc

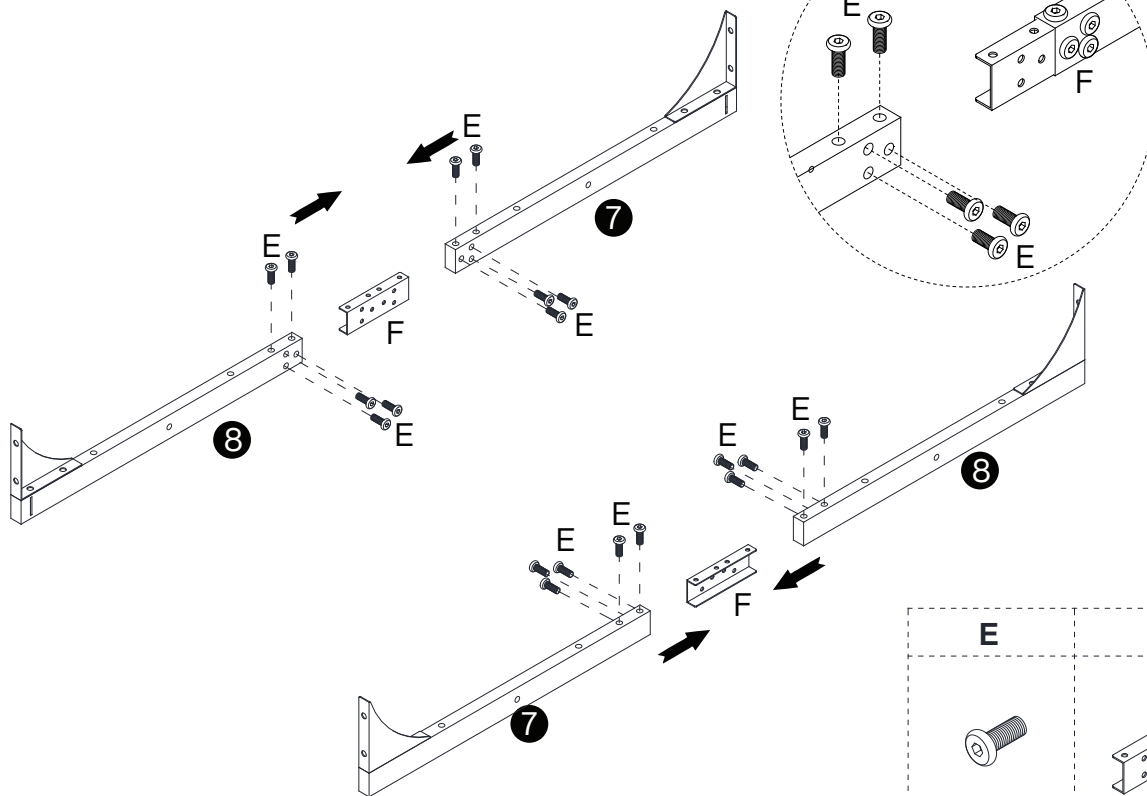
1








A
 M8x40mm
B
 M6x60mm
G
 M4

E	F	H
		
M8x20mm 20 pcs	2 pcs	M5 1 pc

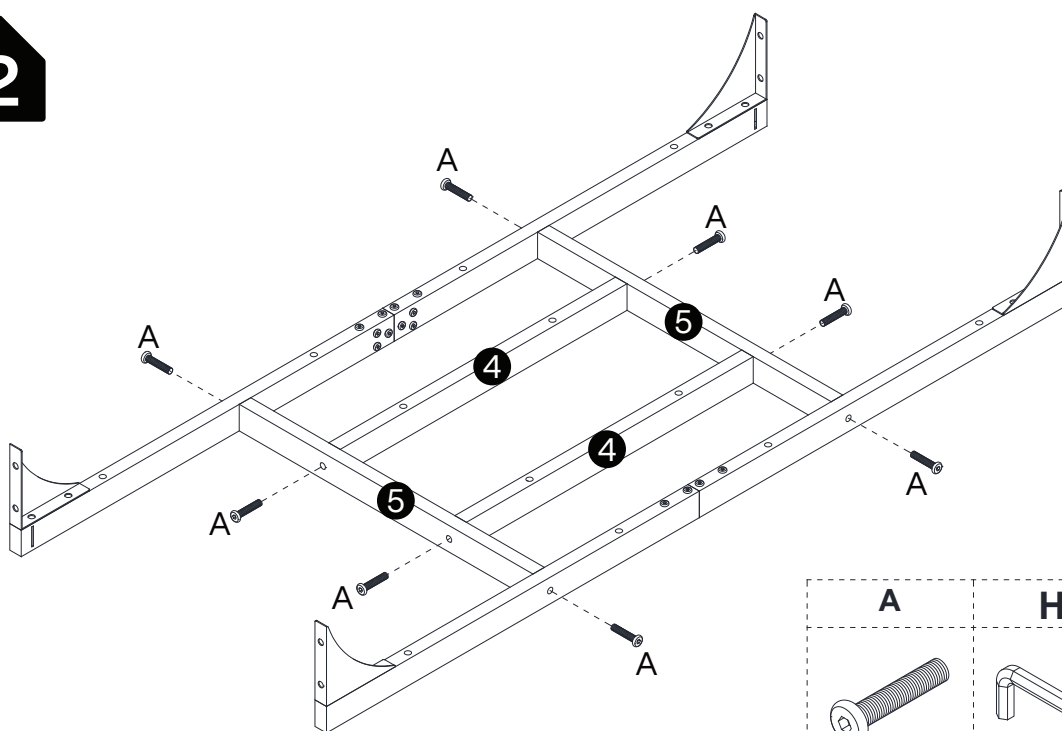
2




B
 M6x60mm
E
 M8x20mm
G
 M4



A	H
	
M8x40mm 8 pcs	M5 1 pc




3

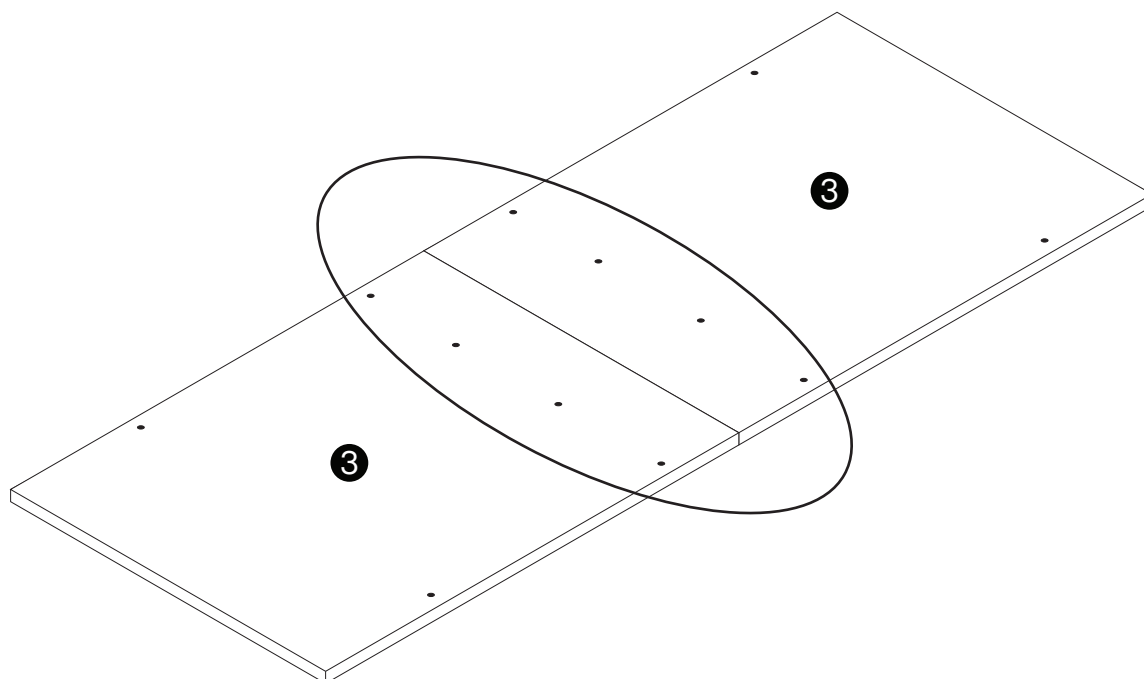

4

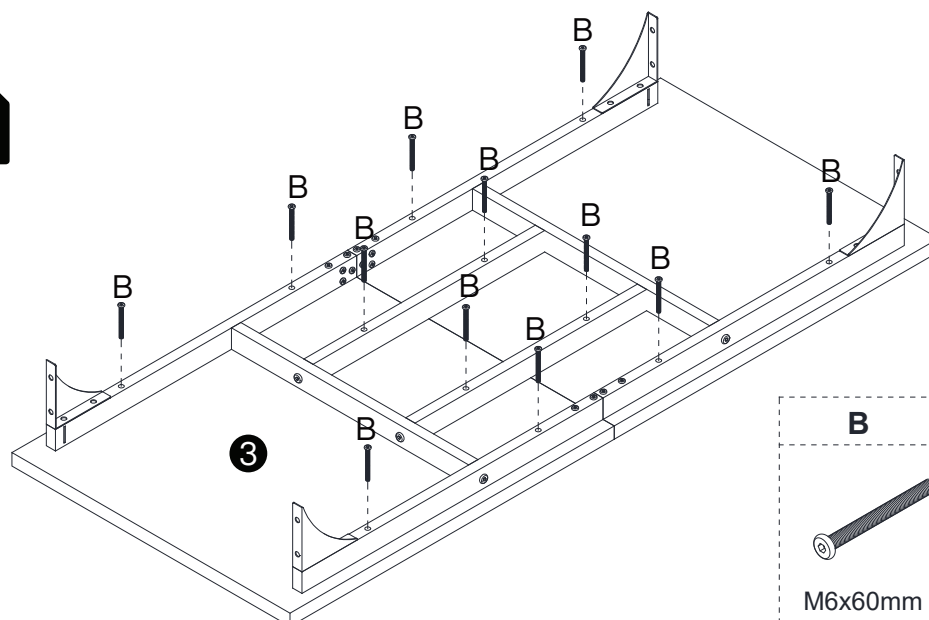



B	G
	
M6x60mm 12 pcs	M4 1 pc

 M8x40mm
 M8x20mm
 M5




Friendly Reminder: For easy installation of the desktop holes, please refrain from fully tightening all screws on the desktop initially.

First, screw them halfway in until all screws are attached into the desktop board. Then proceed to tighten all the screws evenly.


5

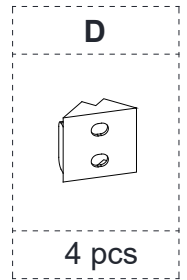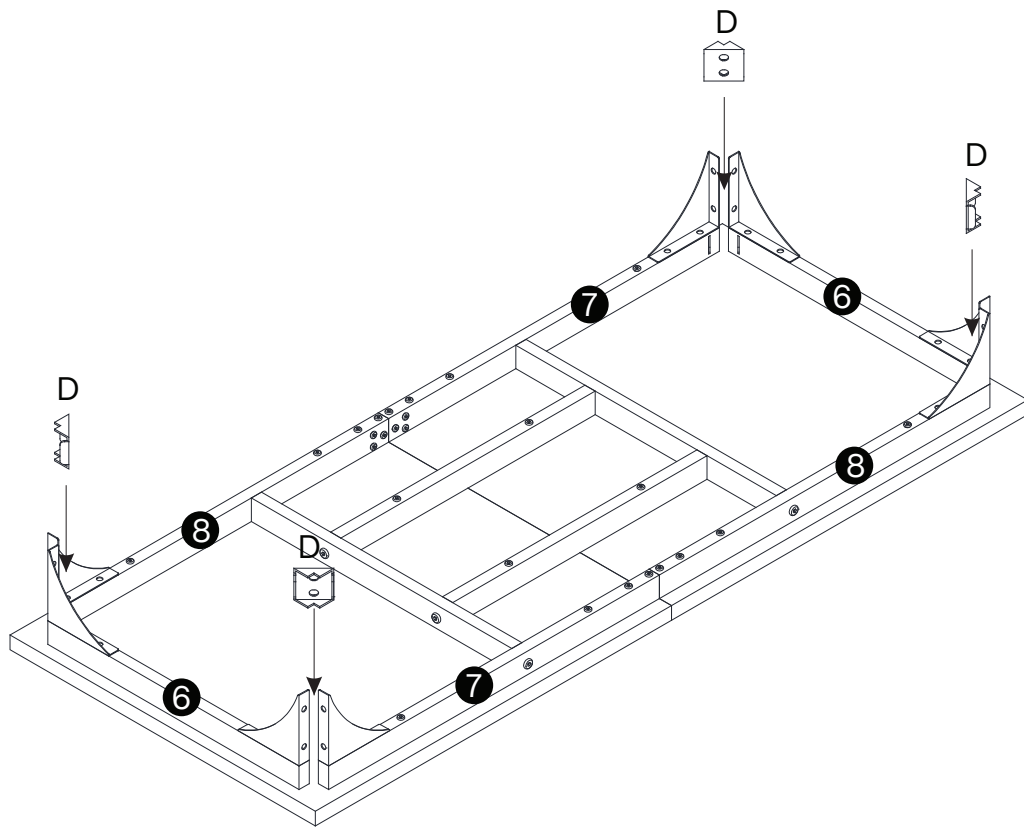

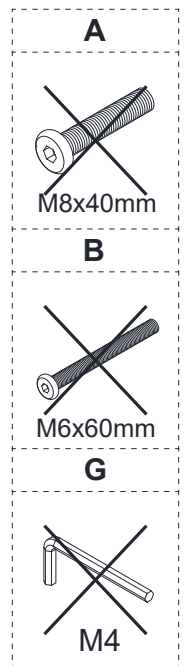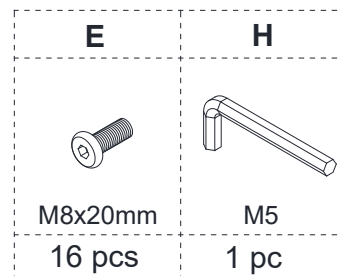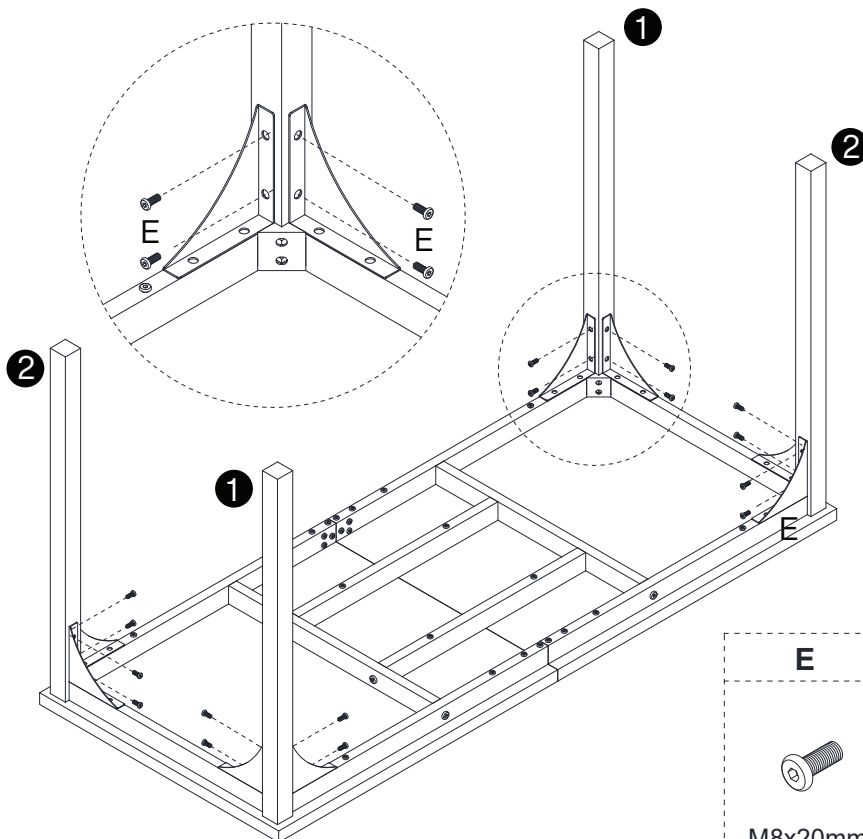




6

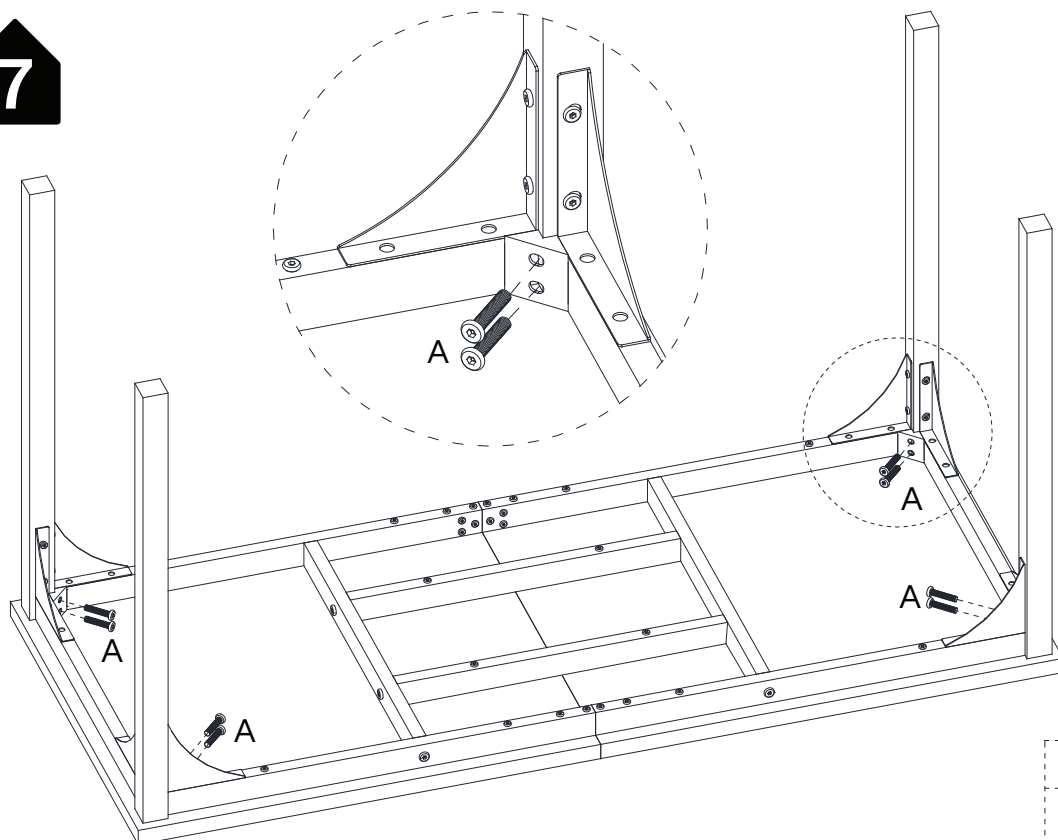


7




E

M8x20mm
B

M6x60mm
G

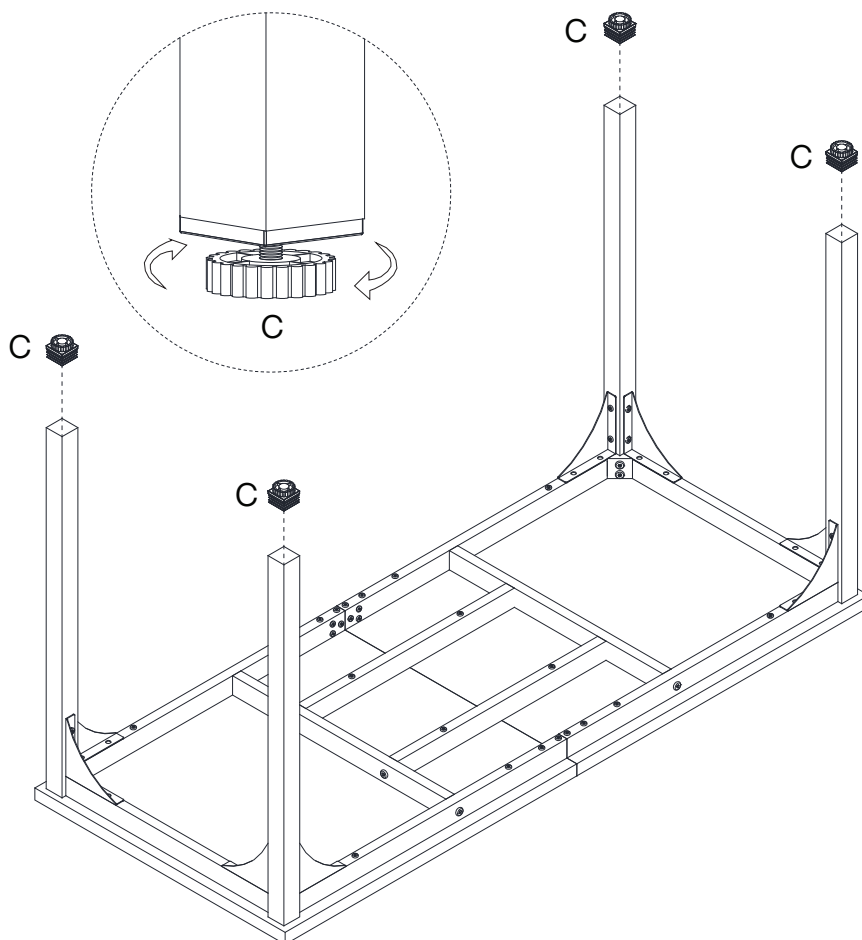M4

A	H
	
M8x40mm	M5
8 pcs	1 pc

8



C

4 pcs

Thank you for your support!

