



Installation Instruction

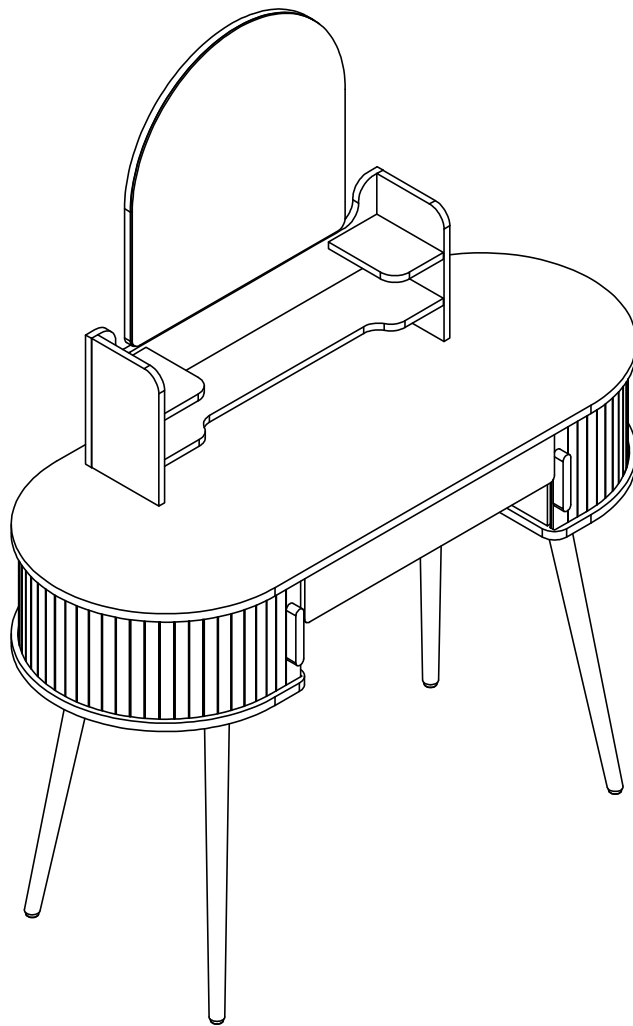

Assembling

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation




100

lbs table top

| 35

lbs per

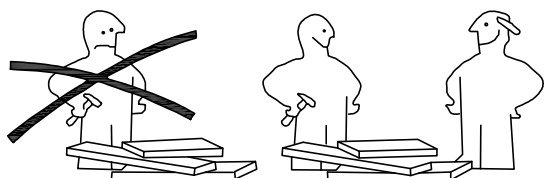


What' included

Code	Description	Qty
A	Cam Bolt M6X35MM	23
B	Cam Lock 15X10MM	23
C	Wooden Dowel M8X30MM	22
D	Screw M4X40MM	30
E	Screw M3.5X14MM	2
F	Screw M6X12MM	16
G	L-shaped metal sheet	2
H	Wrench M4X55MM	1
I	Adjustable Foot	4
J	Cam Bolt M4X10MM	6
K	Anchor	2
L	Solid wood handle	2
M	Circular hole Decals	23
N	Screw M3.5X14MM	6
O	Screw M6X25MM	8
P	Two-way rail	2

The Hardwares

Ⓐ




Ⓑ



Ⓒ



Ⓓ



Ⓔ



Ⓕ



Ⓖ



Ⓗ



Ⓘ




Ⓙ



Ⓚ



Ⓛ




Ⓜ




Ⓝ



Ⓞ



Ⓟ




IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully).






Included Accessories

Code	Description	Qty
1	Cabinet Top	1
2	Bottom Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Back panel	1
6	Reinforcing plate	2
7	Coaming panel	2
8	Table legs	4
9	Drawer back board	1
10	Drawer panel	1
11	Drawer side panel	1
12	Drawer side panel	1
13	Drawer bottom board	1
14	Deck plate	1
15	Left deck plate	1
16	Right deck plate	1
17	The upper left side panel	1
18	The upper right side panel	1
19	The upper back panel	1
20	Mirror	1
21	Connecting rod	2











The Accessoriess

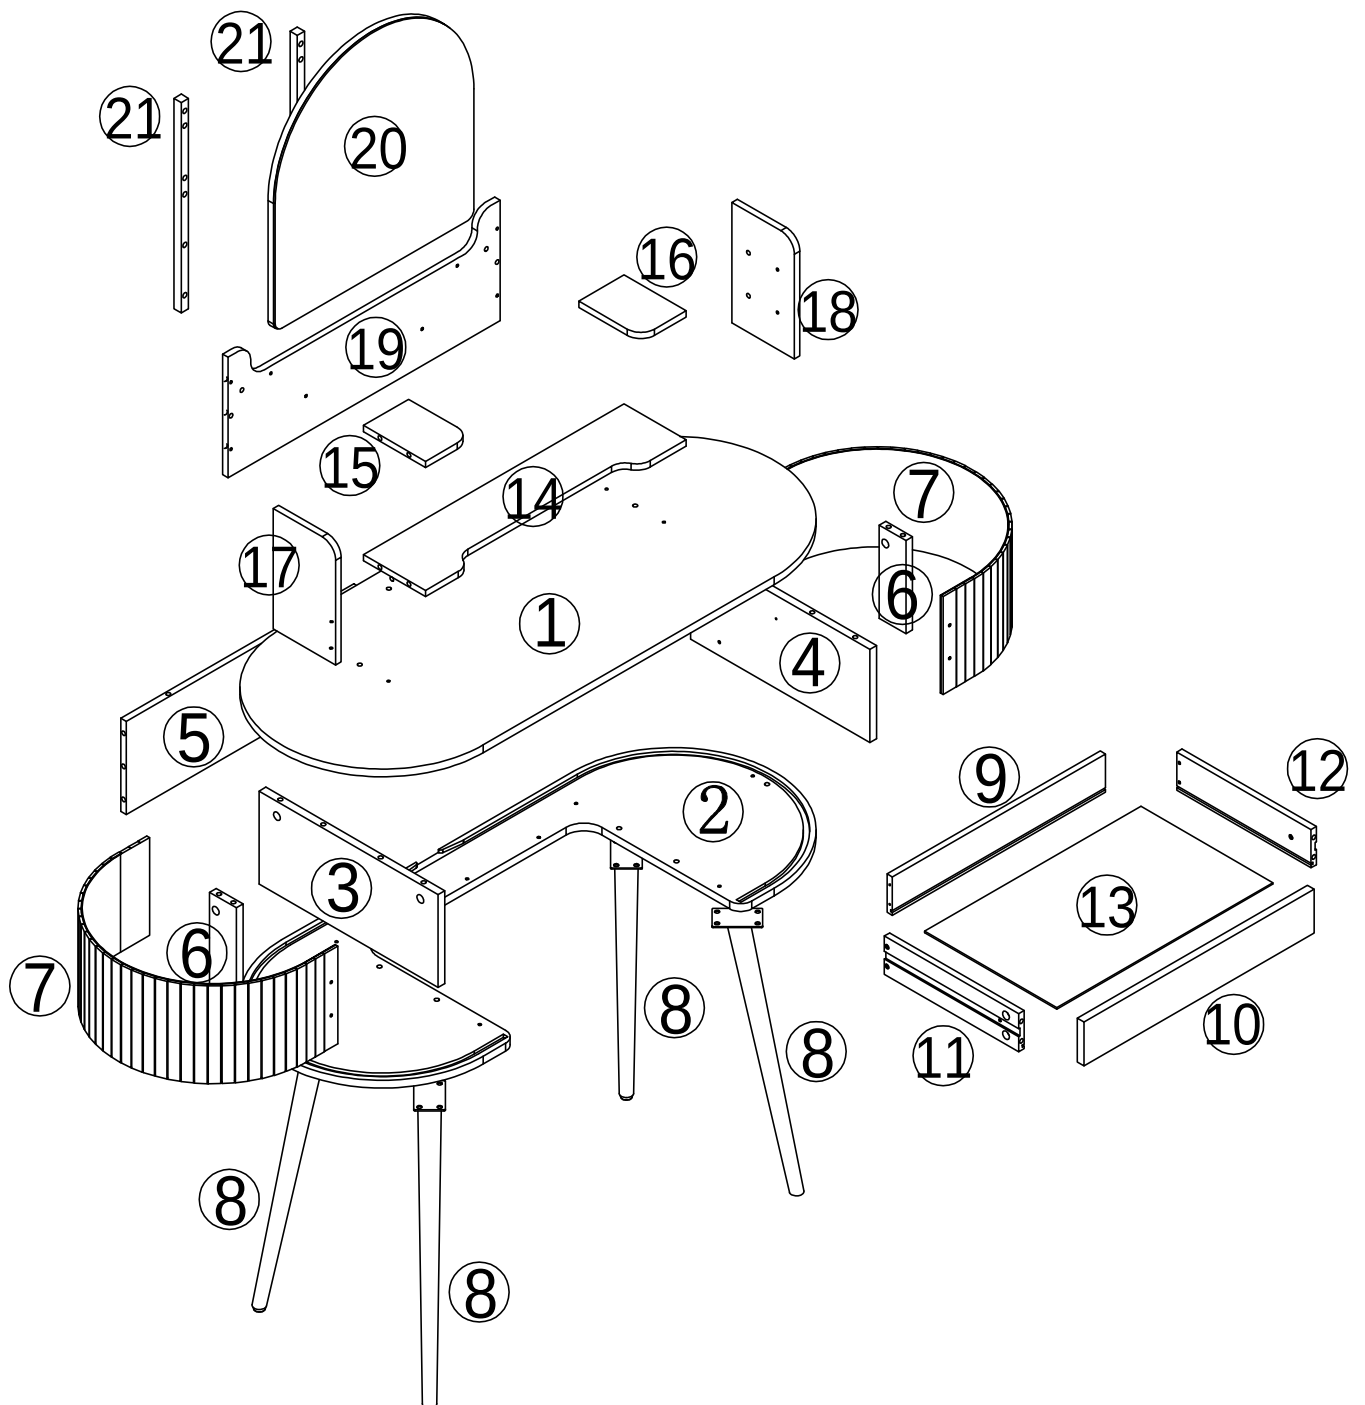





Step 1

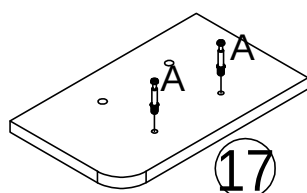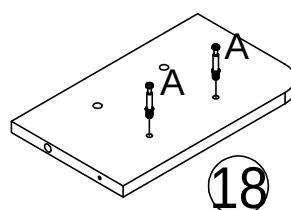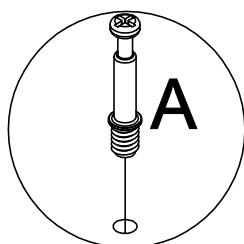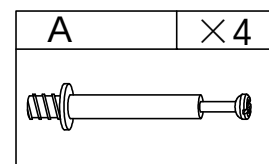




Step 2

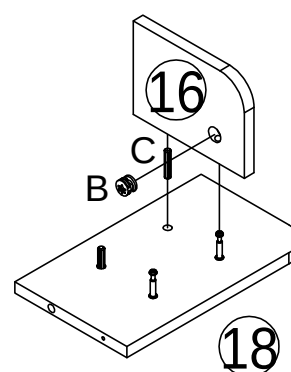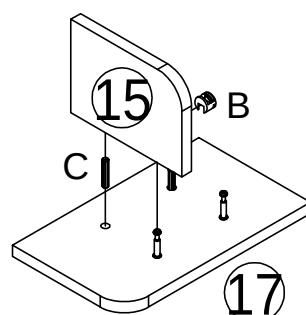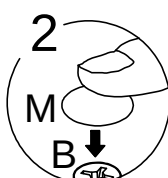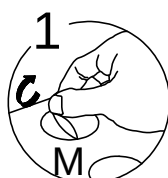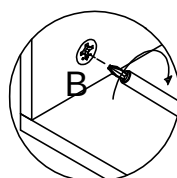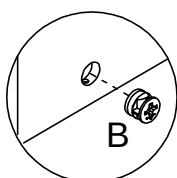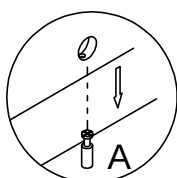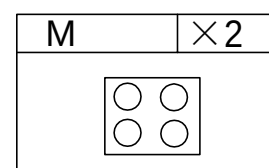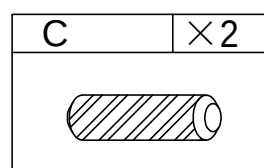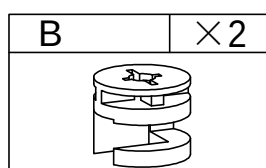


Step 3

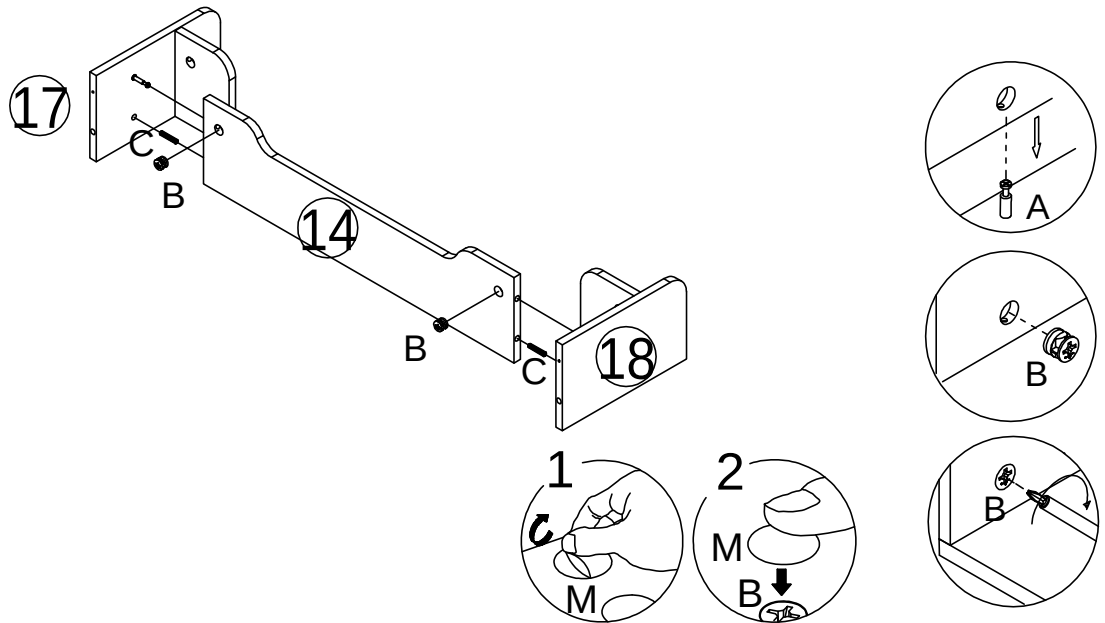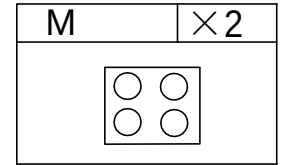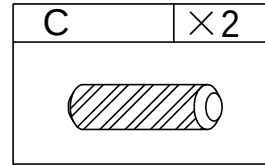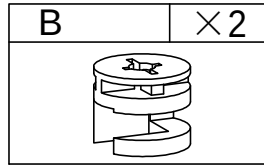


Step 4

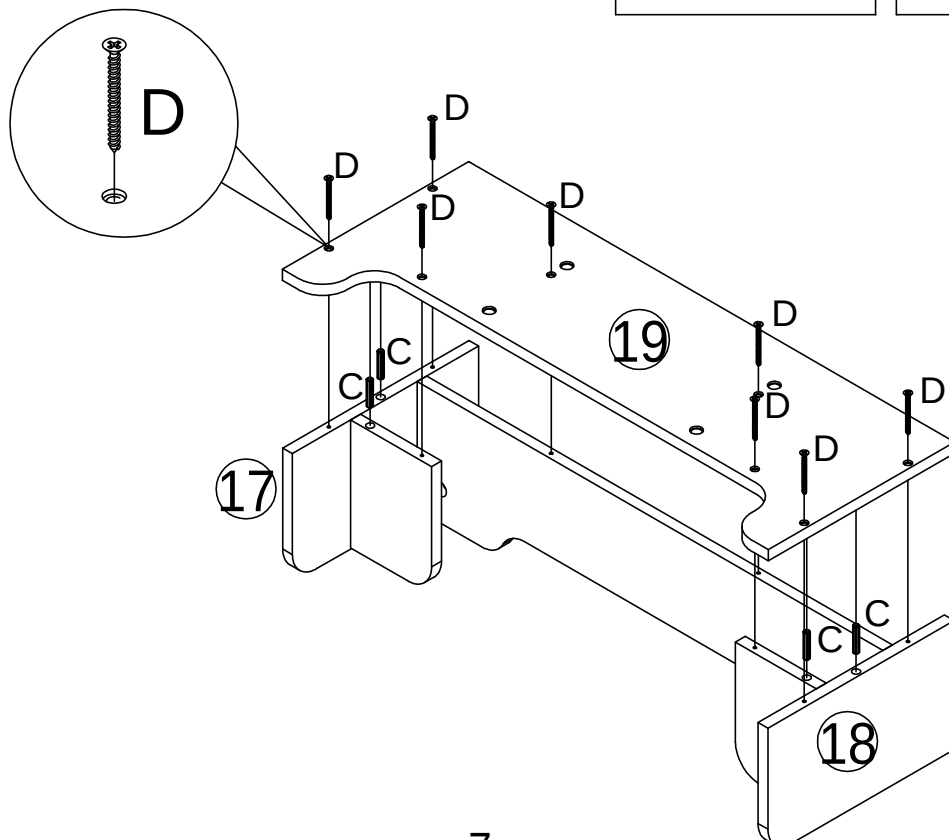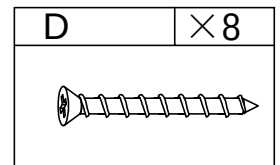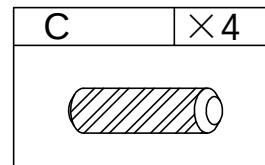




Step 5

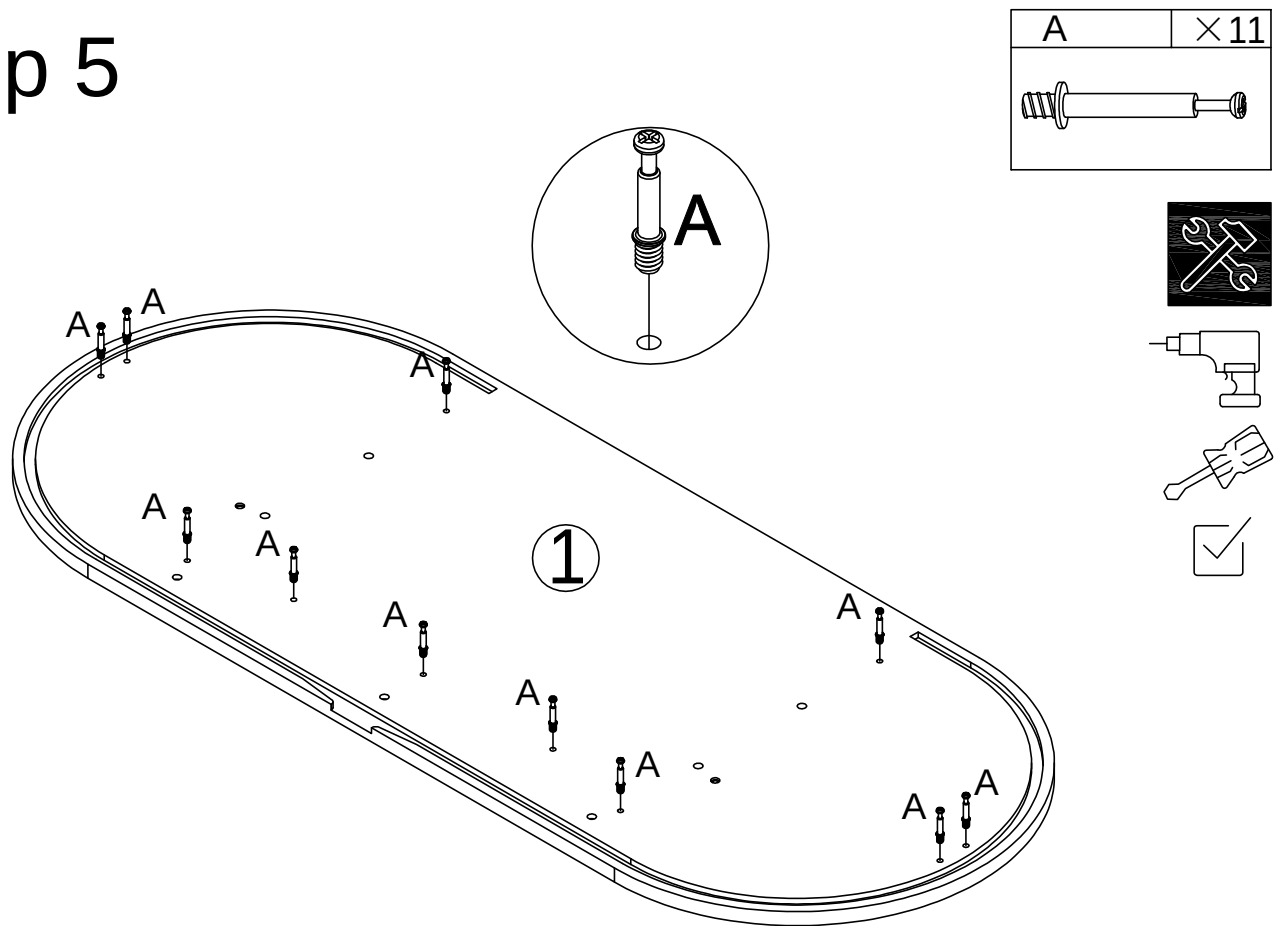









Step 6

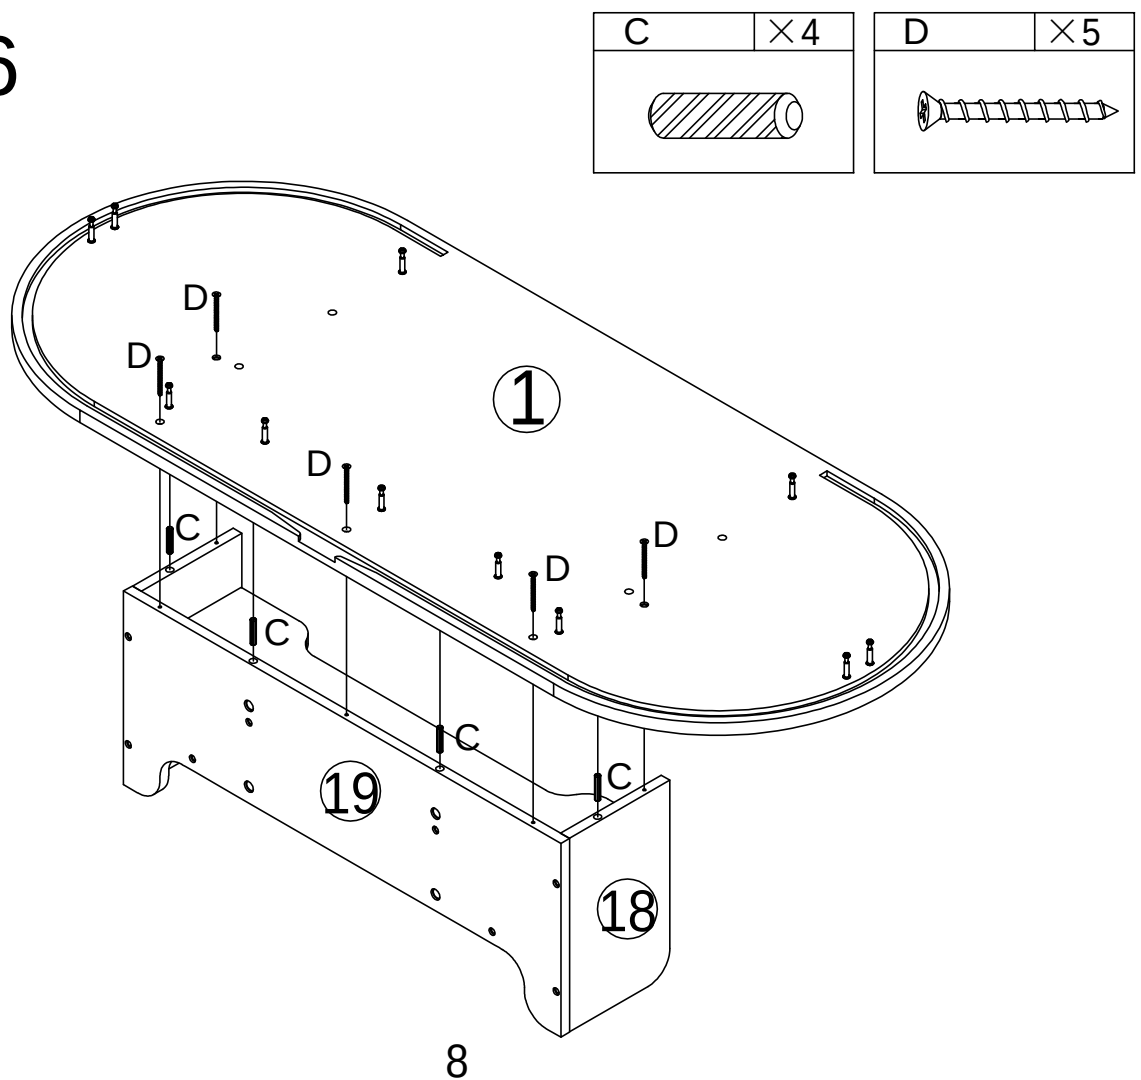










Step7

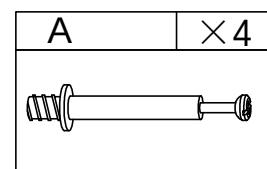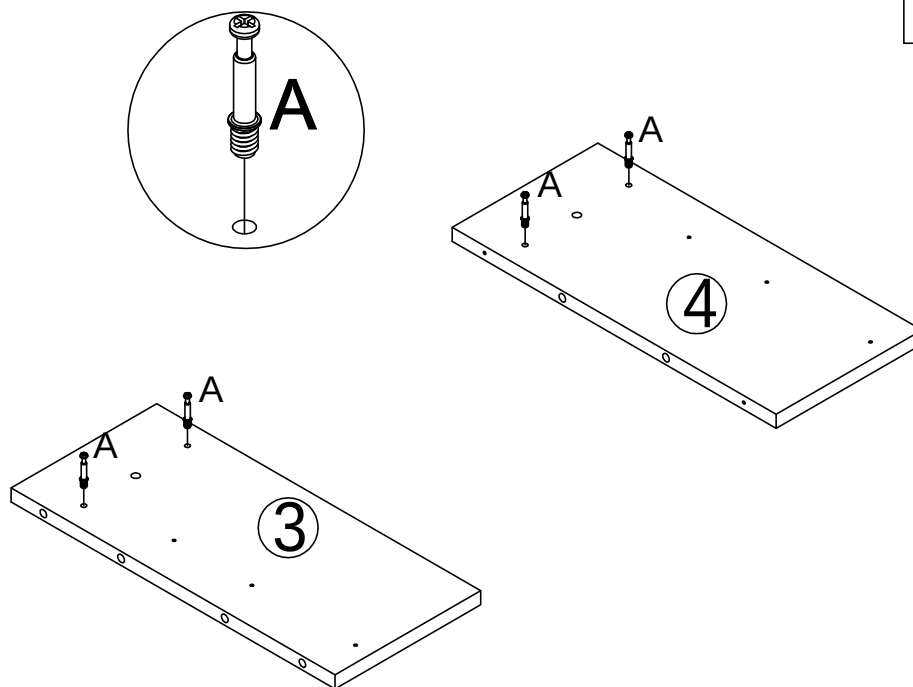







Step8

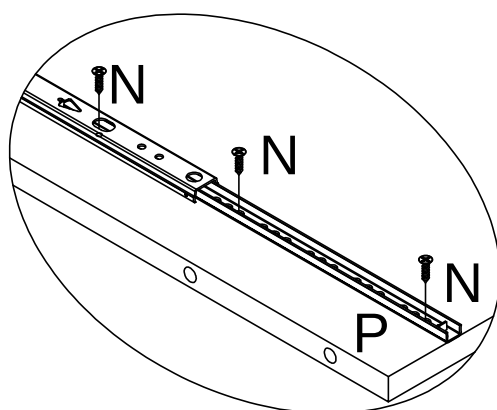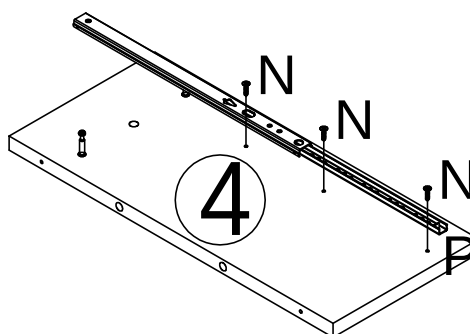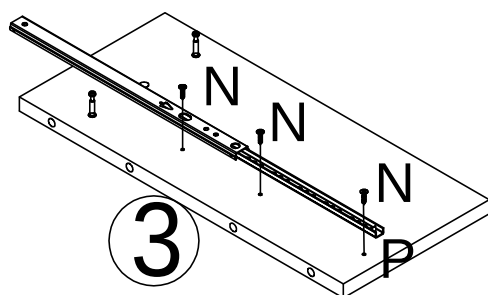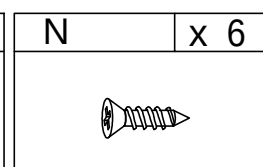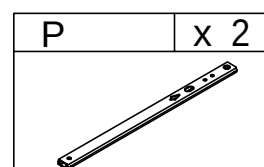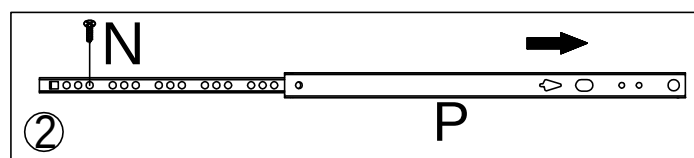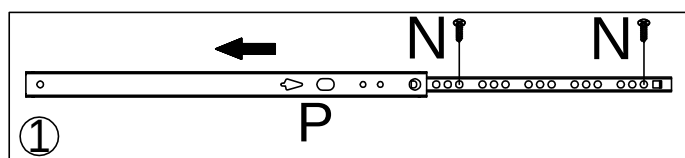

Step9

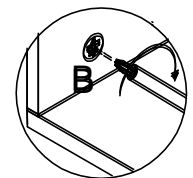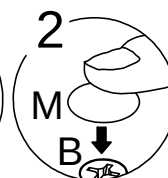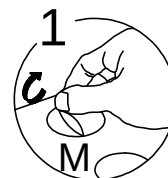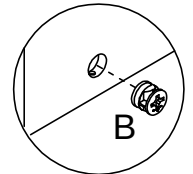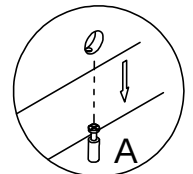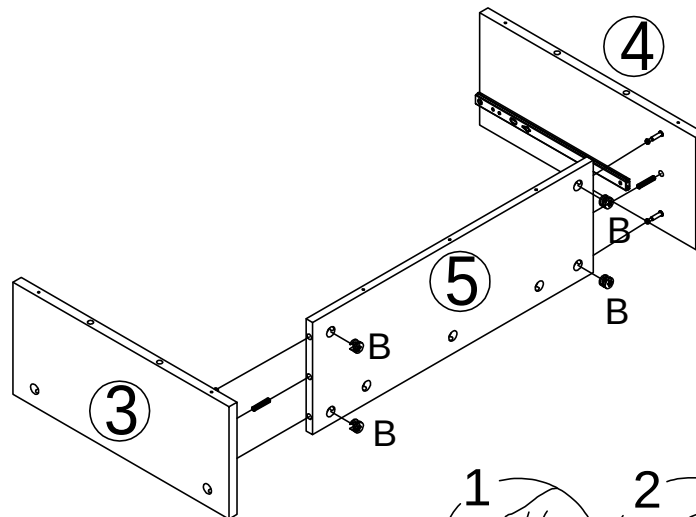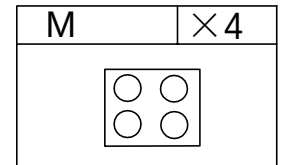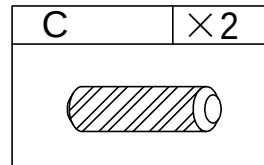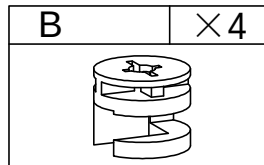


Step10

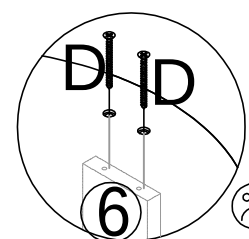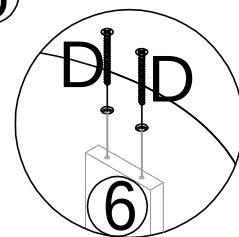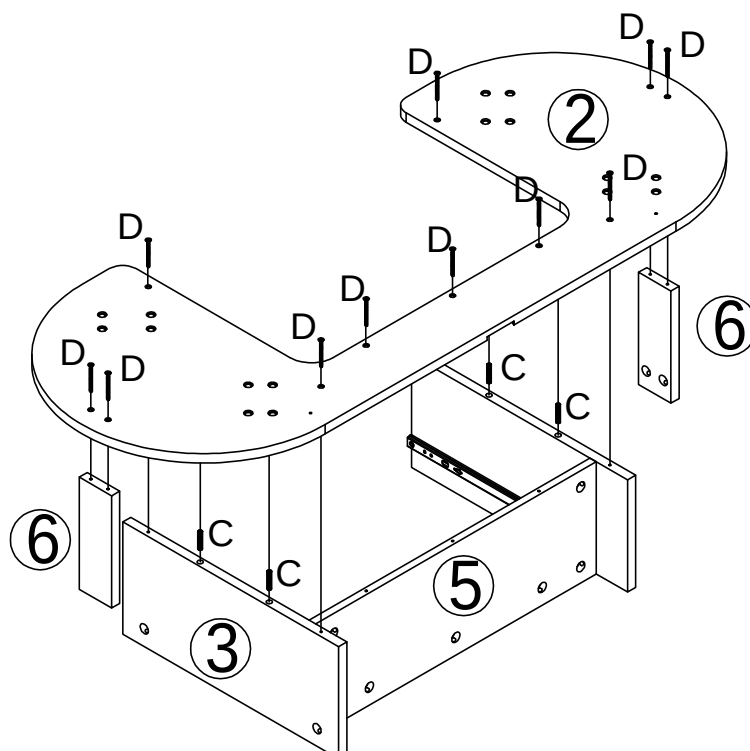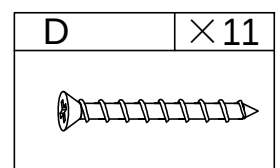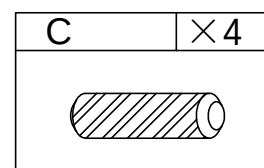


Step11

H	×1	F	×16
		 M6*12	

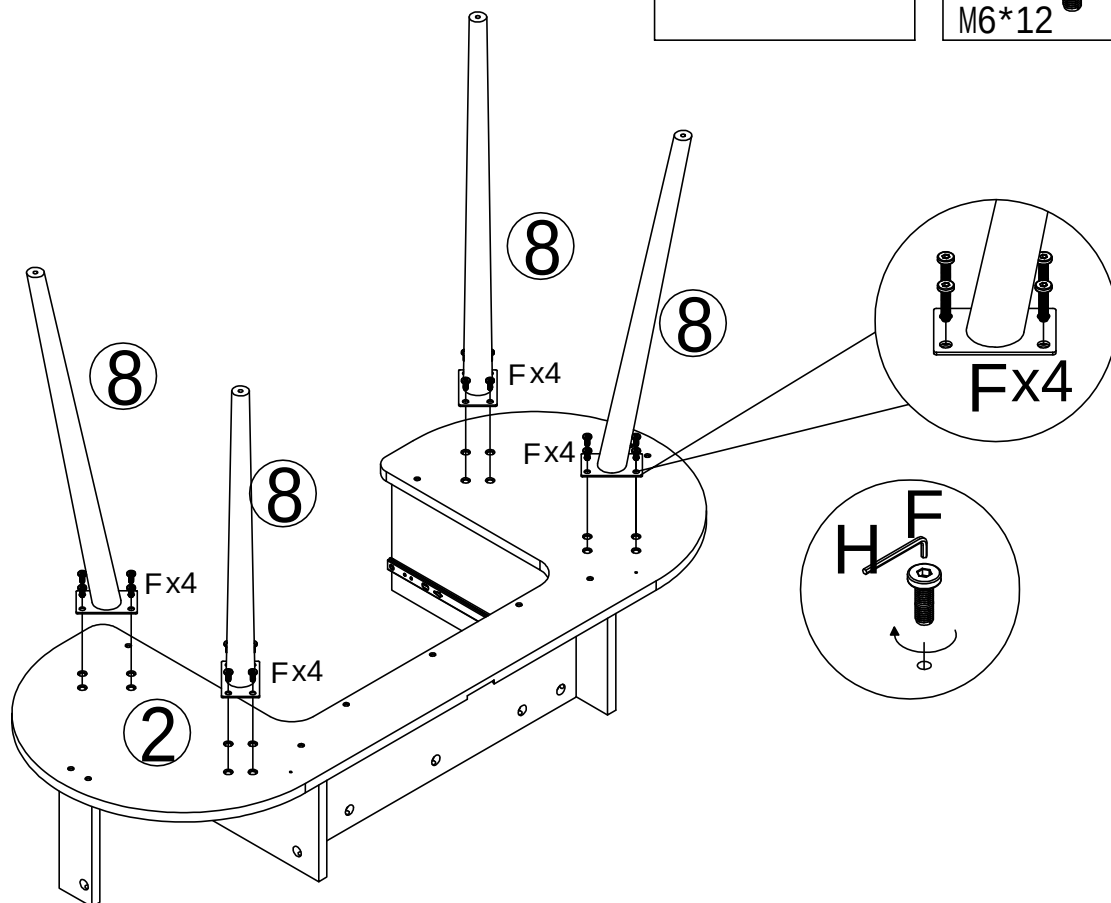


Step12



E	×2	G	×2	I	×4
					

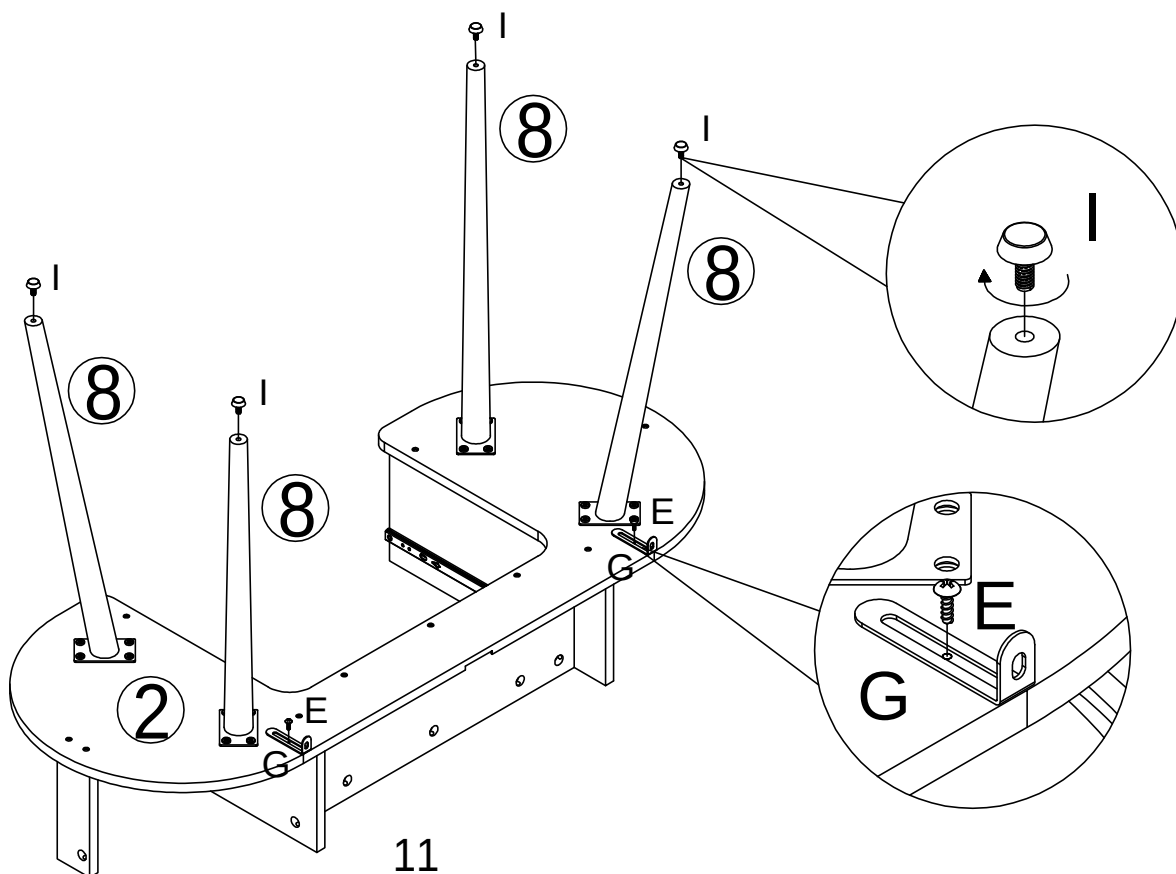


Step13

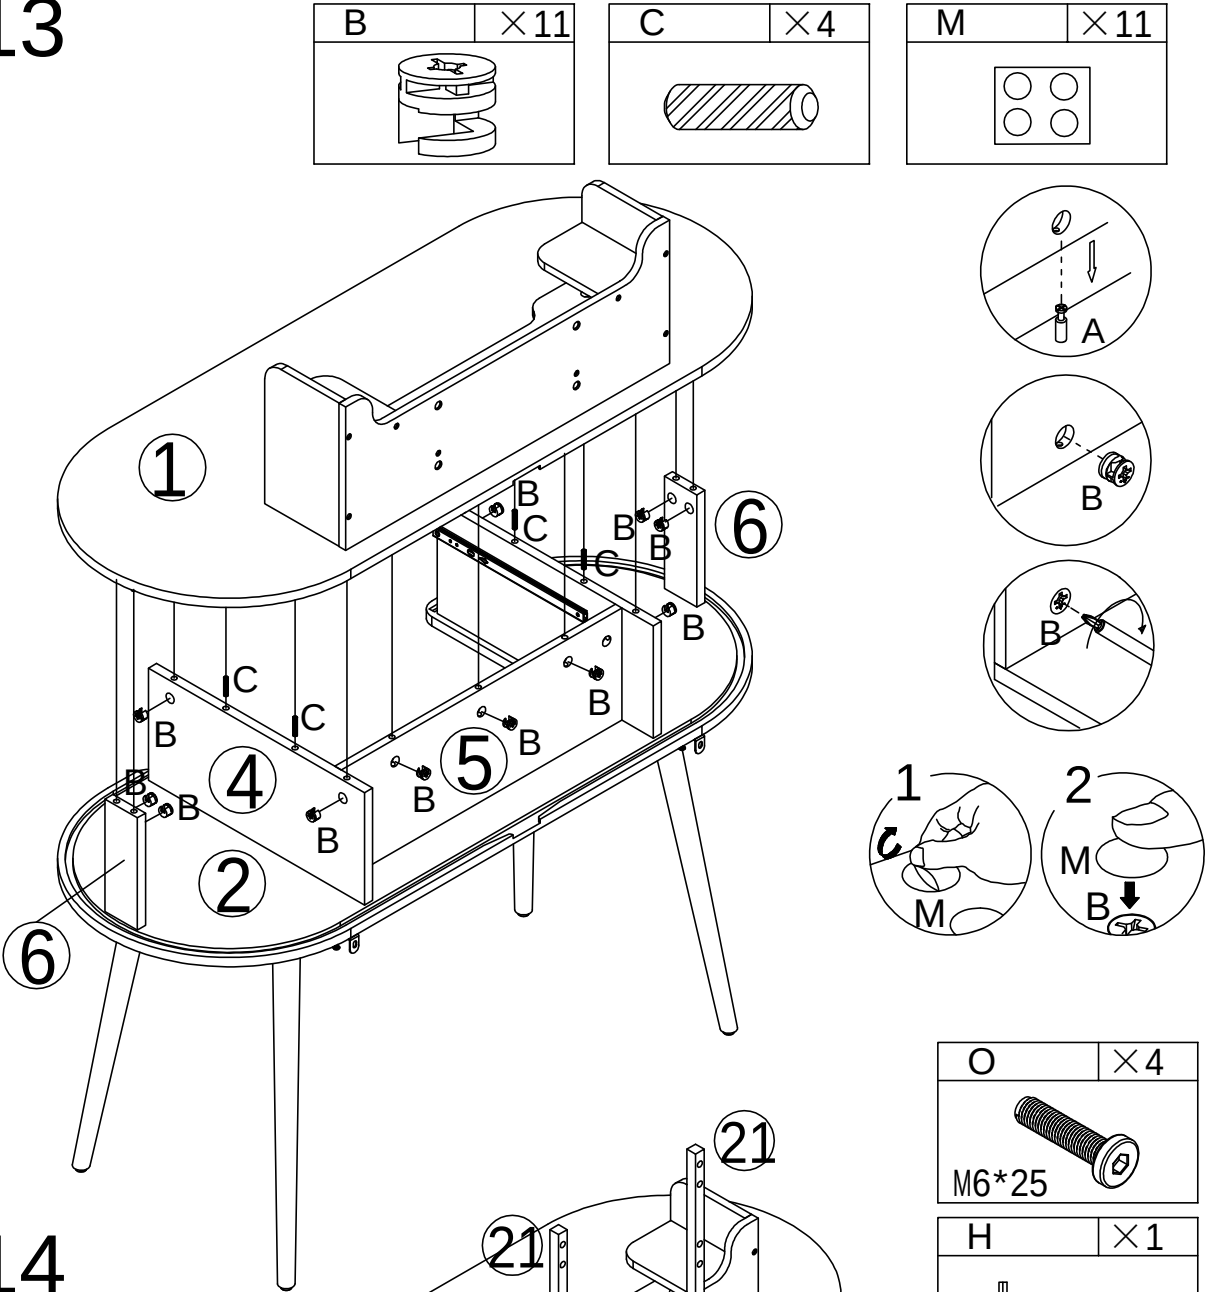



Step14

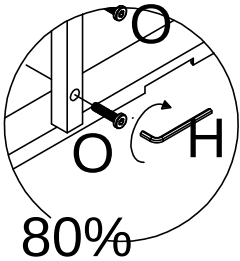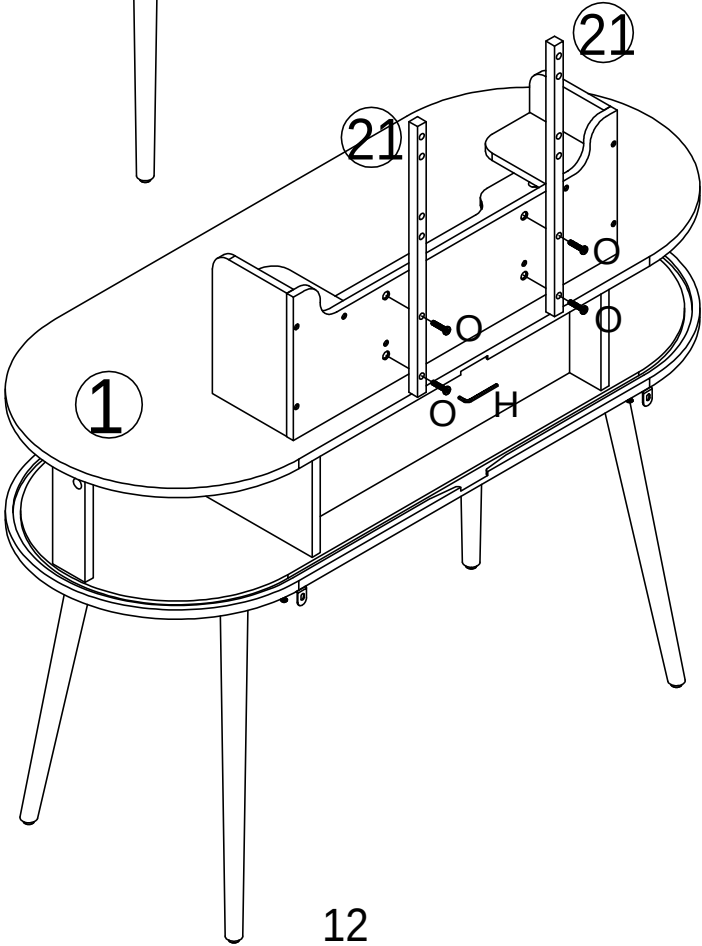




Step15

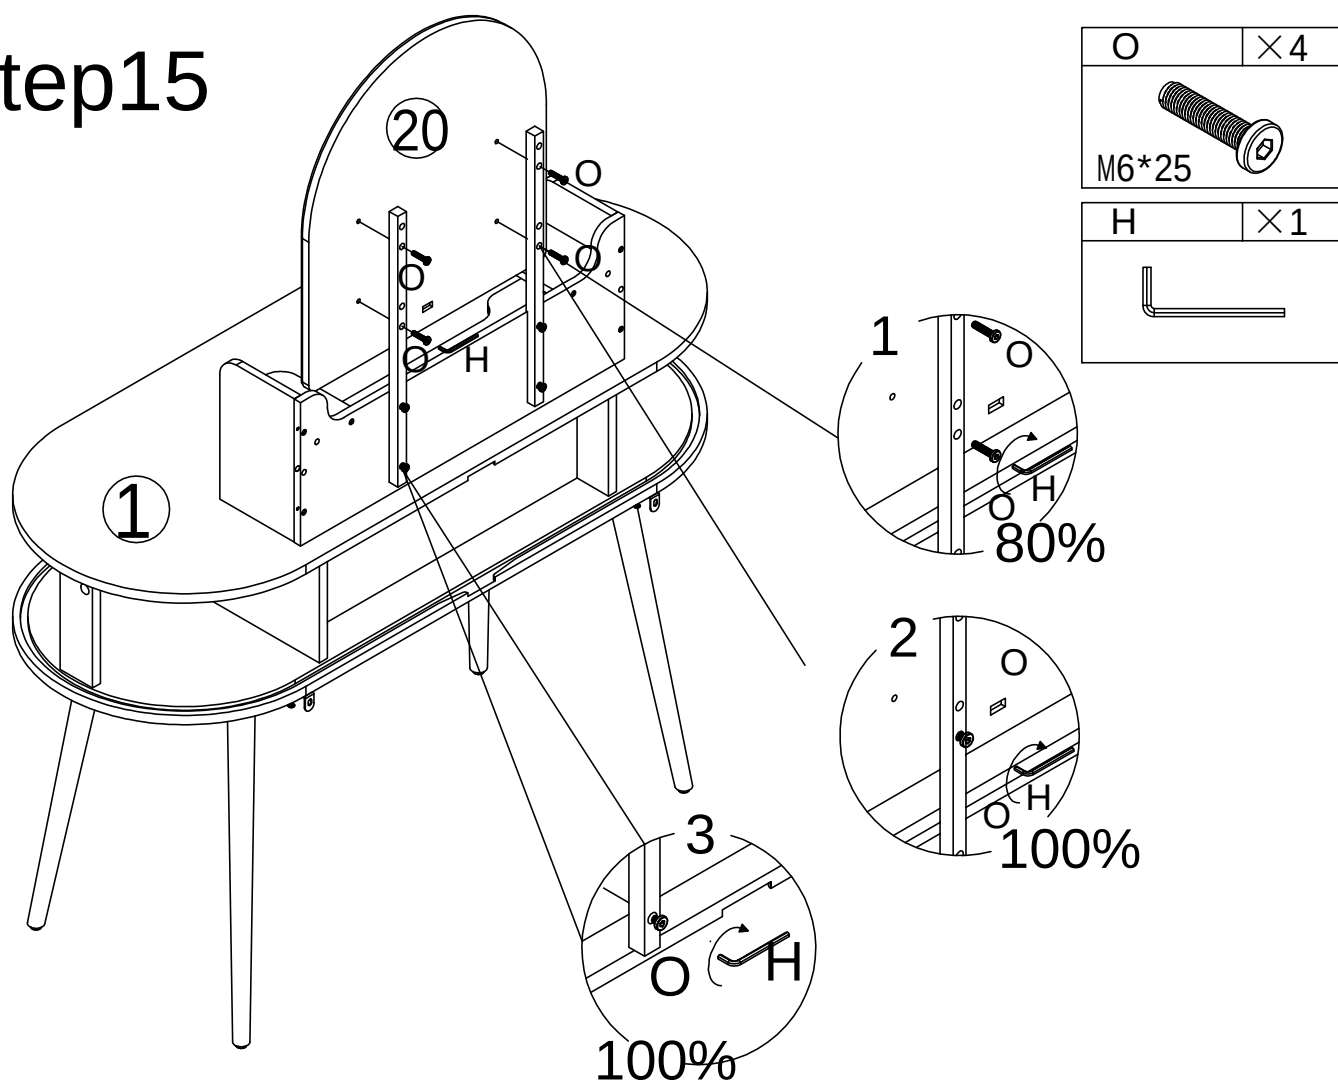


You can choose the upper and lower holes on the 21st position to make the height of the 20th mirror different.

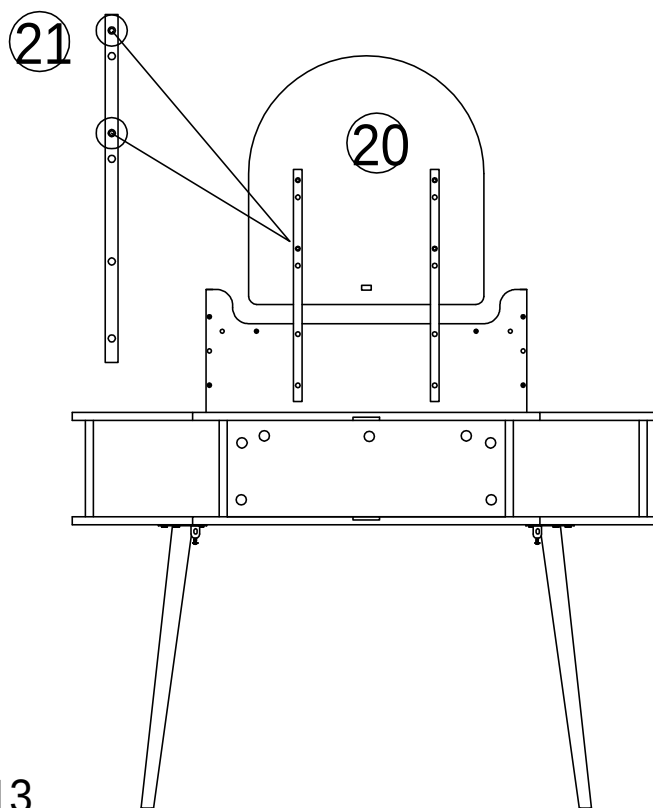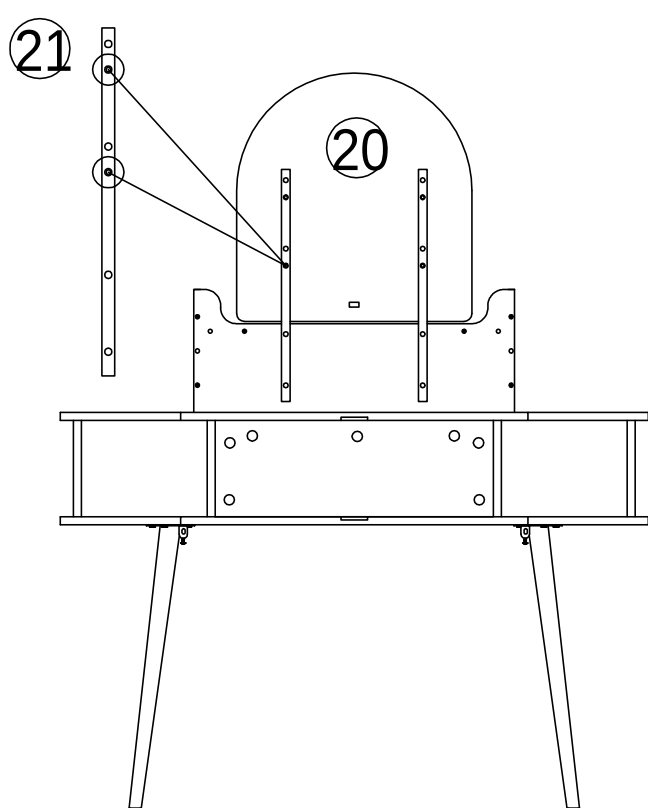

Step16

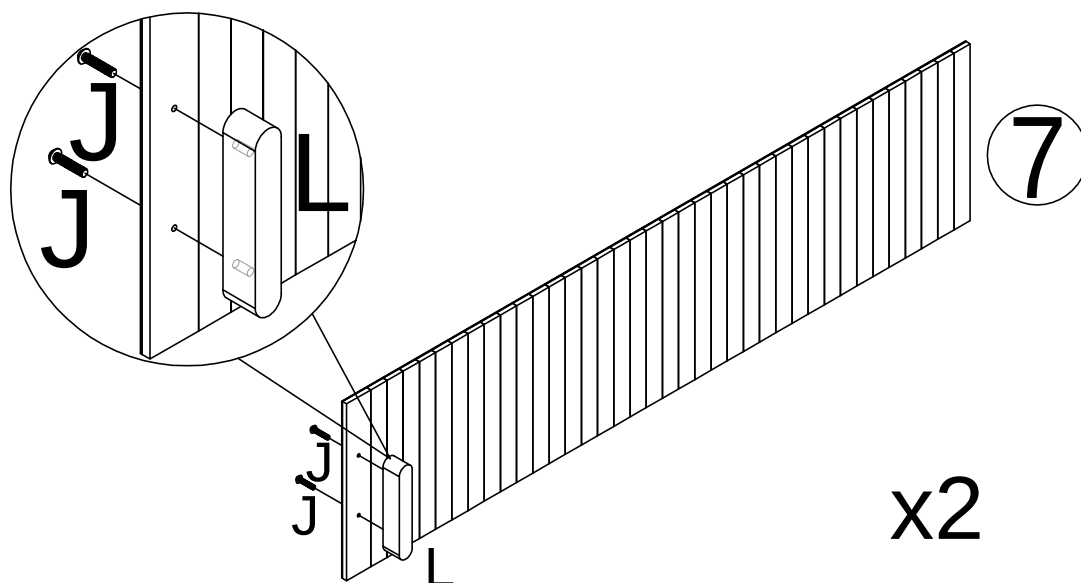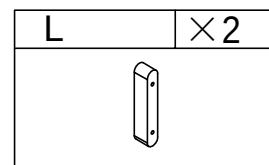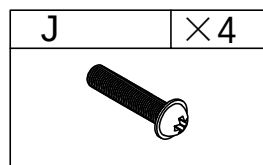


Step17



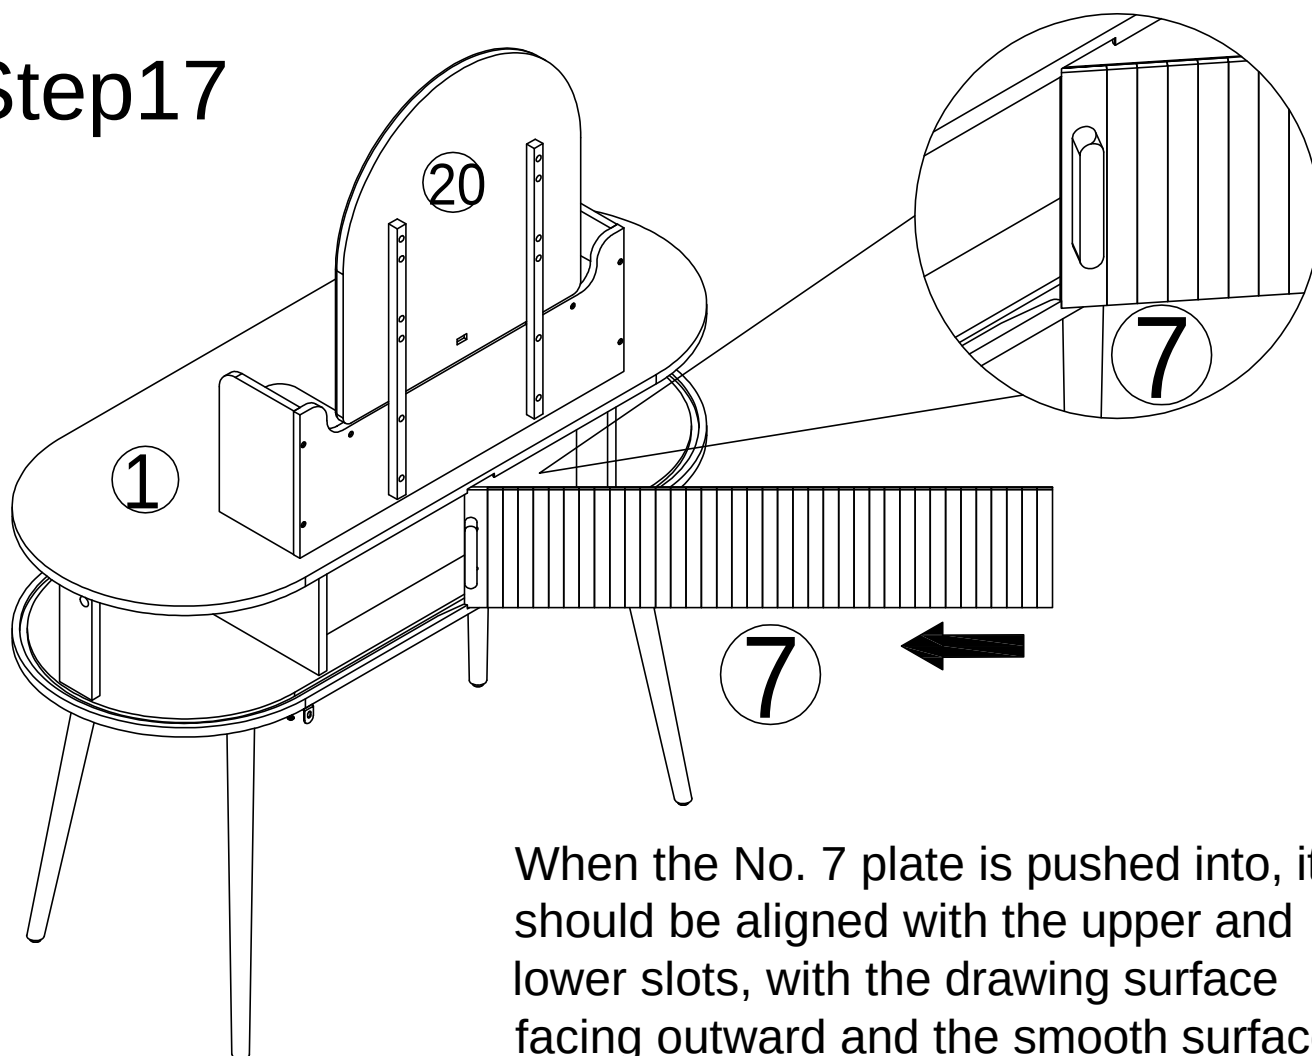


When the No. 7 plate is pushed into, it should be aligned with the upper and lower slots, with the drawing surface facing outward and the smooth surface facing inward .





Step18

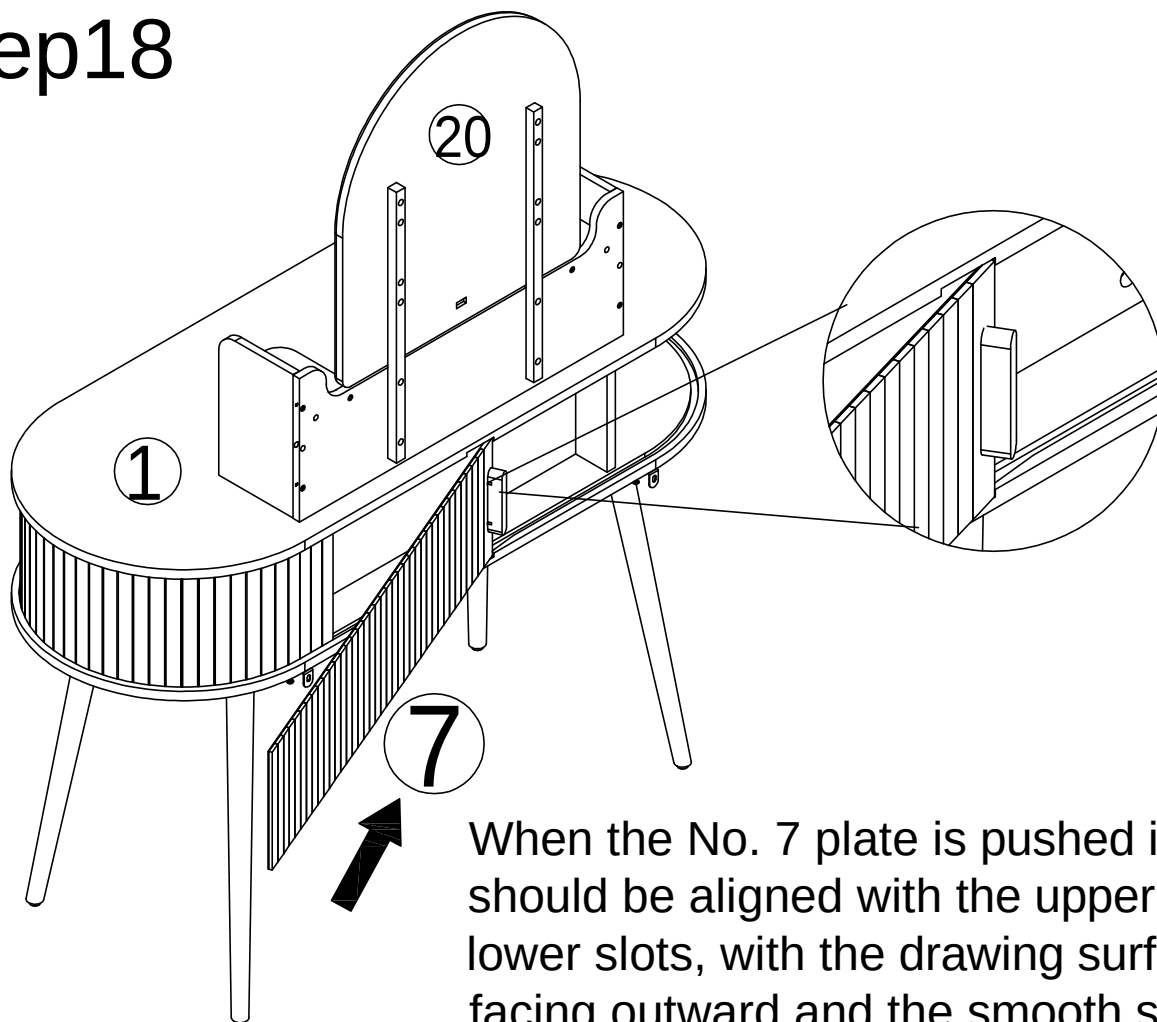










Step19

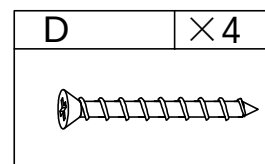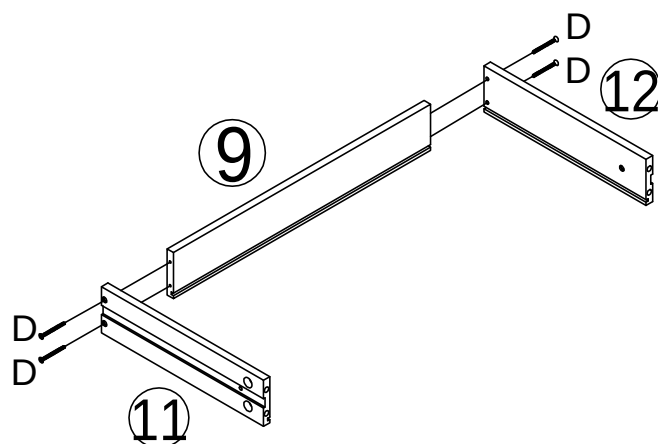



Step20

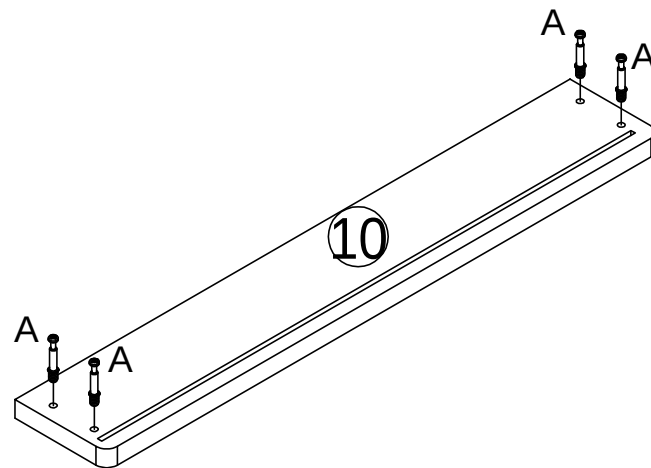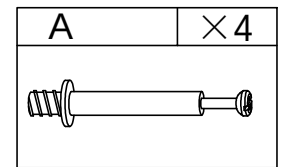




Step21

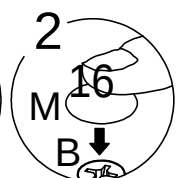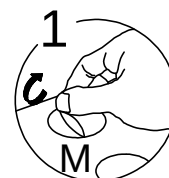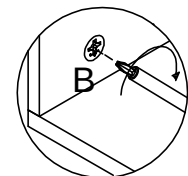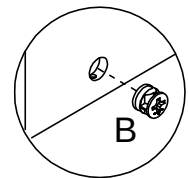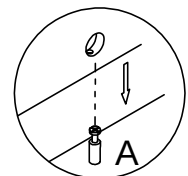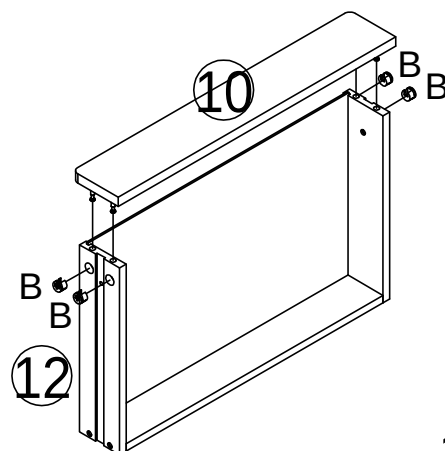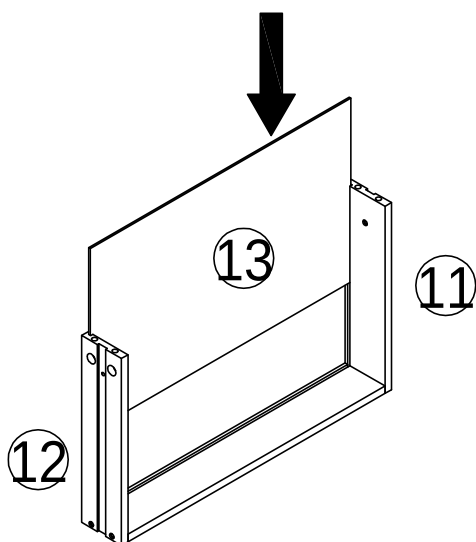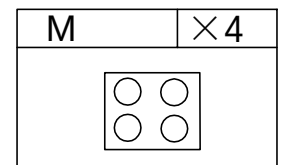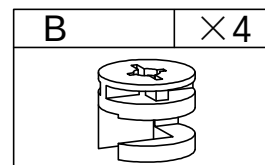




Step22

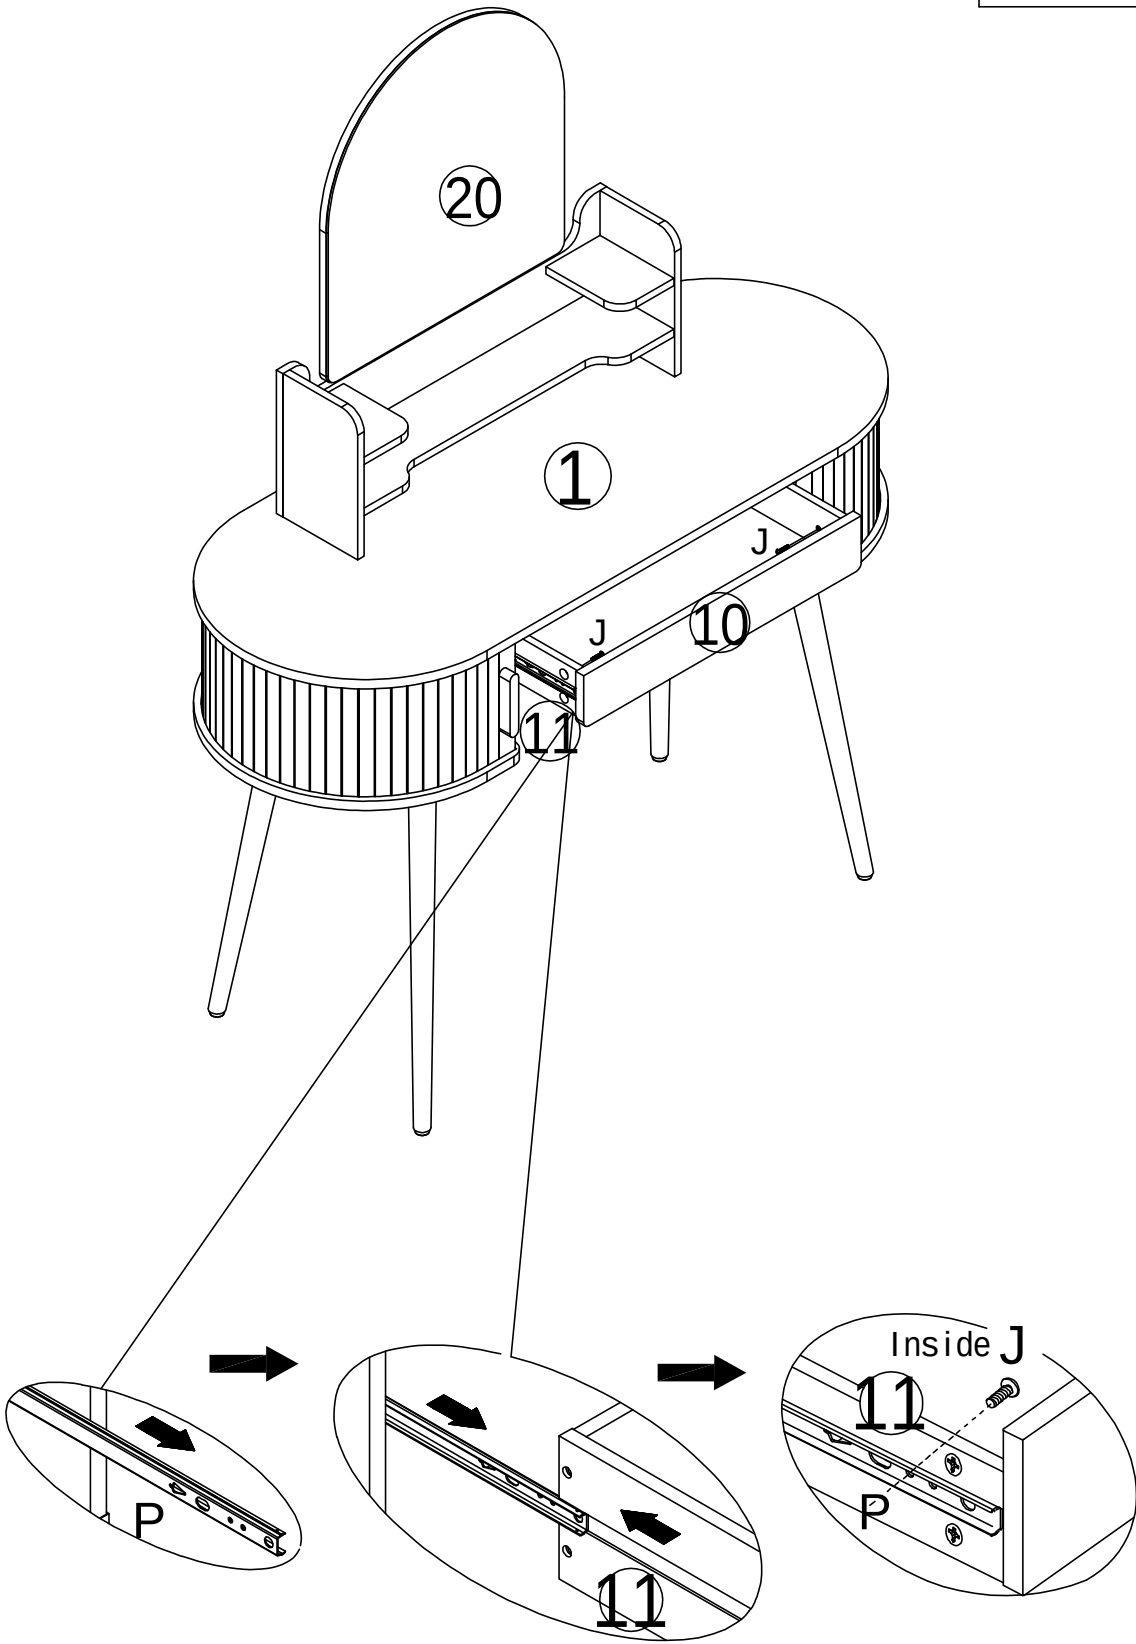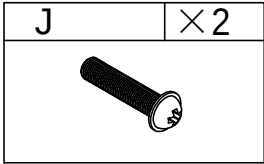

Step23

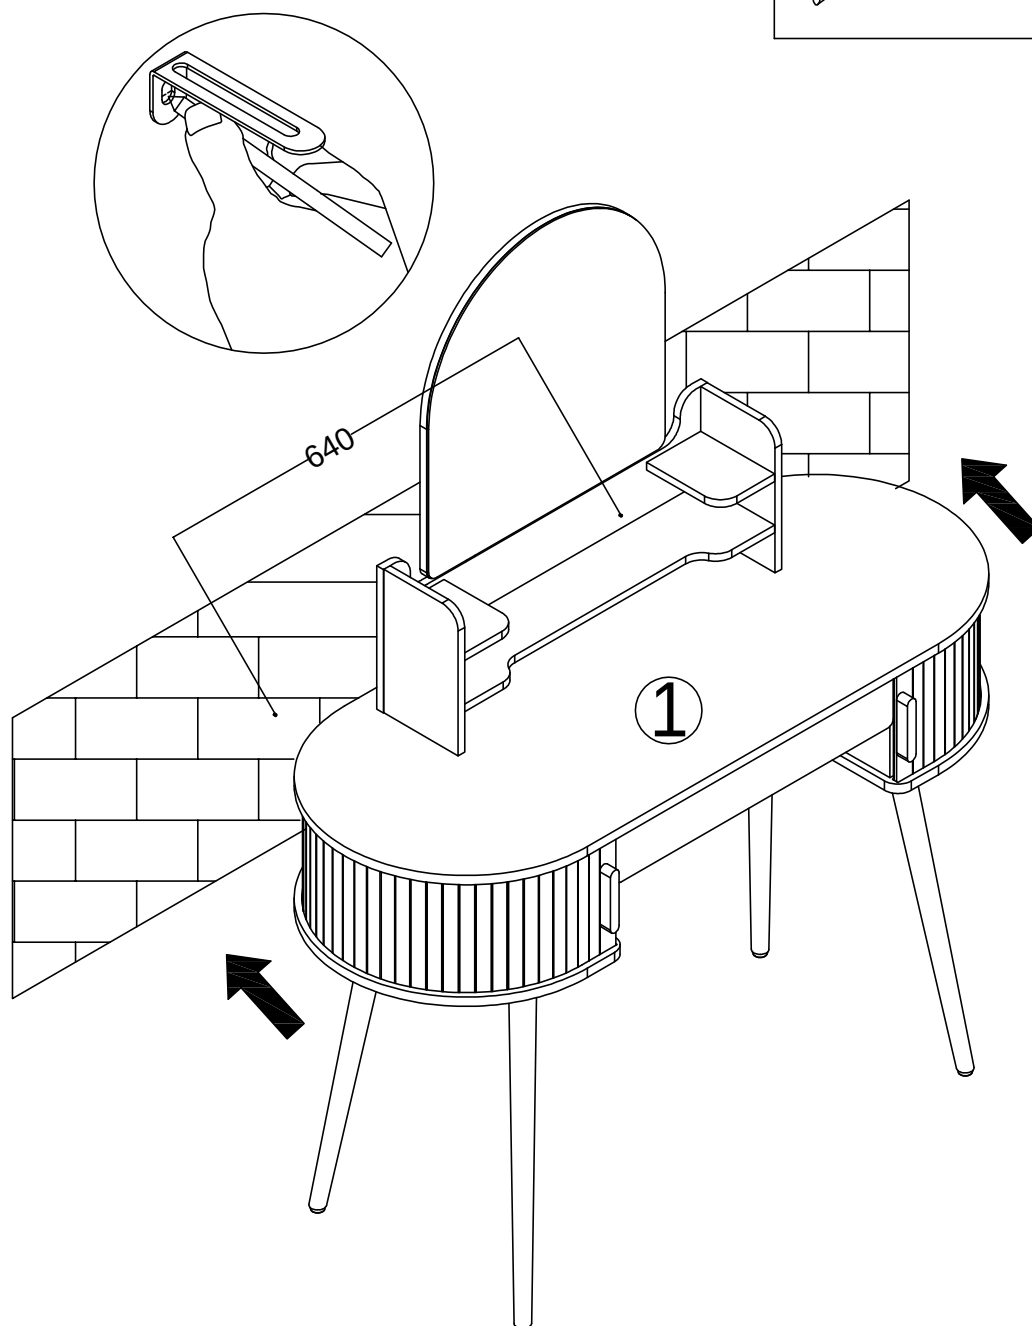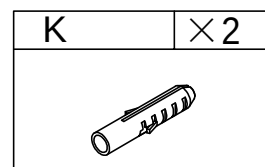
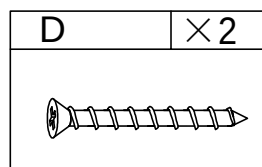


drill hole in wall

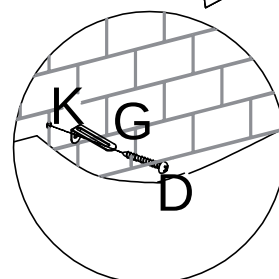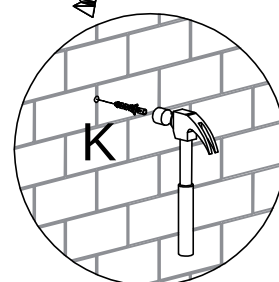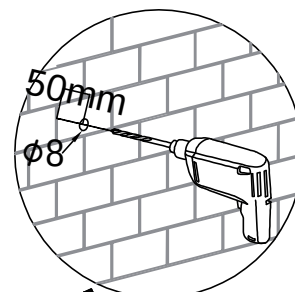

Please install the anti-tipping device according to the marked dimensions

Step24

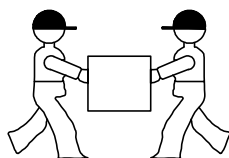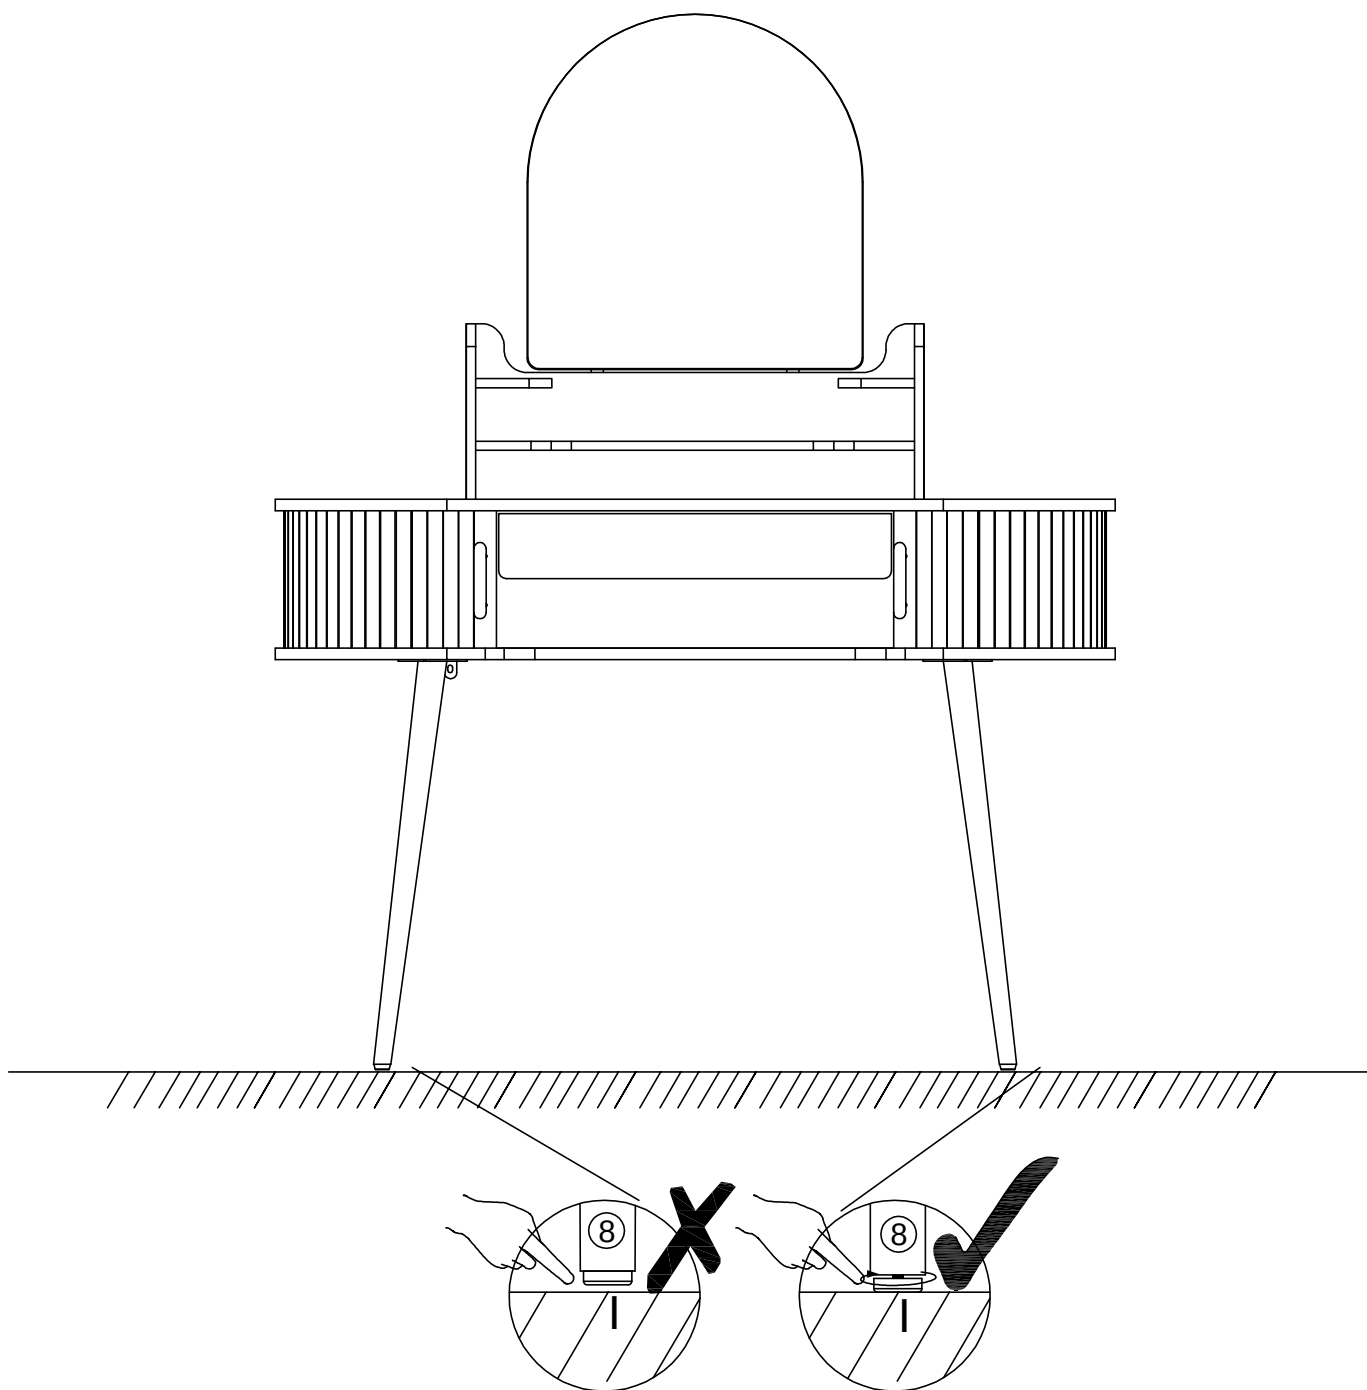

Two people work together to move the table.
Make sure you lift it off the ground.
Don't push and pull.