



Assembly Instructions

PET814










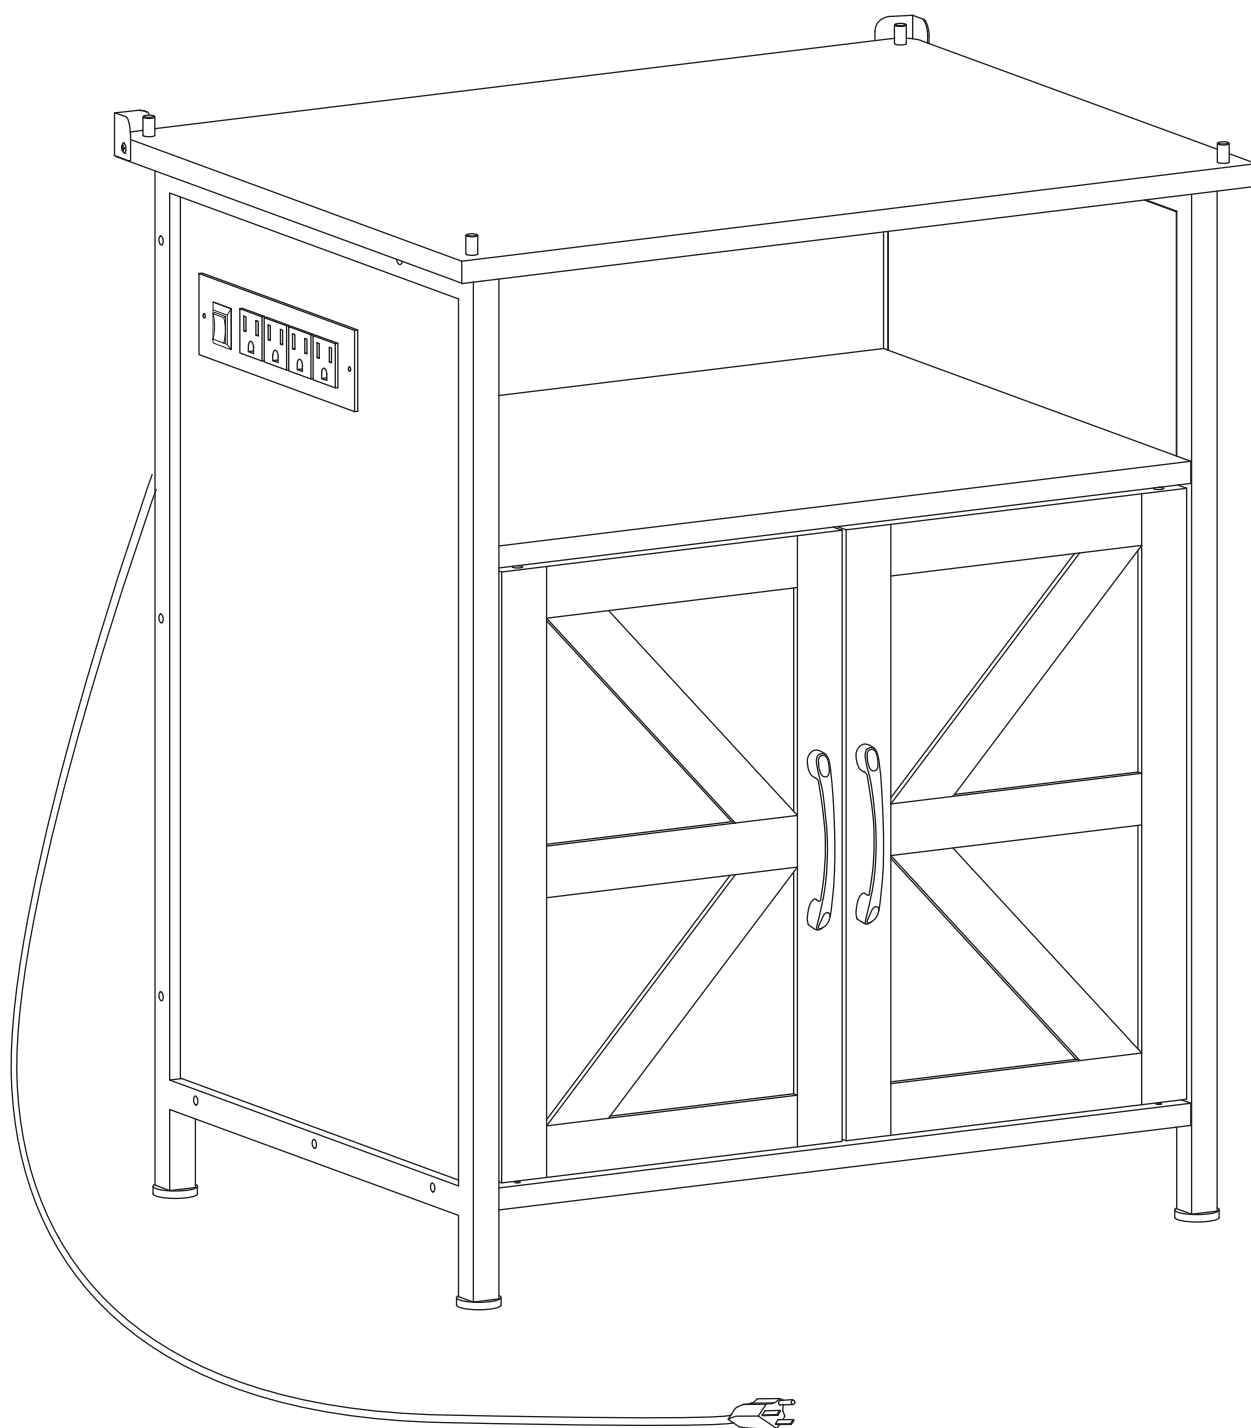


We come with the necessary tools for assembly but for faster assembly, a power drill is recommended.









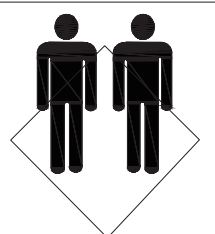



ASSEMBLED BY 2ADULTS

Parts List

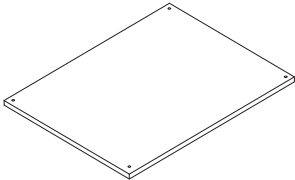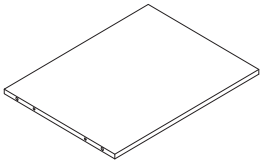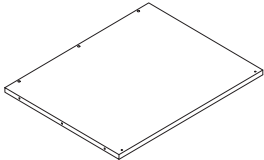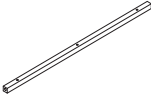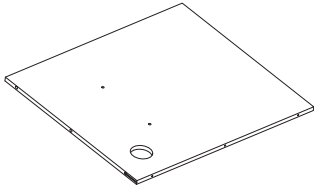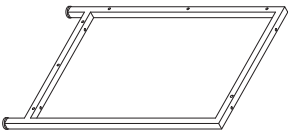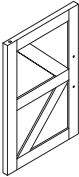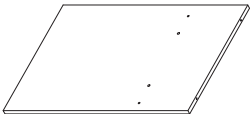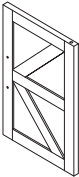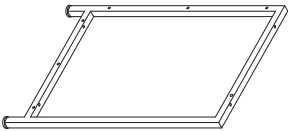
ITEM	PART	QTY	ITEM	PART	QTY
①		1PC	⑦		1PC
②		1PC	⑧		1PC
③		1PC	⑨		1PC
④		1PC	⑩		1PC
⑤		1PC	⑪		1PC
⑥		1PC			

Hardware List

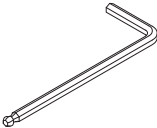ITEM	PART	QTY	ITEM	PART	QTY
A		4+1PCS	K		1PC
B		7+1PCS	L		4+1PCS
C		7+1PCS	M		2PCS
D		25+2PCS	N		1PC
E		2+1PCS	O		2+1PCS
F		1PC	P		4+1PCS
G		3+1PCS	Q		4+1PCS
H		4+1PCS	R		1PC
I		2PCS	S		7+3PCS
J		4+1PCS	T		2PCS

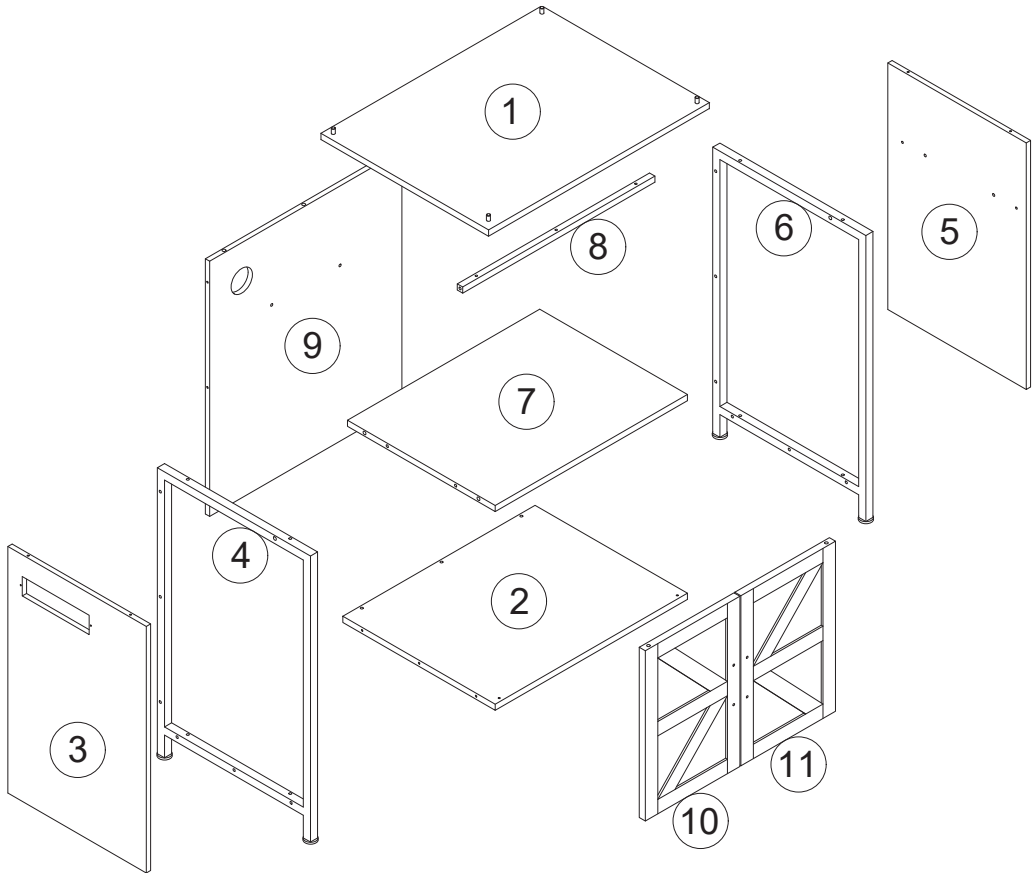


1

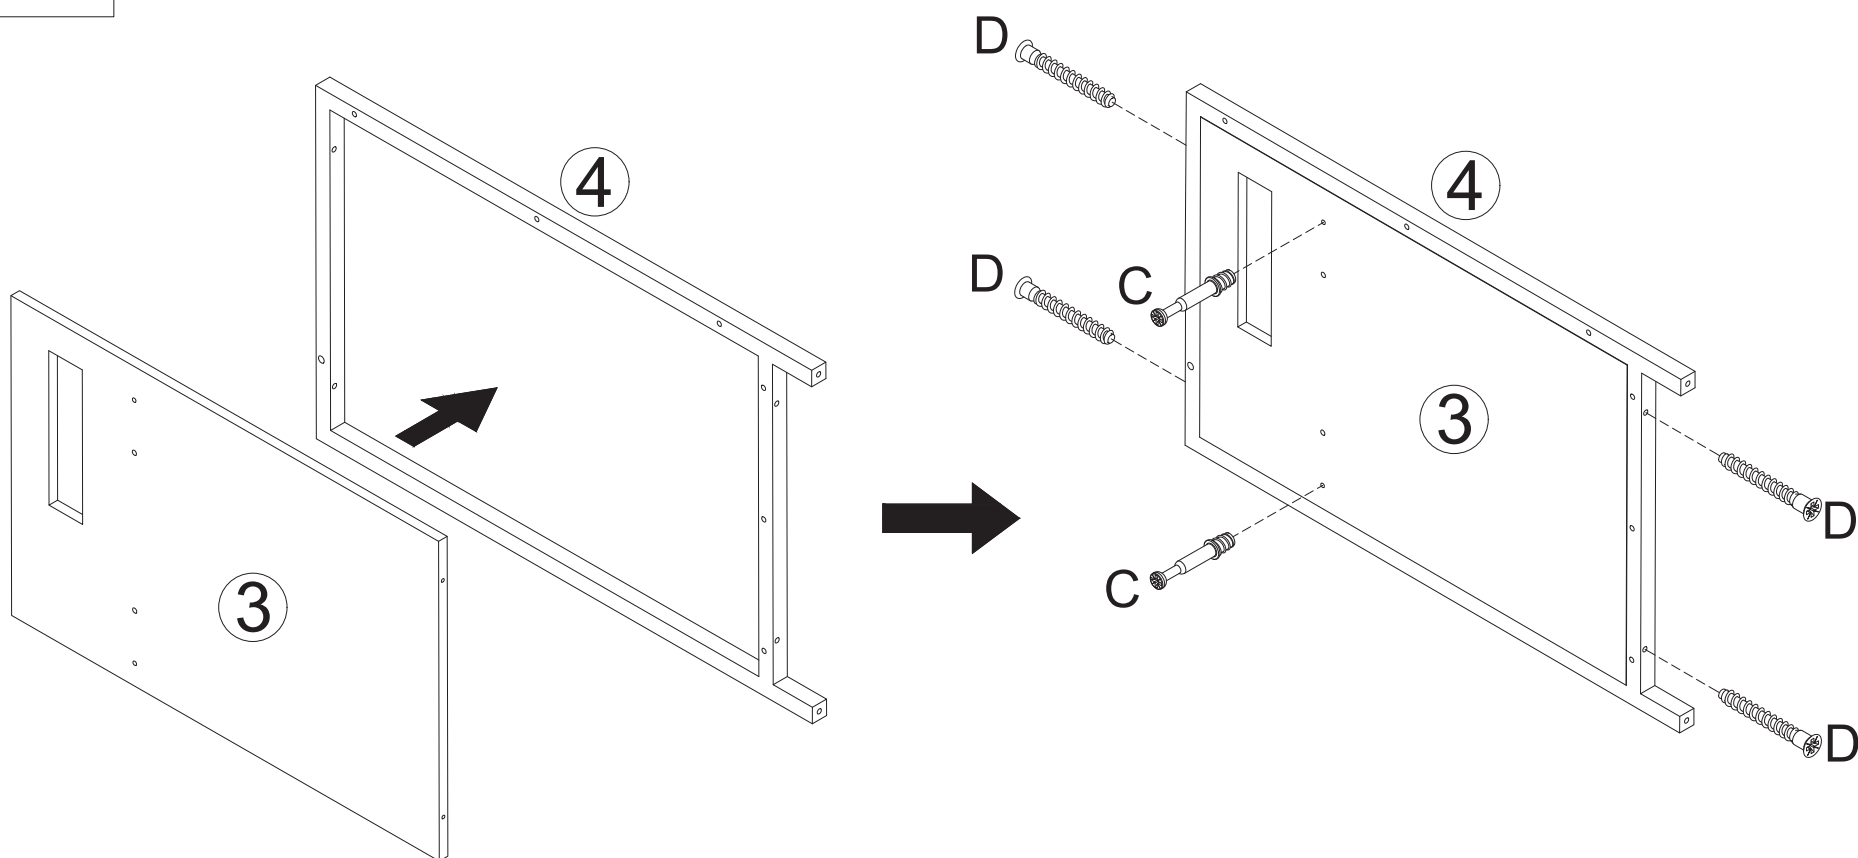

Attach Part #3 to Part #4 with screws D x4 as shown.
Install Cam Bolt C x2 to Part #3 as shown.

	Rx1
	Cx2
	Dx4


2

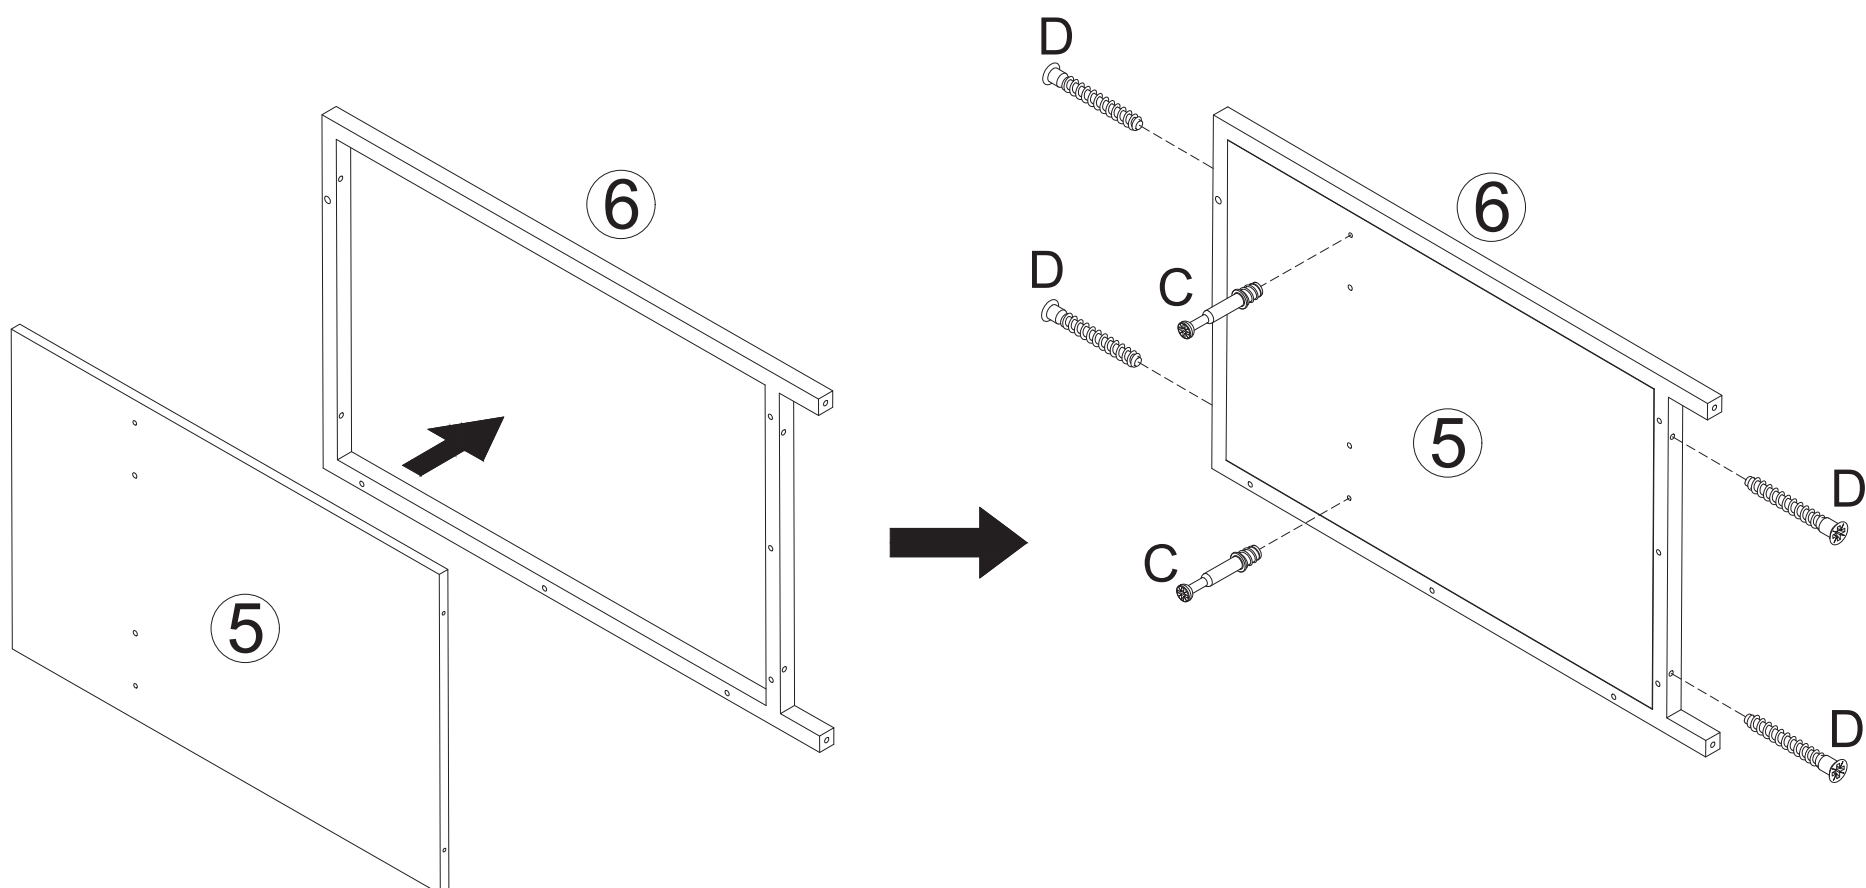

Attach Part #5 to Part #6 with screws D x4 as shown.
Install Cam Bolt C x2 to Part #5 as shown.

	Rx1
	Cx2
	Dx4


3

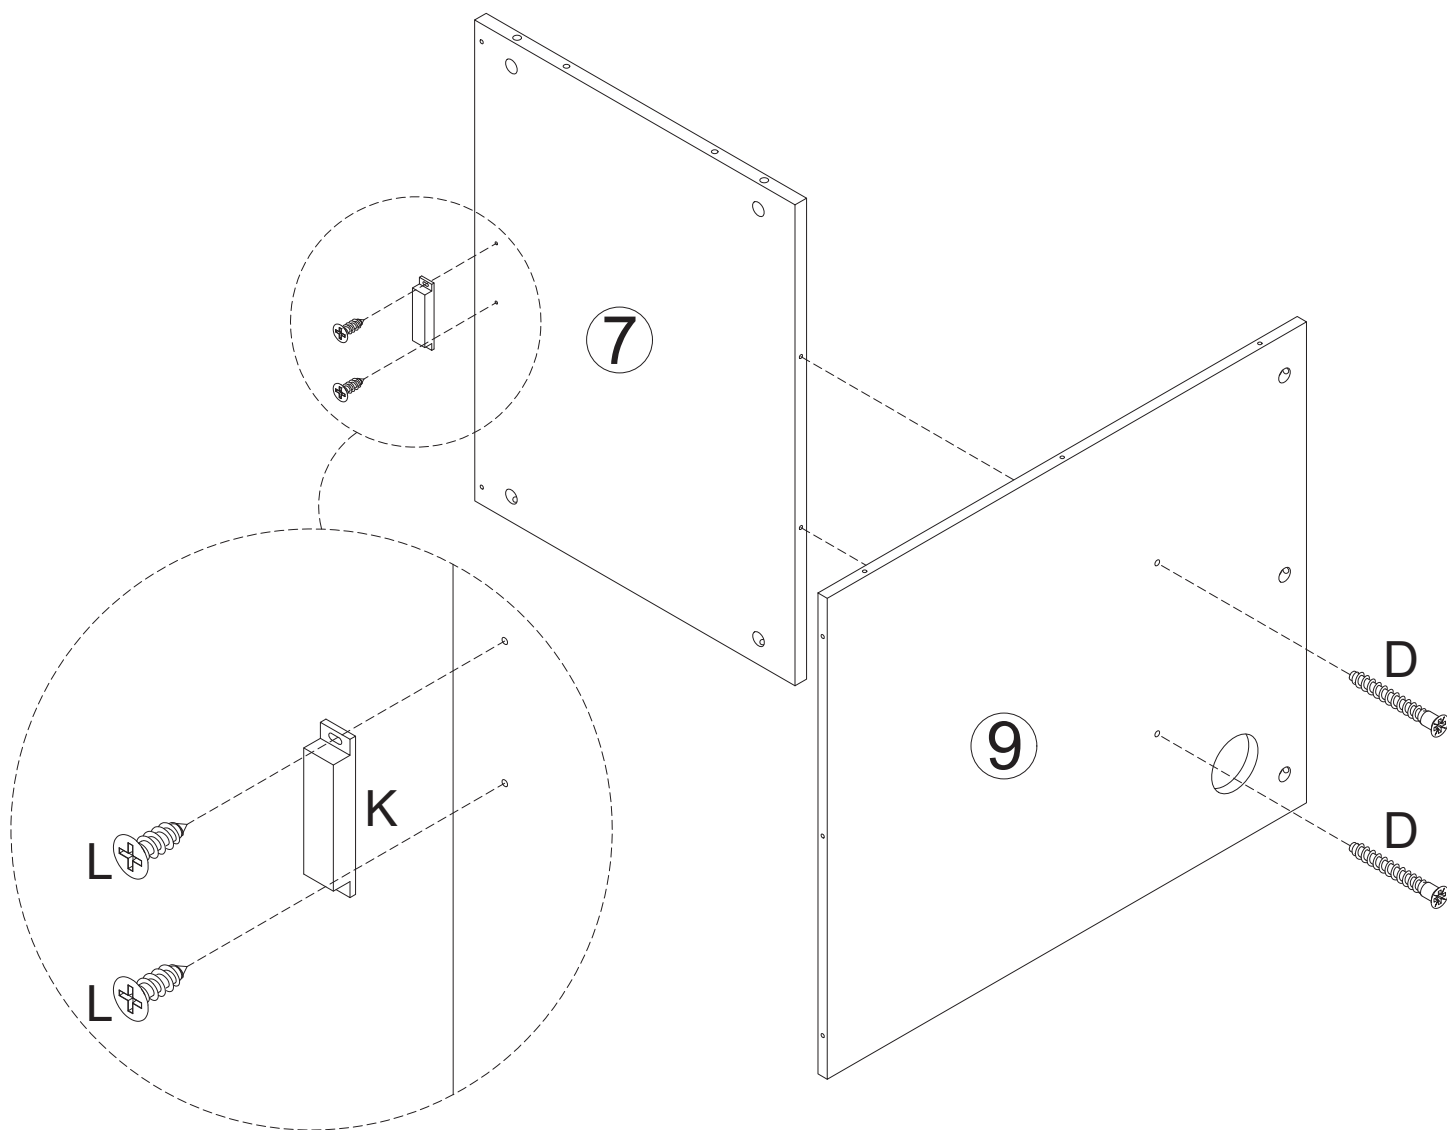

Connect Part #7 to Part #9 with screws D x2 as shown.
Install K to Part #7 with screws L x2 as shown.

	Dx2
	Kx1
	Lx2


4

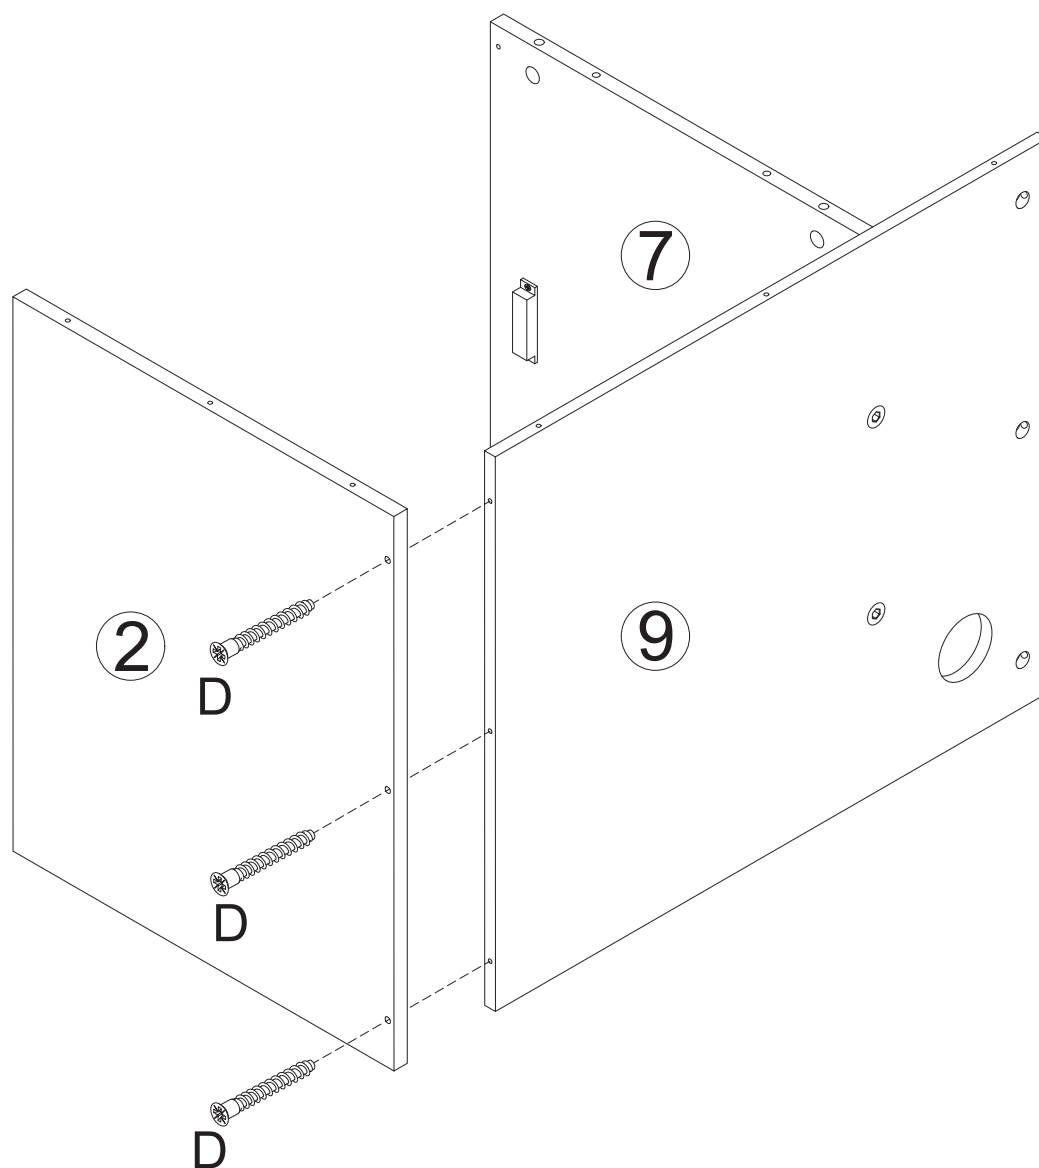

Attach Part #2 with Part #9 with screws D x3 as shown.

	Rx1
	Dx3


5

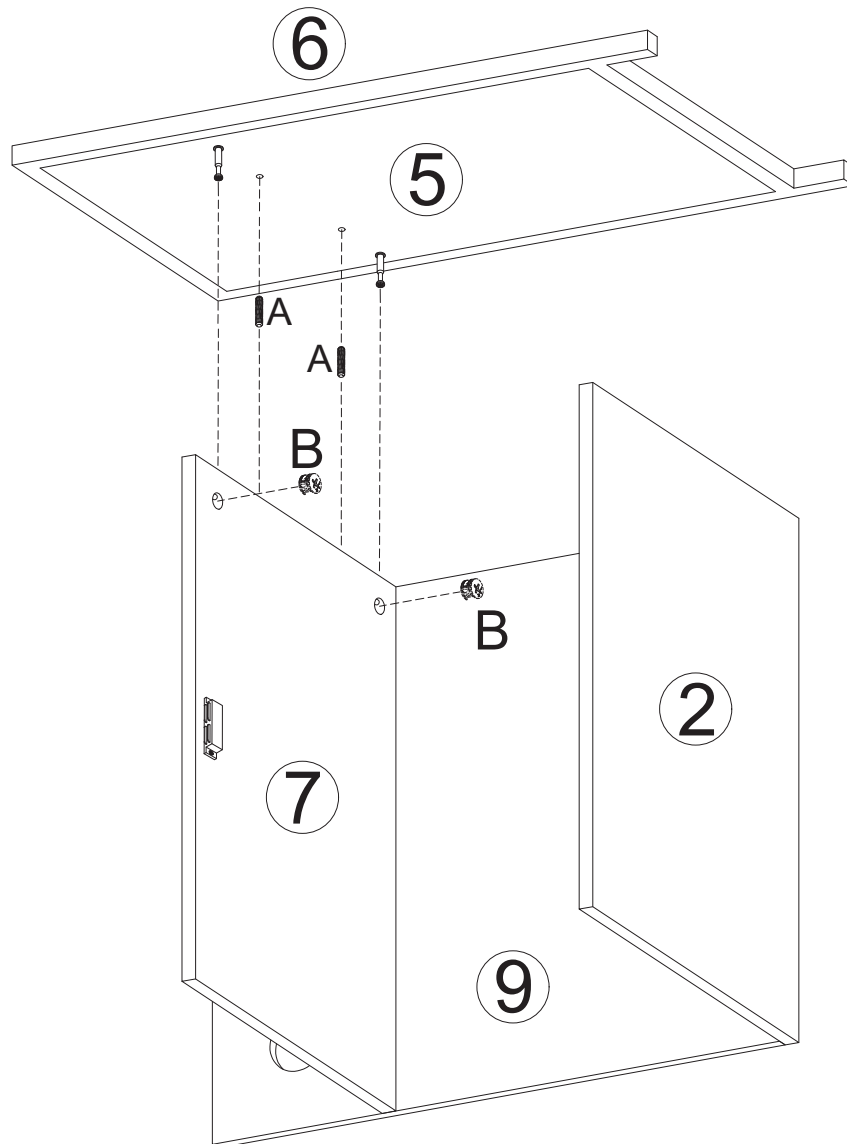

Attach Part #5&6 to Part #7 with dowel A x2 and nuts B x2 as shown.
Turn nuts B x2 to secure position.

	Rx1
	Ax2
	Bx2


6

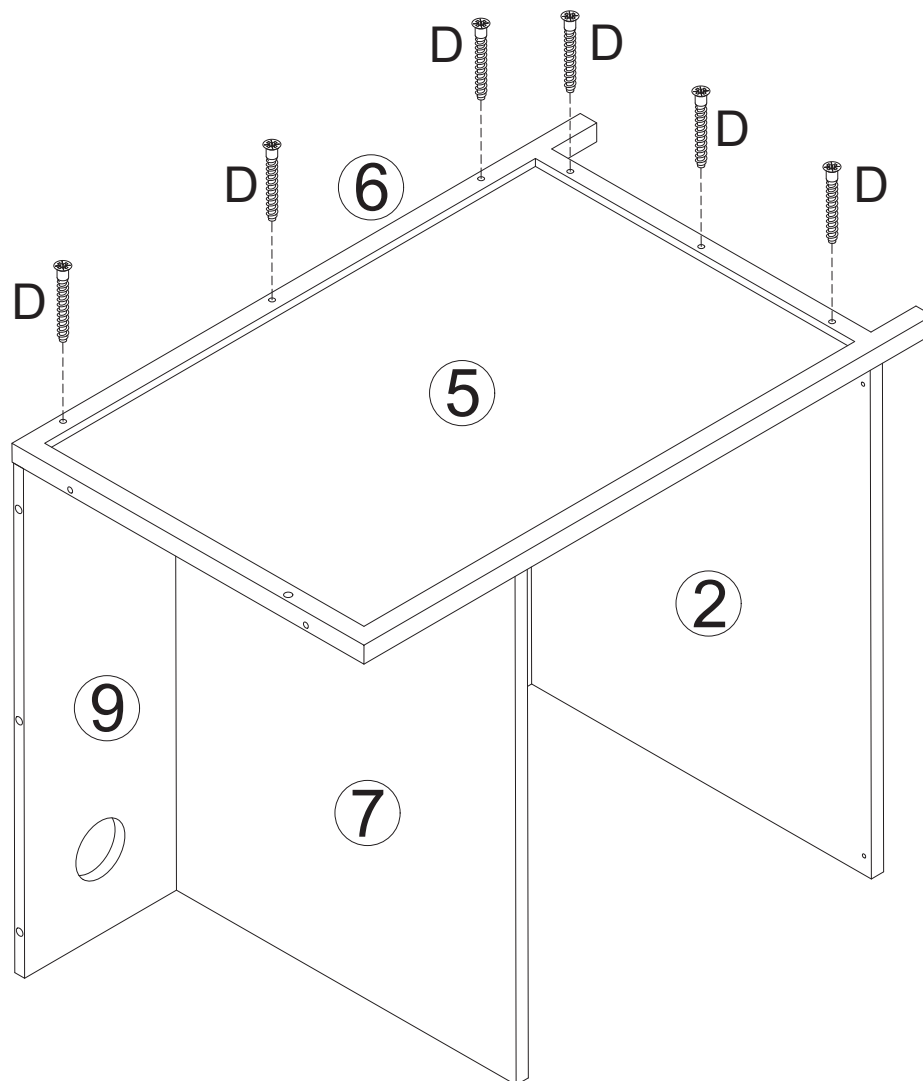

Further secure Part #5&6 with screws D x6 as shown.

	Rx1
	Dx6


7

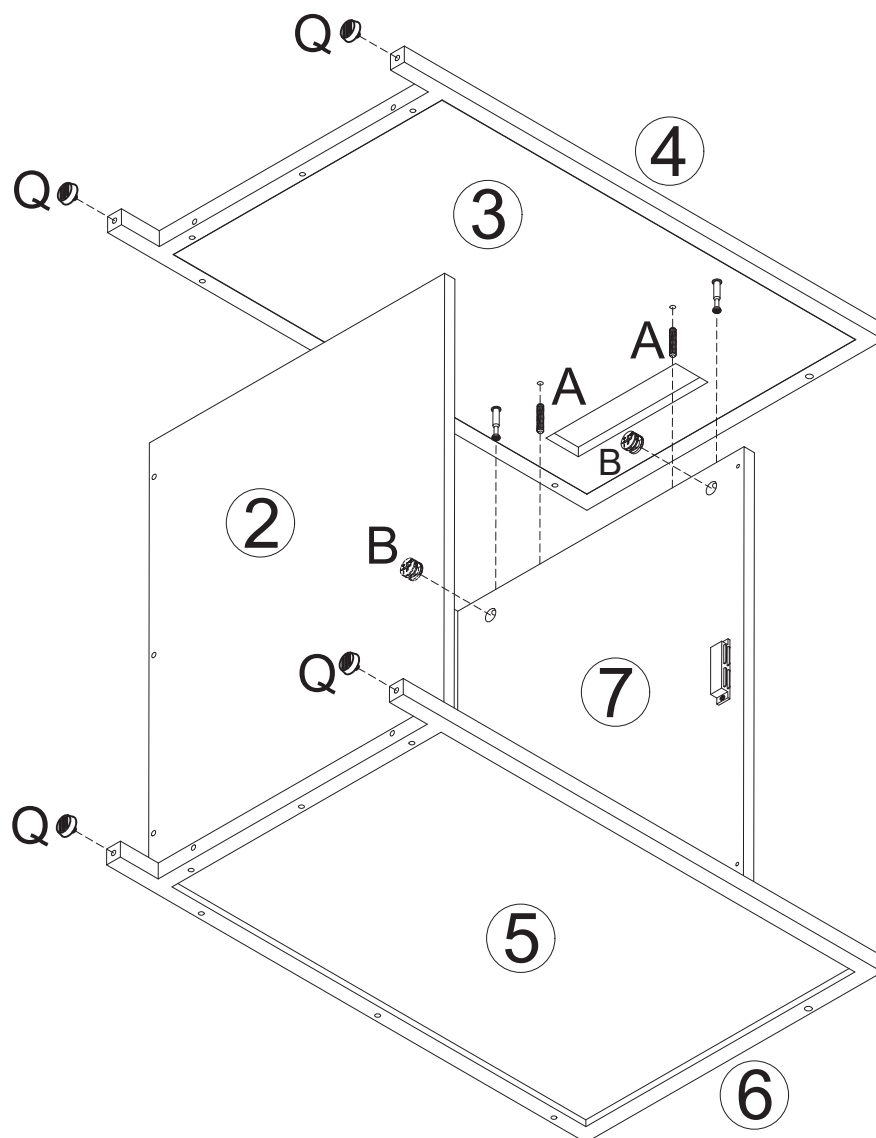

Attach Part #3&4 to Part #7 with dowel A x2 and nuts B x2 as shown.
Turn nuts B x2 to secure position. Attach adjustable feet Q x4 as shown.

	Rx1
	Ax2
	Bx2
	Qx4


8

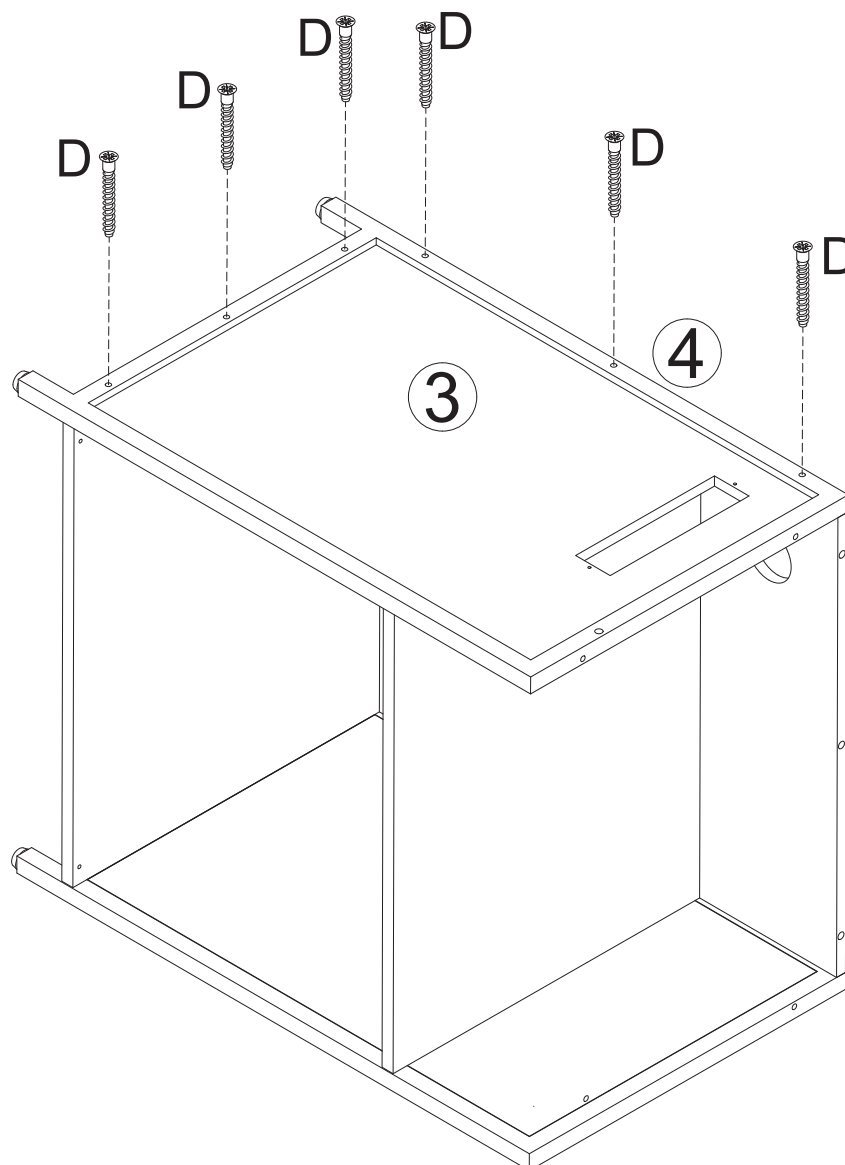

Further secure Part #3&4 with screws D x6 as shown.

	Rx1
	Dx6


9

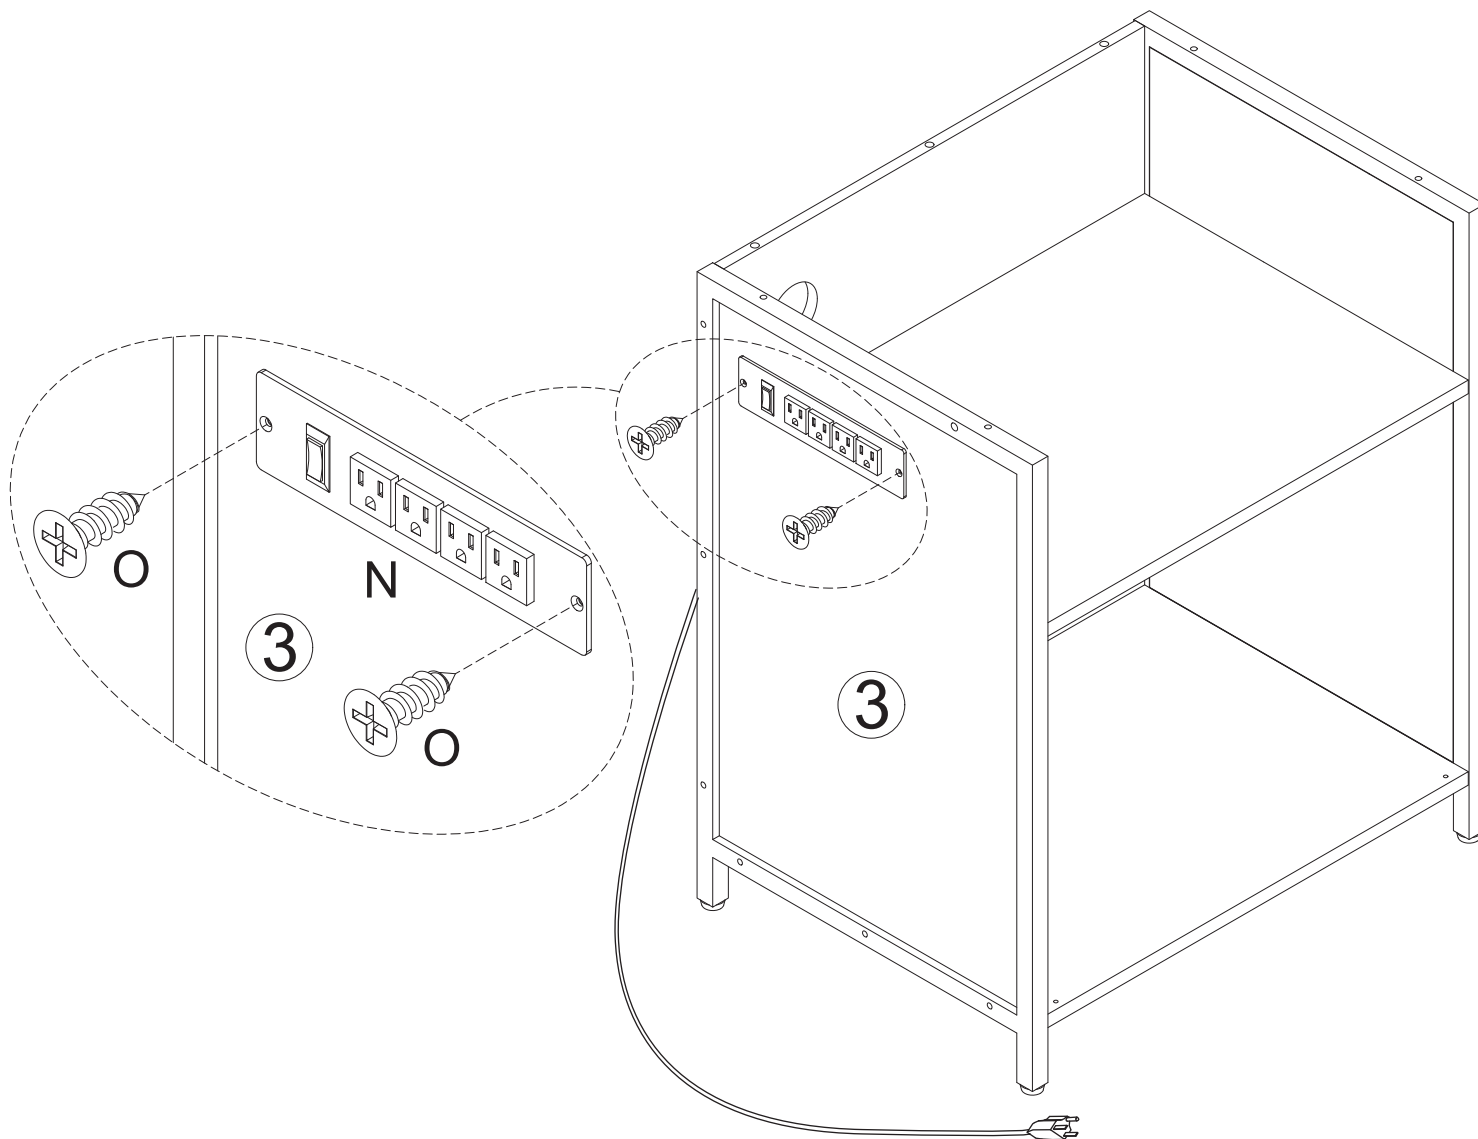

	Rx1
	Nx1
	Ox2

Install Socket Part N to Part #3 with screws O X2 as shown.


10

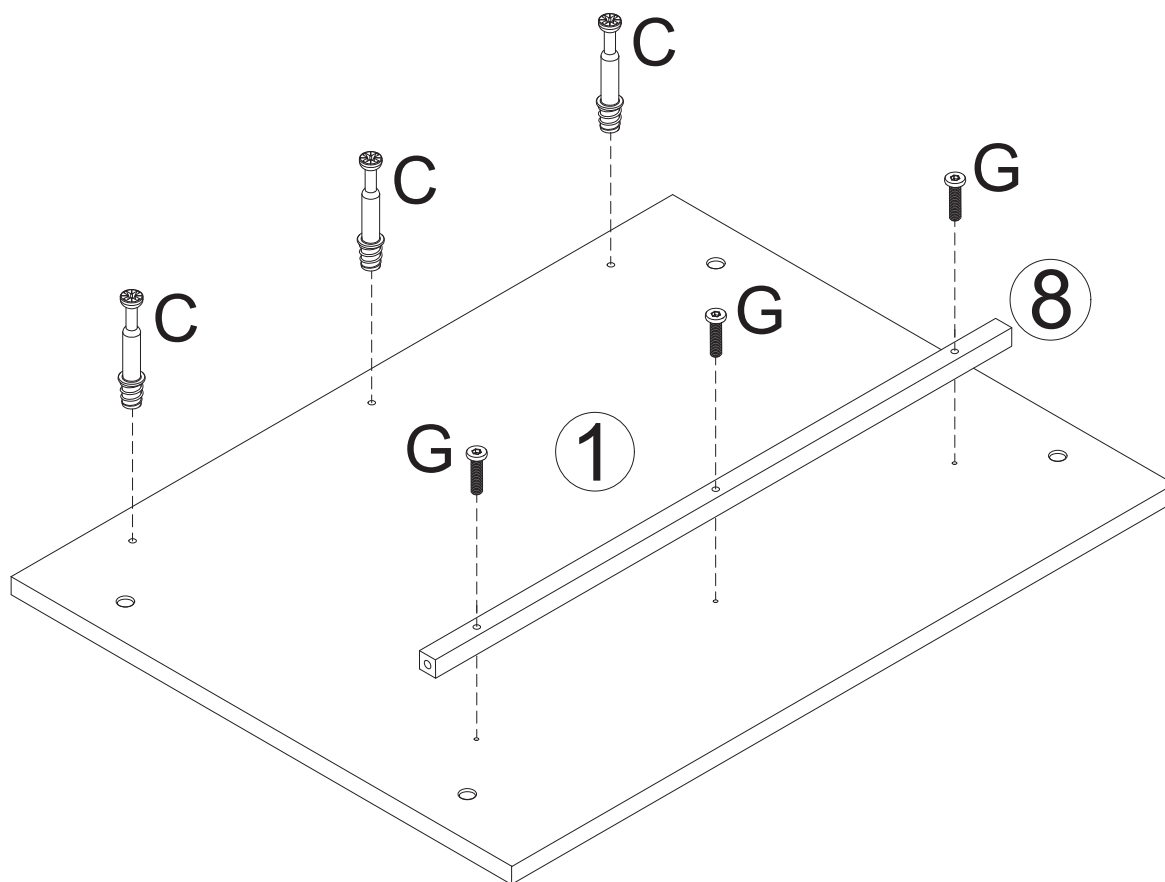


	Fx1
	Rx1
	Gx3
	Cx3

Attach Part #8 to Part #1 with screws G x3 as shown.
Install Cam Bolt C x3 to Part #1 as shown.


11

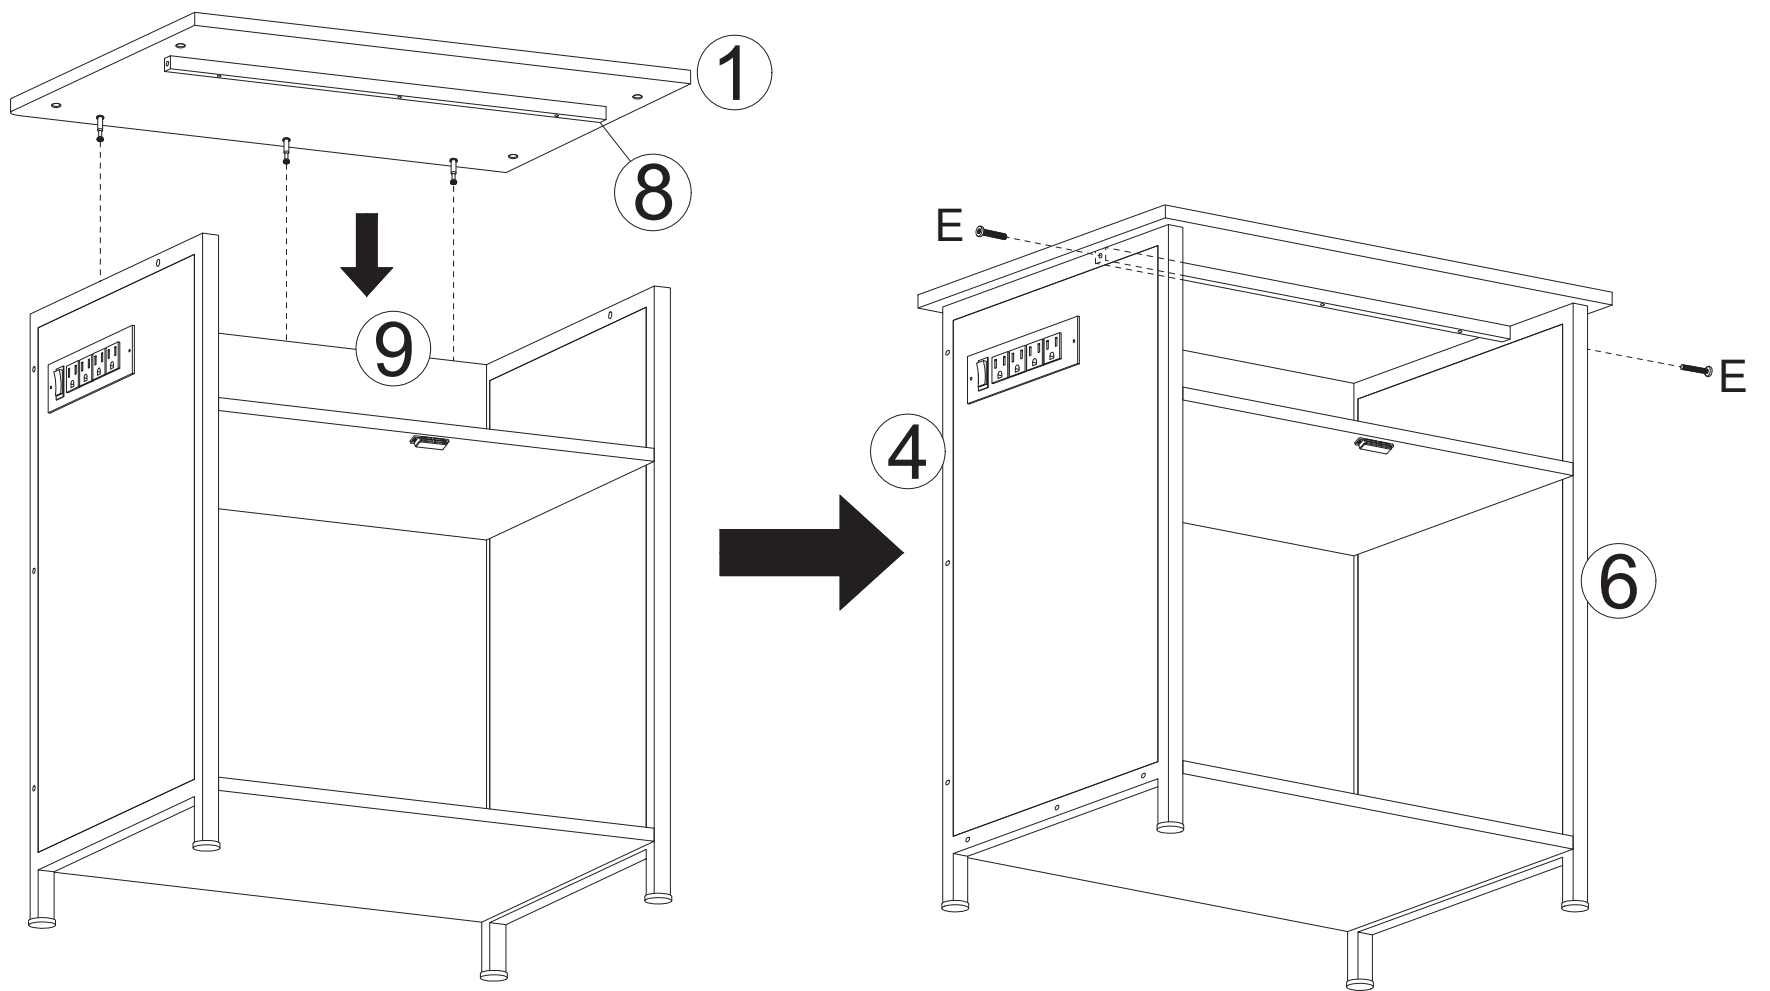


Put Part #1 Tabletop on the assembled unit from step 9, then secure with screws E x2 as shown.

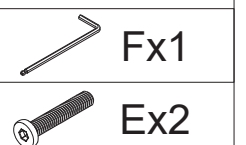


12

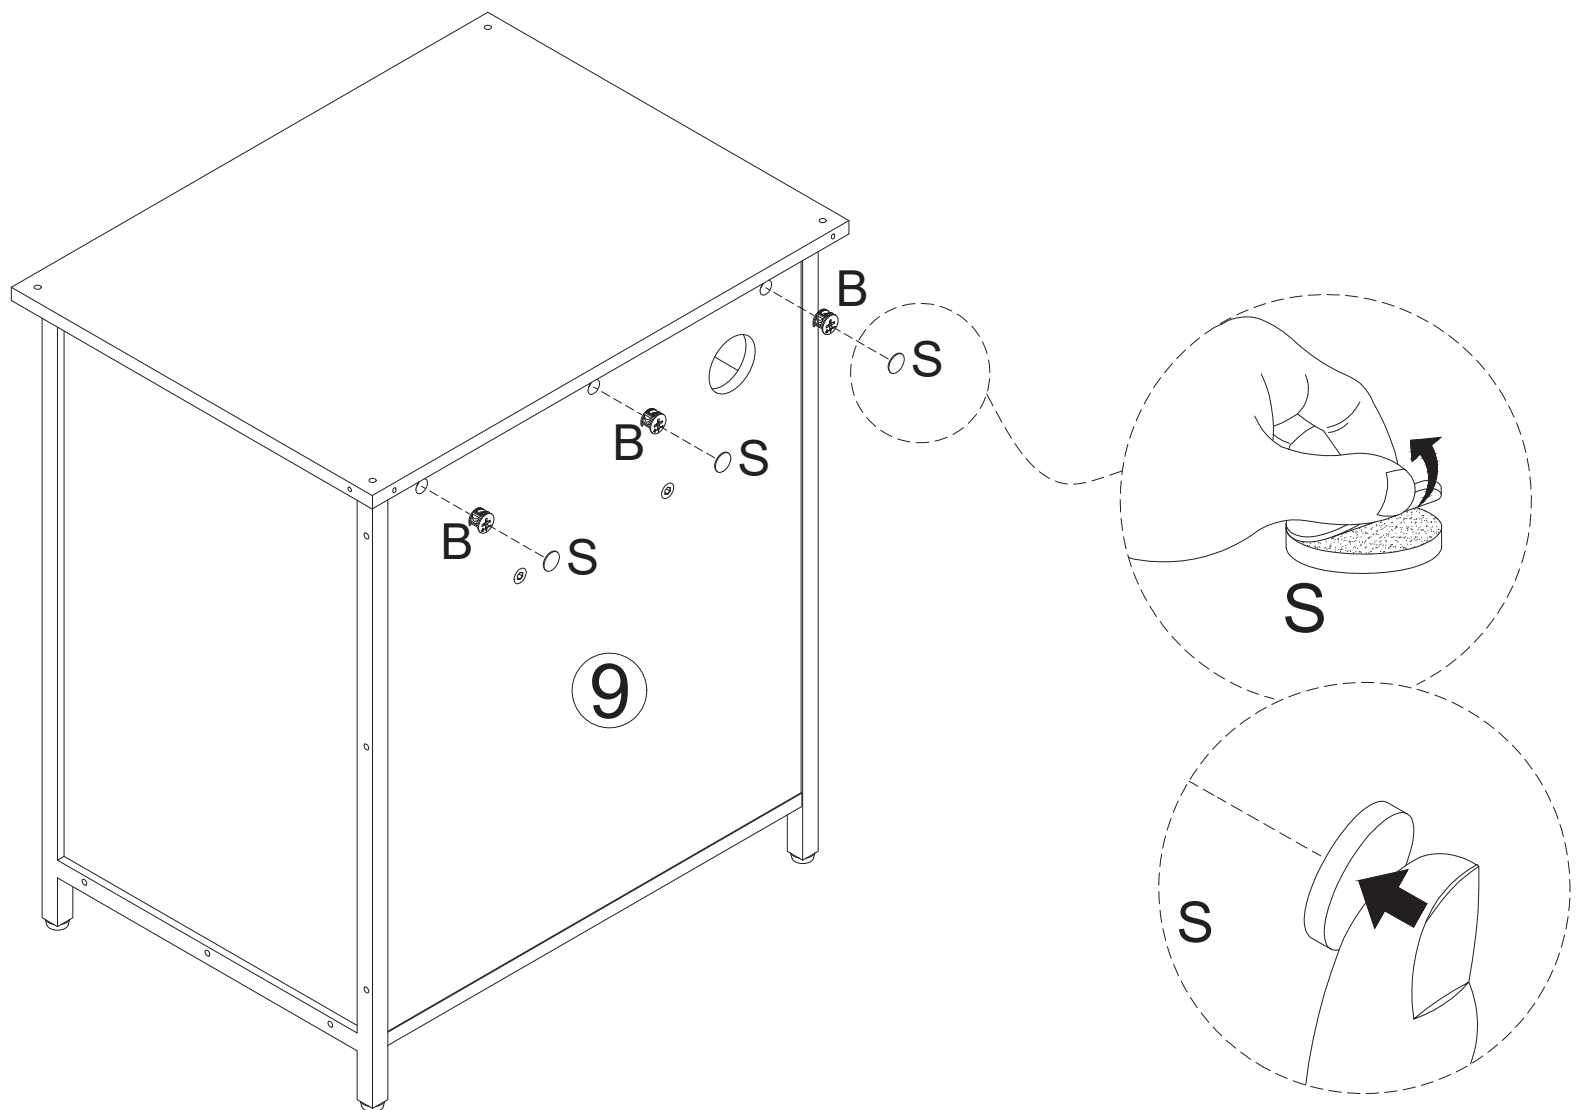

Put nuts B x3 into backside (Part#9) as shown. Turn to a secure position. We provide round stickers S. You can stick it to cover the nuts so as to look nicer.

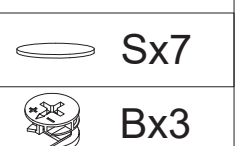


13

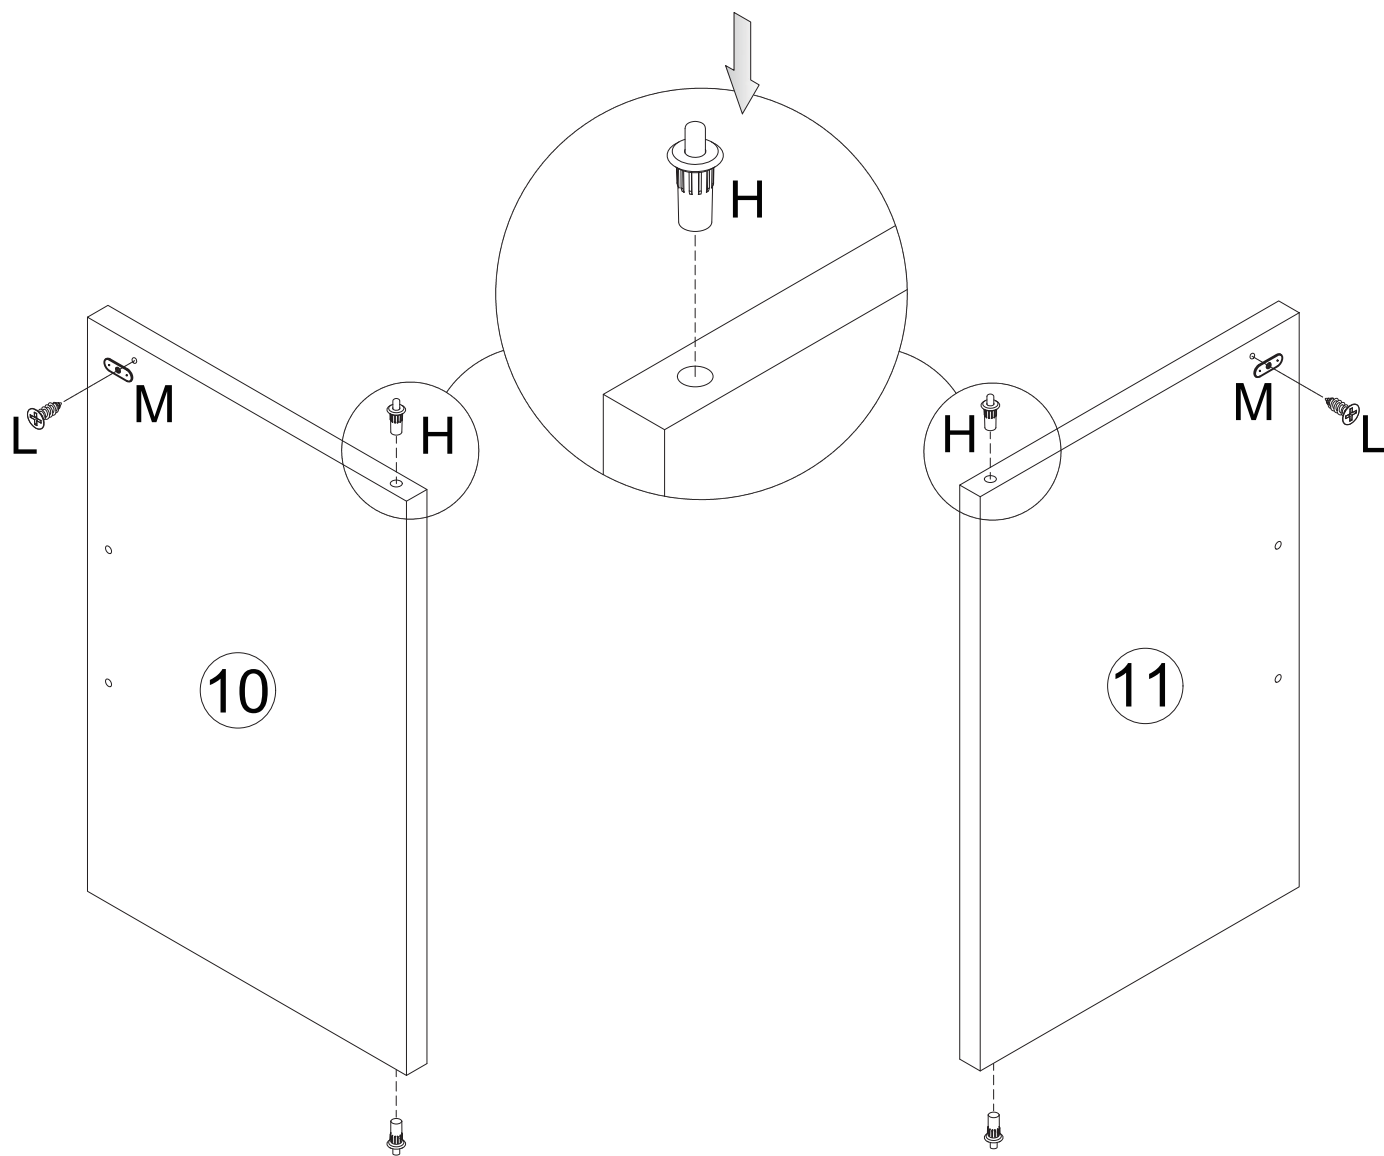

Install Part H x4 to both doors.
Attach Part M x2 to door Part#10 and Part#11 with screws L X2 as shown.

	Rx1
	Lx2
	Mx2
	Hx4




14

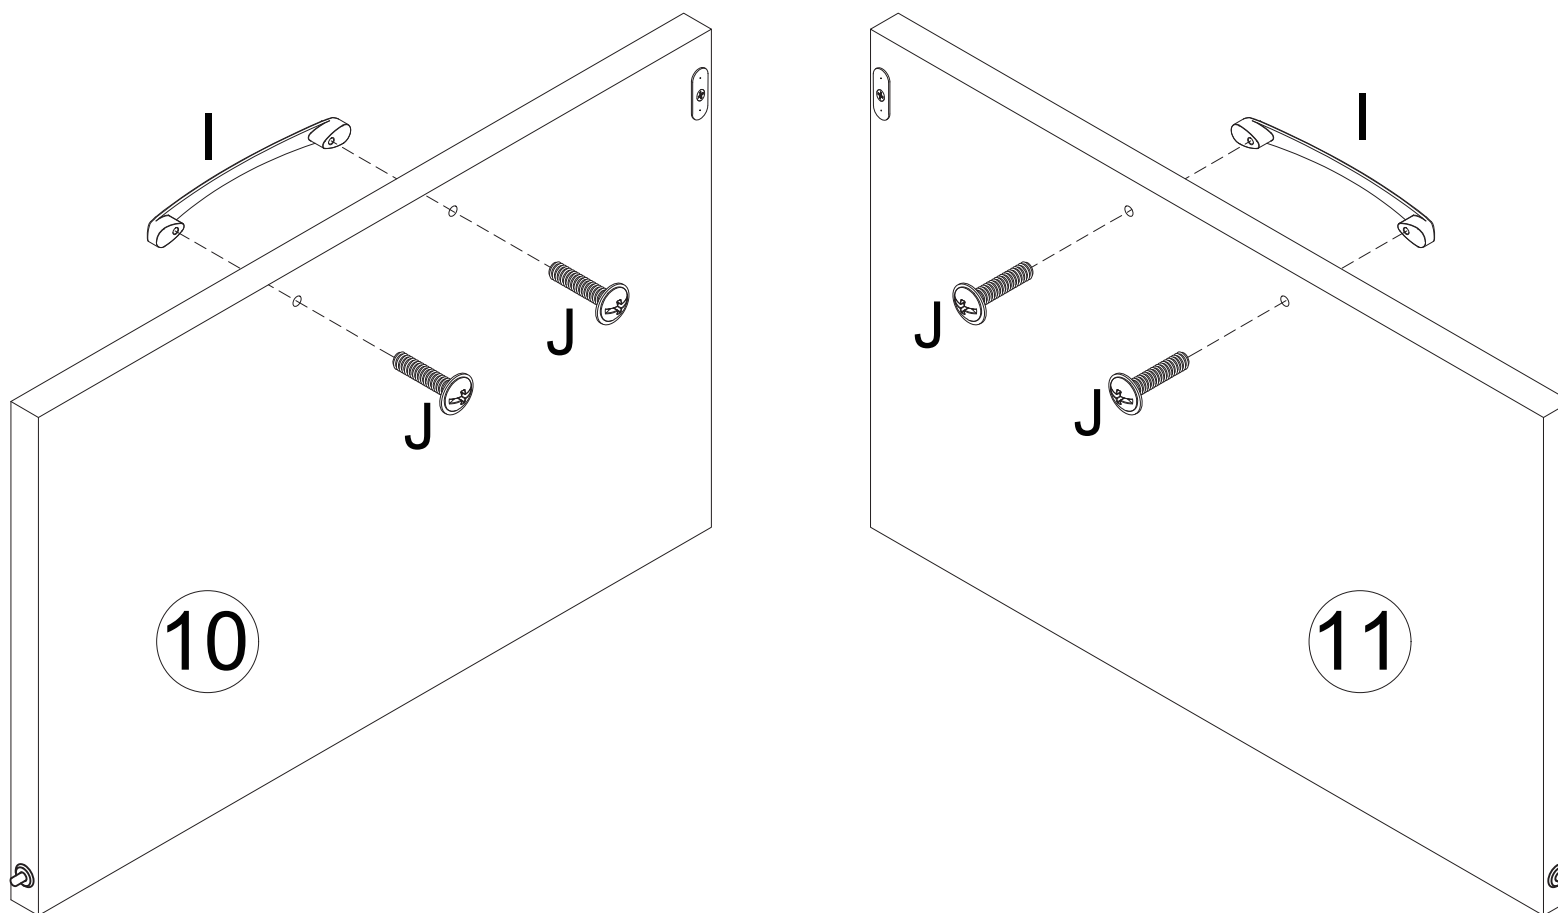

Install Door Handle Part I x2 to Door Part #10 and Part #11 with screws J x4 as shown.



	Rx1
	Ix2
	Jx4

15

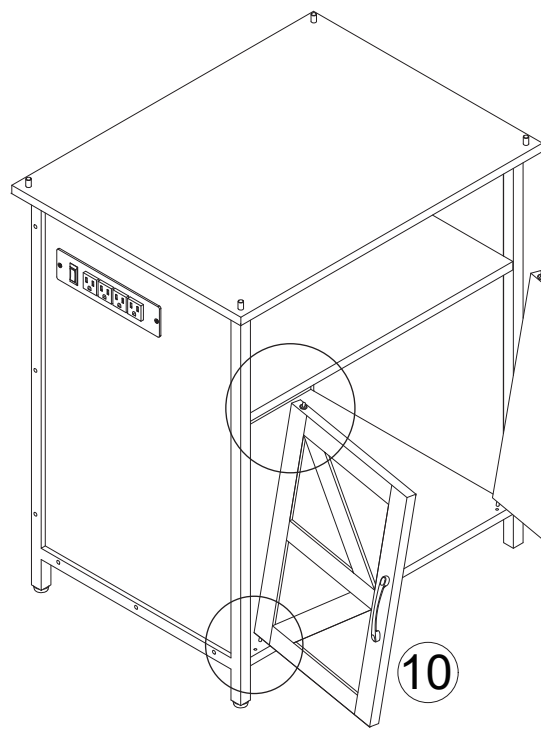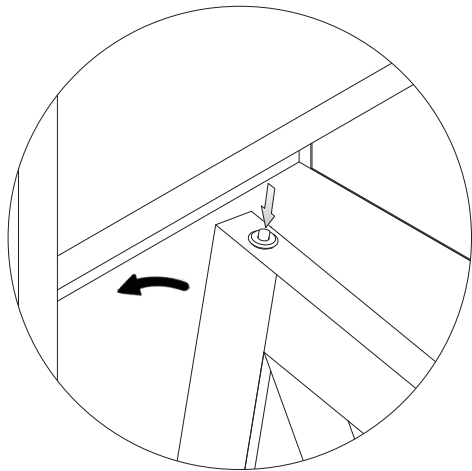
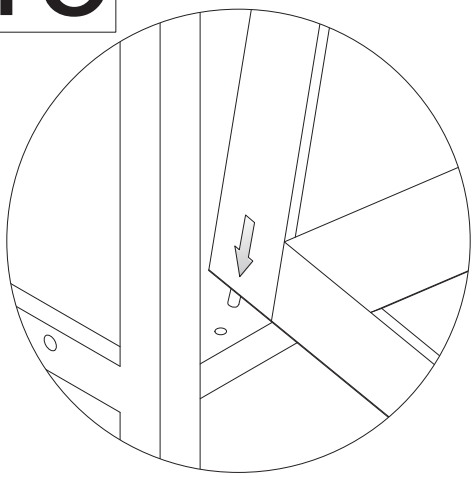


11

10

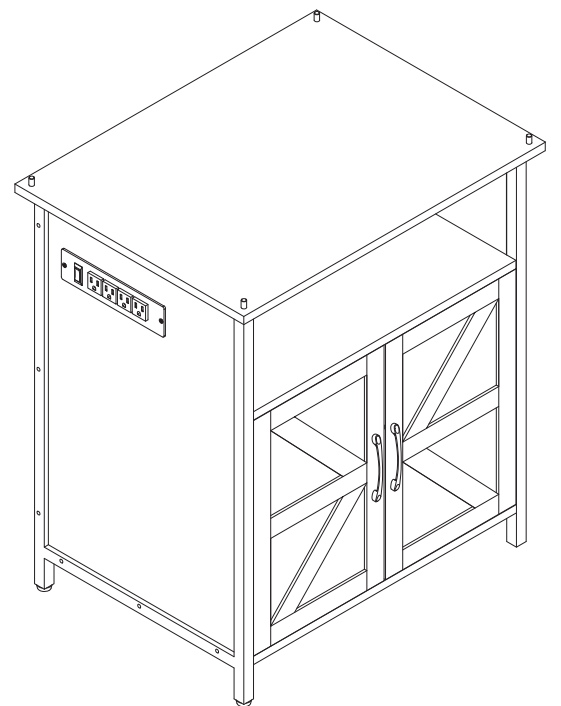

Attach Door Part #10 and Part #11 to the product as shown.

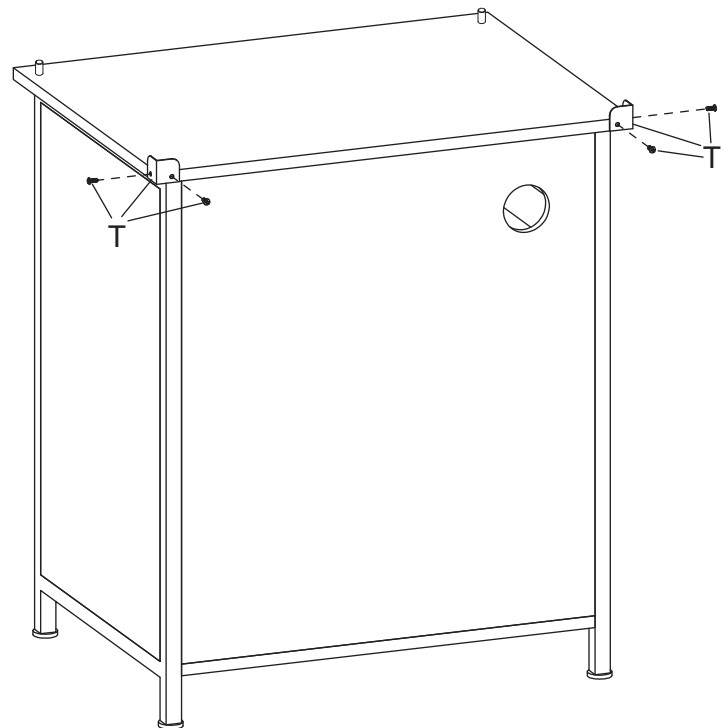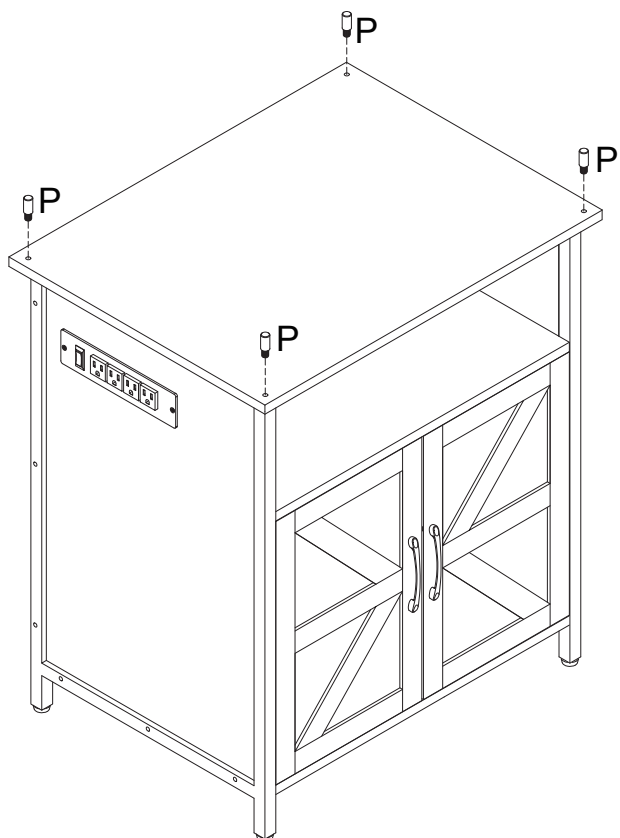

Part T and Part P are used to fix the tank to prevent movement. Depending on the model of your tank, install and use it according to actual needs. If P is not suitable for your tank bottom holes, then install Part T instead.

Px4

Tx2