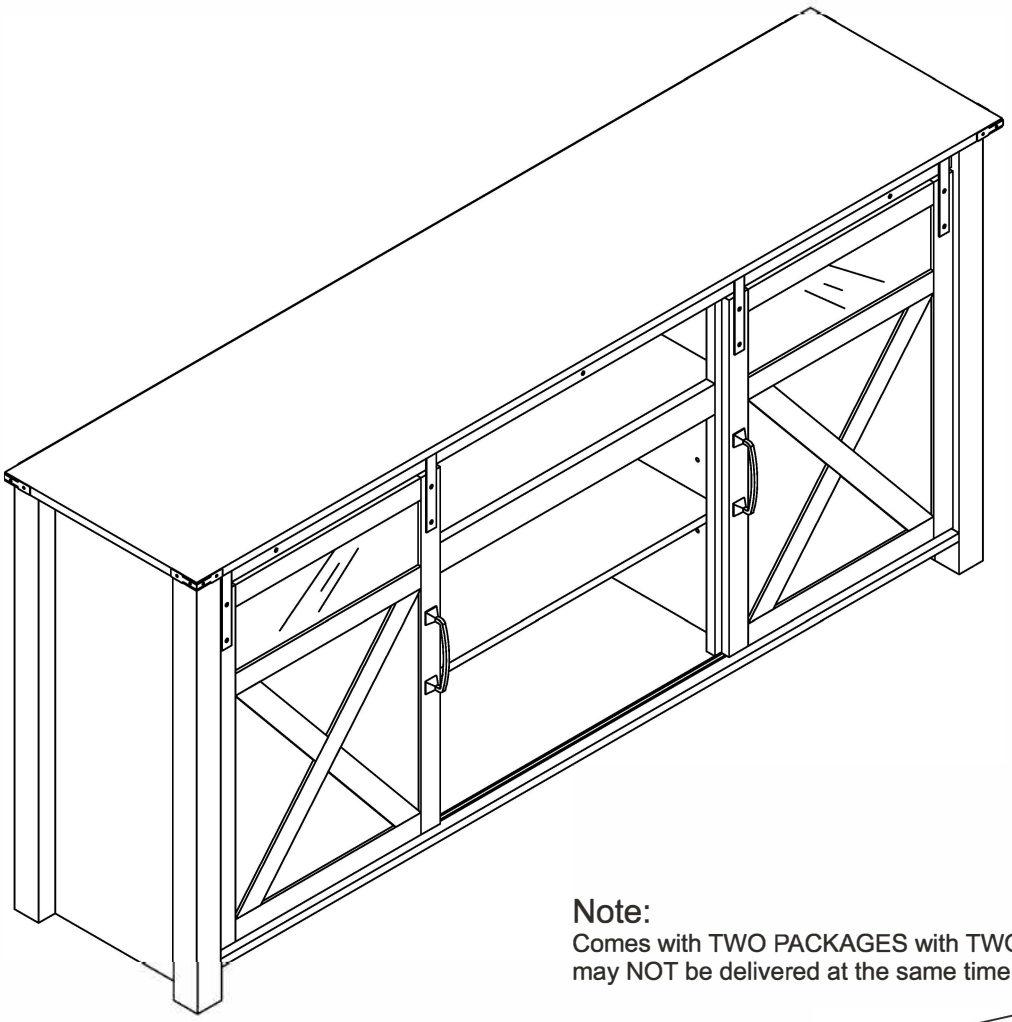
# ZSJX-V1

FTLFTS-6031
FTLFTS-6032



**Note:**
Comes with TWO PACKAGES with TWO TRACKINGS, may NOT be delivered at the same time.

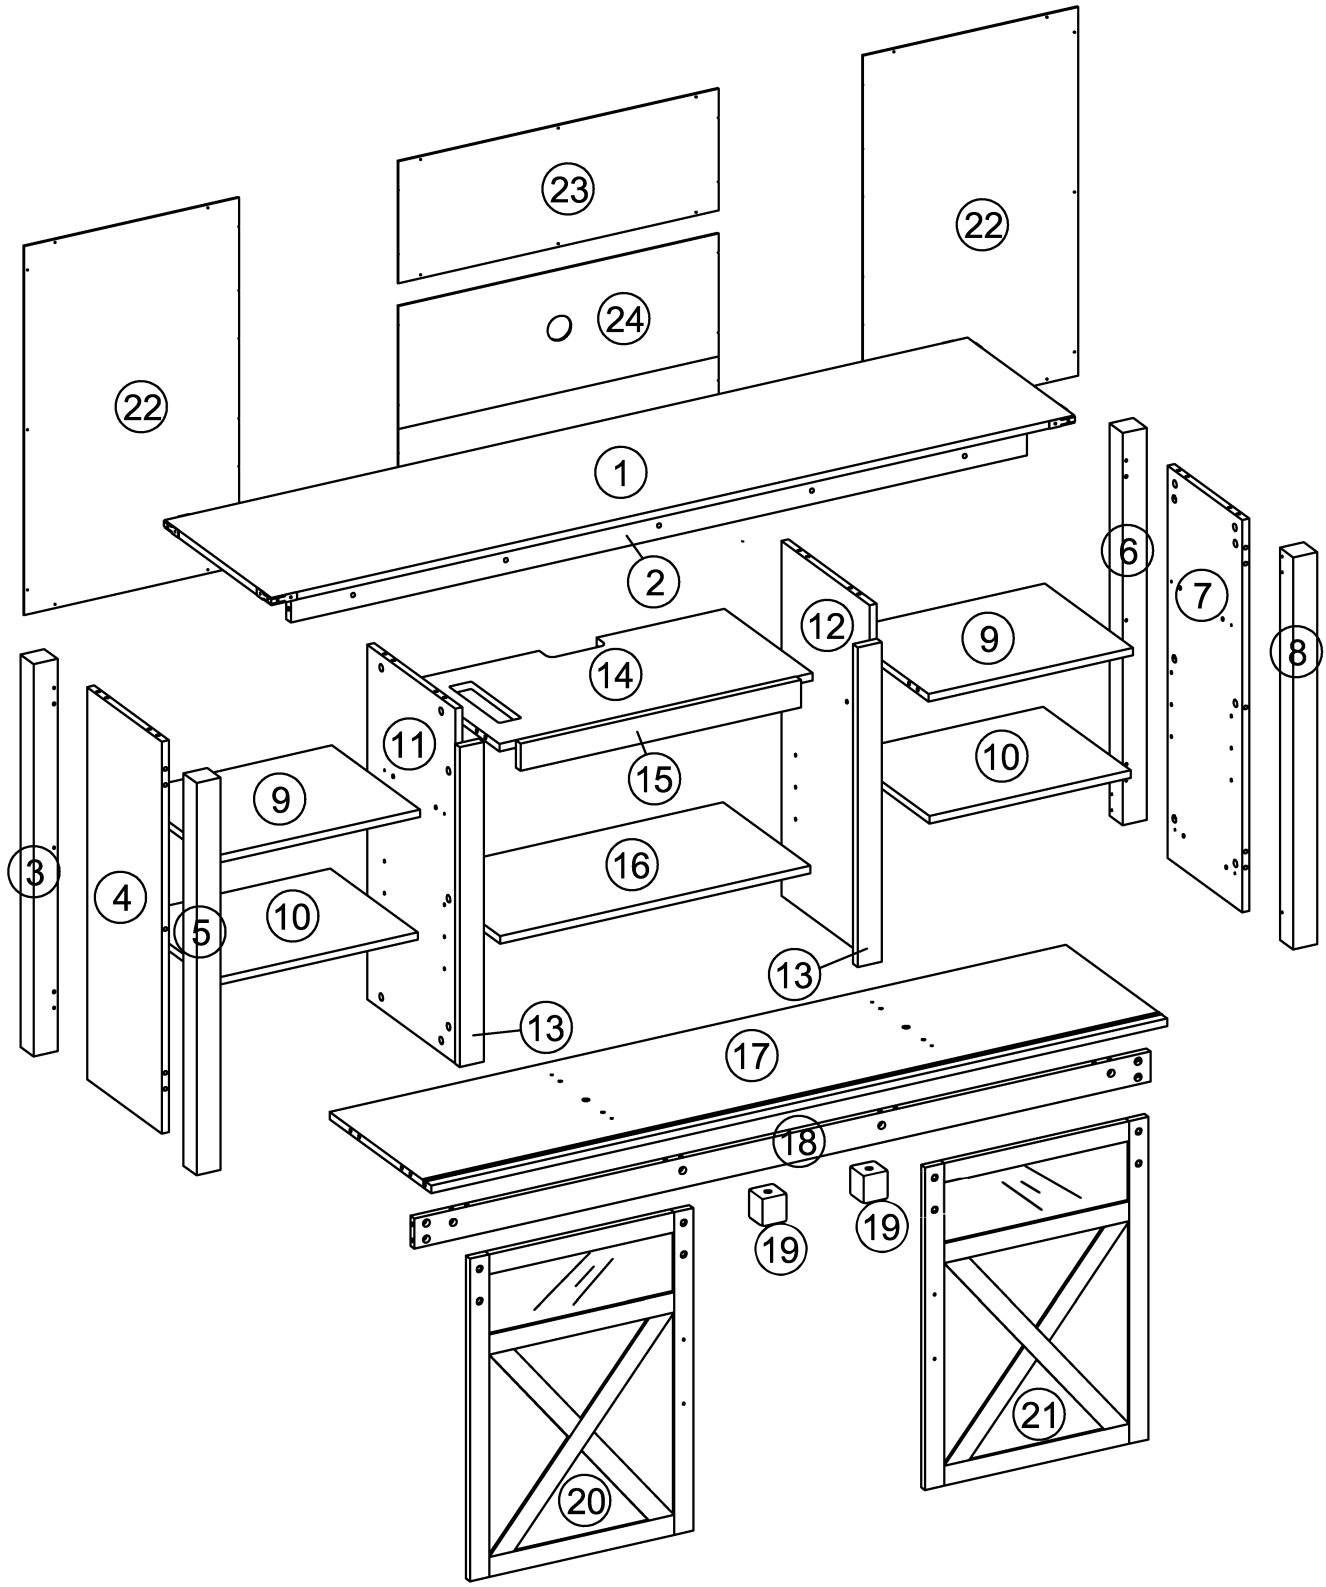
Carton 1 of 2

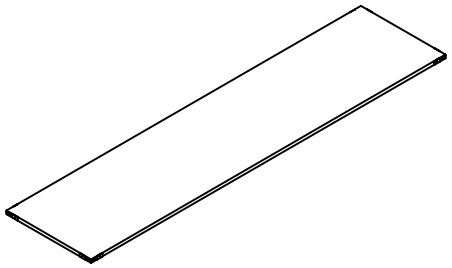
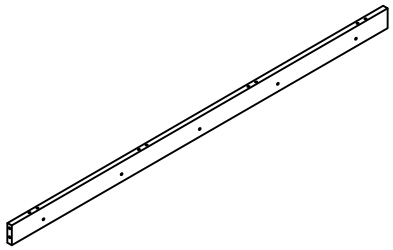
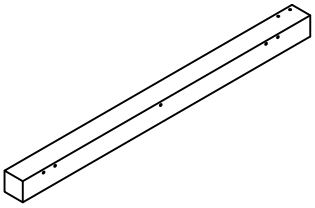
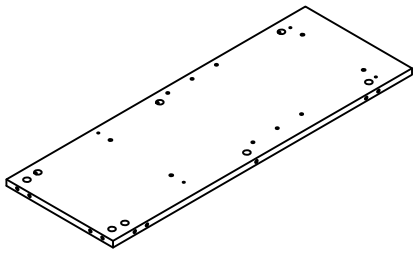
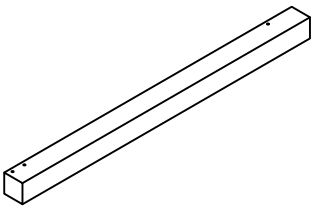
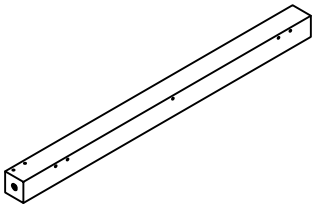
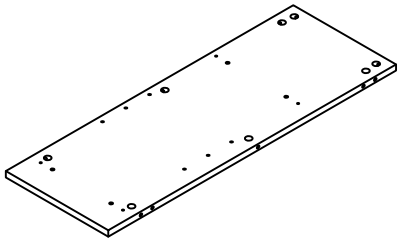
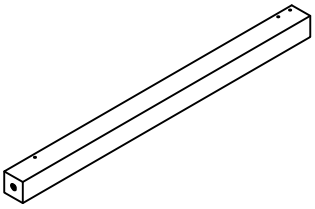
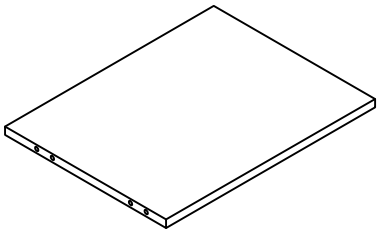
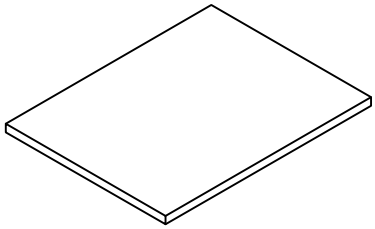
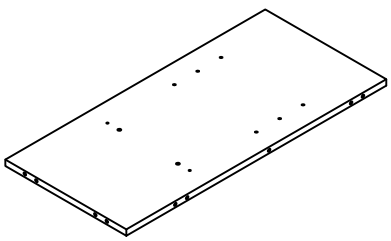
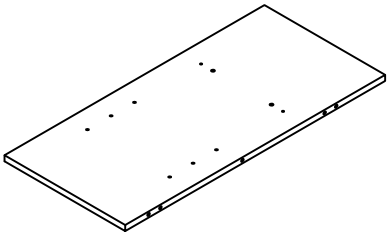



Carton 2 of 2




IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY




| | | |
|---|---|---|
| 1 x1  | 2 x1  | 3 x1  |
| 4 x1  | 5 x1  | 6 x1  |
| 7 x1  | 8 x1  | 9 x2  |
| 10 x2  | 11 x1  | 12 x1  |

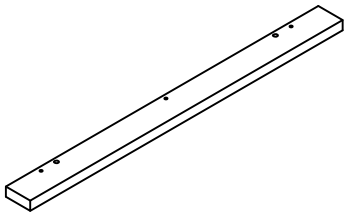
13 x2




14 x1

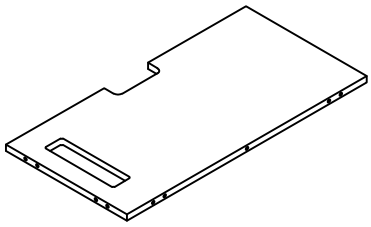


15 x1

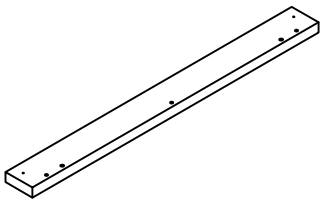


16 x1

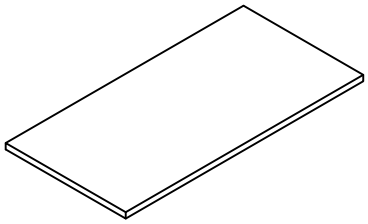


17 x1

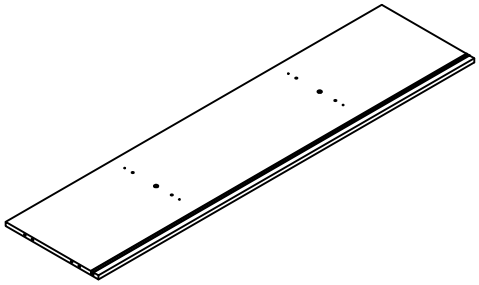


18 x1

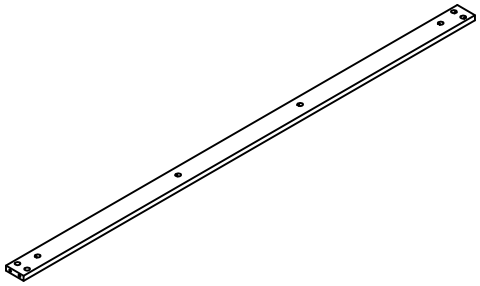


19 x2

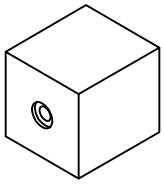


20 x1

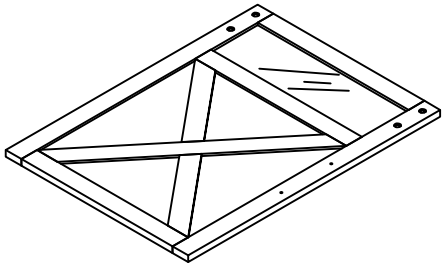


21 x1

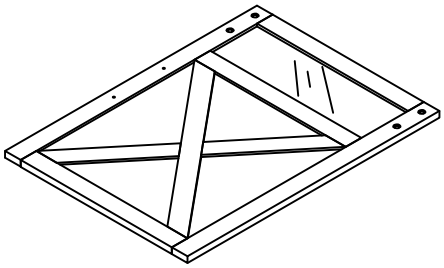


22 x2

















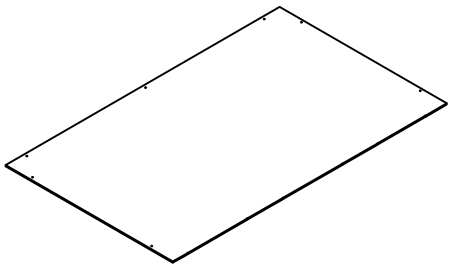


23 x1

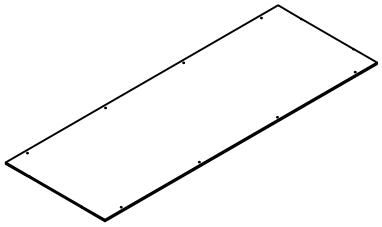


24 x1

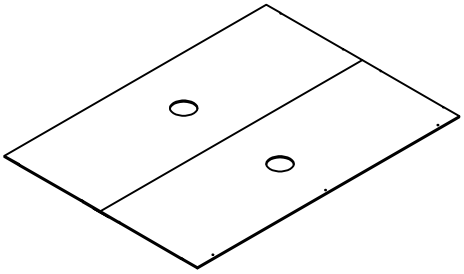

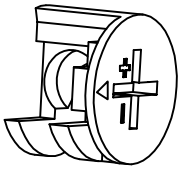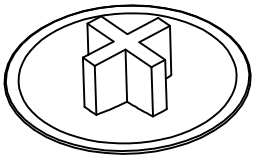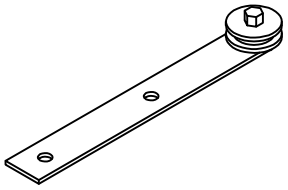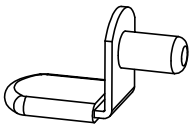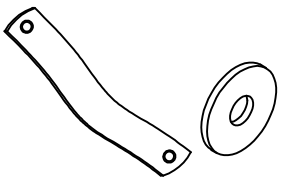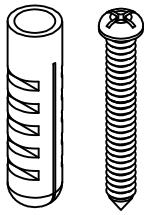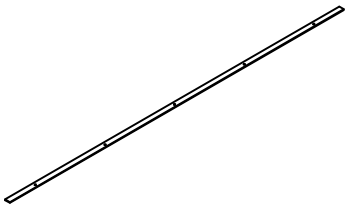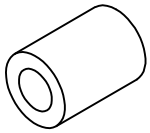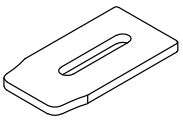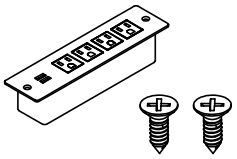
| | | | |
|---|---|---|---|
| A  67X+4X | B Ø8x30mm  50X+4X | C Ø15  67X+4X | D  2X |
| E Ø3.9×15mm  8X | F Ø3.5x16mm  39X+3X | G Ø5/32"×22mm  4X | H Ø1/4"×30mm  7X |
| I  50X | J  4X | K  12X | L  2X+4X |
| M  2X+2X | N  6X | O  1X | P  5X |
| Q  4X | R  4X | S Ø1/4"×12mm  8X | T Ø3.9x15mm  8X | U Ø3.5×12mm  1X |

# Step 1

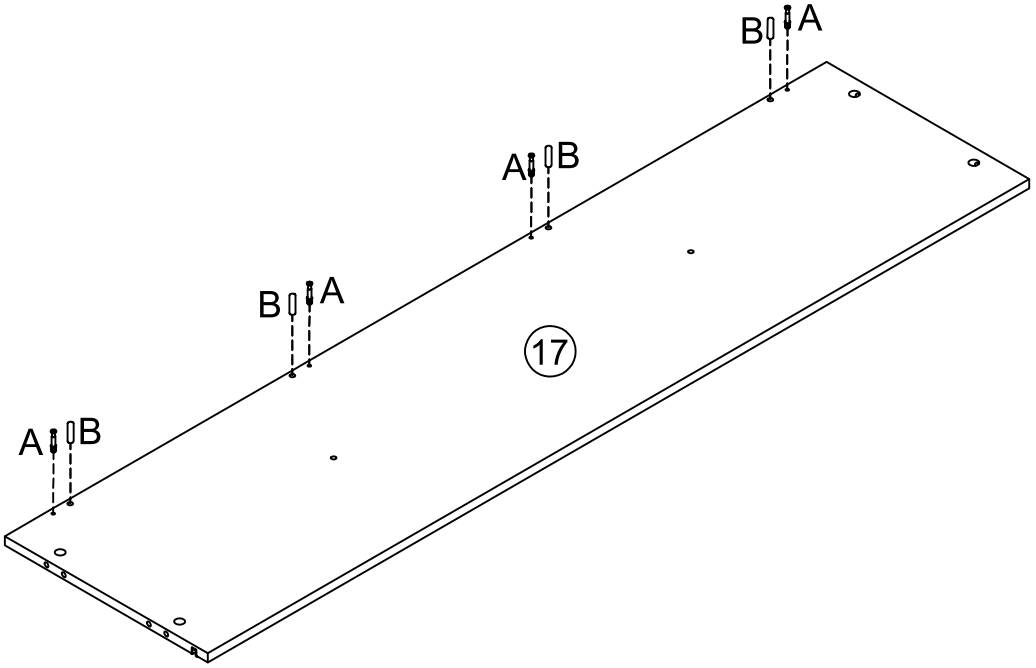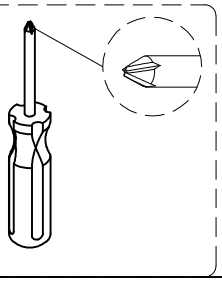
| | | |
|---|---|---|
| A |  | 4 |
| B |  | 4 |




# Step 2

| | | |
|---|---|---|
| C |  | 4 |

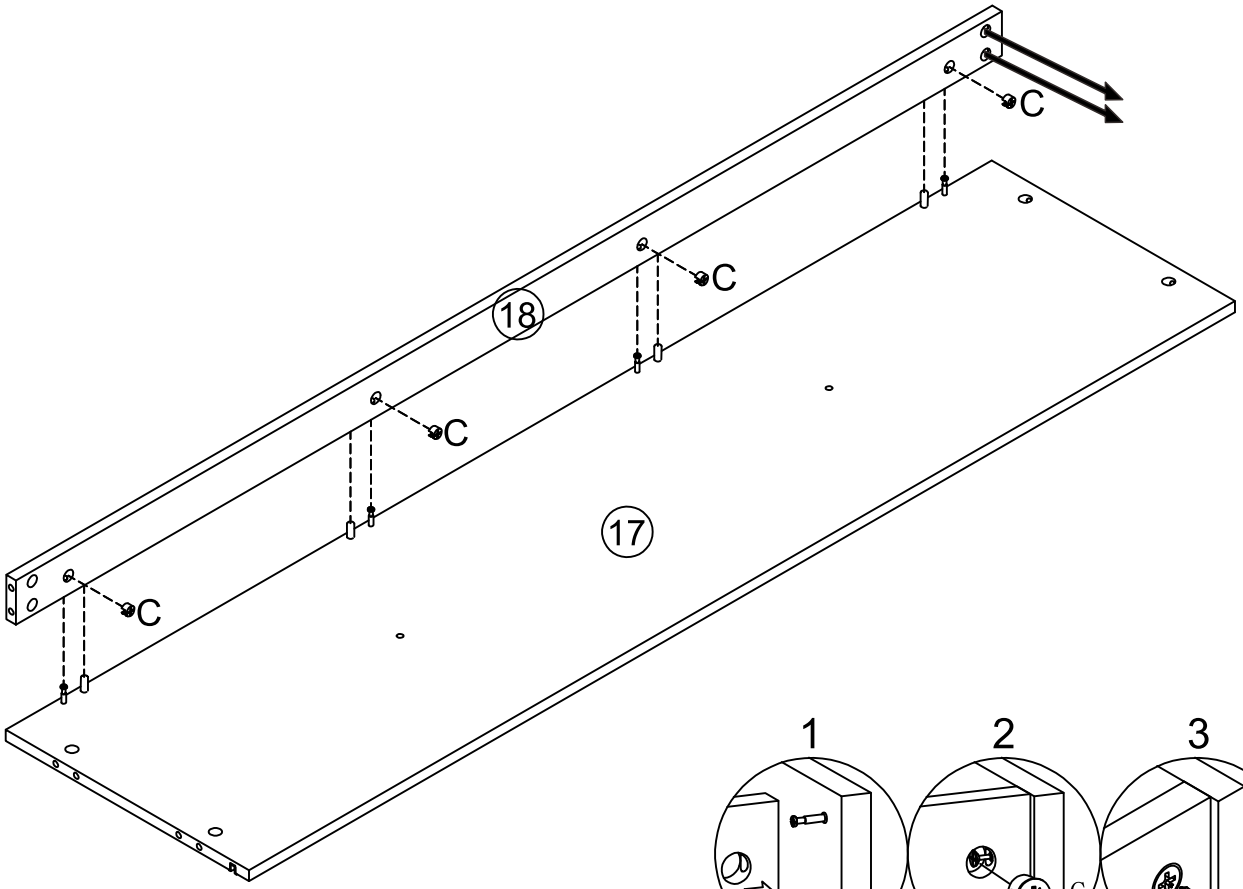

## Step 3
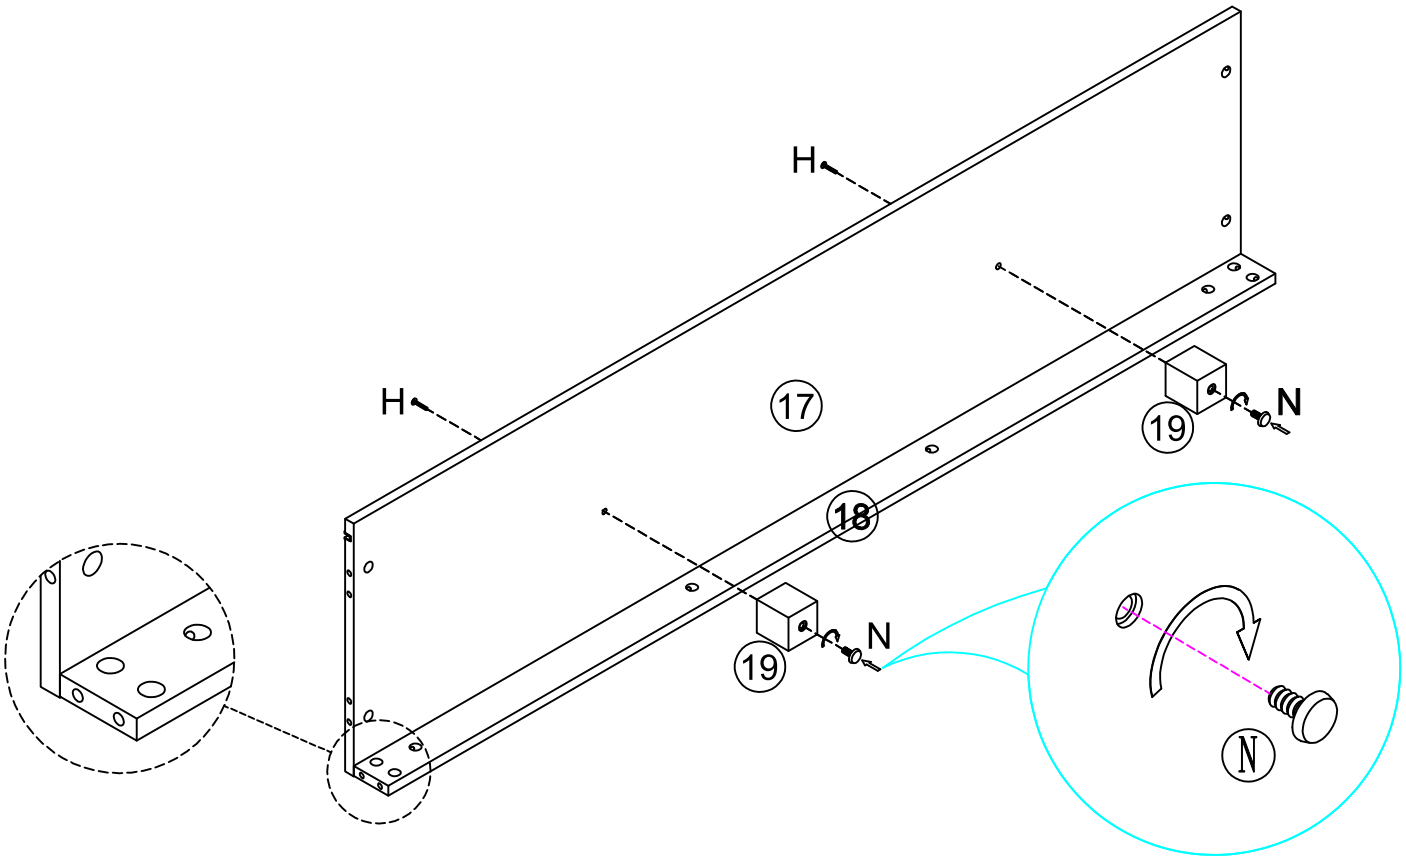
| | | |
|---|---|---|
| H |  | 2 |
| N |  | 2 |





## Step 4

| | | |
|---|---|---|
| A |  | 4 |

# Step 5


Board No. 11 and 12 are flipped 180 degrees.
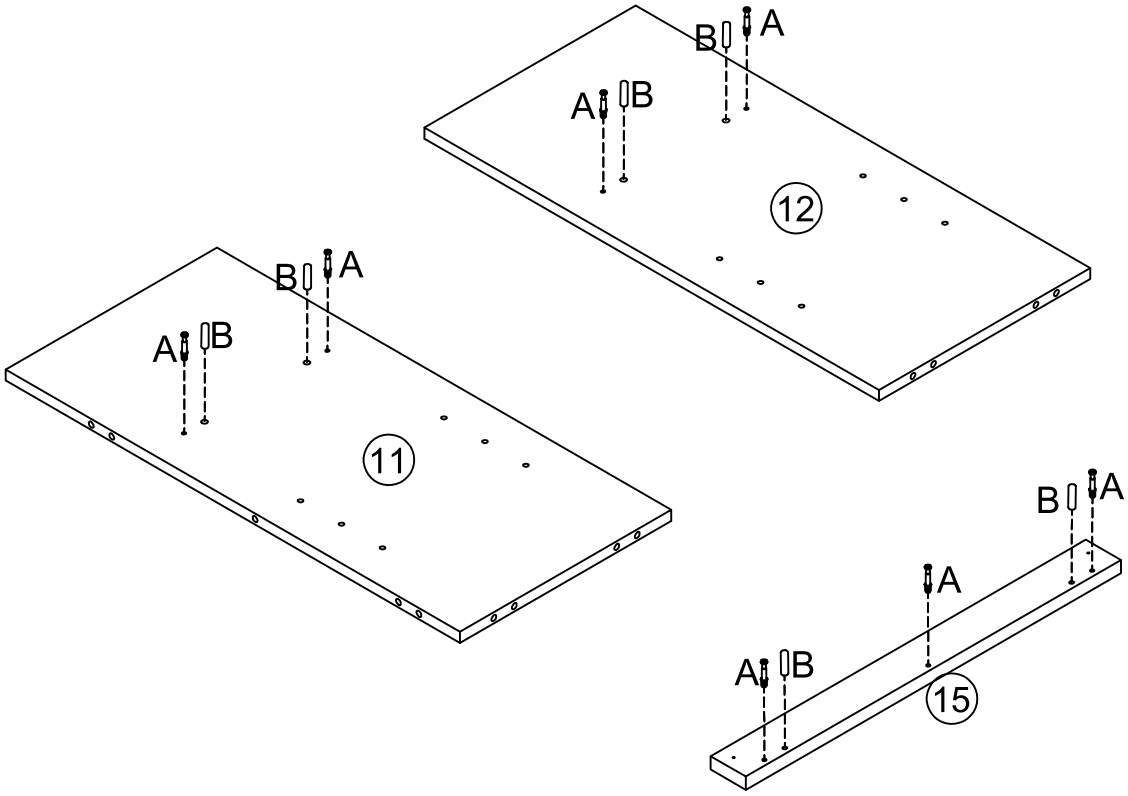
| | | |
|---|---|---|
| A |  | 7 |
| B |  | 6 |




# Step 6

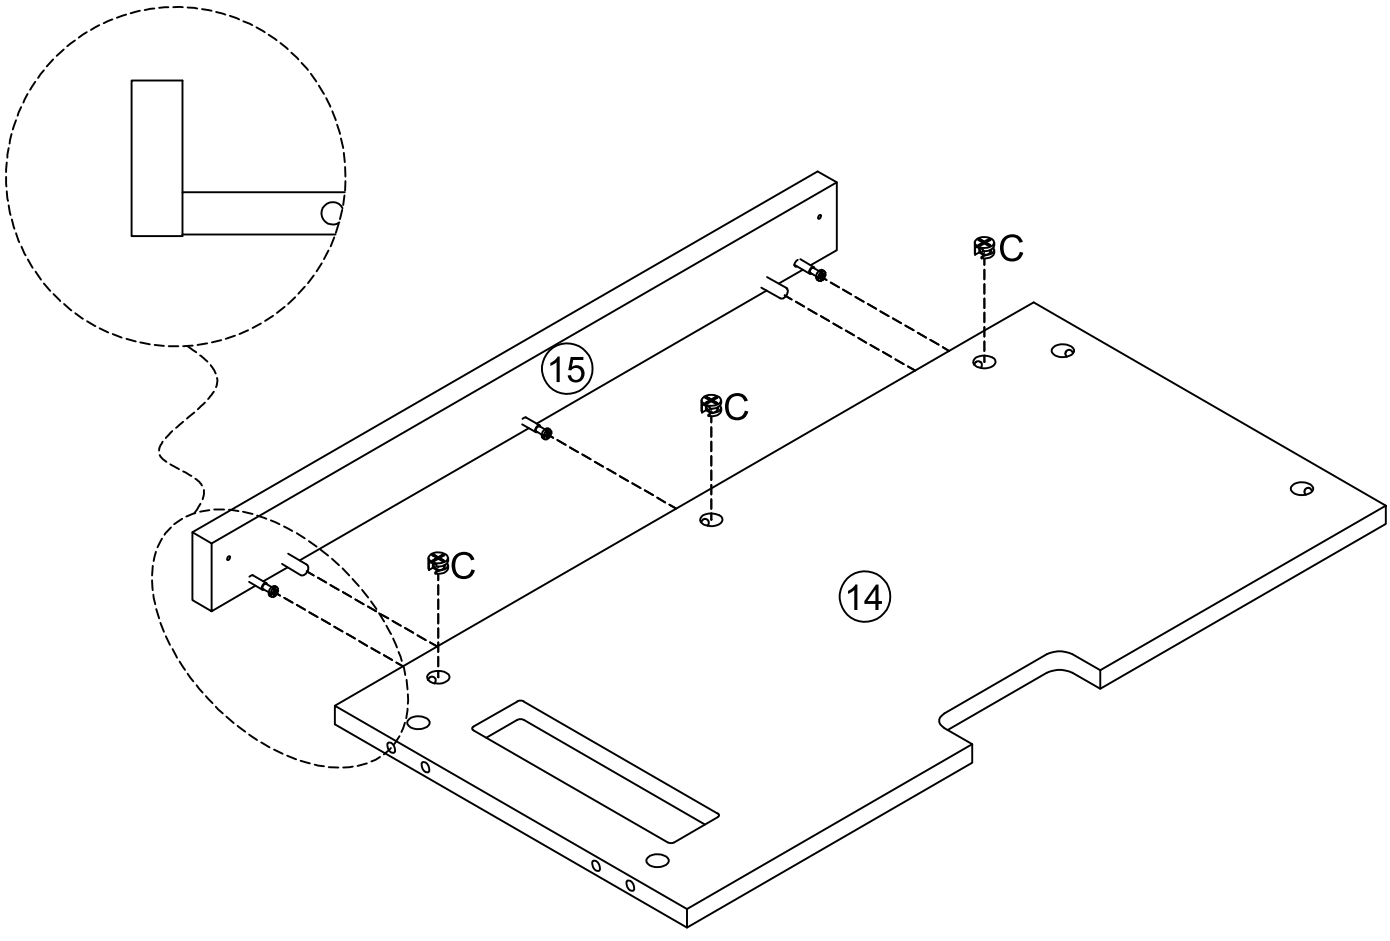
| | | |
|---|---|---|
| C |  | 3 |



# Step 7


| C | | 4 |
|---|---|---|

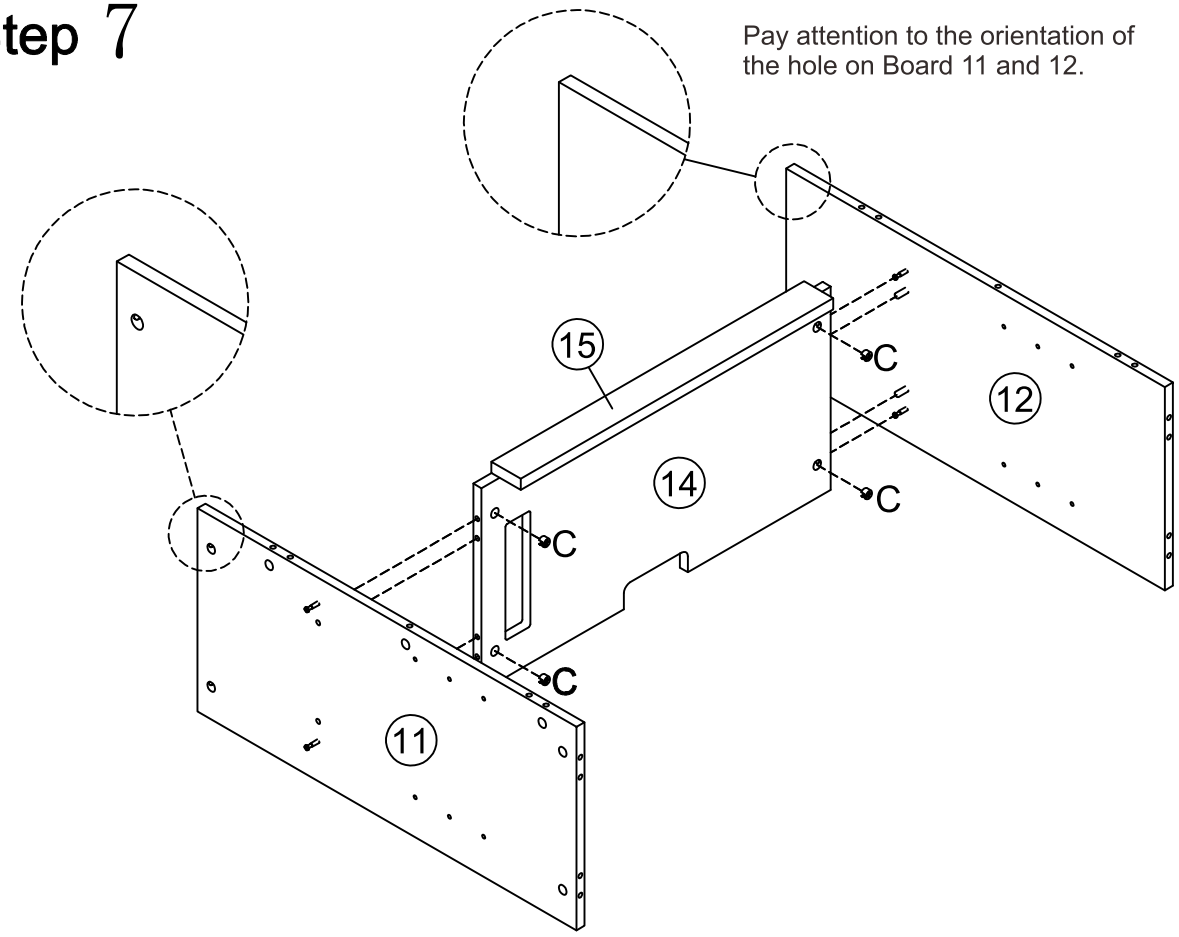Pay attention to the orientation of the hole on Board 11 and 12.





# Step 8
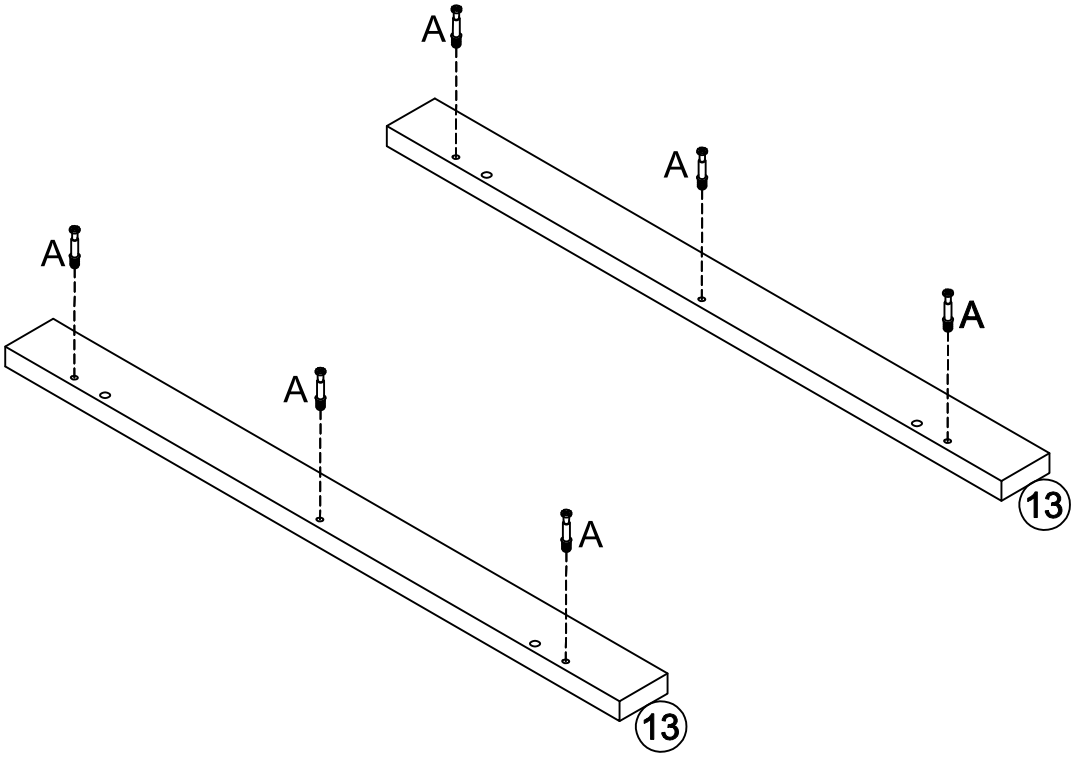
| A | | 6 |
|---|---|---|




## Step 9
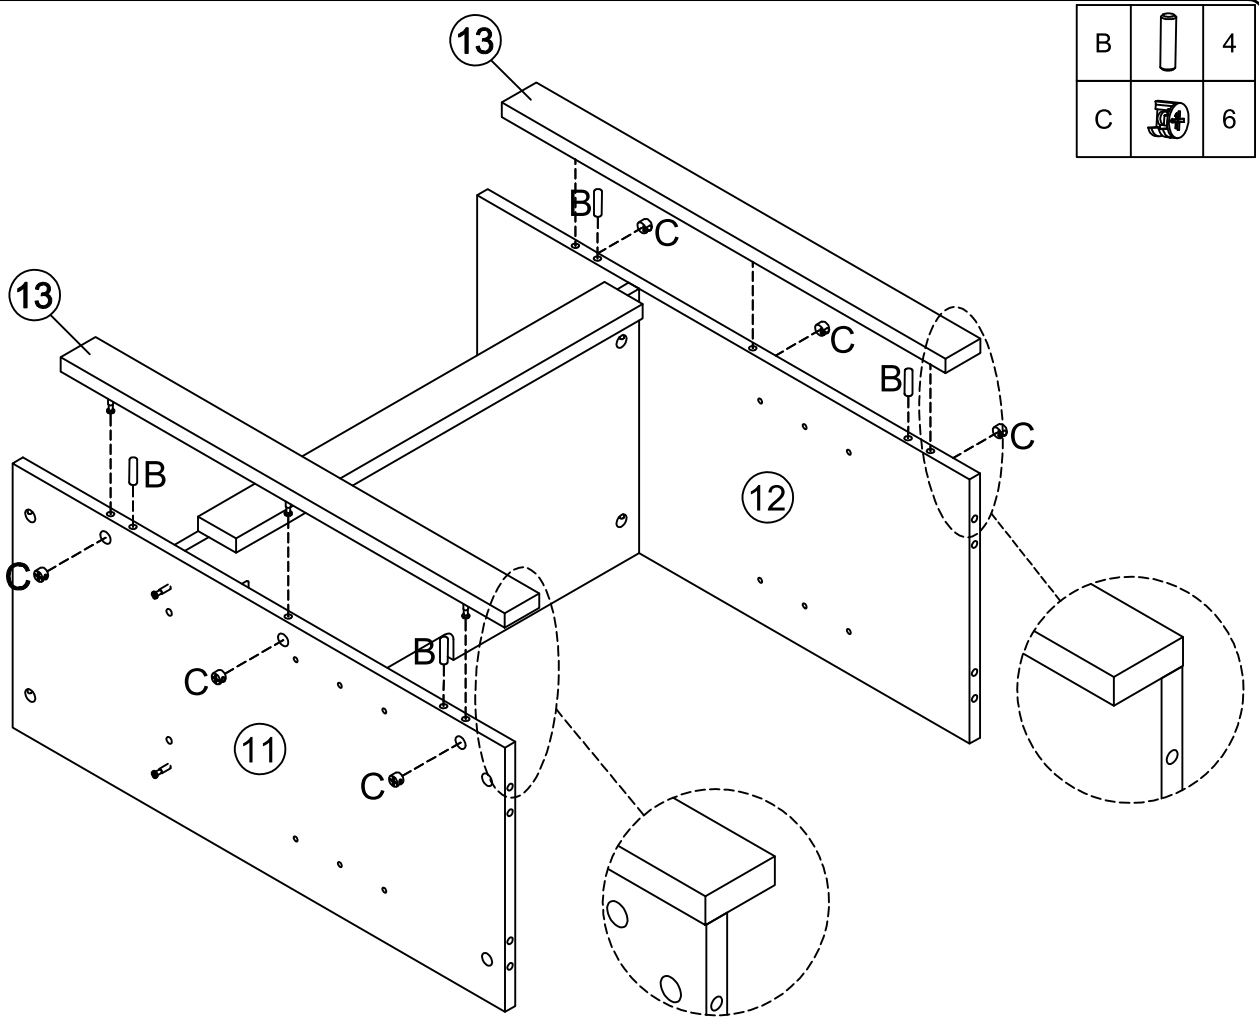
| | | |
|---|---|---|
| B | | 4 |
| C | | 6 |





## Step 10
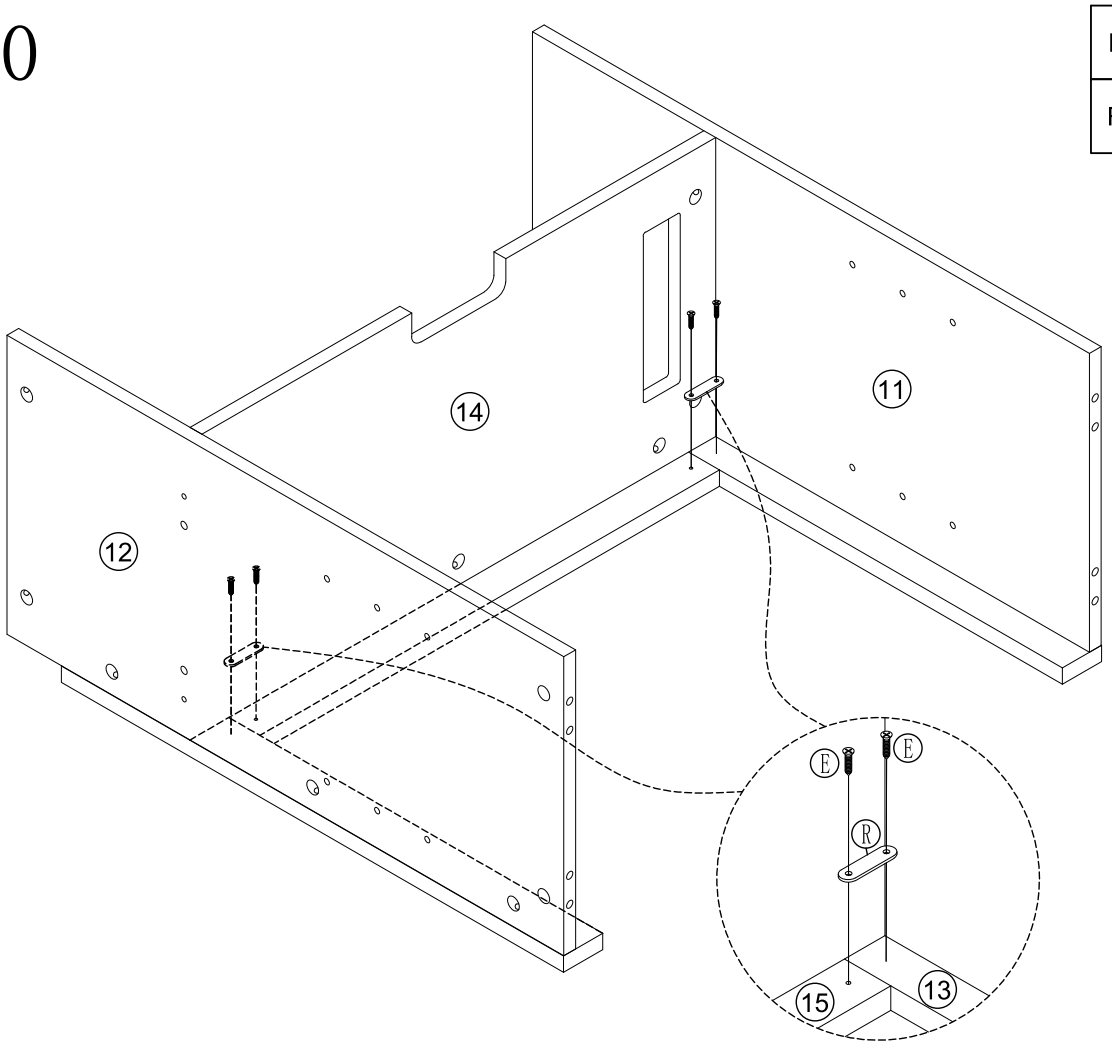
| | | |
|---|---|---|
| E | | 4 |
| R | | 2 |



# Step 11

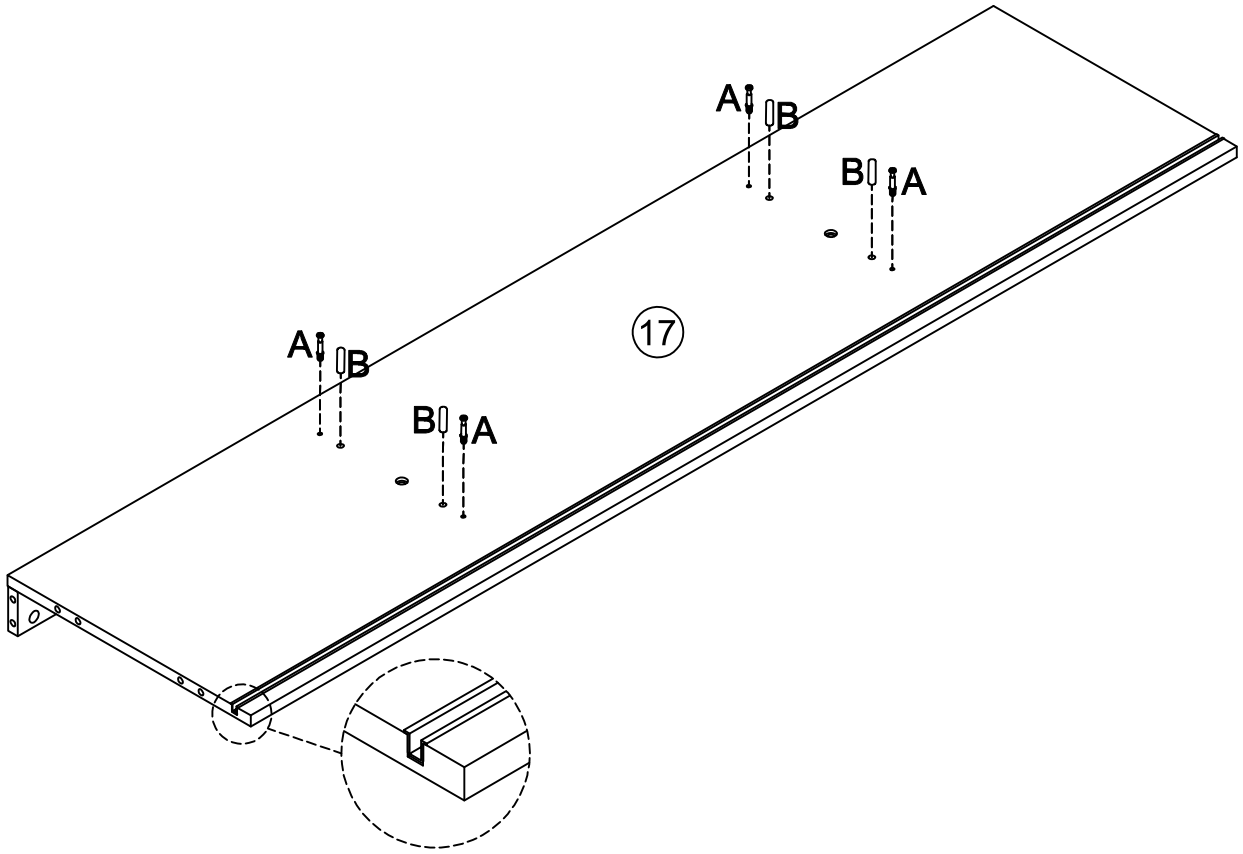
| | | |
|---|---|---|
| A |  | 4 |
| B |  | 4 |



# Step 12


Pay attention to the orientation of the hole on Board 11 and 12.
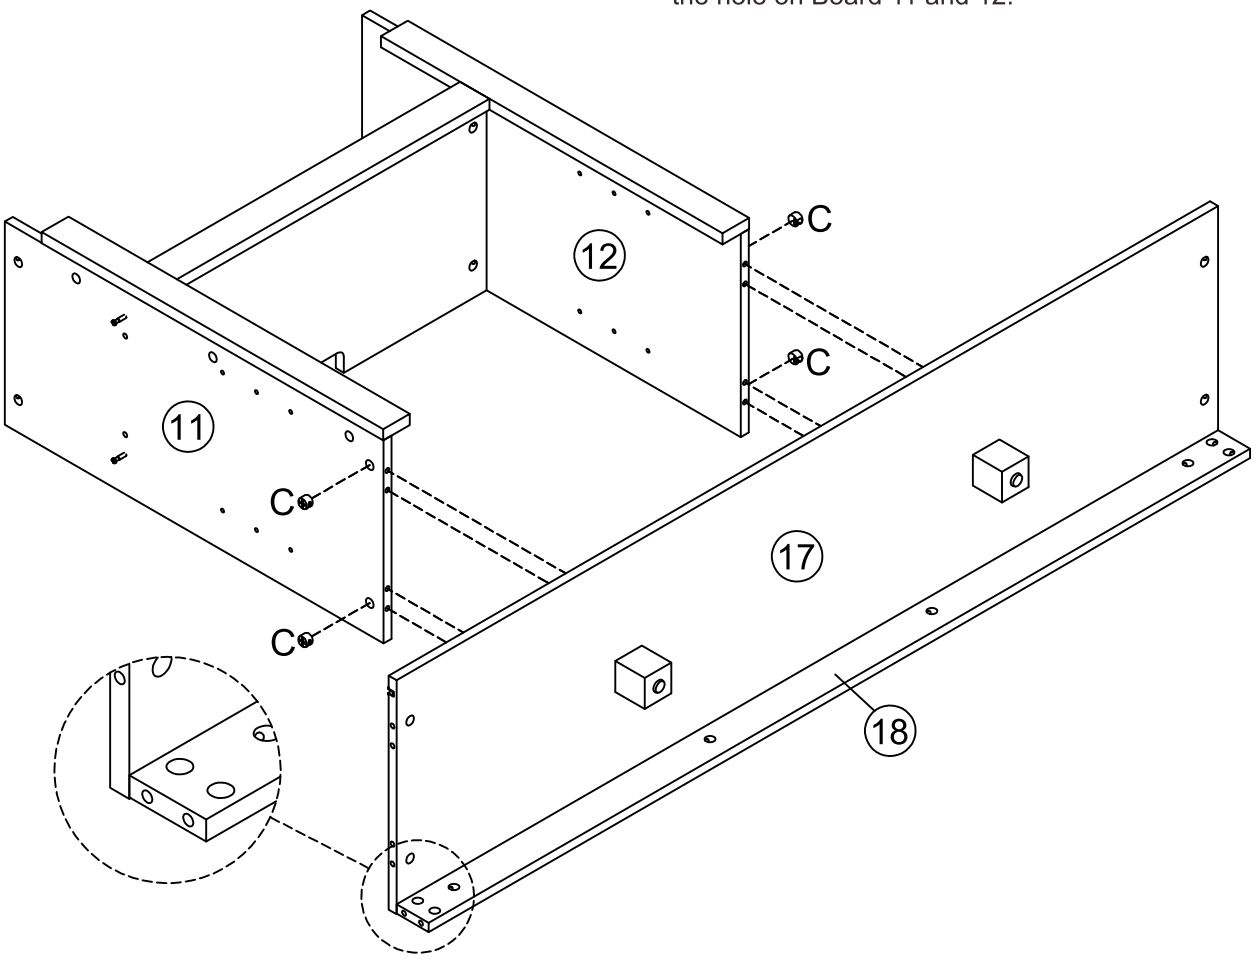
| | | |
|---|---|---|
| C |  | 4 |




# Step 13
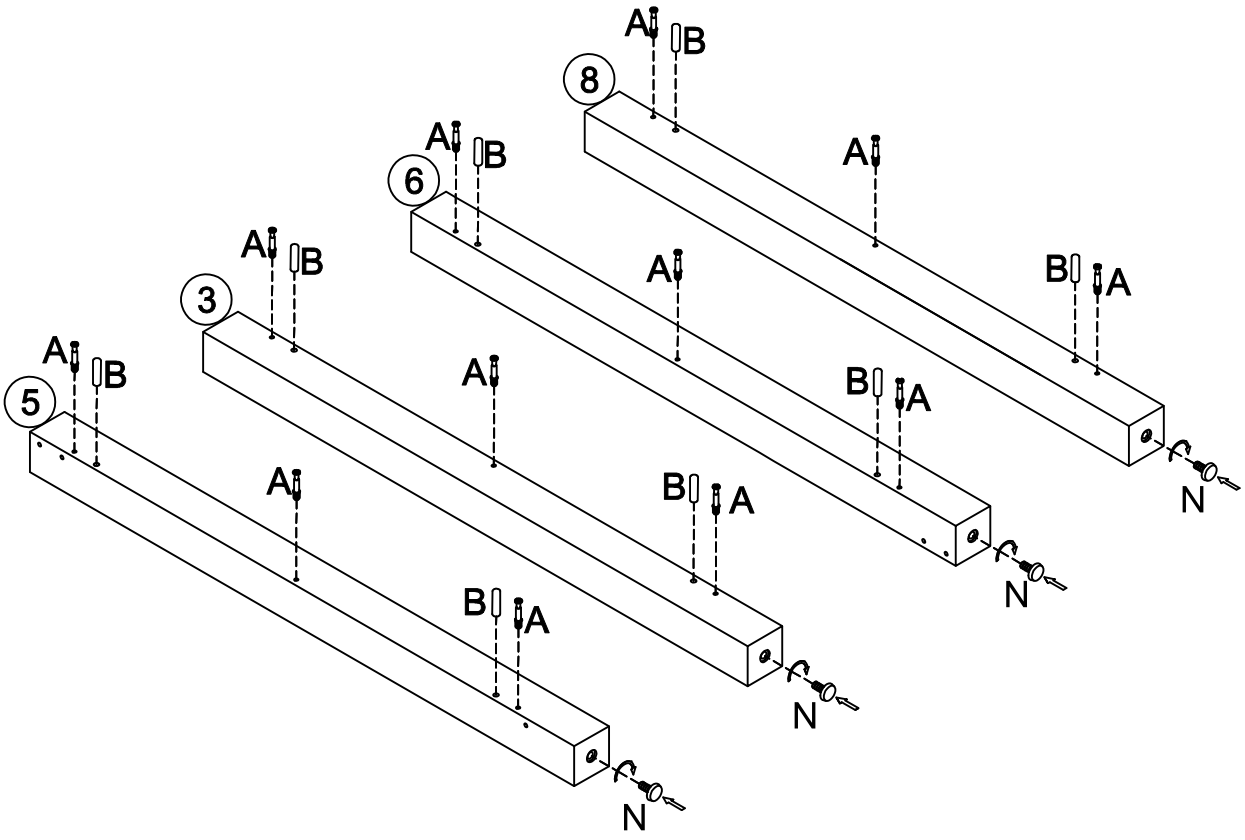
| | | |
|---|---|---|
| A |  | 12 |
| B |  | 8 |
| N |  | 4 |



# Step 14

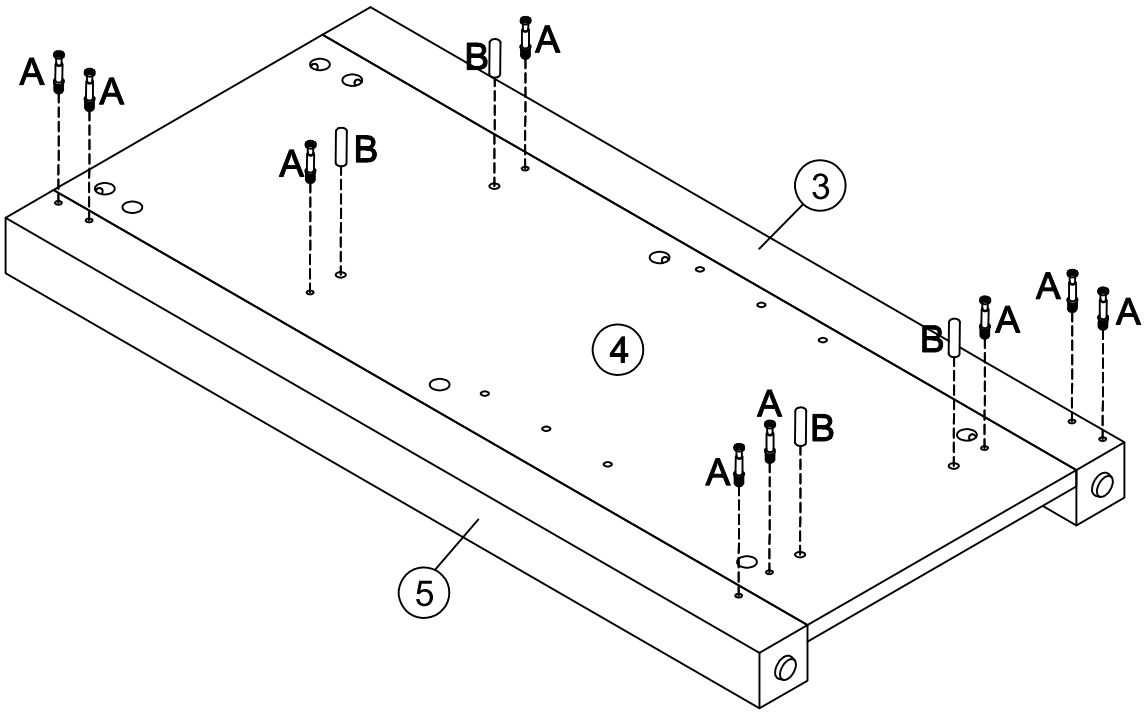
| | | |
|---|---|---|
| C |  | 6 |

Pay attention to the direction of the accessories.





# Step 15

| | | |
|---|---|---|
| A |  | 9 |
| B |  | 4 |



# Step 16

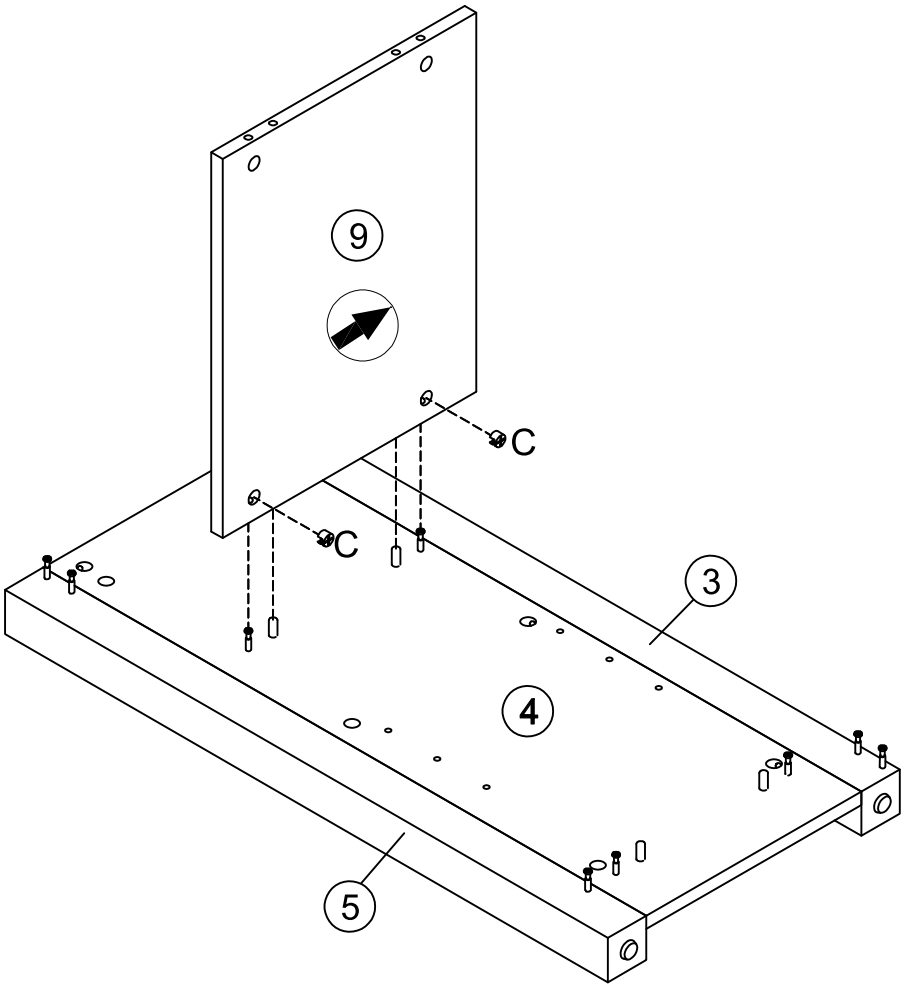
| C | | 2 |
|---|---|---|




# Step 17

| C | | 6 |
|---|---|---|

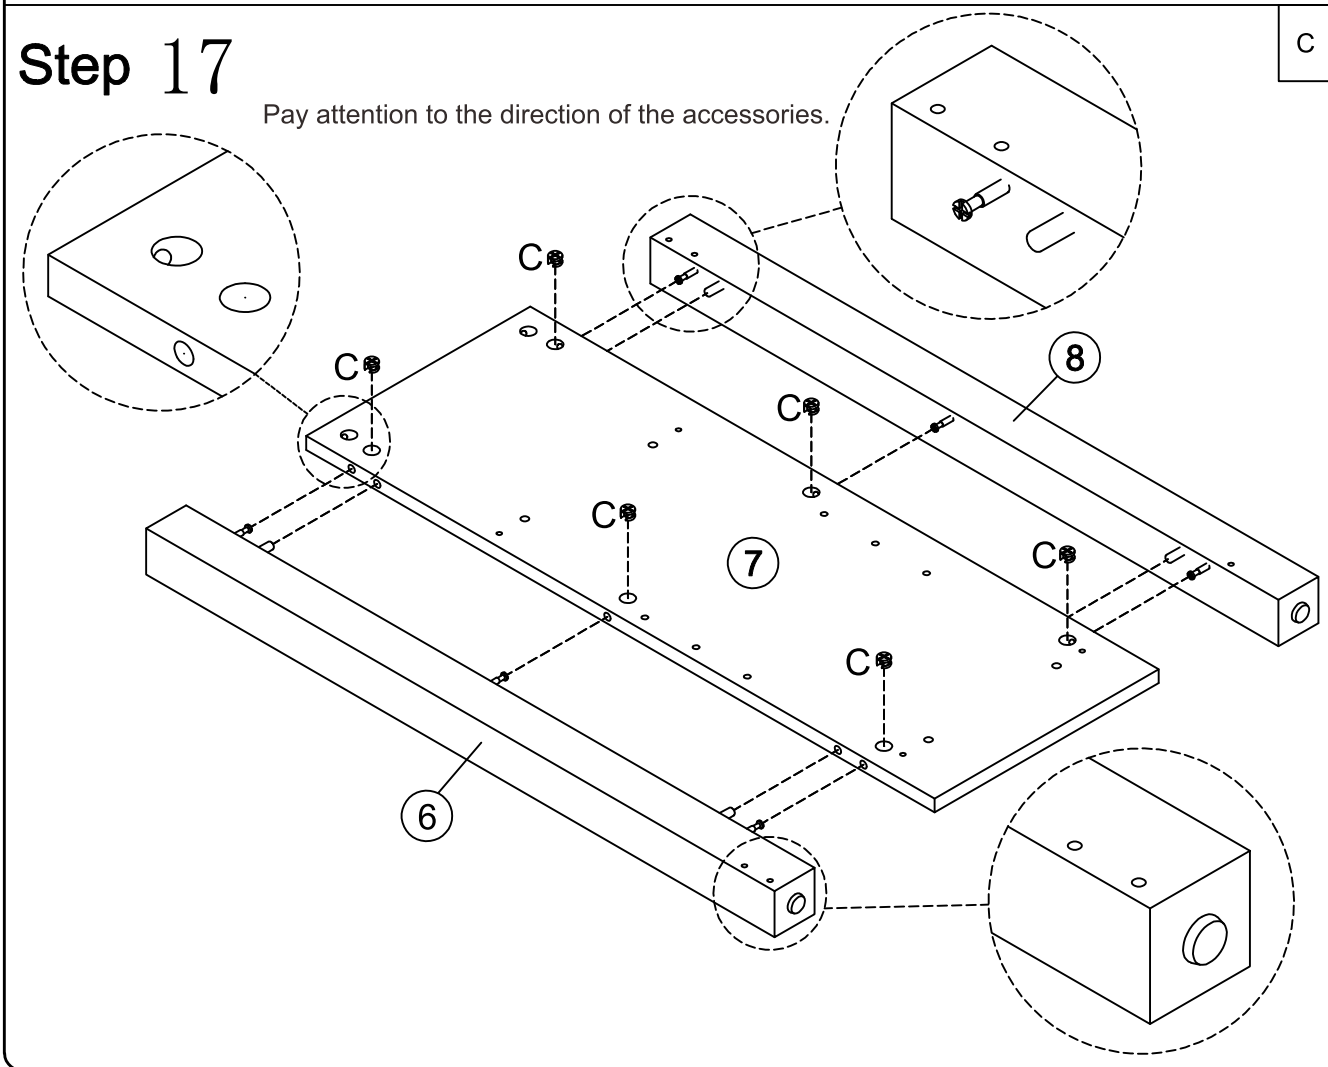Pay attention to the direction of the accessories.




## Step 18

| | | |
|---|---|---|
| A |  | 9 |
| B |  | 4 |





## Step 19
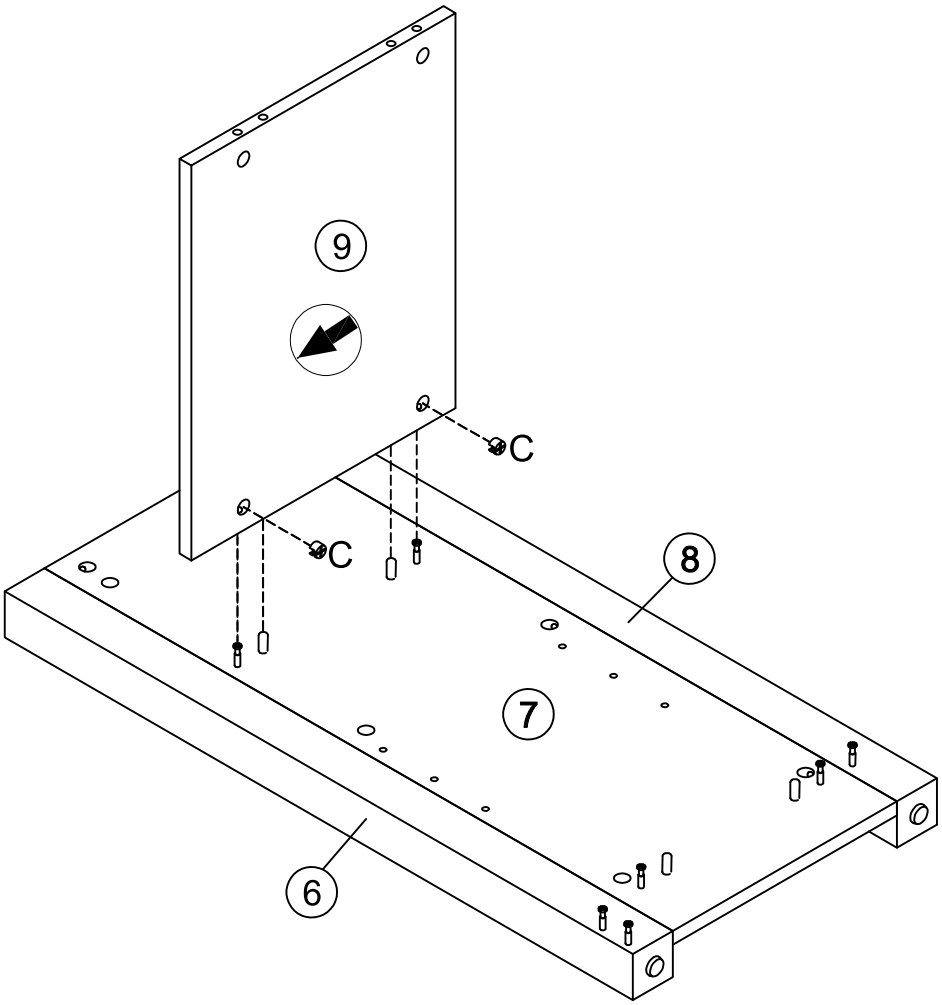
| | | |
|---|---|---|
| C |  | 2 |



## Step 20
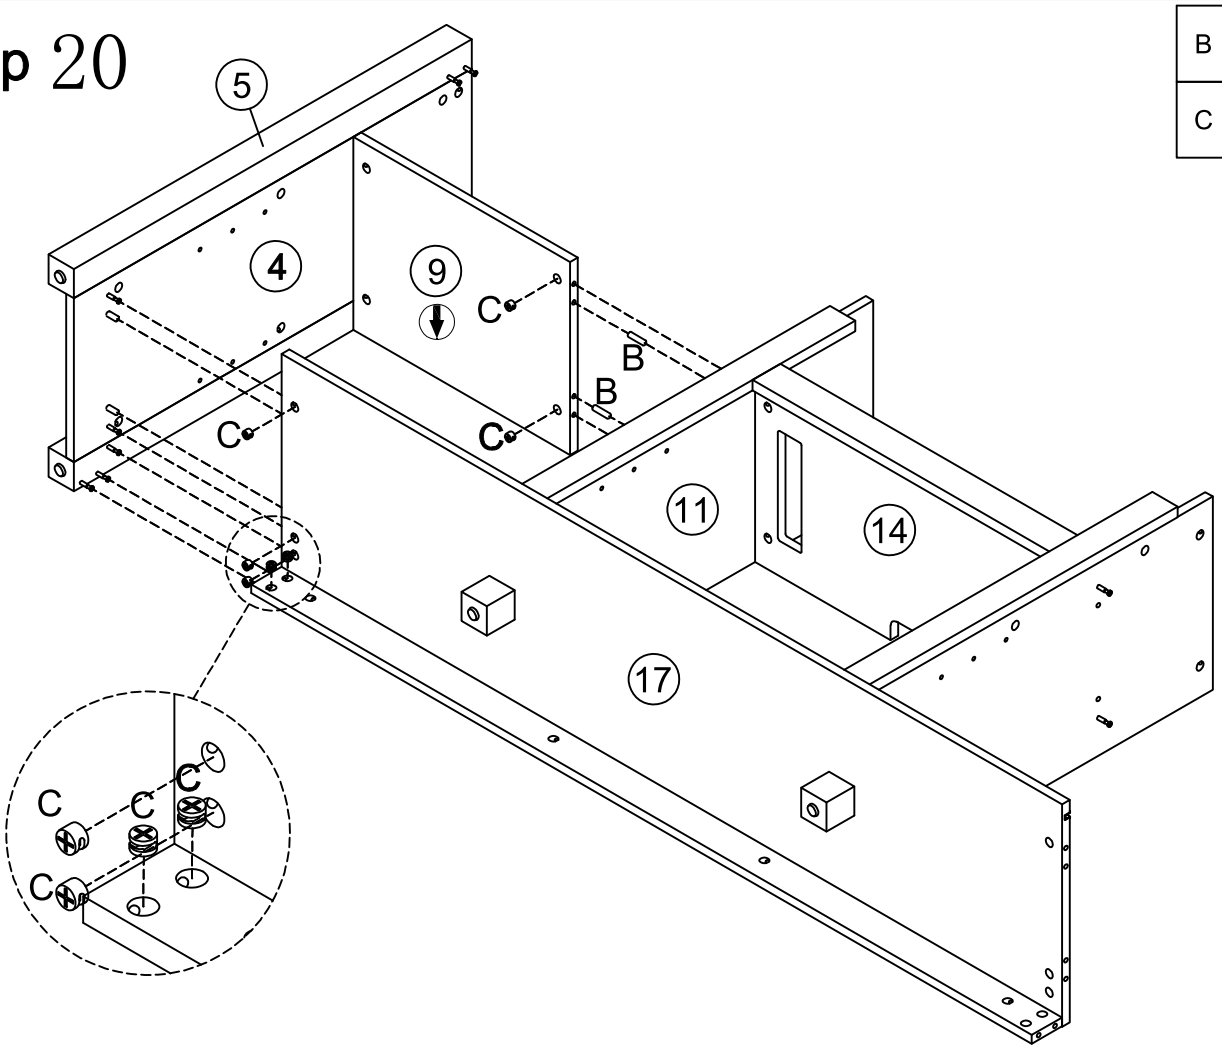
| | | |
|---|---|---|
| B |  | 2 |
| C |  | 7 |





## Step 21

| | | |
|---|---|---|
| C |  | 2 |


# Step 22
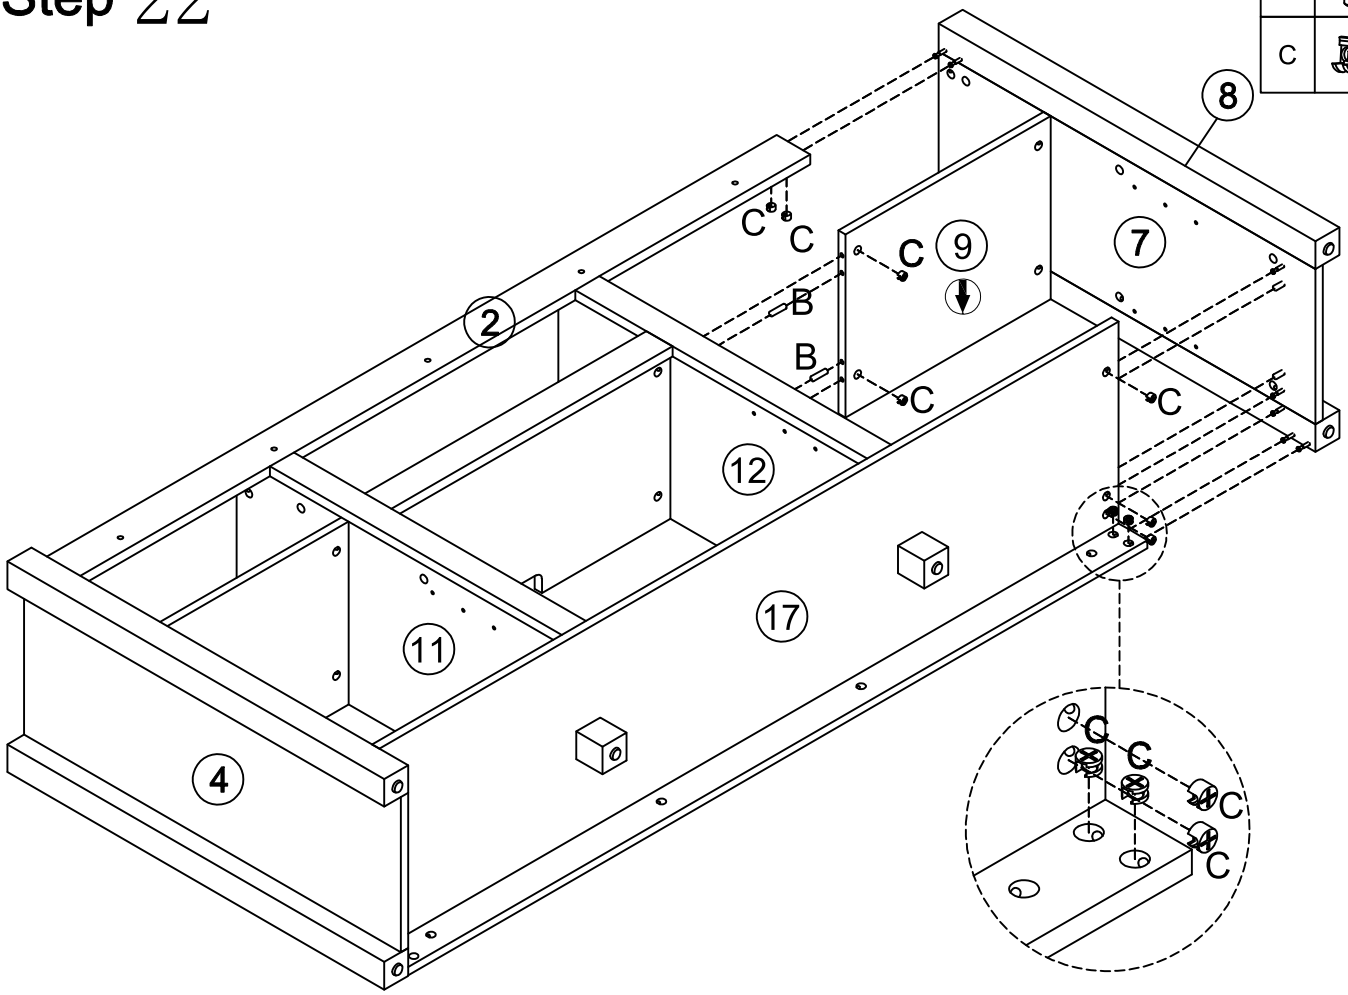
| | | |
|---|---|---|
| B |  | 2 |
| C |  | 9 |





# Step 23
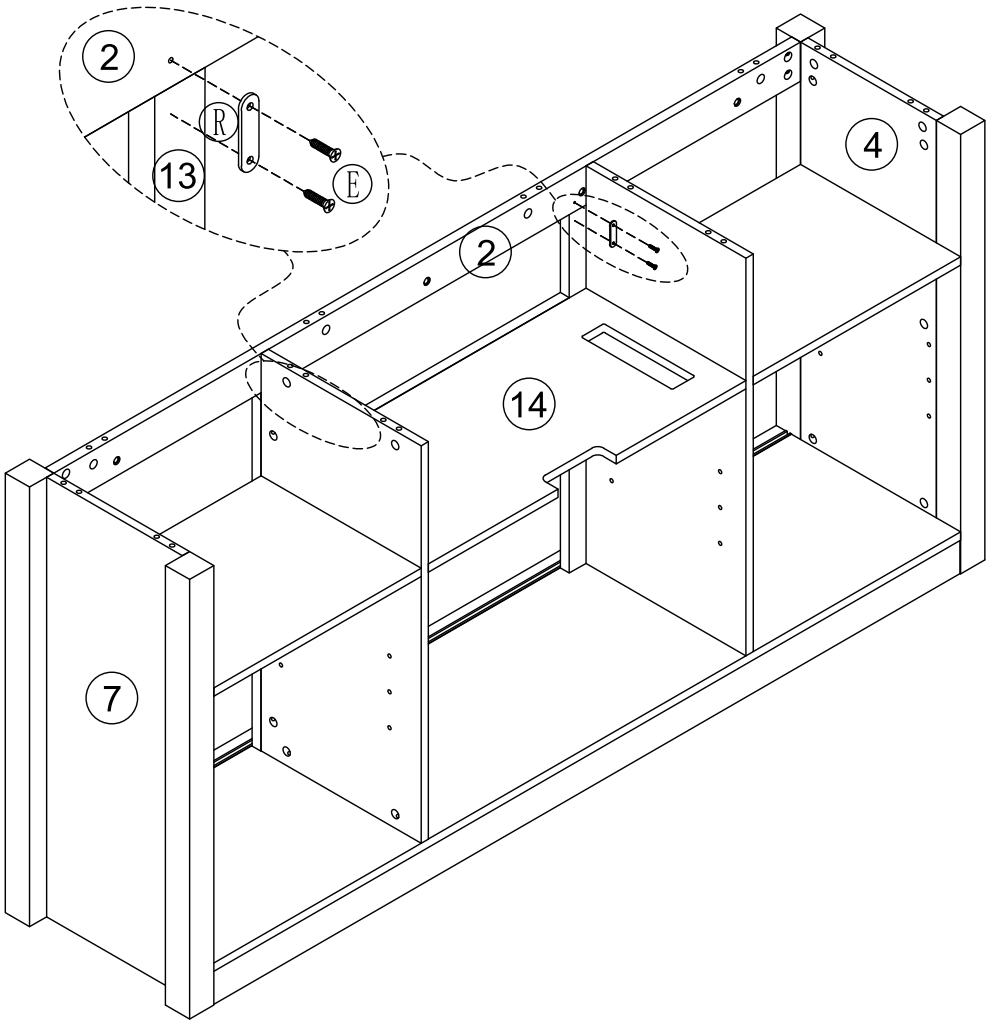
| | | |
|---|---|---|
| E |  | 4 |
| R |  | 2 |



## Step 24
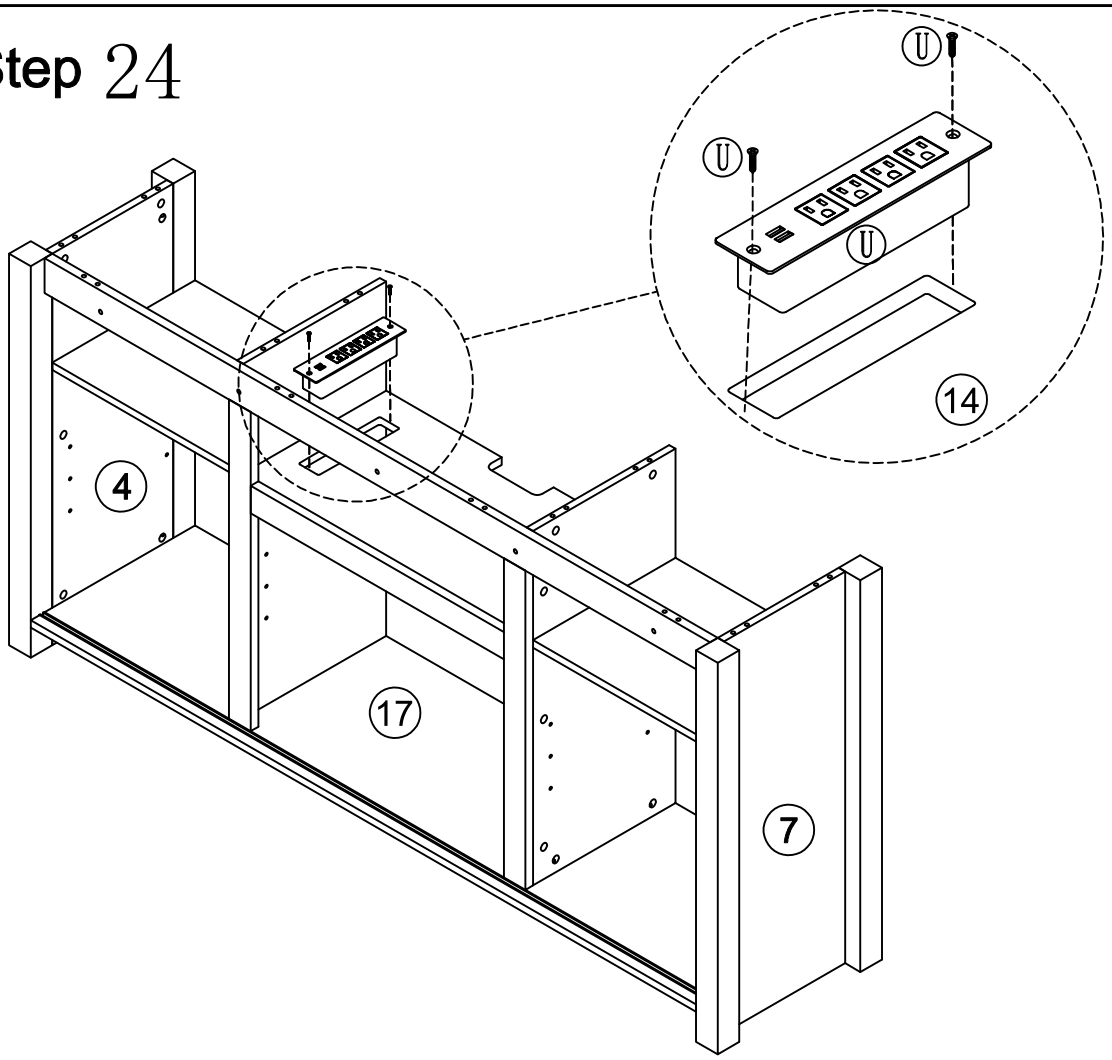
| | | |
|---|---|---|
| U |  | 1 |
| U |  | 2 |





## Step 25

| | | |
|---|---|---|
| H |  | 5 |
| O |  | 1 |
| P |  | 5 |


## Step 26
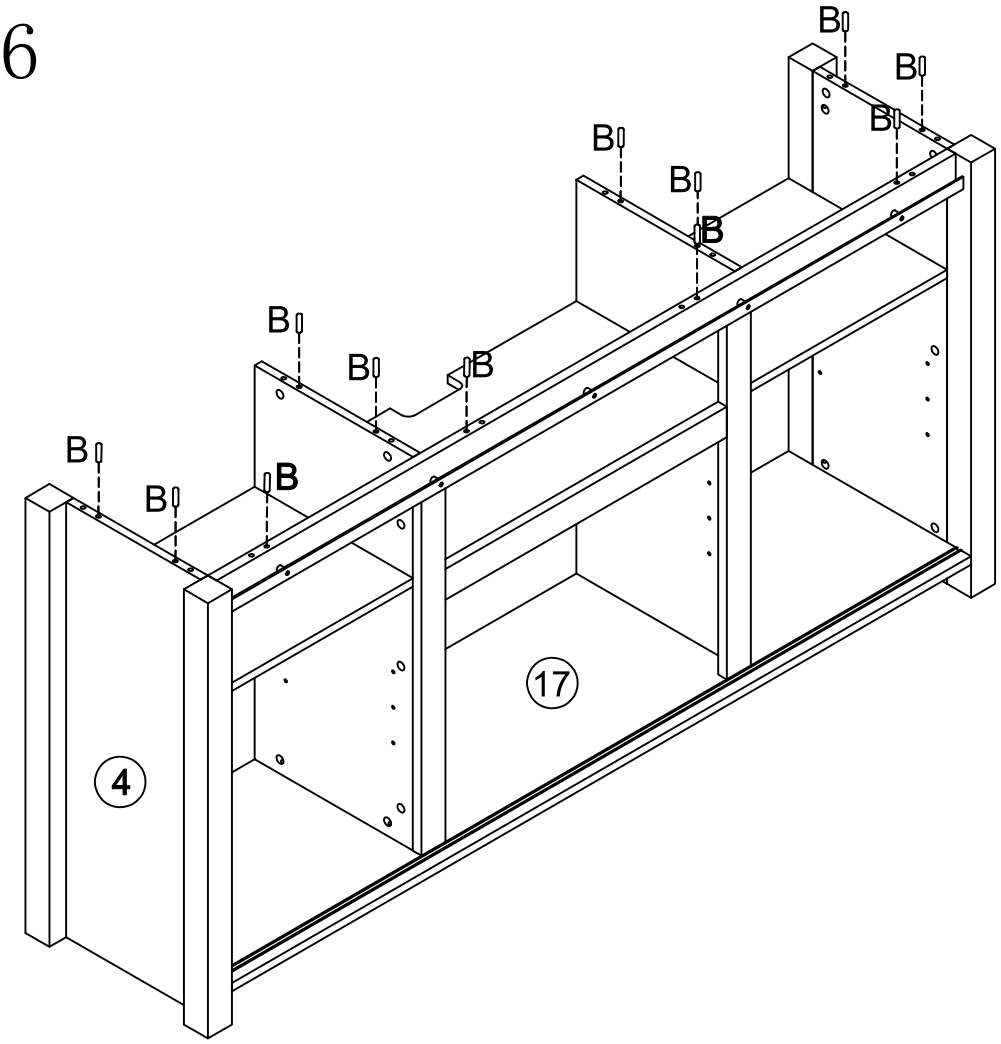
| B | | 12 |
|---|---|---|





## Step 27
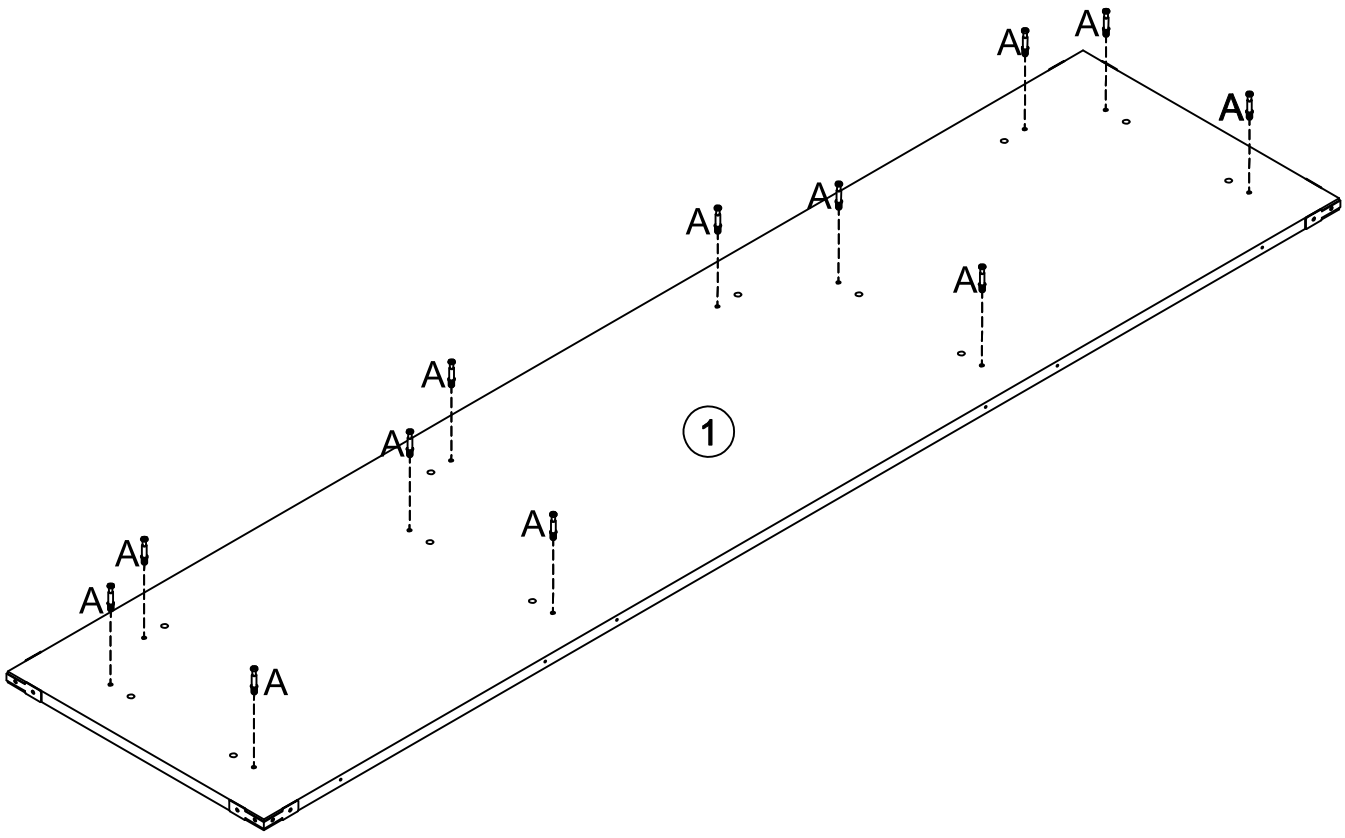
| A | | 12 |
|---|---|---|




# Step 28

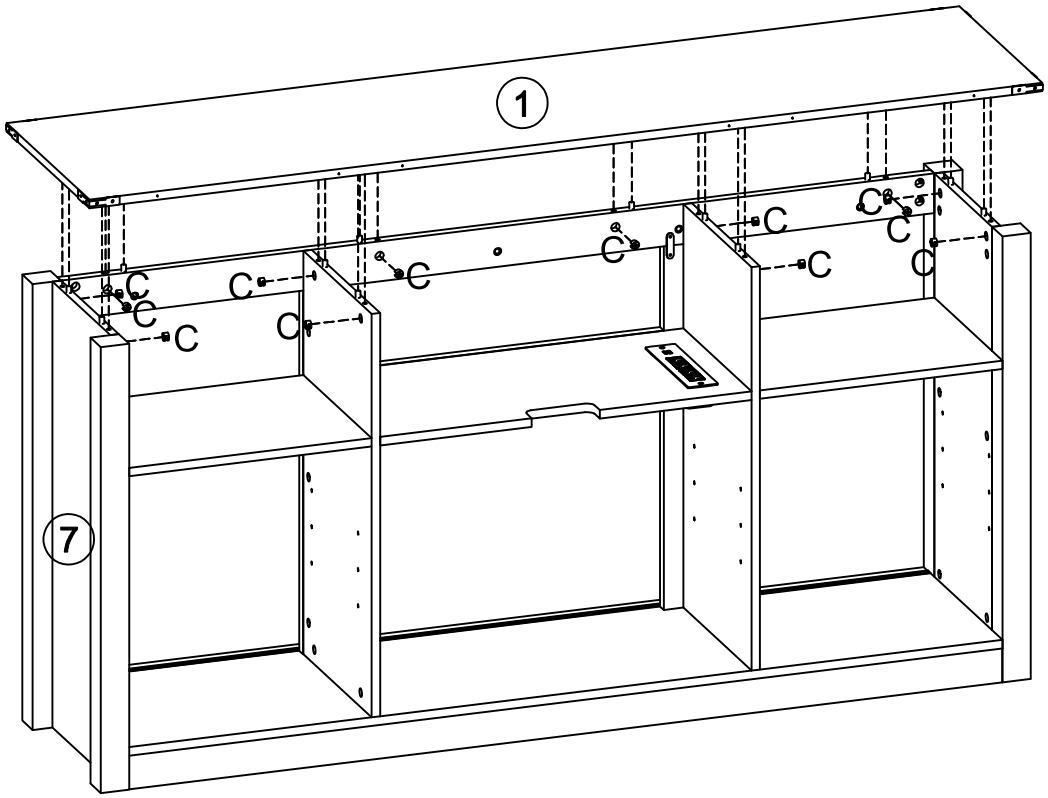C | 12





# Step 29

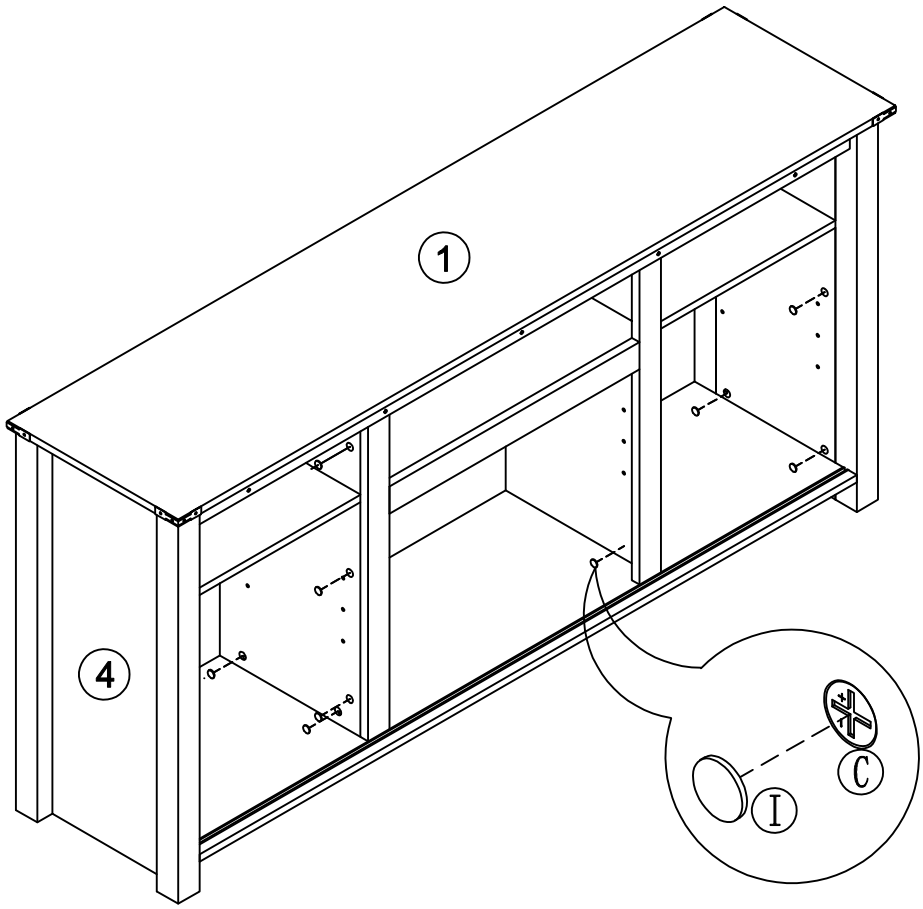I | 50




# Step 30
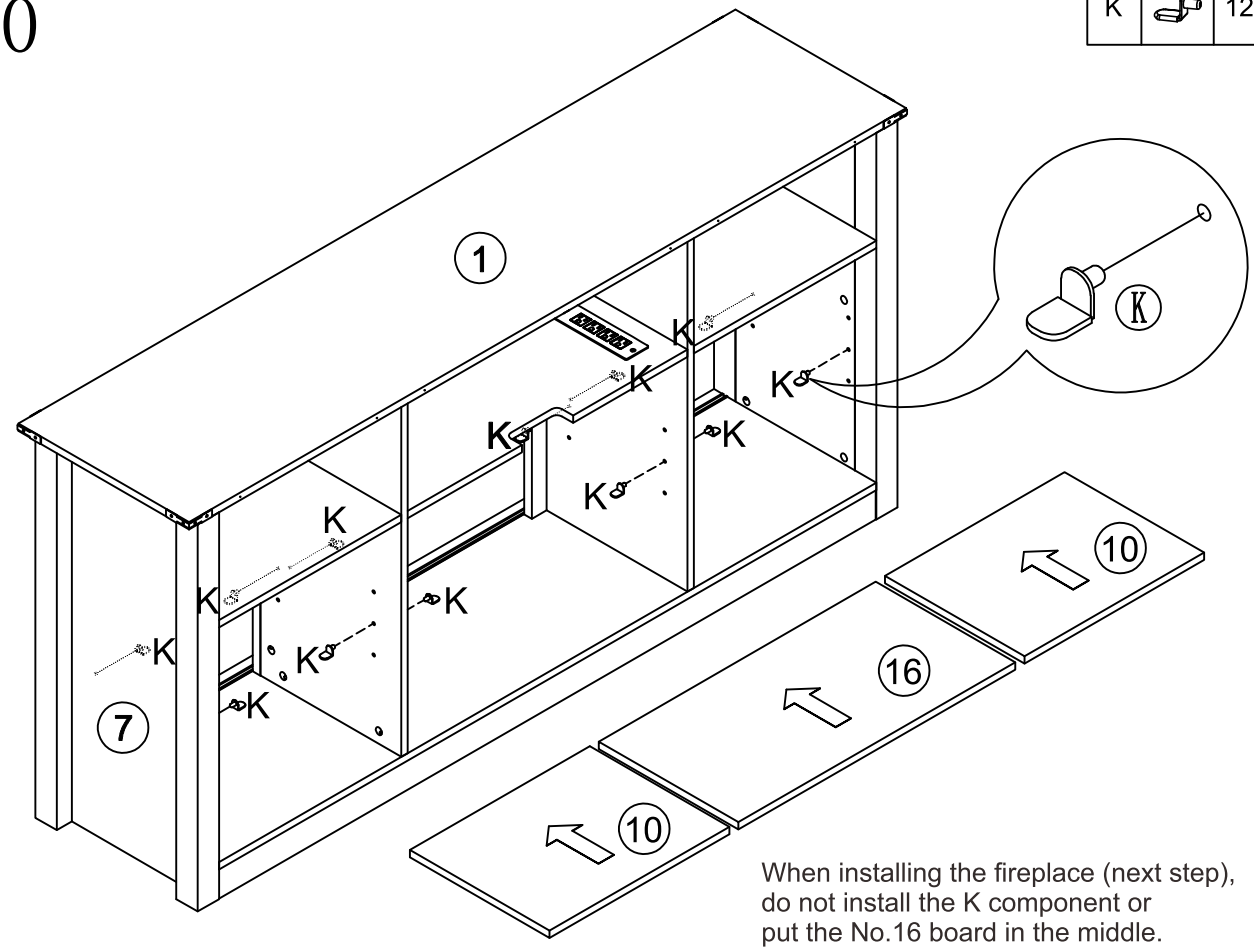
| K | | 12 |
|---|---|---|





When installing the fireplace (next step), do not install the K component or put the No.16 board in the middle.

# Step 31

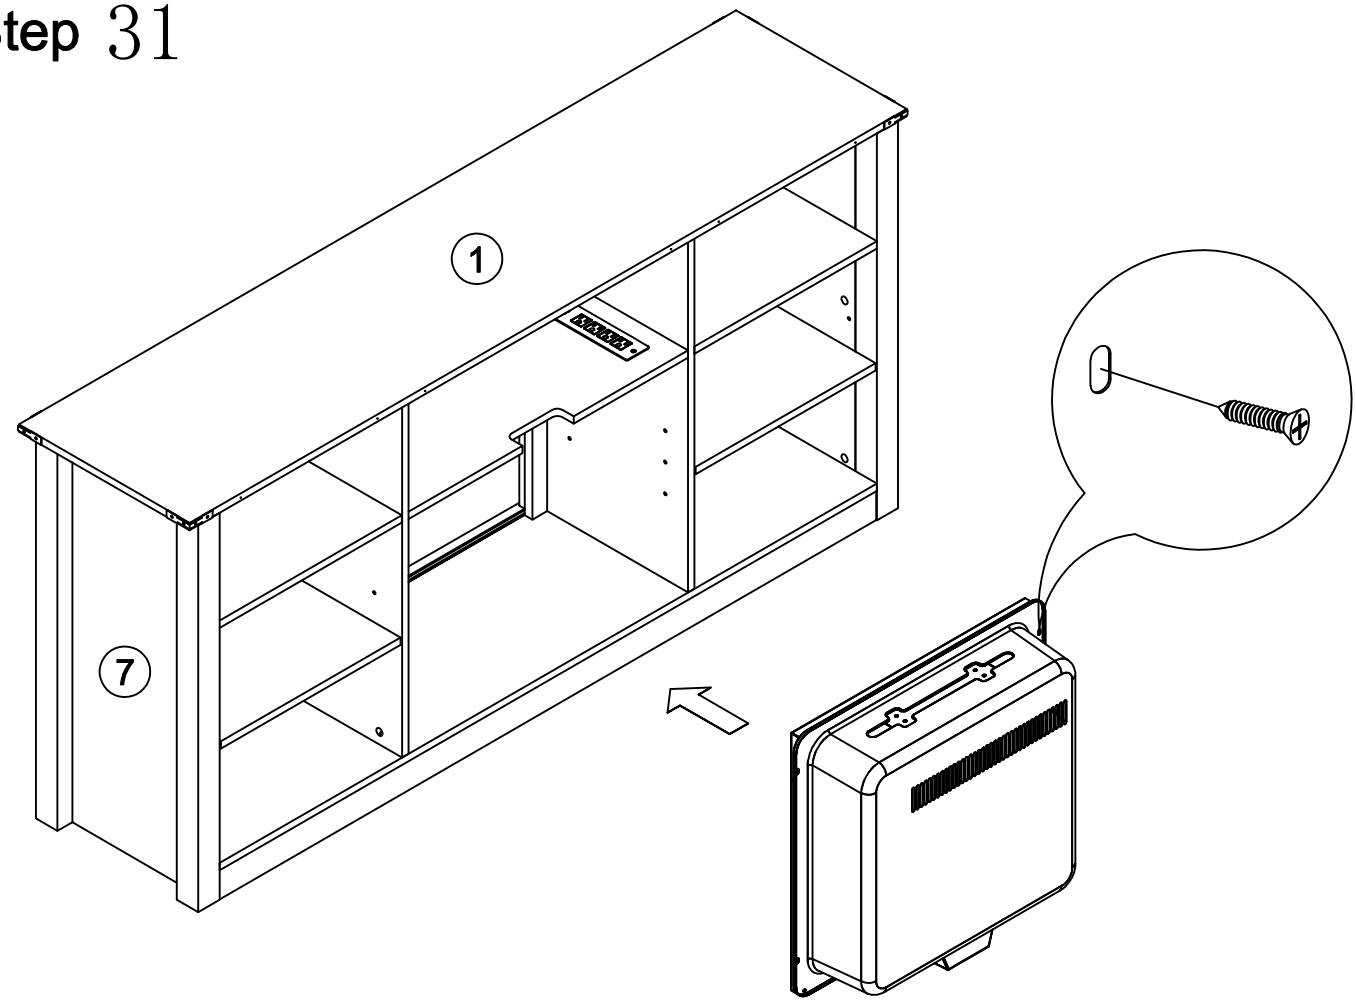

# Step 32

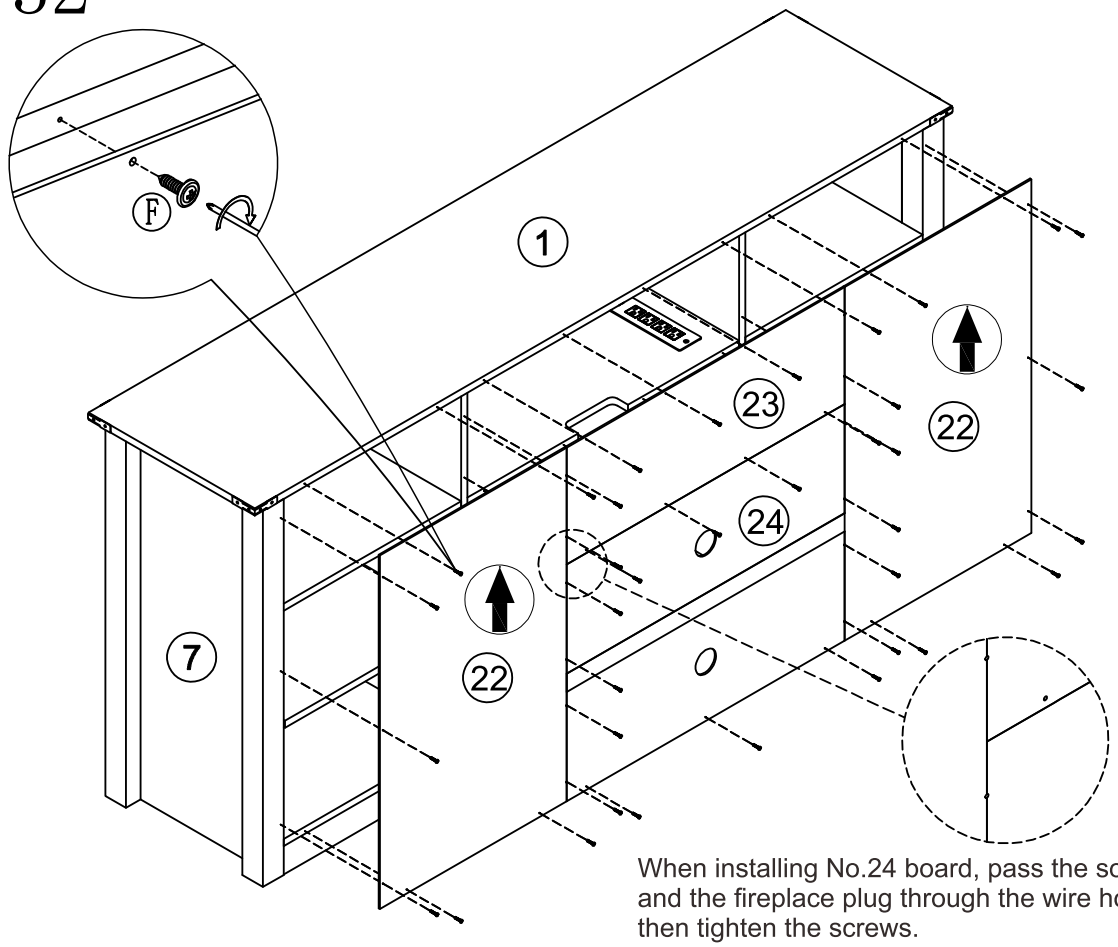
| F | | 37 |
|---|---|---|




When installing No.24 board, pass the socket plug and the fireplace plug through the wire hole first, then tighten the screws.


# Step 33
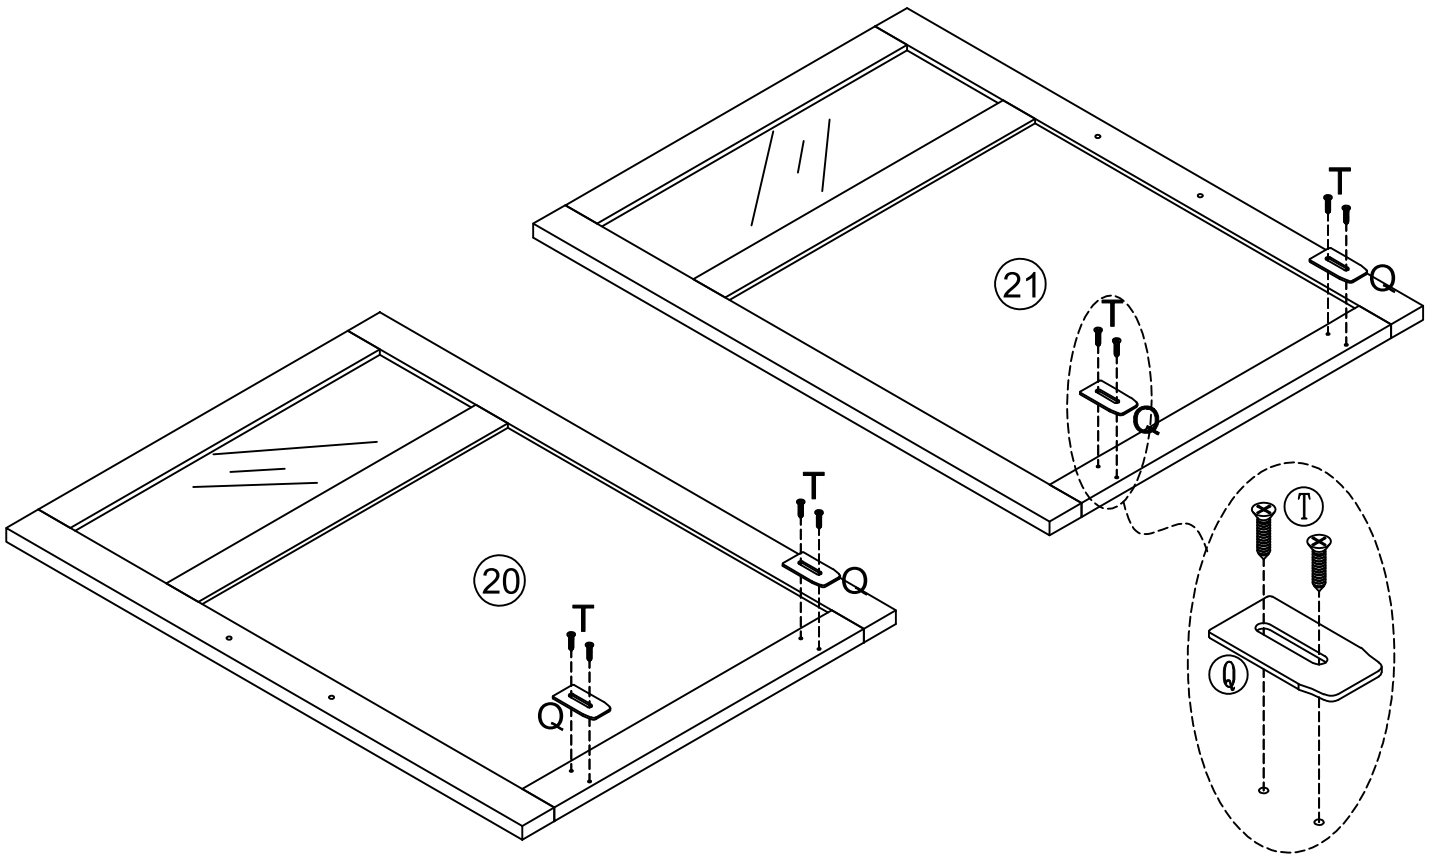
| Q | | 4 |
|---|---|---|
| T | | 8 |




## Step 34
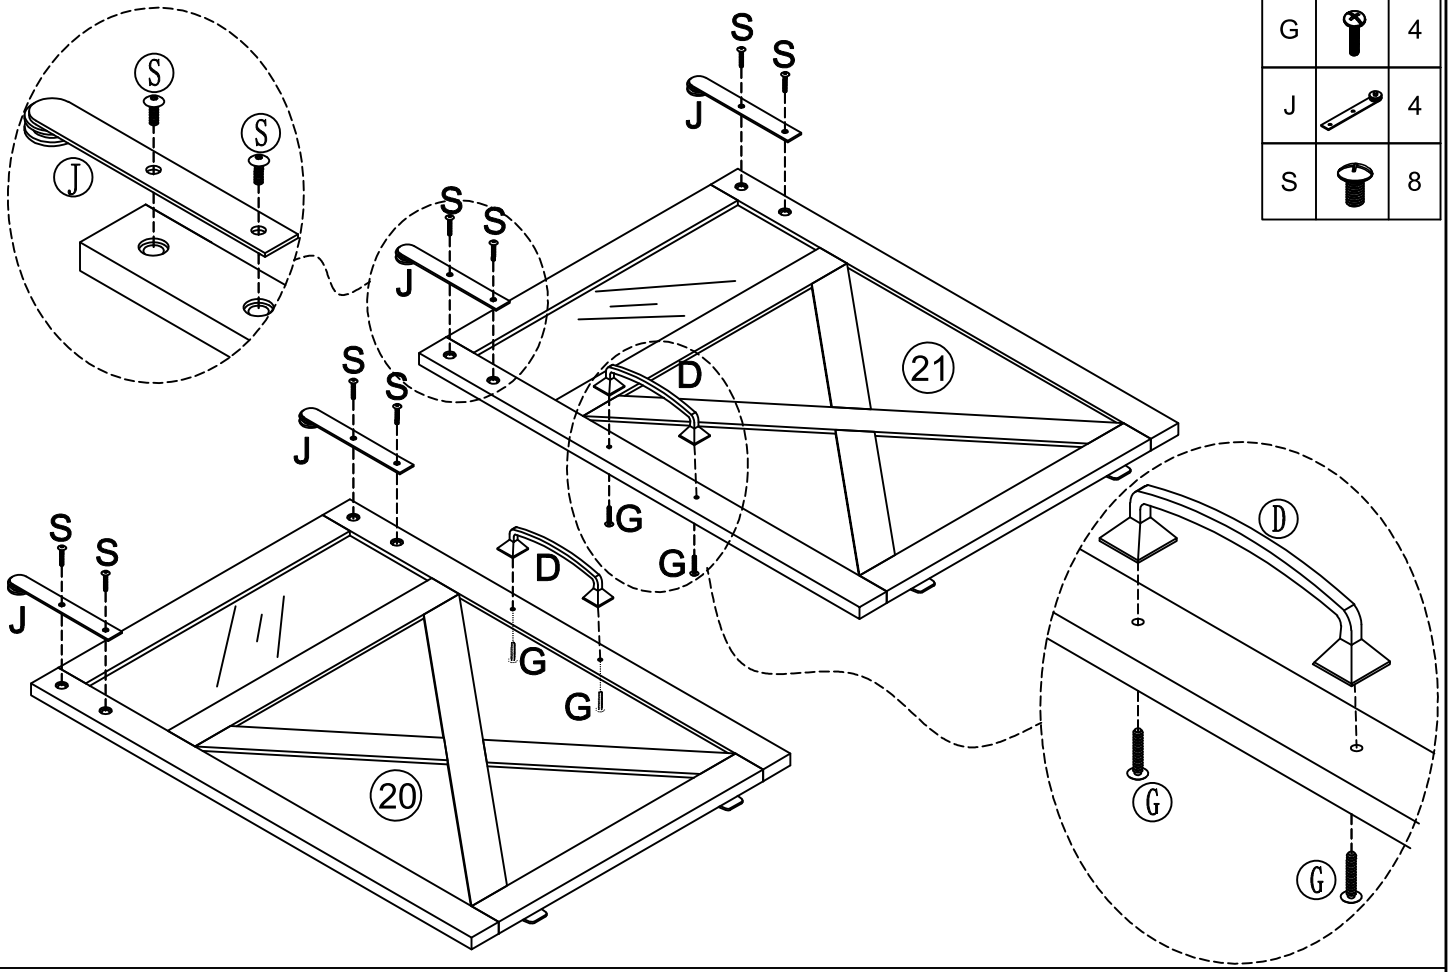
| | | |
|---|---|---|
| D | | 2 |
| G | | 4 |
| J | | 4 |
| S | | 8 |





## Step 35

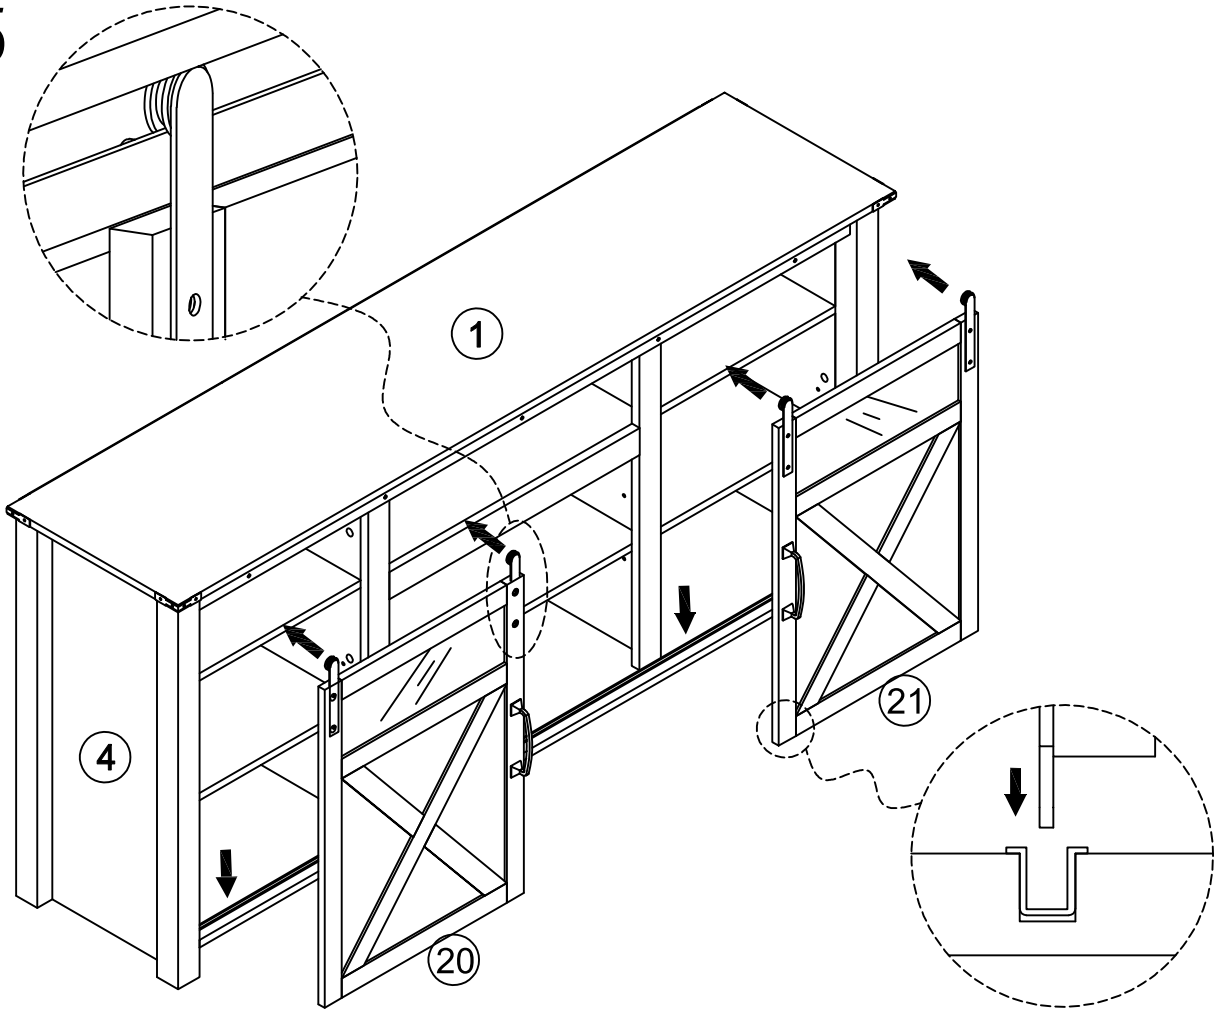


## Step 36

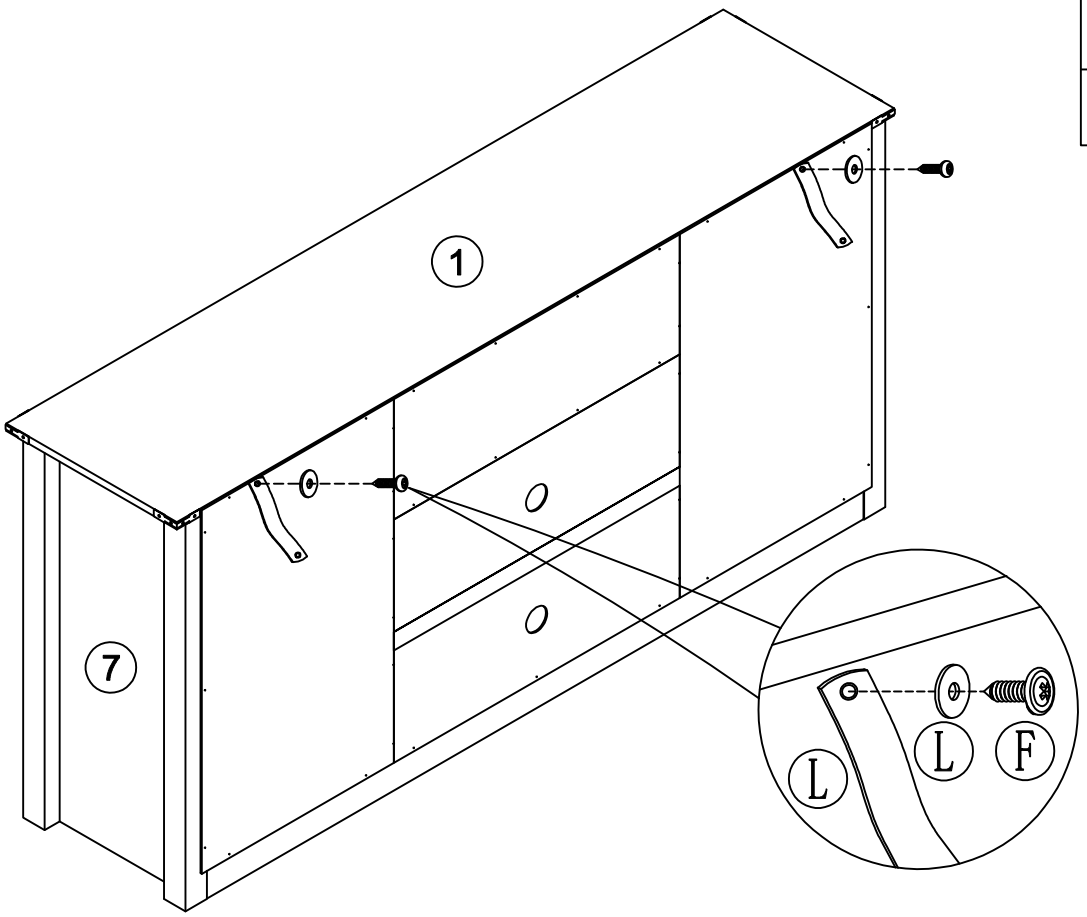
| | | |
|---|---|---|
| L |  | 2 |
| F |  | 2 |
| L |  | 2 |






## Step 37

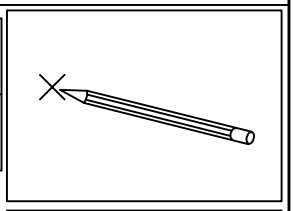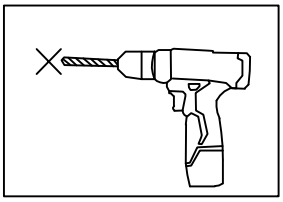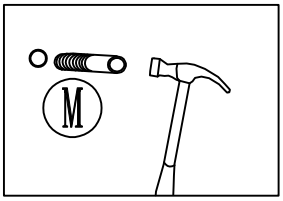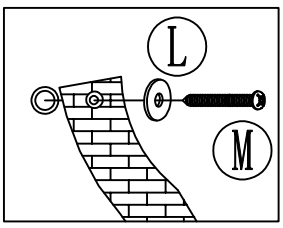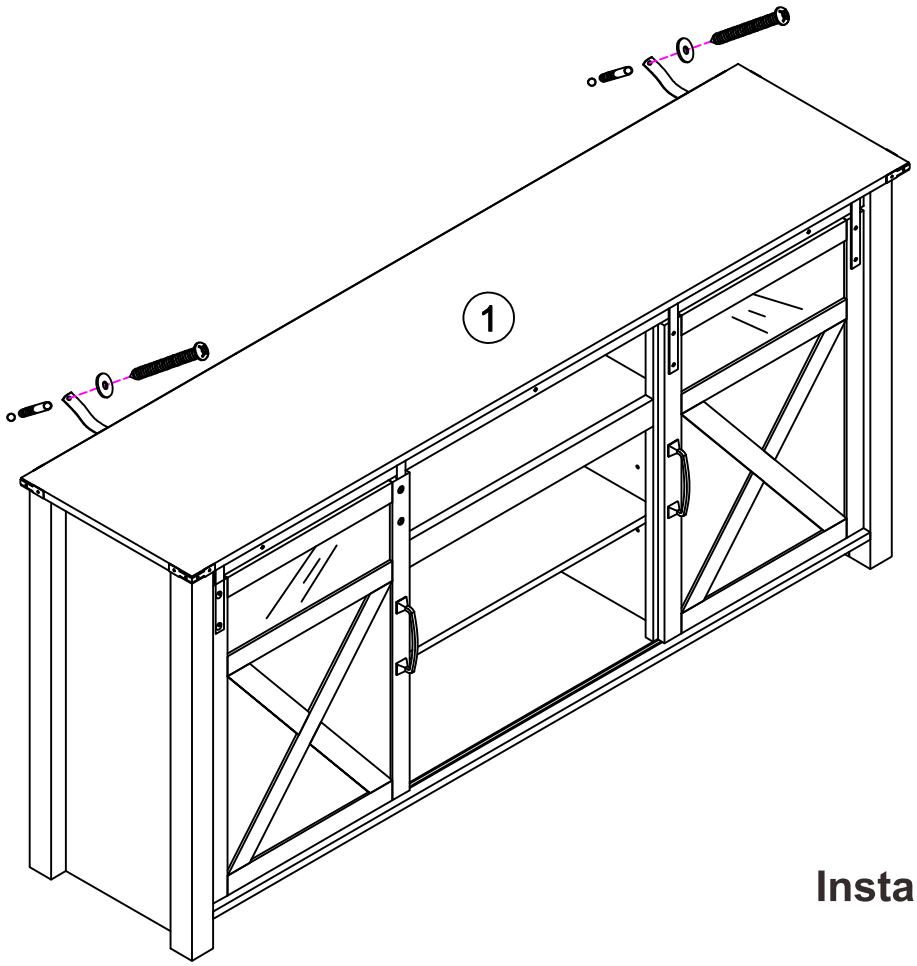
| | | |
|---|---|---|
| M |  | 2 |
| L |  | 2 |








**Installlation completed!**