



Installation Instruction

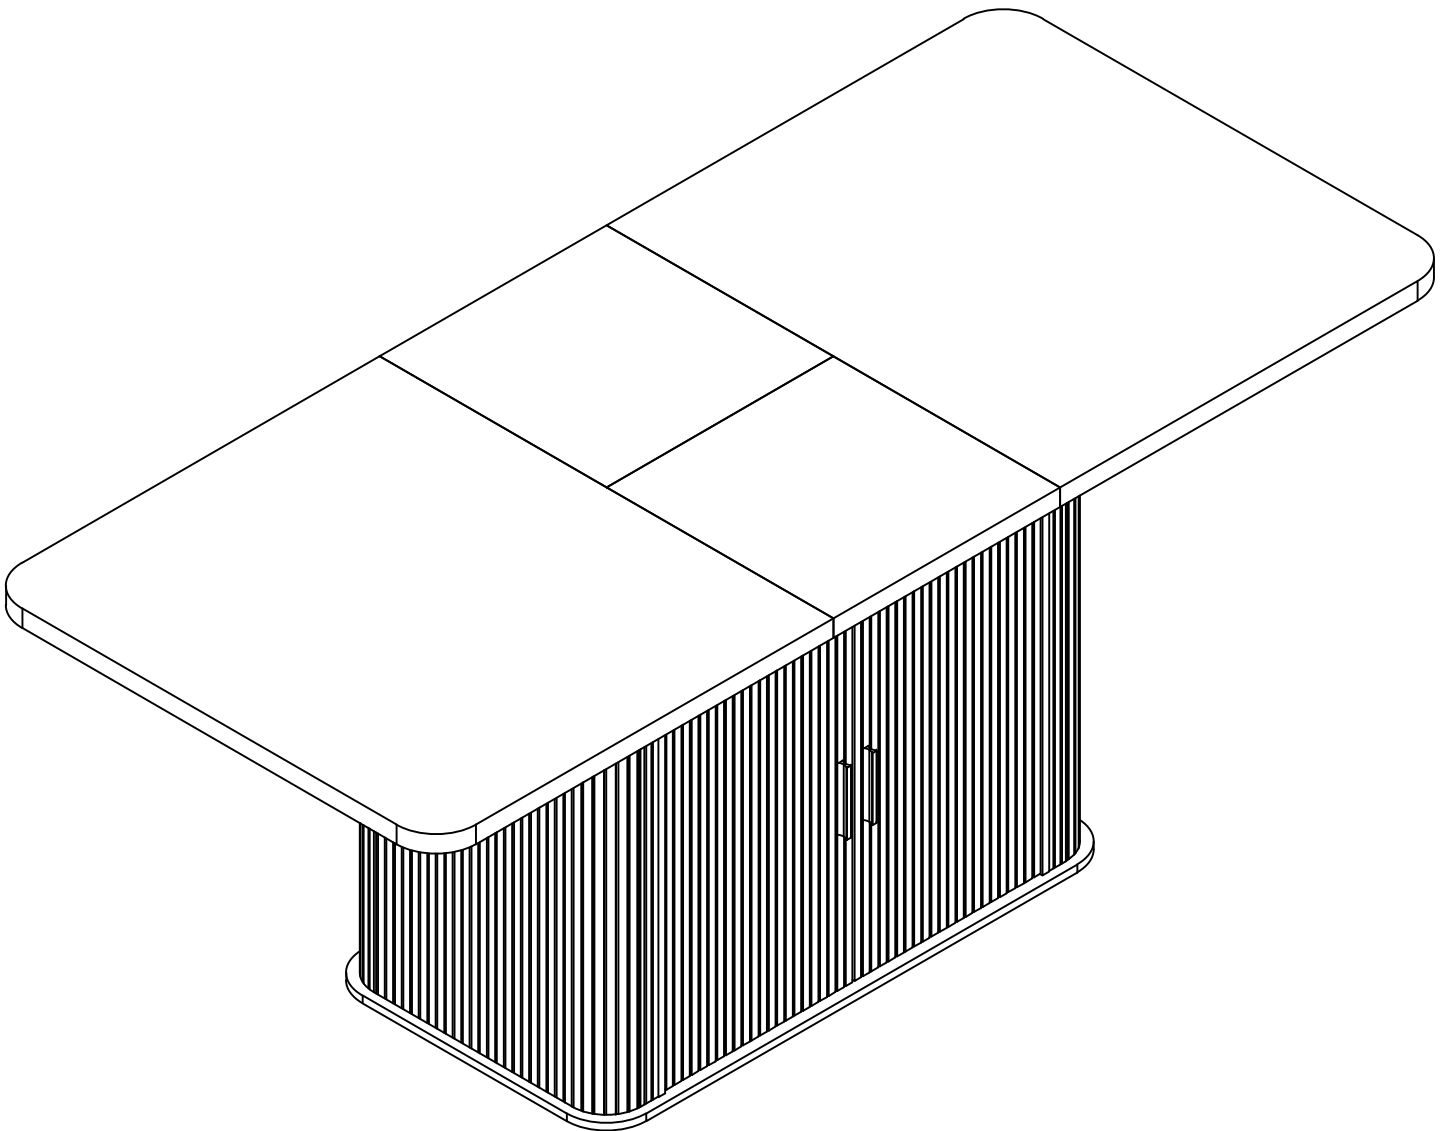

Assembling

What you need


- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation



100 | **35**
lbs table top lbs per

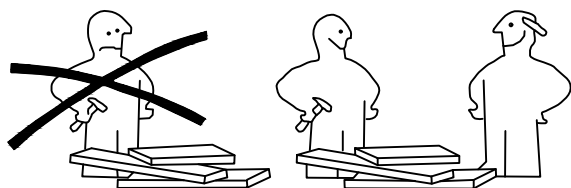


What' included

Code	Description	Qty
A	Cam Bolt M6X35MM	22
B	Cam Lock 15X9MM	22
C	Wooden Dowel M8X30MM	34
D	Screw M4X40MM	18
E	Screw M3.5X12MM	40
F	Screw M4X14MM	32
G	Serew M4X15MM	4
H	Metal shake handshandle	2
I	Adjustable Leveler	6
J	Door panel hinge	4
K	Steel ball rail	2
O	Metal hook	4
P	Metal buckle	4
Q	Plank sticker	4

The Hardwares


Ⓐ

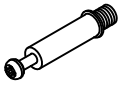


Ⓑ




Ⓒ




Ⓓ

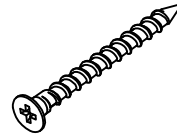

Ⓔ




Ⓕ



Ⓖ



Ⓗ




Ⓘ



Ⓙ




Ⓚ

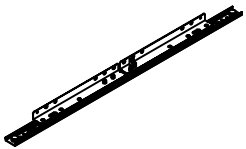

Ⓛ



Ⓟ



Ⓠ




IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully).



Included Accessories


Code	Description	Qty
1	The left panel	1
2	The right panel	1
3	Middle panel	1
4	The top of the cabinet	1
5	The bottom plate of the cabinet	1
6	Left and right baffles	2
7	Front and rear baffles	2
8	Left and right side panels	2
9	Fixed layer plate	1
10	Door plank	2
11	Decorative panel	2
12	Backboard	1
13	Reinforcement plate	2

The Accessoriess

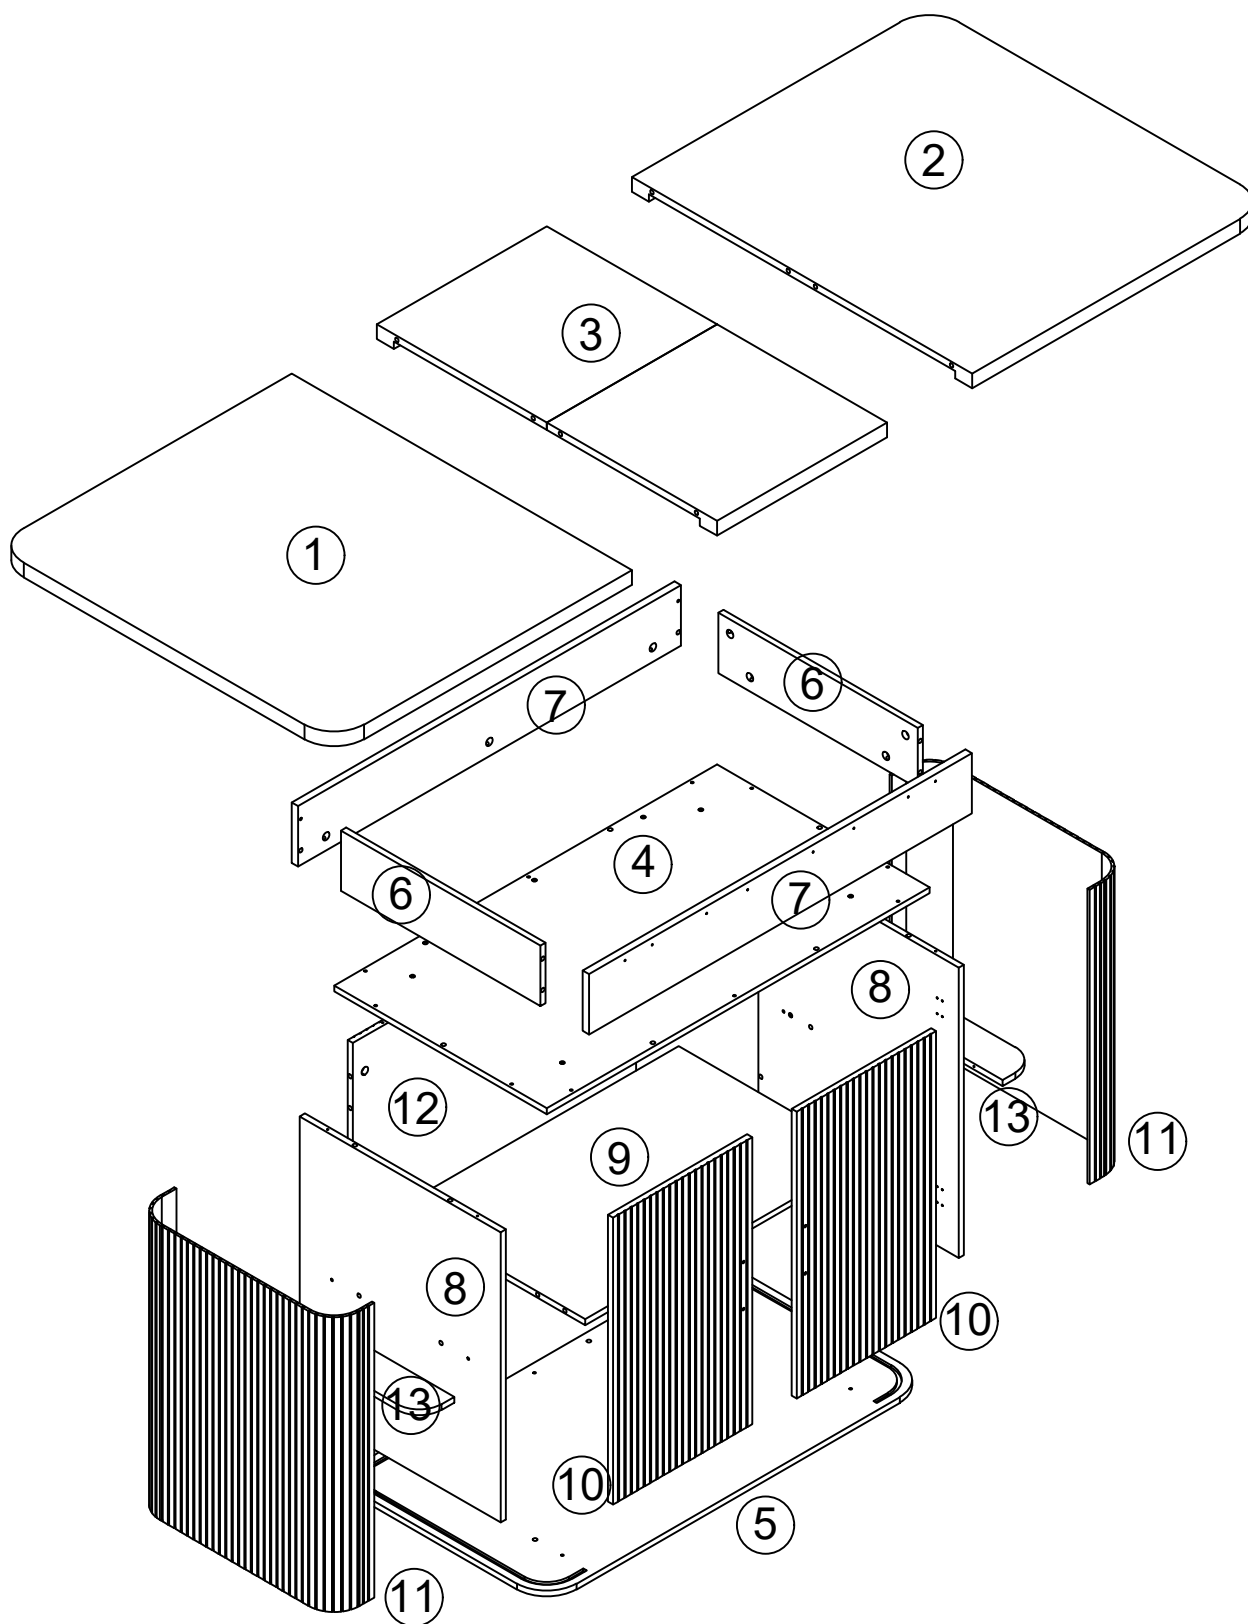


Step 1

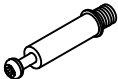
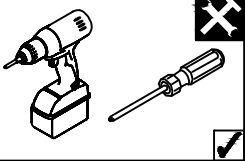
A	X 8
	
	

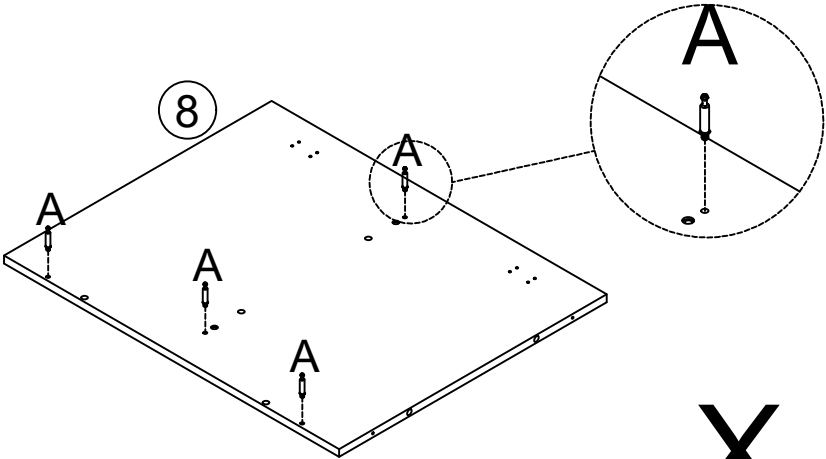


X 2

Step 2

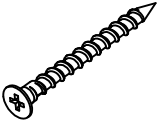
D	X 4
	

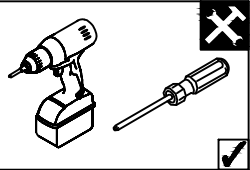C	X 4
	
	

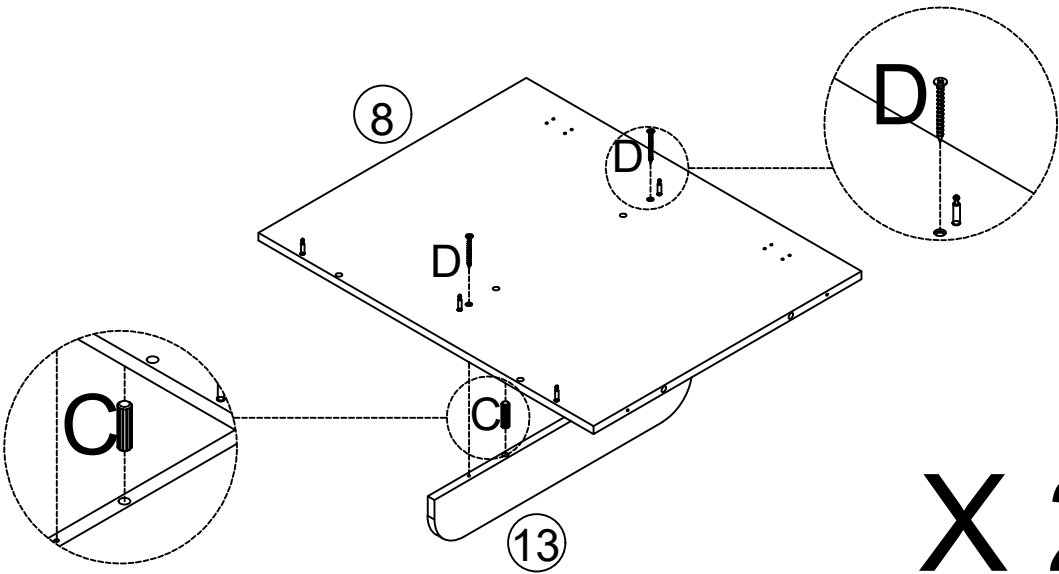


X 2

Step 3

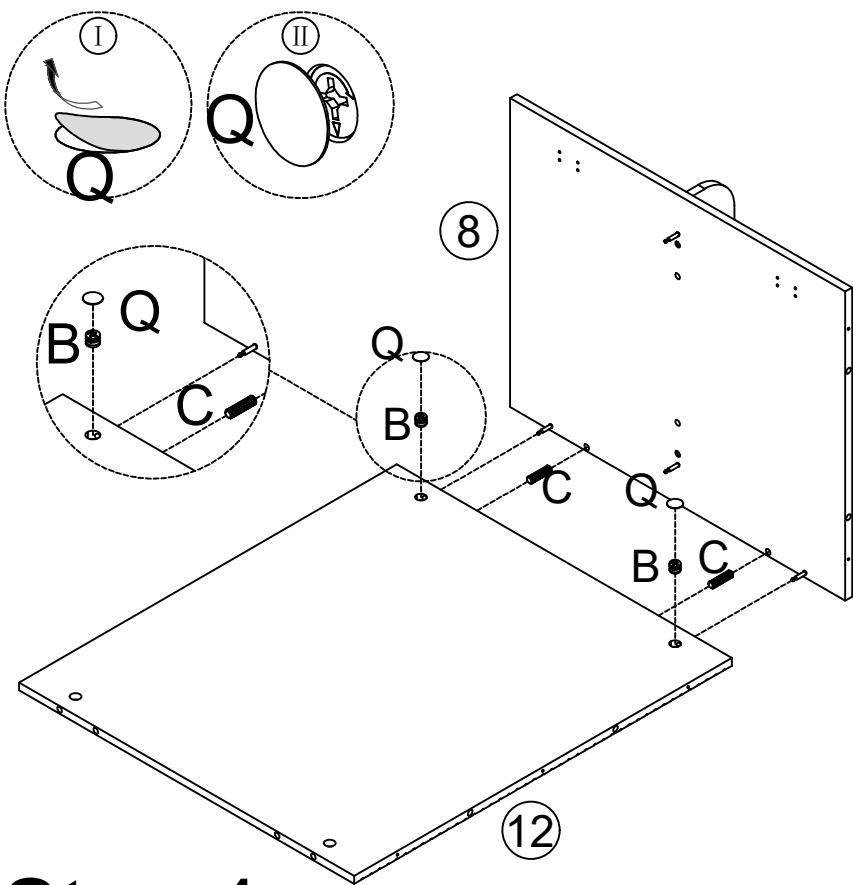


B	X 2	C	X 2
		Q	X 2

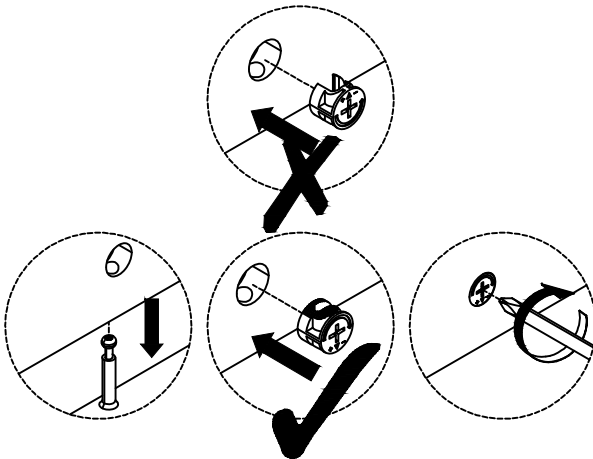


Make sure the arrow on the camlock B is pointing toward the Part A

Step 4

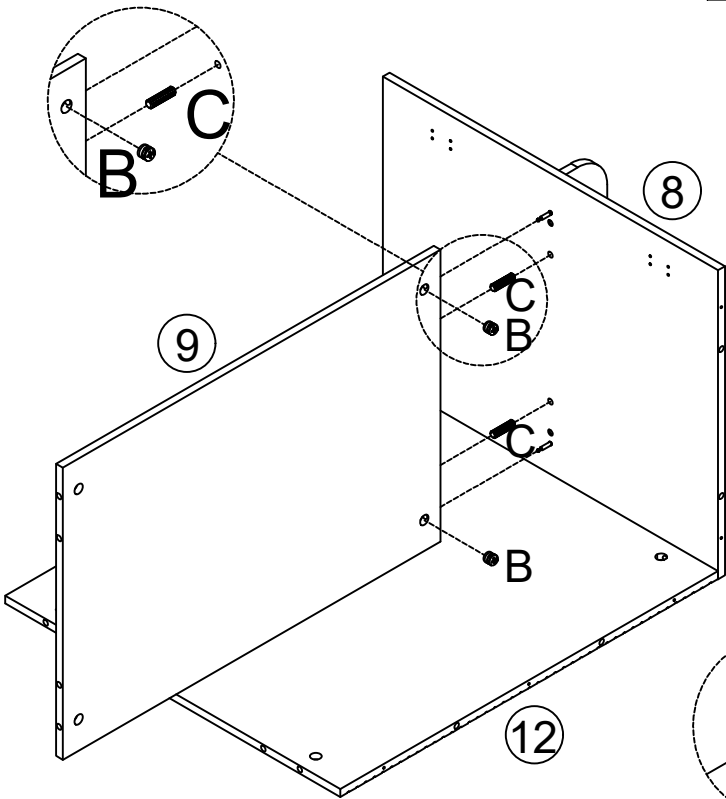







B	X 2	C	X 2

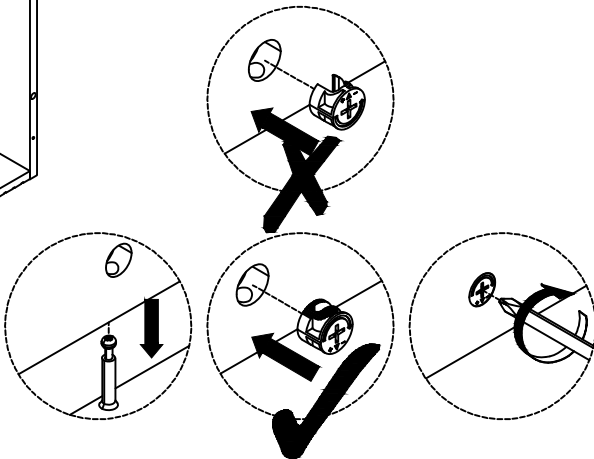

For No.9 board, the side with edge banding shall face upward.










Make sure the arrow on the camlock B is pointing toward the Part A

Step 5

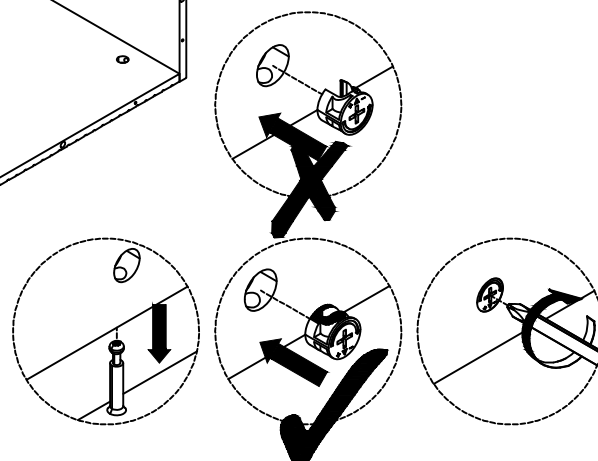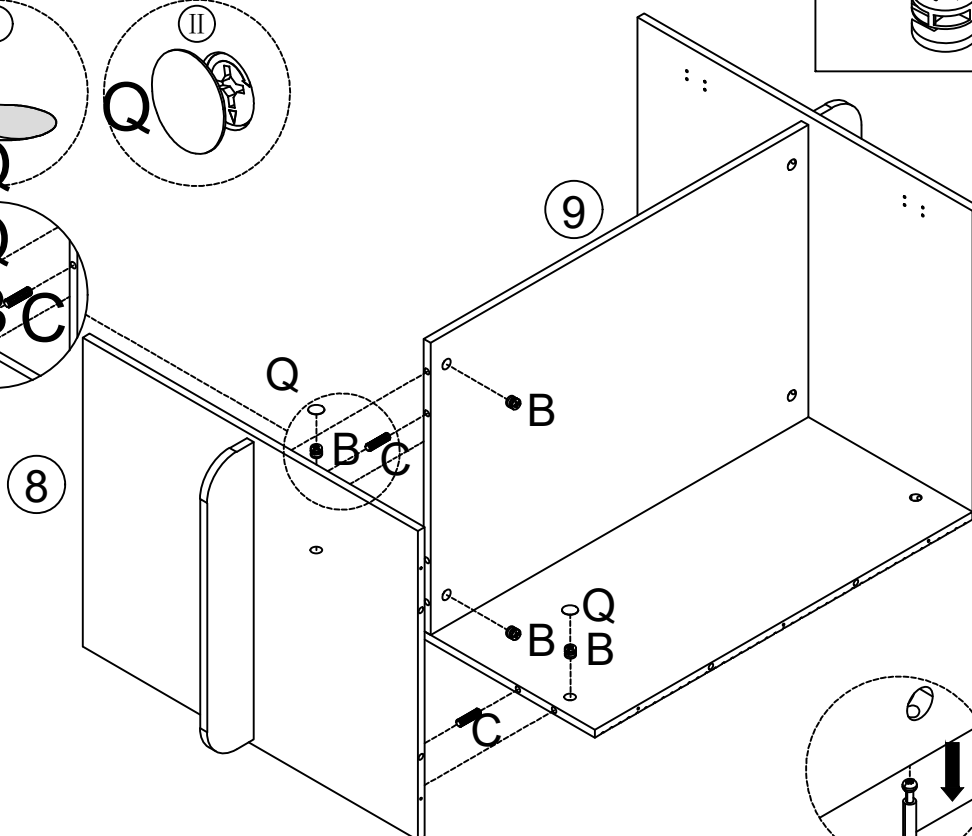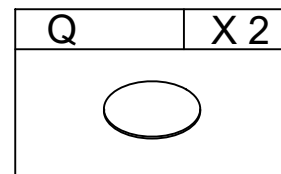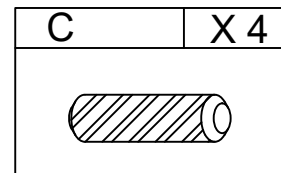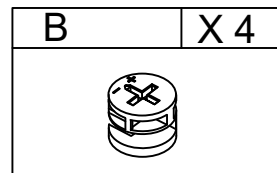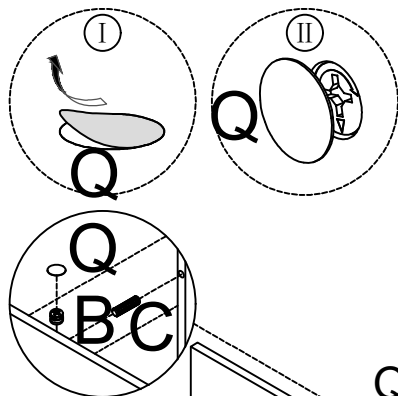



Make sure the arrow on the camlock B is pointing toward the Part A

Step 6

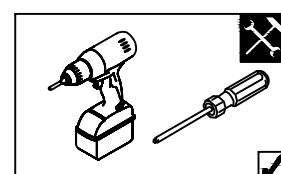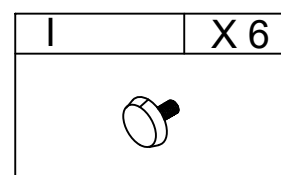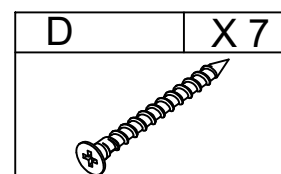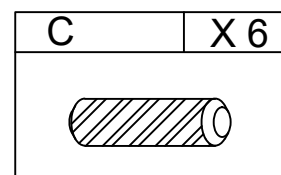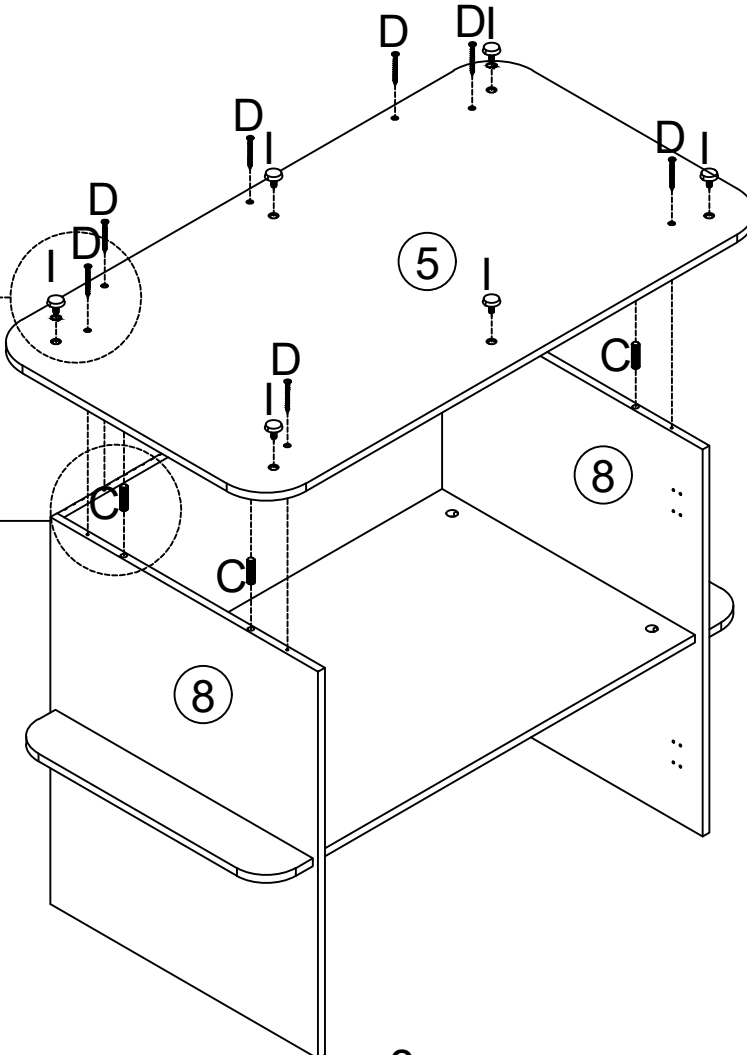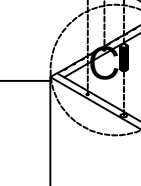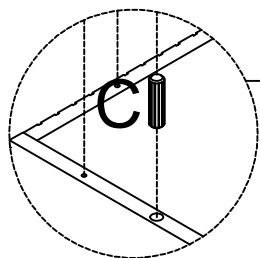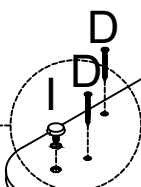
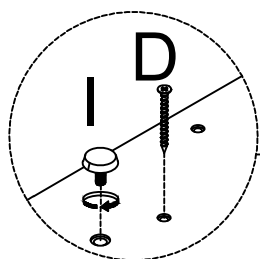





Step 7

The No.11 board needs to be tightly and precisely fitted into the slot. If it cannot be inserted, tap it gently to allow the No.11 board to slide into the slot.

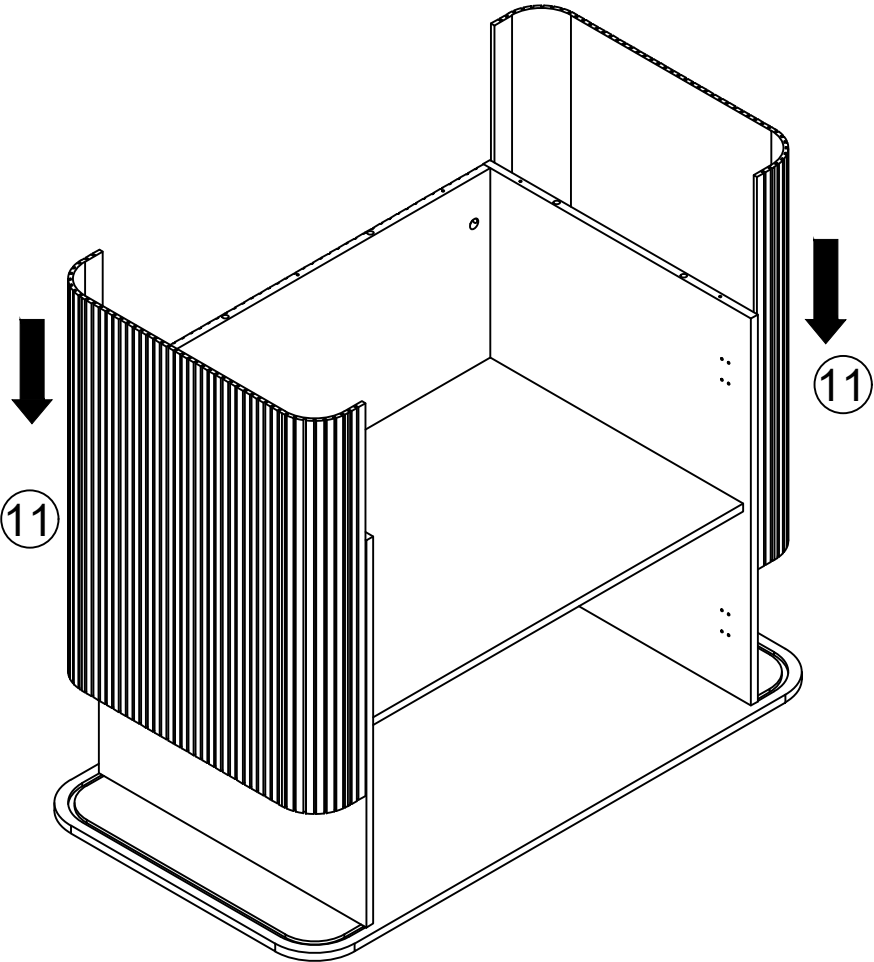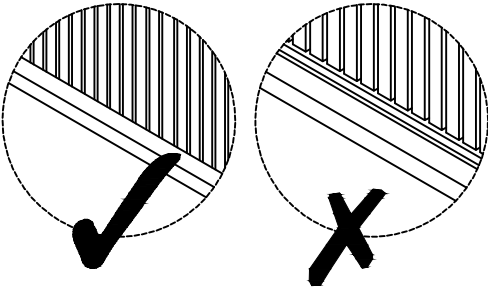


Step 8

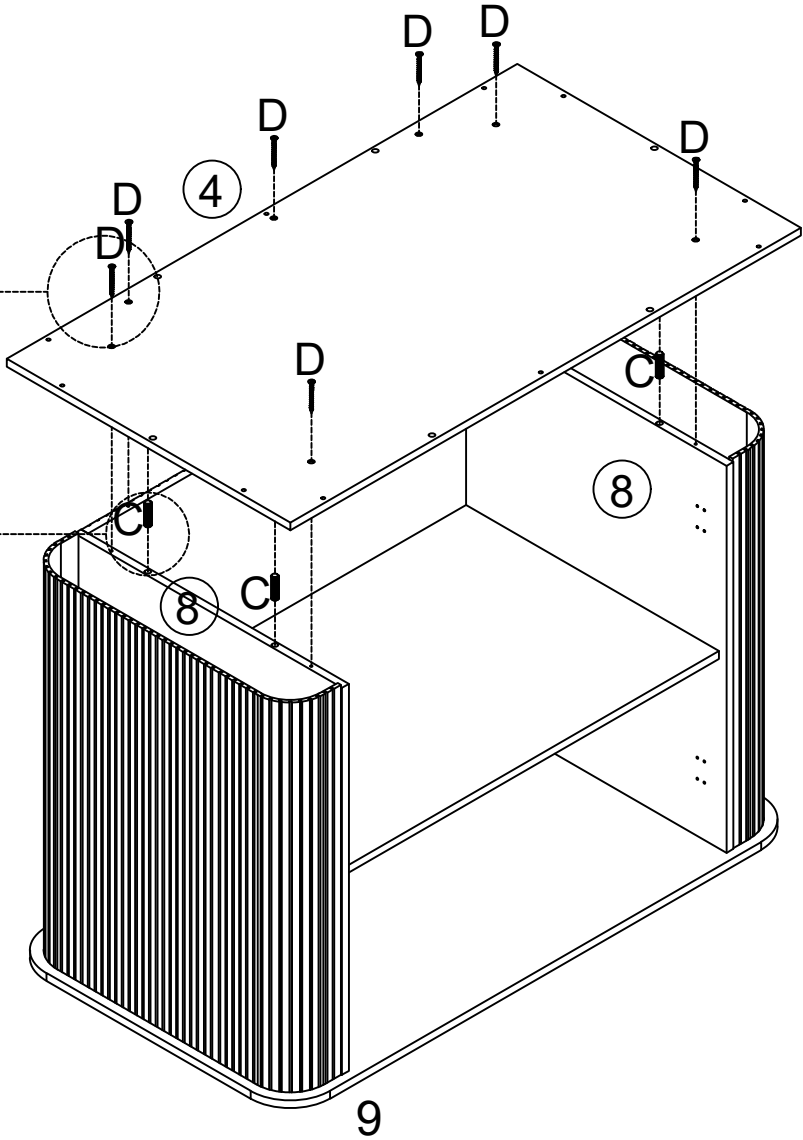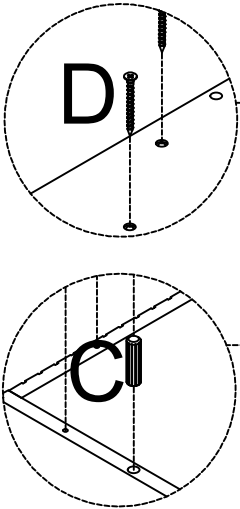

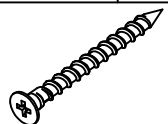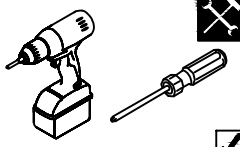C	X 6
	
D	X 7
	
	


Step 9

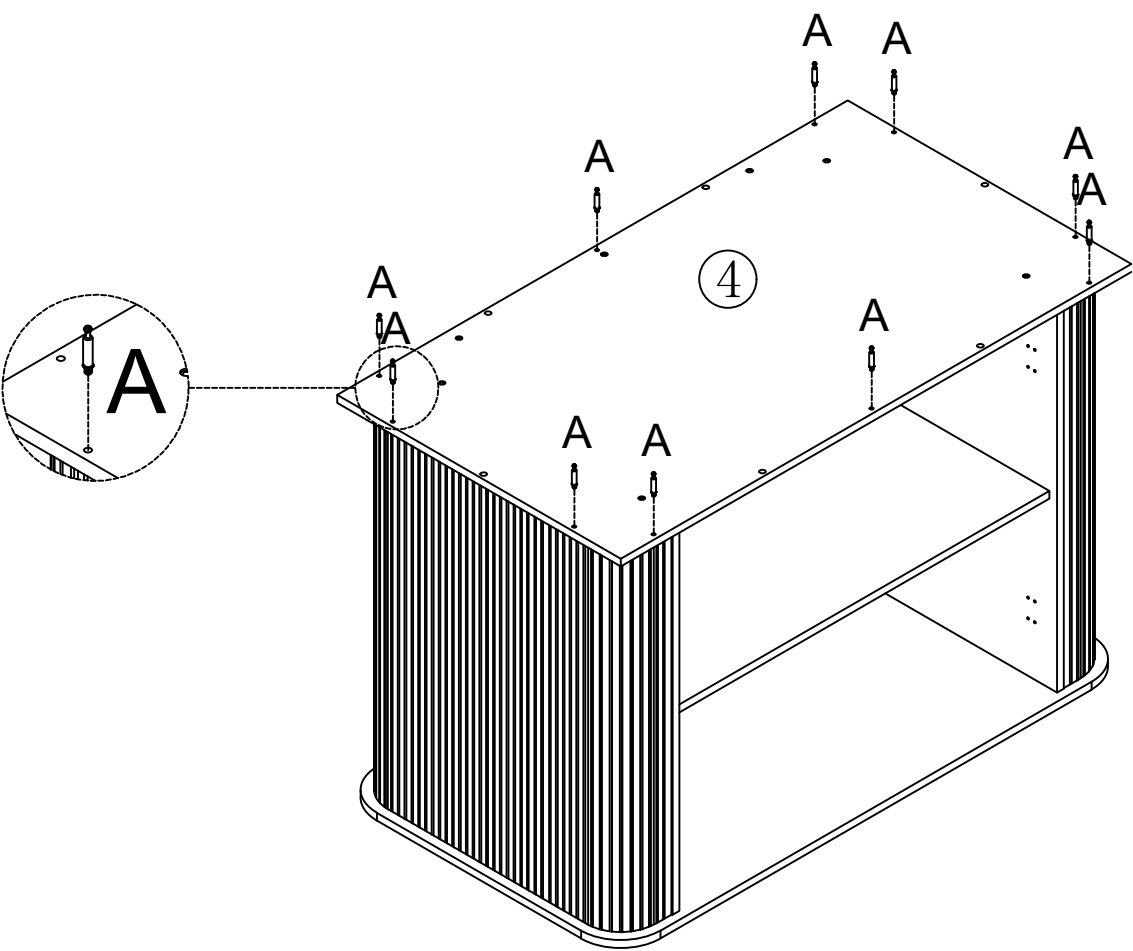

A	X 10
---	------

--

Step 10

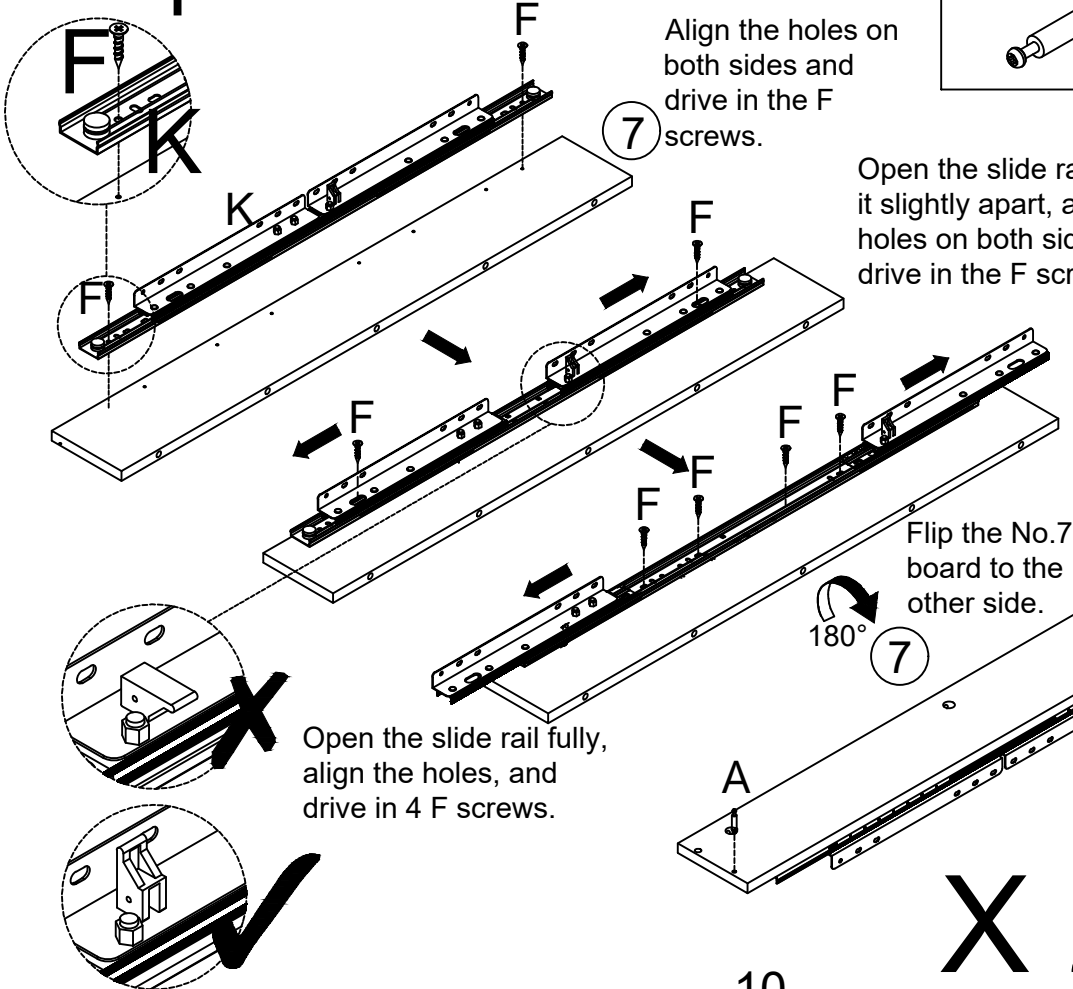

A	X 4
---	-----

F	X 16
---	------

K	X 2
---	-----

--






Open the slide rail fully, align the holes, and drive in 4 F screws.

Open the slide rail, pull it slightly apart, align the holes on both sides, and drive in the F screws.

Flip the No.7 board to the other side.






X 2

Step 11

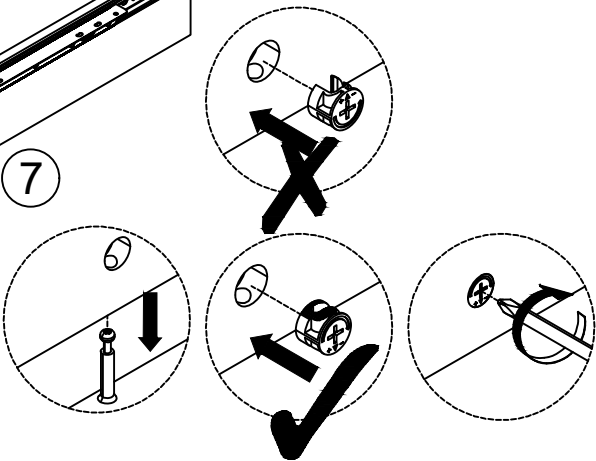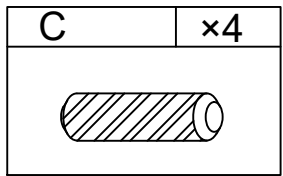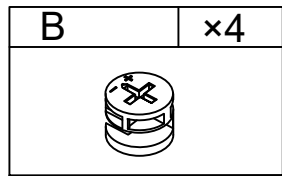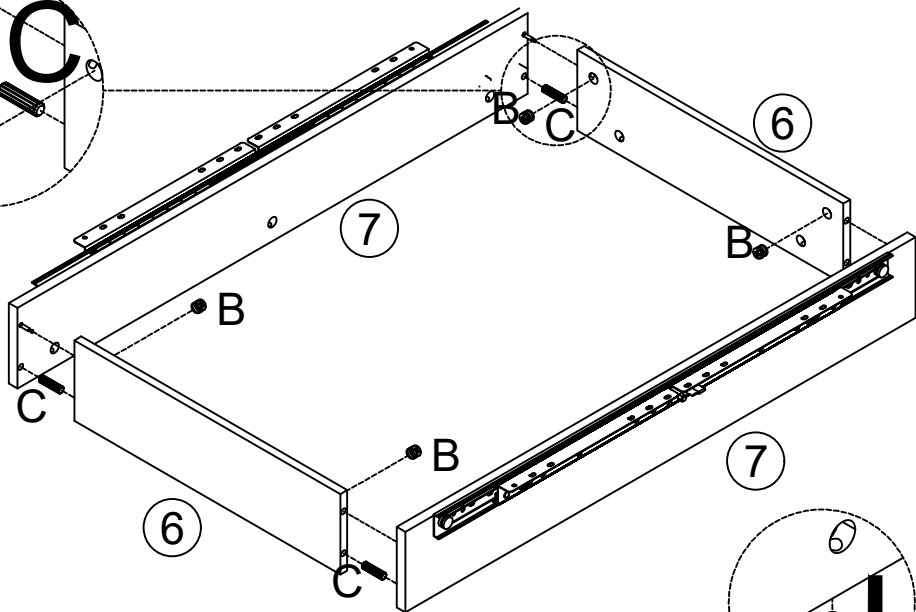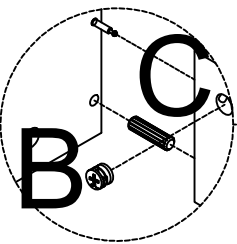







Make sure the arrow on the camlock B is pointing toward the Part A

Step 12

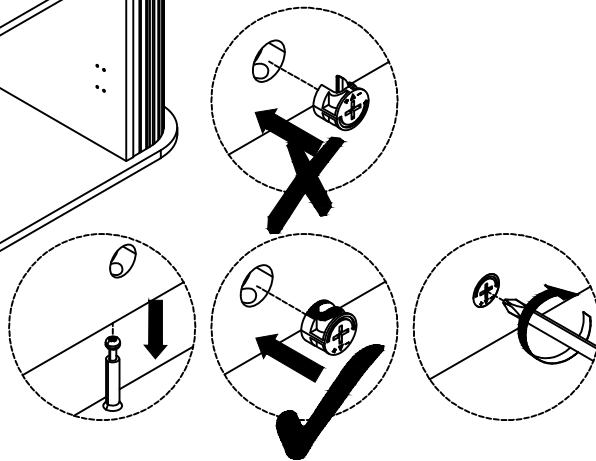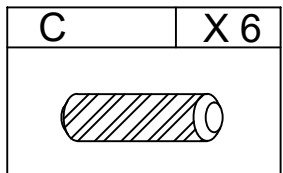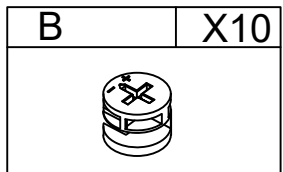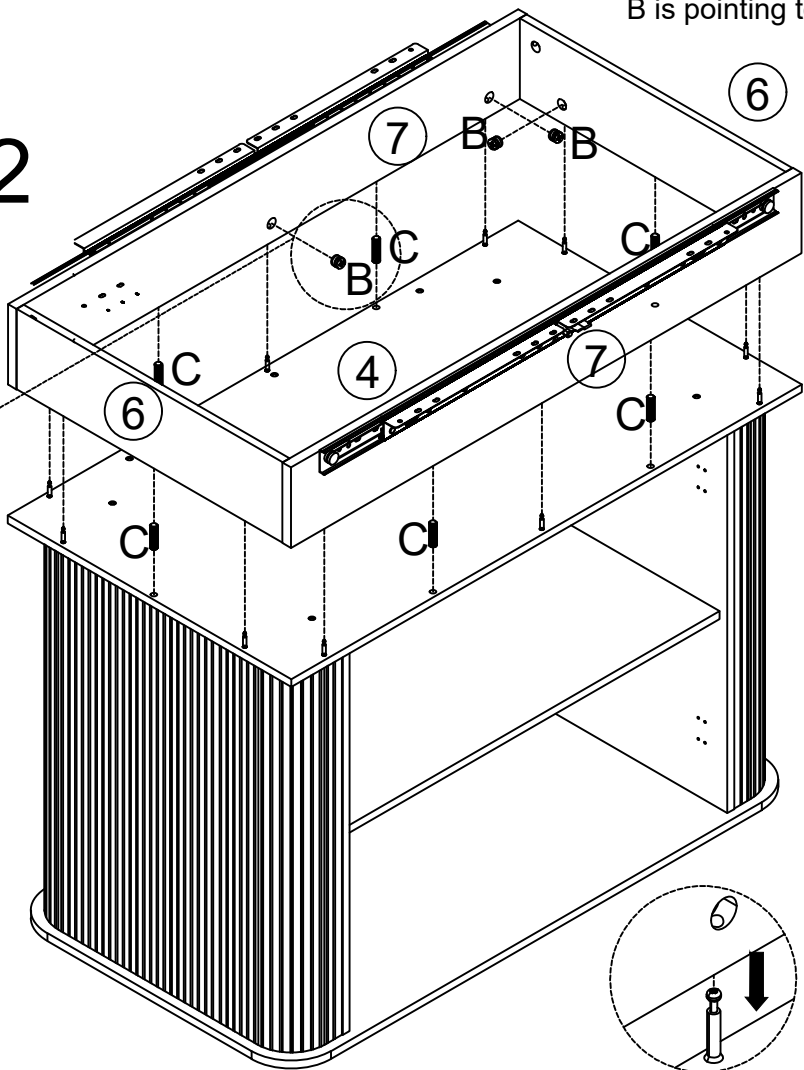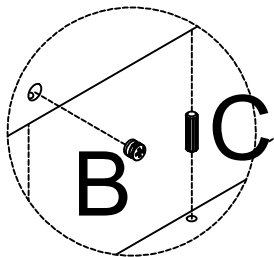




Make sure the arrow on the camlock B is pointing toward the Part A

Step 13

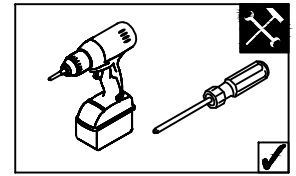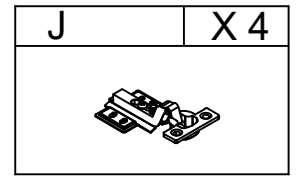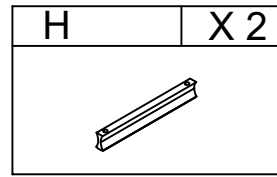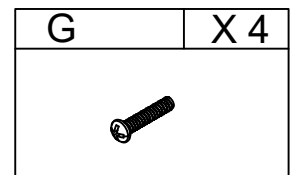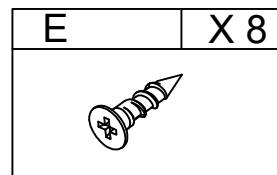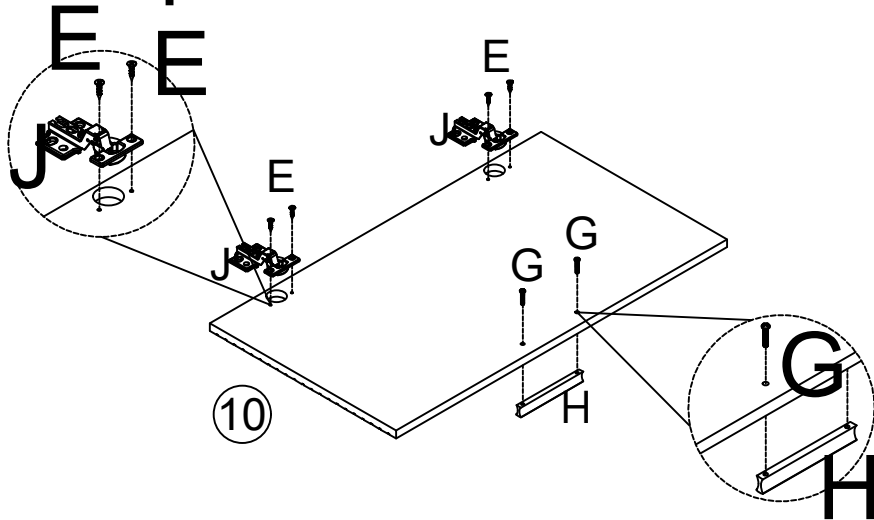


X 2

Step 14

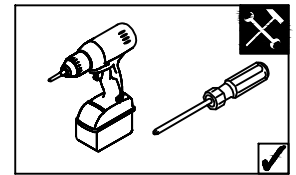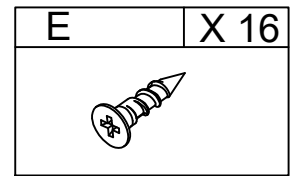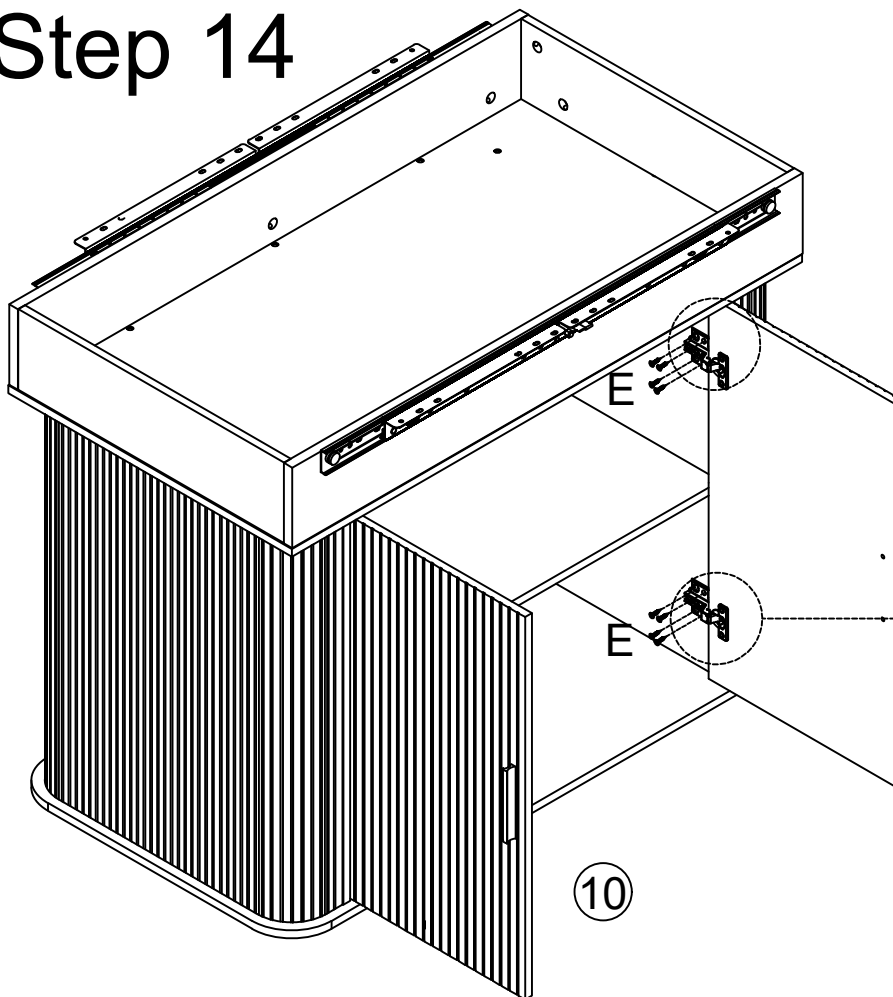


10

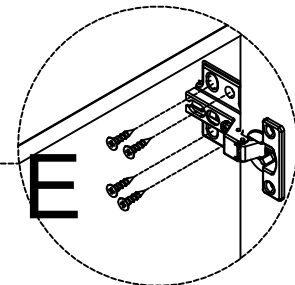


Adjust the upper and lower hinges at the same time.


How do I get the two doors to align flat by adjusting the hinges?

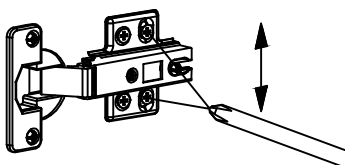

1. Adjust the screws shown in Figure 1 to fix the unevenness under the desk.

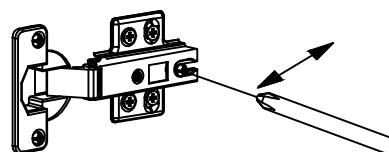






2. Adjust the screws shown in Figure 2, and pull the door back and forth so that it can open smoothly.

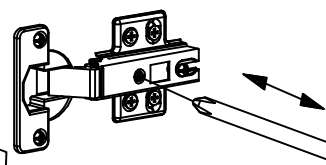


3. Adjust the screws shown in Figure 3 to adjust the door left and right to the right position.

Step 15


Accessory P contains a spring and must be kept open during installation. Please maintain this position and be careful of pinching injuries.

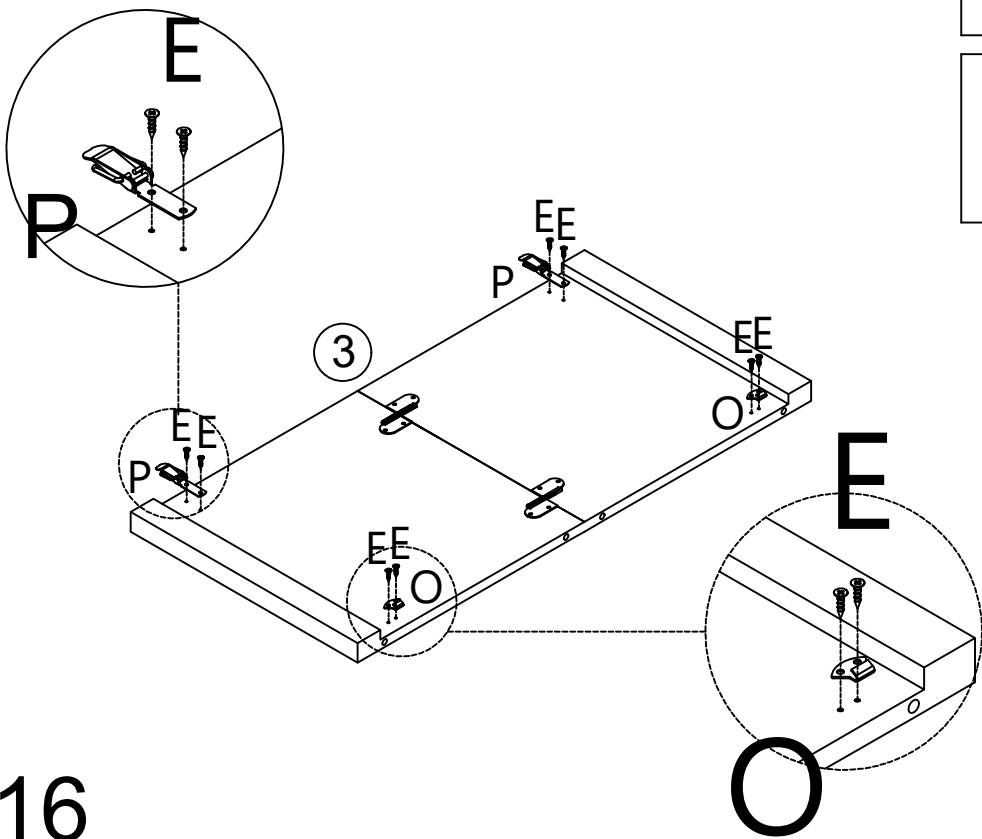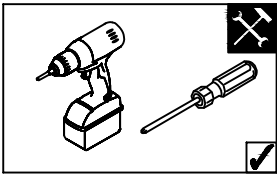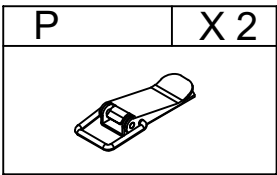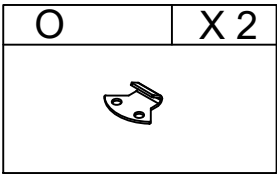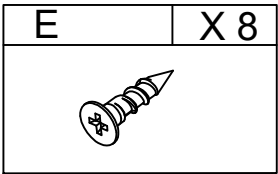


Step 16


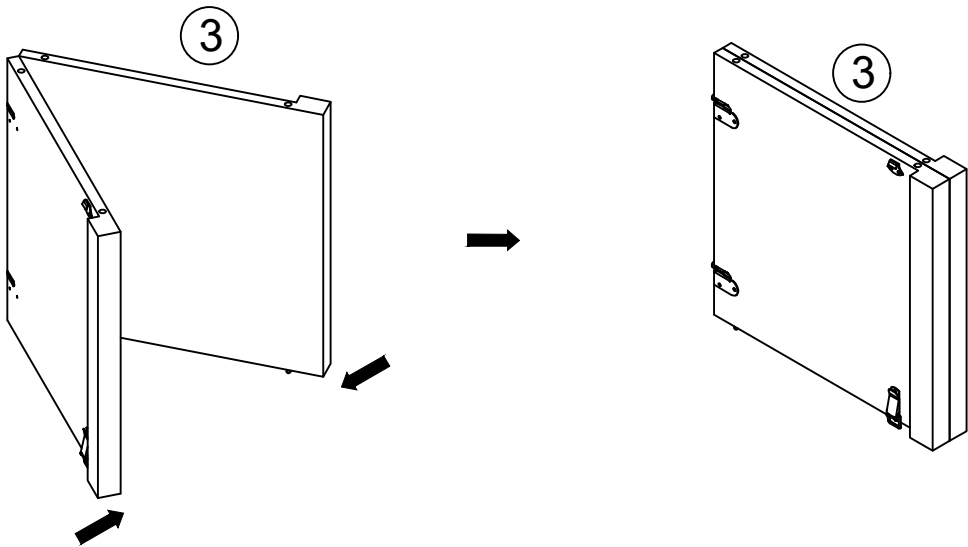


Step 17

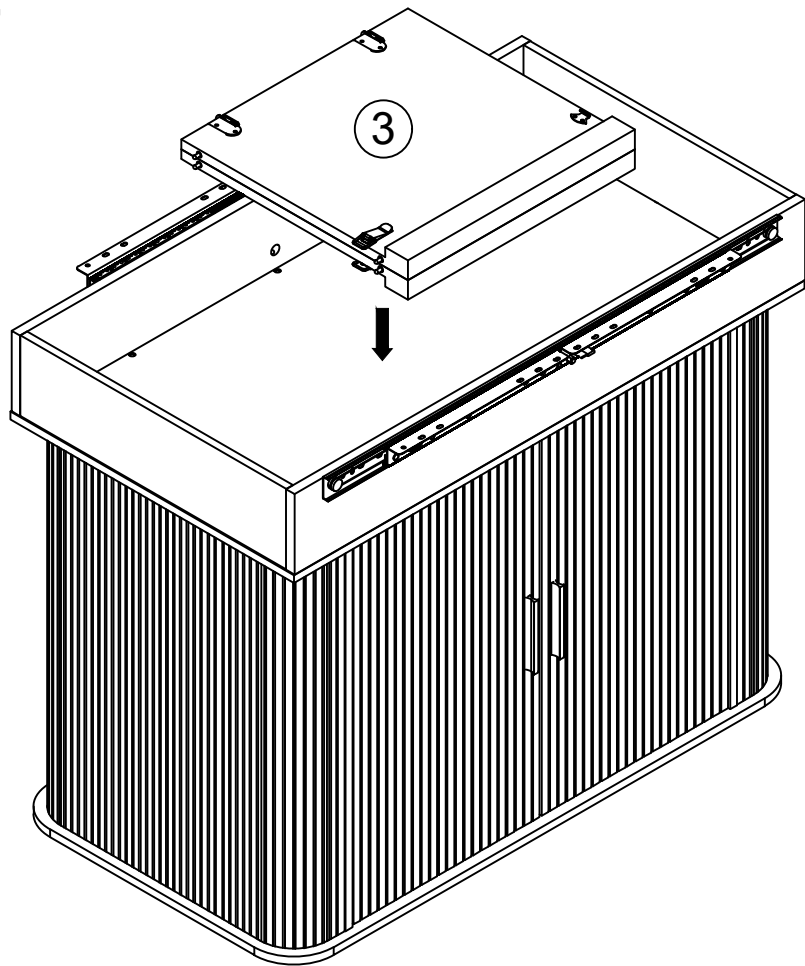


Step 18

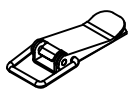E	X 8	O	X 2	P	X 2
					

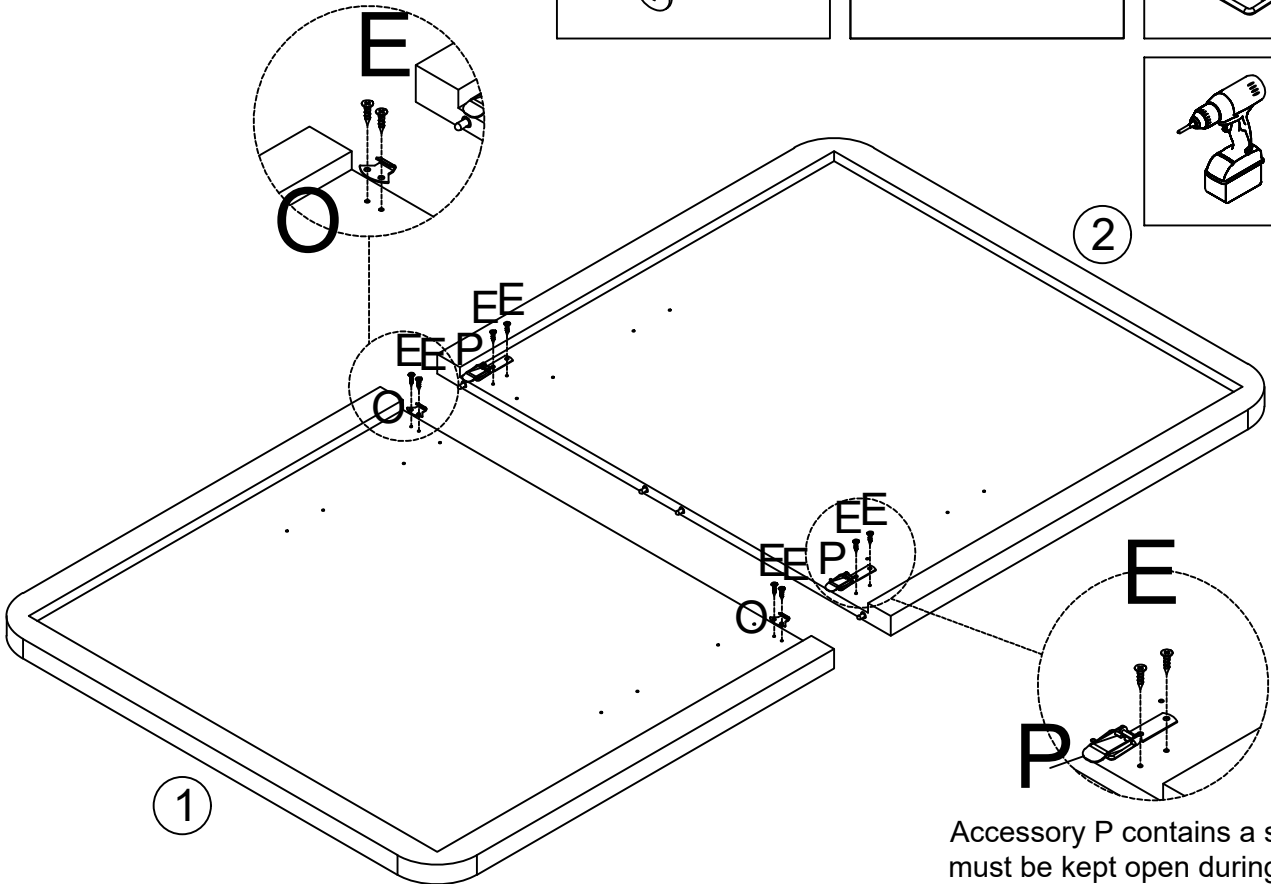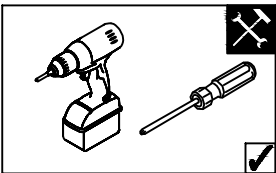


Accessory P contains a spring and must be kept open during installation. Please maintain this position and be careful of pinching injuries.


Step 19

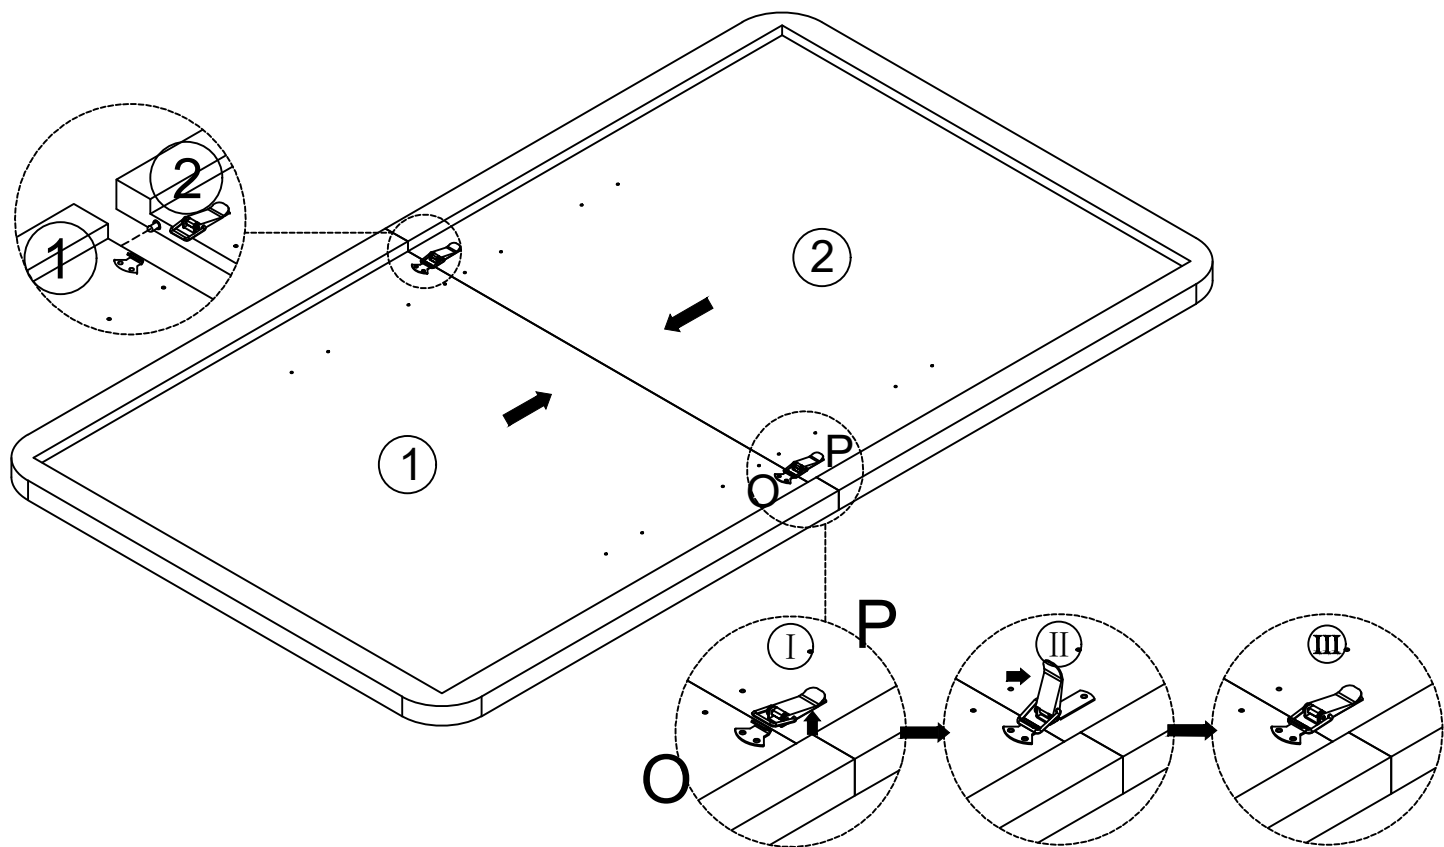


Step 20

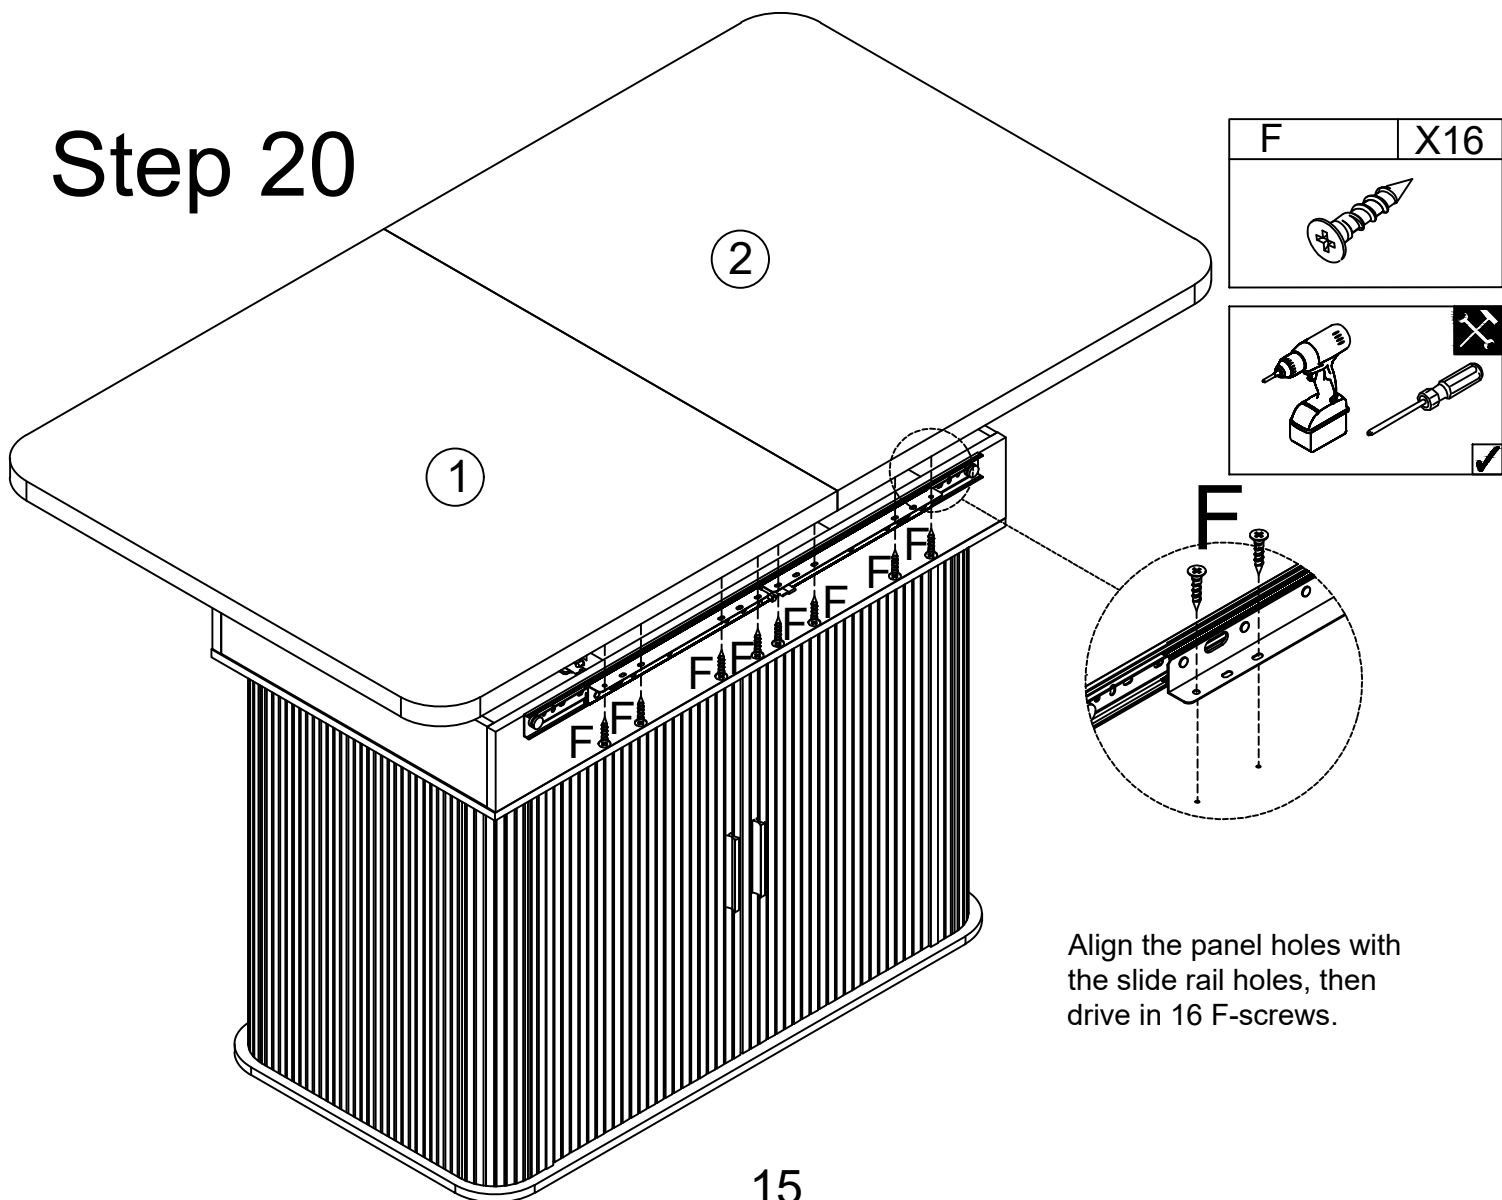


Step 21

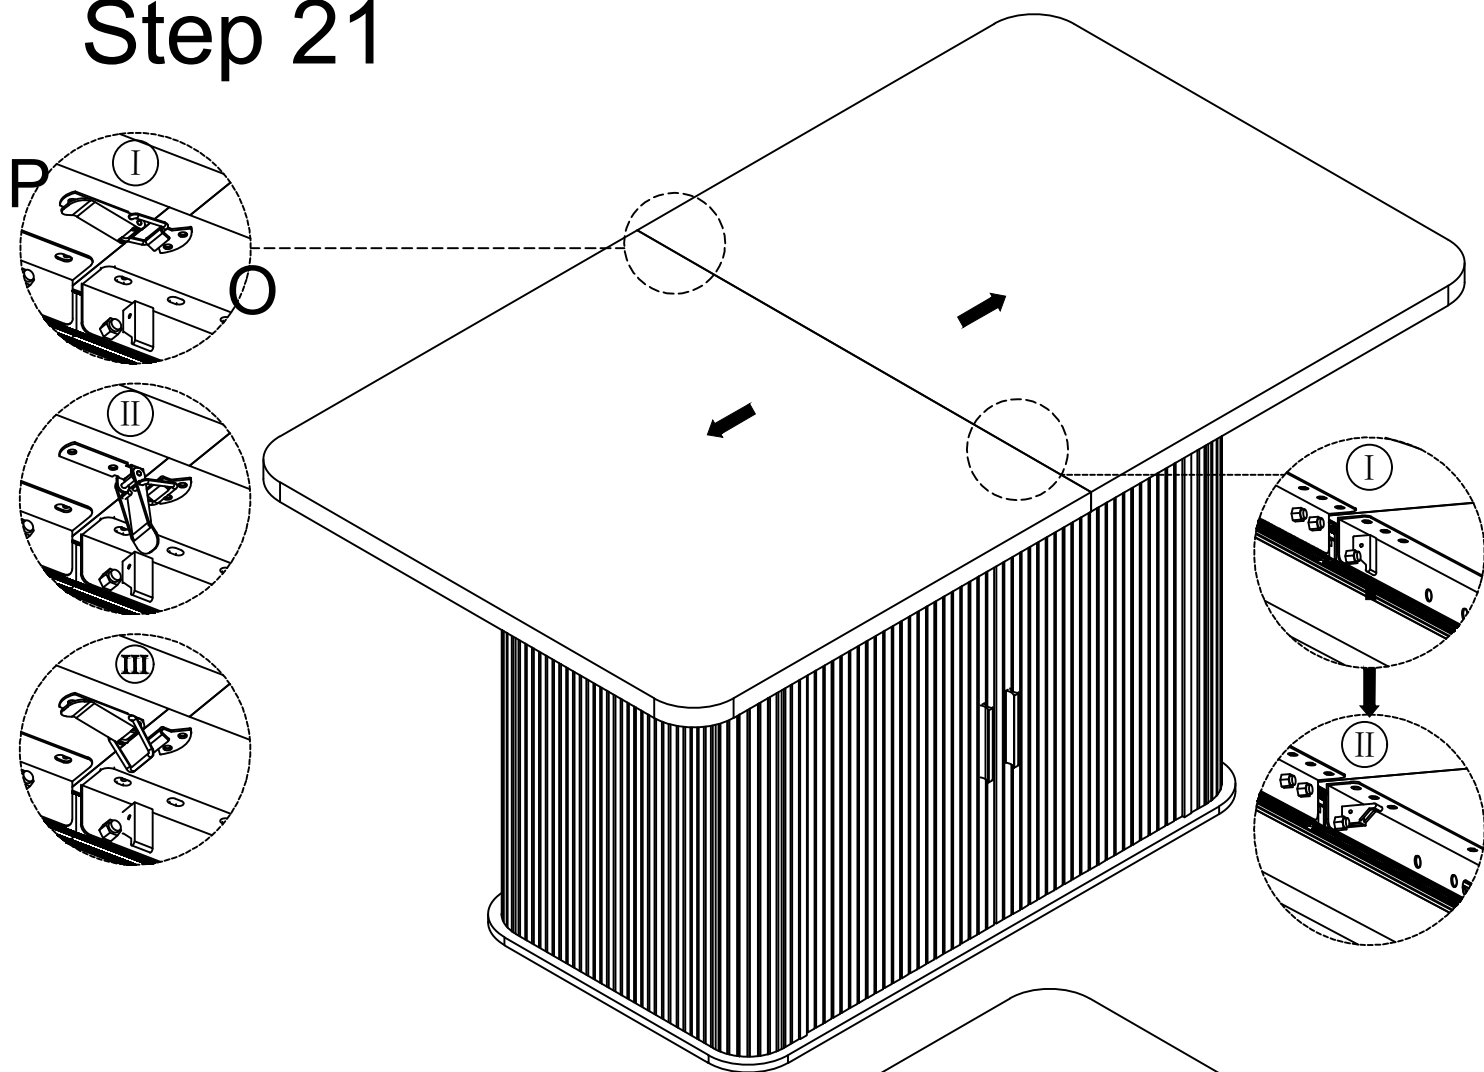



Step 22

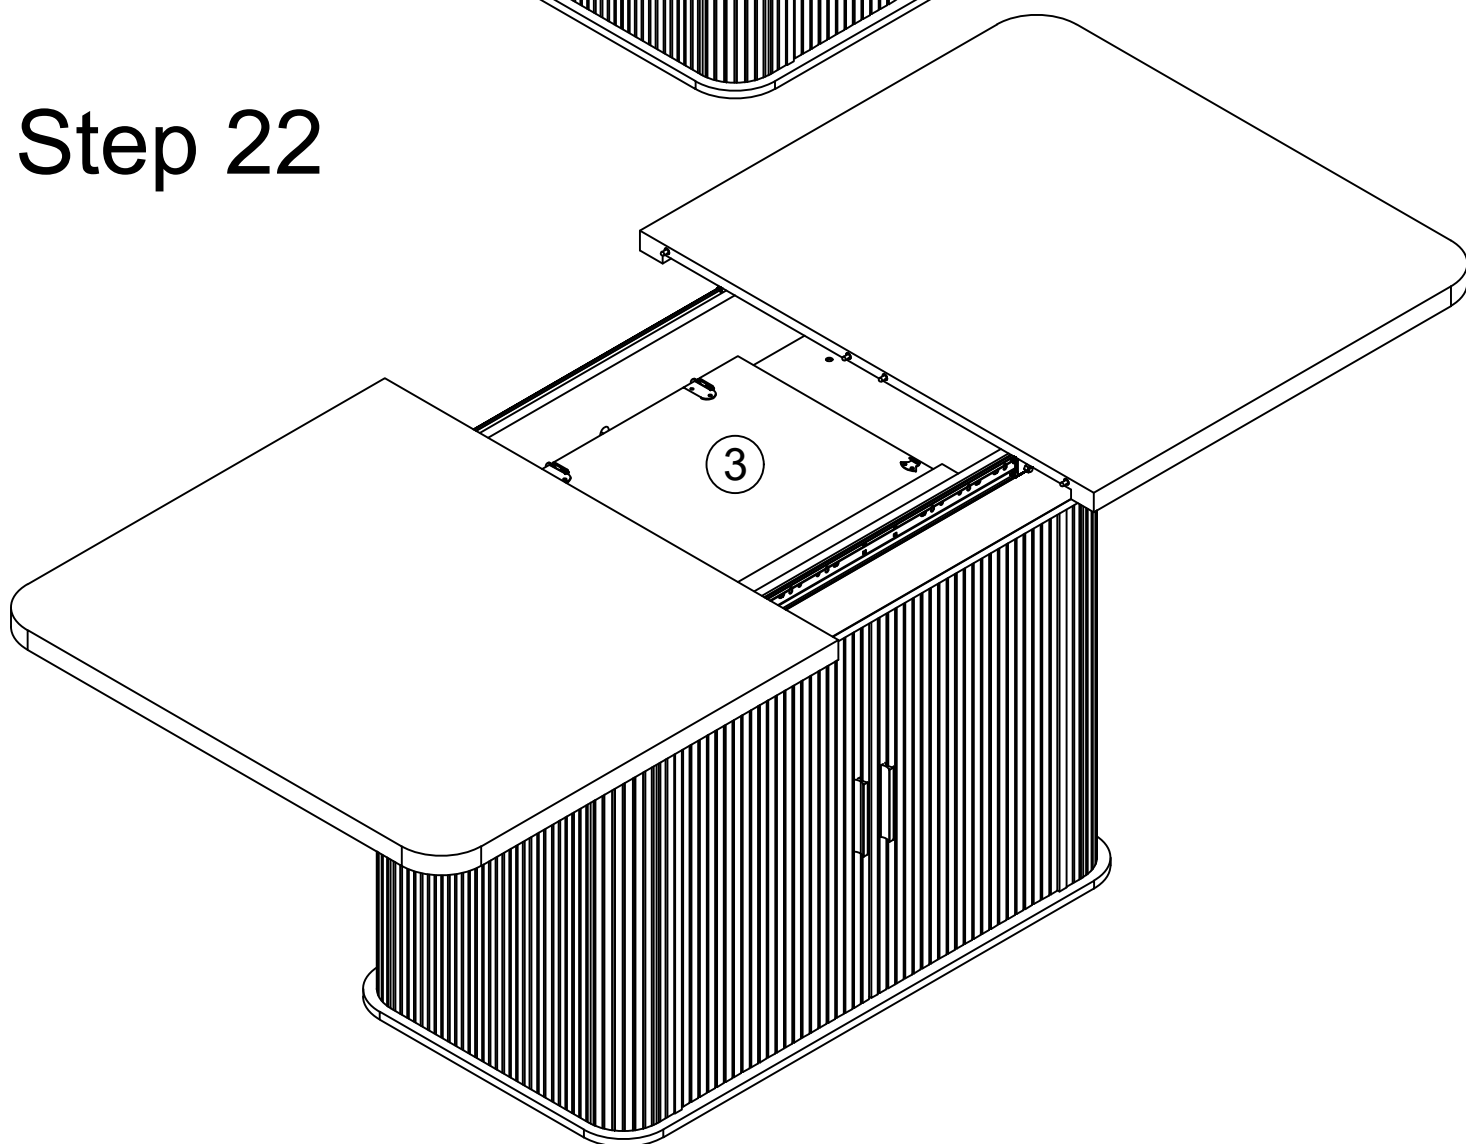

Step 23

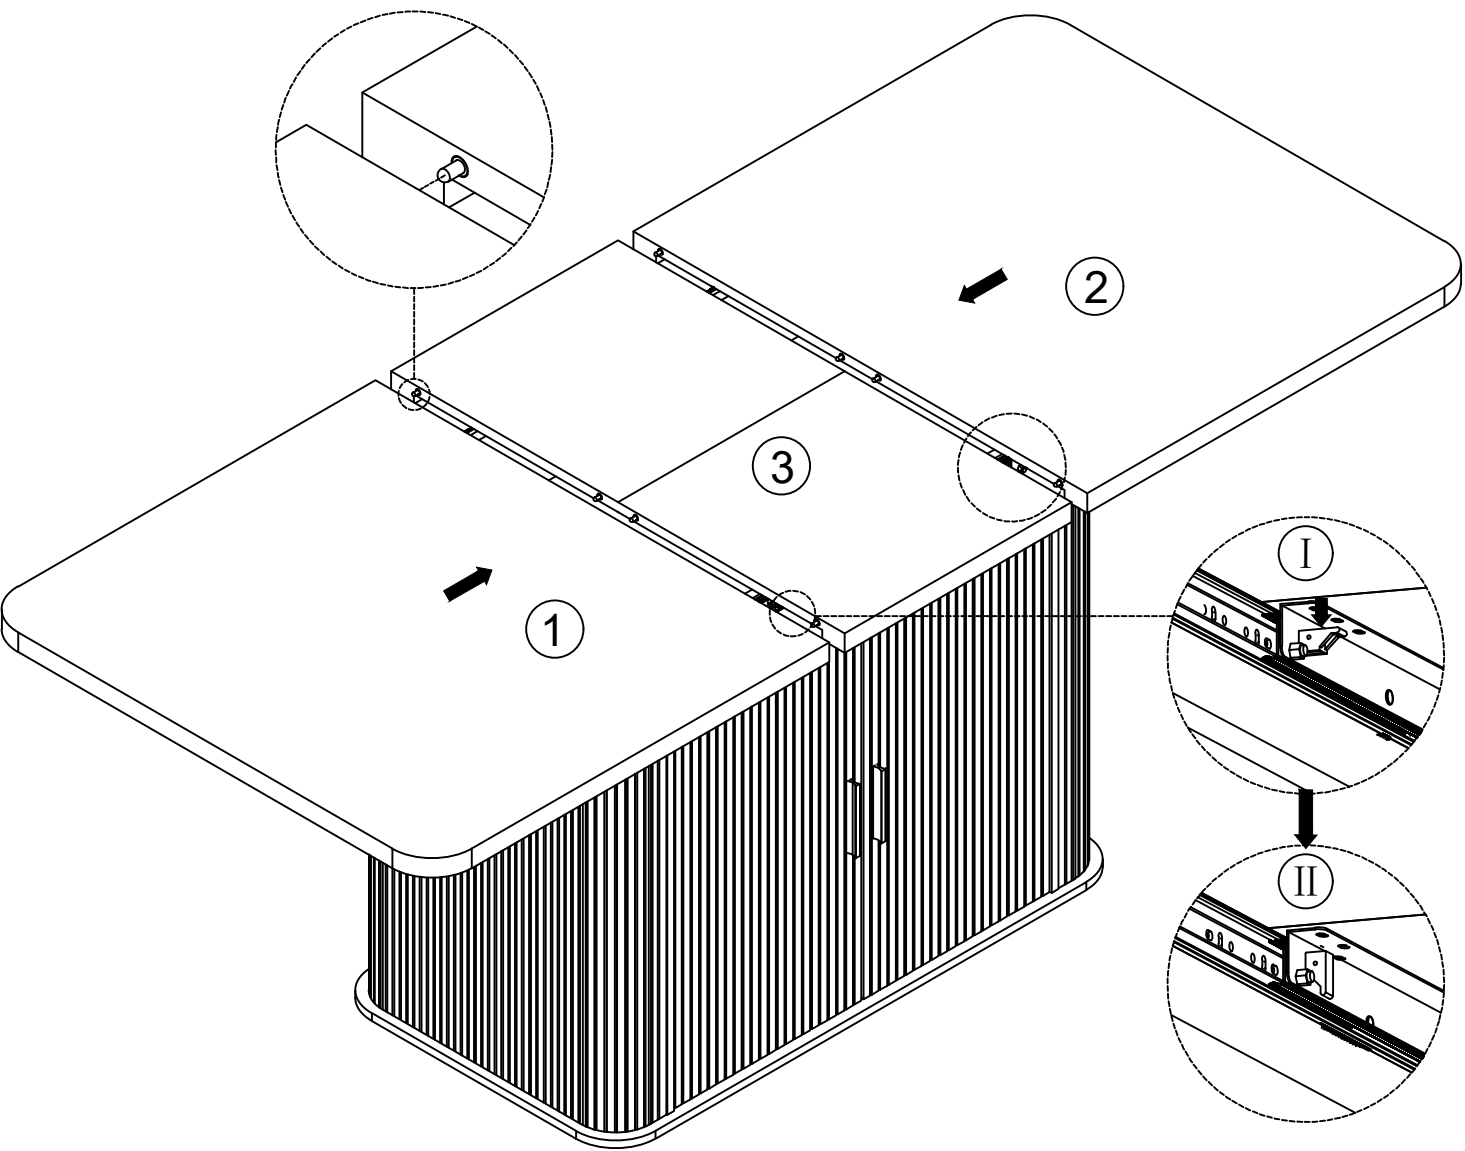

Step 24

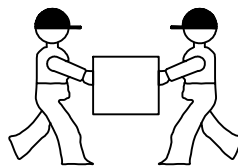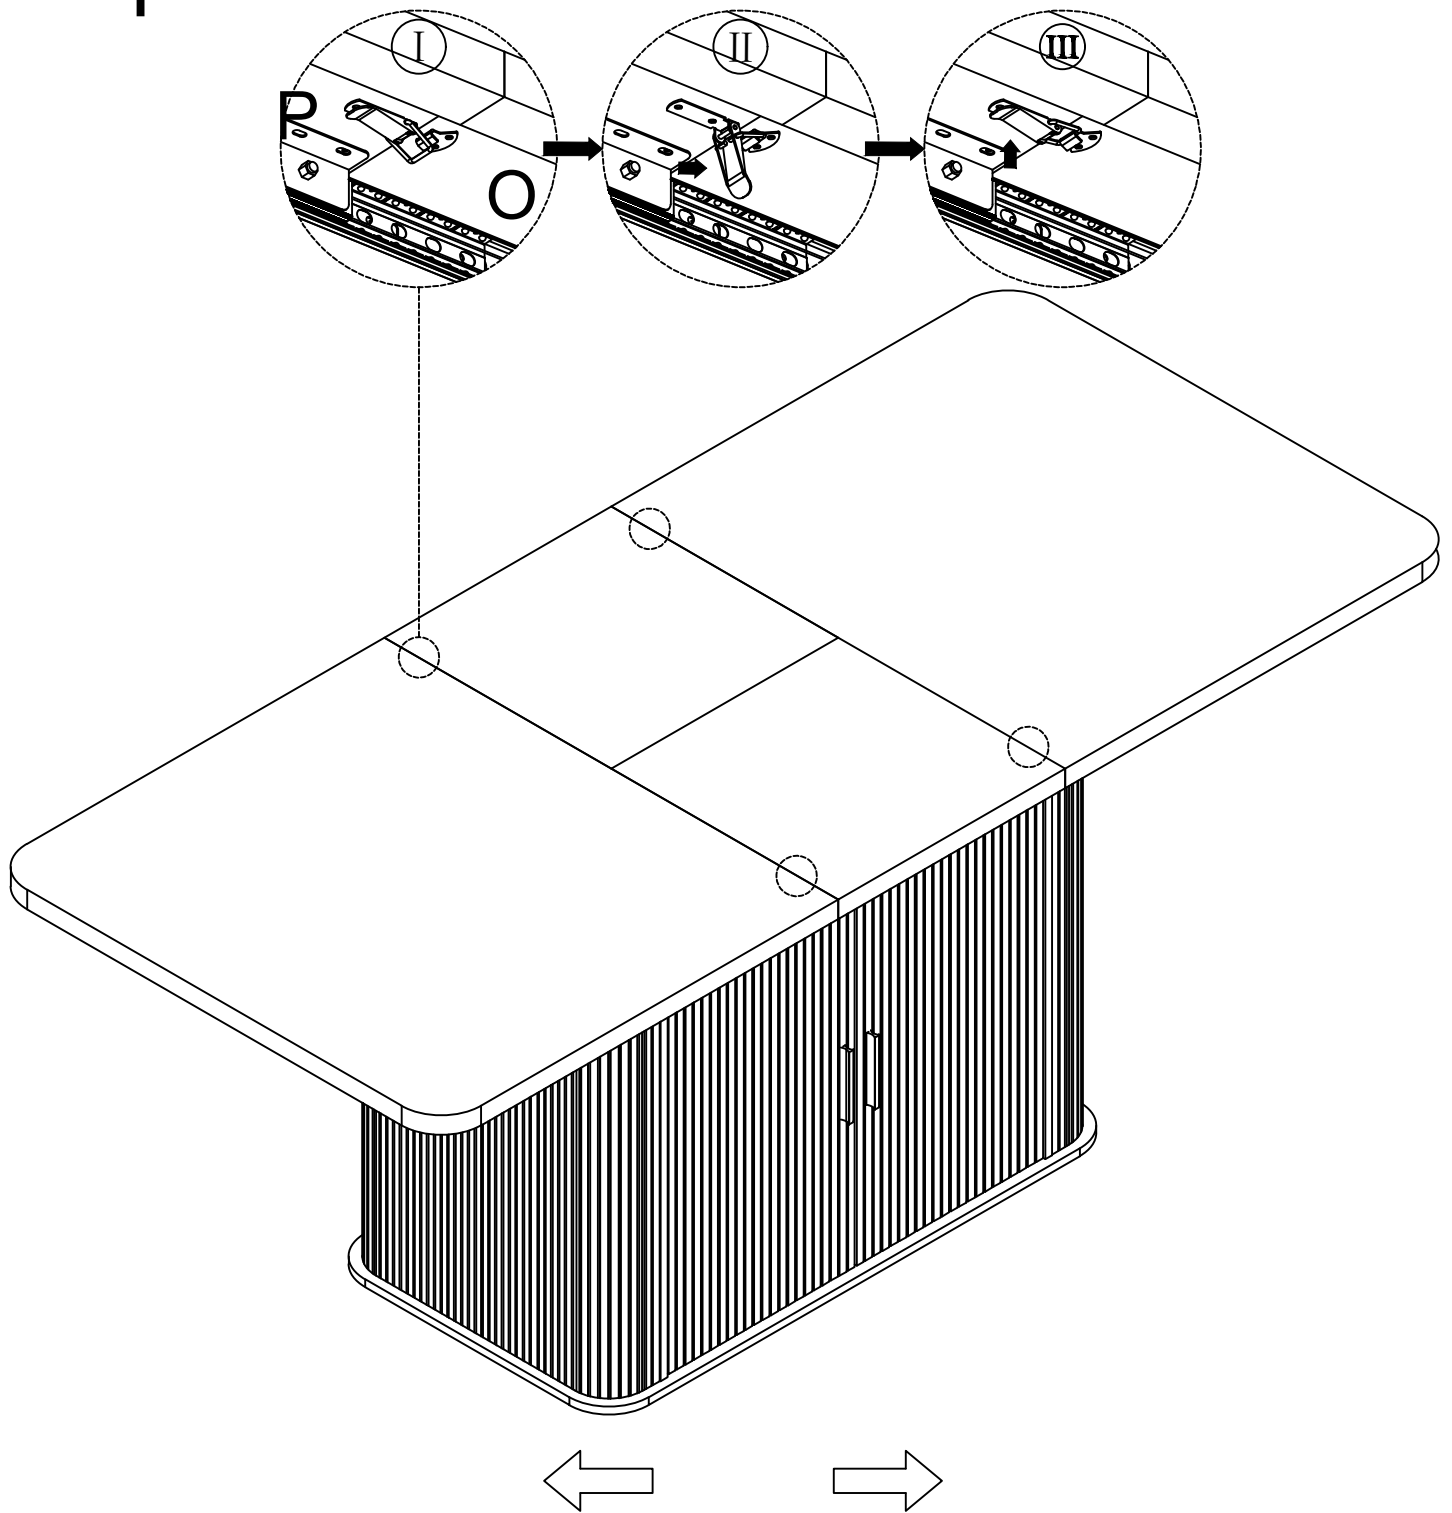

Two people work together to move the table.
Make sure you lift it off the ground.
Don't push and pull.