


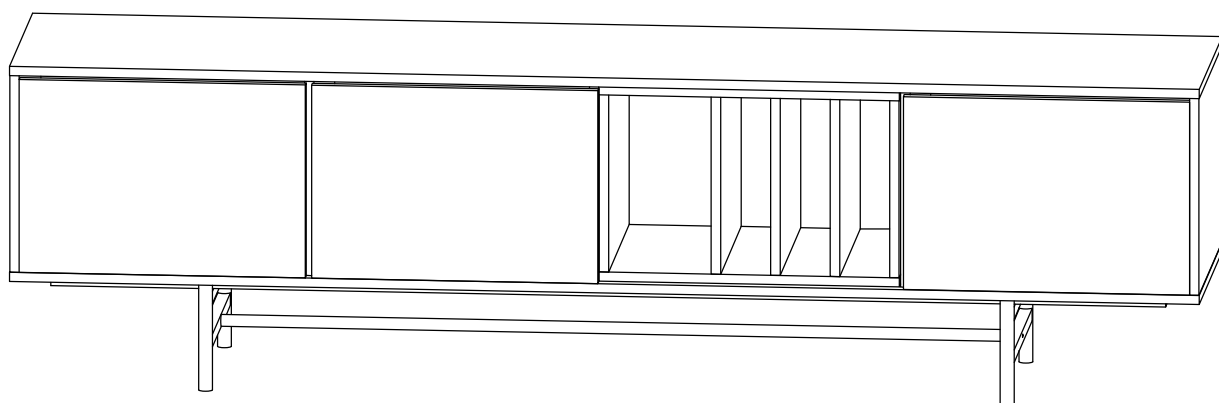
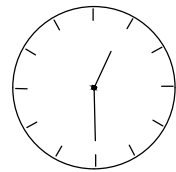
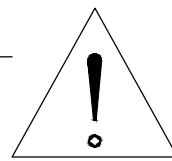


ASSEMBLY INSTRUCTIONS

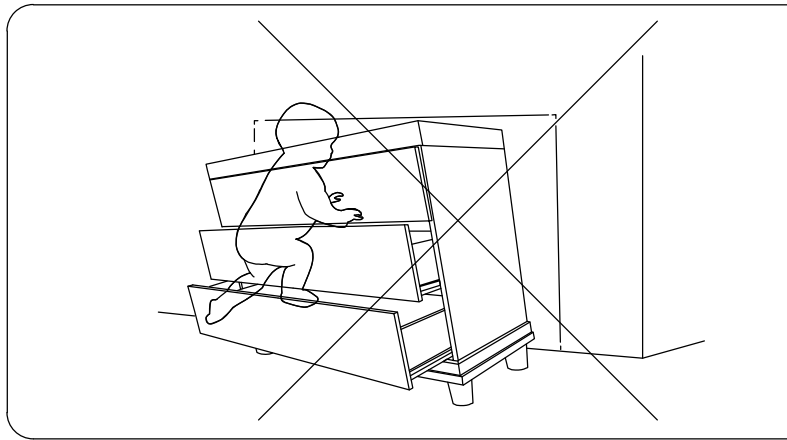


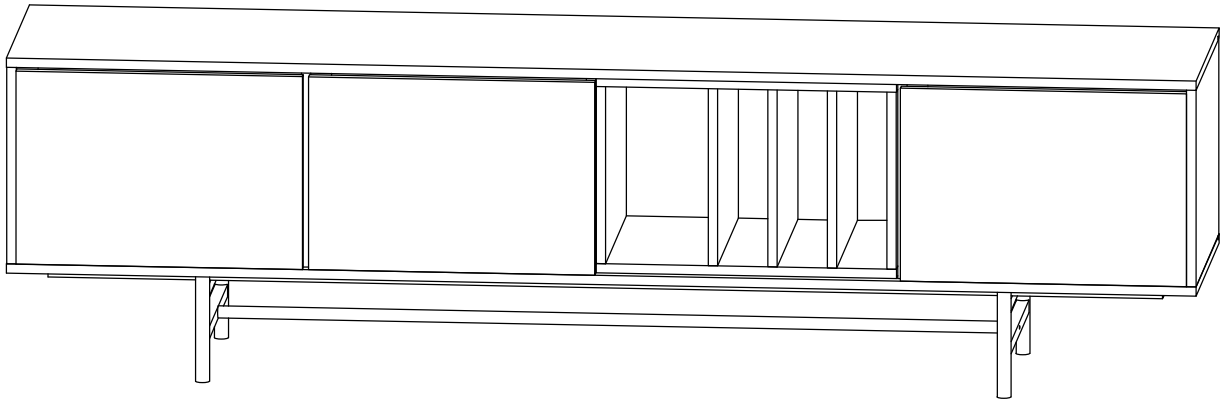

90'

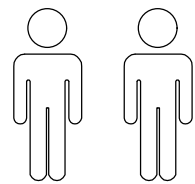


2

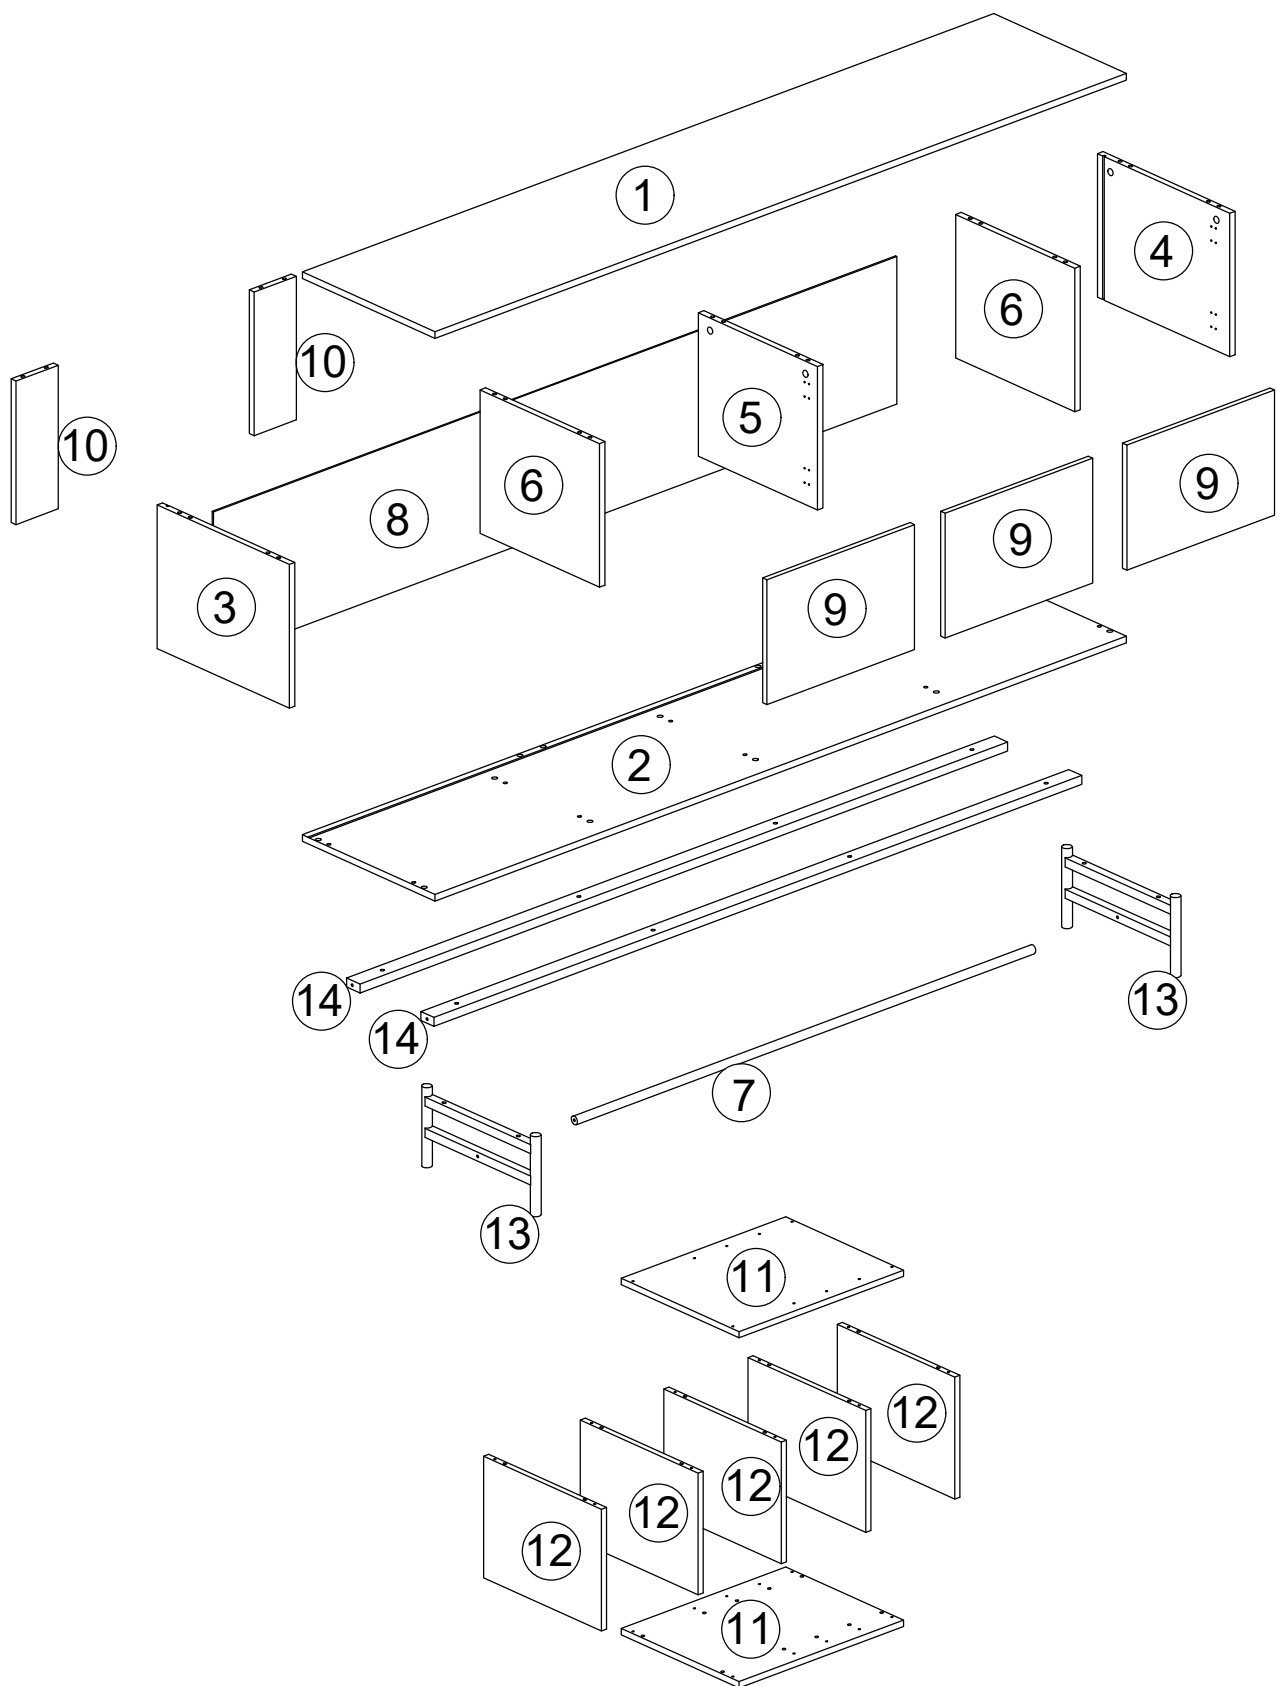



A	x14
	
$\phi\ 6 \times 35\text{mm}$	

B	x14
	
$\text{Ø}15 \times 12\text{mm}$	


C	x40
	
$\text{Ø}8 \times 30\text{mm}$	


D	x14
	
$\phi\ 7 \times 40\text{mm}$	


E	x42
	
M3.5x14mm	

F	x14
	
M6x30mm	


G	x20
	
M4x35mm	

H	x3
	


I	x4
	

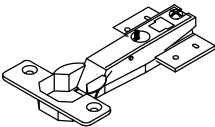
J	x2
	

K	x1
	
M4	

	x1
	


1

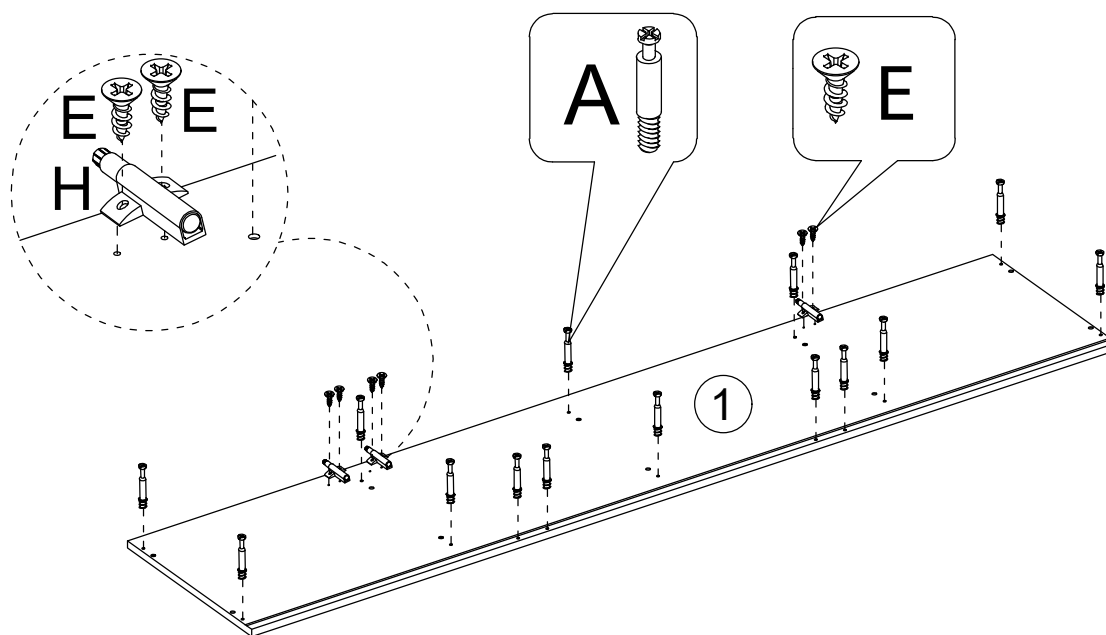


A	x14
	
ø6x35mm	

E	x6
	
M3.5x14mm	

H	x3
	
ø6x35mm	

	x1
	

2

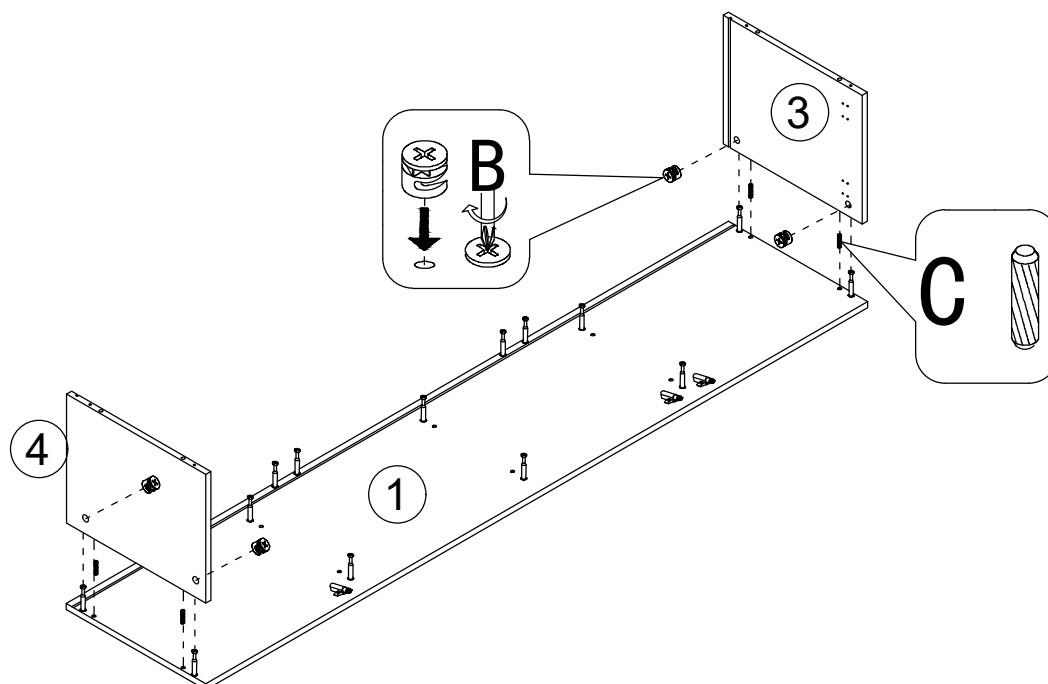


B	x4
	
ø15x12mm	

C	x4
	
ø8x30mm	

	x1
	


3

Watch the direction

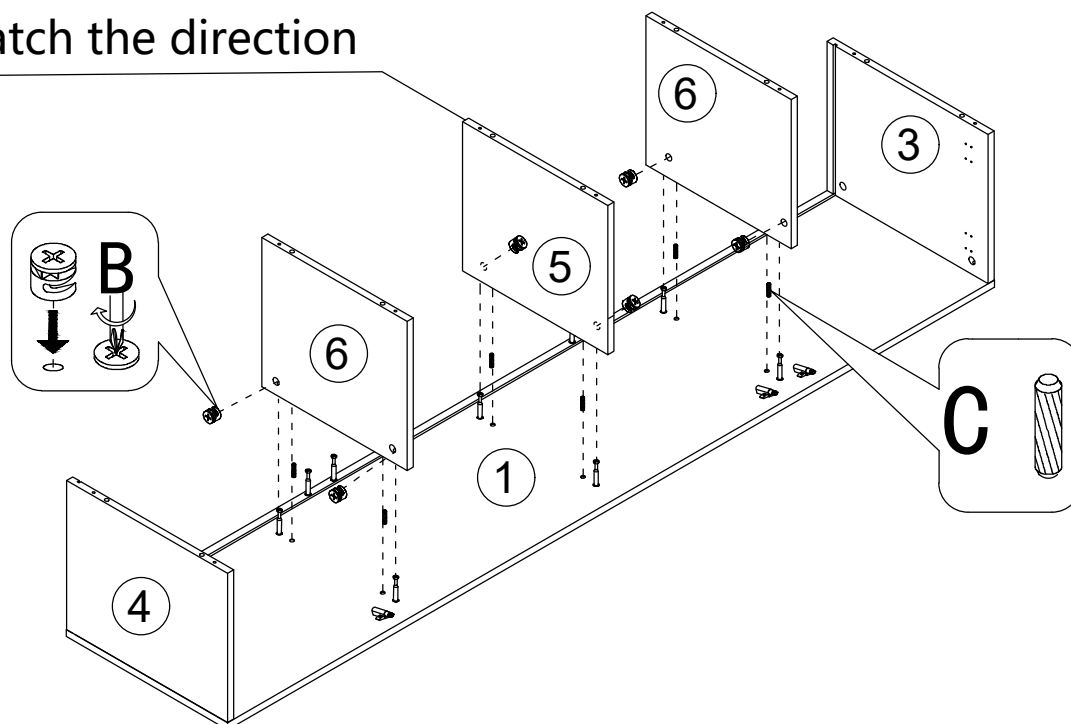

B	x6	C	x6	x1
				
Ø15x12mm		Ø8x30mm		


4

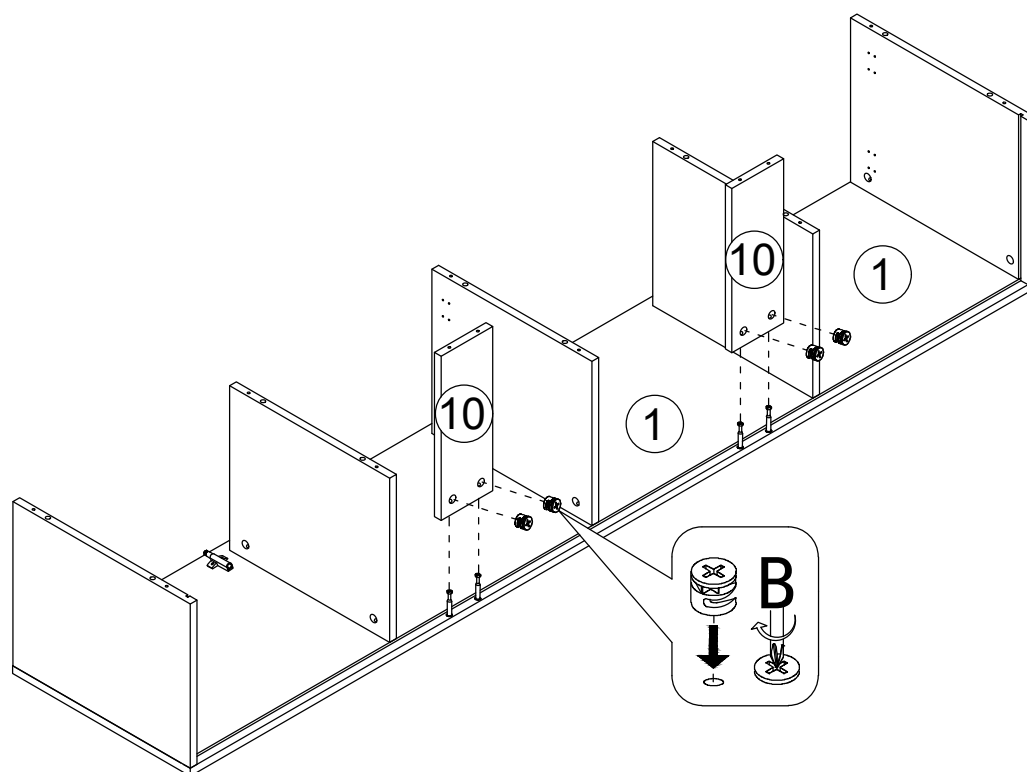


x1	
	
B	x4
	
Ø15x12mm	

5

The halogen faces outward.

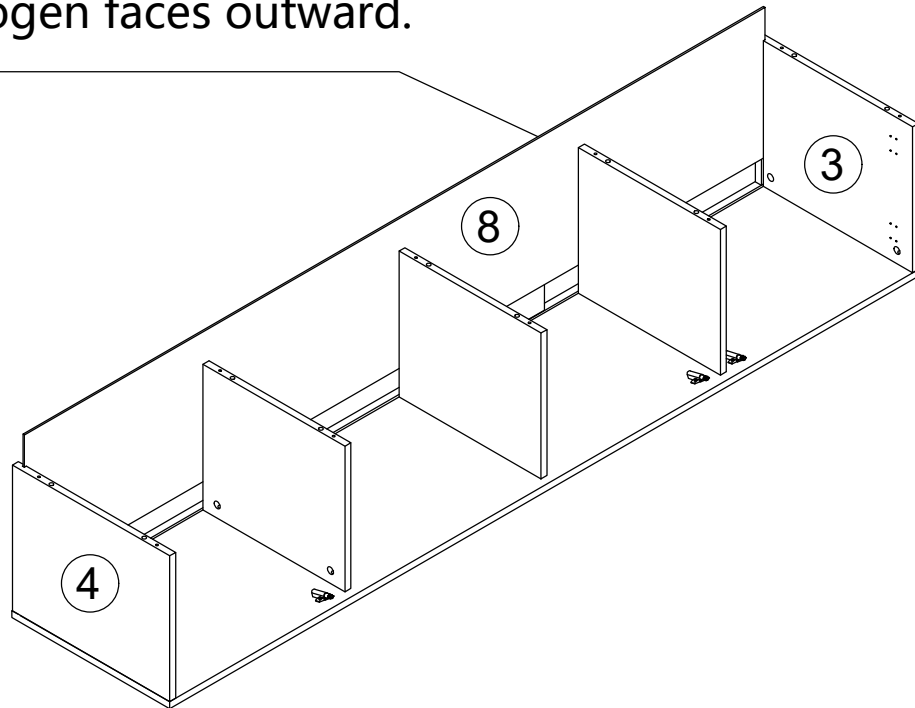



6

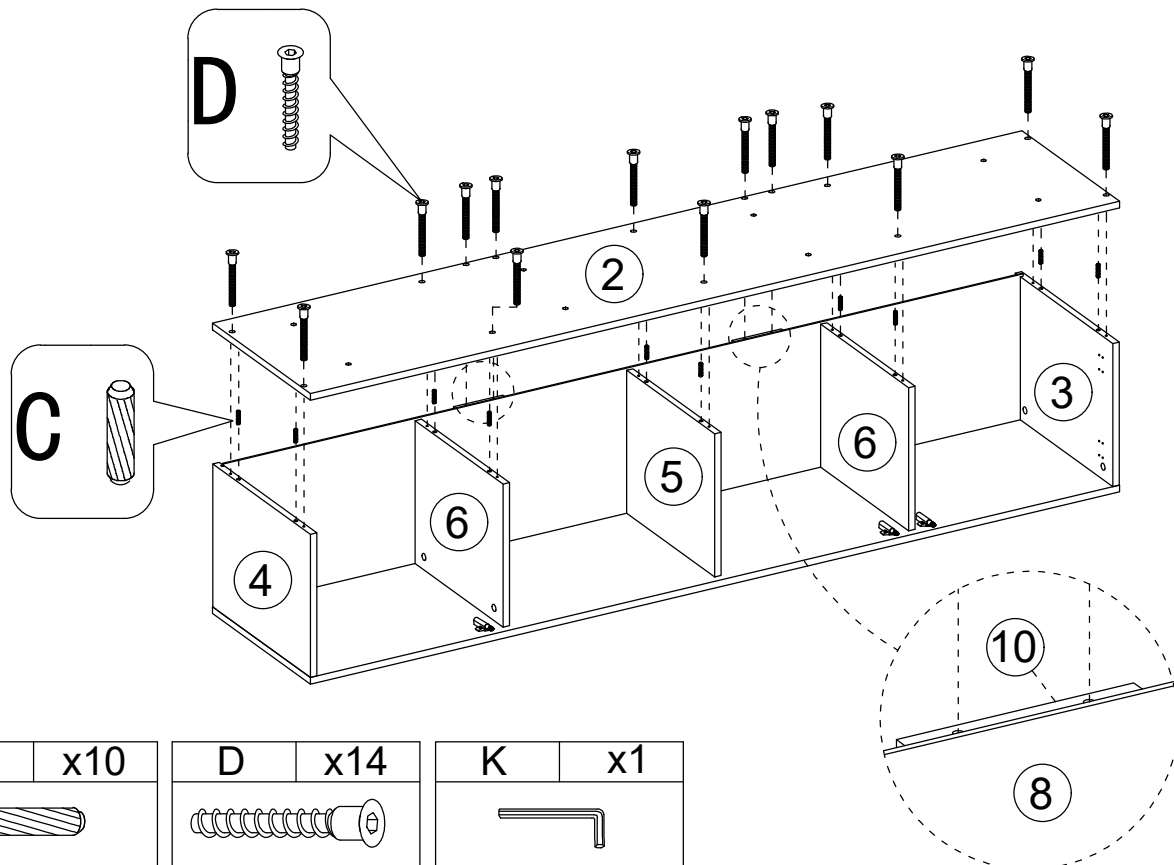


C	x10	D	x14	K	x1
ø8x30mm		ø7x40mm		M4	

7

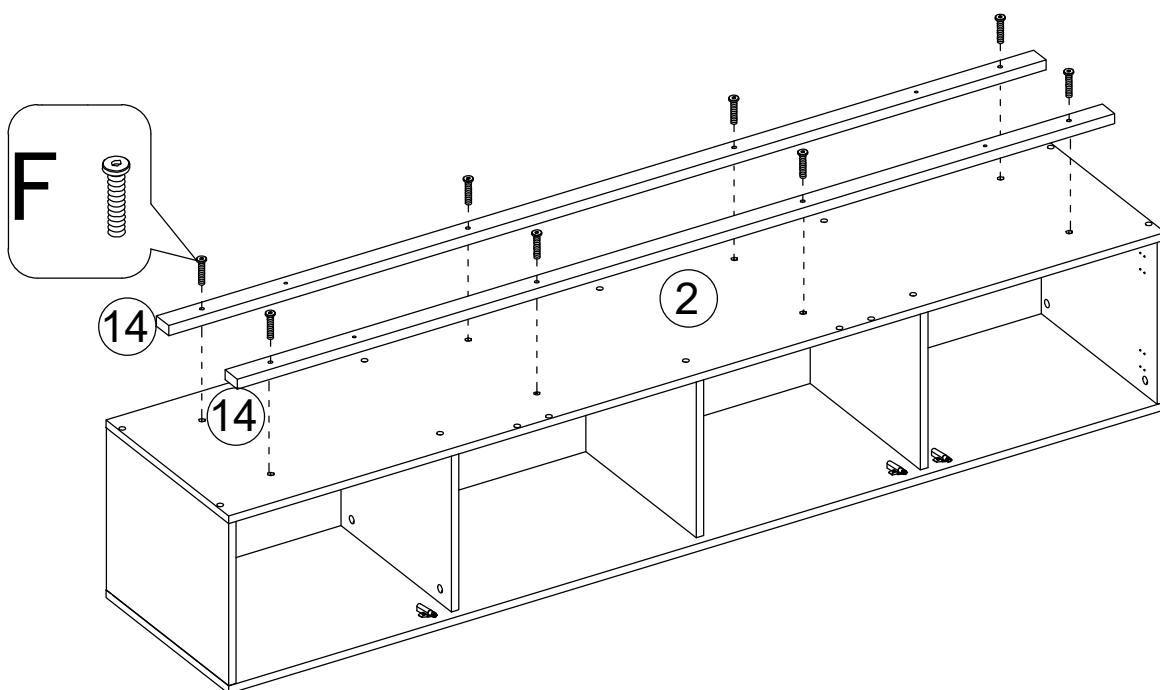


F	x8	K	x1
			
M6x30mm		M4	

8

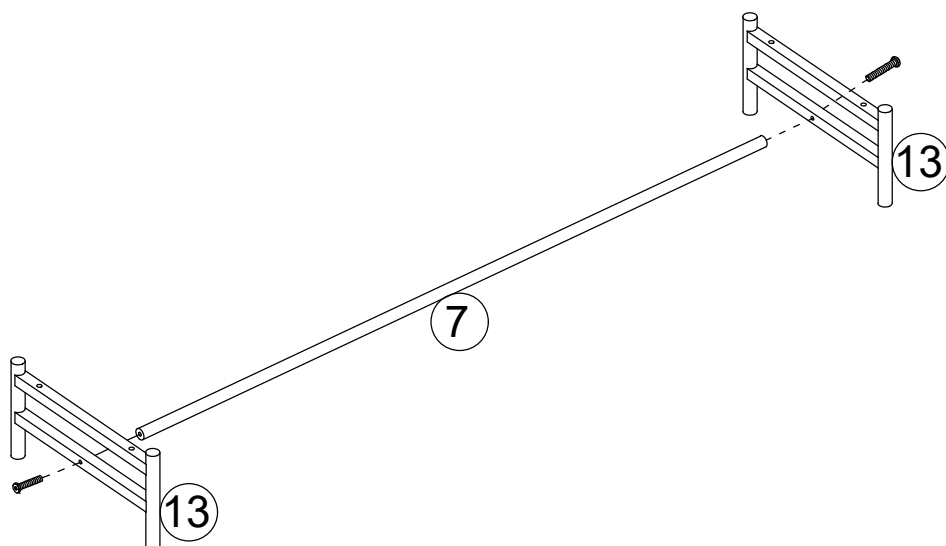


F	x2	K	x1
			
M6x30mm		M4	


9

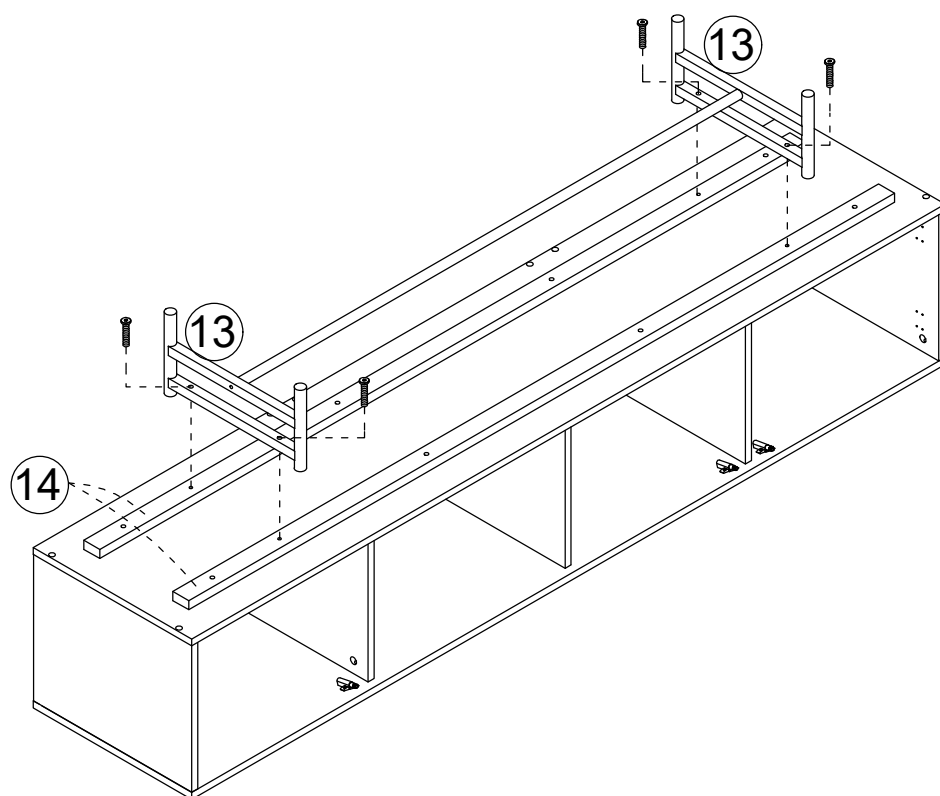


K	x1
	
M4	
F	x4
	
M6x30mm	


10

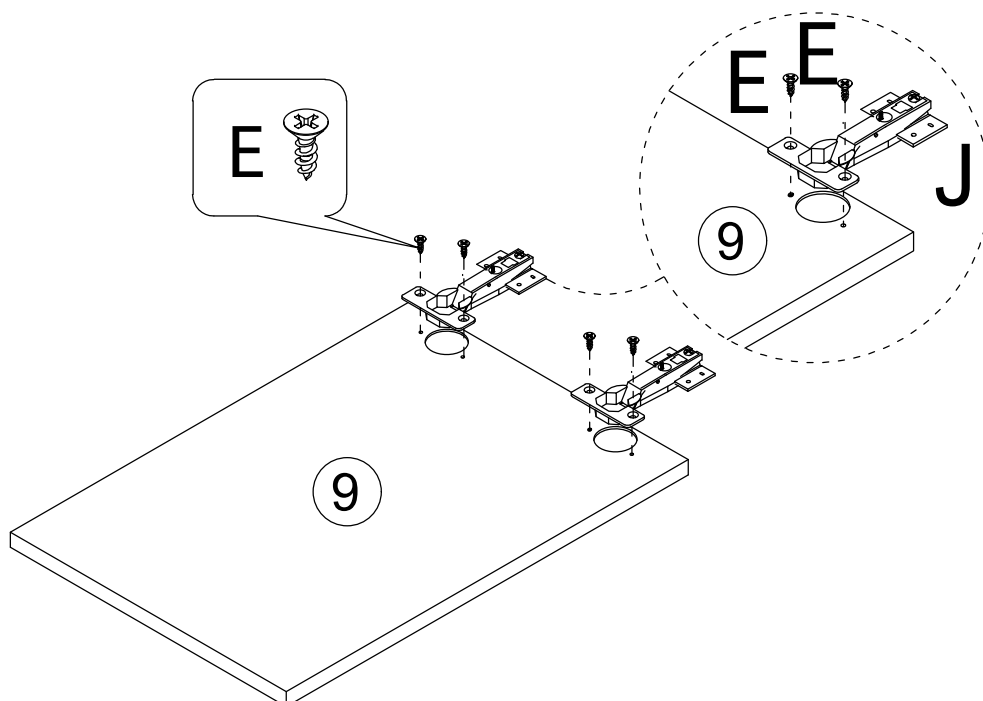


E	x4	J	x2	x1
				
M3.5x14mm				

11

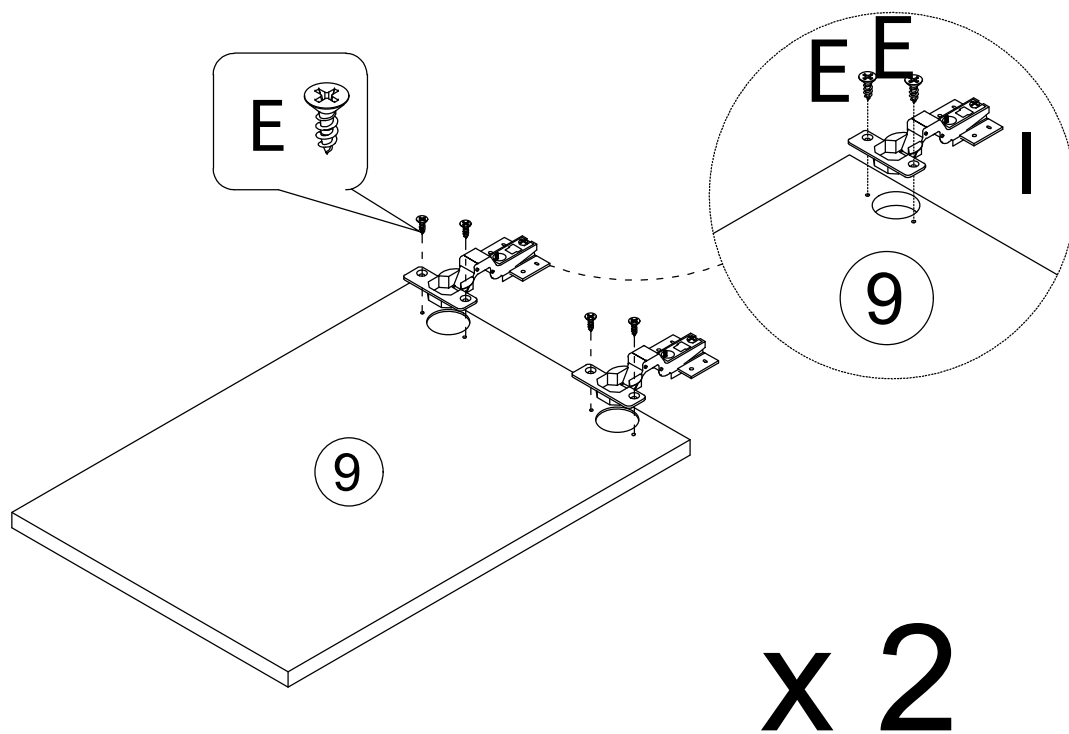


E	x8	I	x4	x1
				
M3.5x14mm				


12

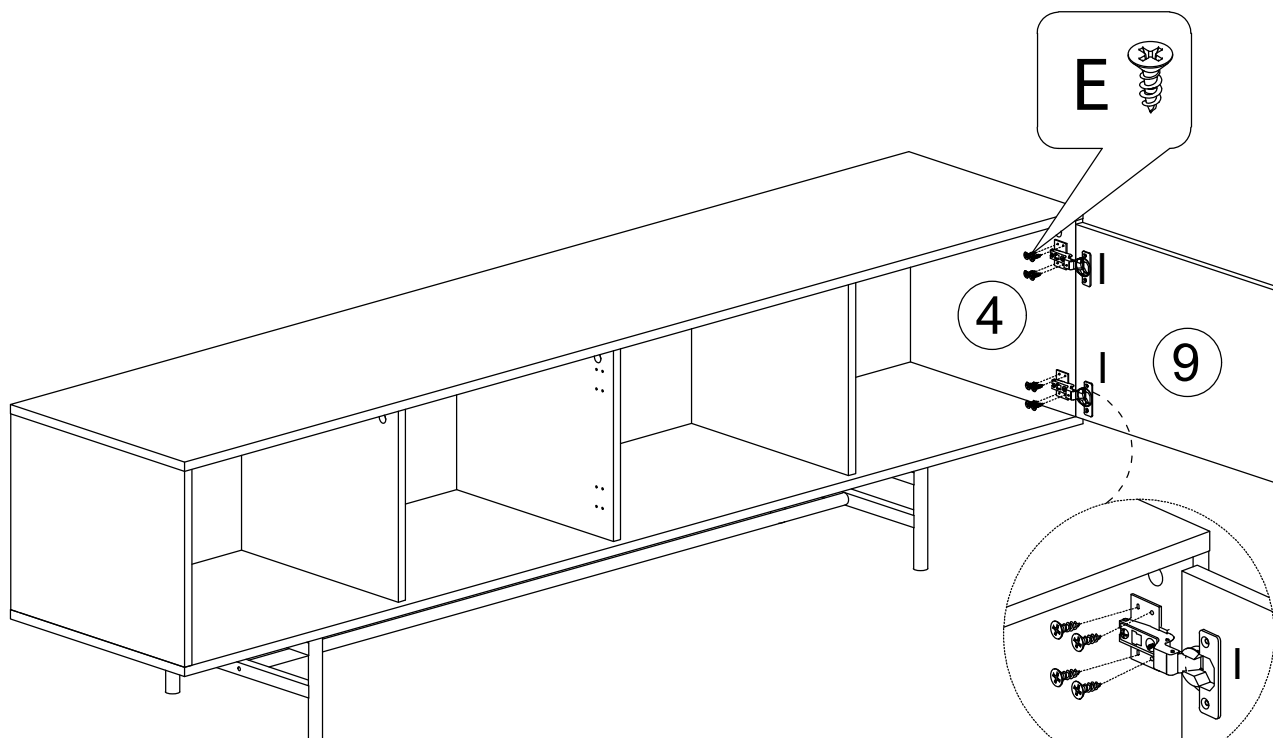


E	x8	x1
		
M3.5x14mm		

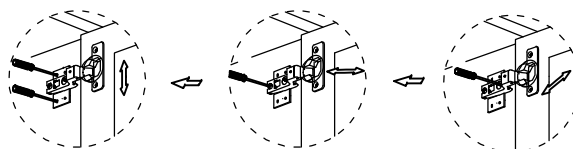


13

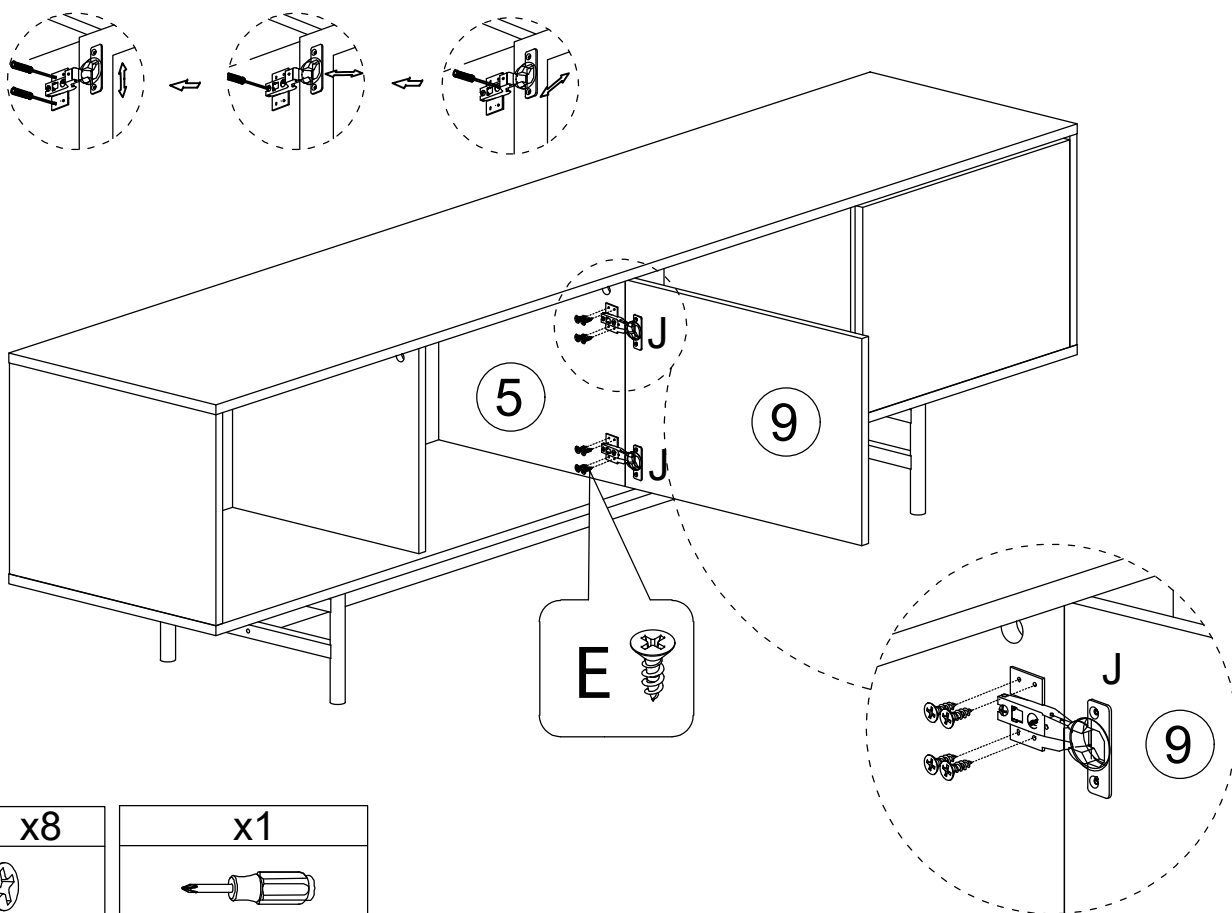


E	x8	x1
		
M3.5x14mm		

14

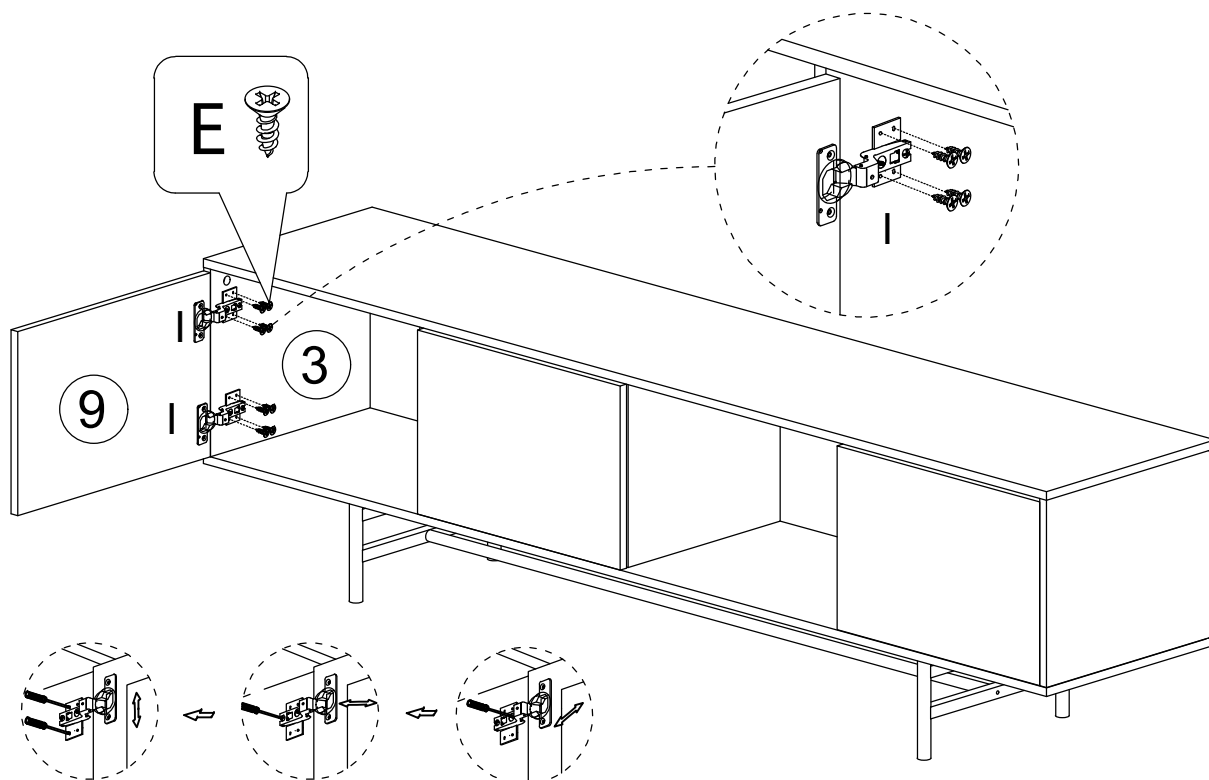


E	x8	x1
		
M3.5x14mm		

15

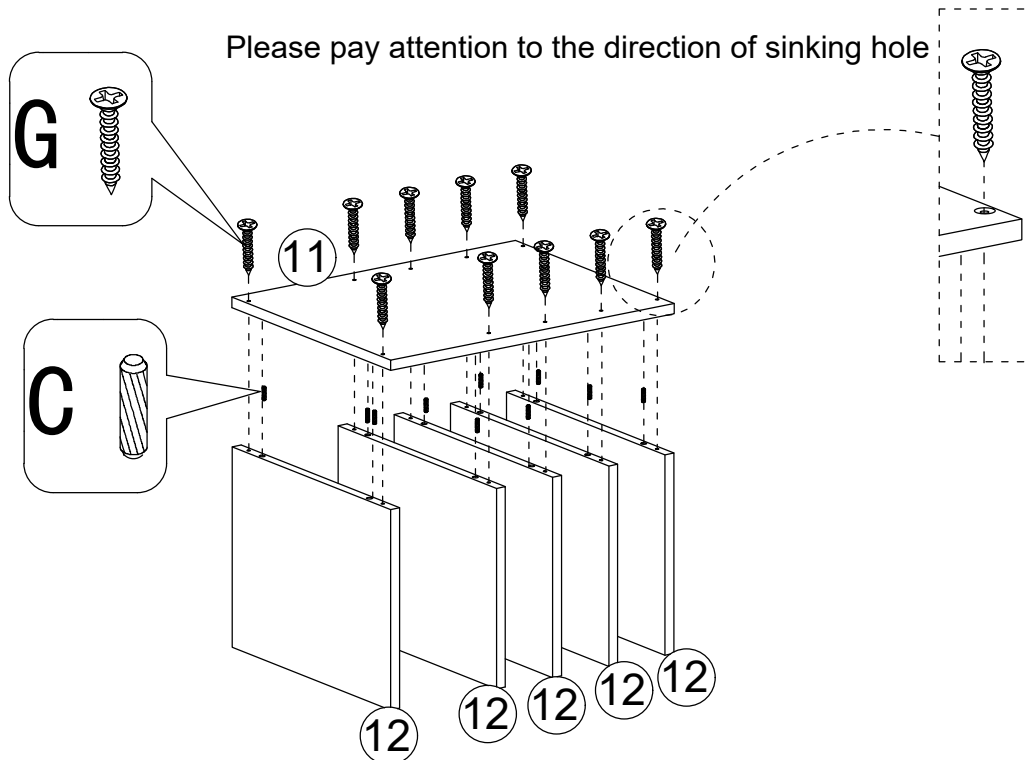


C	x10	G	x10	x1
				
ø8x30mm		ø7x40mm		

16

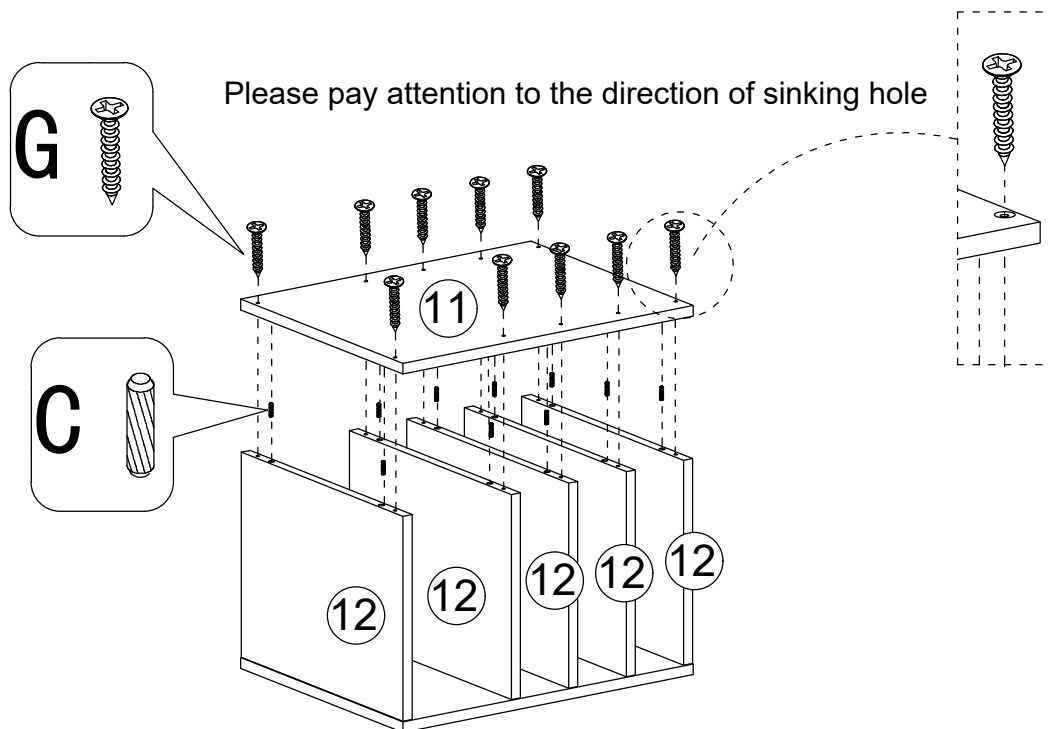


C	x10	G	x10	x1
				
ø8x30mm		ø7x40mm		

17

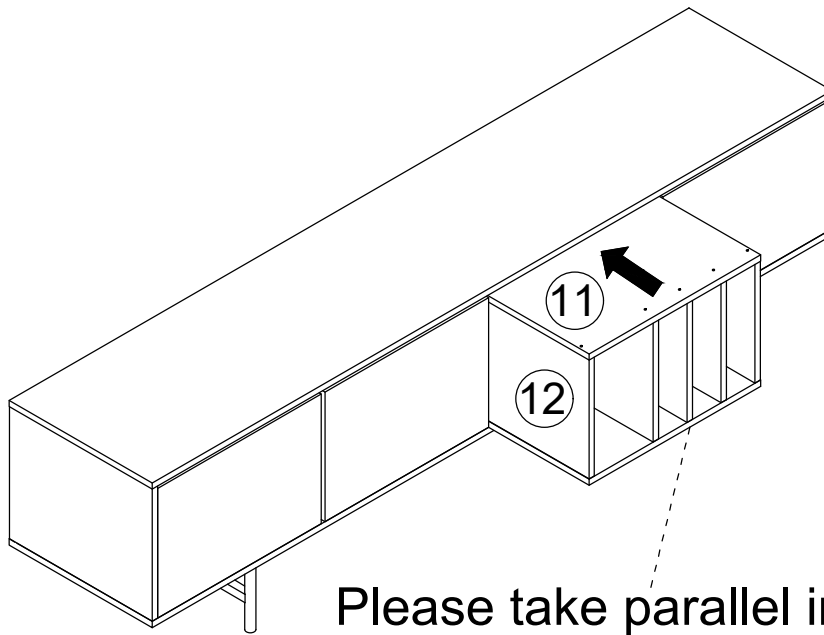

Please take parallel in pushing in

18

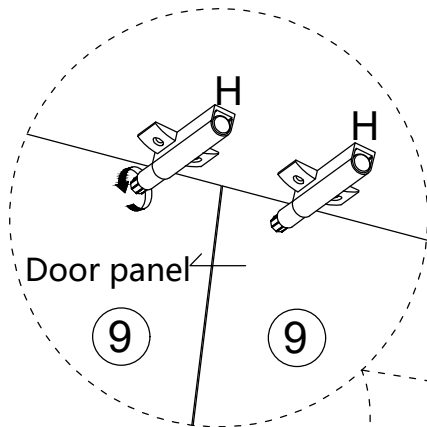

Loosen the heads of touchers (H) to touch the inside faces of door panels and drawer front panels. To make the door panels and drawers pop out well

