
## Getting Started:

Please read through all instructions carefully before you begin installation. Carefully remove your new draperies from their packaging. Lay out draperies and identify your left and right panels. You will be able to determine this by looking at the top of the drapery and referring to the following drawing.


**Right Panel:** 

## Left Panel:

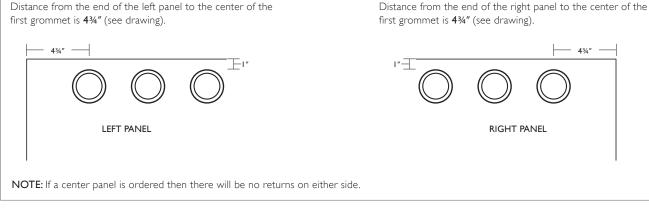

Installing Your Grommet Draperies: You are now ready to hang your draperies.

I With the mounting brackets already installed, insert your drapery pole through the grommet holes in an S-like manner

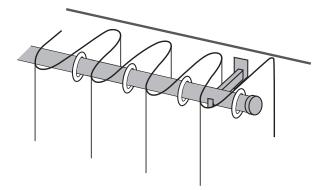

- ${\bf 2}$  Let the drapery hang once the pole has been inserted through all the grommets
- 3 Repeat steps I and 2 for the remaining panels
- 4 With draperies in place, install rod onto mounting brackets
- TIP: We recommend leaving one grommet on the outside of each of the end brackets. Space the end brackets approximately 2" in from the end of pole (not including finials).

## Dressing Your Drapery:

Once your draperies are installed, most wrinkles and folds will relax on their own. You may also use a garment/commercial steamer to help eliminate wrinkles. Please keep in mind linens will characteristically have wrinkles regardless of steaming or pressing.

NOTE: All of our draperies are hand-pressed prior to shipping, however due to transit, some additional wrinkling may occur. Prior to hanging your draperies you may want to lay them out and press out wrinkles gently with a cool iron.

## Care and Cleaning:

If the drapery is dusty, simply vacuum over it using an upholstery attachment. For stubborn stains or overall deep cleaning, professional on-site service is recommended.

Because Custom Window Treatments are made to measure, they cannot be returned.

we're here to help. shop@roomandboard.com or call 800.301.9720

5 Installing returns on the ends of your draperies allows the last fold of the drapery panel to "return" back to the wall. This is ideal especially in areas where you can see your draperies from the sides.

Take the last 4%'' at the top of the drapery next to the last grommet and simply extend the fabric back towards the wall. Affix a screw to the wall at the same height of the drapery pin that is attached to the drapery. Hook the pin onto the screw; this will keep the return in place

\*Does not apply to center panels.

