

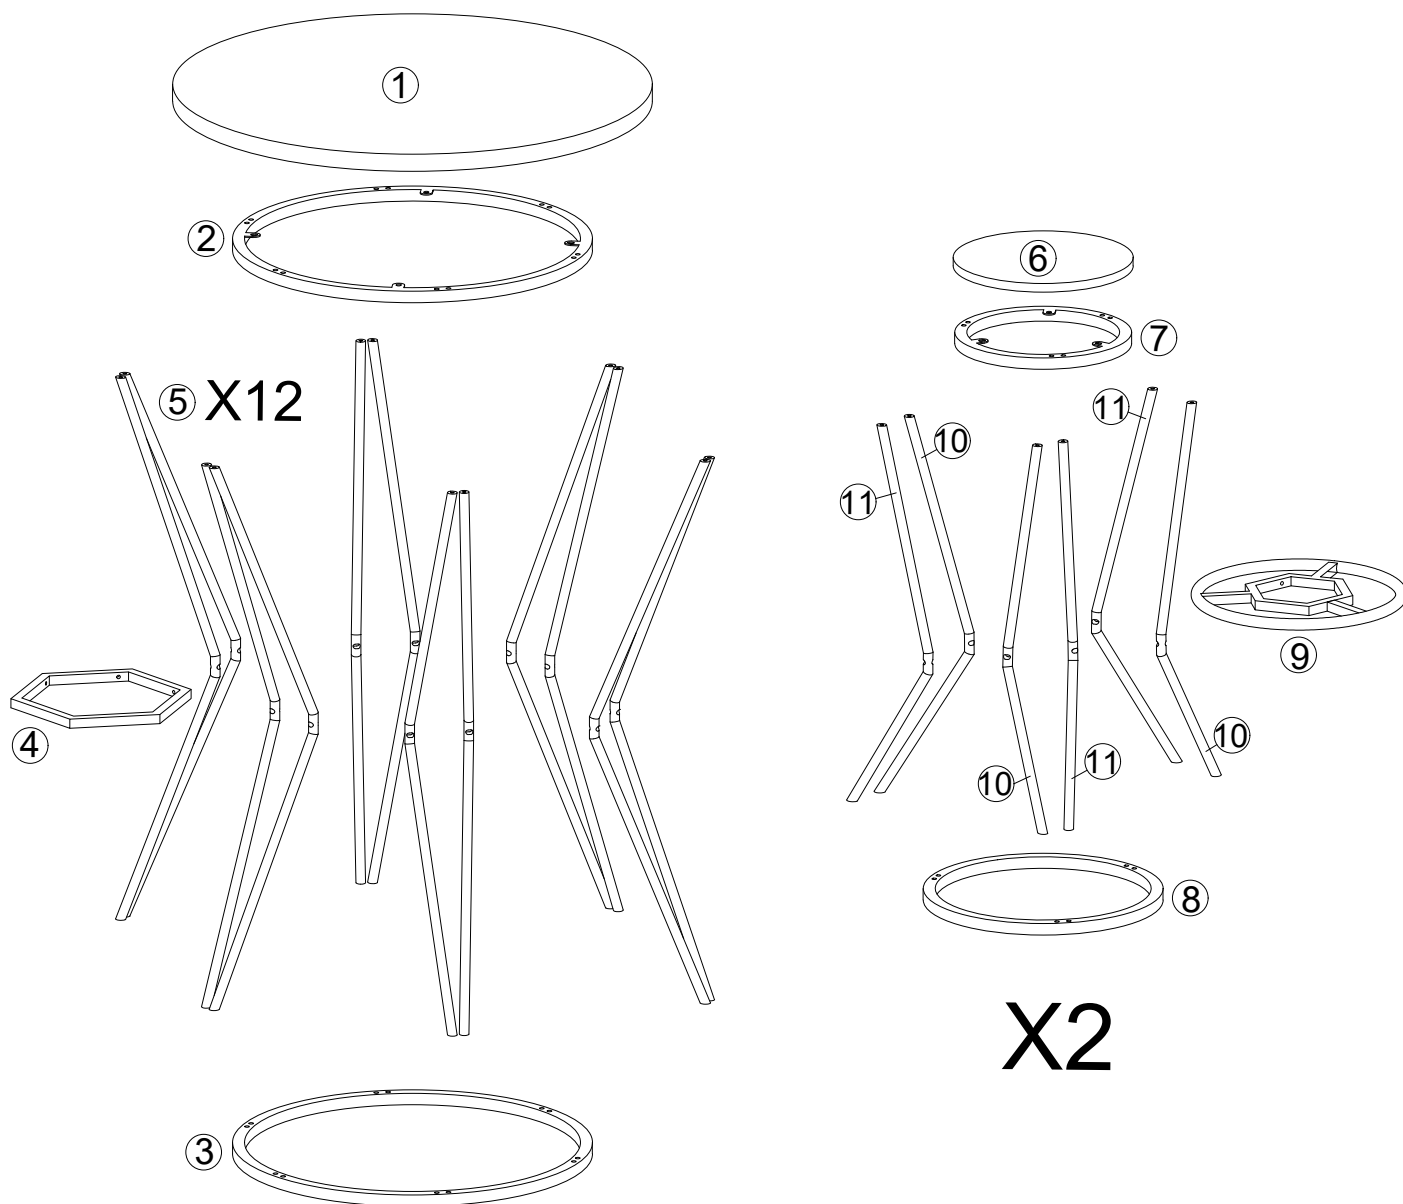



BTBC-065-2IN1





Notes: Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.




A	X10	B	X48	C	X24	D	X1	E	X6
									
M6X12mm	M6X25mm	M6X25mm	M4X55mm	M6XØ20mm					

STEP 1

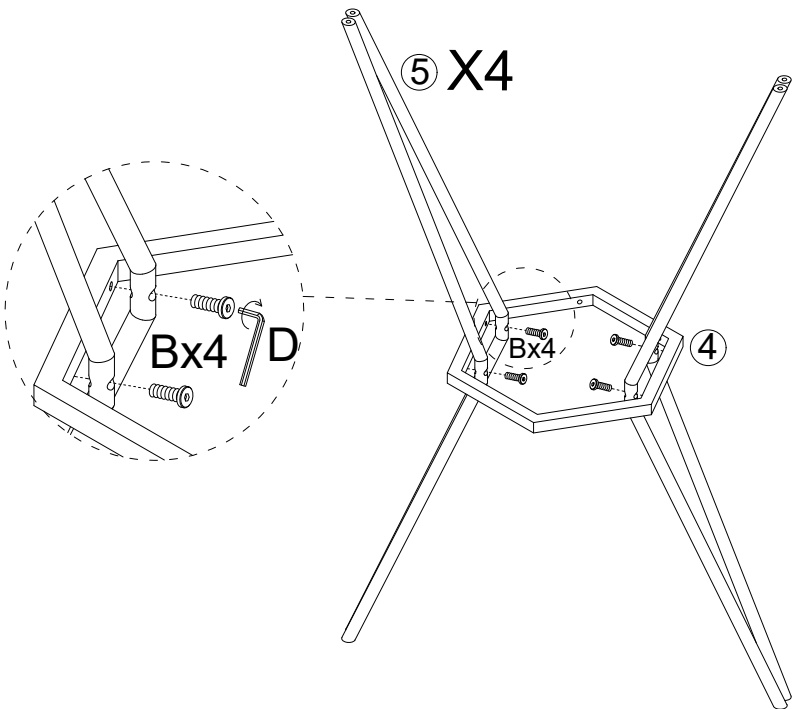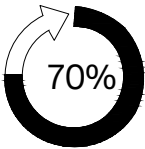



B	X4	D	X1
			
M6X25mm		M4X55mm	

STEP 2

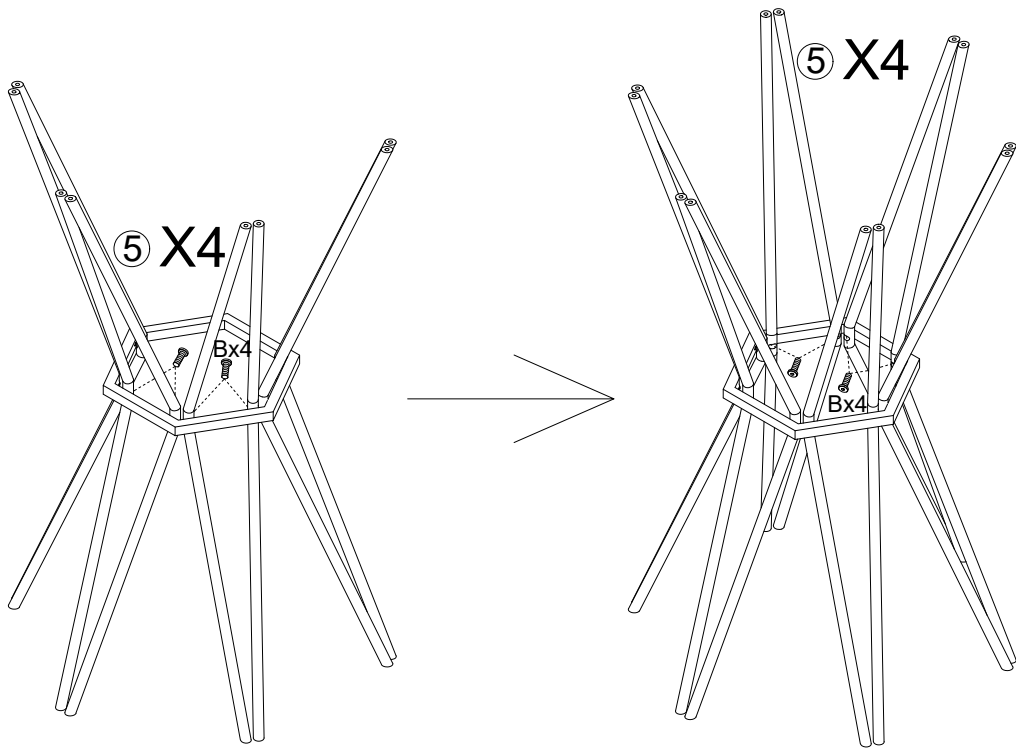


B	X8
	
M6X25mm	

STEP 3

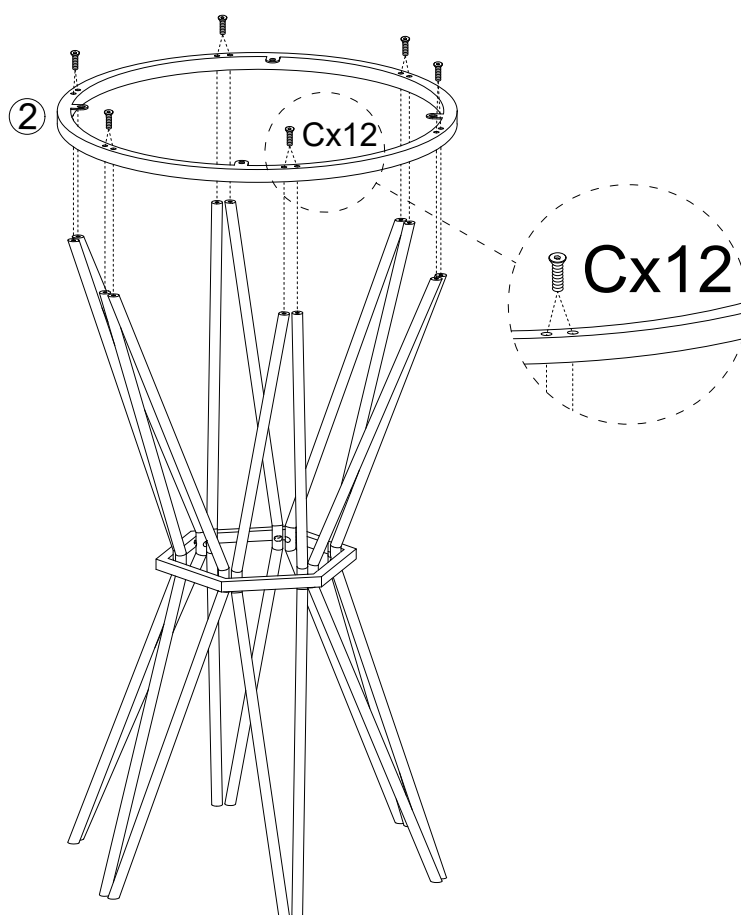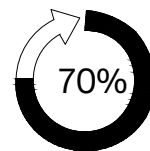


C	X12
M6X25mm	

STEP 4

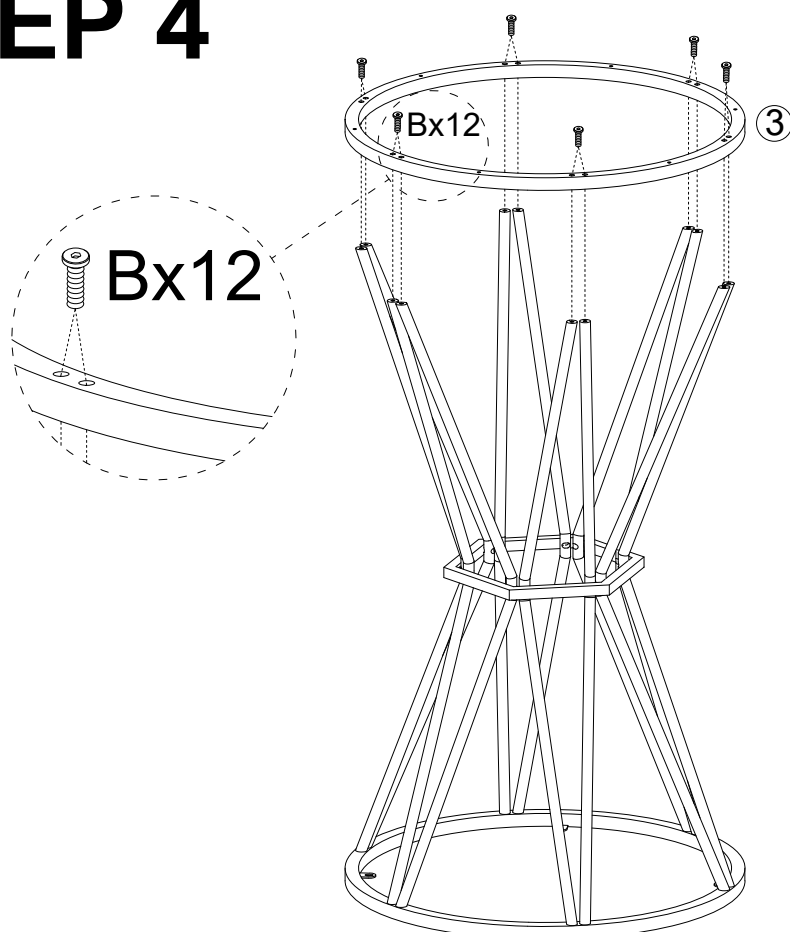


B	X12
M6X25mm	

STEP 5

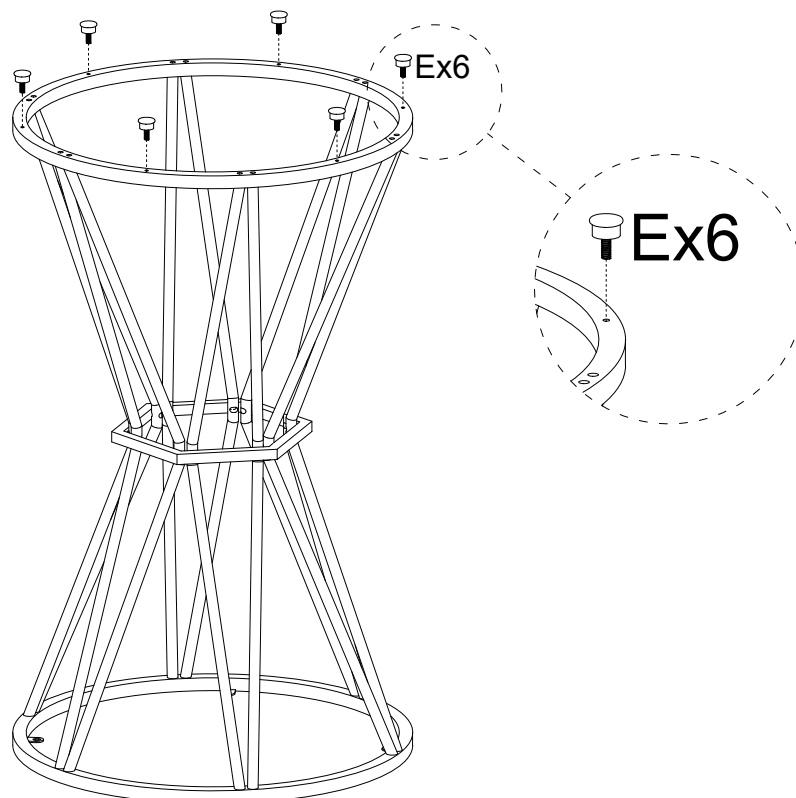


E	X6
	
M6XØ20mm	

STEP 6

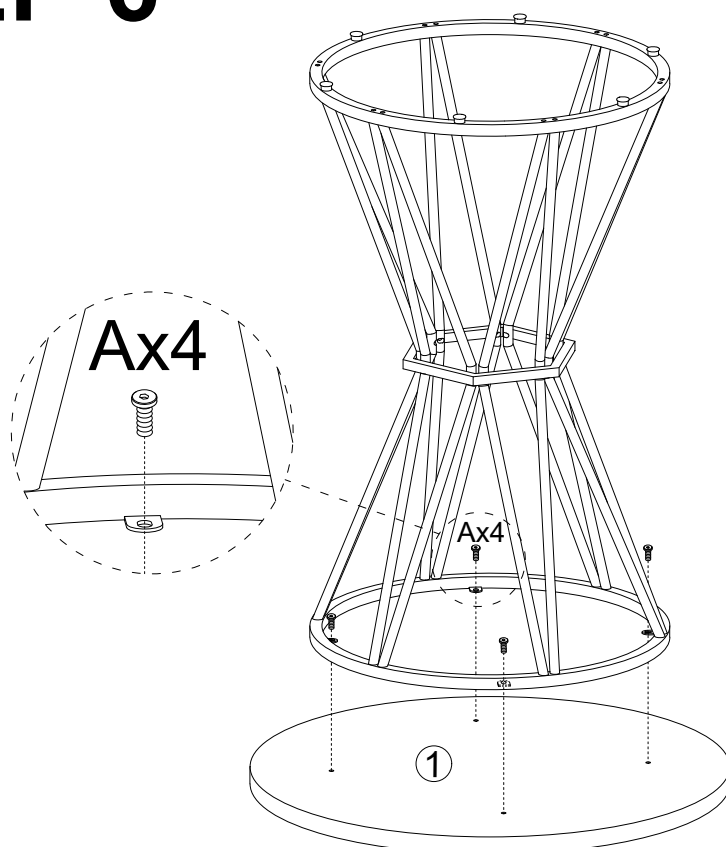


A	X4
	
M6X12mm	



STEP 7

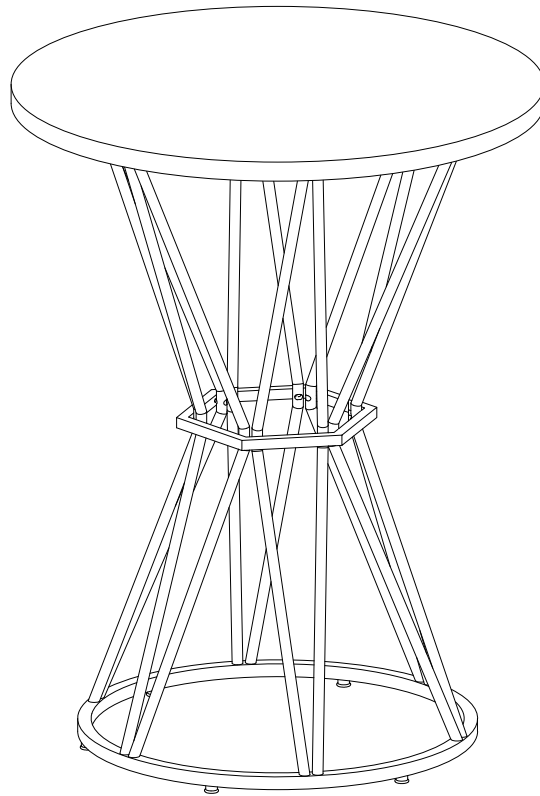

STEP 8

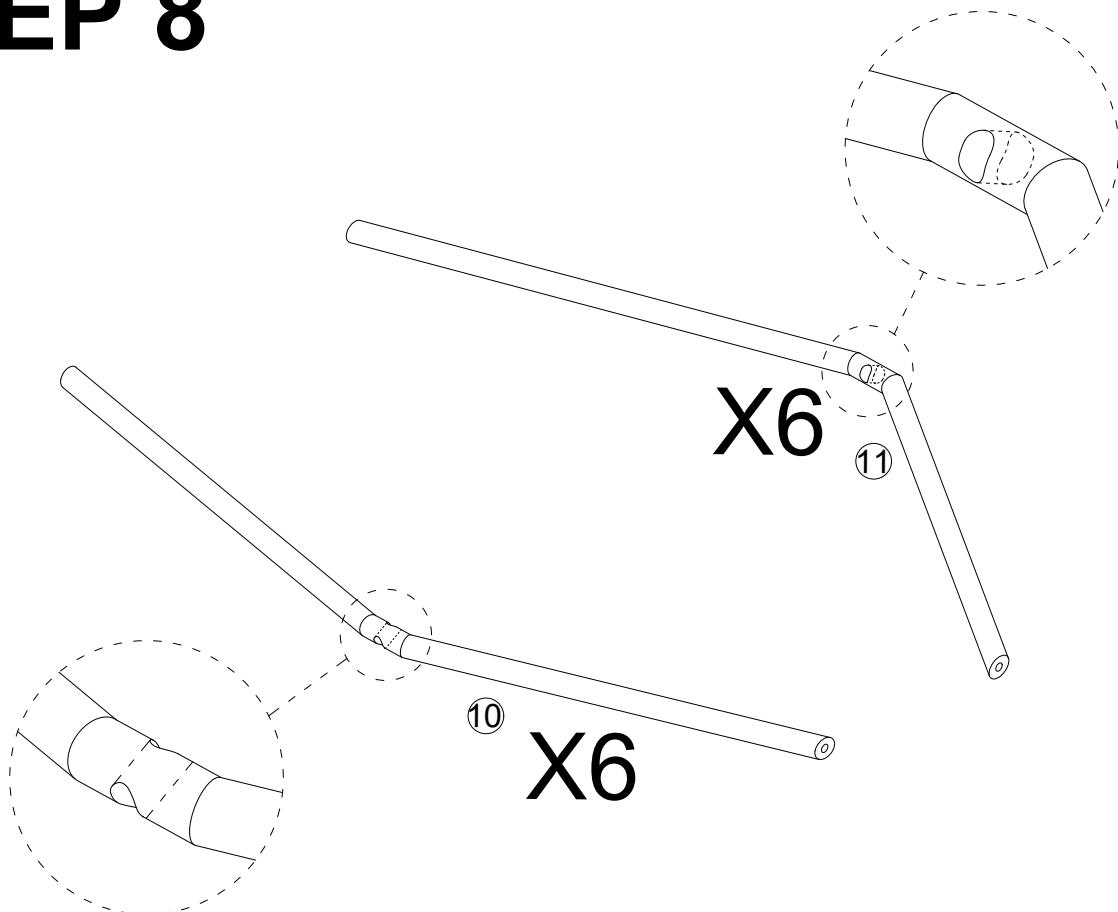



STEP 9

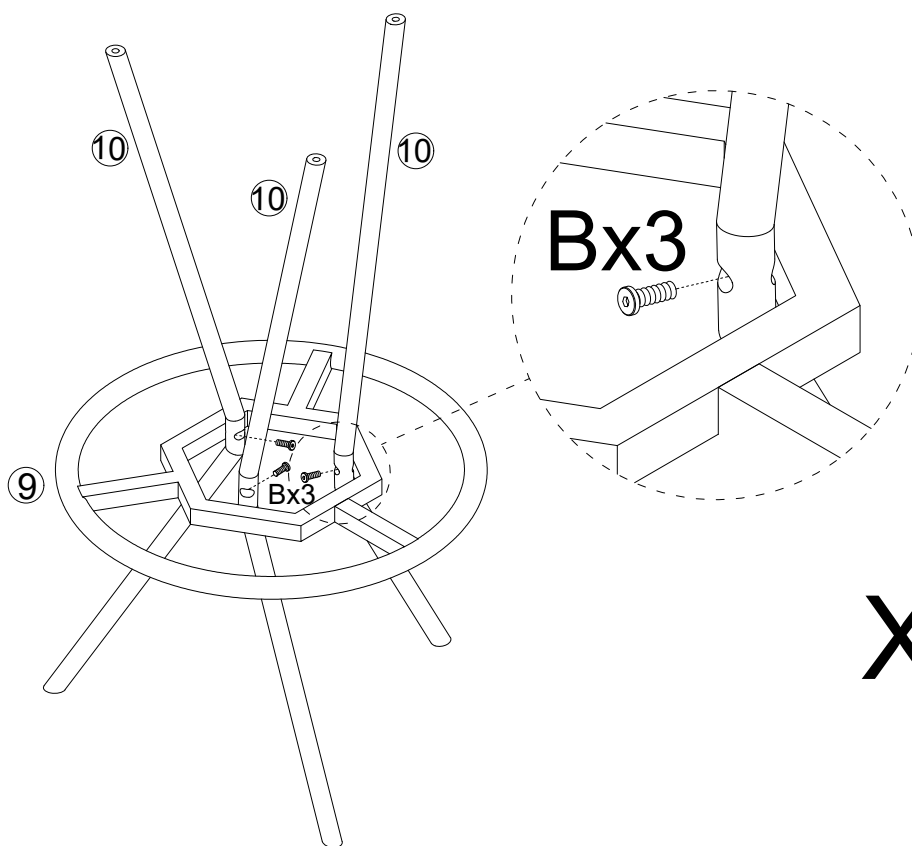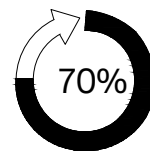

X2

B	X6
M6X25mm	



STEP 10

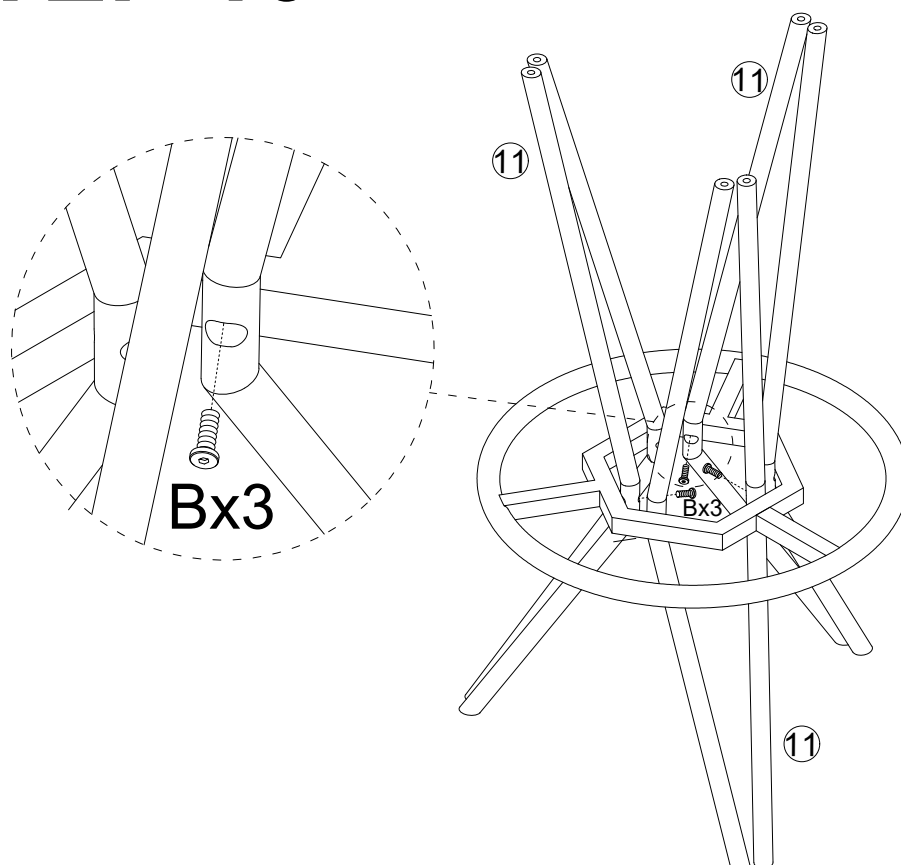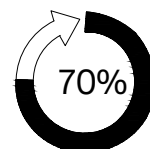

X2

B	X6
M6X25mm	


STEP 11

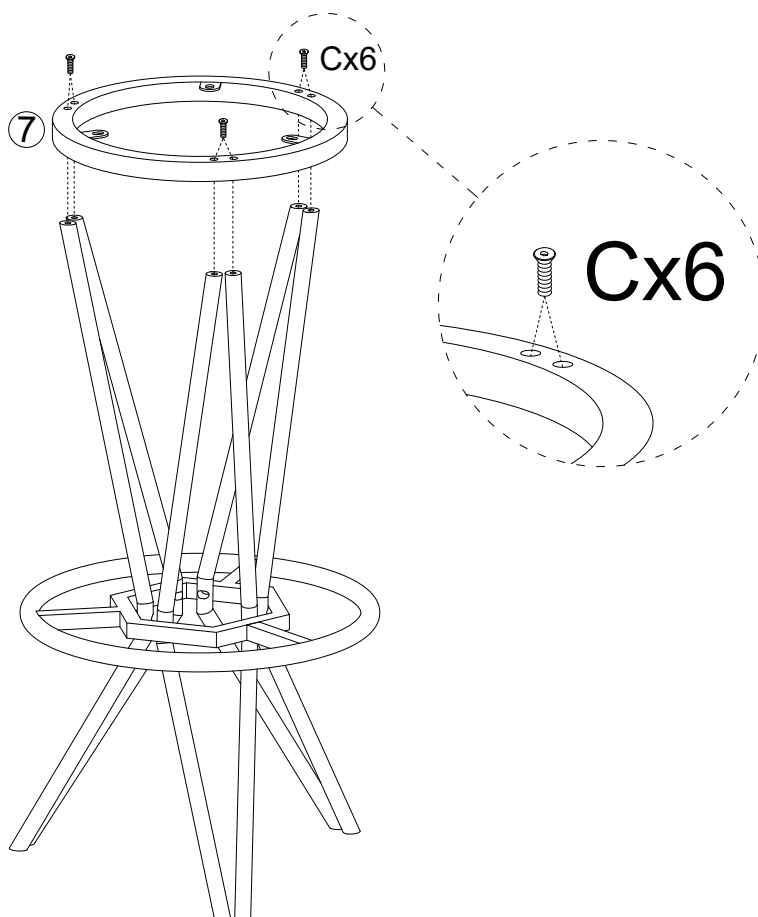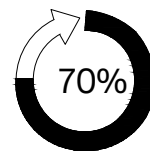

X2

C	X12
M6X25mm	


STEP 12

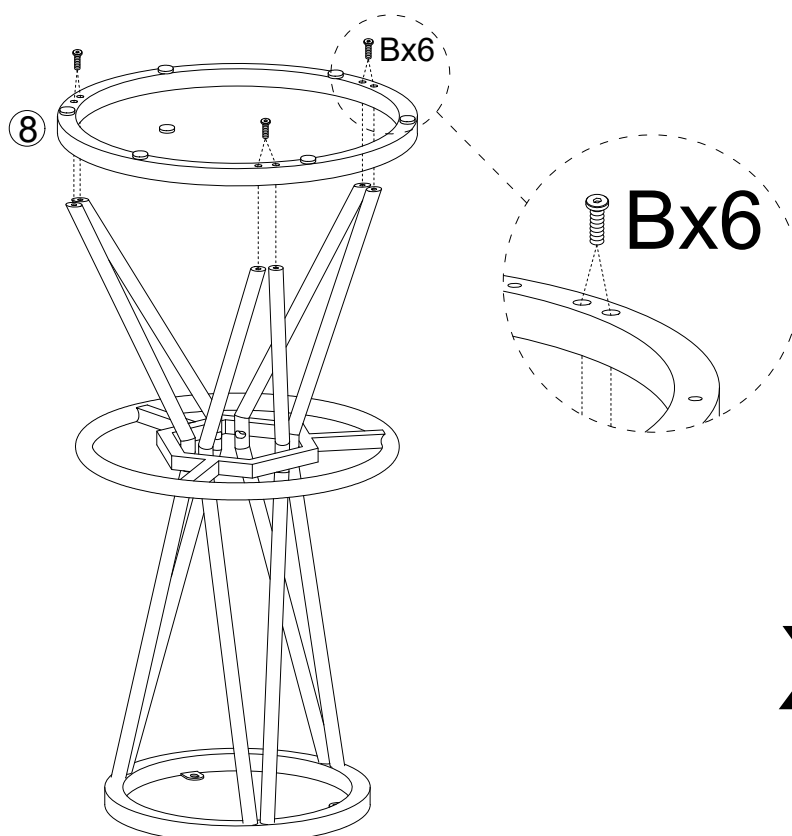

X2

B	X12
M6X25mm	

STEP 13

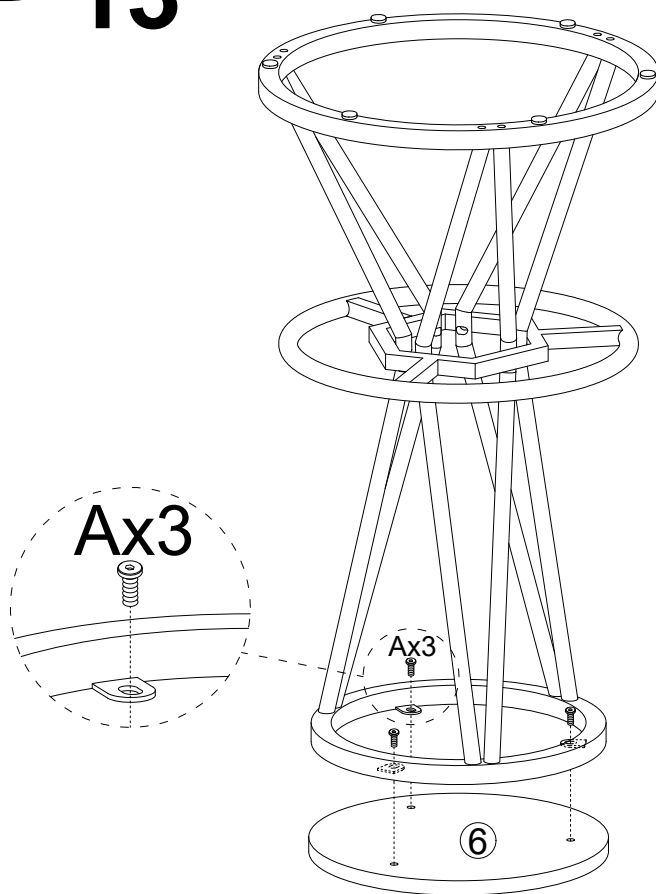

X2

A	X6
	
M6X12mm	

STEP 14

