


TV STAND

Assembly Instructions - Please keep for future reference

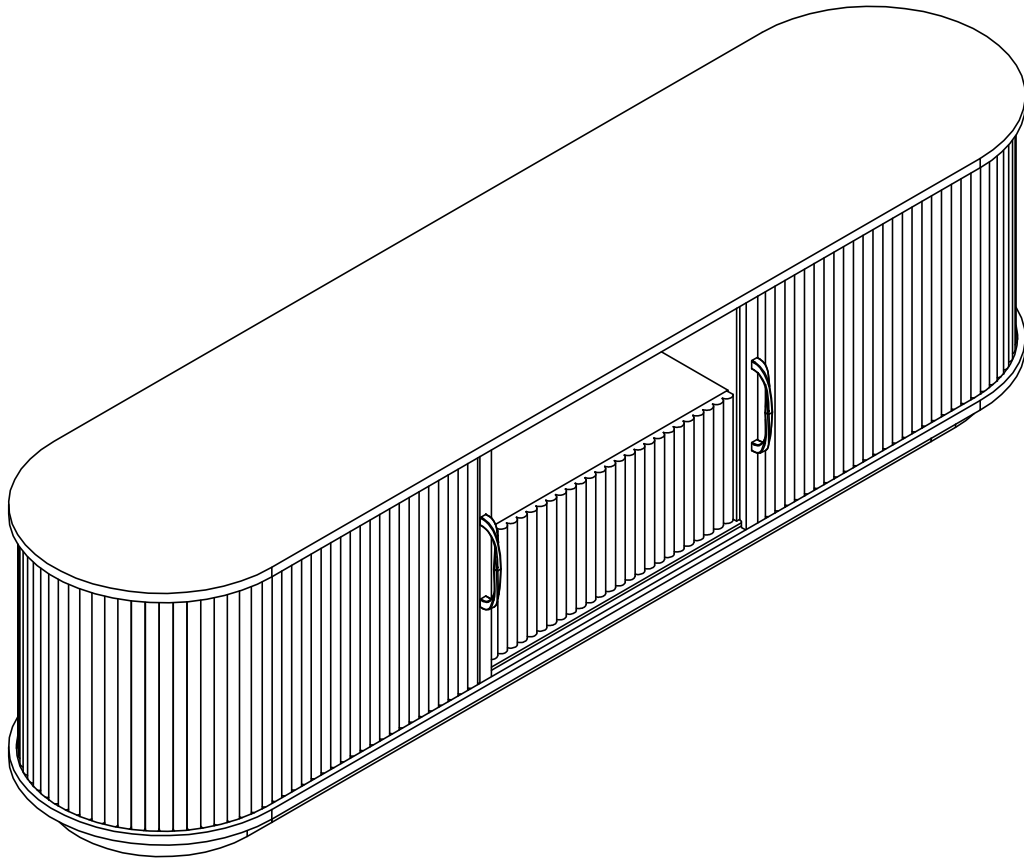

Dimensions

Width-66.93inch

Depth-15.75inch

Height-17.72inch

Important - Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions







To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components-Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

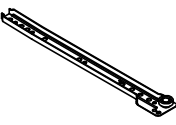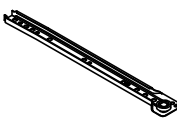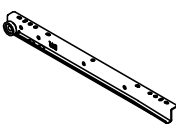(A)  6*35mm Cam Bolt x 16+2	(B)  15*9mm Cam Lock x 16+2	(C)  8*30mm Dowel x 26+2	(D)  4*40mm Screw x 12+2
(E)  Hole to stick x 16+2	(F)  Metal handle x 2	(G)  Phillips screwdriver x 1	(H)  3.0*14mm Screw x 20+2
(I)  35*25*5mm EVA x 8	(J)  Back plate buckle x 12+2	(K)  Shelf bracket x 8+2	(L)  Allen key x 1
(M)  M6*55mm Screw x 14+2	(N)  4.0*16mm Screw x 4	(CL)  300mm runner x 1	(CR)  300mm runner x 1
(DL)  300mm runner x 1	(DR)  300mm runner x 1		

Tools required



Phillips screwdriver or
flat-head screwdriver


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

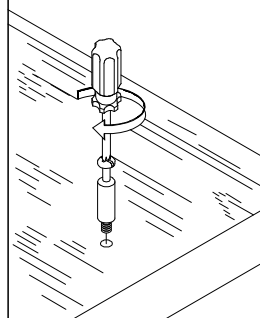

Step 2

Push the male camlock into the entry hole.

2

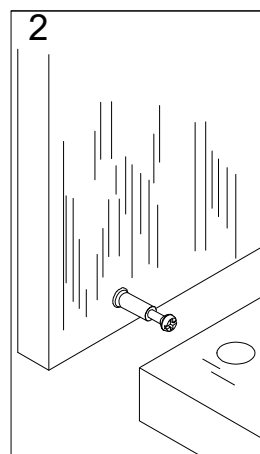


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

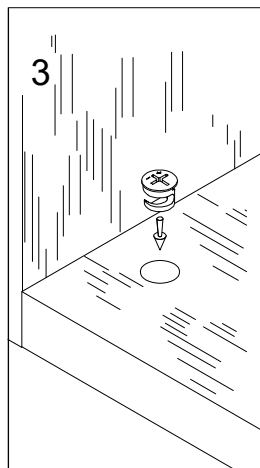


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.
















4

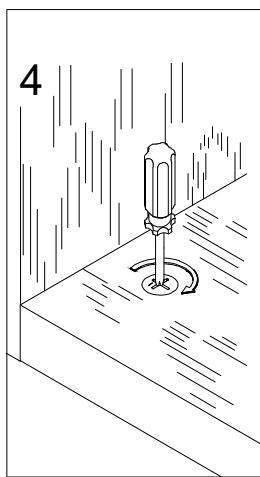

Assembly Instructions

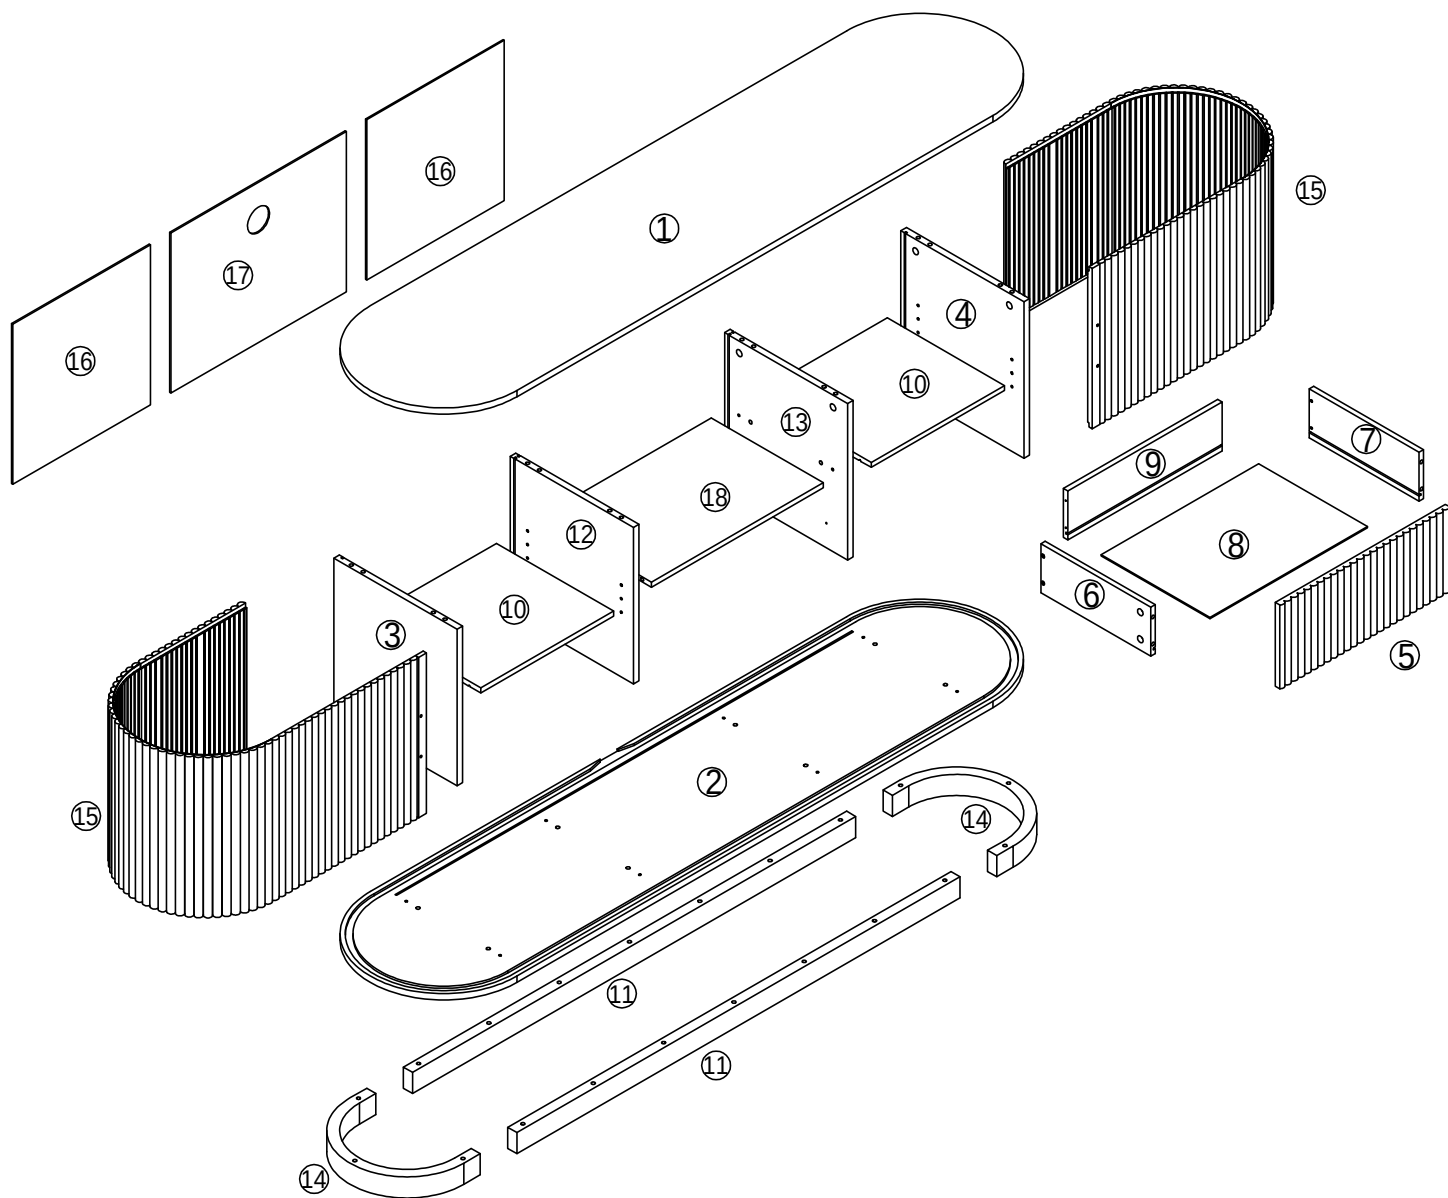




Assembly Instructions

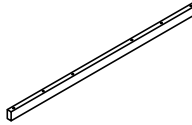 1700*400*15mm ① X1	 1700*400*15mm ② X1	 370*336*15mm ③ X1	 370*336*15mm ④ X1
 464*198*15mm ⑤ X1	 300*116*12mm ⑥ X1	 300*116*12mm ⑦ X1	 429*297*3mm ⑧ X1
 420*116*12mm ⑨ X1	 363.5*320*12mm ⑩ X2	 1210*50*25mm ⑪ X2	 370*336*15mm ⑫ X1
 370*336*15mm ⑬ X1	 310*200*50mm ⑭ X2	 1105*379*12mm ⑮ X2	 379*375.5*3mm ⑯ X2
 479*379*3mm ⑰ X1	 470*306*15mm ⑱ X1		


Assembly Instructions



Step 1

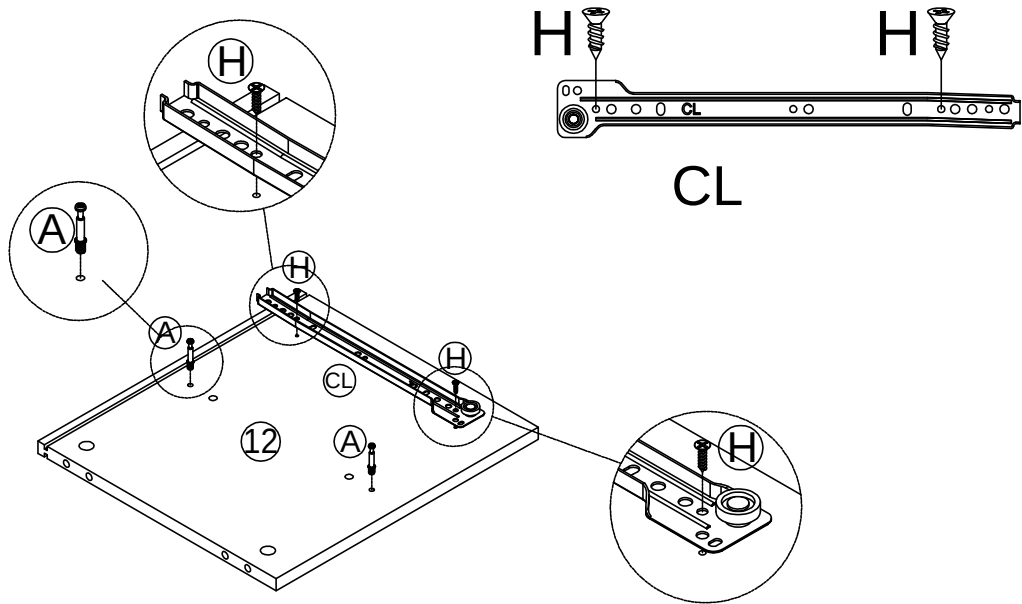

(A)  6*35mm Cam Bolt x 2	(H)  3.0*14mm Screw x 2	(CL)  300mm runner x 1
---	--	---

Step 2

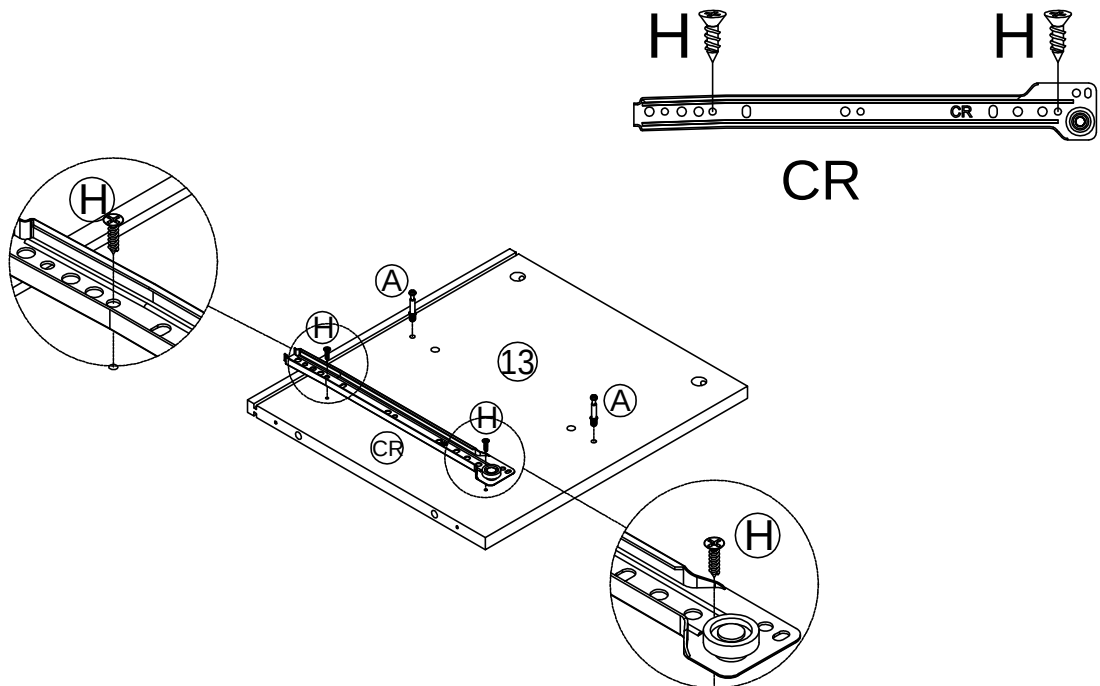

(A)  6*35mm Cam Bolt x 2	(H)  3.0*14mm Screw x 2	(CR)  300mm runner x 1
---	--	---





Assembly Instructions

Step 3



Step 1

Step 2


Step 3

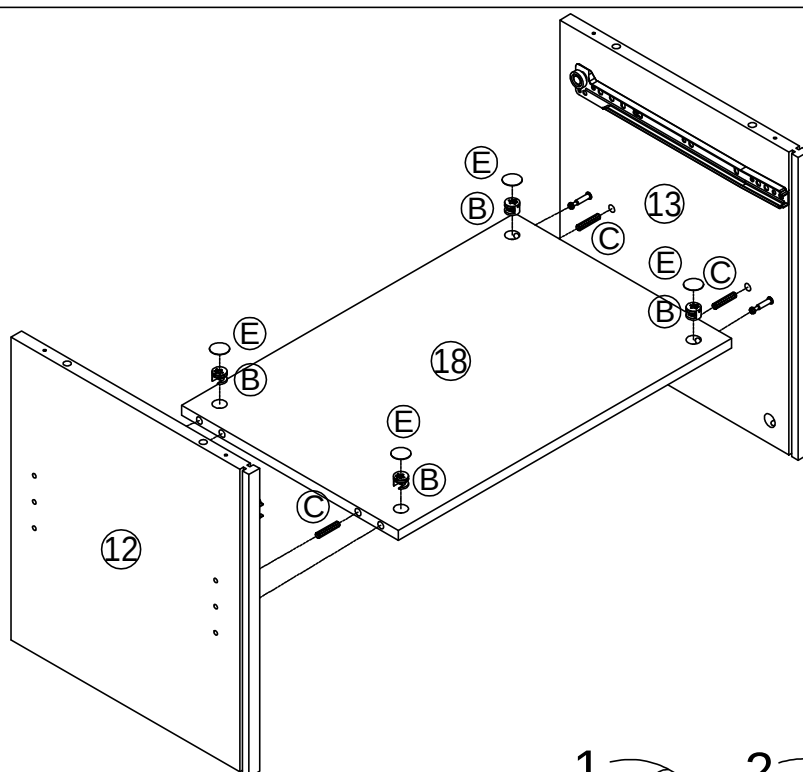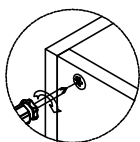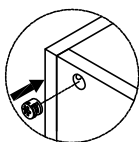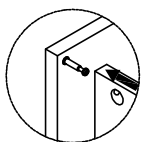


(C)  8*30mm Dowel x 4	(B)  15*9mm Cam lock x 4	(E)  Hole to stick x 4
--	---	---

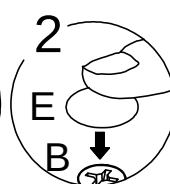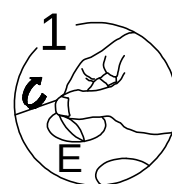

Step 4

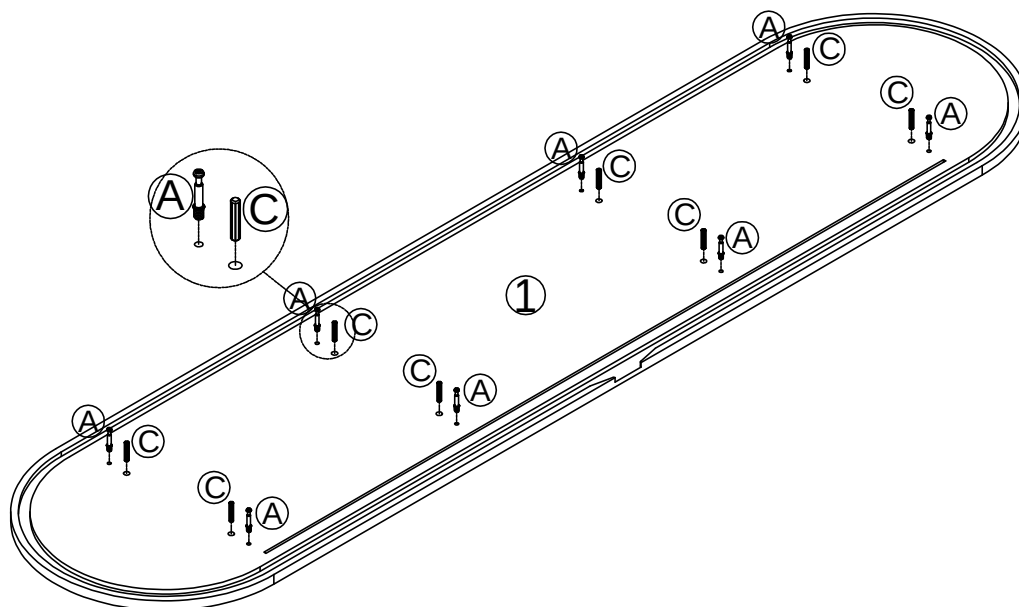

(A)  6*35mm Cam Bolt x 8	(C)  8*30mm Dowel x 8
---	--








Assembly Instructions

Step 5



Step 1

Step 2

Step 3

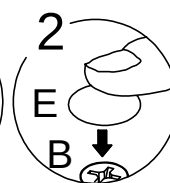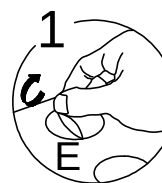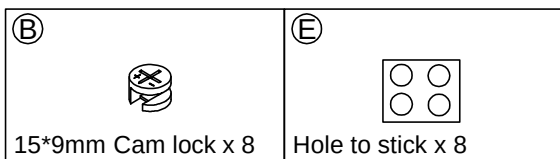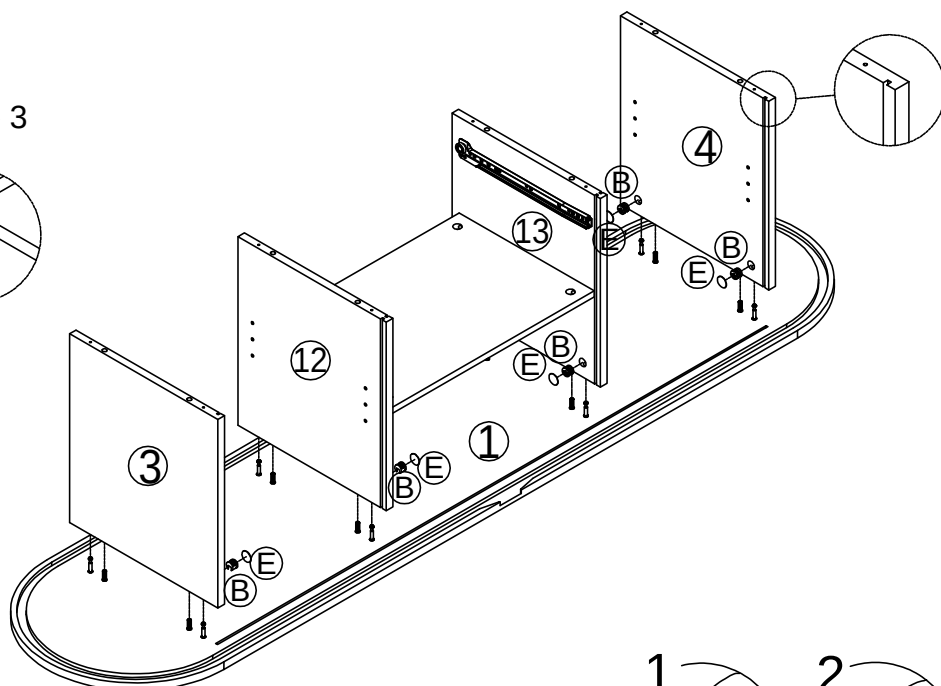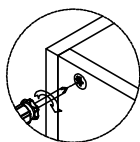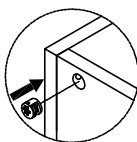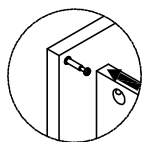


Step 6

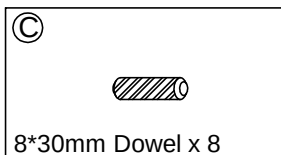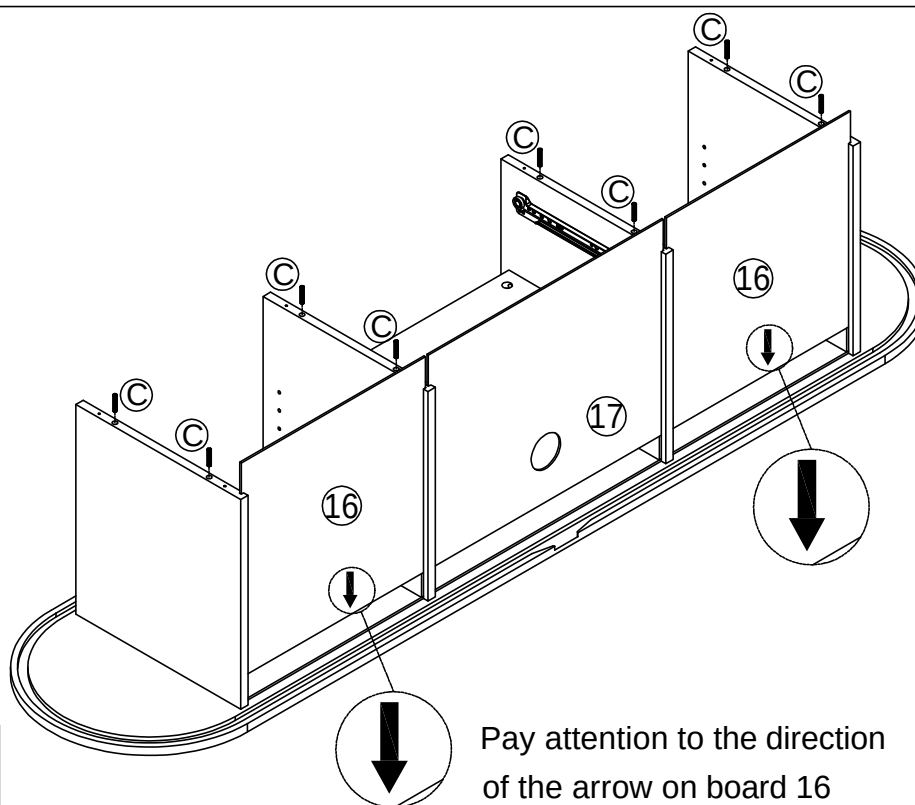


Pay attention to the direction of the arrow on board 16

Assembly Instructions

Step 7

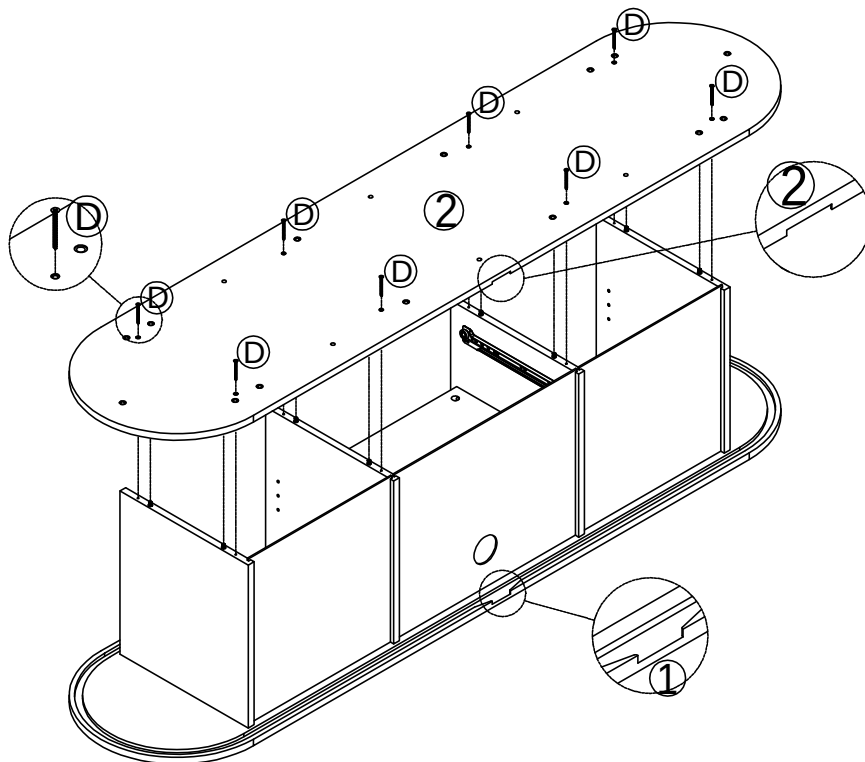


D



4*40mm Screw x 8

Step 8

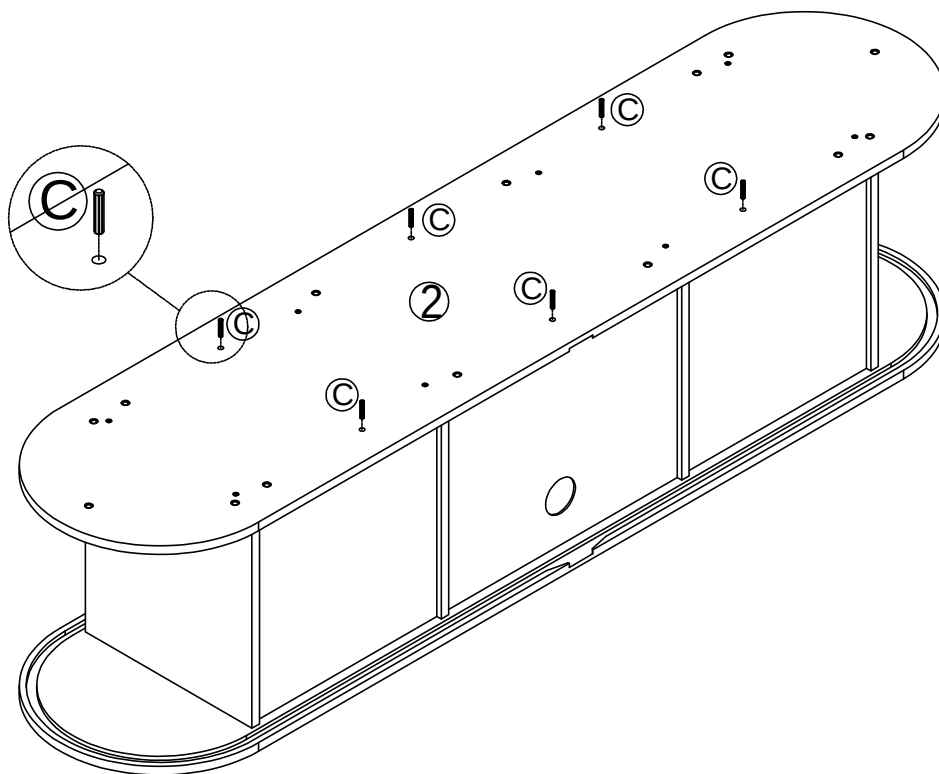



C





8*30mm Dowel x 6

Assembly Instructions

Step 9

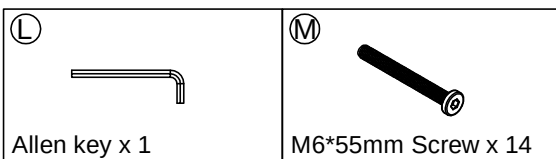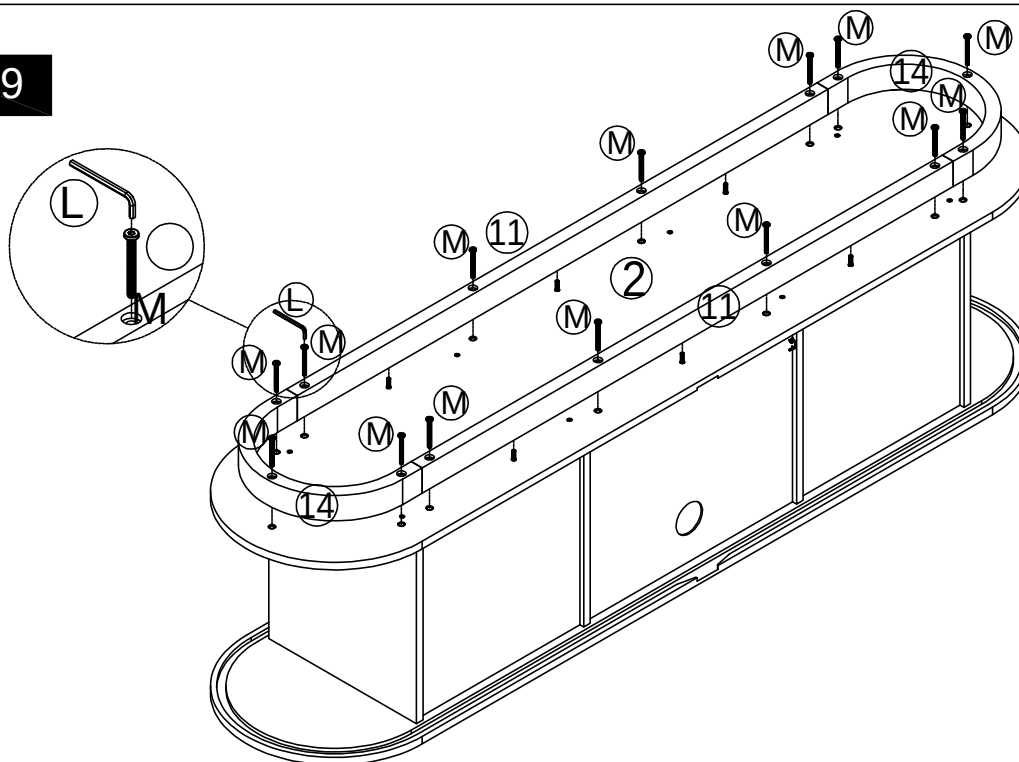



Step 10

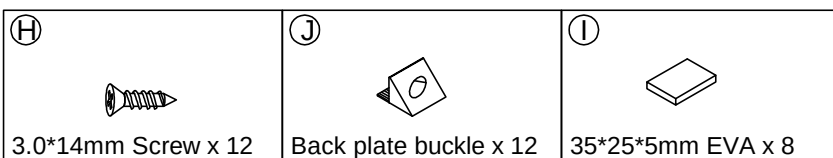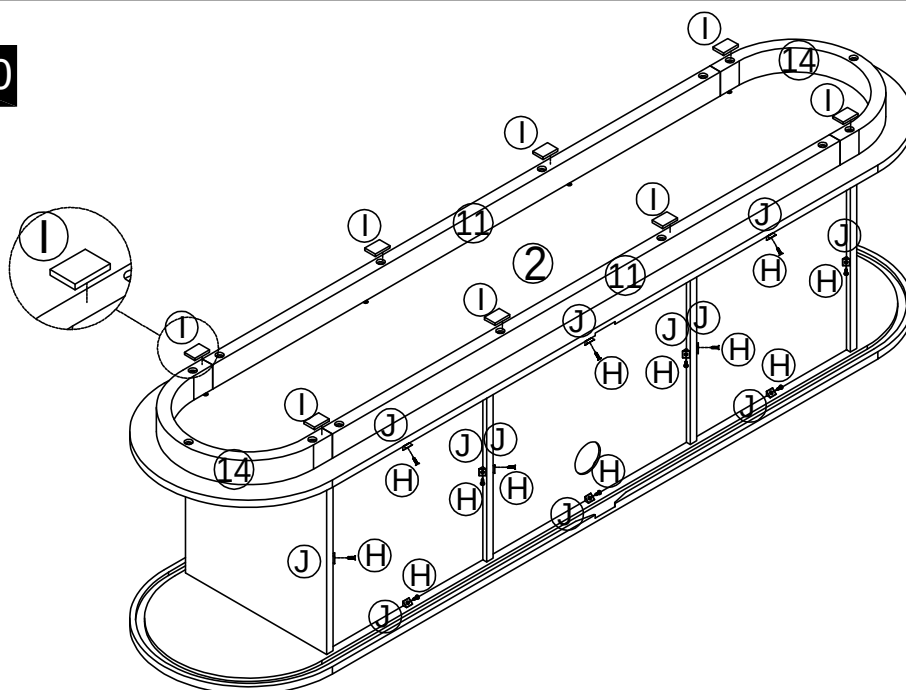

Assembly Instructions

Step 11

Be careful! At least two people are required

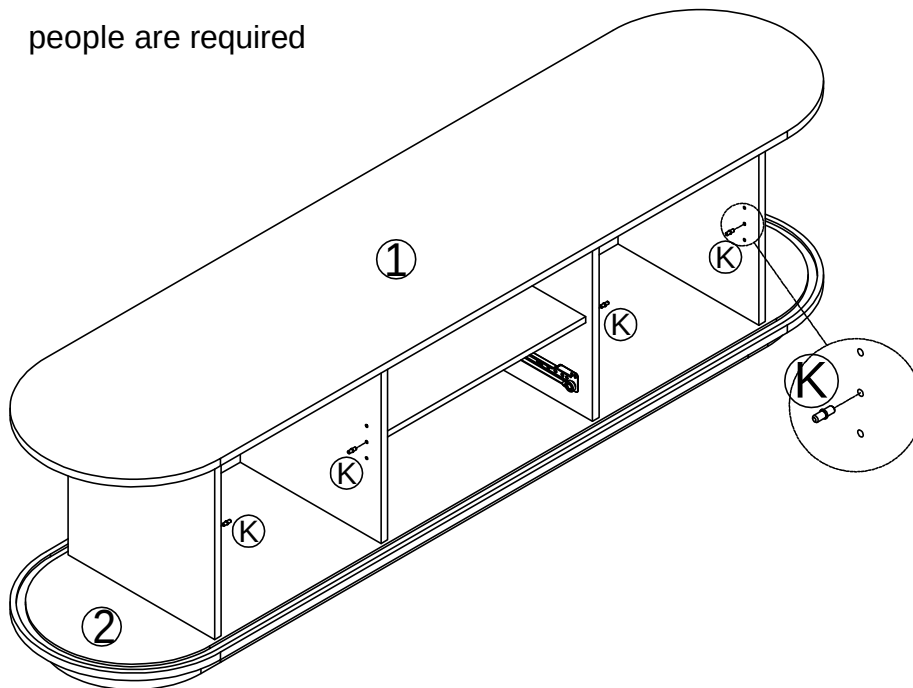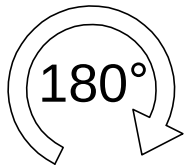


Ⓚ




Shelf bracket x 8

Step 12

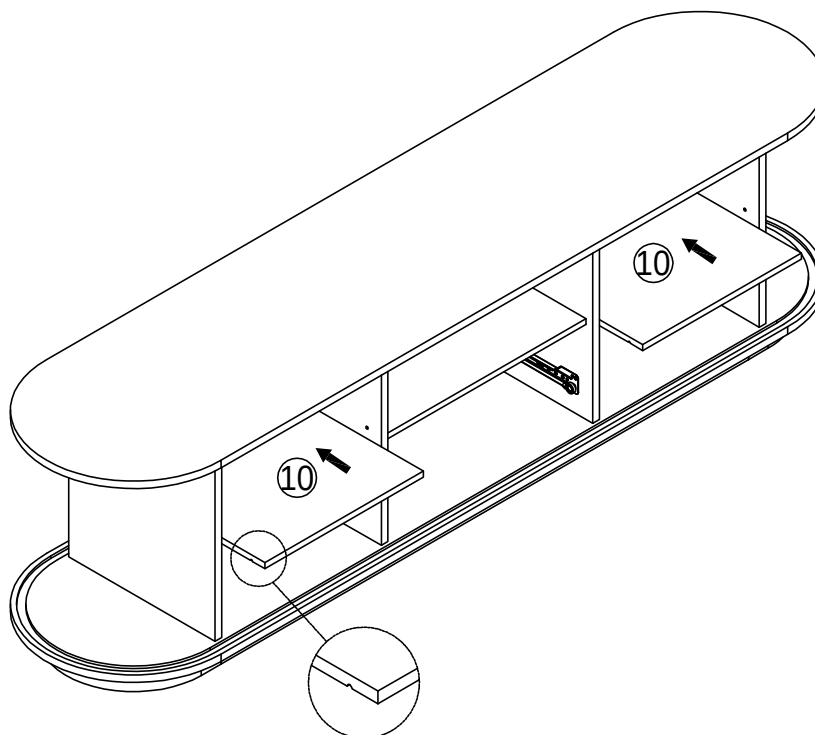


Assembly Instructions

Step 13

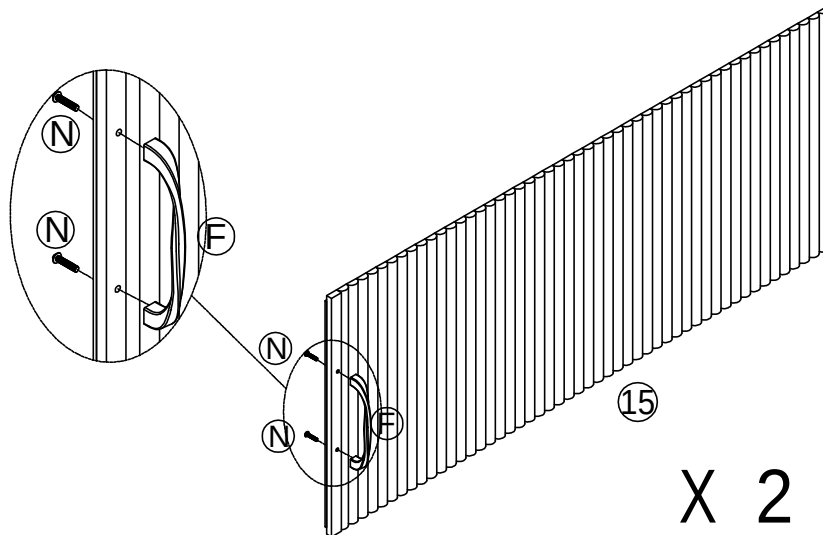

 Metal handle x 2	 4.0*16mm Screw x 4
----------------------	------------------------


Step 14

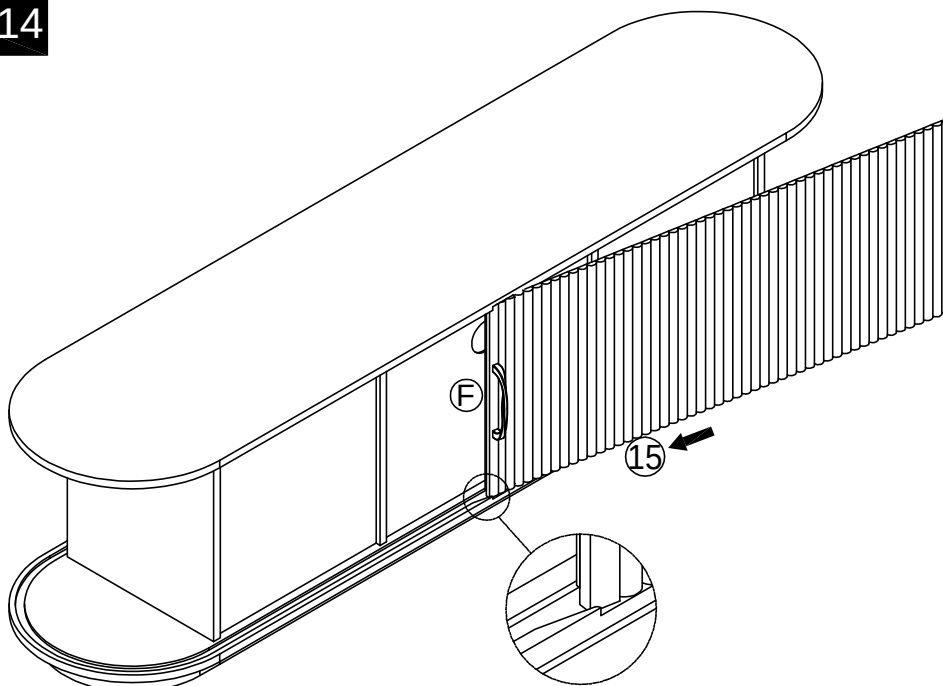

When the No. 15 board is pushed in, it should be aligned with the upper and lower slots, and the handle F should face outward


Assembly Instructions

Step 15

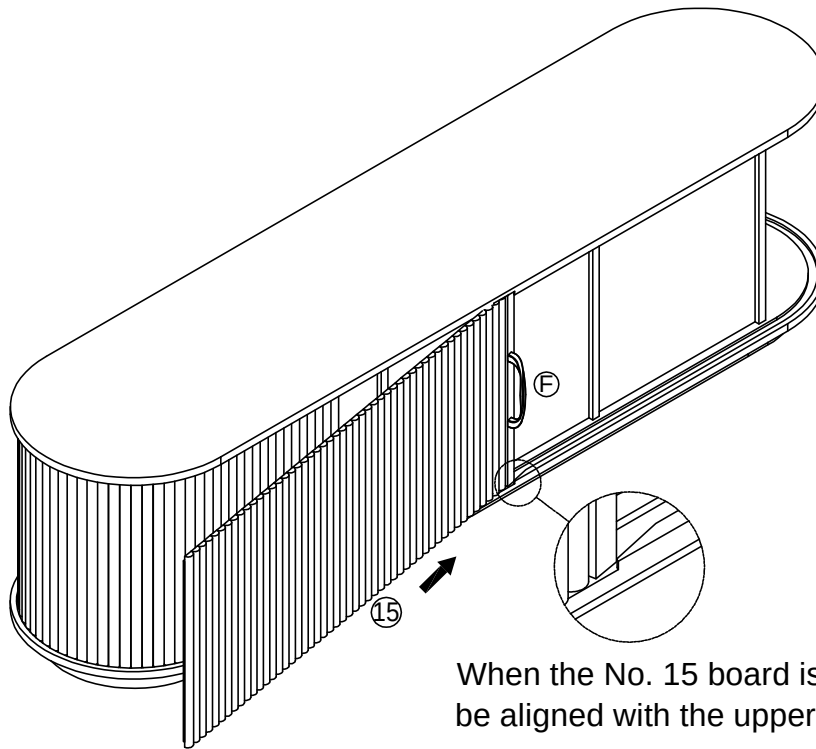


When the No. 15 board is pushed in, it should be aligned with the upper and lower slots, and the handle F should face outward

Step 16

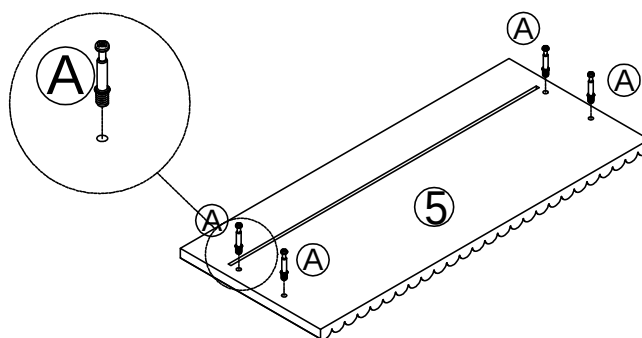

Ⓐ



6*35mm Cam Bolt x 4







Assembly Instructions

Step 17



Step 1

Step 2

Step 3

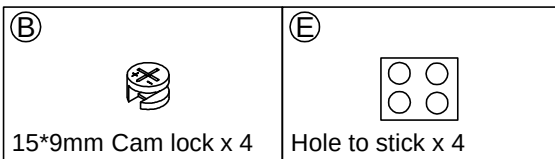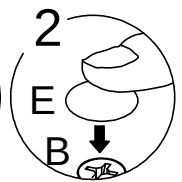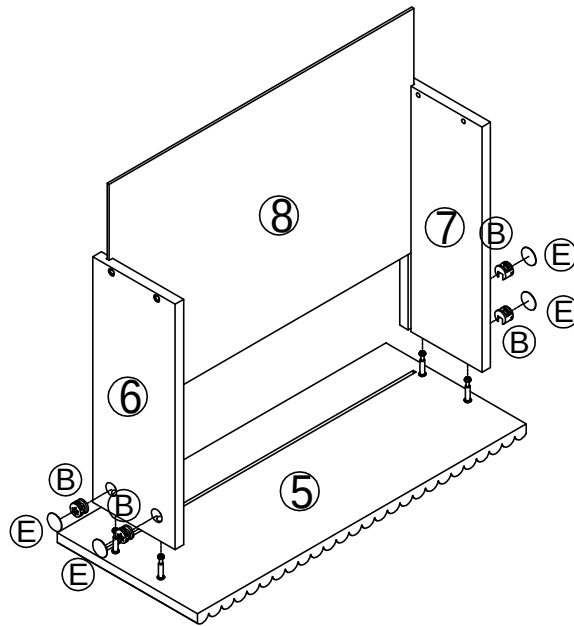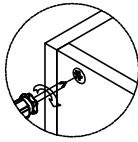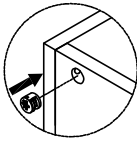
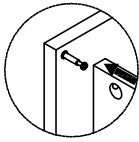


Step 18

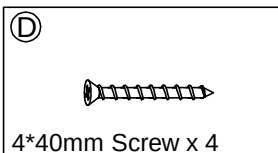
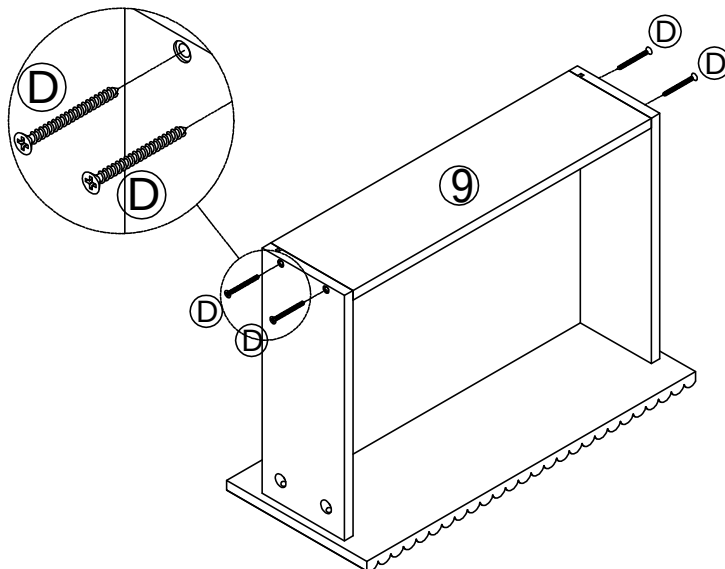


Assembly Instructions

Step 19

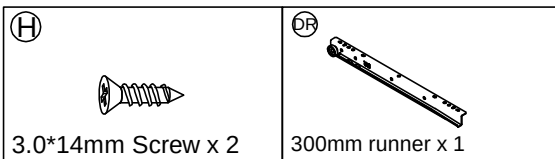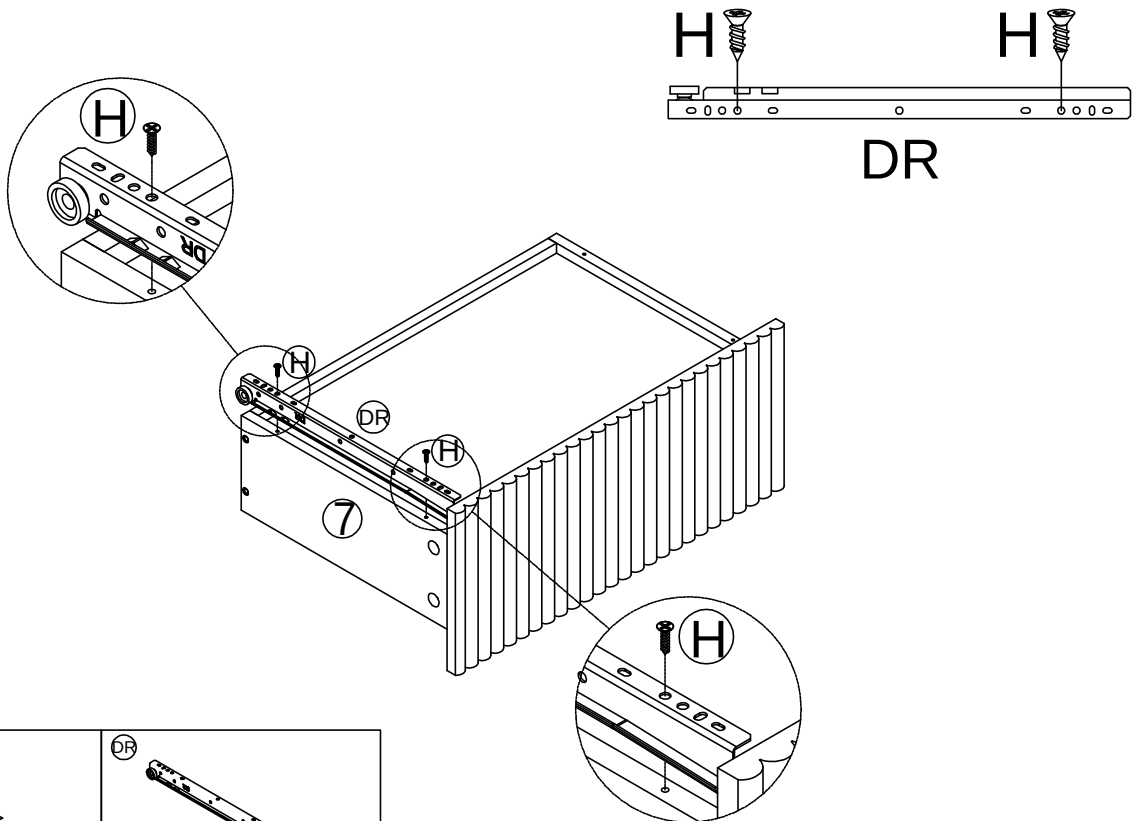


Step 20

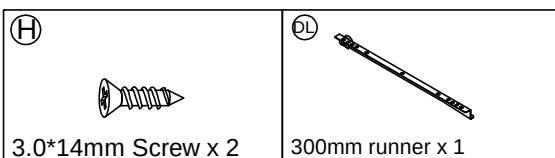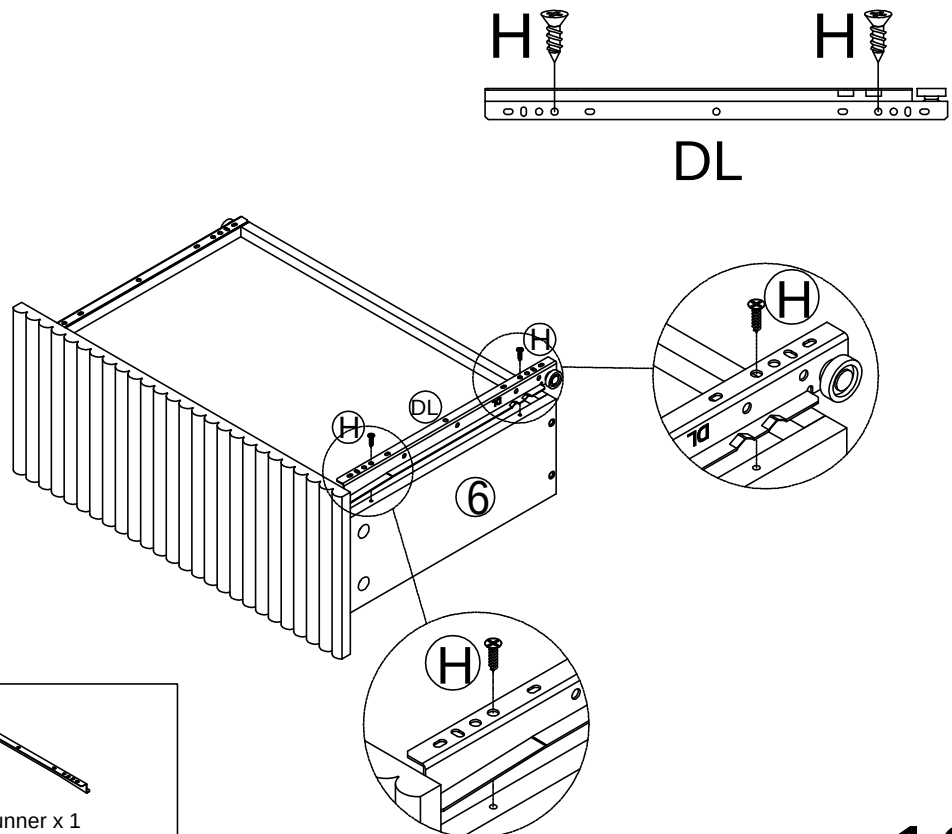

Assembly Instructions

Step 21

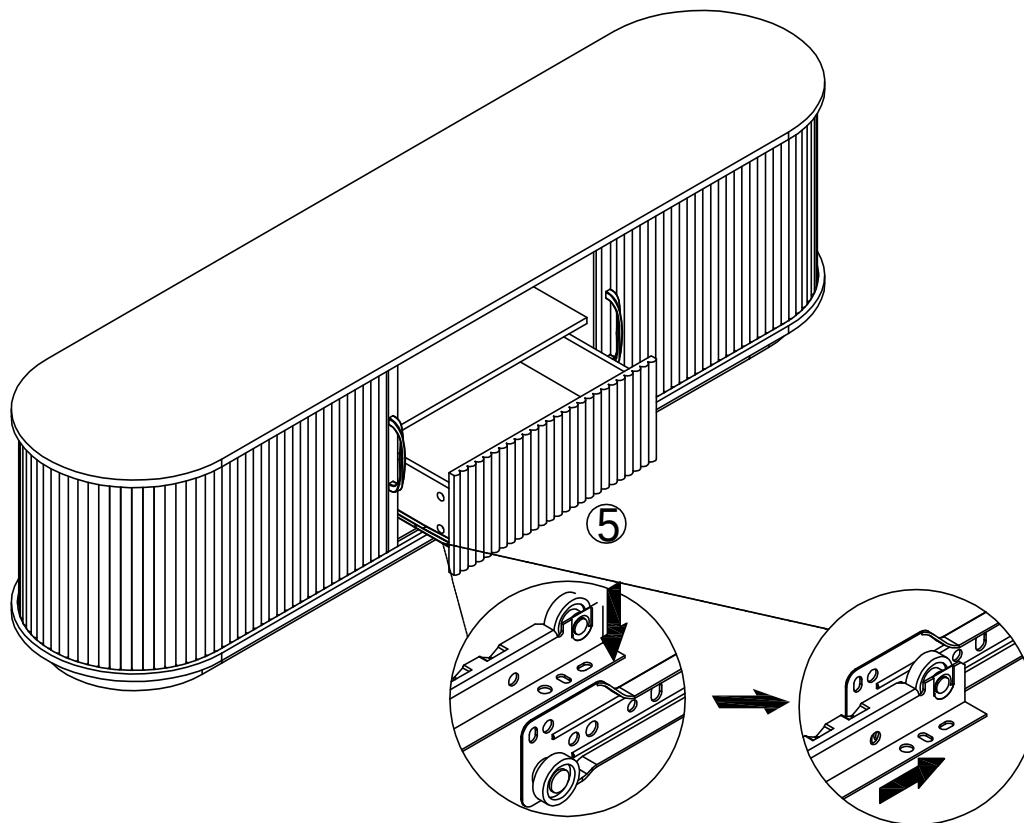

FINISH

