


# Assembly Instructions

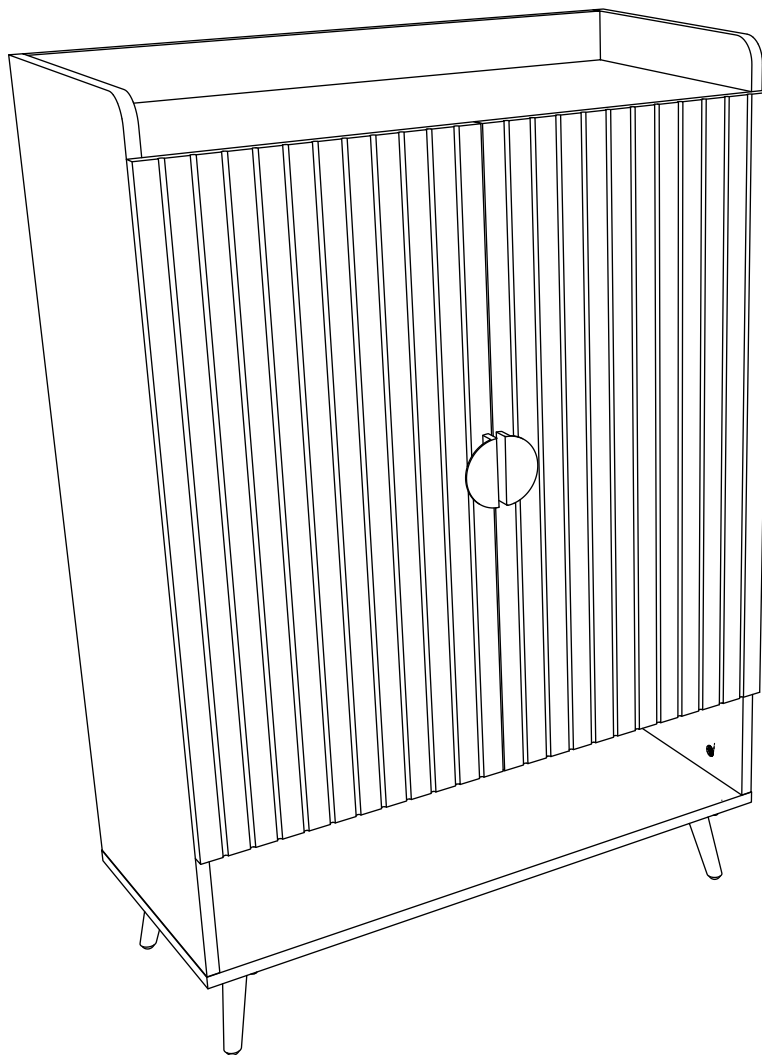


**Shoe Cabinet**

# Call us!

## We're here to help!


If you have any issues with this product, please contact our customer service team **before returning** it.

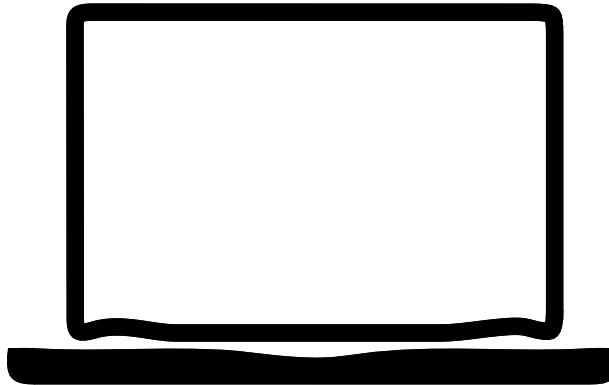



We want you to be completely satisfied with your purchase! If anything is missing, damaged, incorrect, or not what you expected, don't worry. Please keep the outer packaging and take photos of both the packaging and products, and then reach out to us. We'll take care of everything and send you a free replacement, so you can enjoy your purchase as soon as possible without any hassle.

## Assembly Instructions:

1. Carefully read these instructions and keep them for future reference.
  2. Refer to the parts list for guidance and ensure that you have all the pieces before starting the assembly process, if anything is missing, damaged, incorrect, contact us **FIRSTLY BEFORE** assembling.
  3. When assembling, place all parts on a soft, clean, and flat surface, such as a carpet, to prevent any scratches.
  4. To avoid misalignment of the holes, Please don't full tighten the screws until you ensure all parts in place.
-



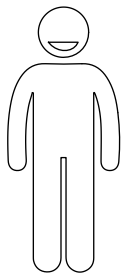


**X2**

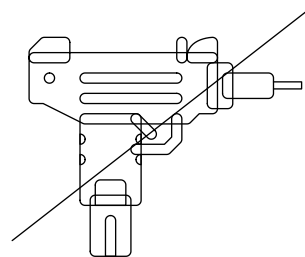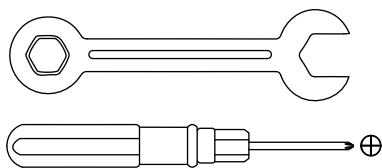


When using the electric screwdriver ,  
Reduce the power and torque to avoid damaging the furniture

---

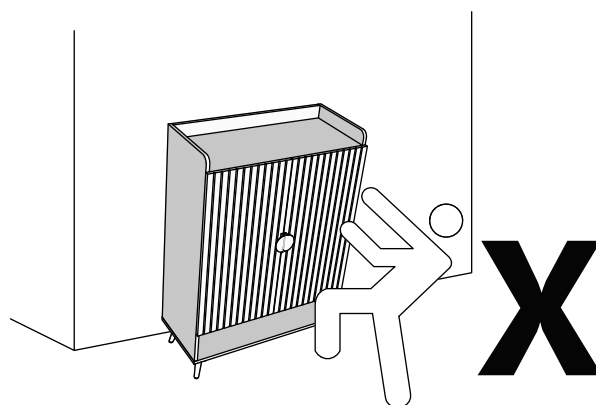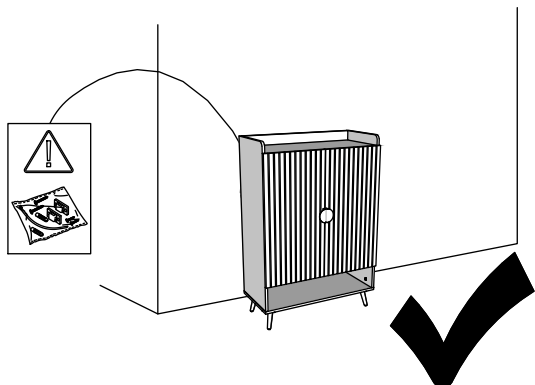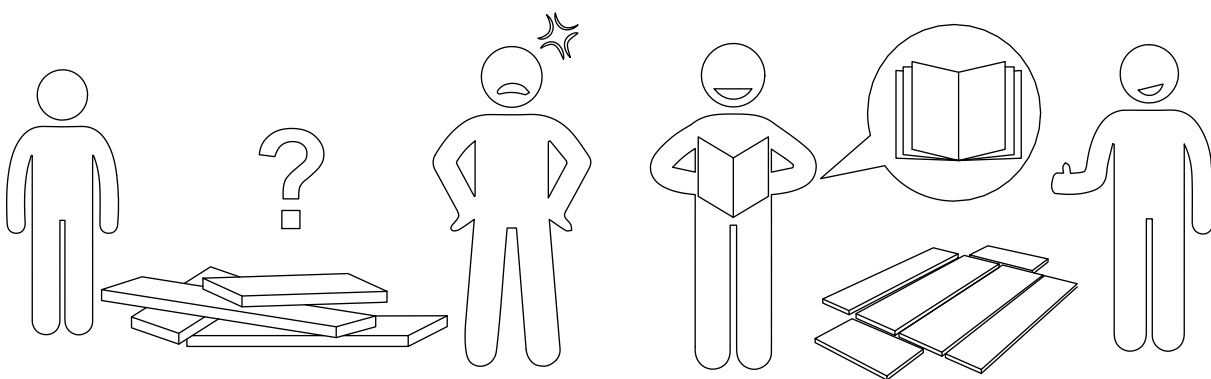


( Install tip-over restraint provided )  
Use of tip-over restraints may only reduce but not eliminate,  
the risk of tip-over.

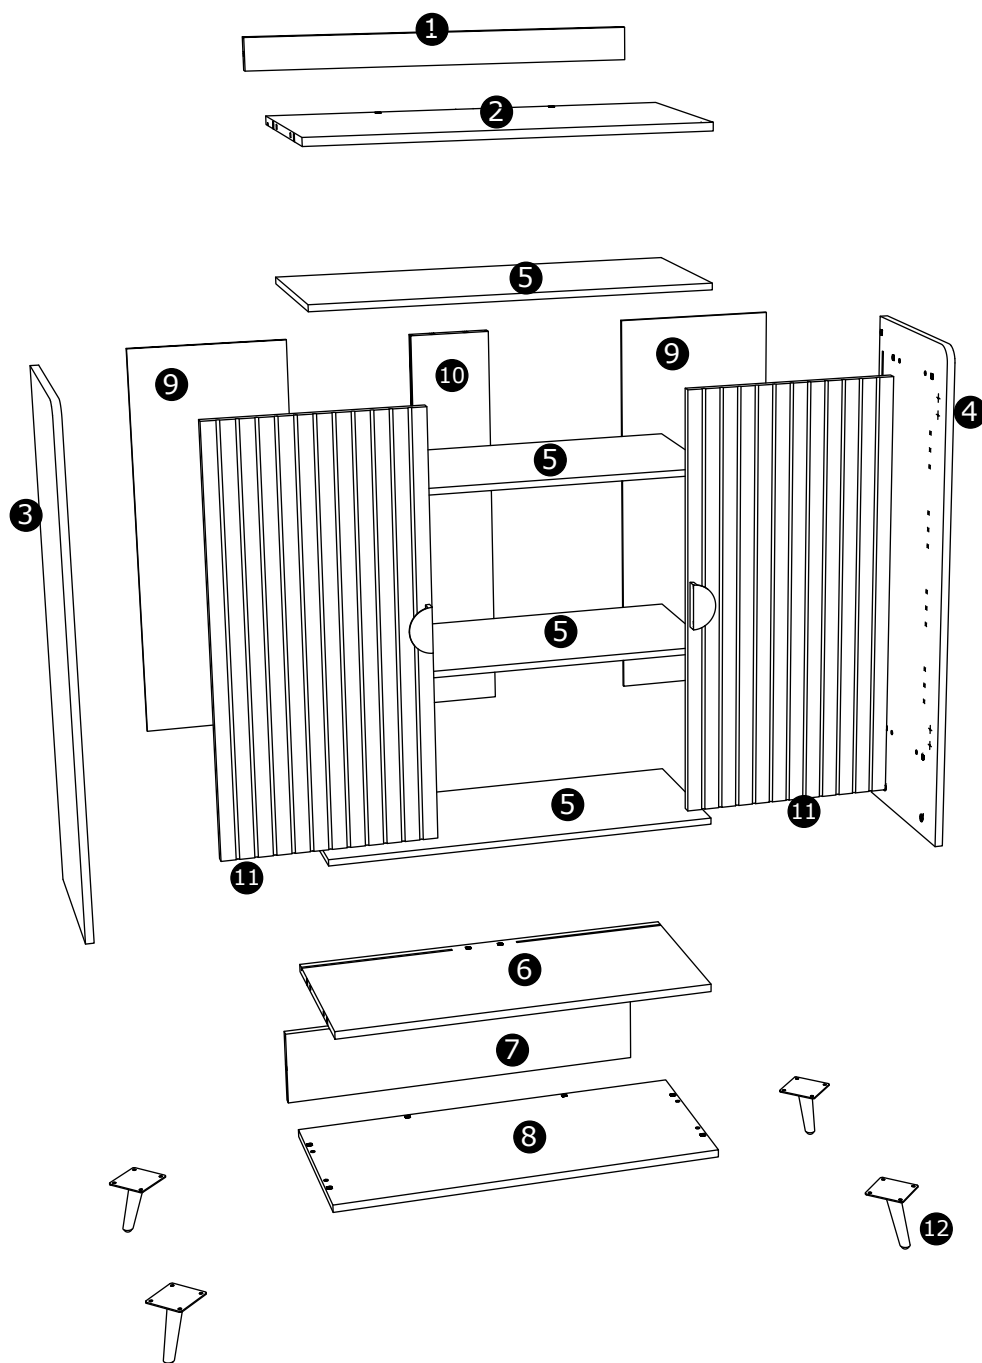


### Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for free replacement if having damaged or missing parts.


## Parts & Hardware List




① 1pc

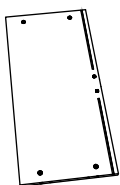


② 1pc




③ 1pc



④ 1pc




⑤ 4pcs




⑥ 1pc



⑦ 1pc



⑧ 1pc




⑨ 2pcs



⑩ 1pc



⑪ 2pcs

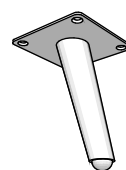

⑫ 4pcs

## Hardware List



φ 15\*12

Ⓐ

26pcs



M6\*40

Ⓑ

26pcs



φ 8\*30

Ⓒ

12pcs



M3.5\*14

Ⓓ

52pcs



M4

Ⓔ

1pc




Ⓕ

12pcs



Ⓖ

16pcs



Ⓗ

4pcs



M4\*18

Ⓘ


4pcs



M6\*15

⓵

2pcs




Ⓚ


1pc

## Installation of Cams and Pins



Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

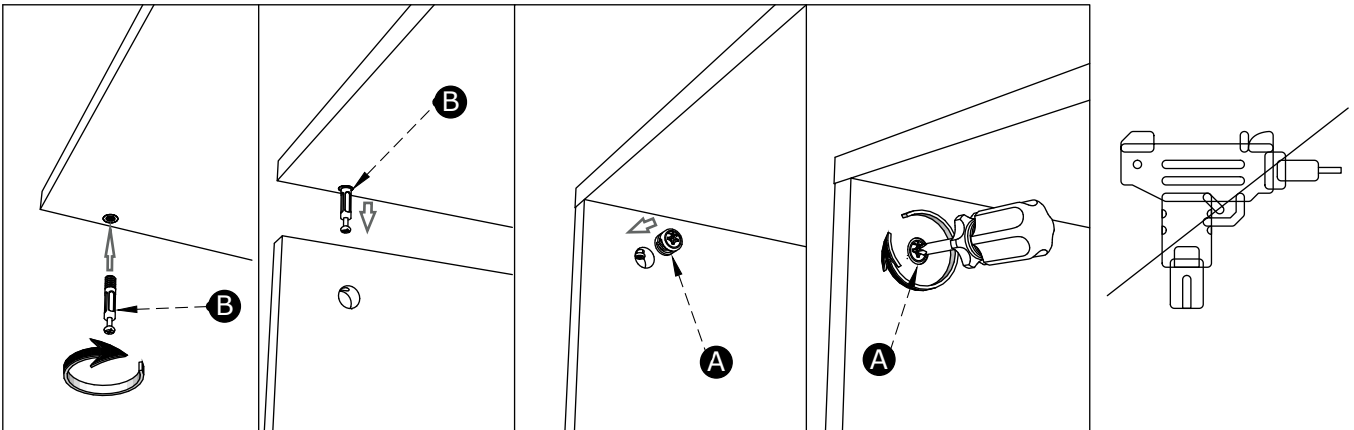

Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

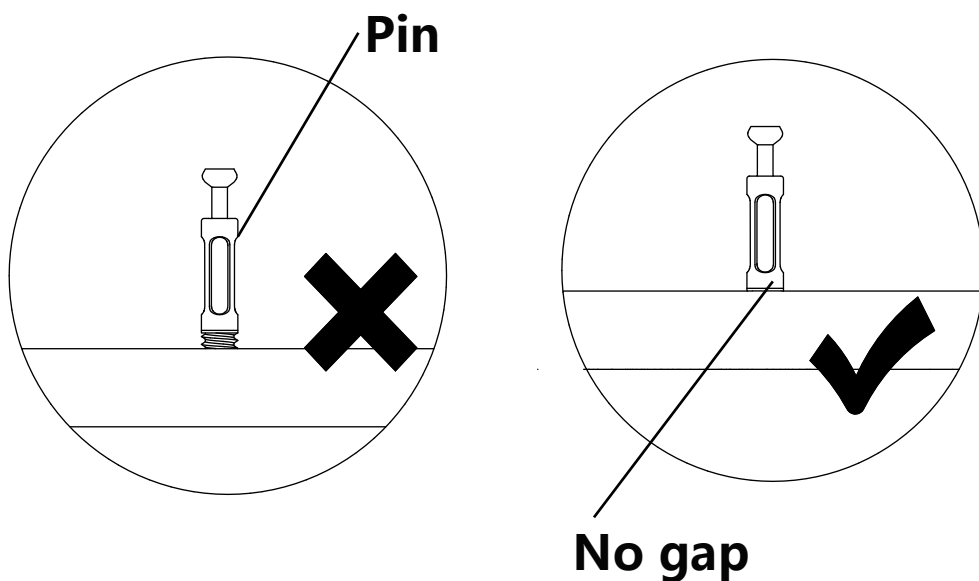

1

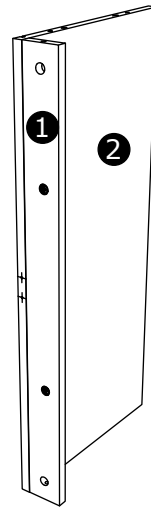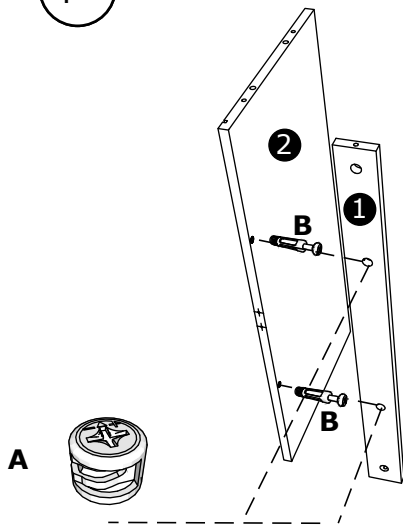

$\phi 15 \times 12$





M6\*40

(A)




2pcs

(B)



2pcs

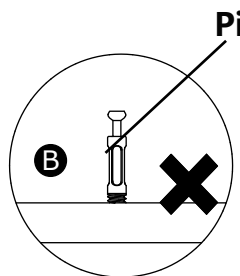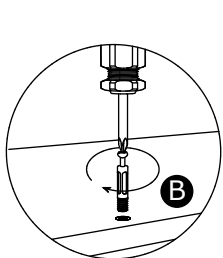

Pin

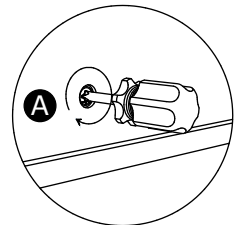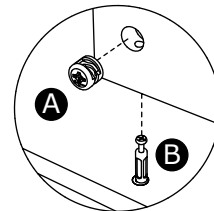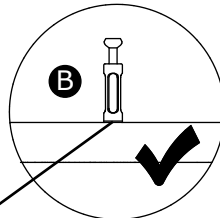

No gap

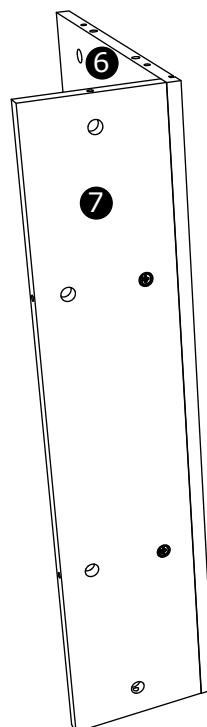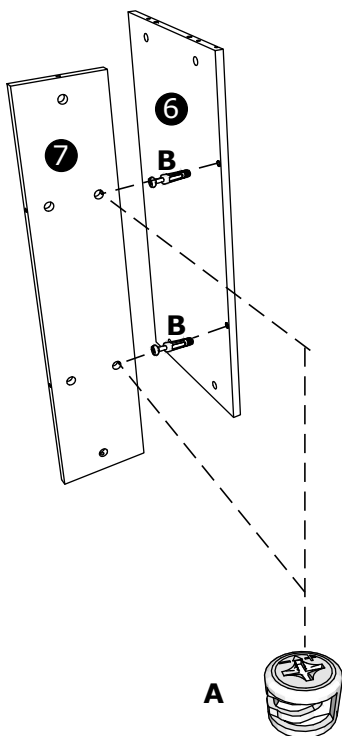

$\phi 15 \times 12$



M6\*40

(A)

2pcs

(B)

2pcs

2



$\phi 15 \times 12$









M6\*40

**A**

4pcs


**B**

4pcs

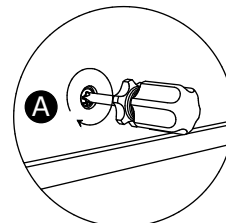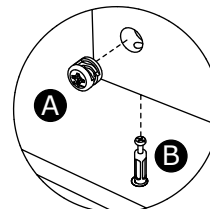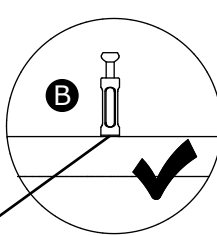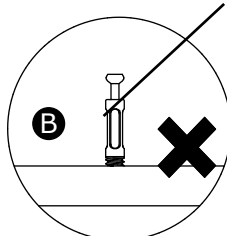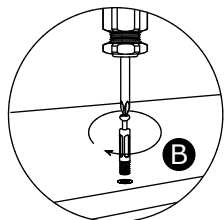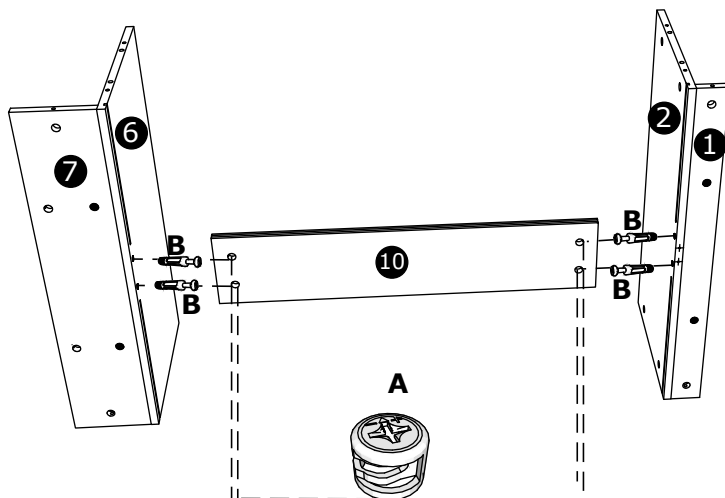




Pin

No gap

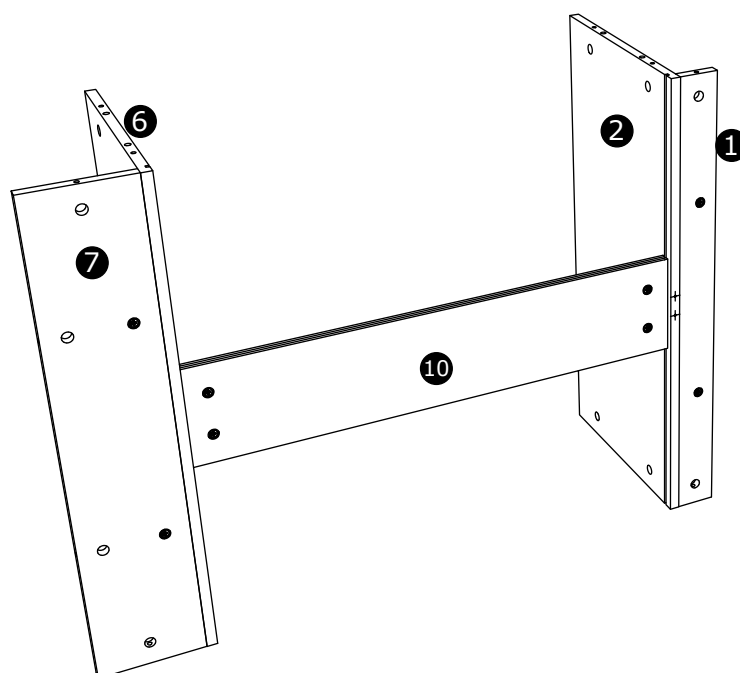




3

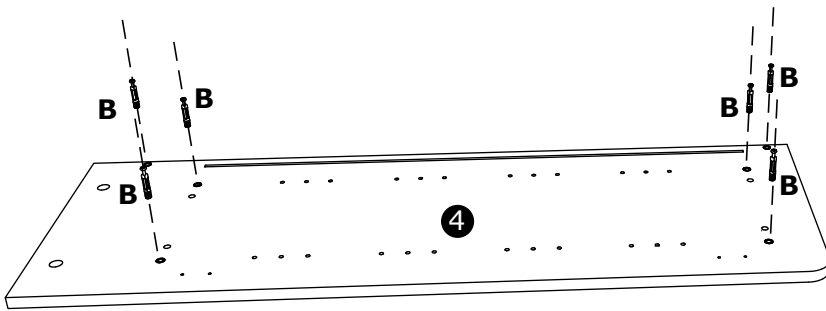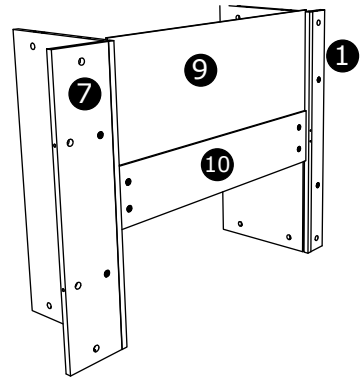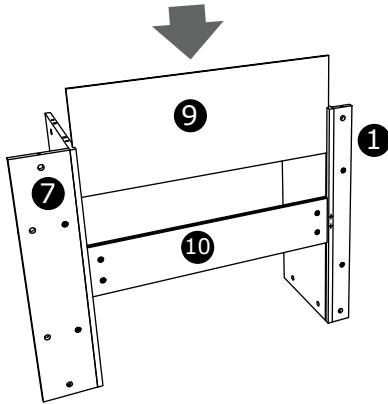



M6\*40

(B)

6pcs

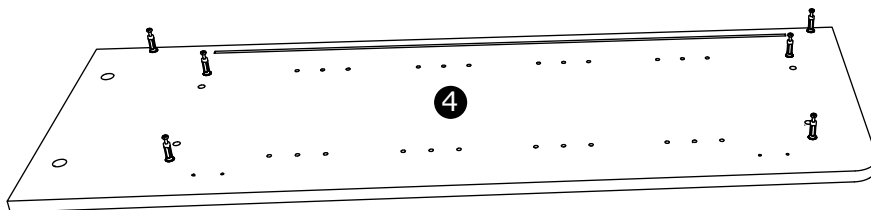

4

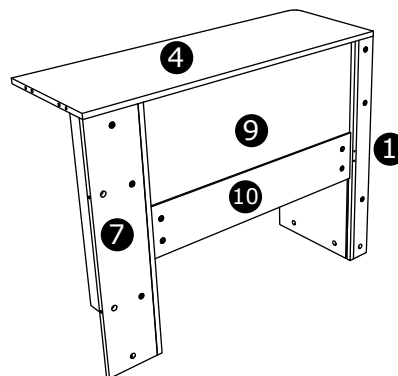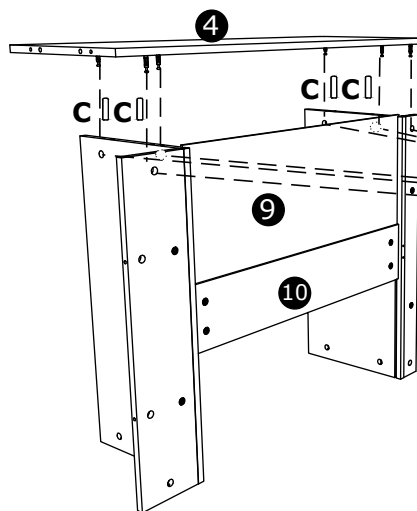

φ 15\*12








φ 8\*30

A

6pcs



C

4pcs

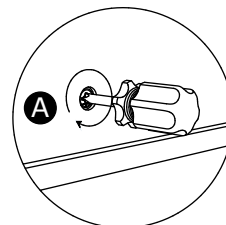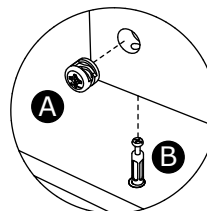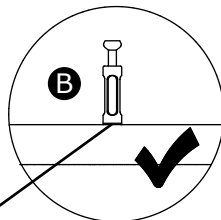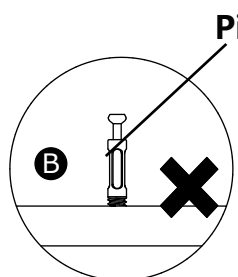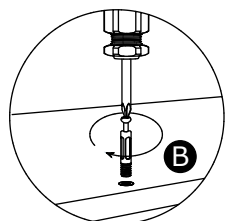


Pin







No gap

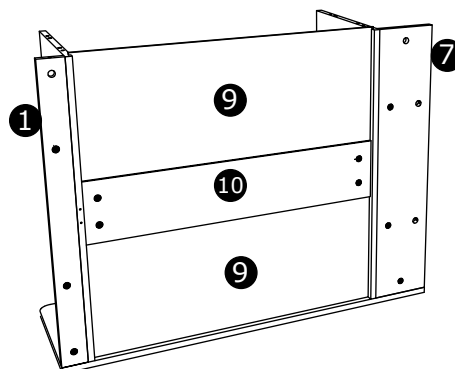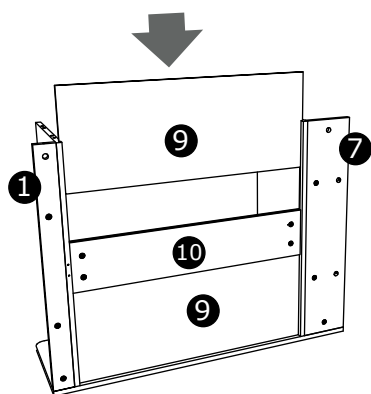


5

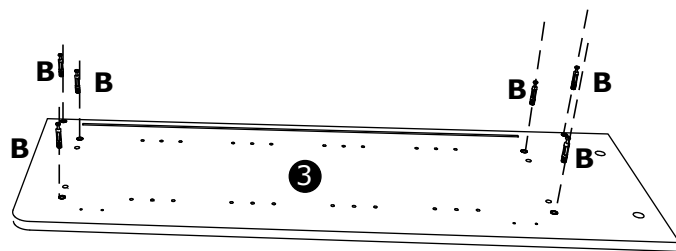

(B)  
6pcs

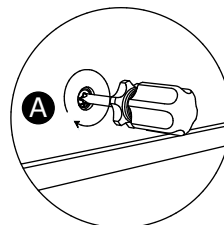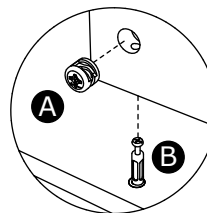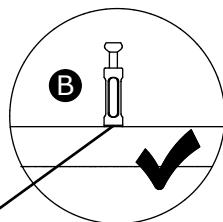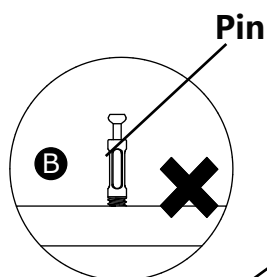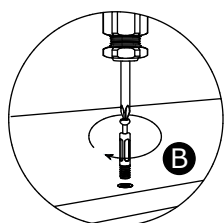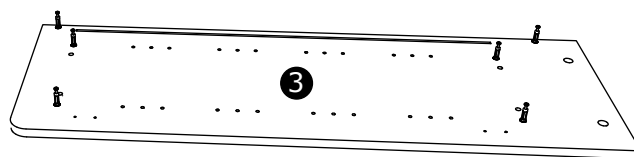

Pin  
No gap

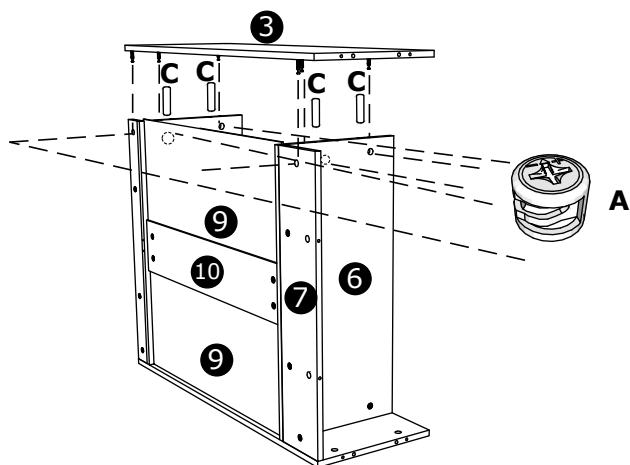


(A)  
6pcs

φ 15\*12



(C)  
4pcs

φ 8\*30

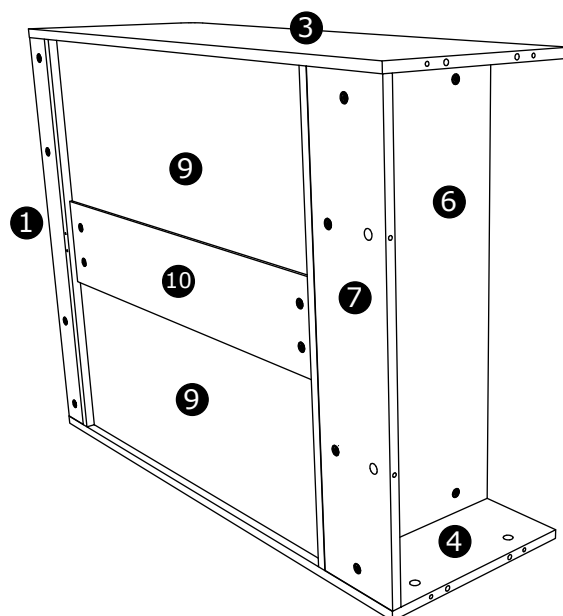





6




M6\*40

B




6pcs

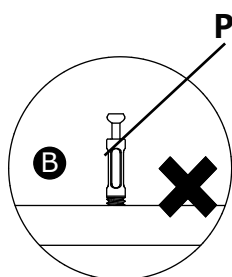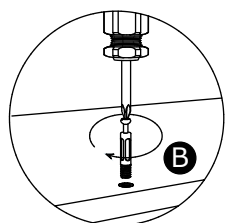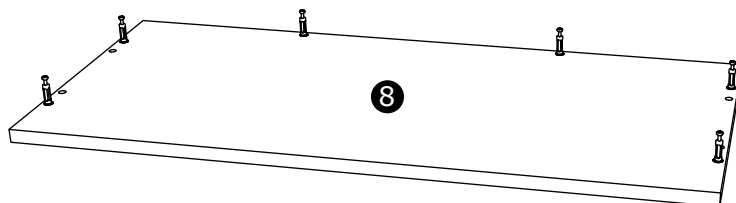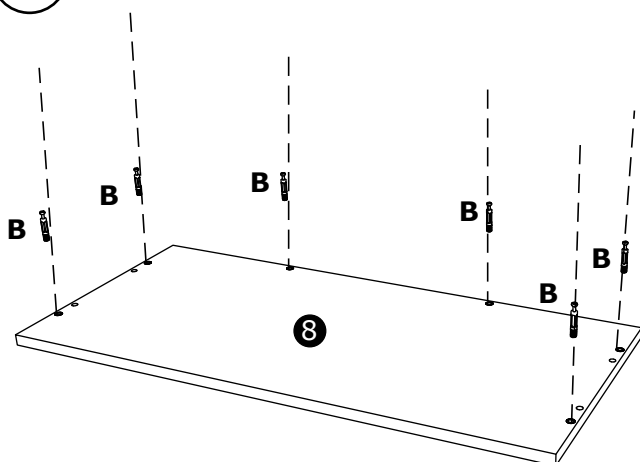

Pin

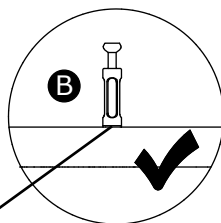

No gap

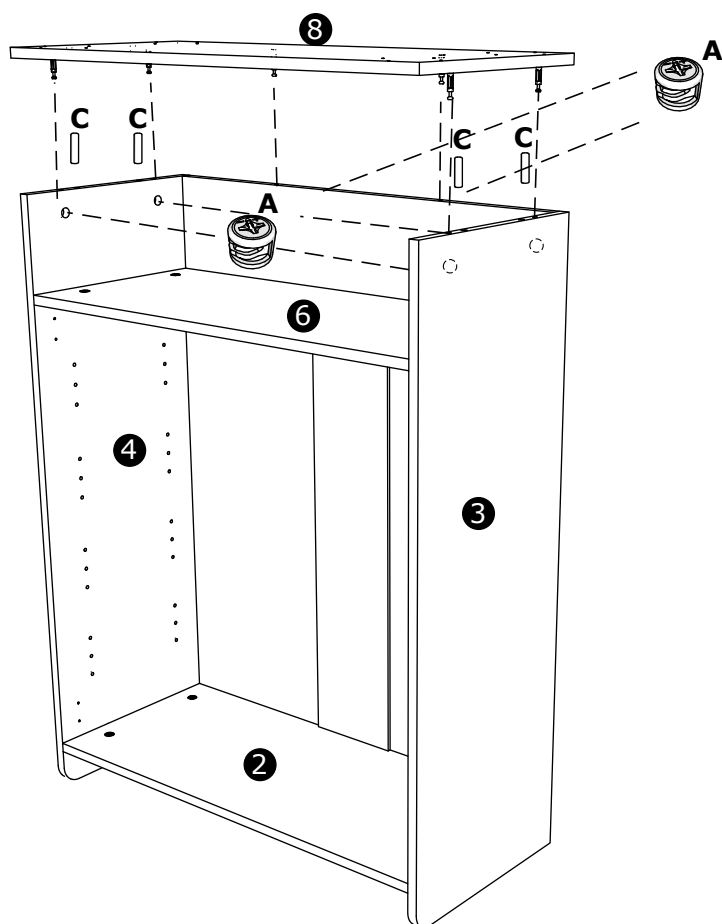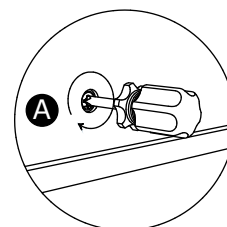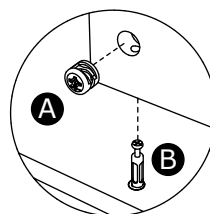

Φ 15\*12

A


6pcs





Φ 8\*30

C

4pcs

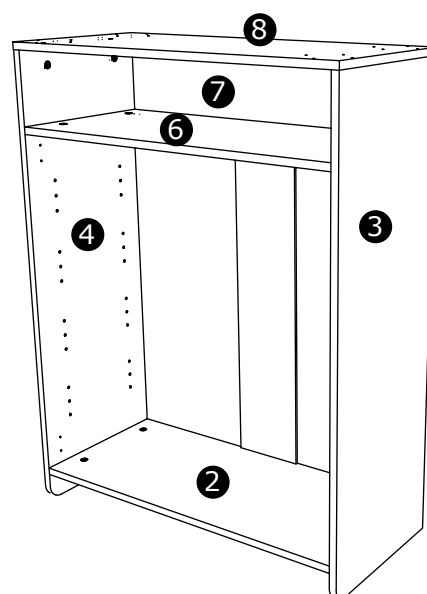




7

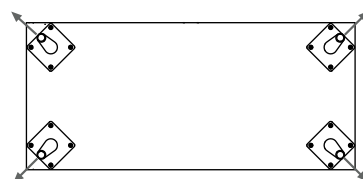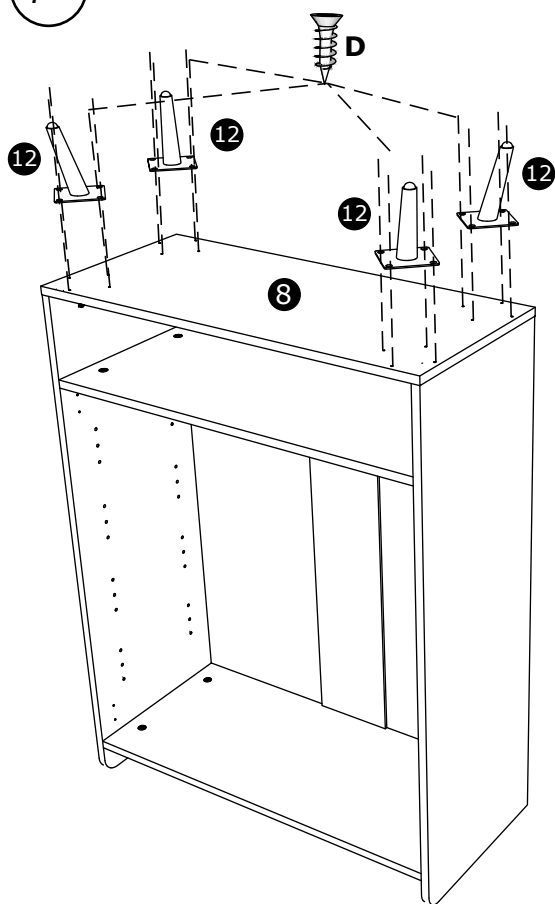

M3.5\*14


D





16pcs

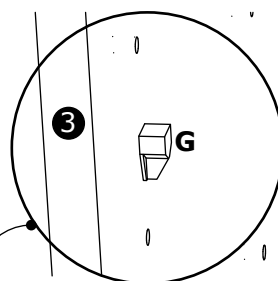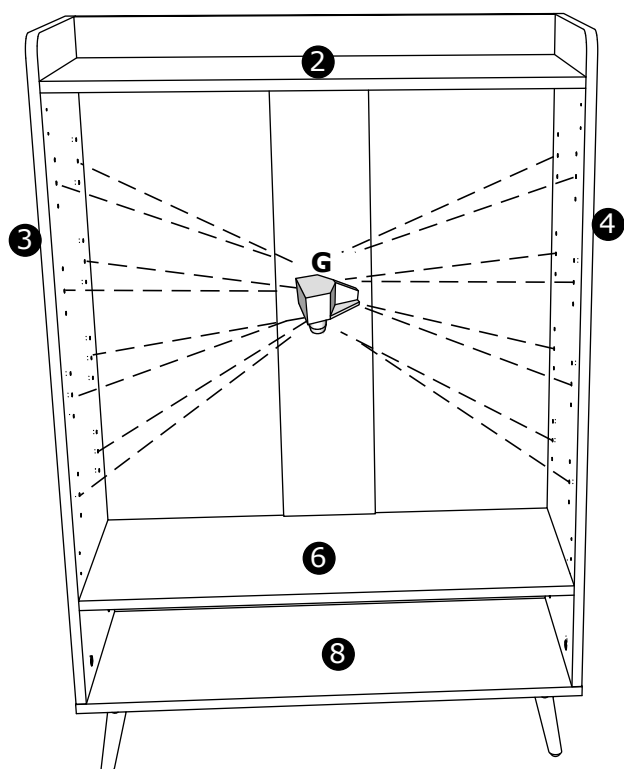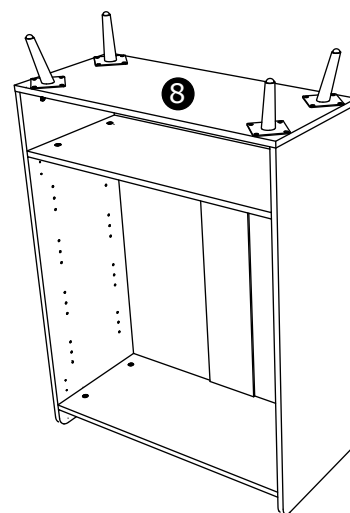


G













16pcs

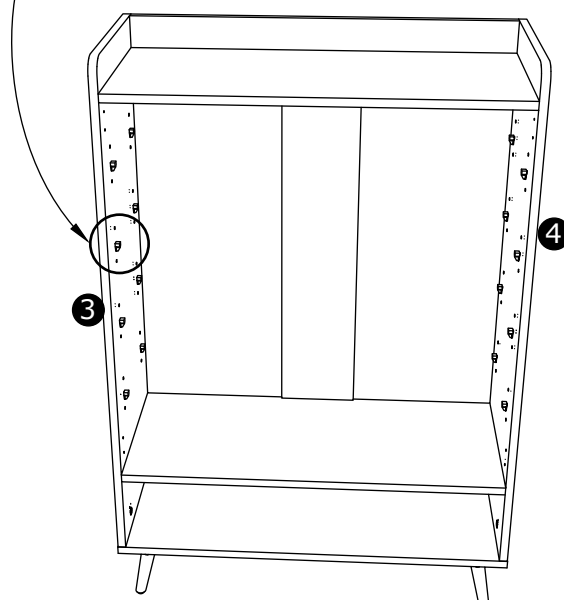

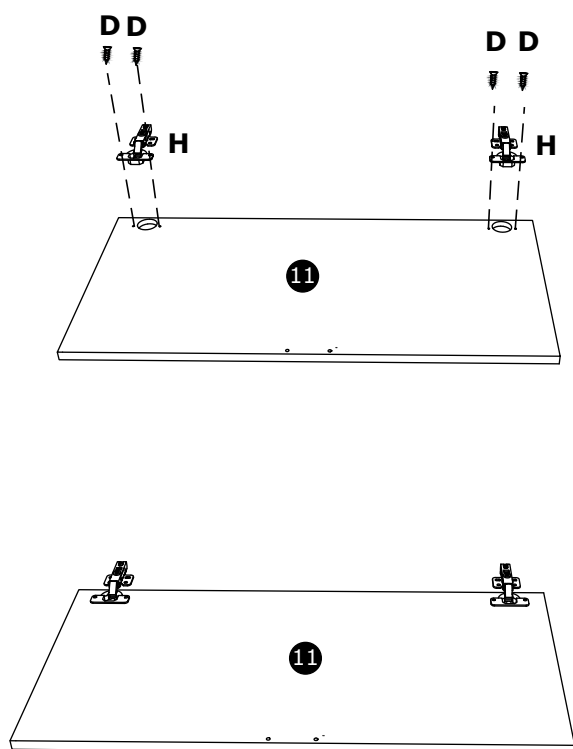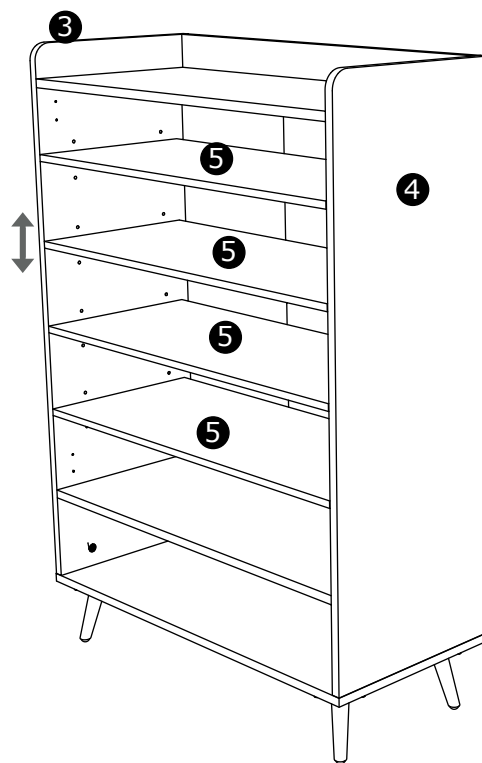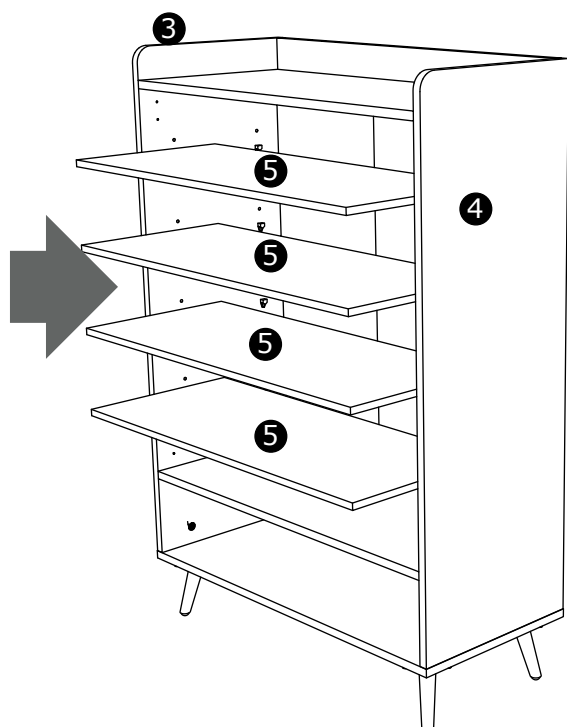
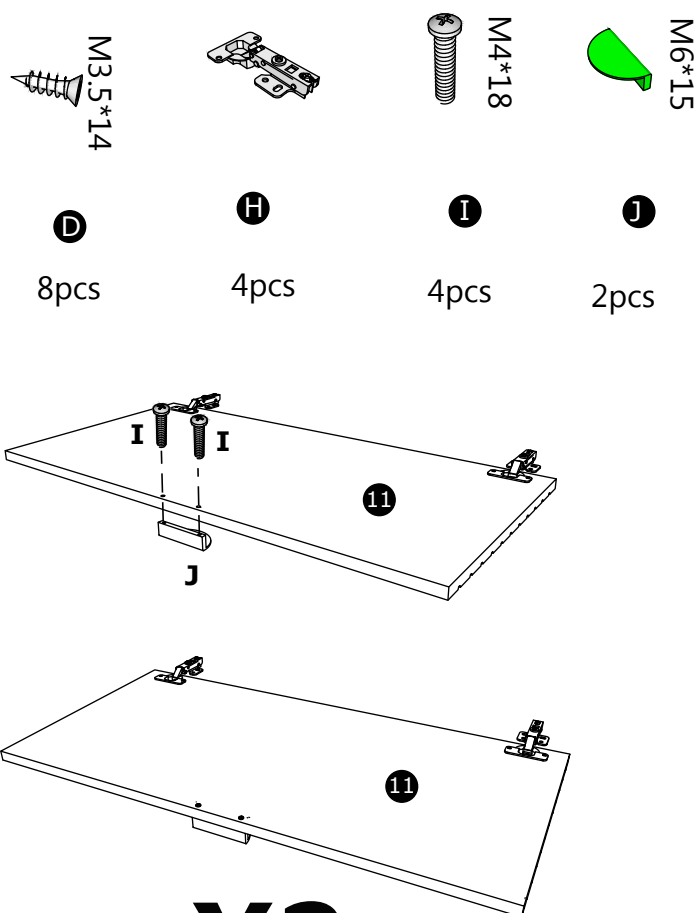
**X2****X2**

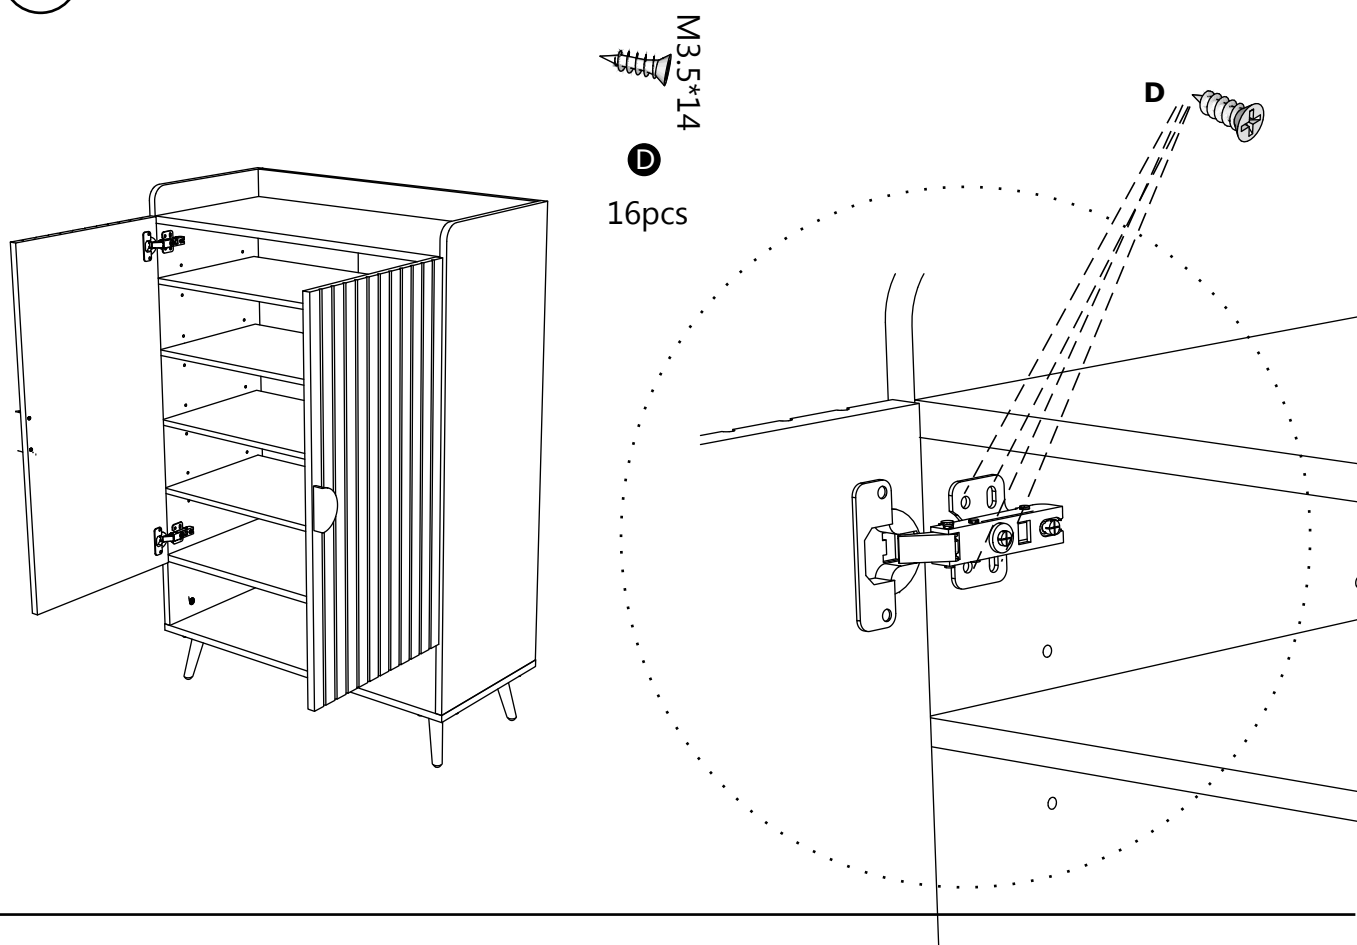

If there is misalignment after you install, adjust the screw to the best condition

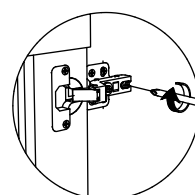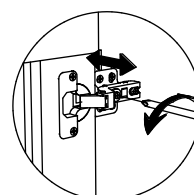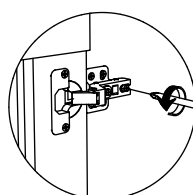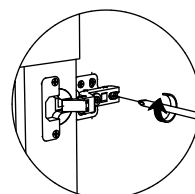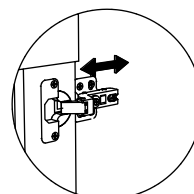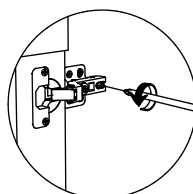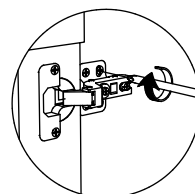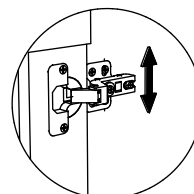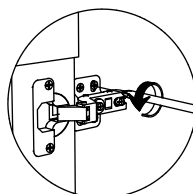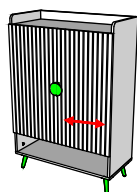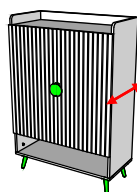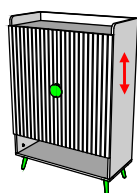

10

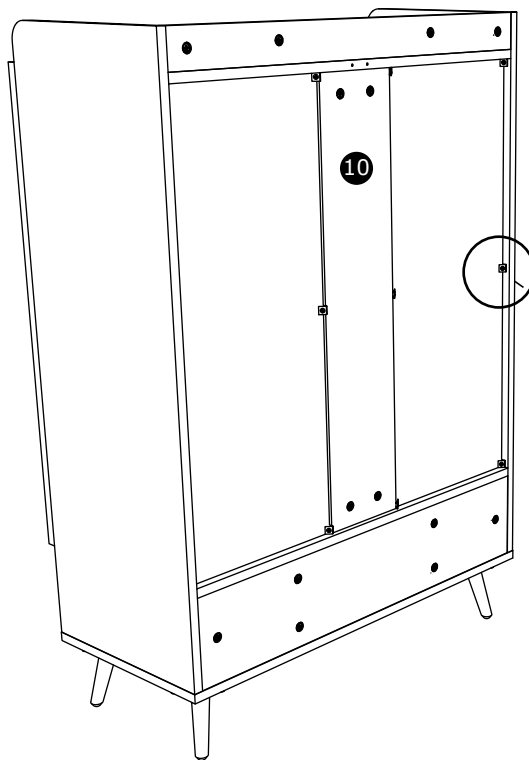

**F**


12pcs



**D**

12pcs



M3.5\*14



**F**





**D**

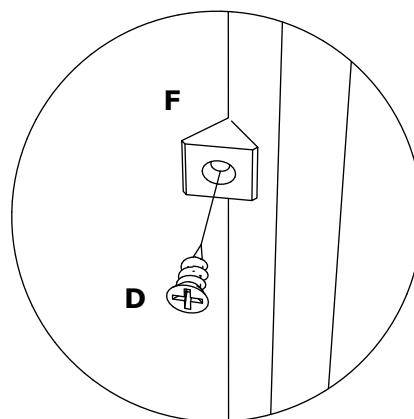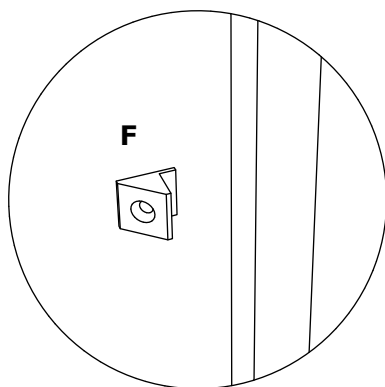



11


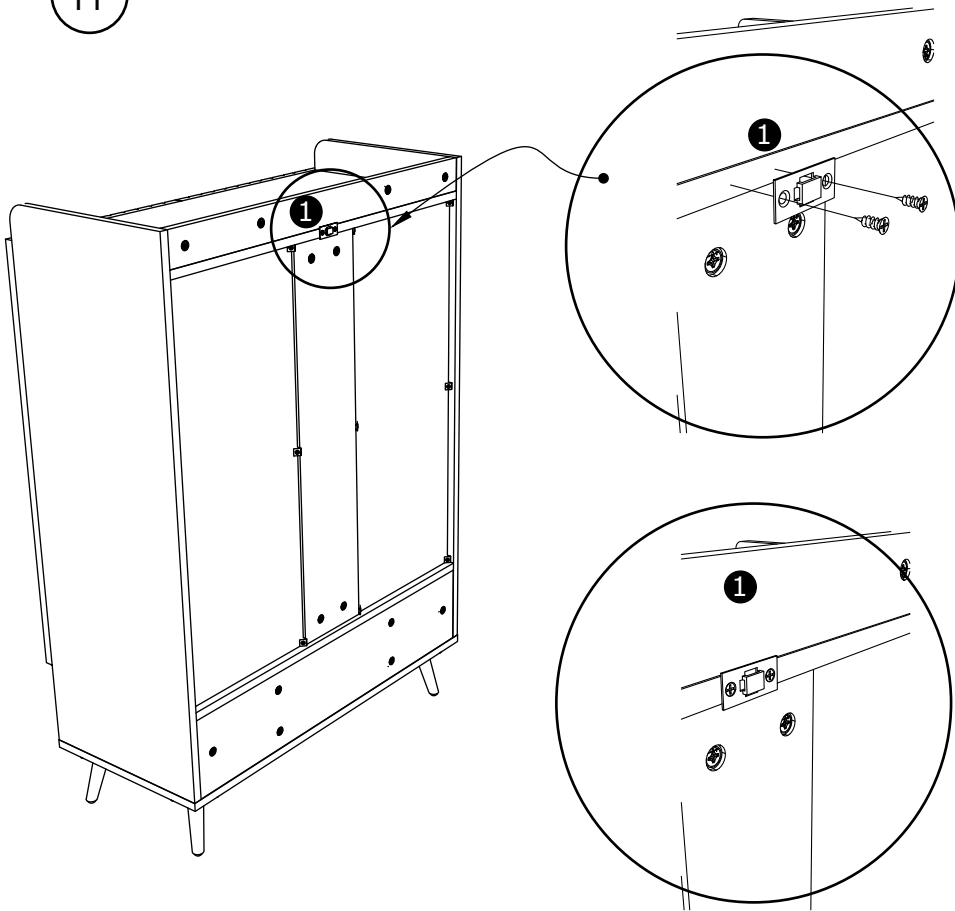


K

1pc



Step1

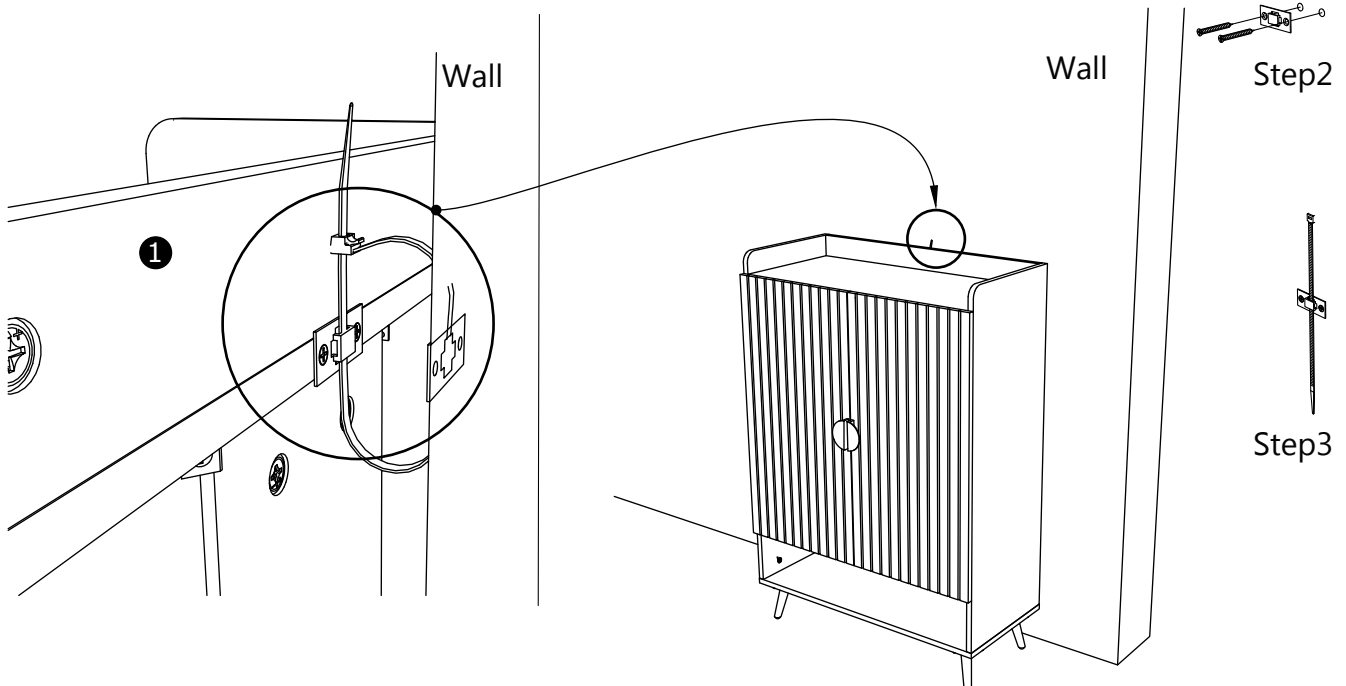

Step2

