


Storage Bed

This product is shipped in
2 cartons

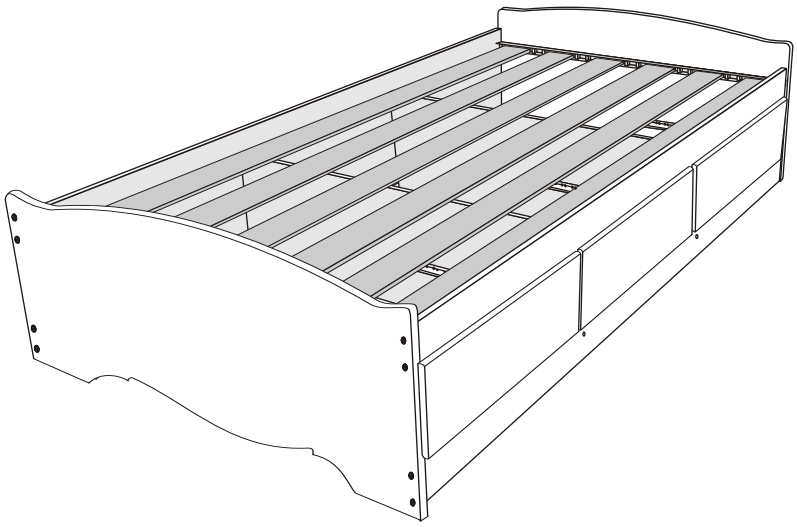




Required Tools	Optional Tools
Screwdrivers   Phillips Head  Flat Head  Hammer	Using a power screwdriver will speed up assembly.  **Caution** Do not over tighten any screw. The last few turns of each screw should be done very slowly or by hand.

Hardware Identification


Bed Hardware



JRN Nut
(24)




JCB Connector
(24)
bronze (cherry / espresso)
chrome (white / maple)
black

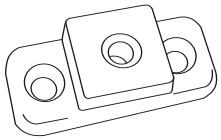


T Spacer
(12)



Drawer Slide Screw
(50)

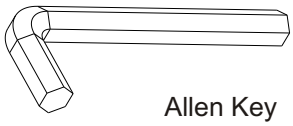


Allen Key
(1)

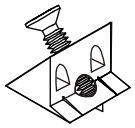


Drawer Bottom
Stabilizer (3)

Drawer Slides for Bed




LEFT Slide (3)




RIGHT Slide (3)

Drawer Hardware



1 LEFT Drawer Slide per Drawer (Total = 3)



1 RIGHT Drawer Slide per Drawer (Total = 3)


4 per drawer



#8 - 1½" Hi Lo Screws
(12)




12mm Zinc Cam
(12)



34mm Black Twister Dowel
(12)

5 per drawer




¾" Nail
(15)

8 per drawer



Drawer Slide Screw
(24)

Bed Parts

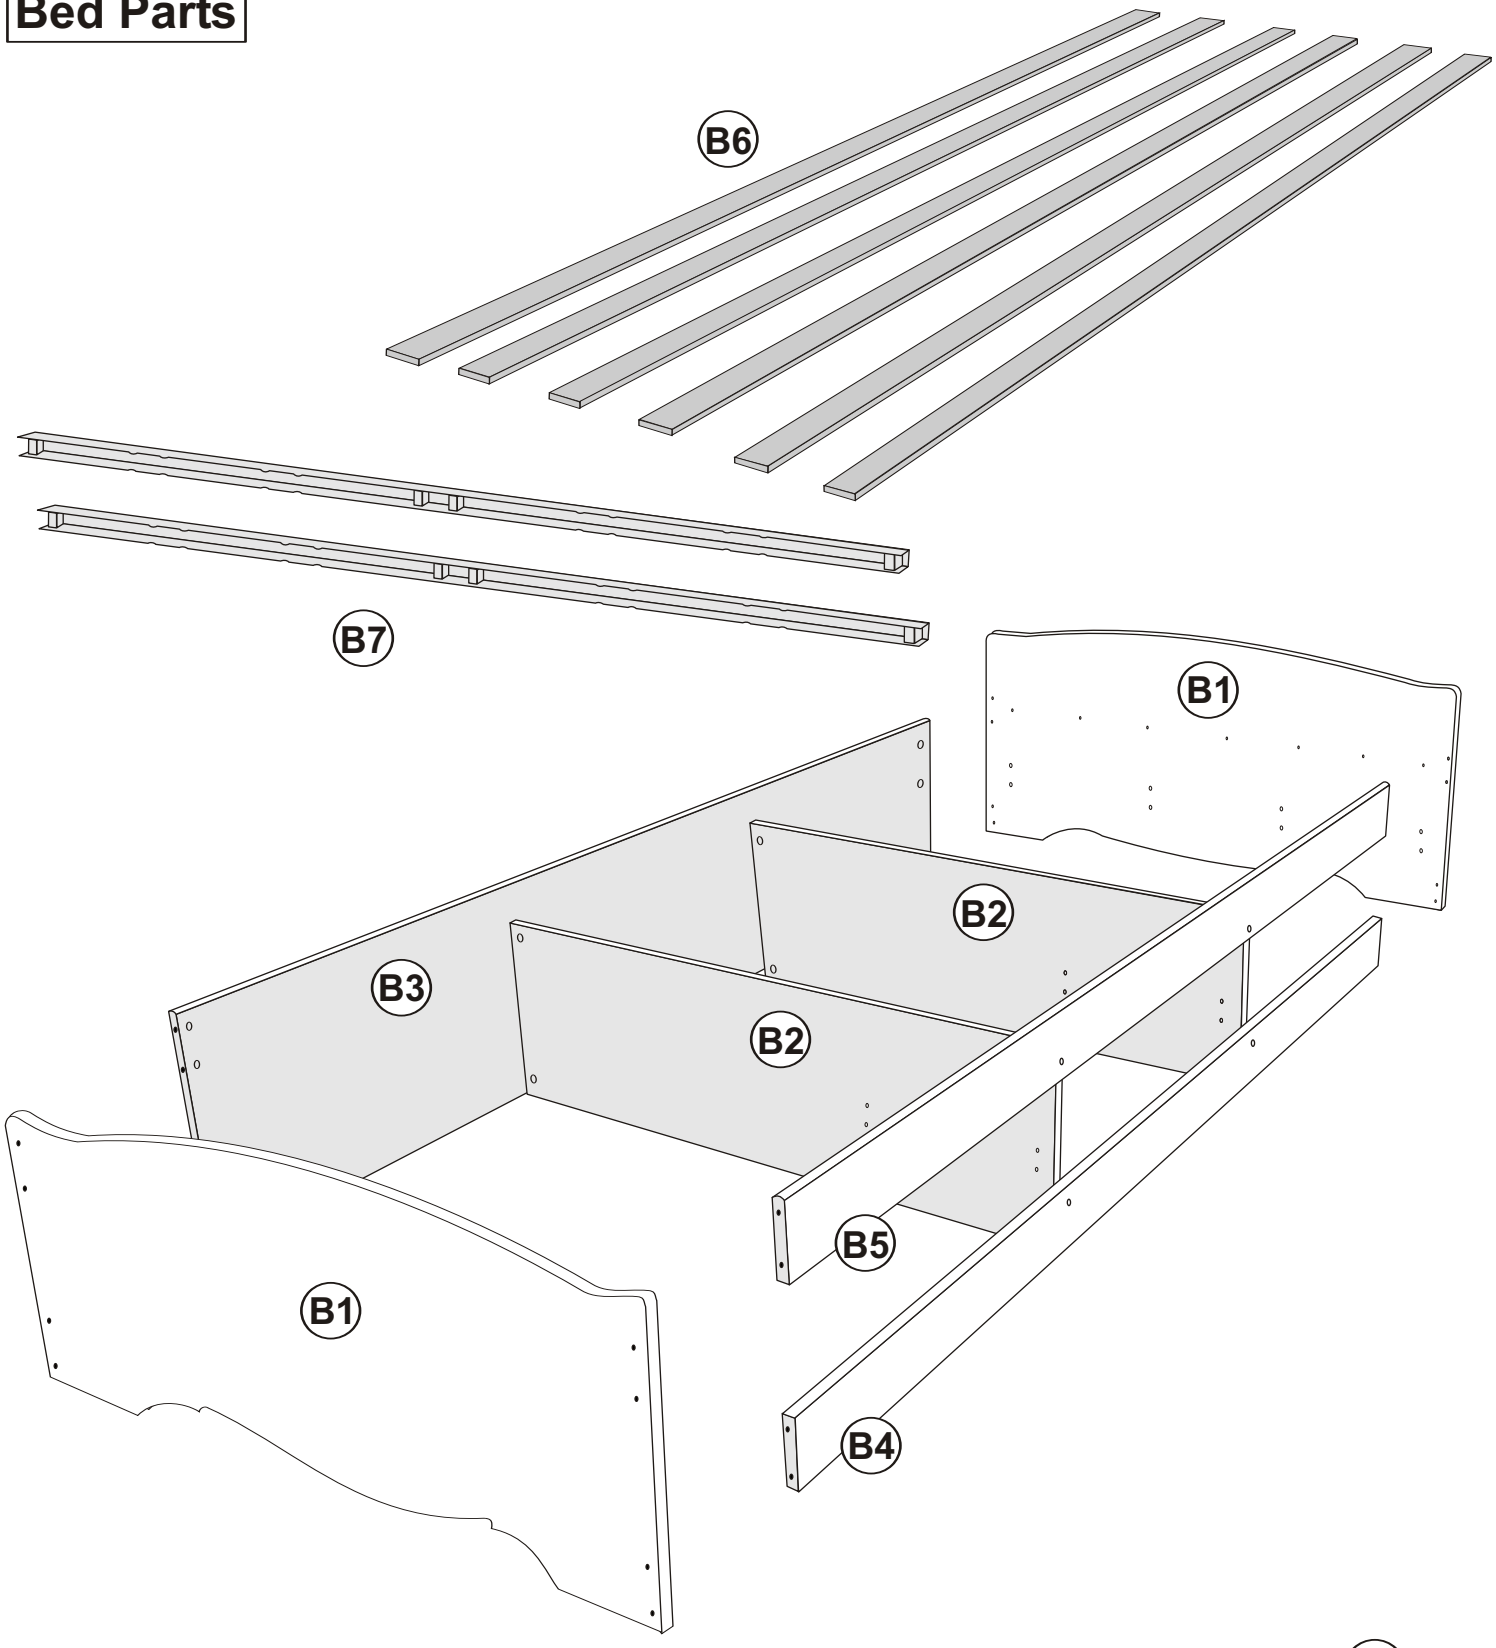

B1

Outer Gables (2)
black
cherry
espresso
maple
white

B2

Inner Gables (2)
black
cherry
espresso
maple
white

B3

Side Panel (1)
black
cherry
espresso
maple
white

B4

Lower Stabilizer (1)
black
cherry
espresso
maple
white

B5

Upper Stabilizer (1)
black
cherry
espresso
maple
white

B6

Plywood Slats (6)


B7

Metal U-channel with blocks (2)

STEP 1 Estimated Time: 10 minutes


IMPORTANT	These instructions show the Twin Bed assembled with the drawers facing to the right. Both outer gables are identical. After the bed is assembled it can be positioned to face right or left.

Attach metal U-channels to each outer gable using drawer slide screws

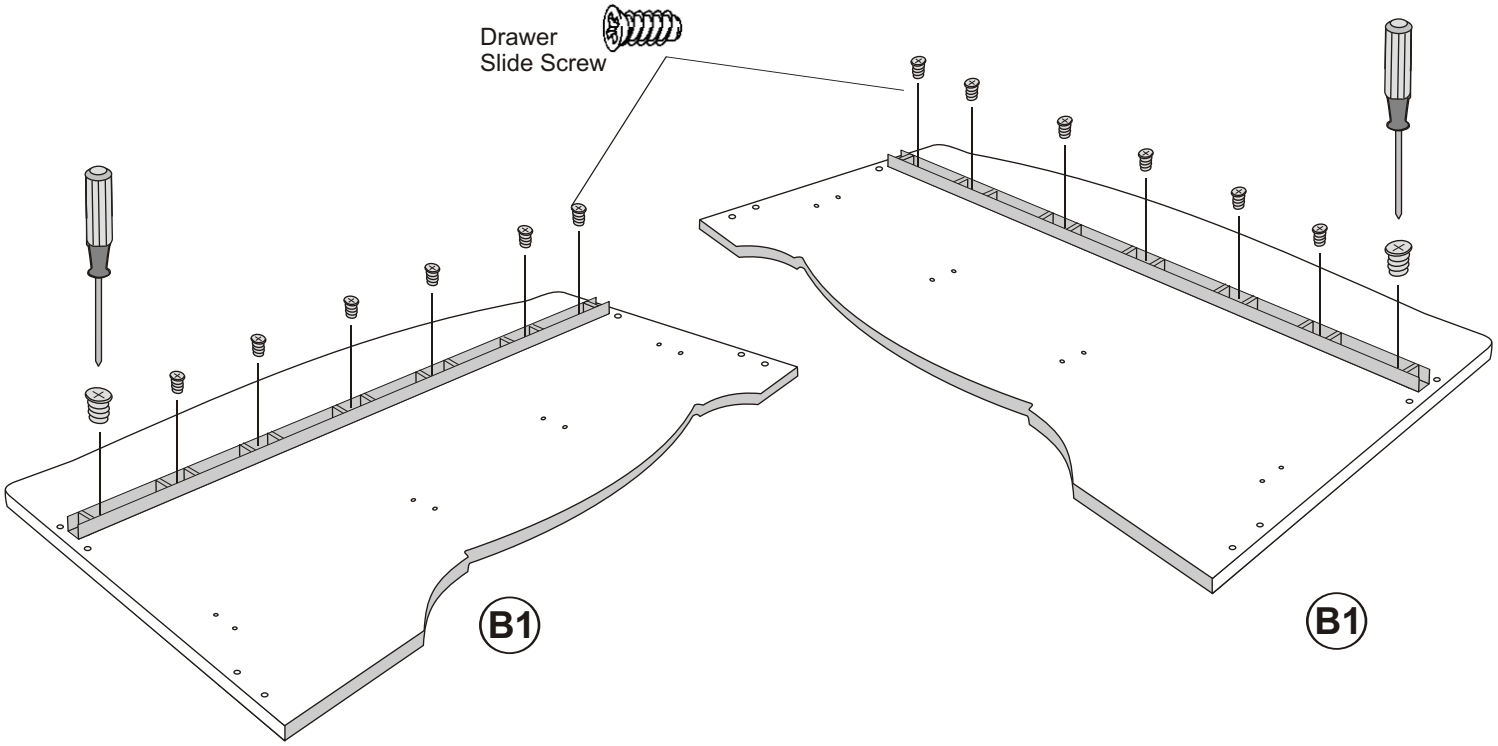

STEP 2 Estimated Time: 10 minutes

Attach “T” spacers to outer gables with drawer slide screws as shown.

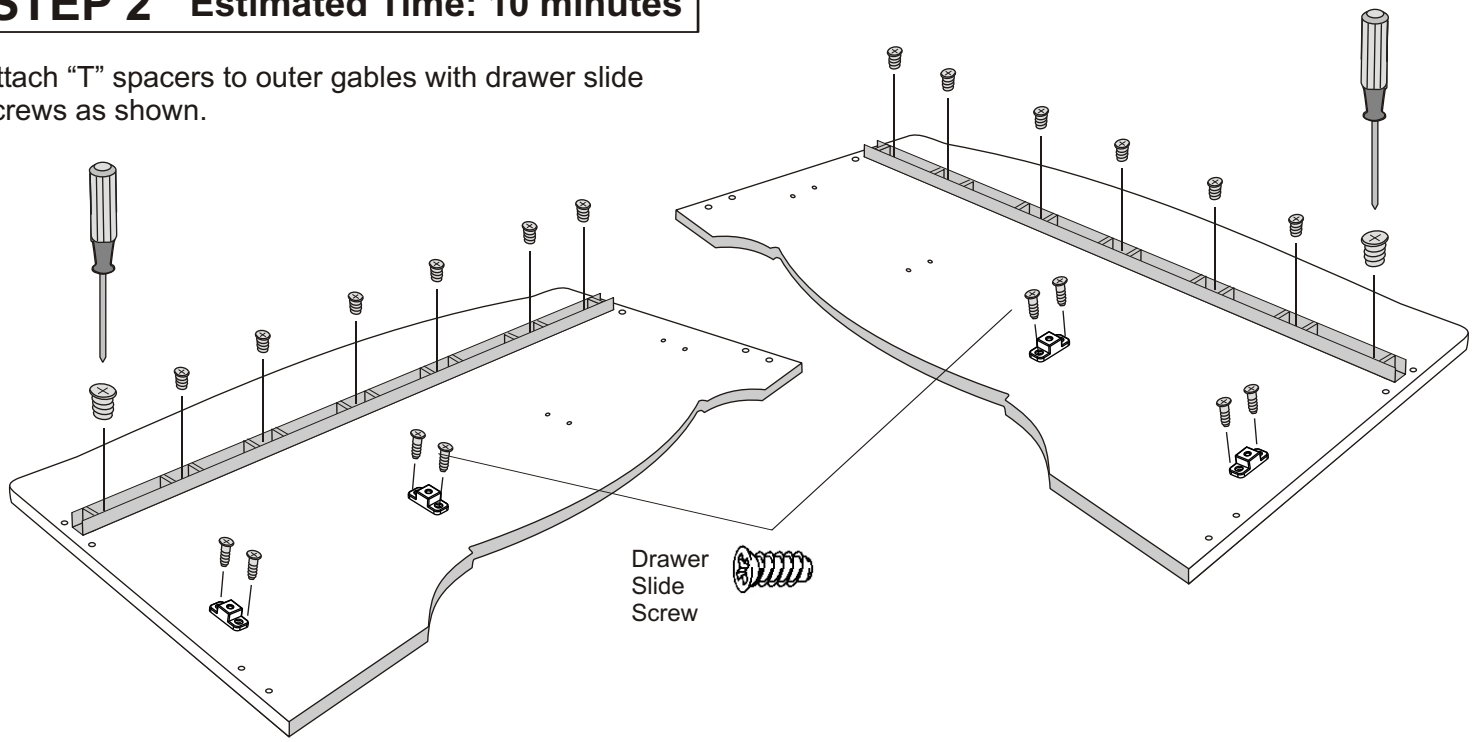


STEP 3 Estimated Time: 10 minutes


Attach drawer glides to “T” spacers on outer gables as shown in the photo


Position the Drawer Glides with:

A) The wheel at the finished side

B) The wheel on the unfinished bottom

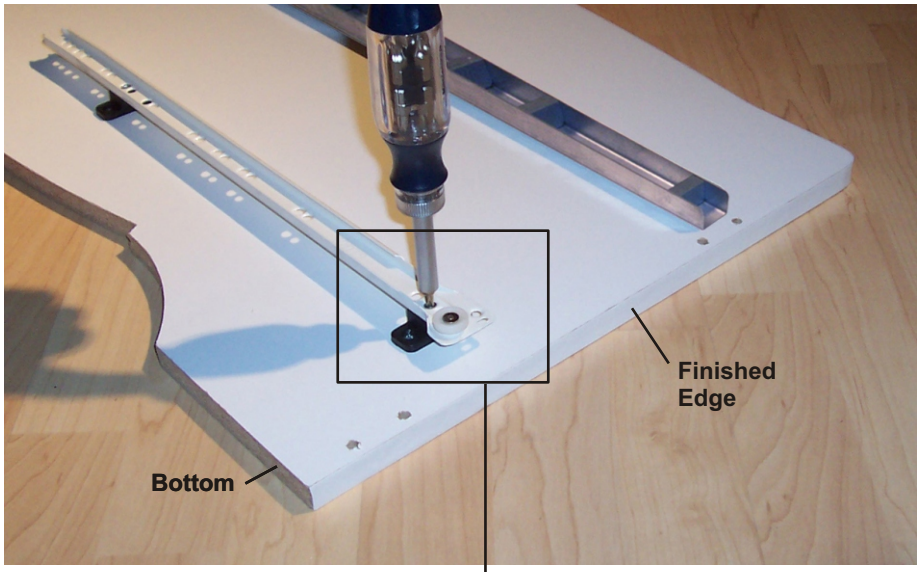

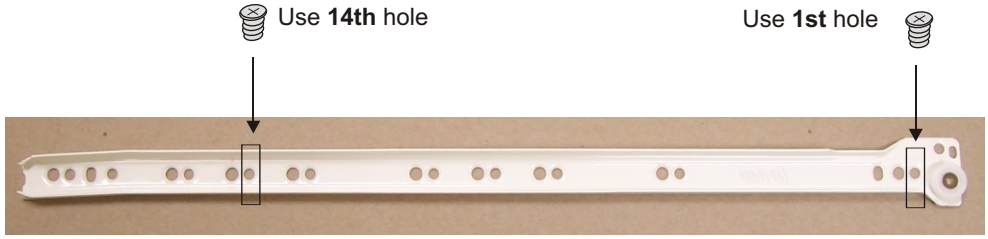

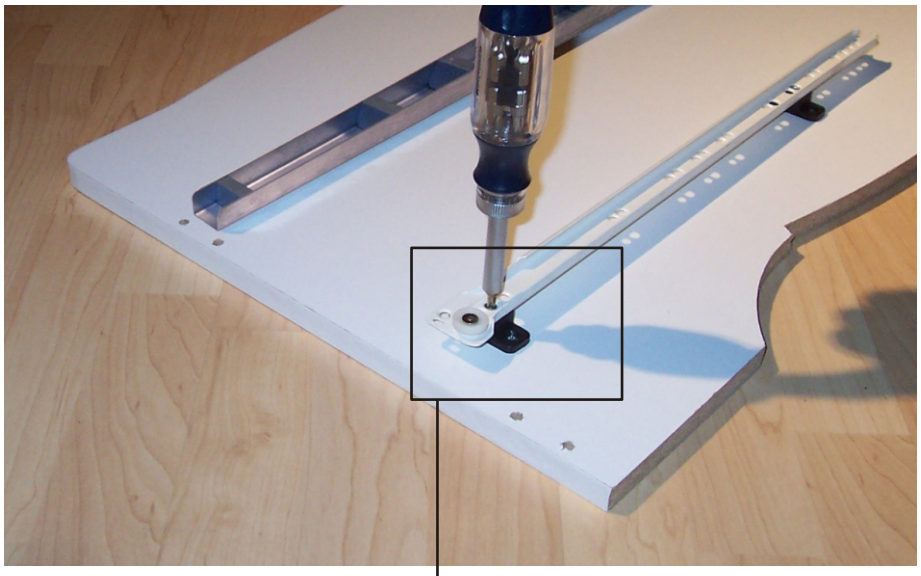






STEP 4 Estimated Time: 5 minutes

Insert JRN nuts into the holes on each end of the inner gables.

The holes are drilled through. You can insert them from either side.

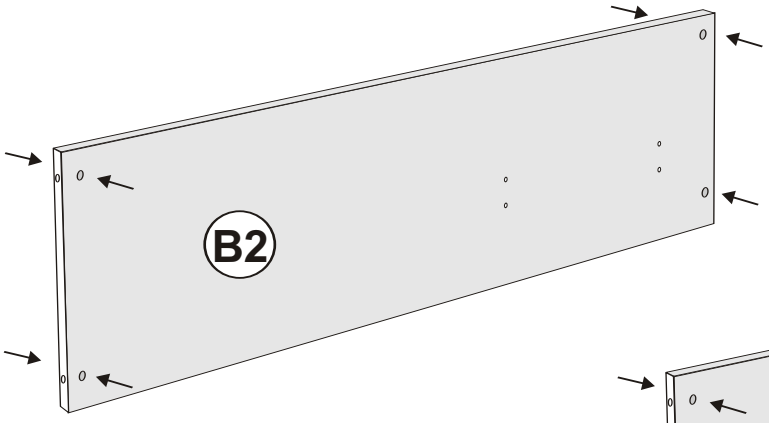

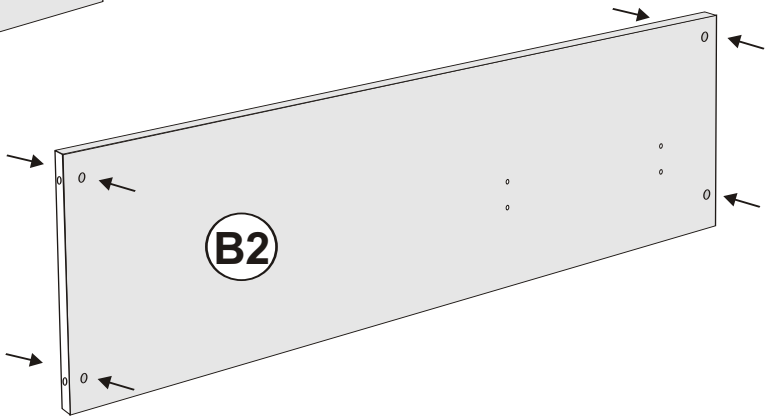

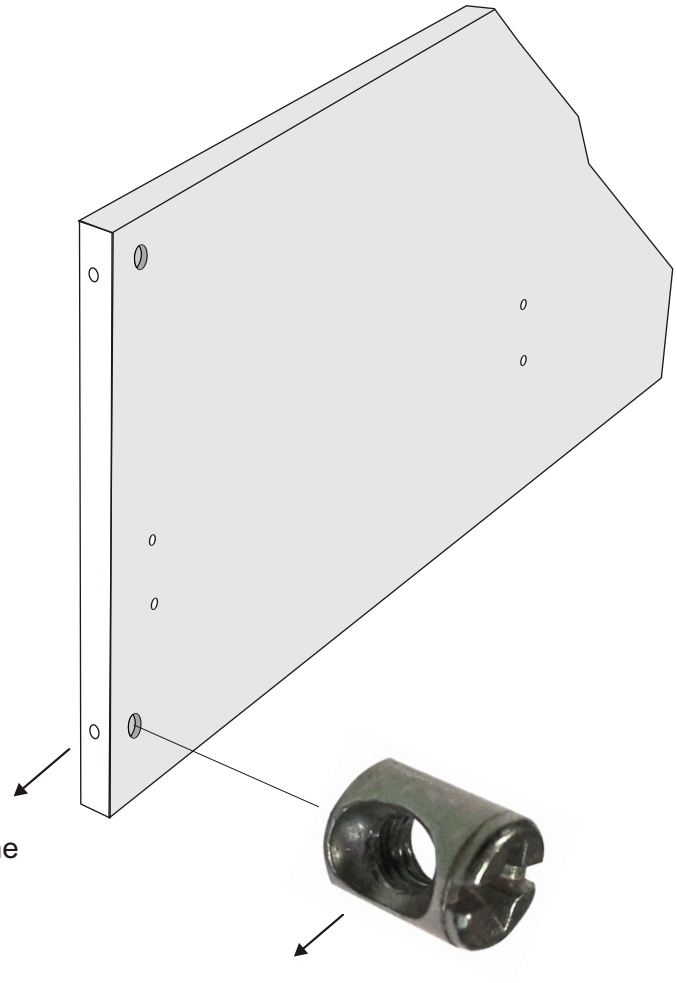



Insert the nut as shown, so that the hole lines up with the hole on the edge of the gable.

STEP 5 Estimated Time: 5 minutes

Insert JRN nuts into the holes on each end of:


The side (B3)
The upper stabilizer (B5)
The lower stabilizer (B4)

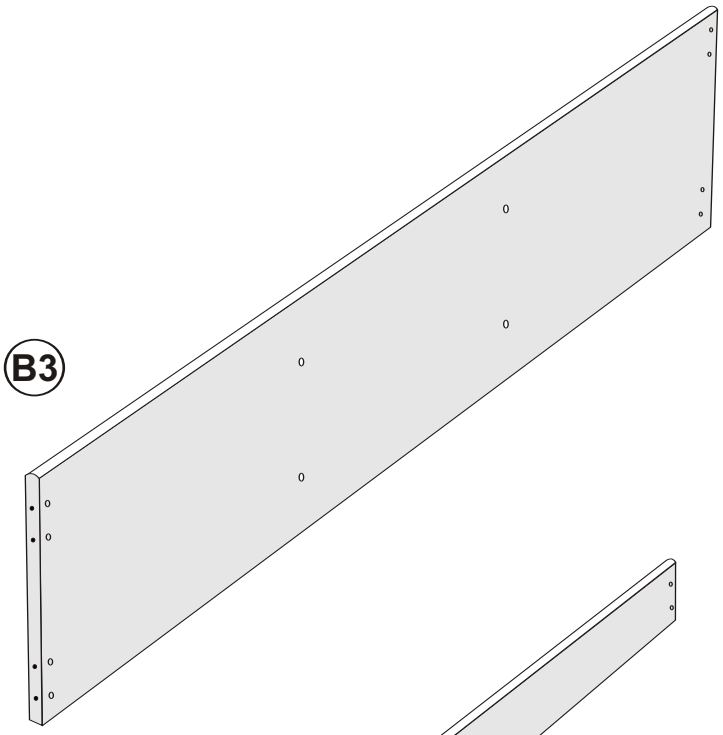

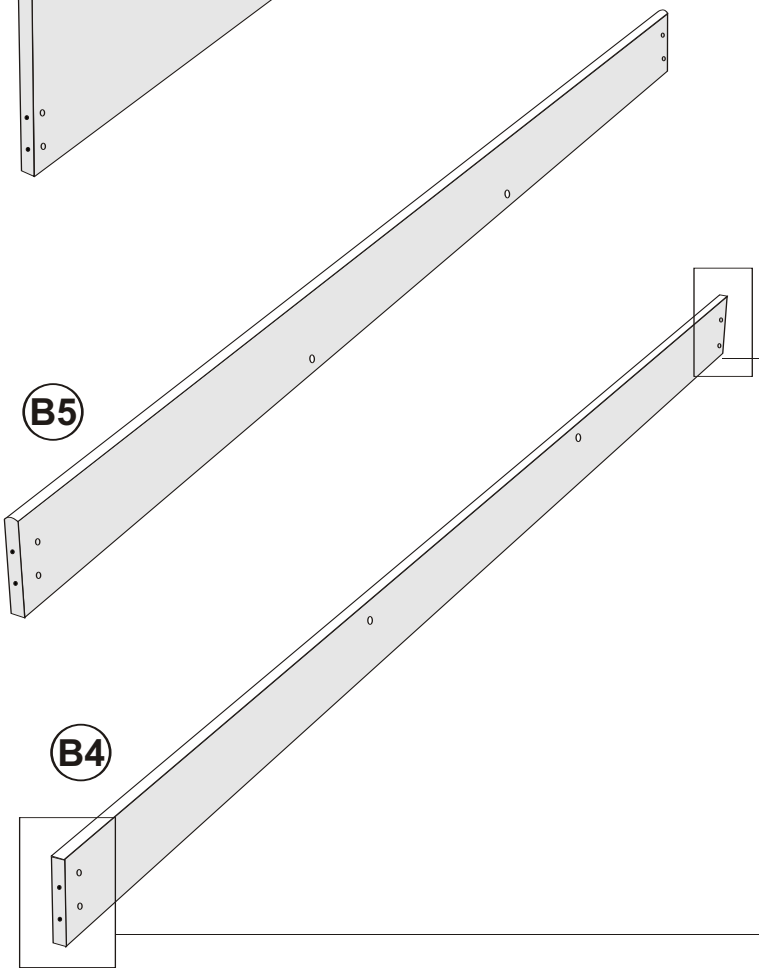


Identifying the upper and lower stabilizers

Upper Stabilizer

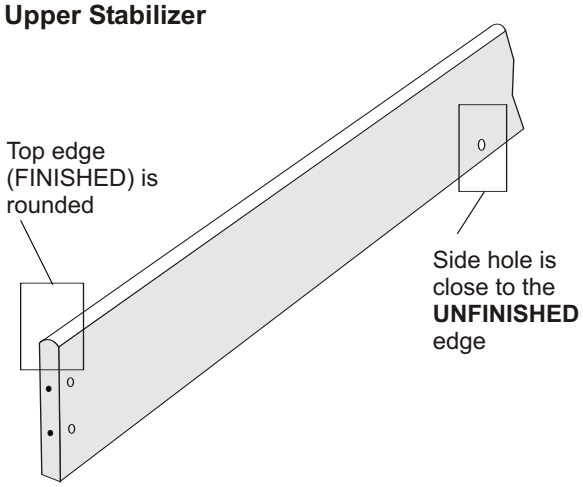


Lower Stabilizer

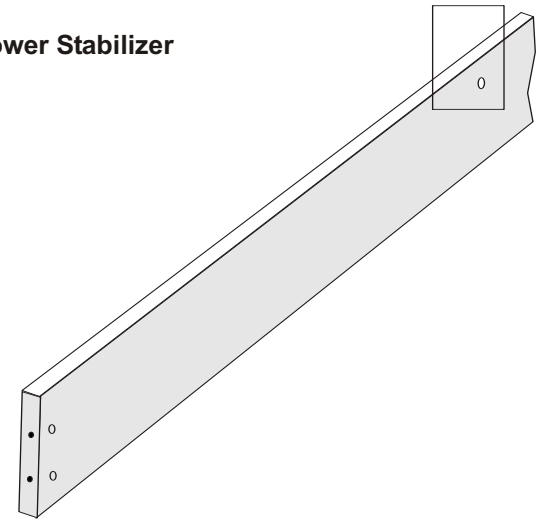



STEP 6 Estimated Time: 10 minutes

Attach “T” spacers and drawer glides to Inner Gables

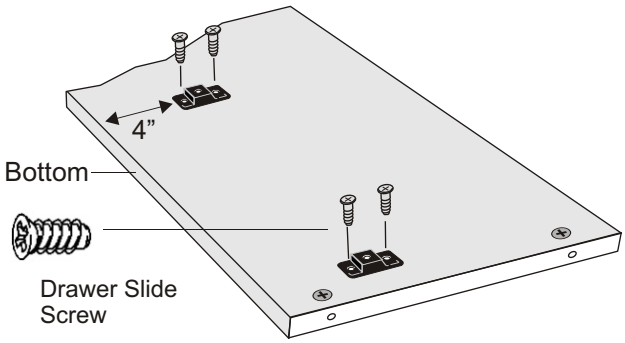

6a Attach “T” spacers to ONE side of each inner gable with drawer slide screws

6b Attach drawer glides to “T” spacers on inner gables.

Position the drawer glides with:

A) The wheel at the finished edge

B) The wheel on the bottom

IMPORTANT:


Before attaching the drawer glides, determine the TOP and BOTTOM of each inner gable.

A. Measure from each edge of the “T” Spacer to each unfinished edge.


B. The measurement that is approximately 4” will be the **BOTTOM**.

Check the position of the drawer glides carefully before you attach them to the inner gables.


CORRECT

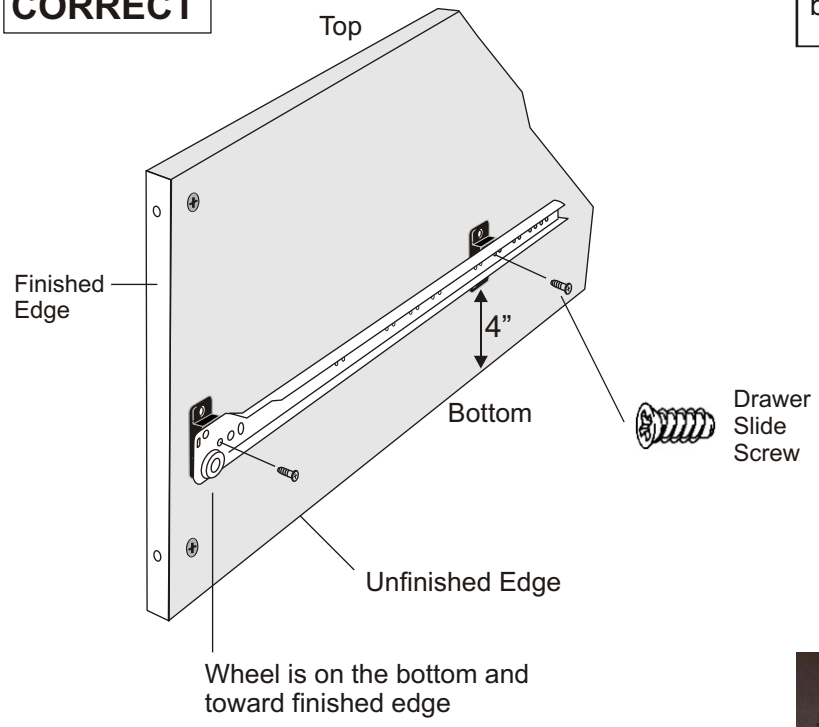

INCORRECT

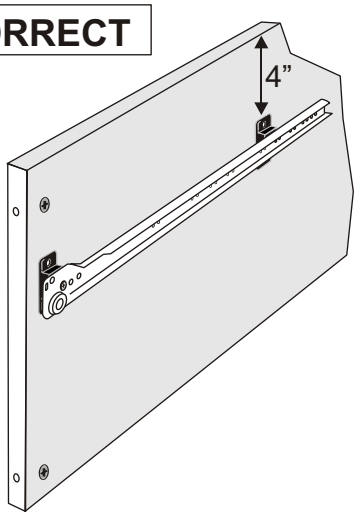


6c Repeat steps 6a & 6b for the 2nd side of the inner gables.

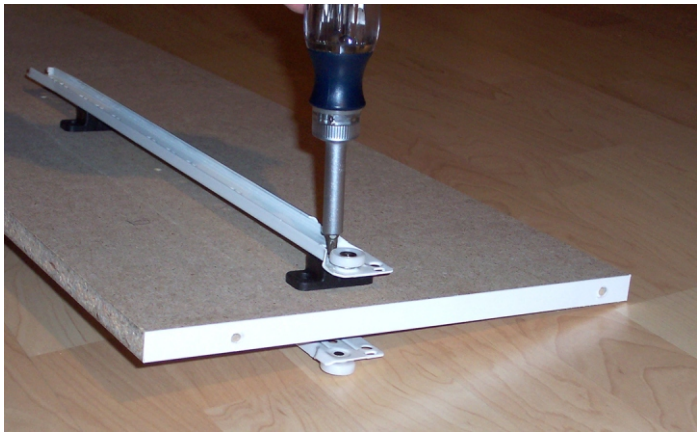


STEP 7 Estimated Time: 5 minutes


Using JCB connectors, and the Allen Key provided, attach the side panel (B3) to both inner gables.

The finished edge should be facing up.

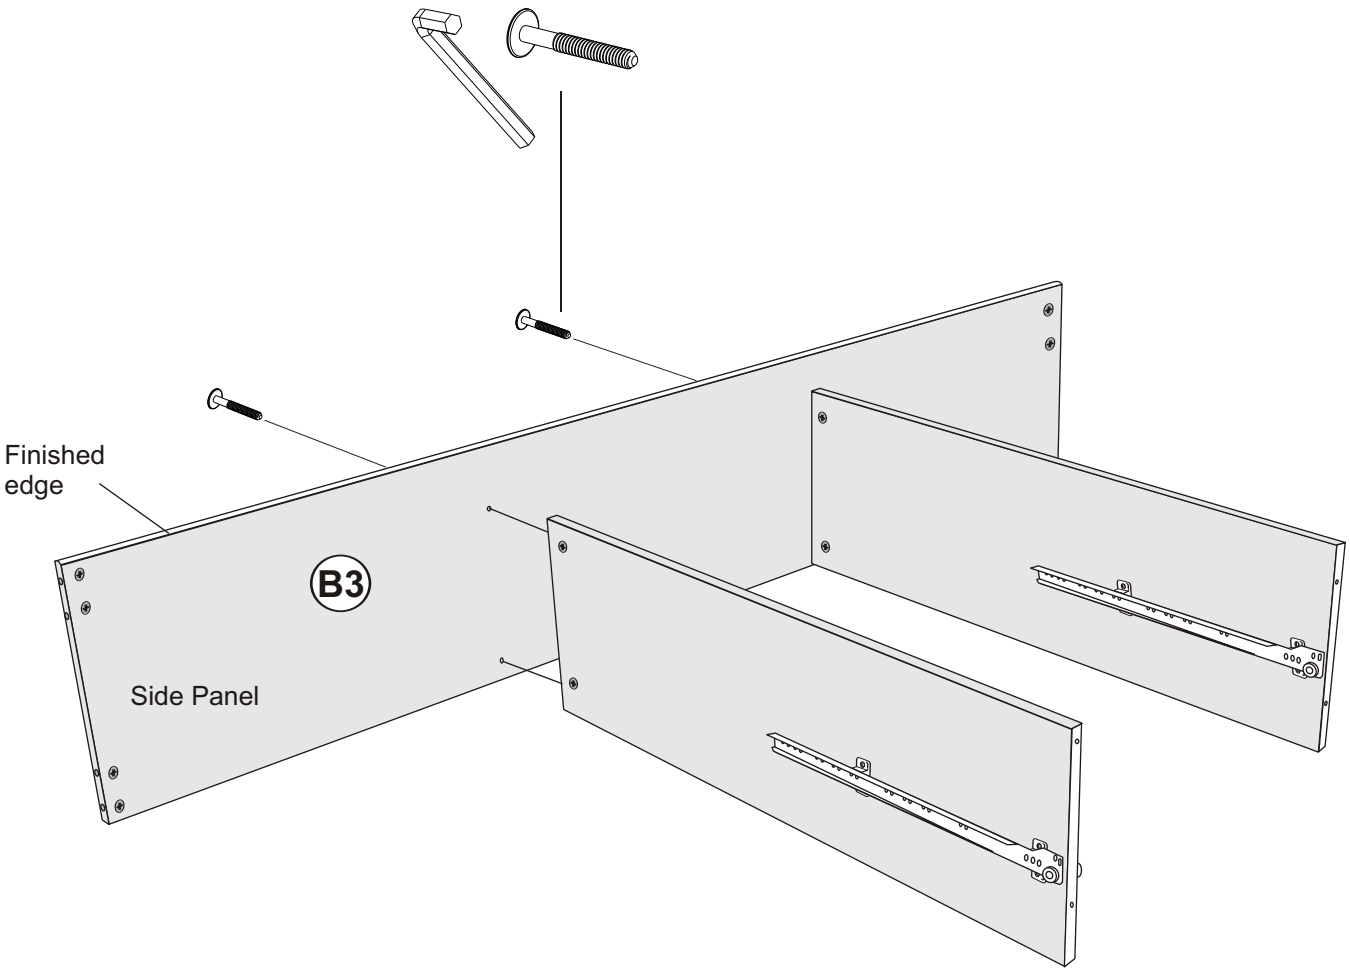


If you have any difficulty tightening the JCB connector, use a screwdriver to adjust the JRN nut to make sure the hole is facing the opening for the connector

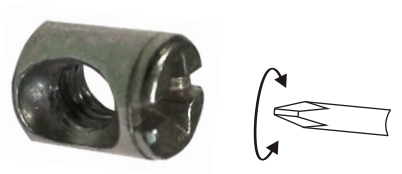


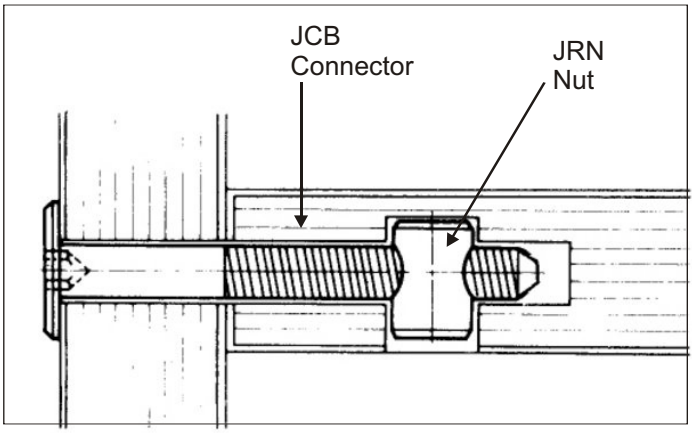

STEP 8 Estimated Time: 5 minutes

Using JCB connectors, and the Allen Key provided, attach the lower stabilizer (B4) to both inner gables BELOW the drawer slide

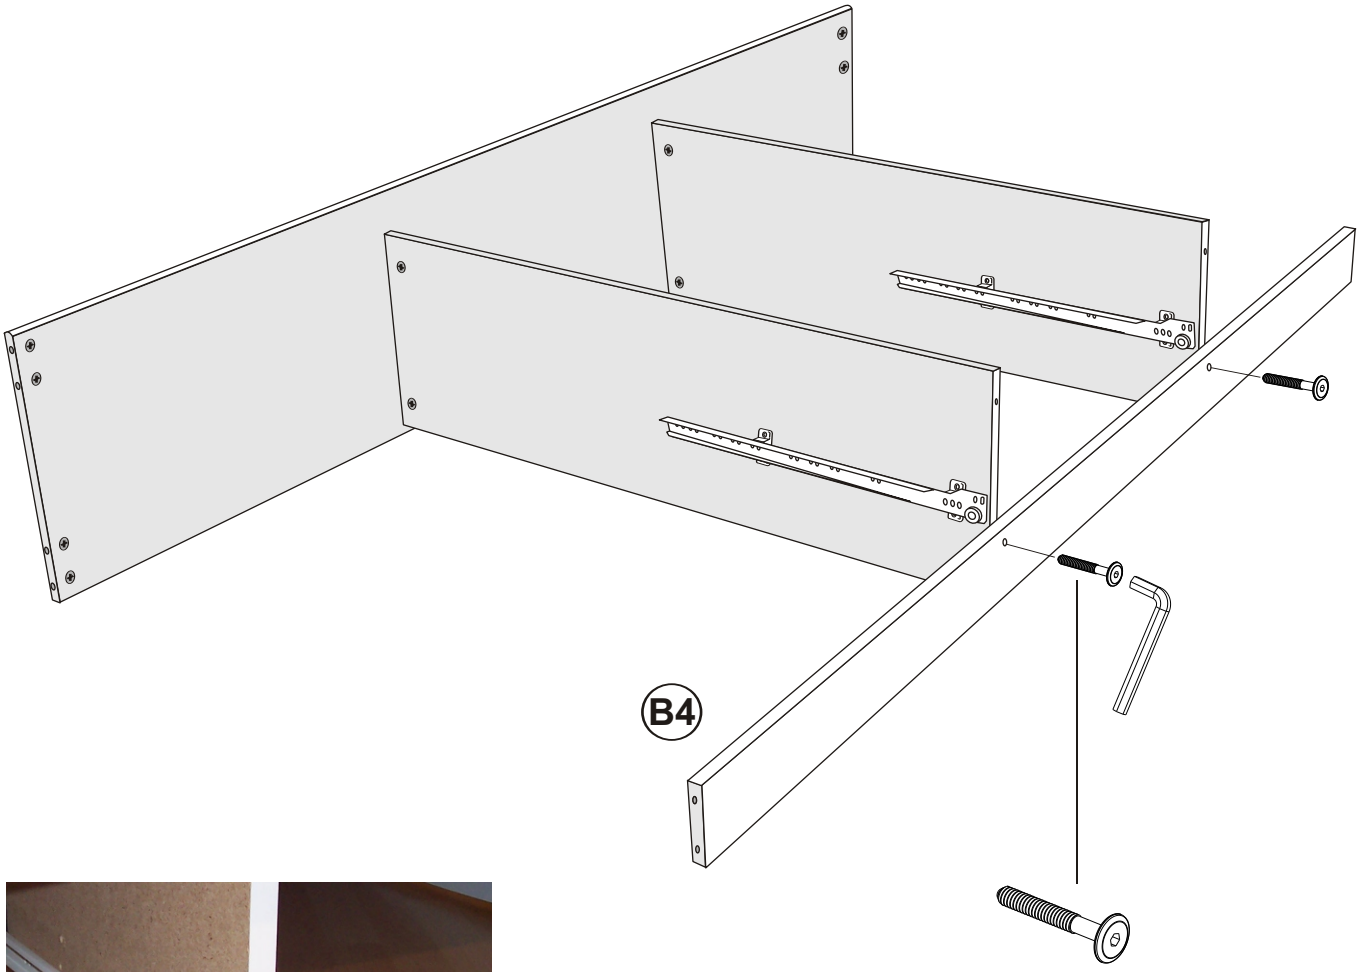

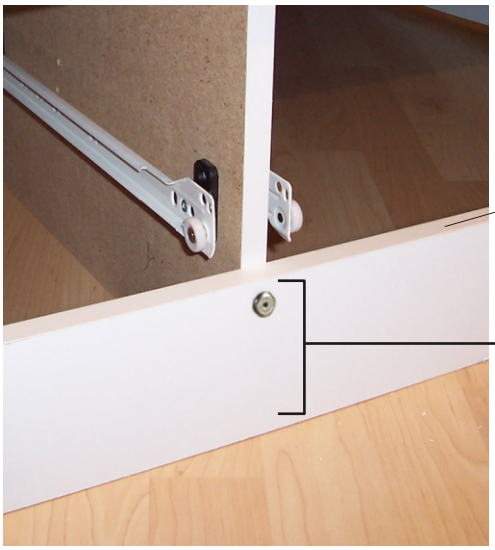


IMPORTANT


Identifying the Lower Stabilizer
The screw hole is at the top, close to the finished edge

STEP 9 Estimated Time: 5 minutes

Using JCB connectors, attach the upper stabilizer (B5) to both inner gables.

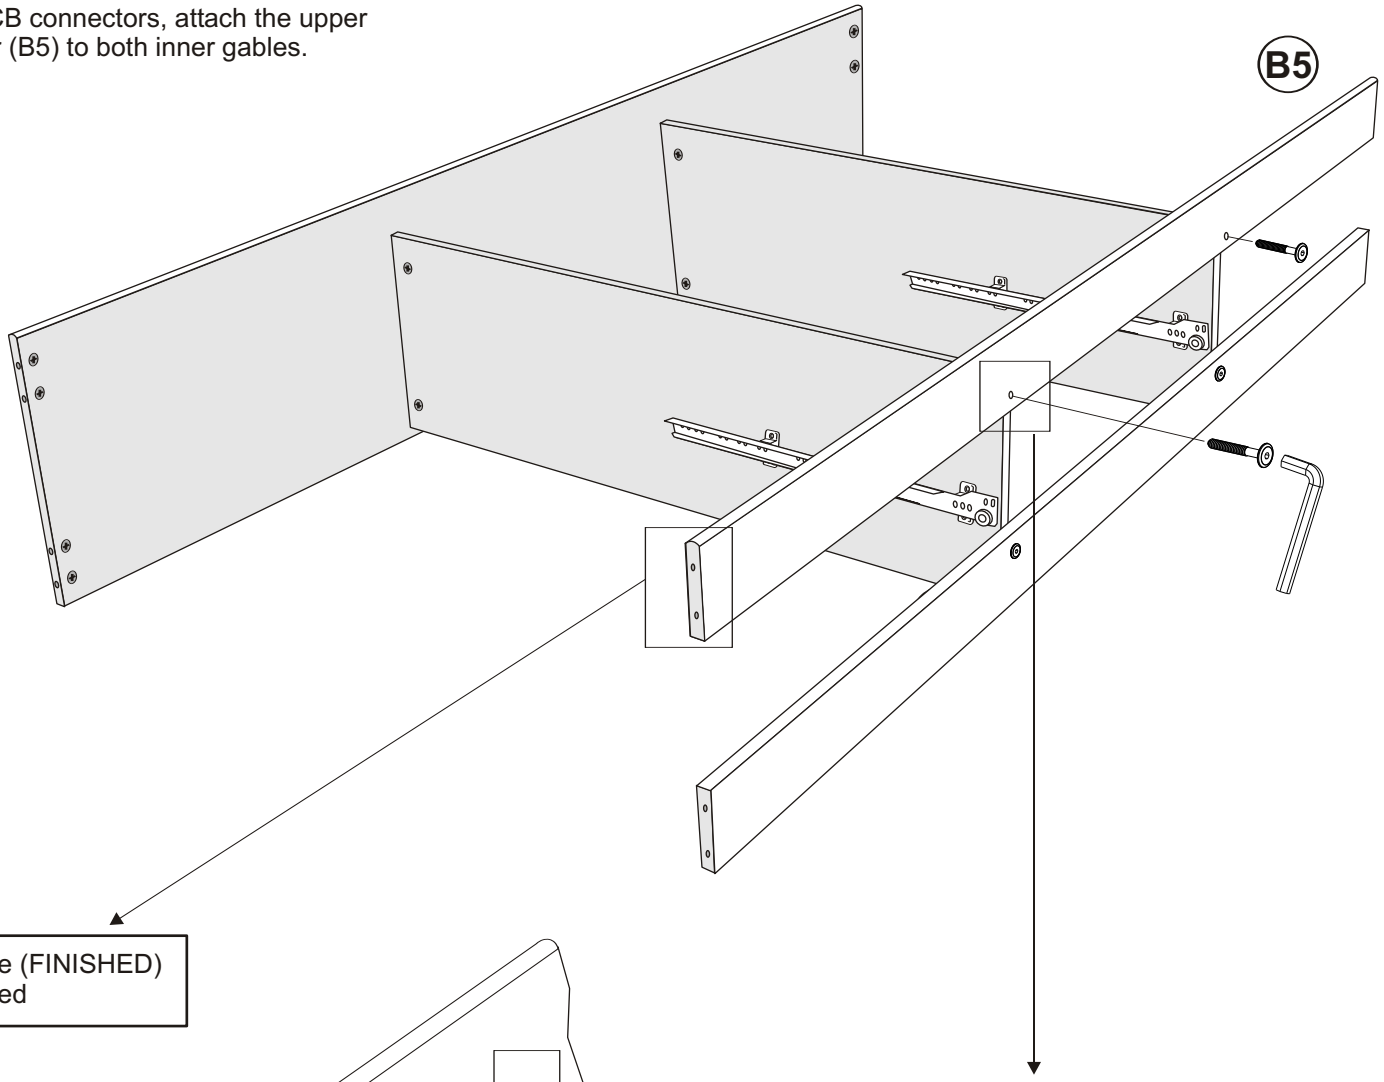

Top edge (FINISHED) is rounded

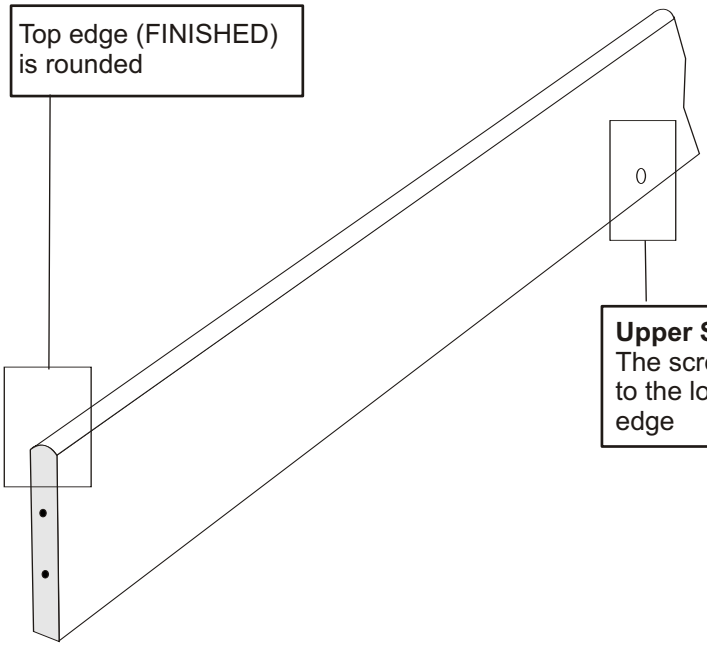


Upper Stabilizer
The screw hole is closest to the lower, unfinished edge



STEP 10 Estimated Time: 10 minutes

Attach one outer gable to stabilizers with JCB connectors

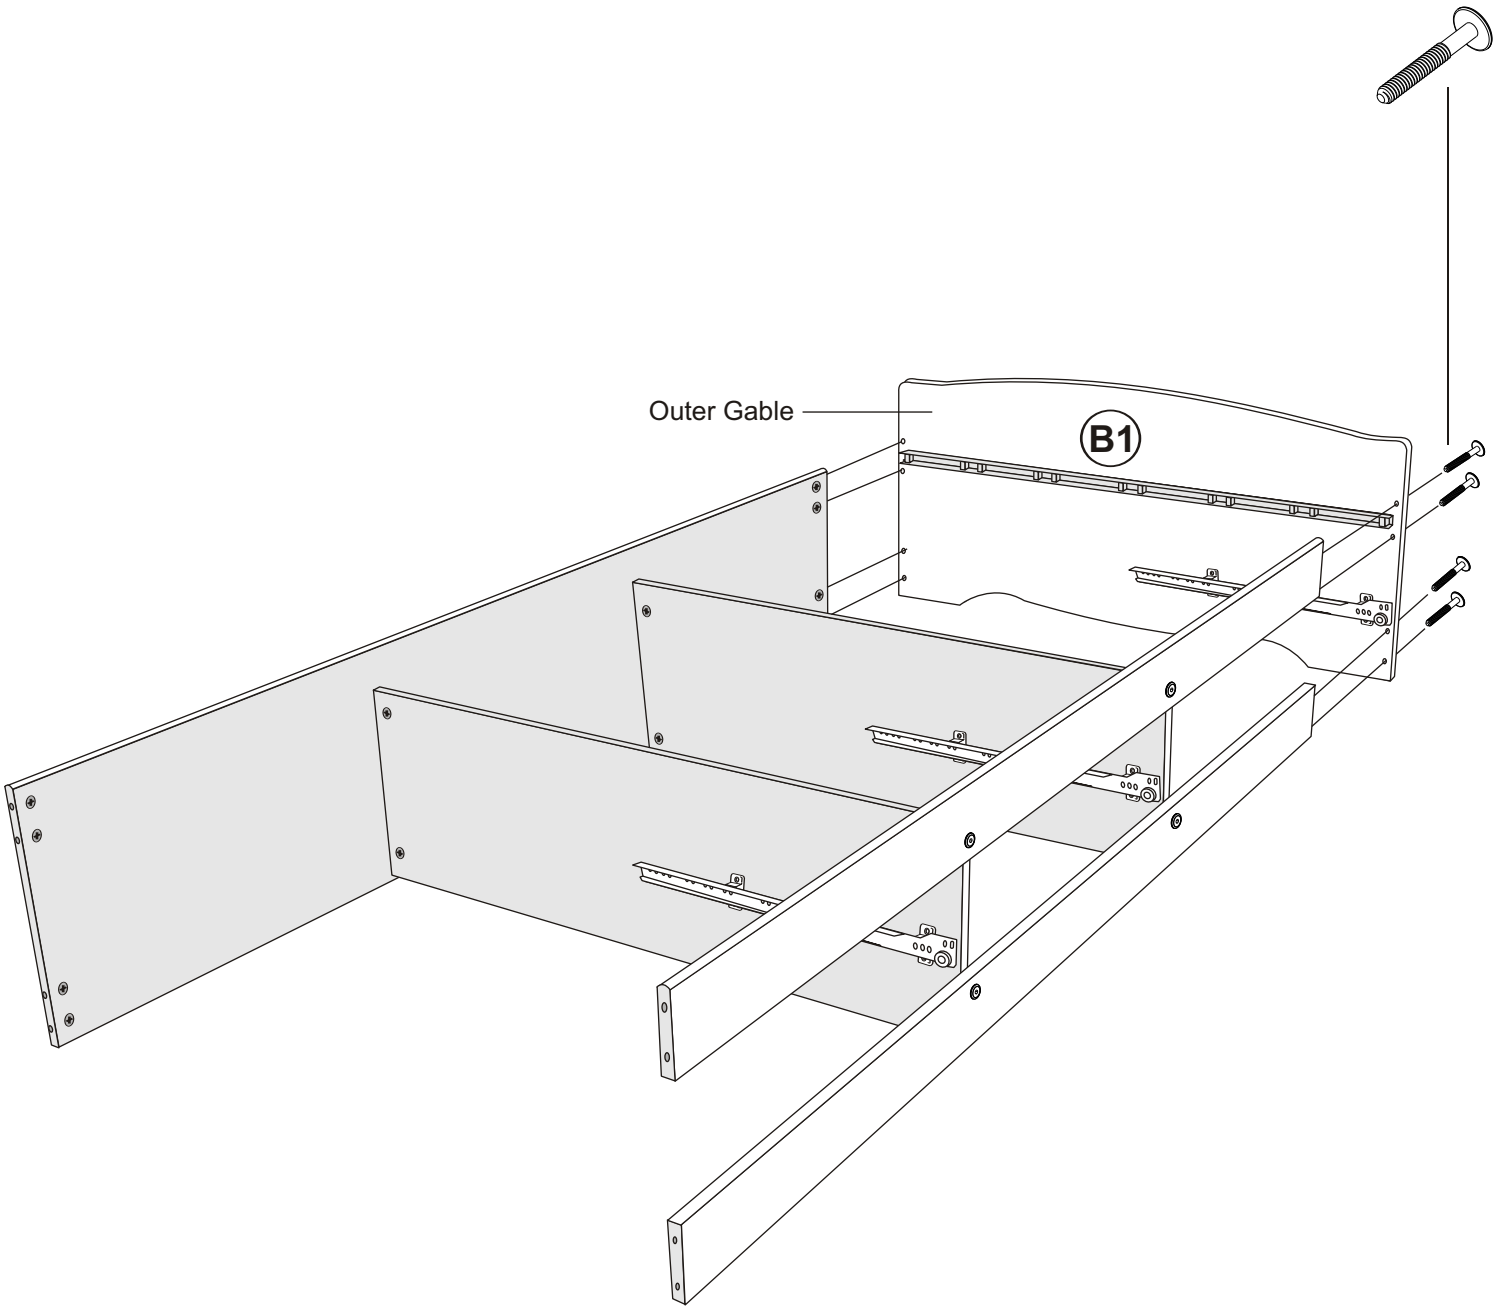



STEP 11 Estimated Time: 5 minutes

11a Unfold the wooden slats and spread them out across the inner stabilizers

11b Slide the slats into the metal U-channel (B7) on the outer gable

On each end of the u-channel there is a metal divider. One slat on each side should be positioned between this divider and the end of the U-channel

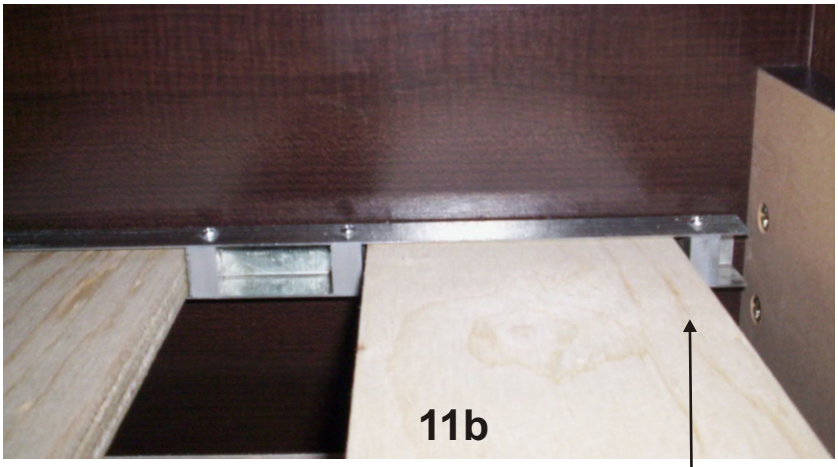

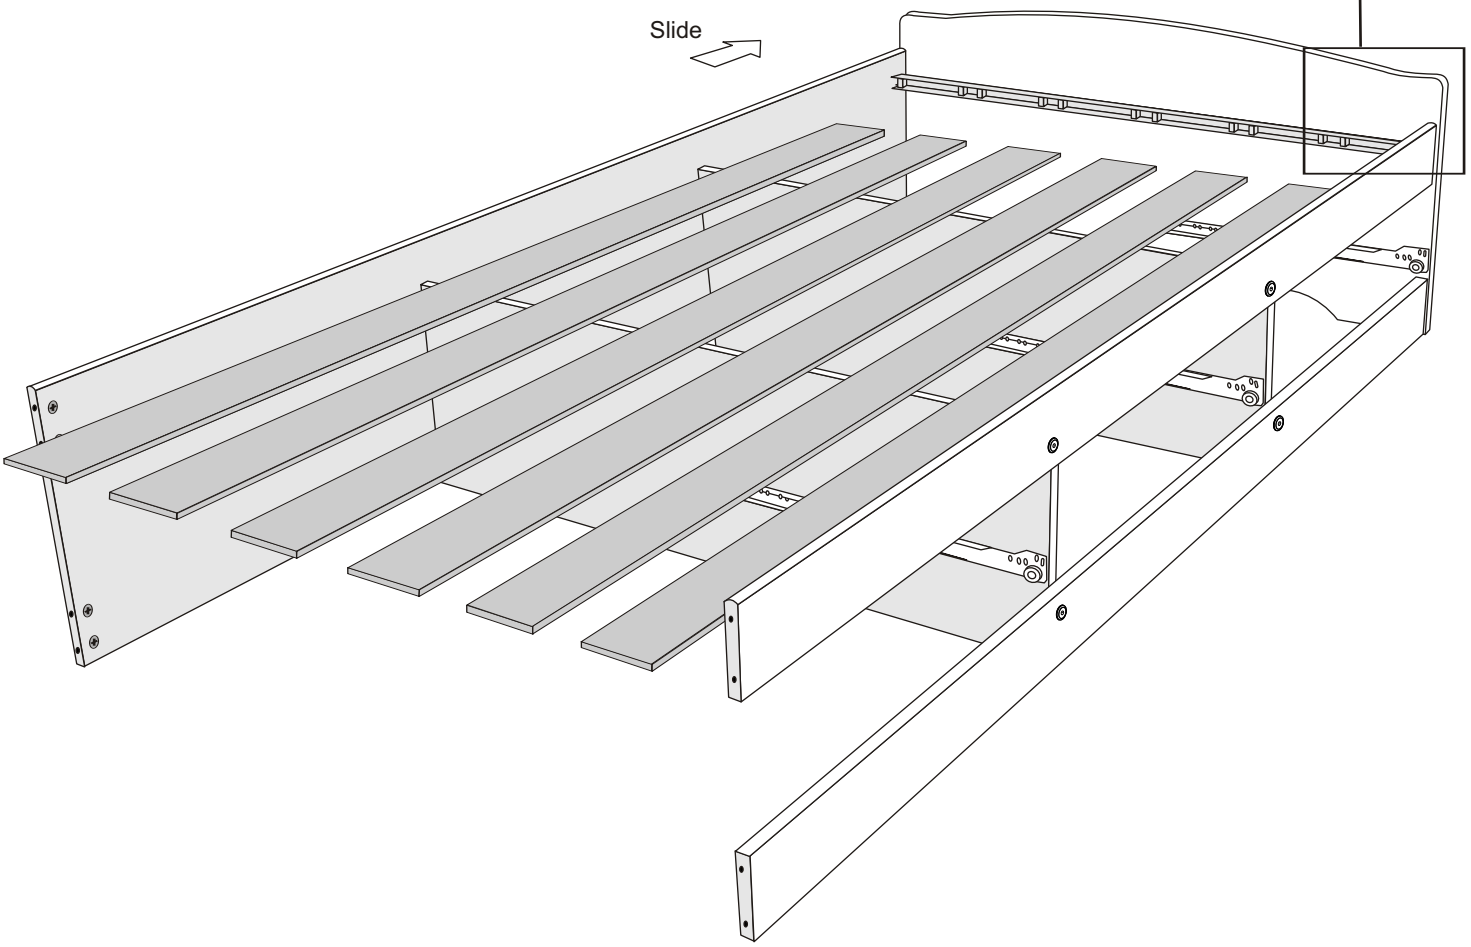


STEP 12 Estimated Time: 10 minutes

Attach second outer gable to stabilizers with JCB connectors

12a Secure the gable in place with connectors, but don't fully tighten

12b Ensure the slats are set inside the U-channel and that they haven't pulled out of the first outer gable.

12c Firmly tighten the connectors

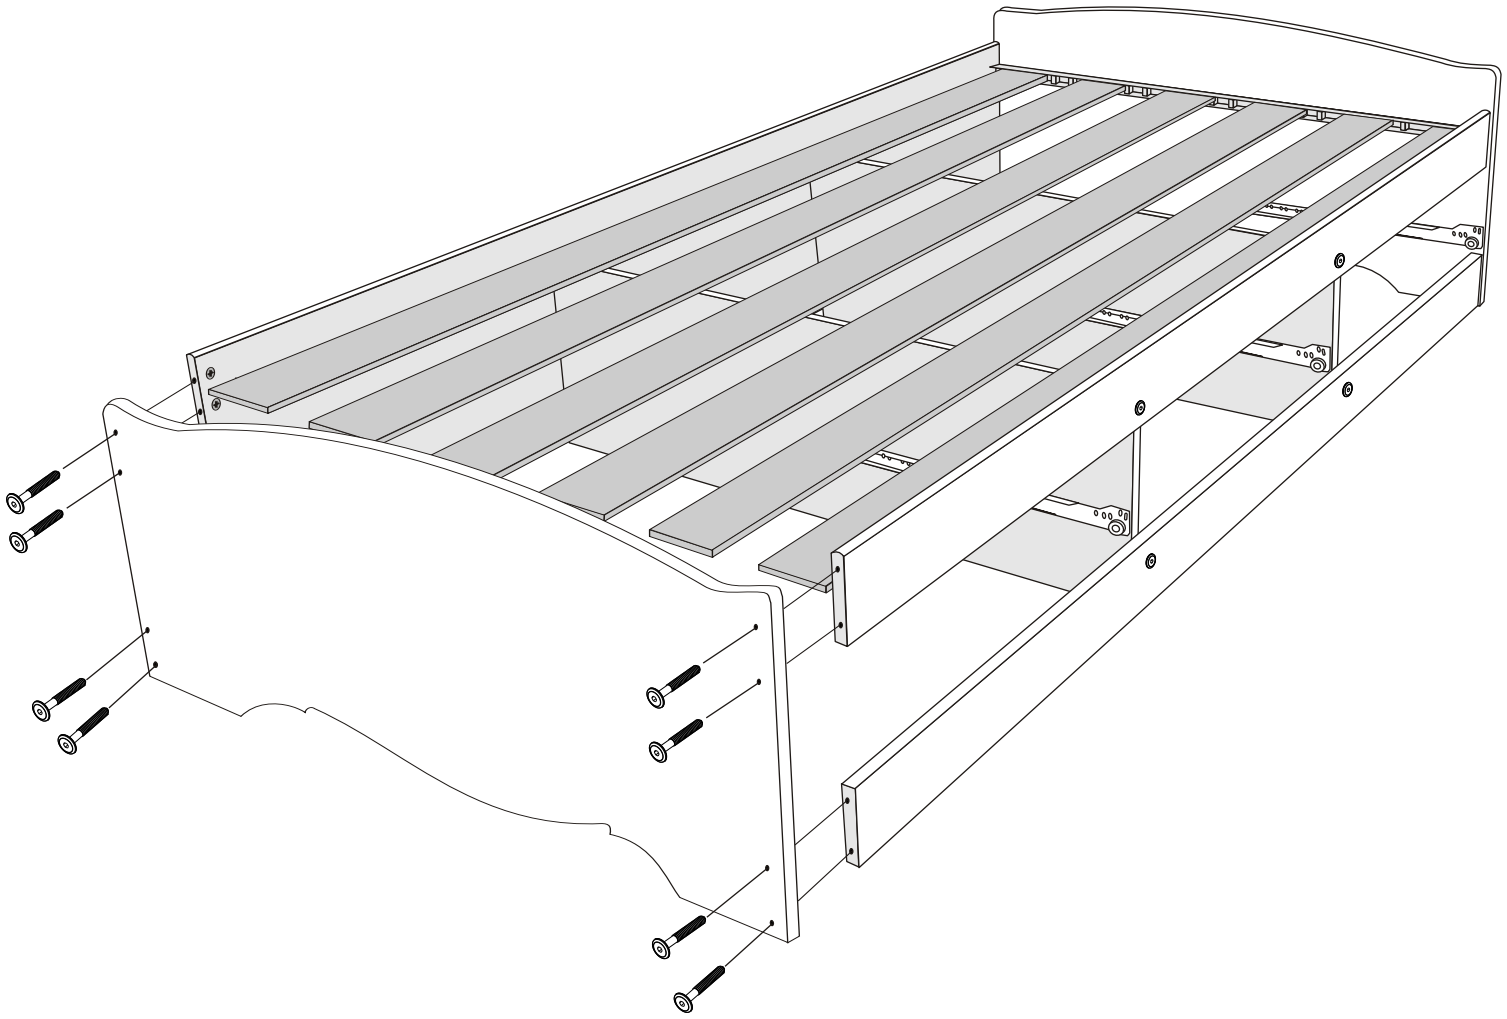

Drawer Parts Identification

D1

Drawer Front (3)
black
cherry
espresso
maple
white

D2

Left Drawer Side (3)
Plywood

D3


Right Drawer Side (3)
Plywood

D4

Drawer Back (3)
unfinished


D5

Drawer Bottom (3)
unfinished

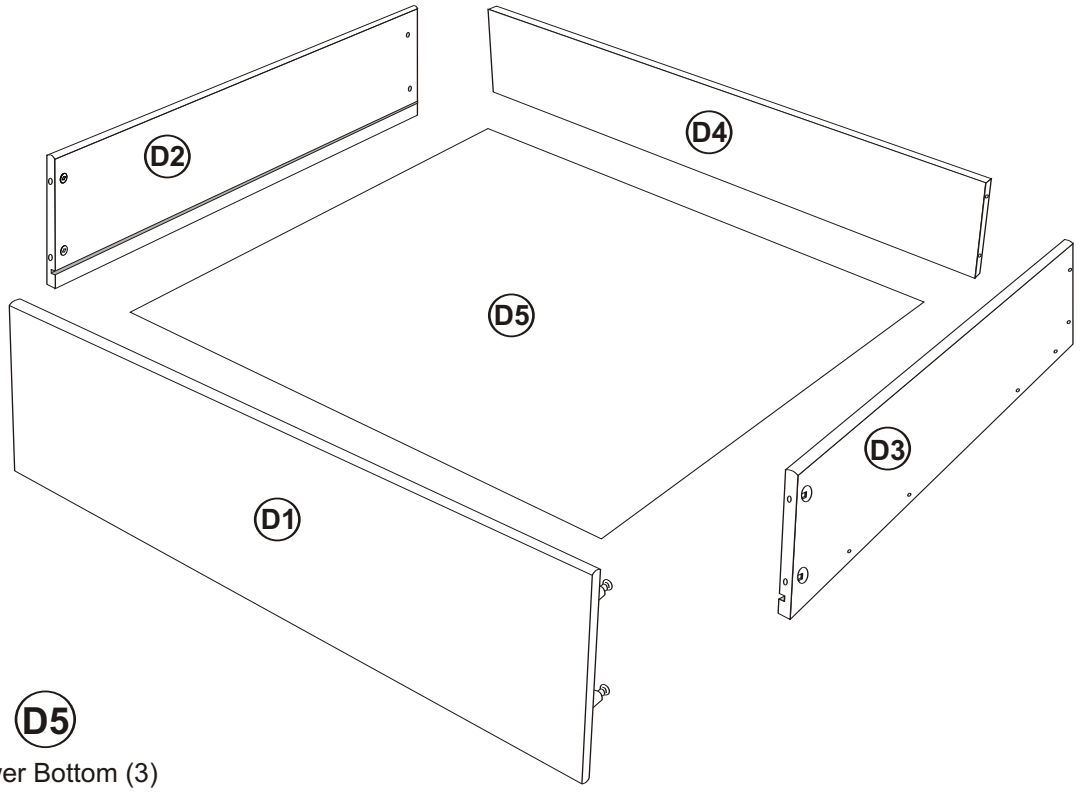


STEP 13 Estimated Time: 5 minutes PER DRAWER


13a Insert cams into drawer sides

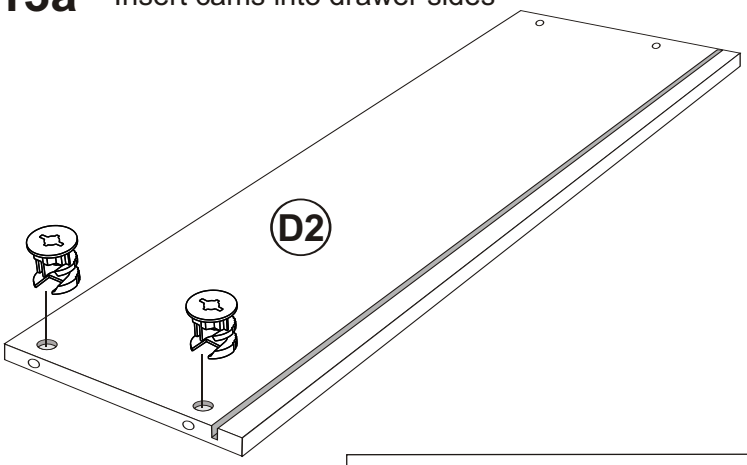


Left Drawer Side

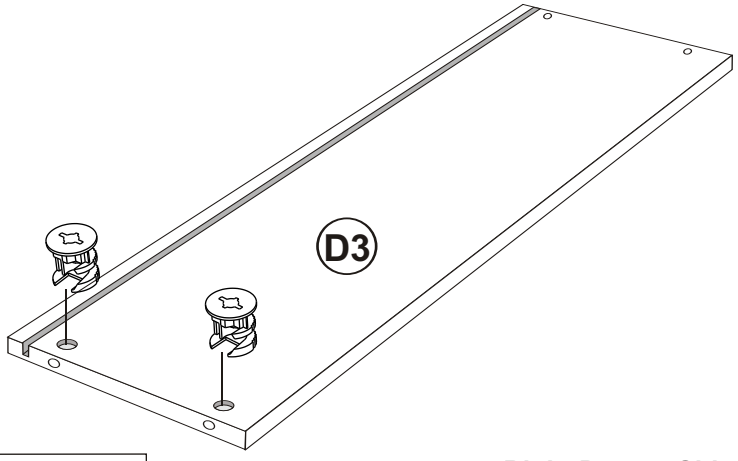


Right Drawer Side

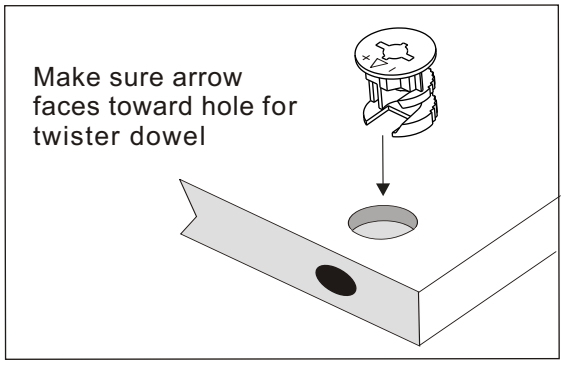


13b Screw green twister dowels into drawer fronts

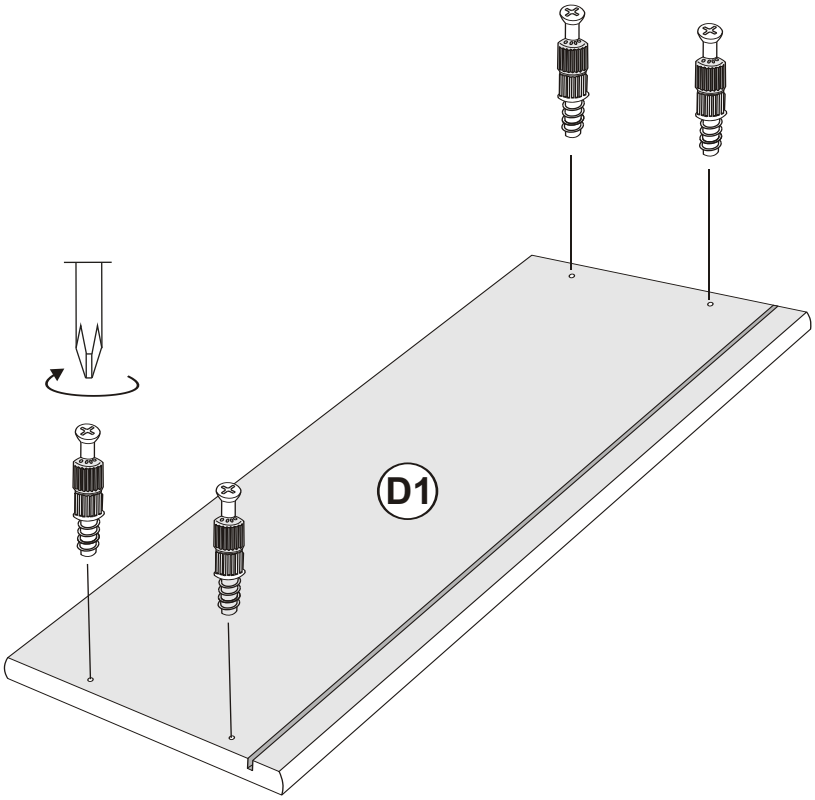


13c Attach drawer sides to drawer back with 1½” Hi Lo screws

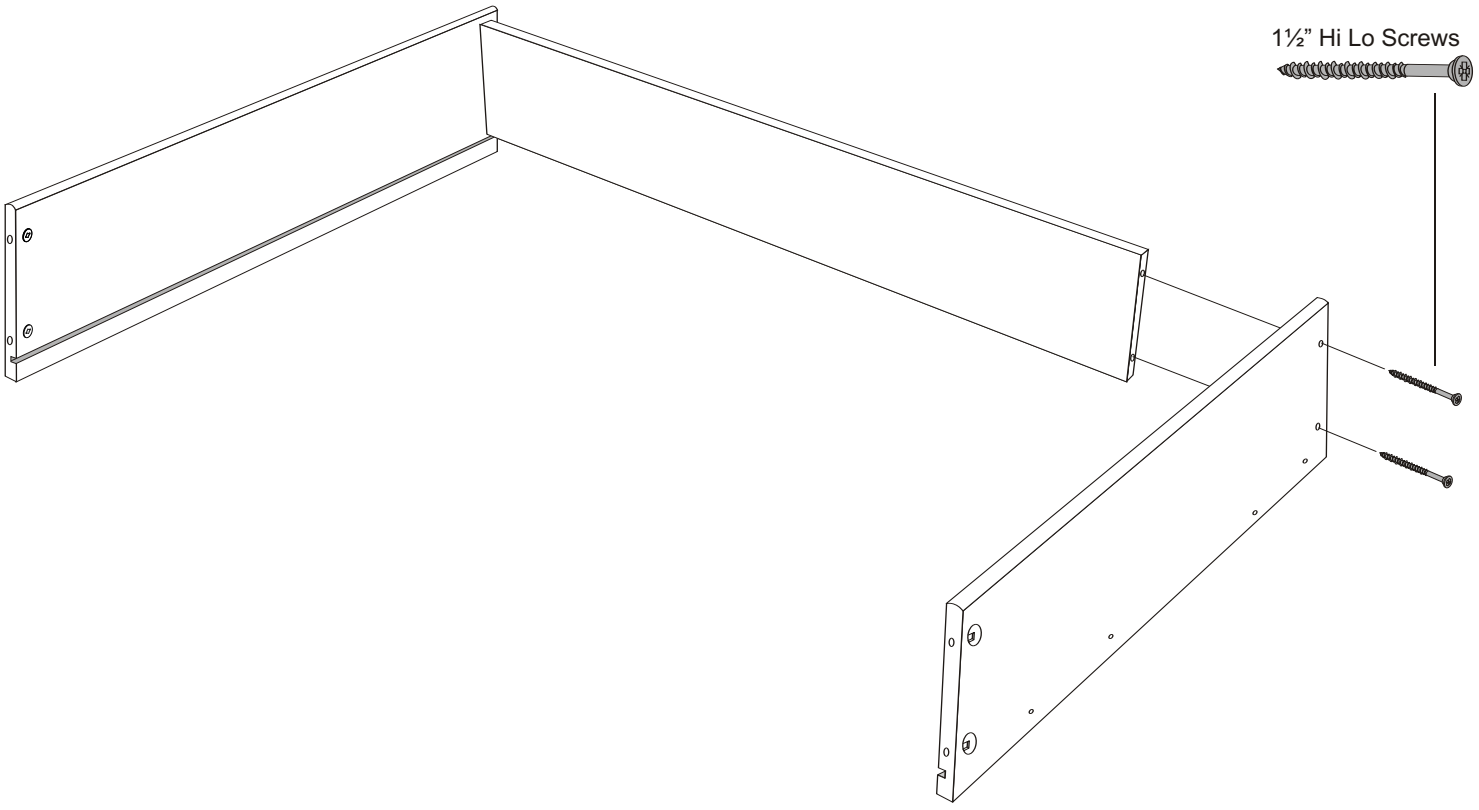

13d Attach drawer front and tighten cams using a flat head screwdriver

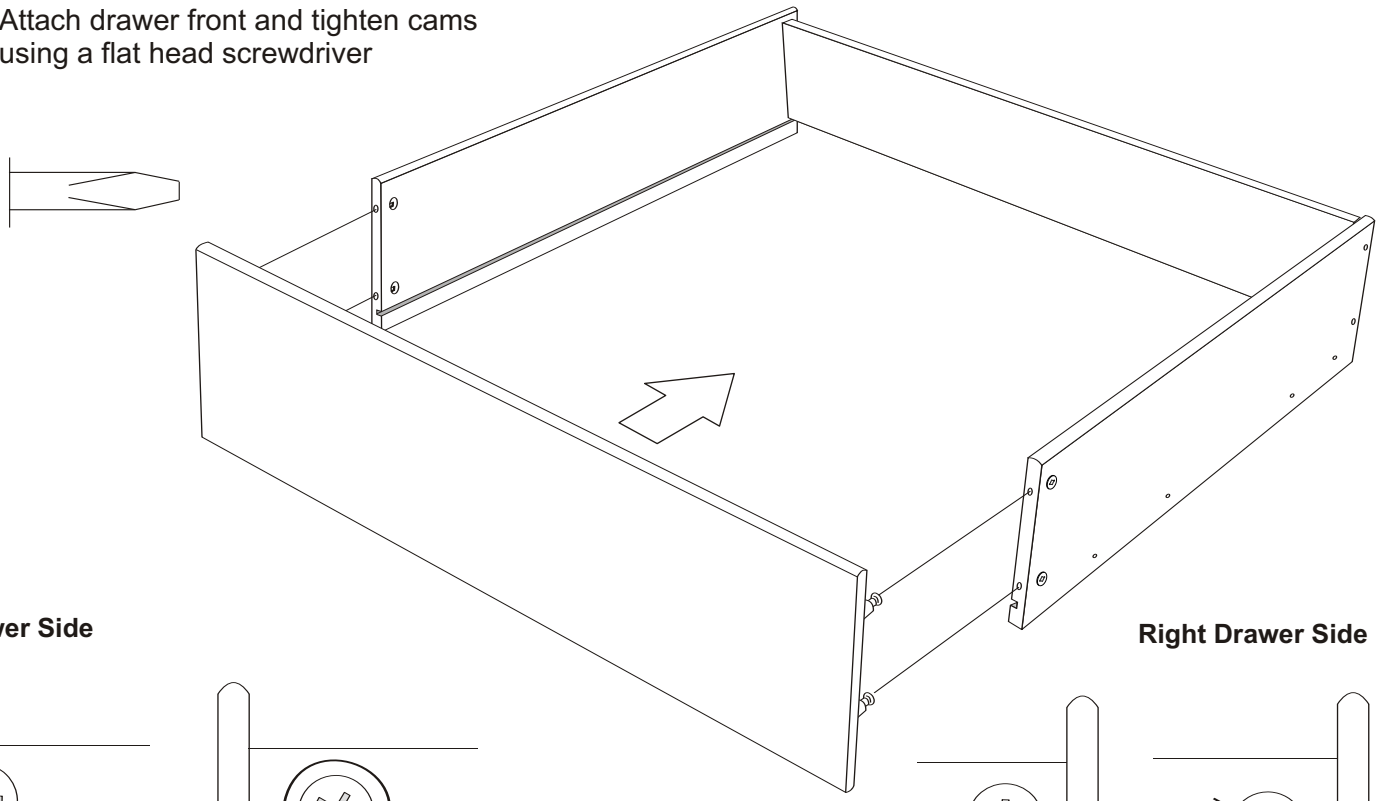


Left Drawer Side

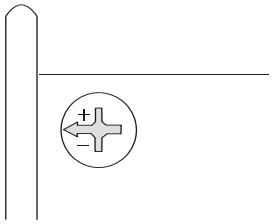


Unlocked

Locked
Turn 210°

Right Drawer Side

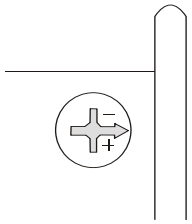


Unlocked

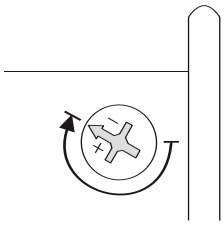


Locked
Turn 210°

13e Turn drawer upside down and slide drawer bottom into grooves

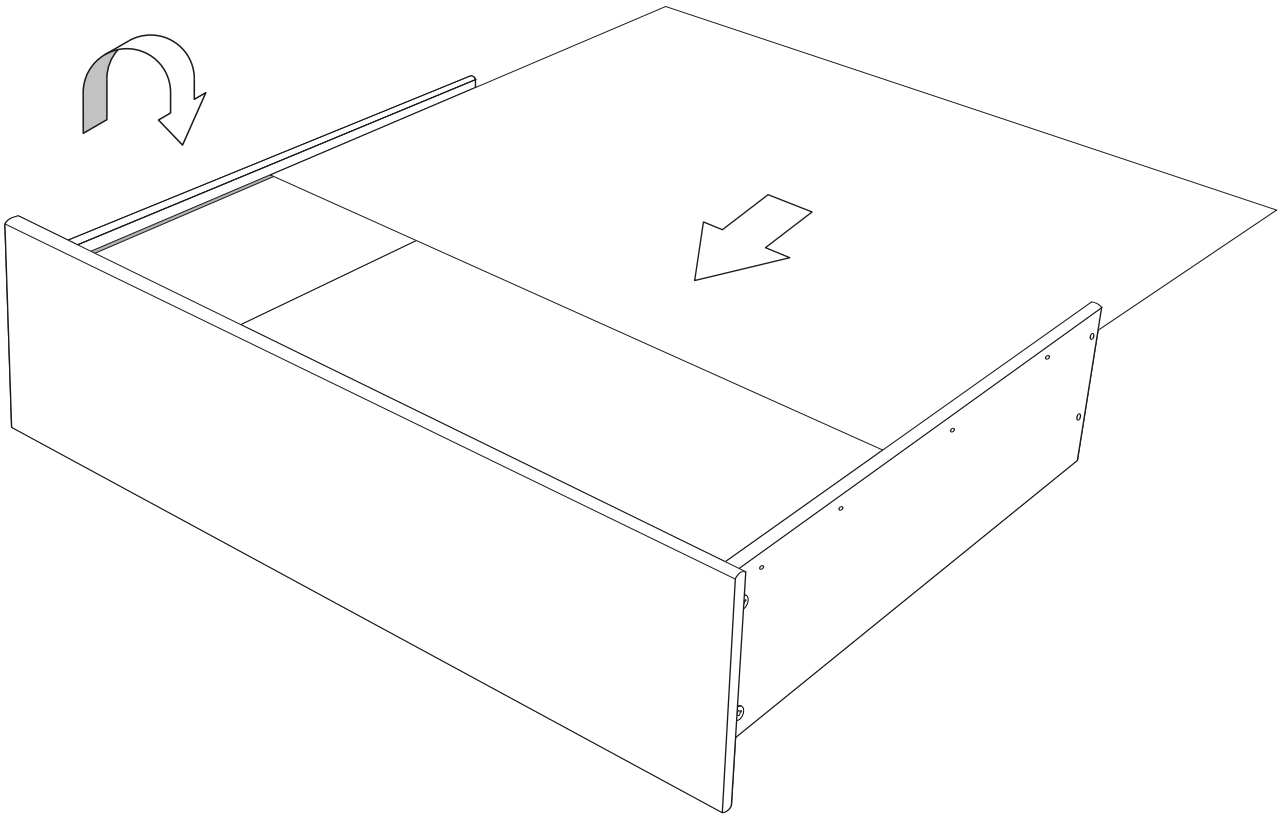

13f


Secure the drawer bottom to the drawer back with nails

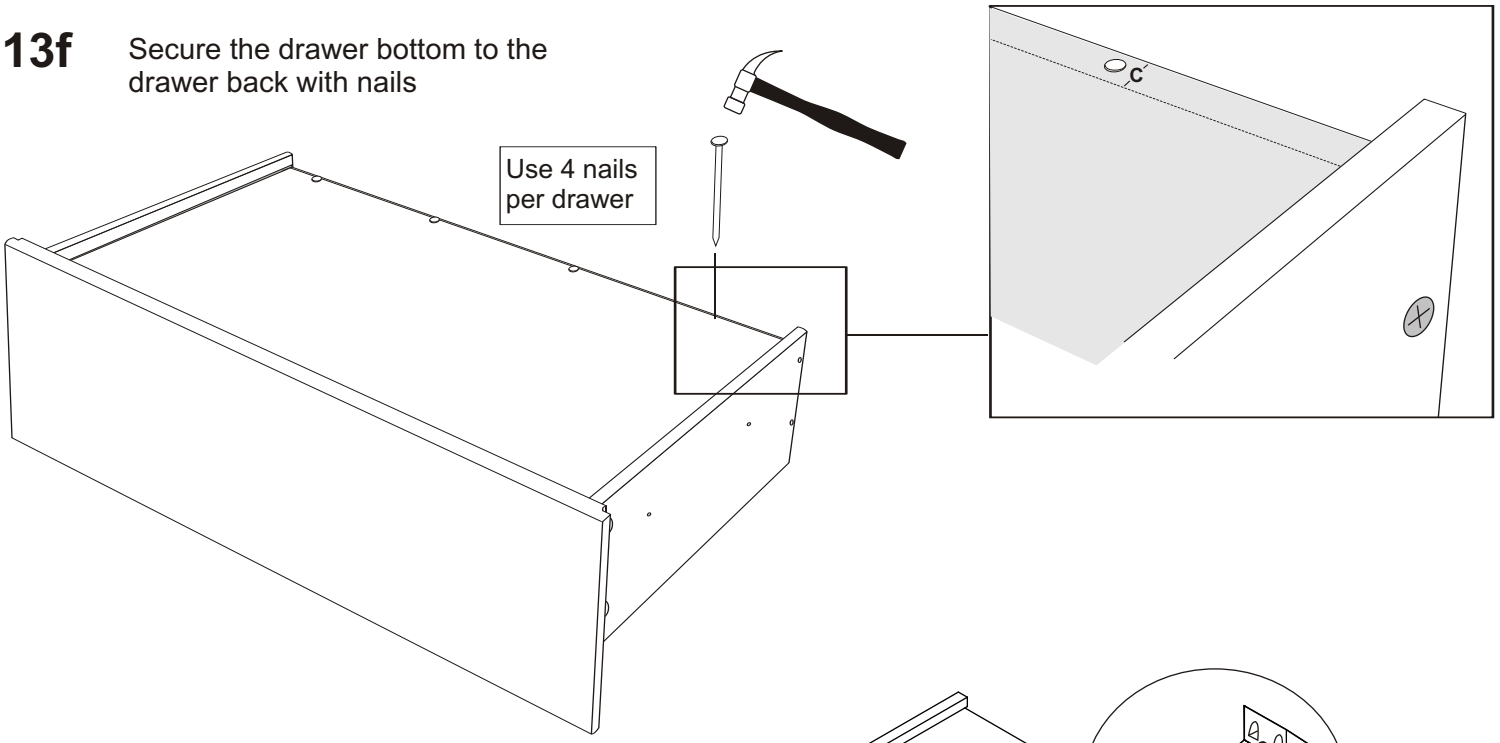


13g Insert the Drawer Bottom Stabilizer

Position the Stabilizer in the center of the drawer and insert it into the groove on the drawer front. This is the same groove that you inserted the drawer bottom into.


Then, tighten screw until it is flush

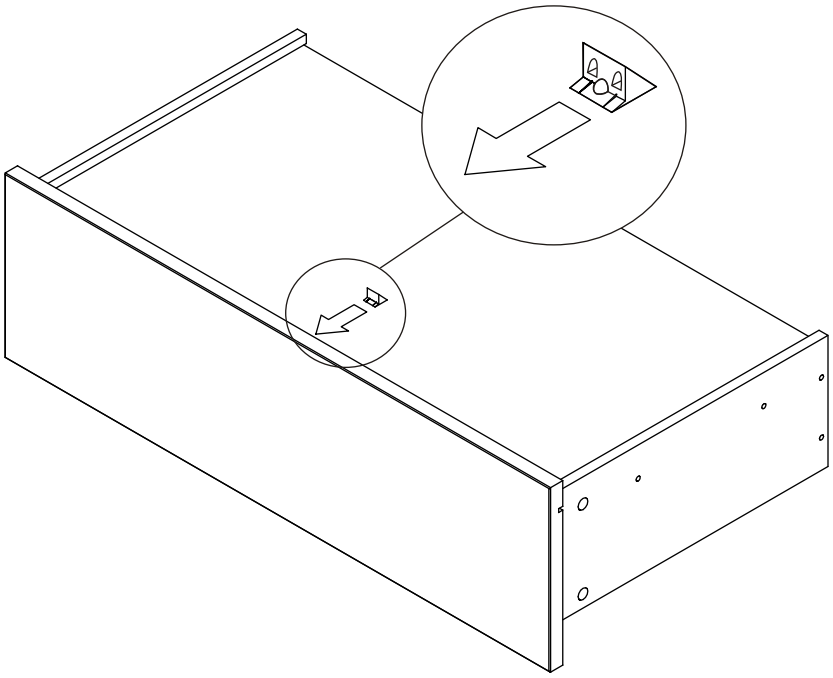

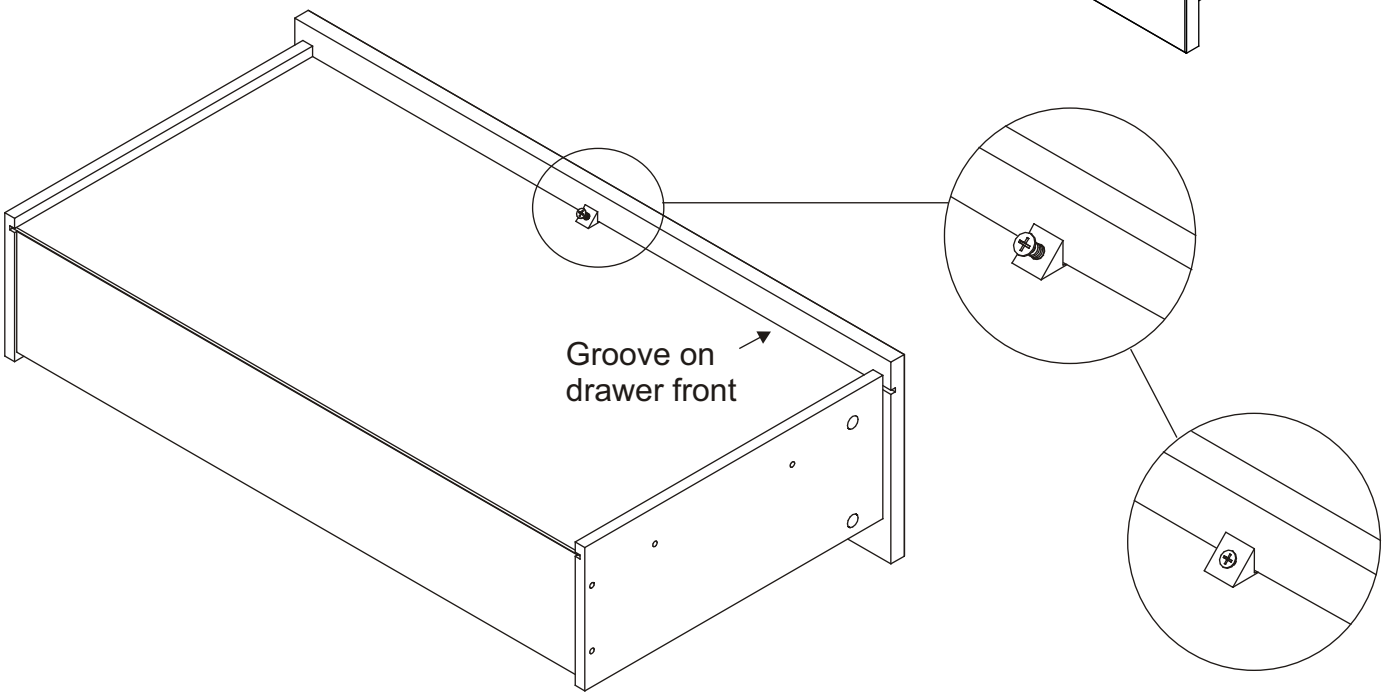

13h Attach drawer slides to left and right drawer sides using drawer slide screws


Right Drawer Side

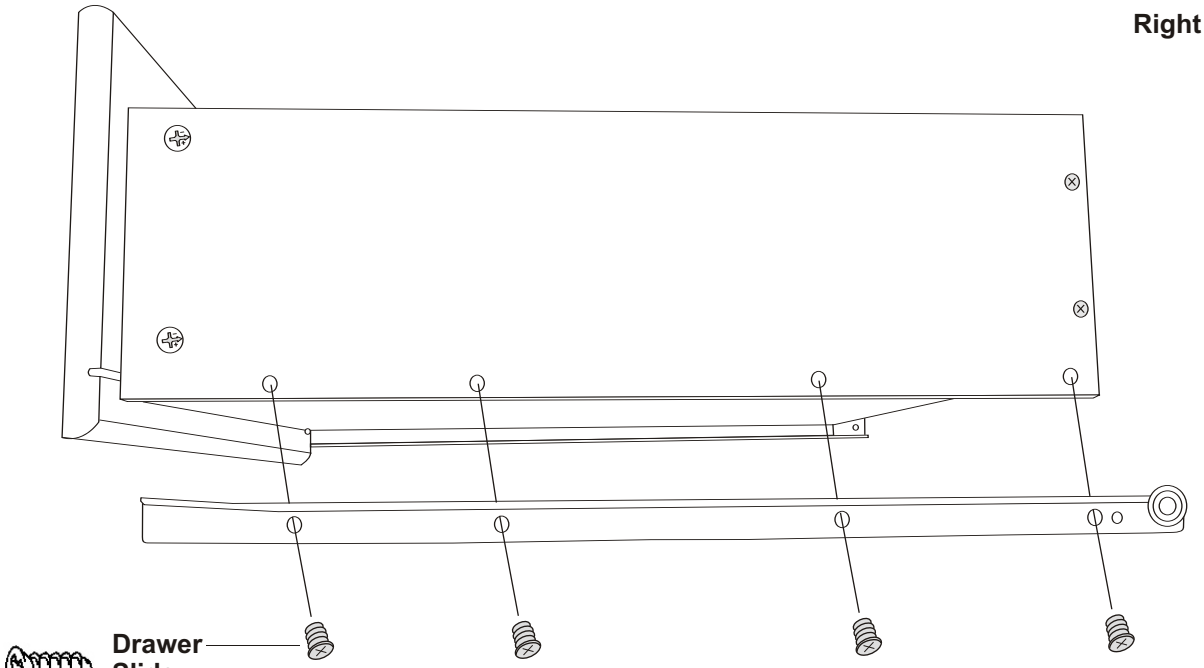



Drawer Slide Screws

Left Drawer Side

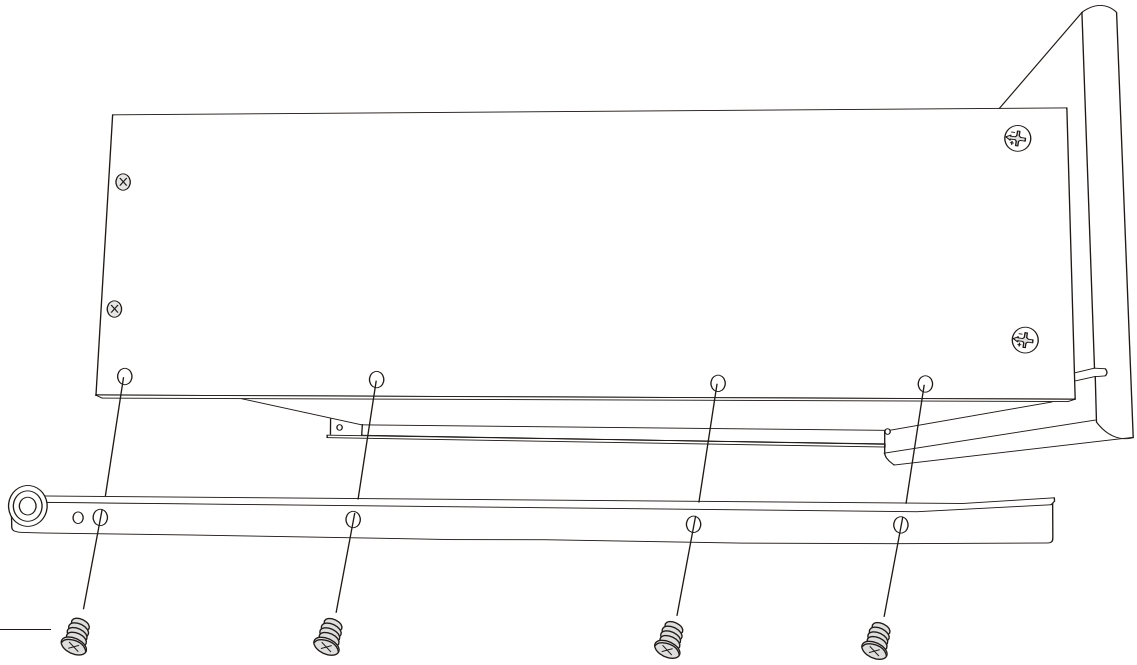




Drawer Slide Screws

STEP 14 Estimated Time: 2 minutes

Insert drawers

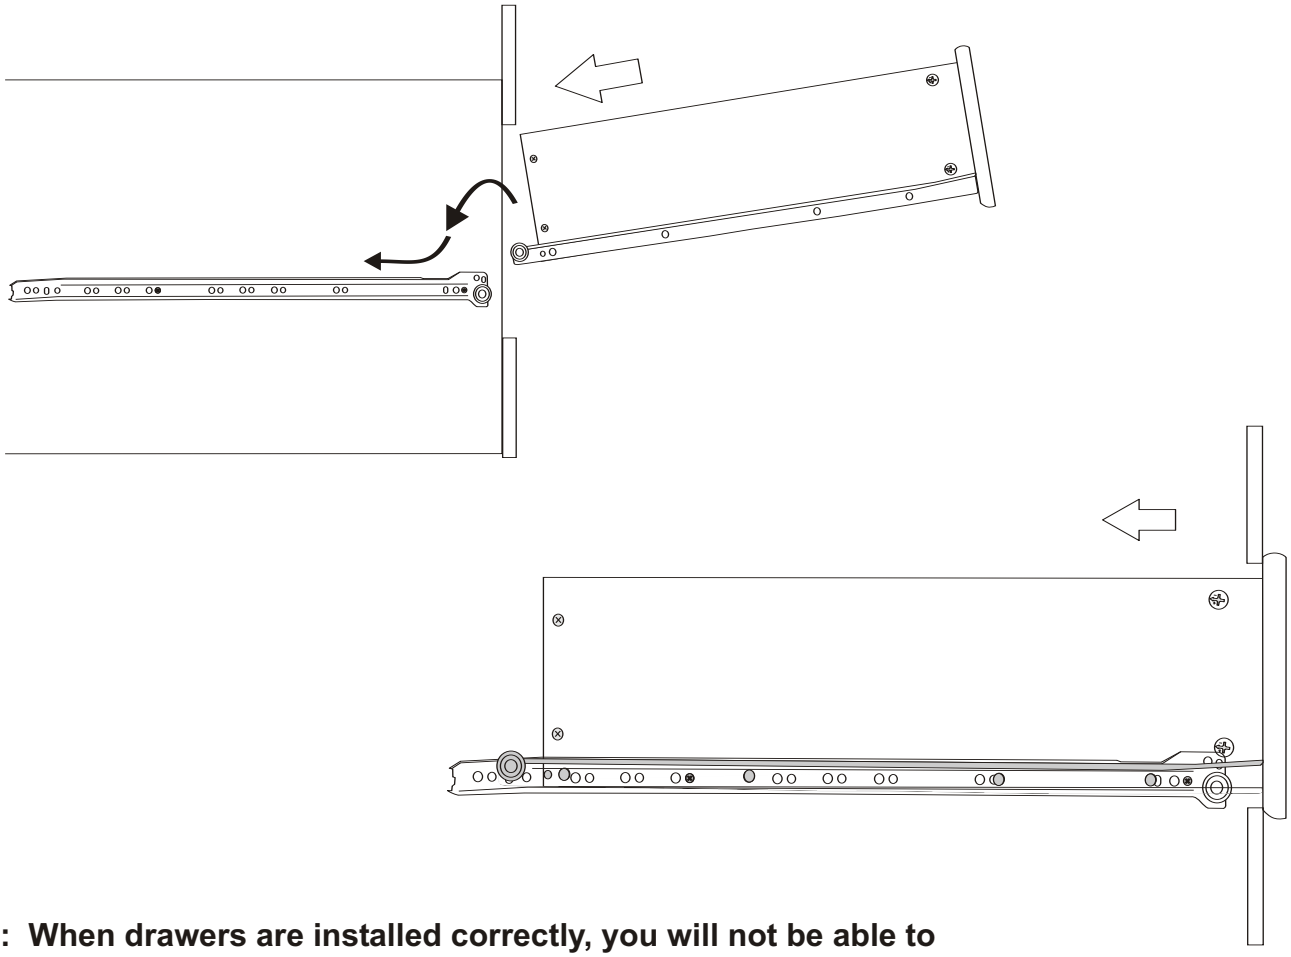

Note: When drawers are installed correctly, you will not be able to remove them without first lifting up the drawer front.

Furniture Care Q&A

Q. **How do I clean your products?**
A. We recommend that you simply wipe your products with a clean, damp cloth and then dry immediately with another clean cloth to maximize the life span and look of your unit

Q. **Can I paint or varnish your products?**
A. Our products are made from durable composite woods with a laminate finish and therefore should not be painted or varnished.

Q. **Are they waterproof?**
A. NO. If liquid is spilled and quickly wiped up, no damage will be done to your product. However, continuous exposure to liquids or high humidity may cause damage to the board.