



INSTALLATION


Product Manual

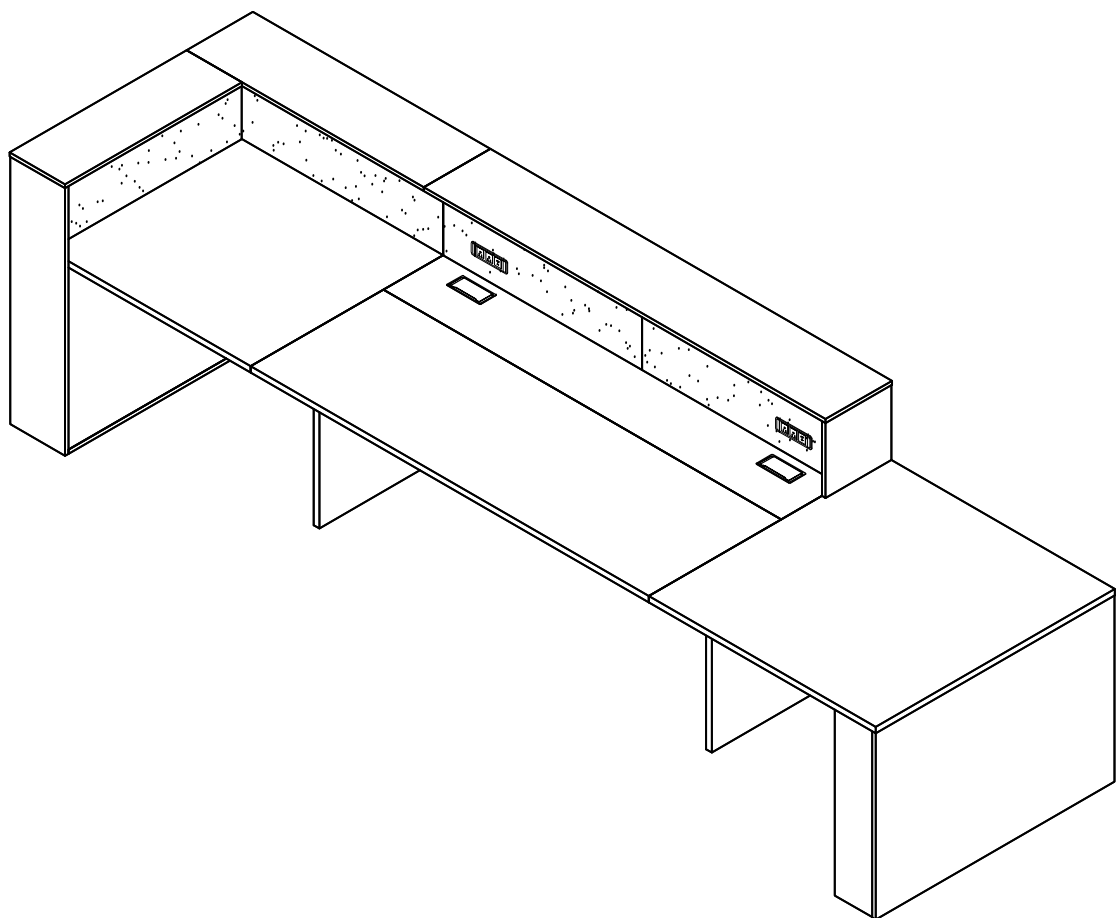

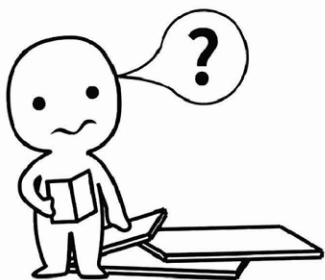


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

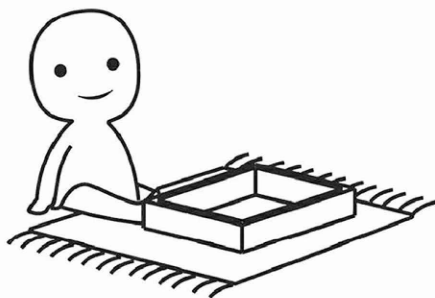




AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

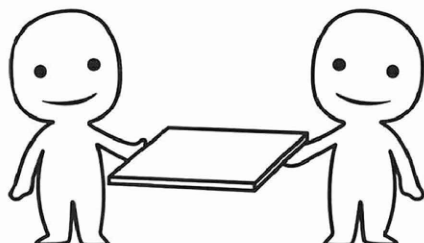

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

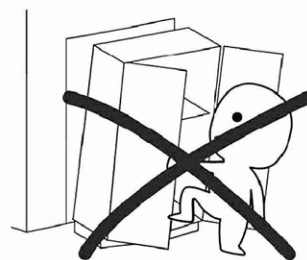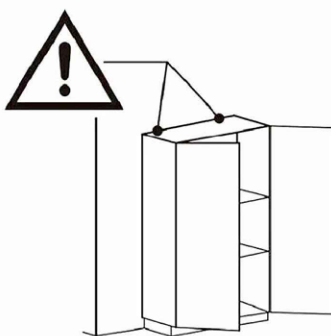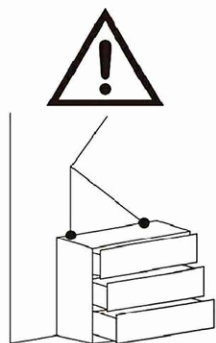

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

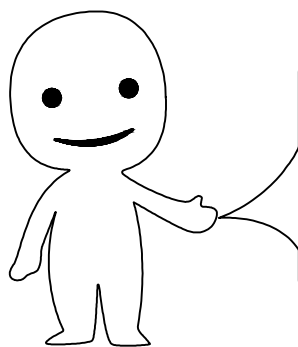


Please prepare the following tools



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A×160




B×160



C×24



D×85



M4×30

E×160



F×2




G×4




M4×12


H×2

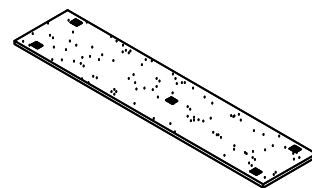


I×2

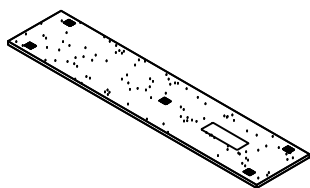





















J×2

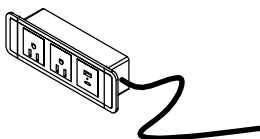















K×2



Part List -1

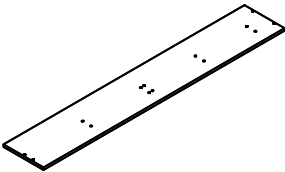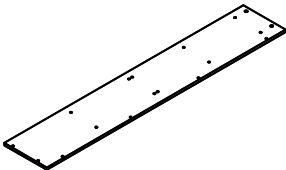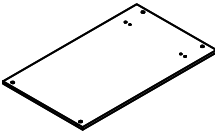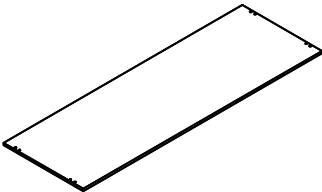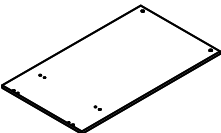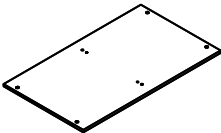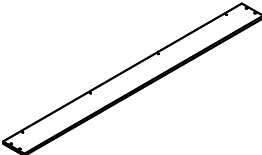①×1 	②×1 	③×1 	④×1 
⑤×1 	⑥×9 	⑦×2 	⑧×1 
⑨×1 	⑩×1 	⑪×1 	⑫×1 
⑬×1 	⑭×1 	⑮×1 	⑯×1 
⑰×1 	⑱×1 	⑲×1 	⑳×1 

Part List -2

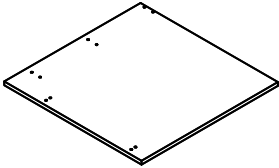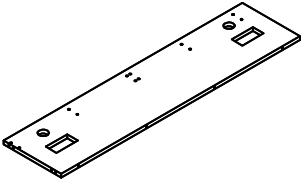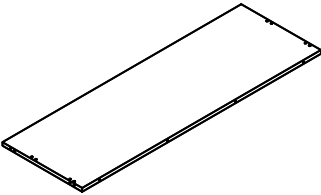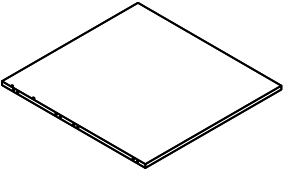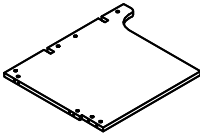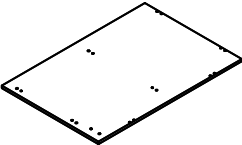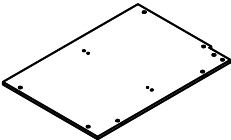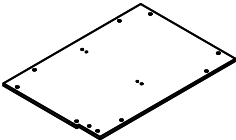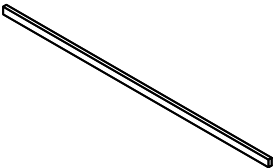②1×1 	②2×1 	②3×1 	②4×1 
②5×1 	②6×1 	②7×2 	②8×1 
②9×1 	③0×1 	③1×9 	③2×2 
③3×1 	③4×1 	③5×1 	③6×2 
③7×1 			

01



A×2





C×2



E×2




Insert the wooden dowels (C) halfway into Panel ③①. Insert the plastic inserts (E) into the panel holes, and then use a screwdriver to screw the bolts (A) into Panel ③①. Be careful not to use the wrong holes. Use the cam-lock holes in Panel ②⑨ to identify the correct holes.

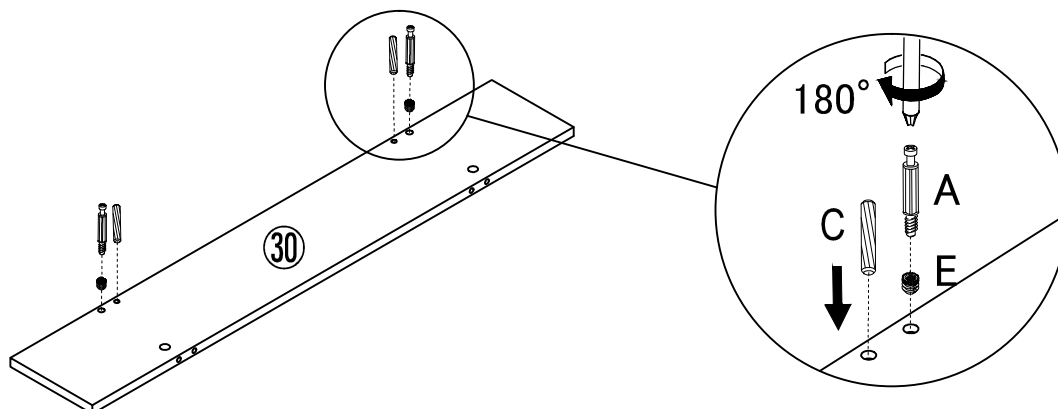
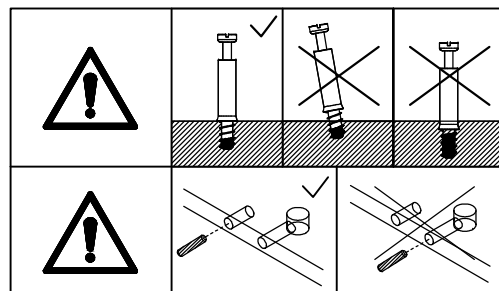


02

B×2

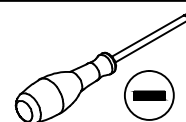

Align the holes in the two Panels ③① with the holes in Panel ②⑨. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

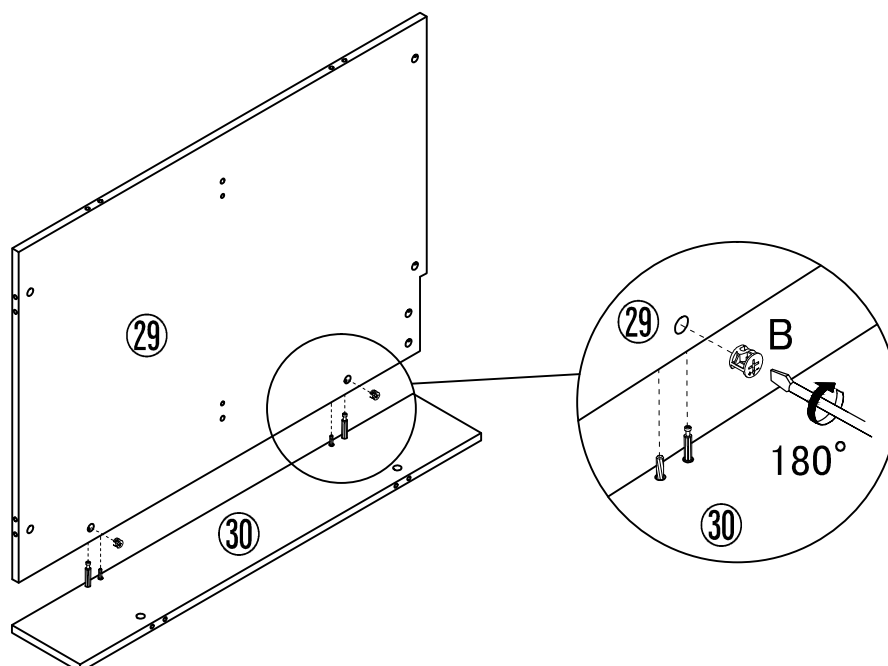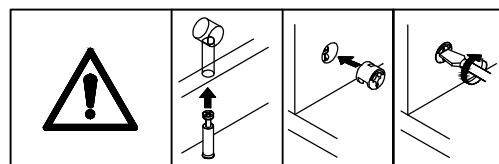

03



A×2






C×2



E×2




Insert the wooden dowels (C) halfway into Panel ②⑨. Insert the plastic inserts (E) into the panel holes, and then use a screwdriver to screw the bolts (A) into Panel ②⑨. Be careful not to use the wrong holes. Use the cam-lock holes in Panel ③② to identify the correct holes.

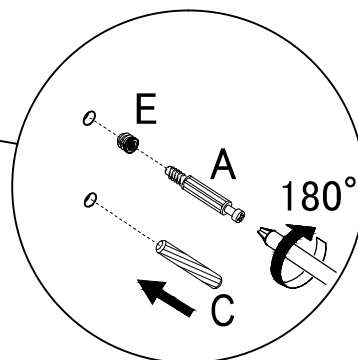
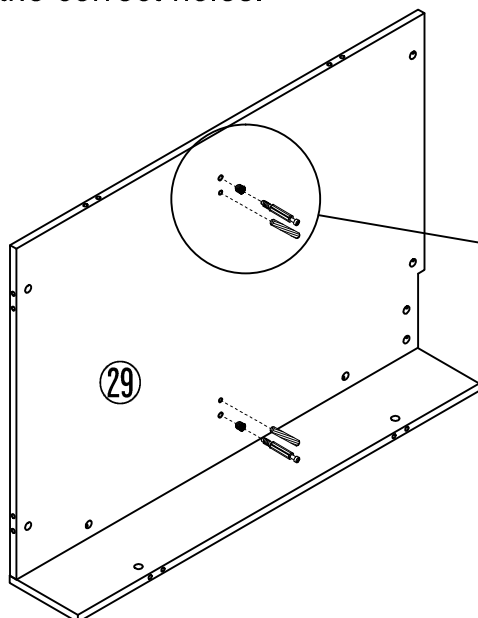
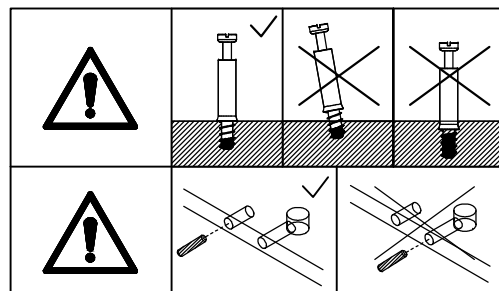


04

B×2

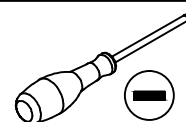

Align the holes in the two Panels ②⑨ with the holes in Panel ③②. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

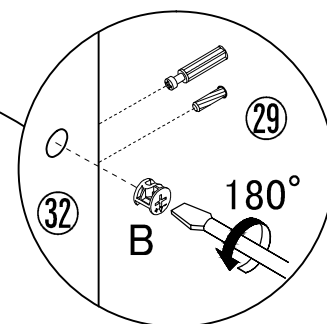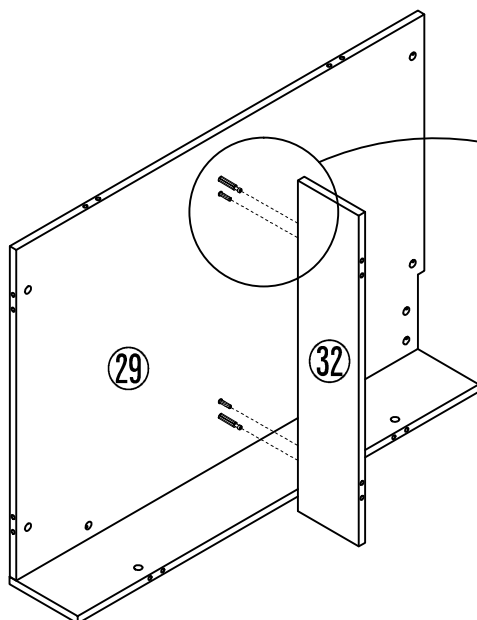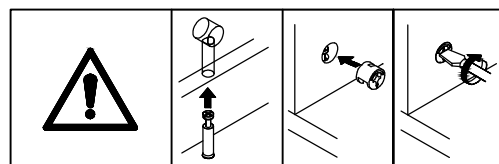

05



A×2





C×2



E×2




Insert the wooden dowels (C) halfway into Panel ③①. Insert the plastic inserts (E) into the panel holes, and then use a screwdriver to screw the bolts (A) into Panel ③①. Be careful not to use the wrong holes. Use the cam-lock holes in Panel ②⑨ to identify the correct holes.

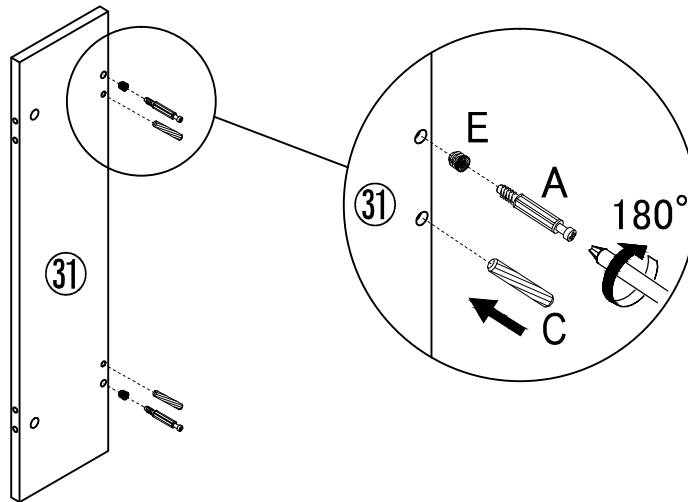
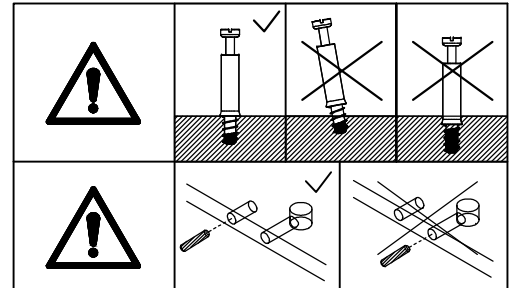


06

B×2


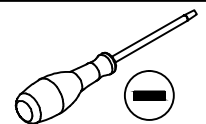


Align the holes in the two Panels ②⑨ with the holes in Panel ③①. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

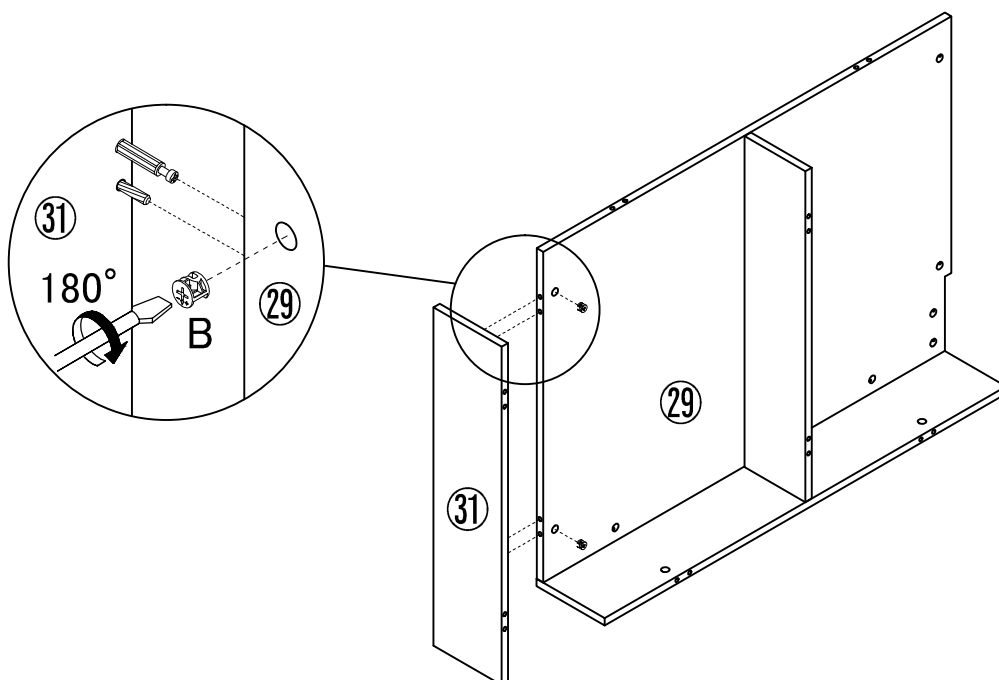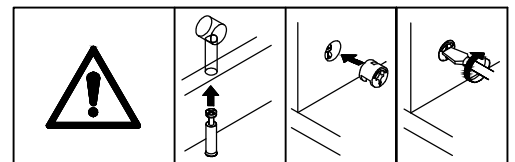


07

D×2



Secure Panels ⑮ and ⑲ using screws (D).

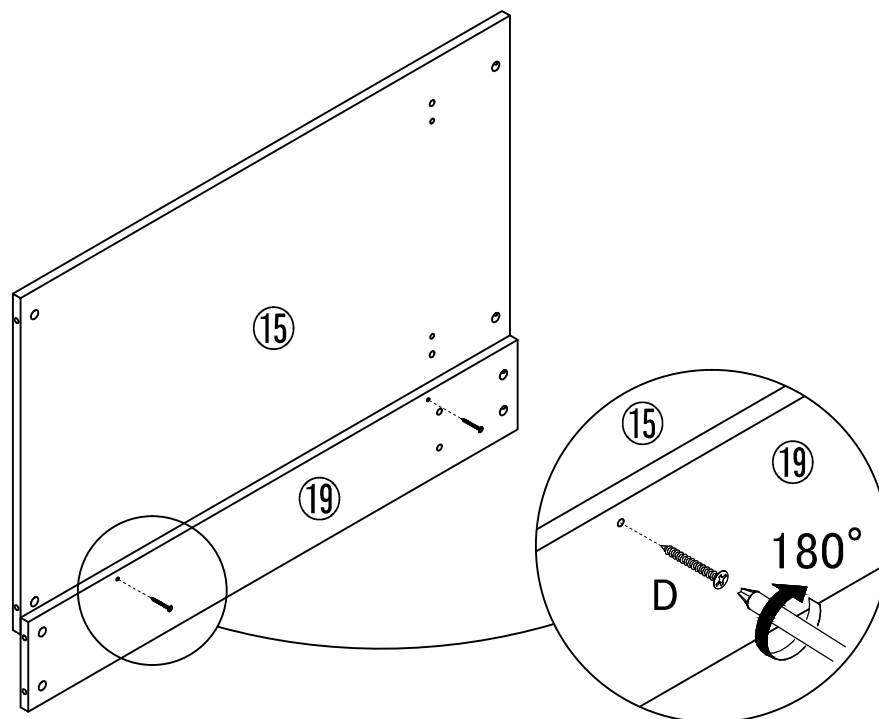

08


A×4





C×2



E×4




Insert the wooden dowels (C) halfway into Panel ⑮. Insert the plastic inserts (E) into the panel ⑮, ⑲ holes, and then use a screwdriver to screw the bolts (A) into Panel ⑮, ⑲. Be careful not to use the wrong holes.

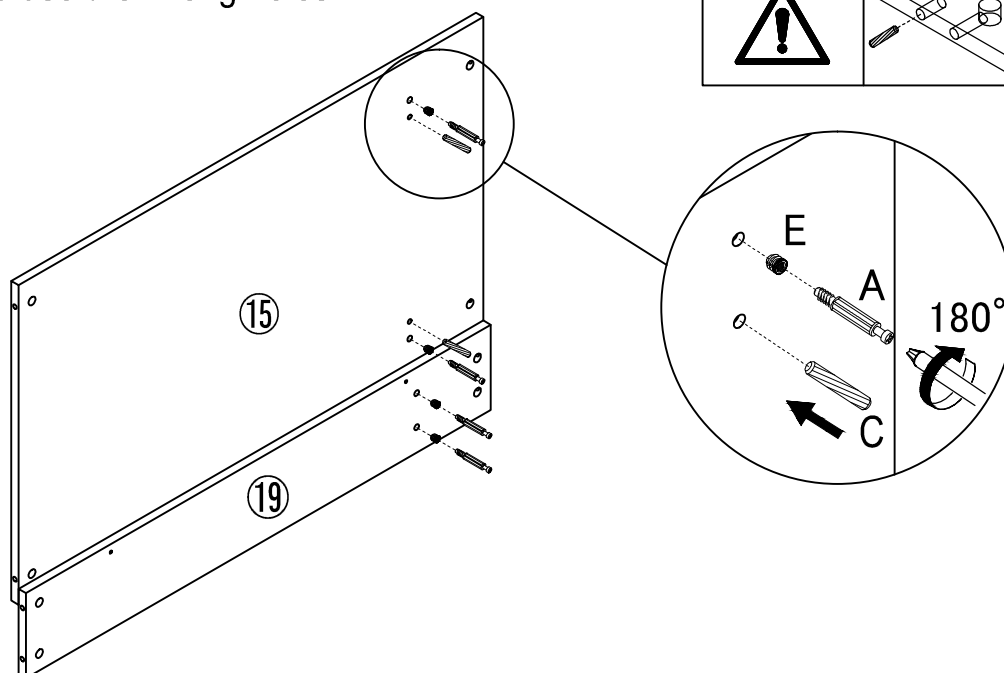
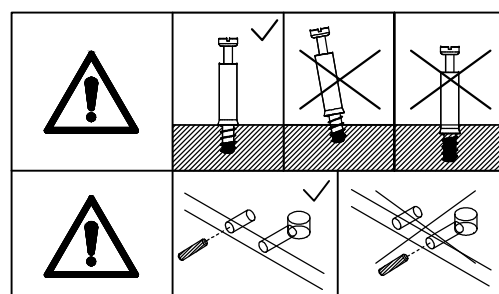


09

B×2

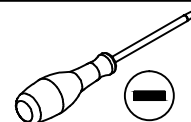

Align the holes in the two Panels ⑮ with the holes in Panel ⑲. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

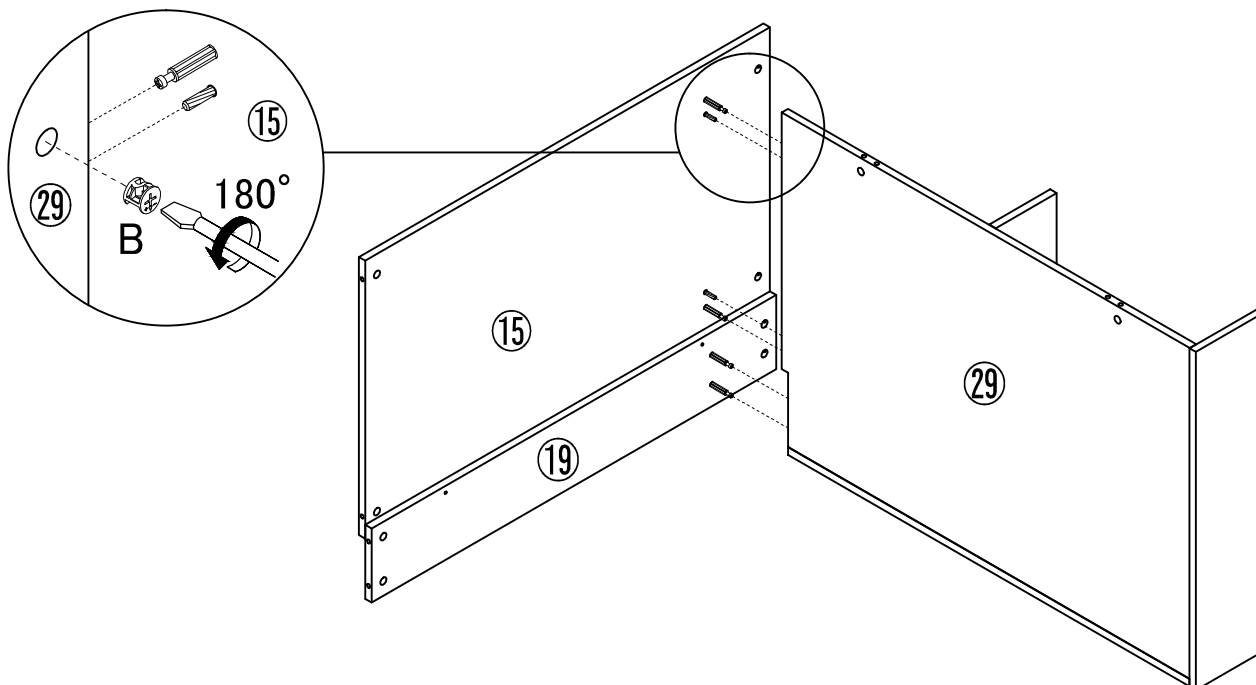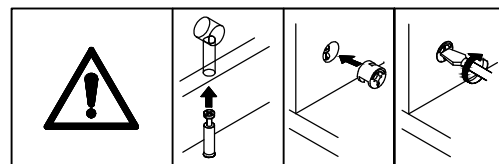

10


A×10





C×8



E×10




Insert the wooden dowels (C) halfway into Panel ⑳. Insert the plastic inserts (E) (A) into the panel ⑳. Be careful not to use the wrong holes.

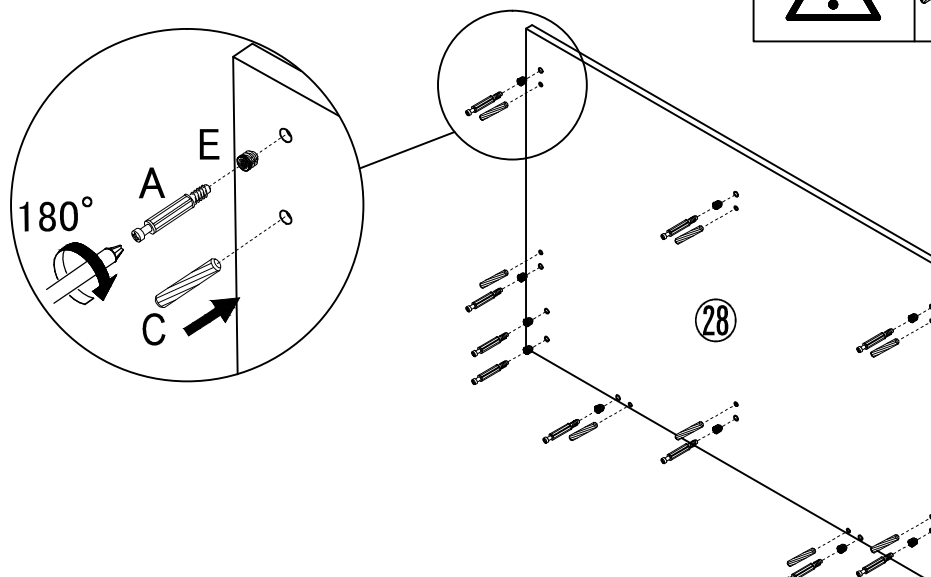
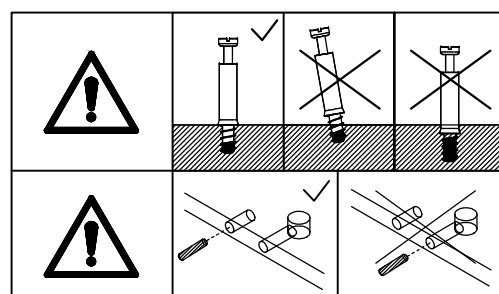


11

B×10

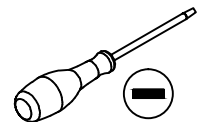

Secure Panels ②⑧ using screws (B). Insert the cam locks from the three-in-one connectors into the holes and tighten them.

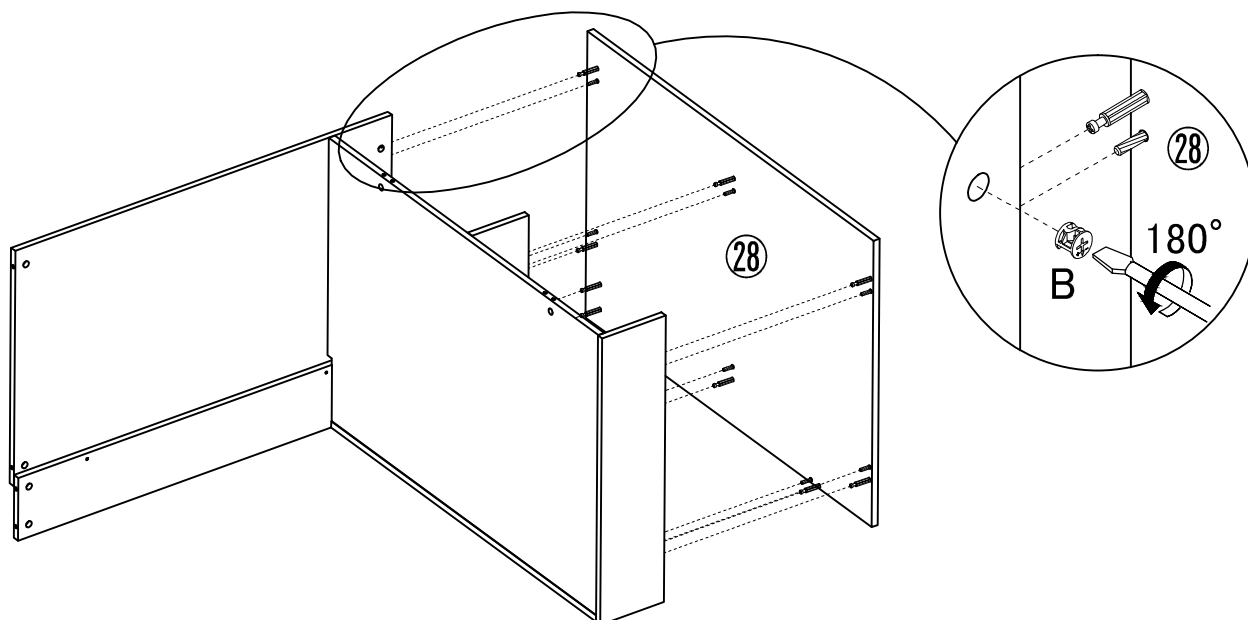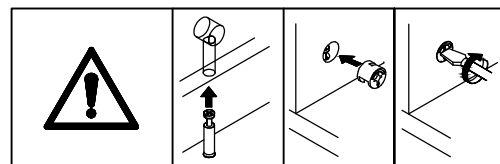

12



A×2





C×2



E×2




Insert the wooden dowels (C) halfway into Panel ②⑥. Insert the plastic inserts (E) (A) into the panel ②⑥. Be careful not to use the wrong holes.

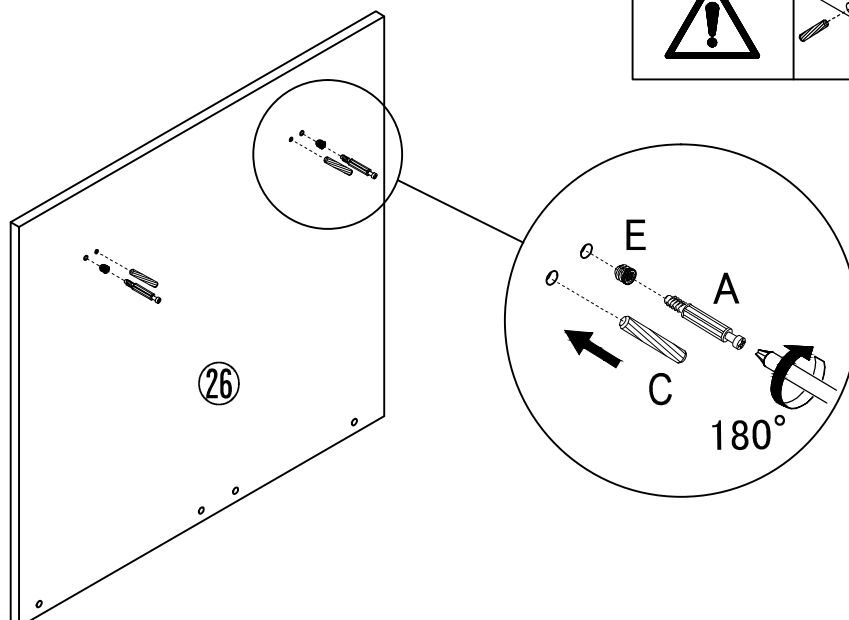
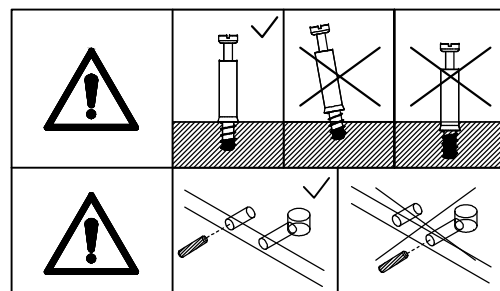


13

B×2

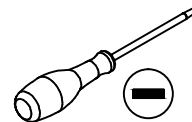

Align the holes in the two Panels ②⑥ with the holes in Panel ②⑨. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

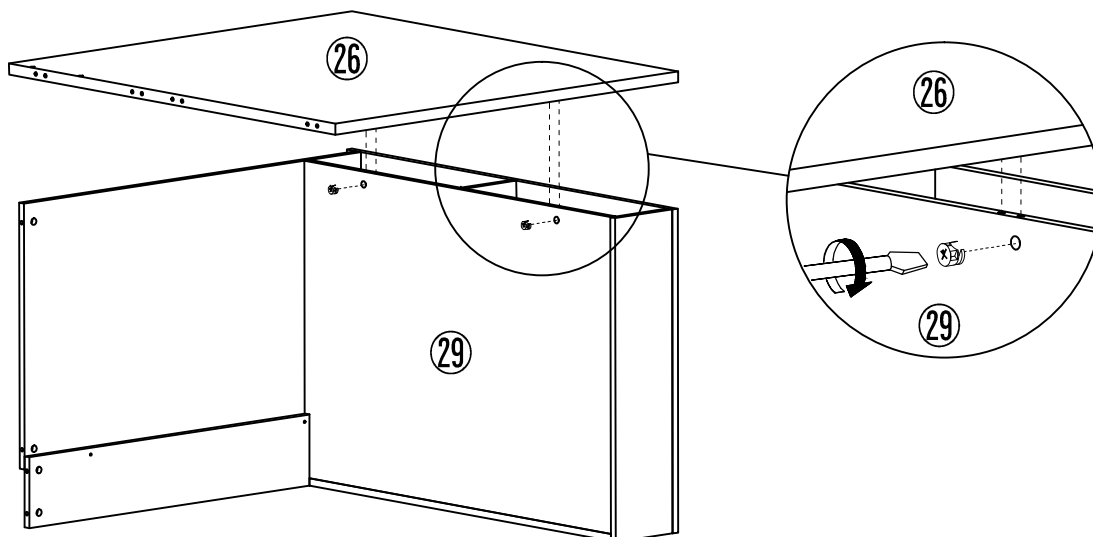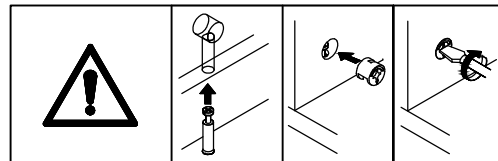


14



A×2



E×2




Insert the wooden dowels (C) halfway into Panel ③⑩. Insert the plastic inserts (E) into the panel holes, and then use a screwdriver to screw the bolts (A) into Panel ③⑩. Be careful not to use the wrong holes. Use the cam-lock holes in Panel ②⑨ to identify the correct holes.

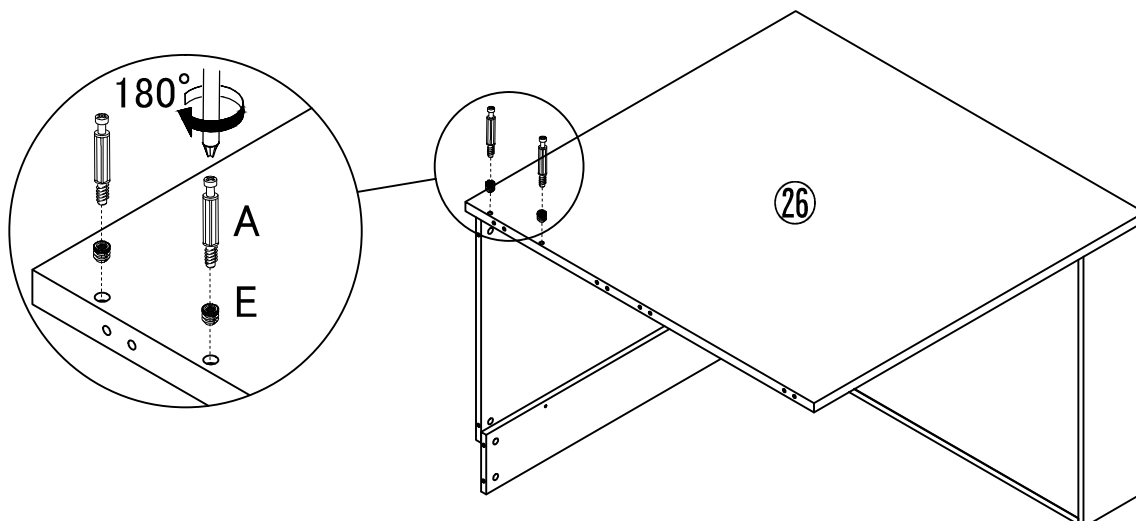
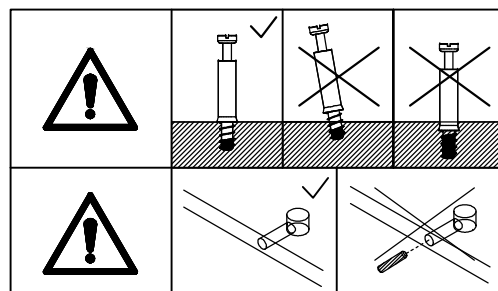


15

B×2

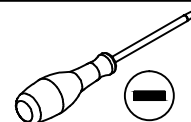


Align the holes in the two Panels ④ with the holes in Panel ②⑥. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

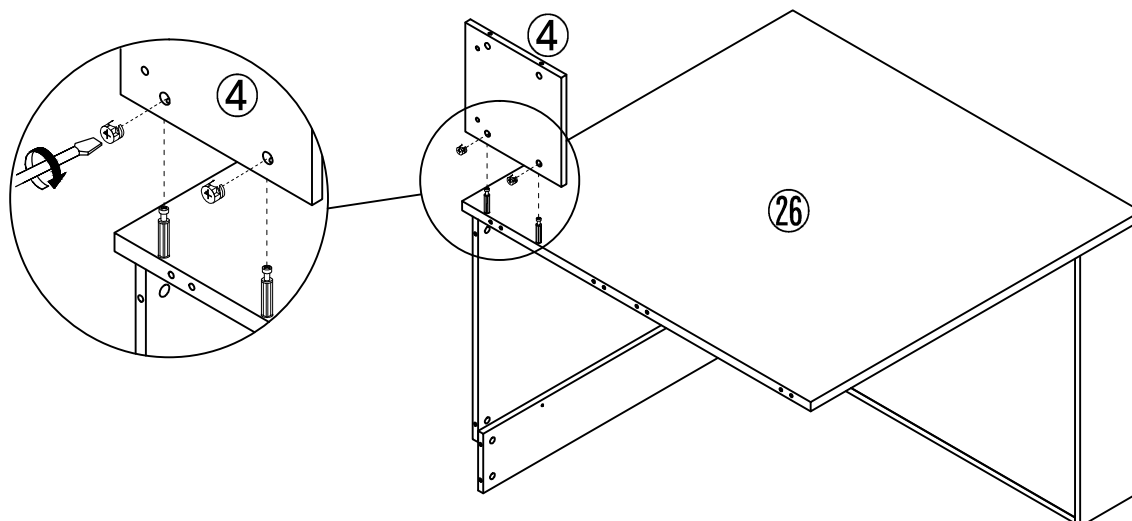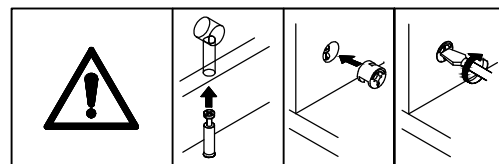


16

D×4



Secure Panels ①⑥ and ②⑦ using screws (D).

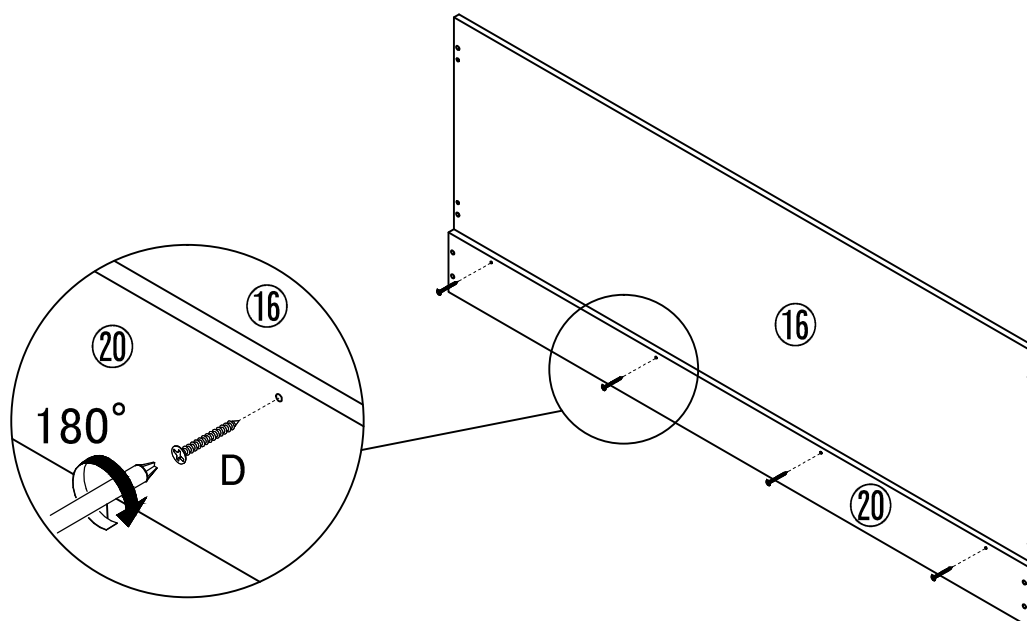

17



A×8





C×4



E×8




Insert the wooden dowels (C) halfway into Panel ⑩. Insert the plastic inserts (E) into the panel ⑩, ⑪ holes, and then use a screwdriver to screw the bolts (A) into Panel ⑩, ⑪. Be careful not to use the wrong holes.

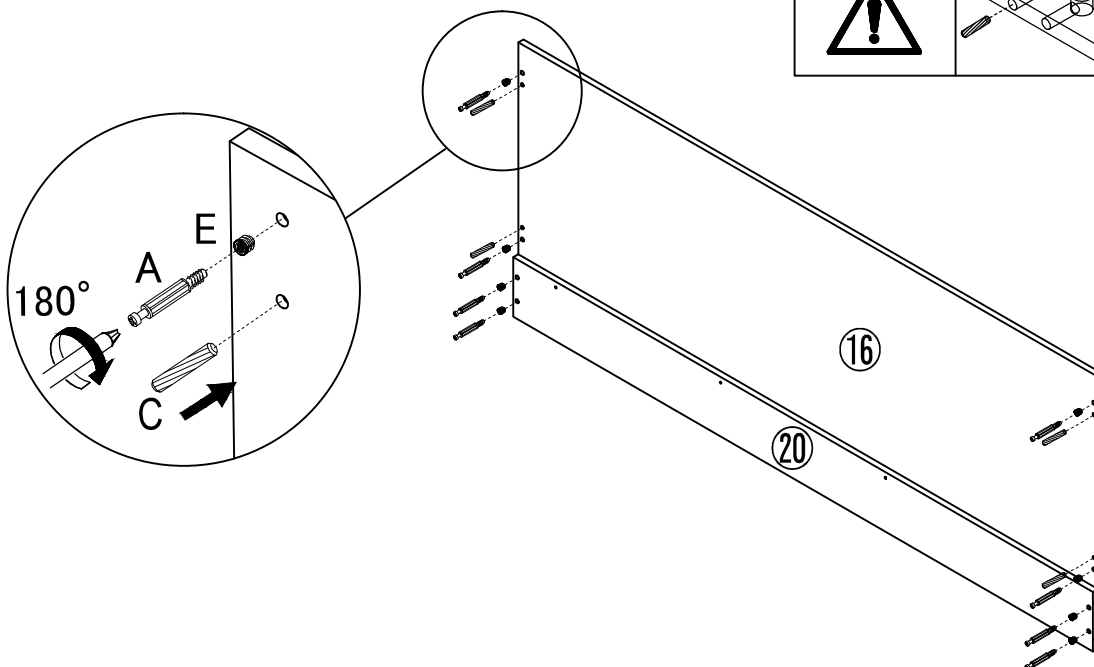
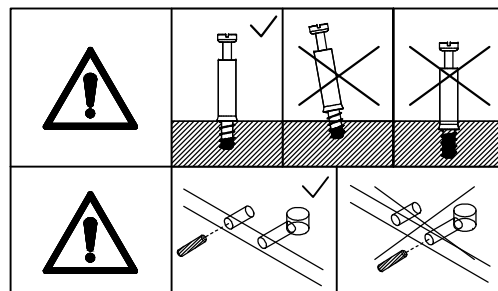


18

B×8


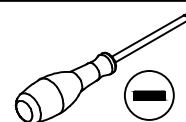


Secure Panels ⑫ using screws (B). Insert the cam locks from the three-in-one connectors into the holes and tighten them.

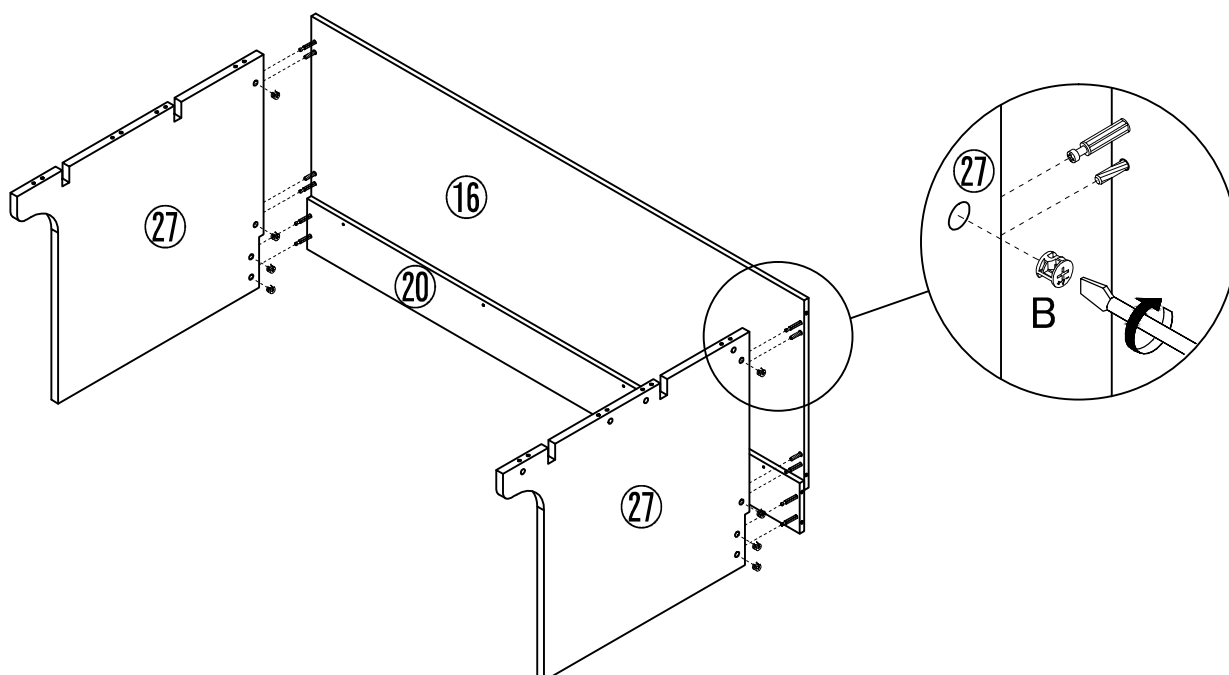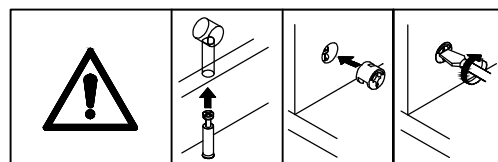


19

D×2




Secure Panels ③⑥ and ③⑦ using screws (D).


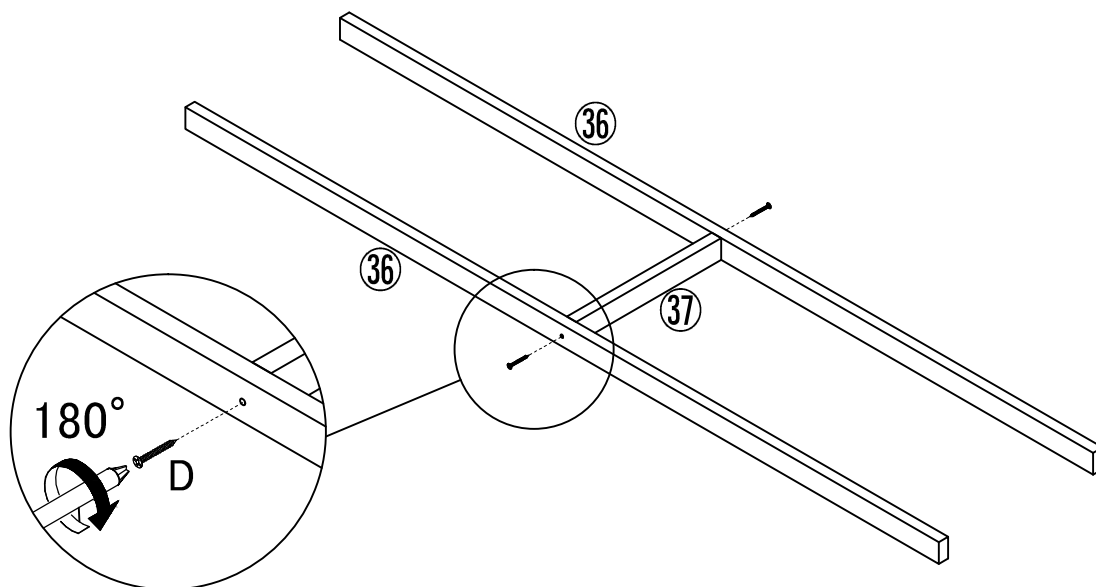


20


Plugged into the board ②⑦ in the trough.

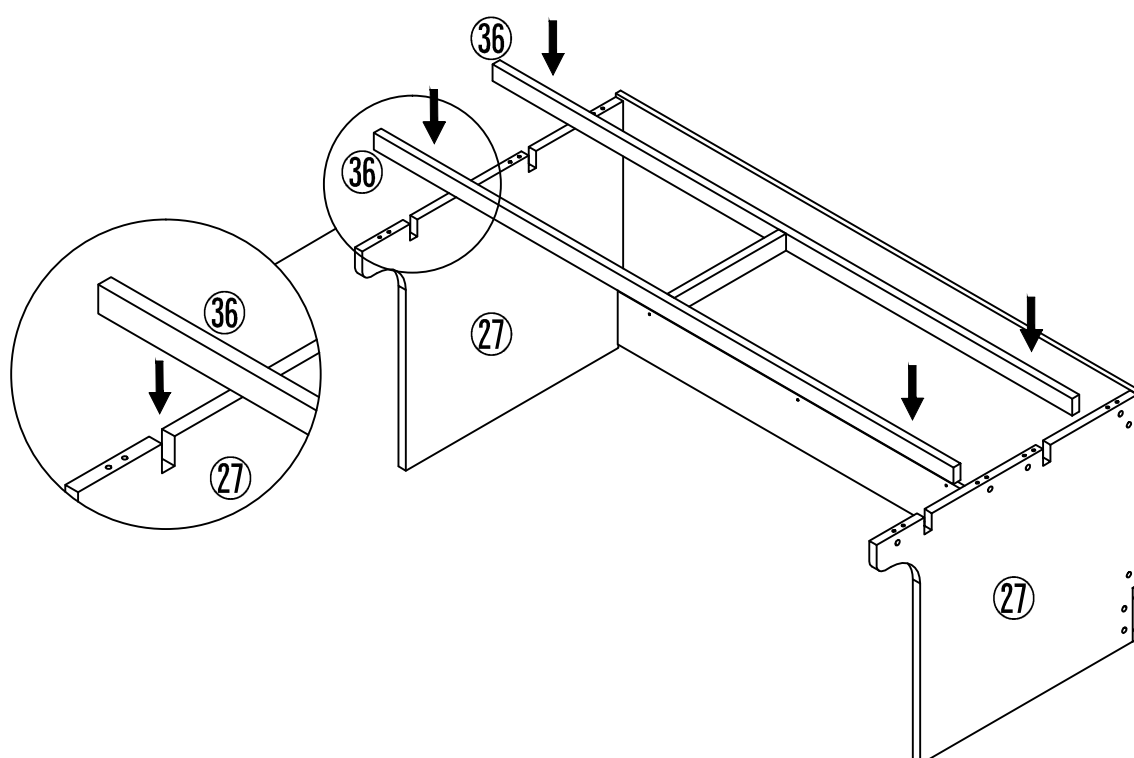




21

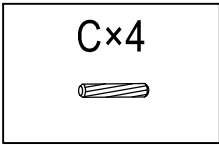



Insert the wooden dowels (C) halfway into Panel ②④, ②⑤.

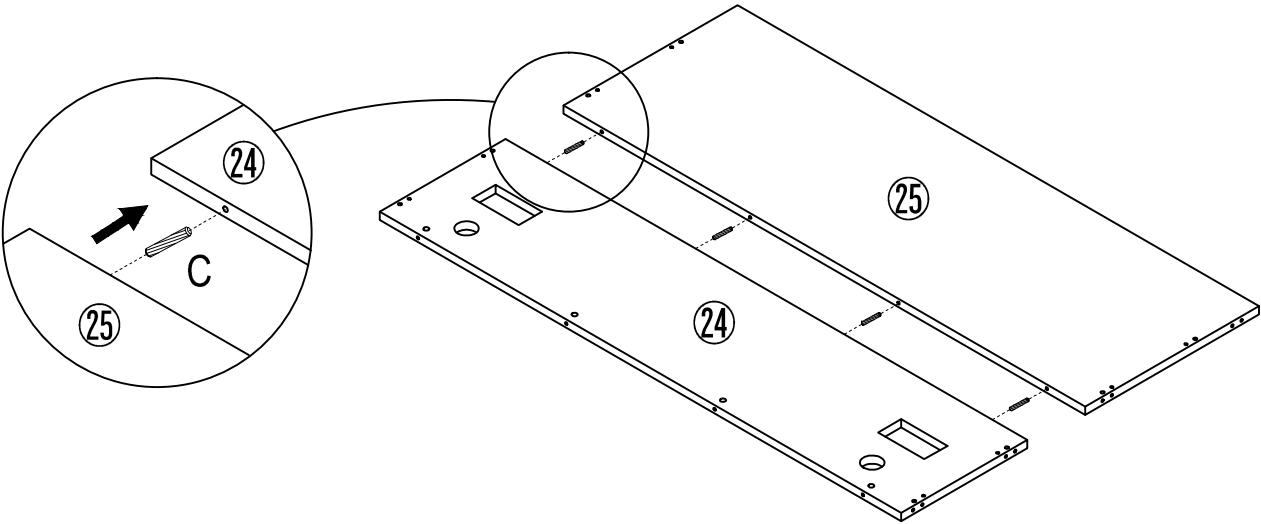

22

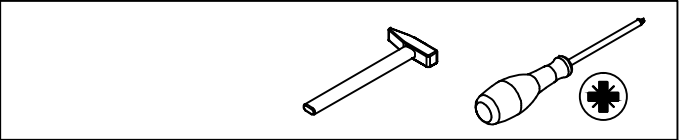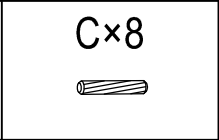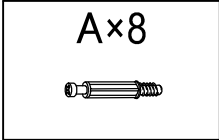


Insert the wooden dowels (C) halfway into Panel ②④, ②⑤.
Insert the plastic inserts (E) ,(A) into the panel ②④, ②⑤. Be careful not to use the wrong holes.

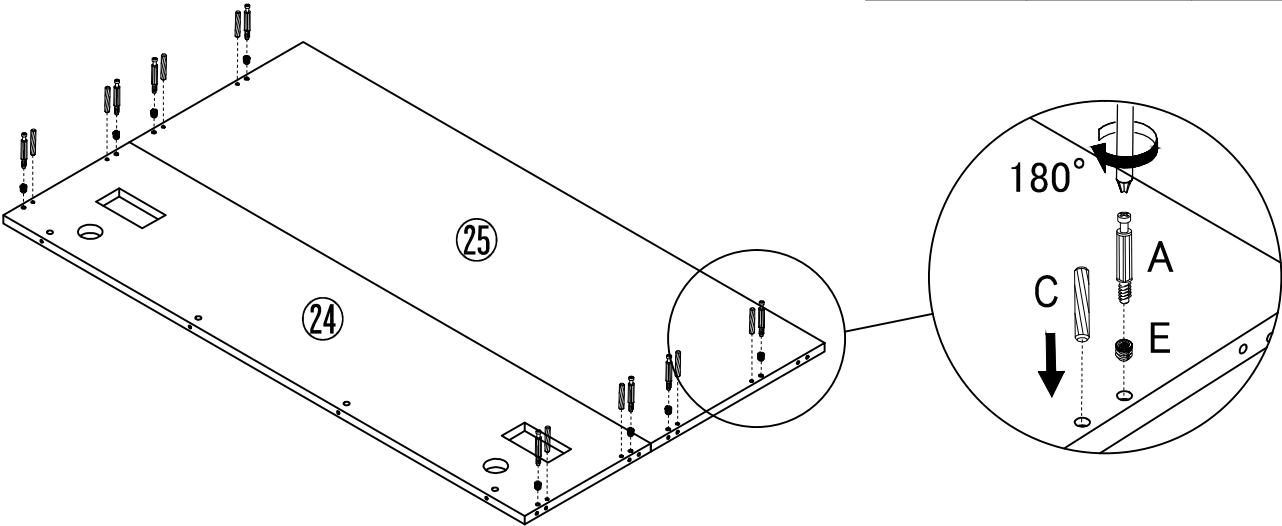
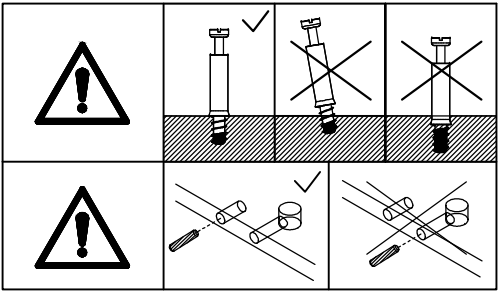


23

B×8

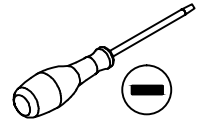

Align the holes in the two Panels ②④ with the holes in Panel ②⑤. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

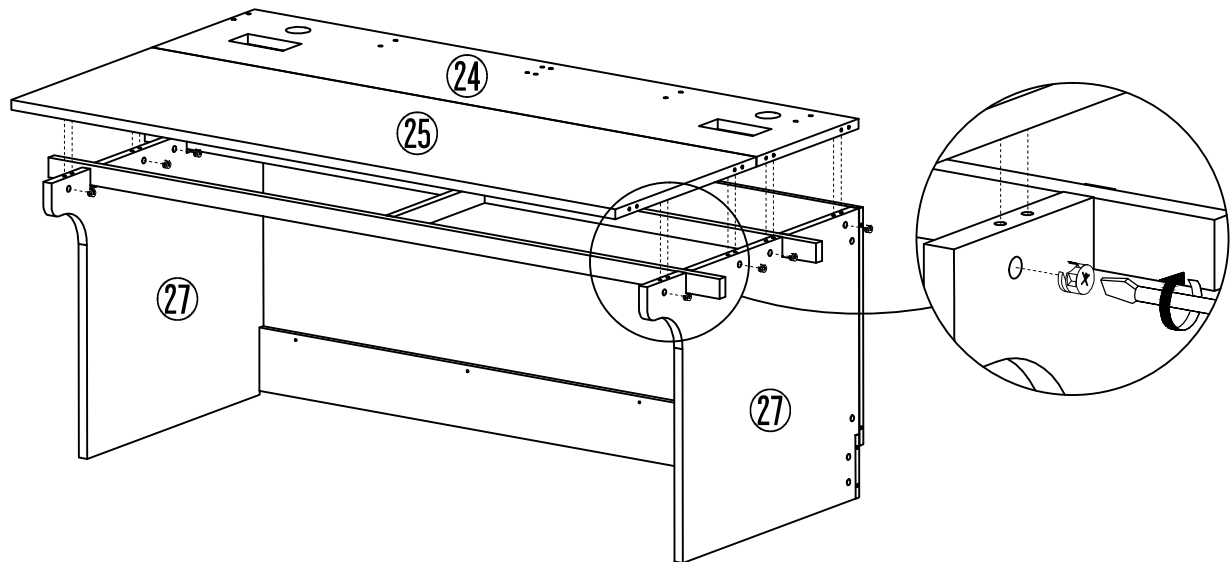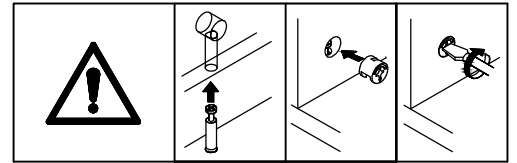


24


F×2



G×4



Secure Panels ①⑥ and ②④ using screws (F),(G).

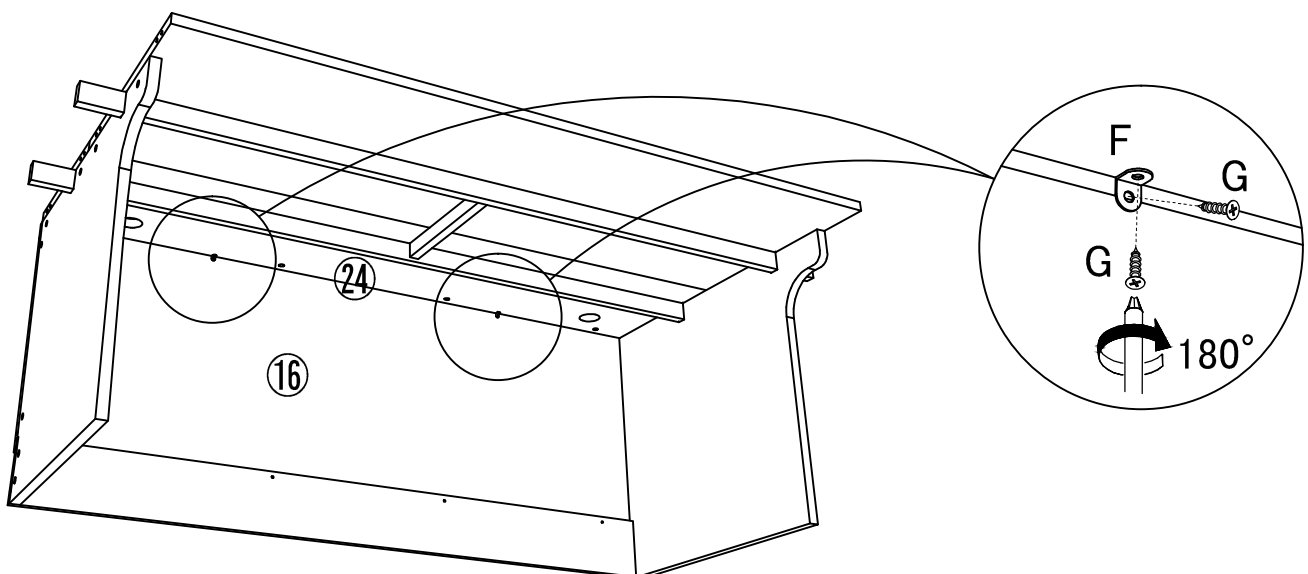

25



A×2





C×2



E×2



Insert the wooden dowels (C) halfway into Panel ③⑤. Insert the plastic inserts (E) into the panel holes, and then use a screwdriver to screw the bolts (A) into Panel ③⑤. Be careful not to use the wrong holes. Use the cam-lock holes in Panel ③③ to identify the correct holes.

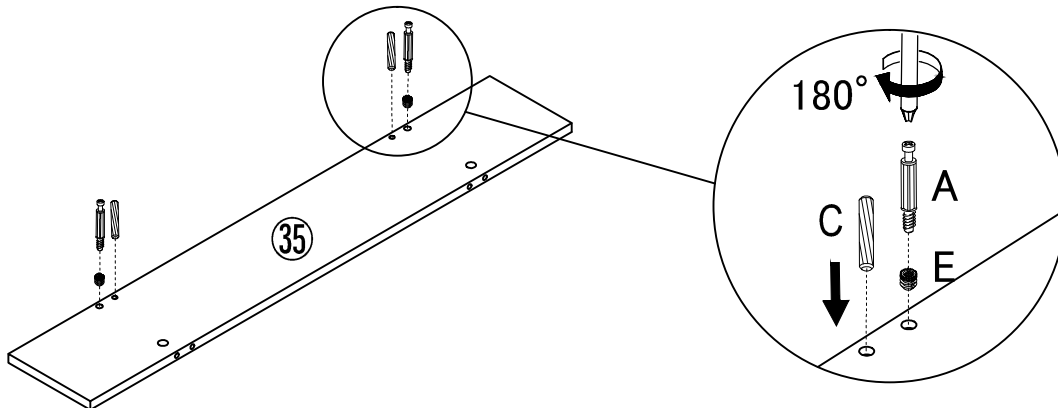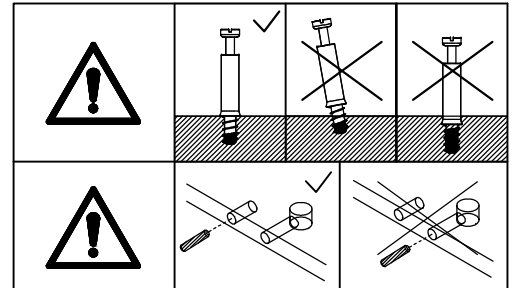

26


A×2





C×2



E×2

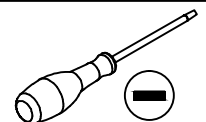

Align the holes in the two Panels ③③ with the holes in Panel ③⑤. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

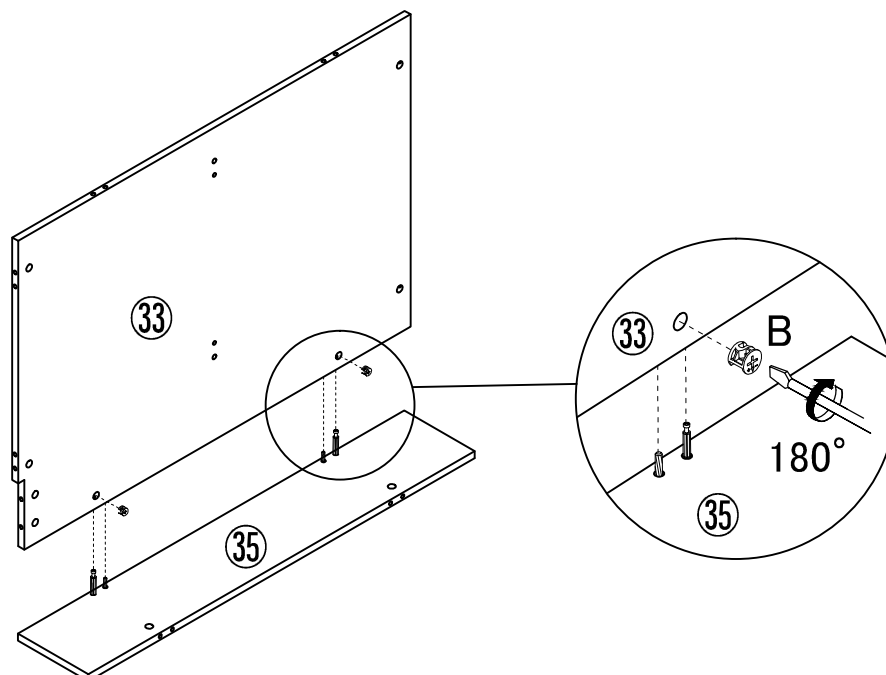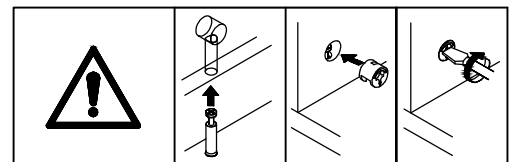

27



A×2





C×2



E×2




Insert the wooden dowels (C) halfway into Panel ③③. Insert the plastic inserts (E) into the panel holes, and then use a screwdriver to screw the bolts (A) into Panel ③③. Be careful not to use the wrong holes. Use the cam-lock holes in Panel ③④ to identify the correct holes.

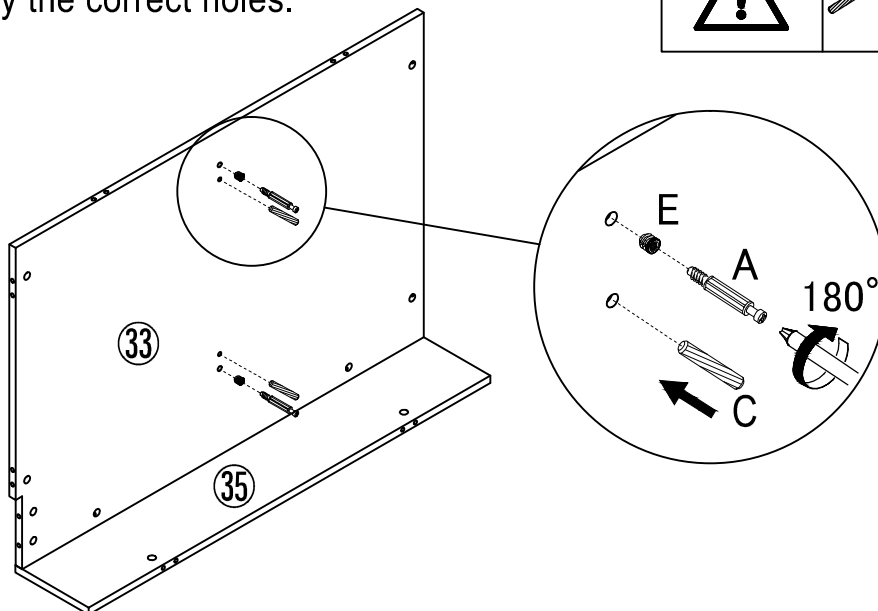
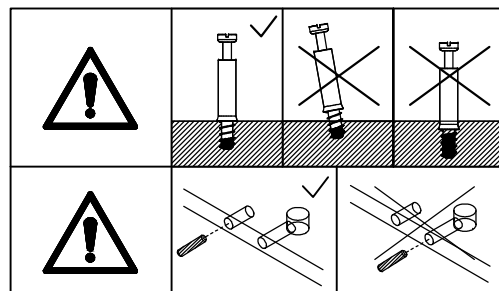


28

B×2


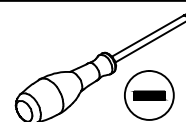


Align the holes in the two Panels ②⑨ with the holes in Panel ③②. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

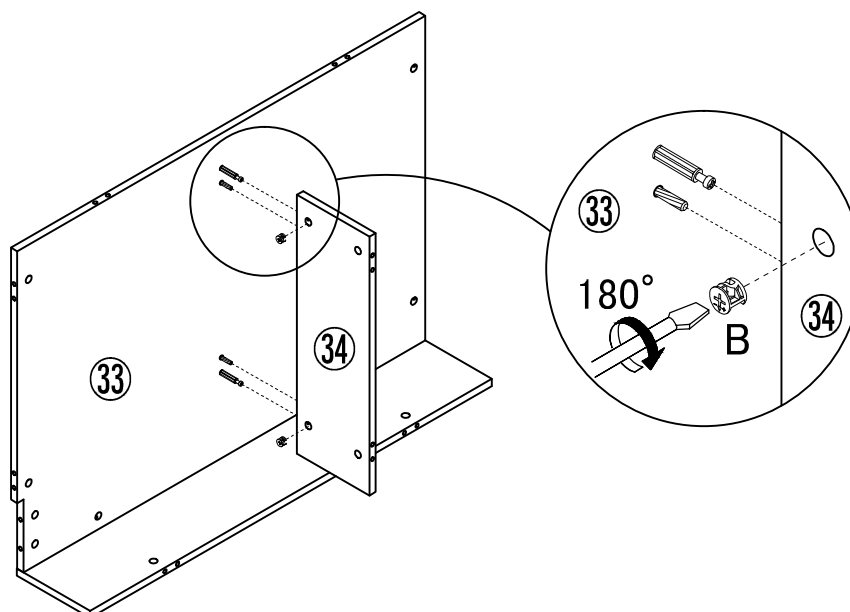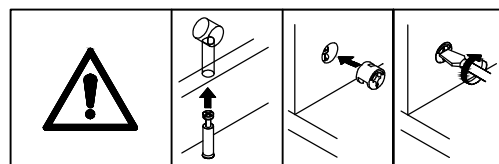


29

D×2



Secure Panels ⑱ and ㉒ using screws (D).

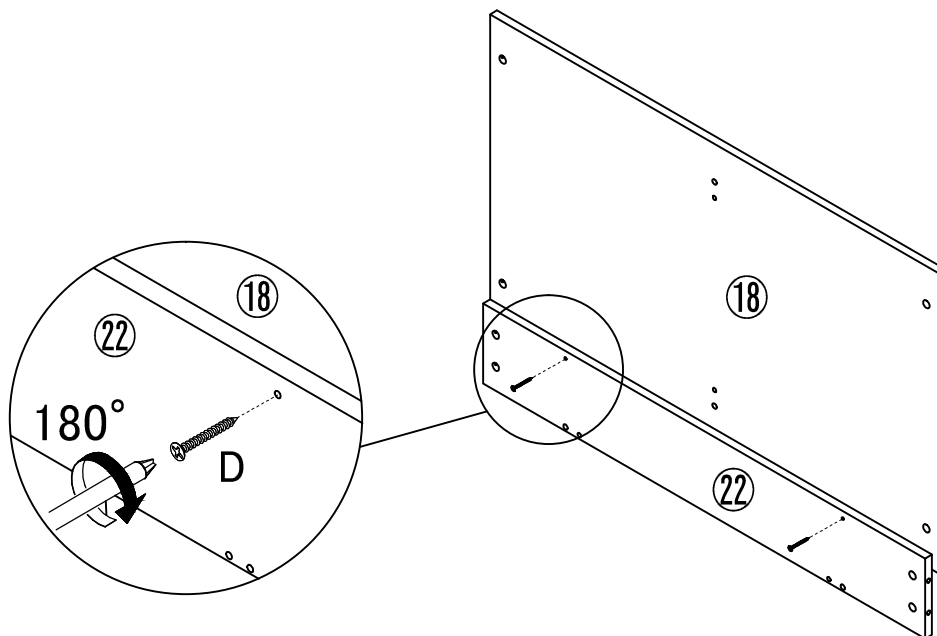

30



A×2





C×2



E×2




Insert the wooden dowels (C) halfway into Panel ⑱. Insert the plastic inserts (E) into the panel ⑱ holes, and then use a screwdriver to screw the bolts (A) into Panel ⑱. Be careful not to use the wrong holes.

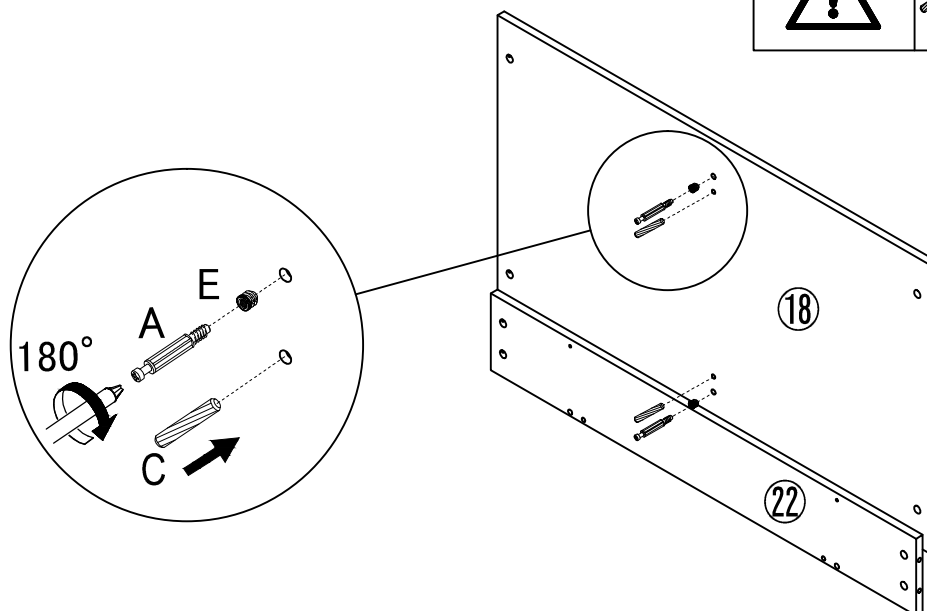
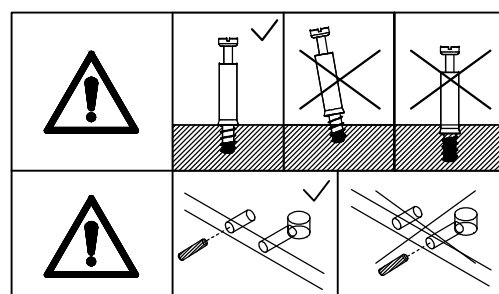


31

B×2

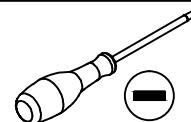

Secure Panels ③④ using screws (B). Insert the cam locks from the three-in-one connectors into the holes and tighten them.

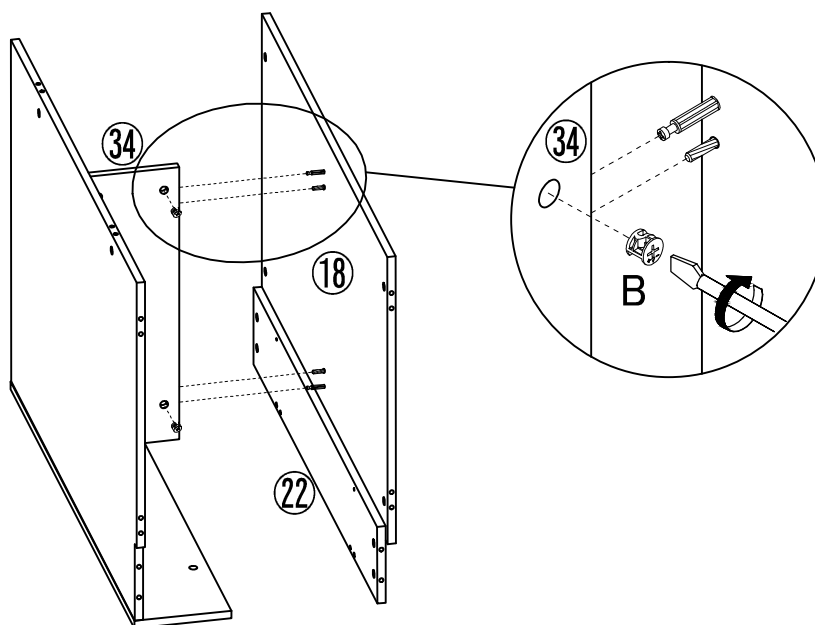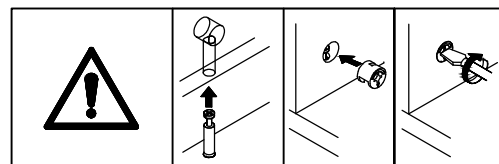

32


A×8





C×4



E×8




Insert the wooden dowels (C) halfway into Panel ⑤. Insert the plastic inserts (E) into the panel holes, and then use a screwdriver to screw the bolts (A) into Panel ⑤. Be careful not to use the wrong holes.

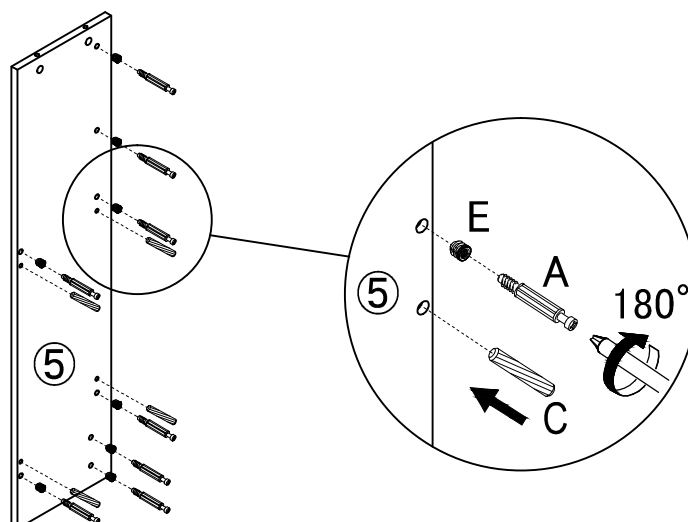
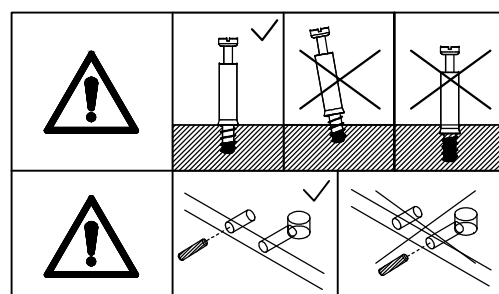


33

B×6


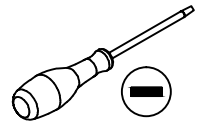


Secure Panels ⑱, ㉒, ㉓ using screws (B). Insert the cam locks from the three-in-one connectors into the holes and tighten them.

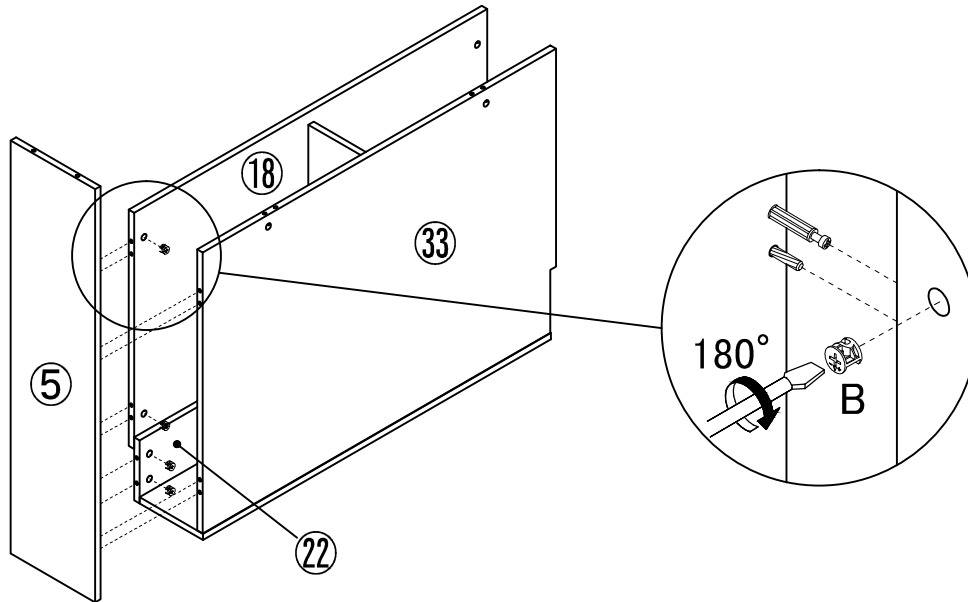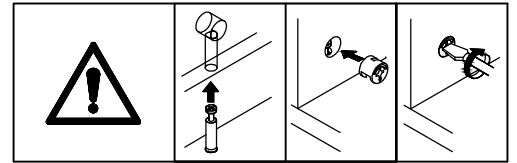


34

D×2



Secure Panels ⑰ and ㉑ using screws (D).

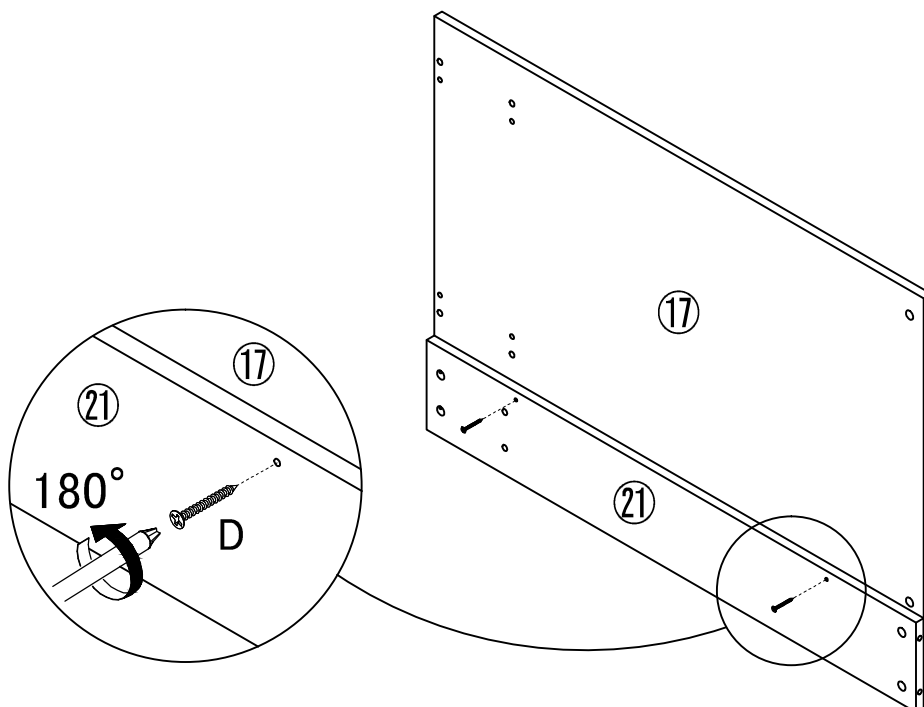

35



A×8





C×4



E×8




Insert the wooden dowels (C) halfway into Panel ⑮. Insert the plastic inserts (E) into the panel ⑮,⑲ holes, and then use a screwdriver to screw the bolts (A) into Panel ⑮,⑲. Be careful not to use the wrong holes.

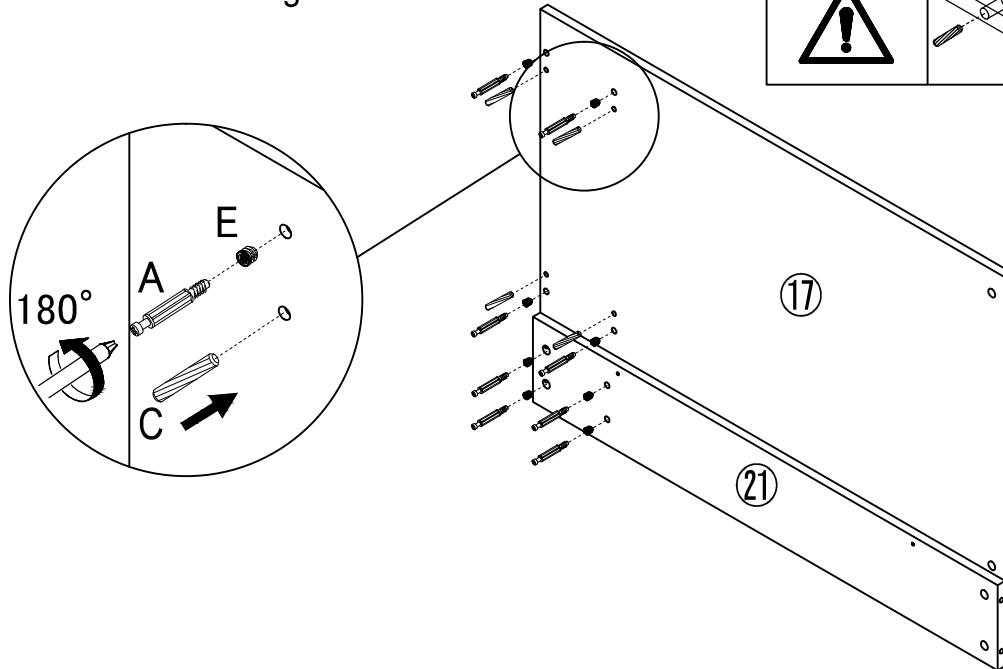
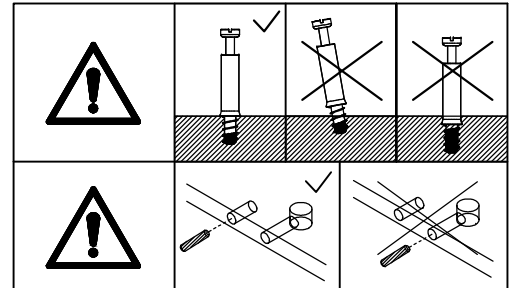


36

B×8

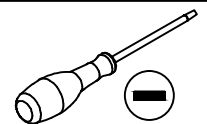

Secure Panels ⑱, ⑳,㉓ using screws (B). Insert the cam locks from the three-in-one connectors into the holes and tighten them.

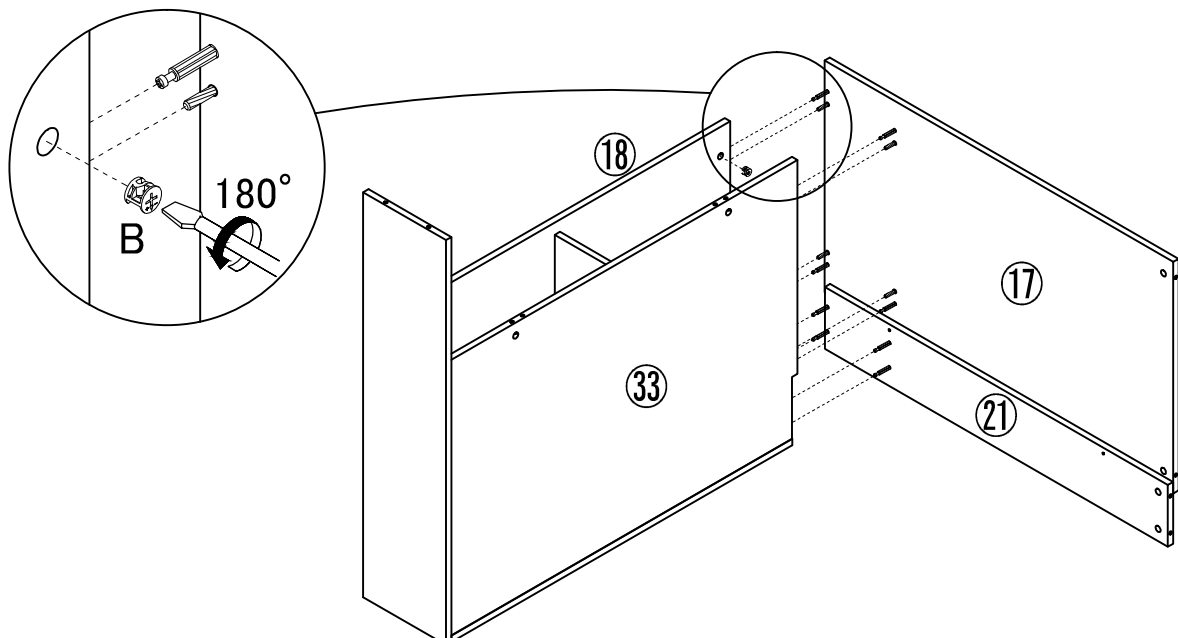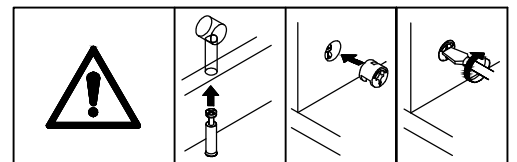

37



A×2





C×2



E×2




Insert the wooden dowels (C) halfway into Panel ②③. Insert the plastic inserts (E) into the panel ②③ holes, and then use a screwdriver to screw the bolts (A) into Panel ②③. Be careful not to use the wrong holes.

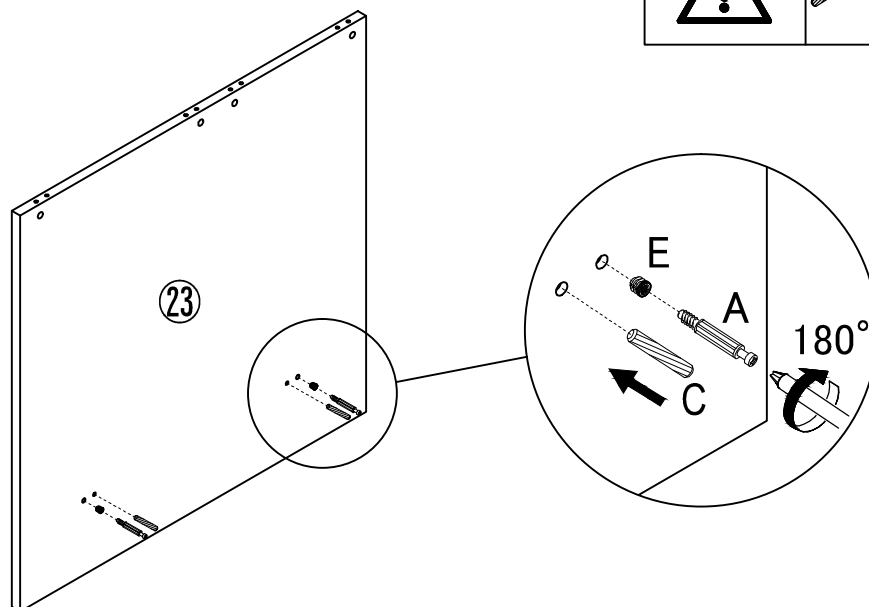
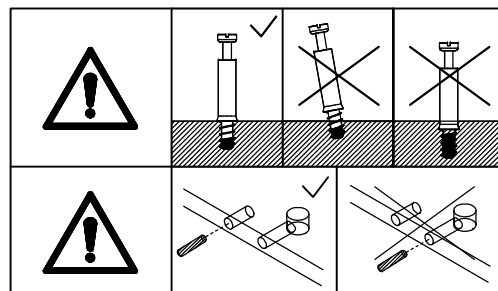


38

B×2

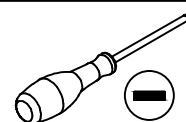

Secure Panels ③③ using screws (B). Insert the cam locks from the three-in-one connectors into the holes and tighten them.

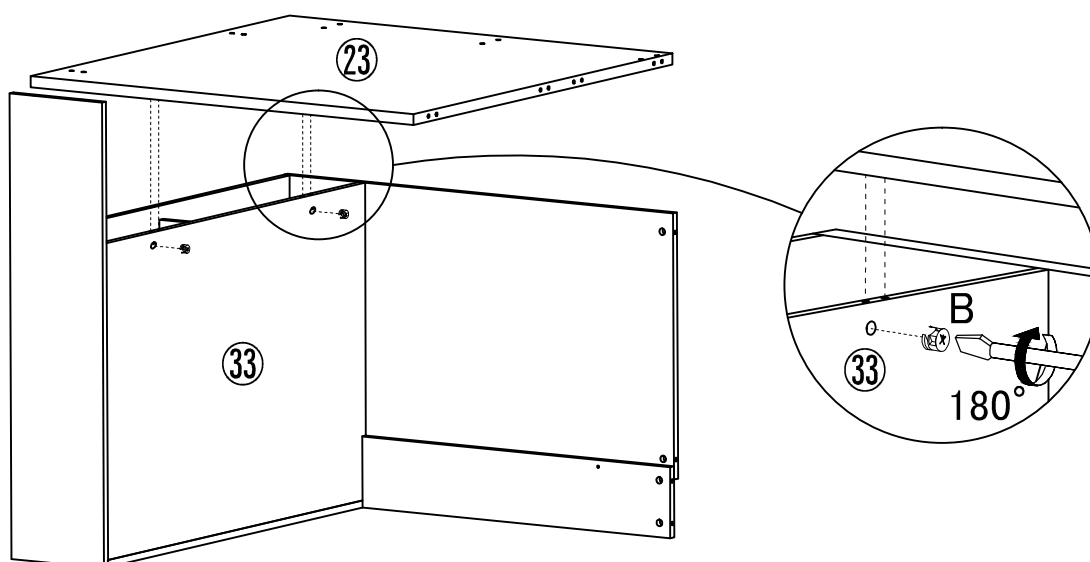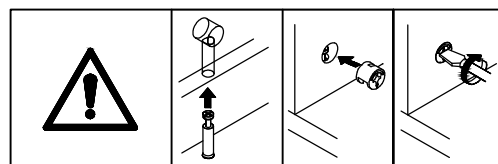

39



A×8






C×4



E×8




Insert the wooden dowels (C) halfway into Panel ②④, ②⑤. Insert the plastic inserts (E) into the panel ②④, ②⑤, ②⑦, ②⑩ holes, and then use a screwdriver to screw the bolts (A) into Panel ②④, ②⑤, ②⑦, ②⑩. Be careful not to use the wrong holes.

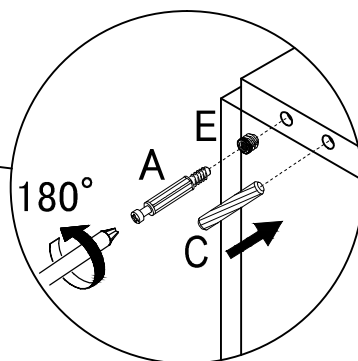
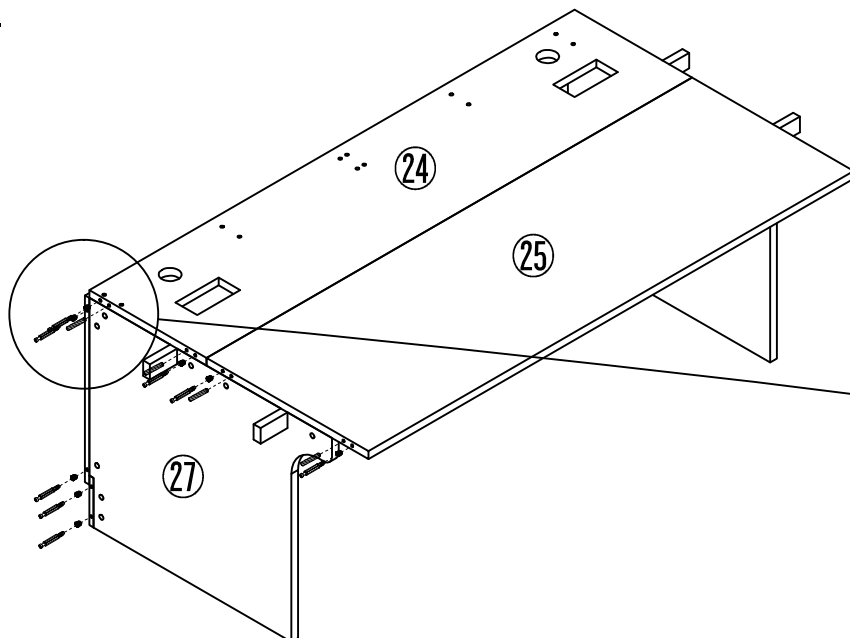
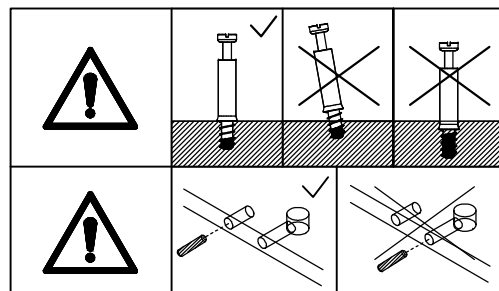


40

B×8

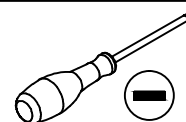

Secure Panels ①⑦, ②①, ②③ using screws (B). Insert the cam locks from the three-in-one connectors into the holes and tighten them.

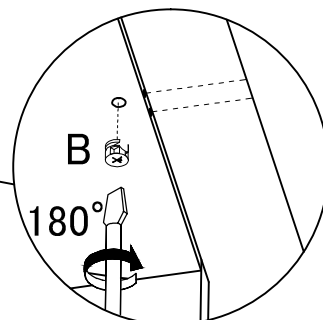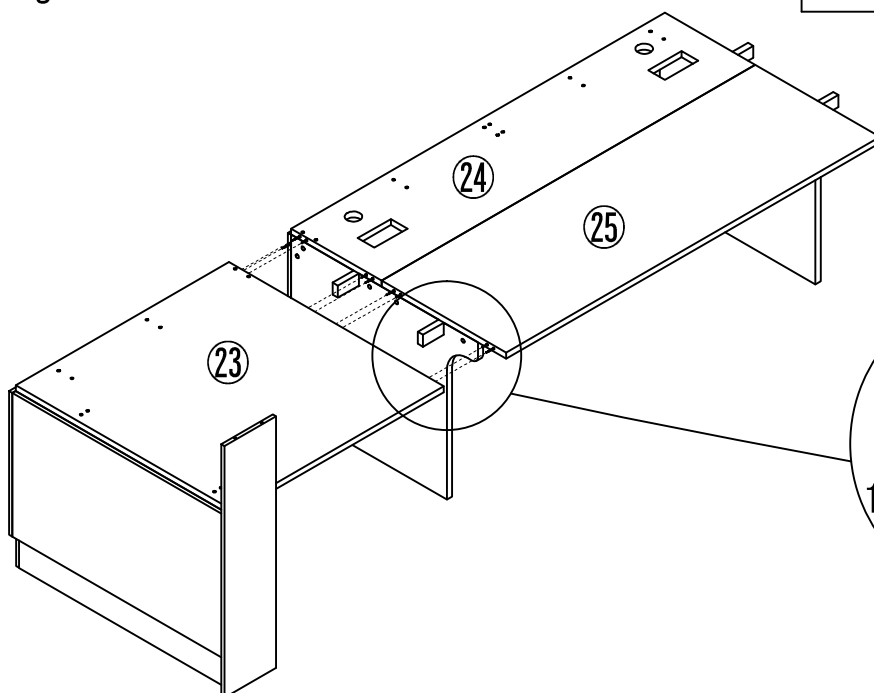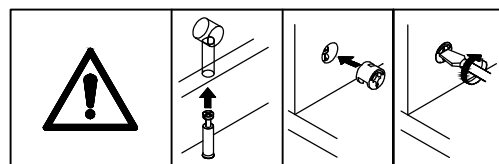


41



A×4



E×4




Insert the plastic inserts (E) into the panel ⑭, and then use a screwdriver to screw the bolts (A) into Panel ⑭. Be careful not to use the wrong holes.

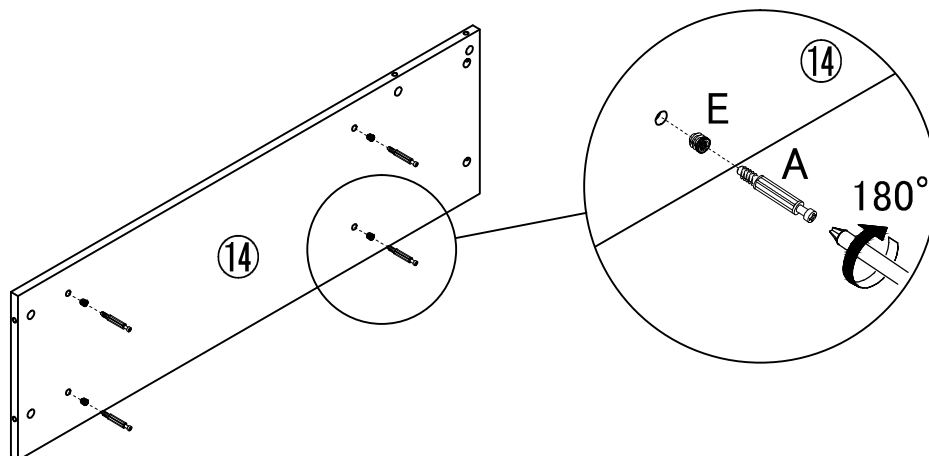
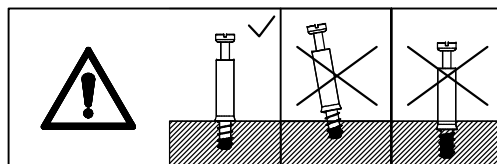


42

B×4

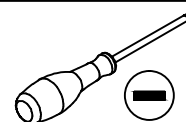


Secure Panels ⑦ using screws (B). Insert the cam locks from the three-in-one connectors into the holes and tighten them.

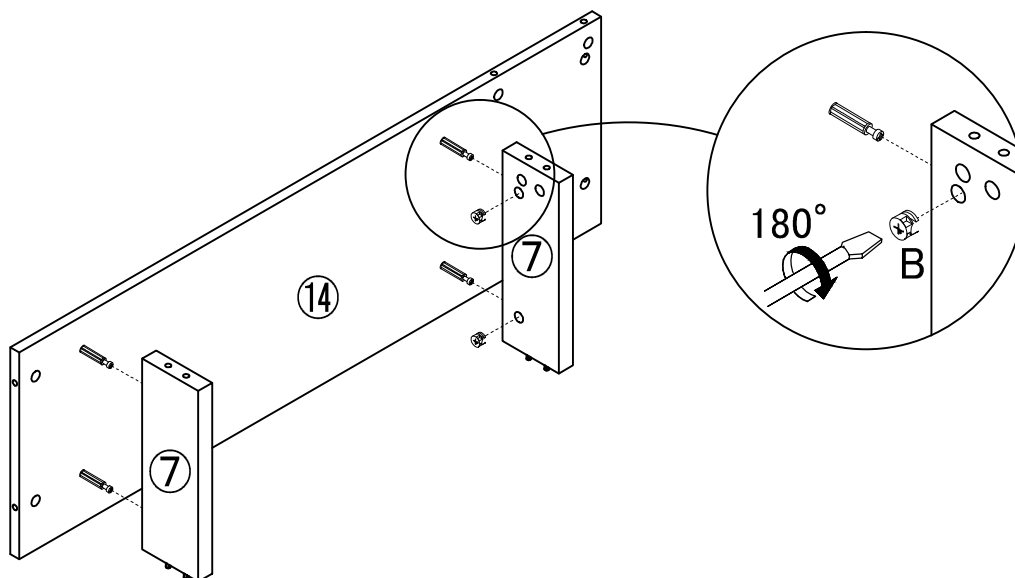
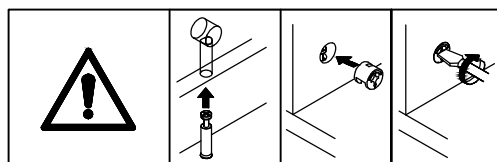


43

B×4

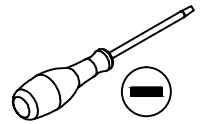

Secure Panels ⑭ using screws (B). Insert the cam locks from the three-in-one connectors into the holes and tighten them.

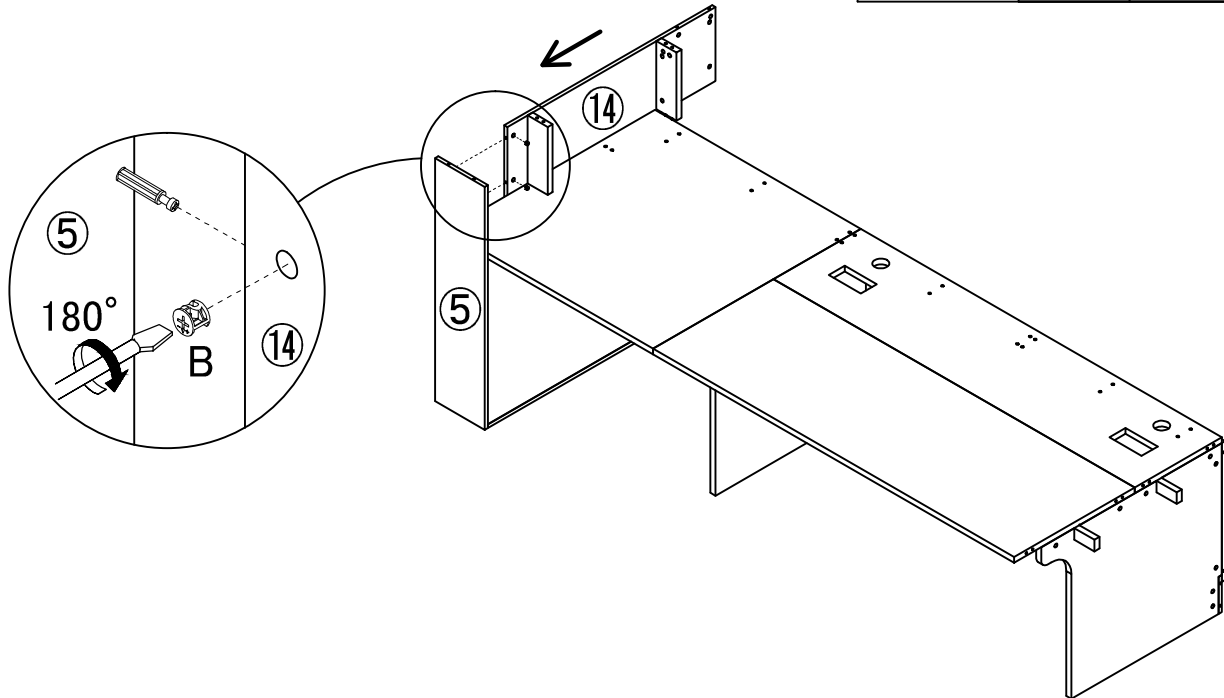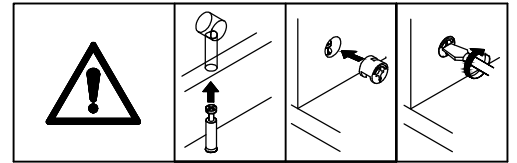


44



A×18



E×18




Insert the plastic inserts (E) into the panel ②③, ②④ and then use a screwdriver to screw the bolts (A) into Panel ②③, ②④. Be careful not to use the wrong holes.

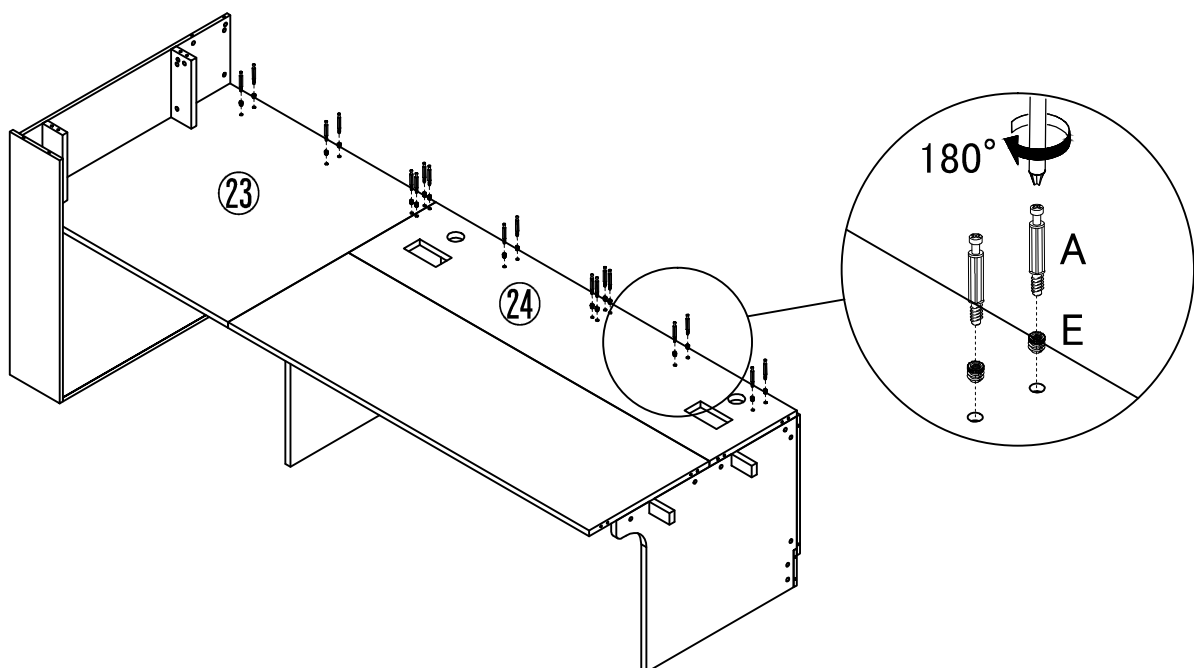
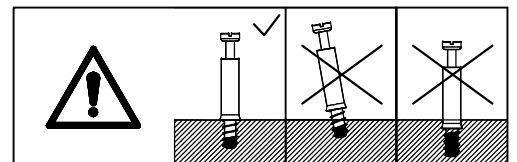


45

B×18

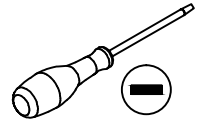

Secure Panels ⑥ using screws (B). Insert the cam locks from the three-in-one connectors into the holes and tighten them.

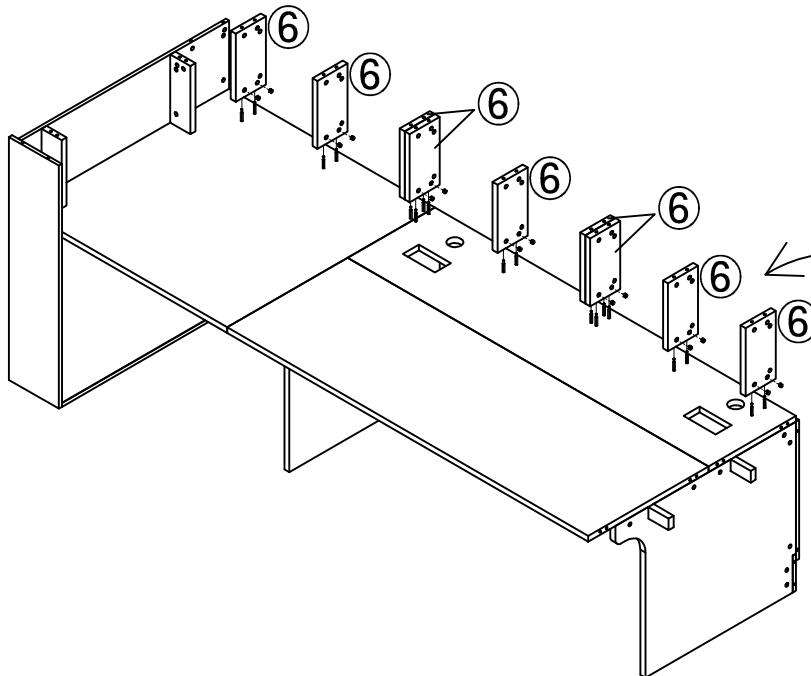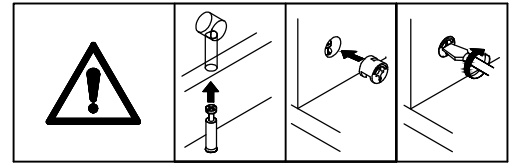


46



A×8



E×8



Insert the plastic inserts (E) into the panel ⑬ and then use a screwdriver to screw the bolts (A) into Panel ⑬. Be careful not to use the wrong holes.

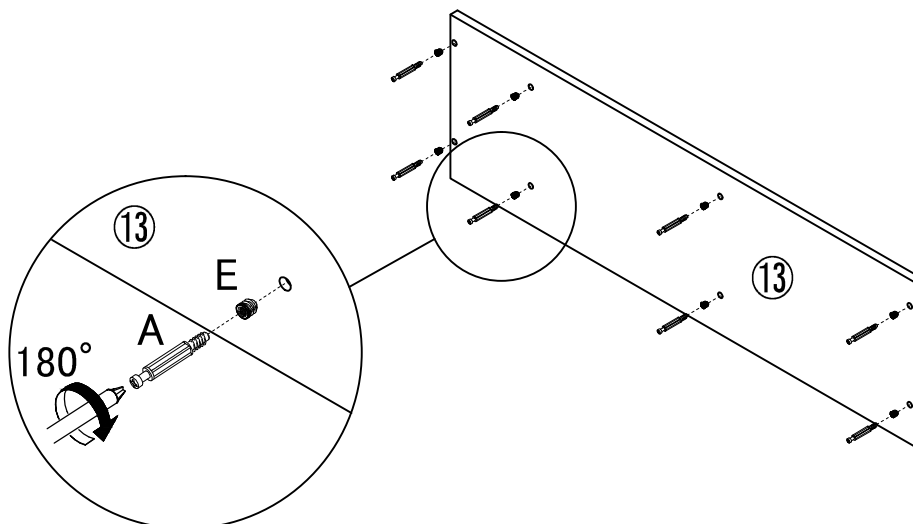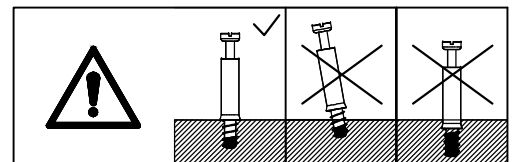


47



A×16



E×16




Insert the plastic inserts (E) into the panel ⑫ and then use a screwdriver to screw the bolts (A) into Panel ⑫. Be careful not to use the wrong holes.

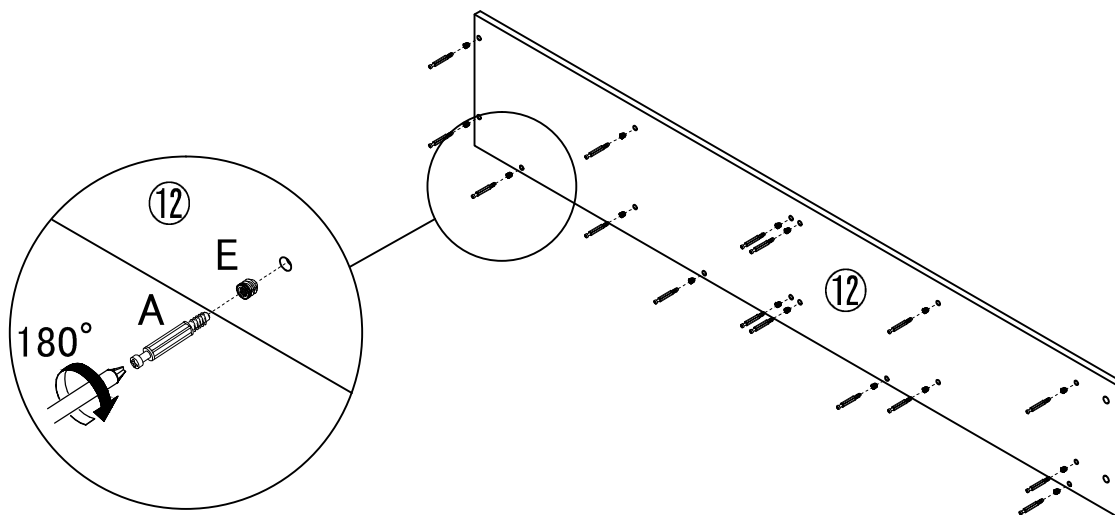
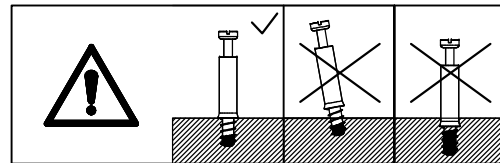


48

B×24

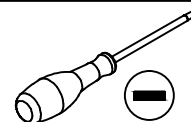

Secure Panels ⑫, ⑬ using screws (B). Insert the cam locks from the three-in-one connectors into the holes and tighten them.

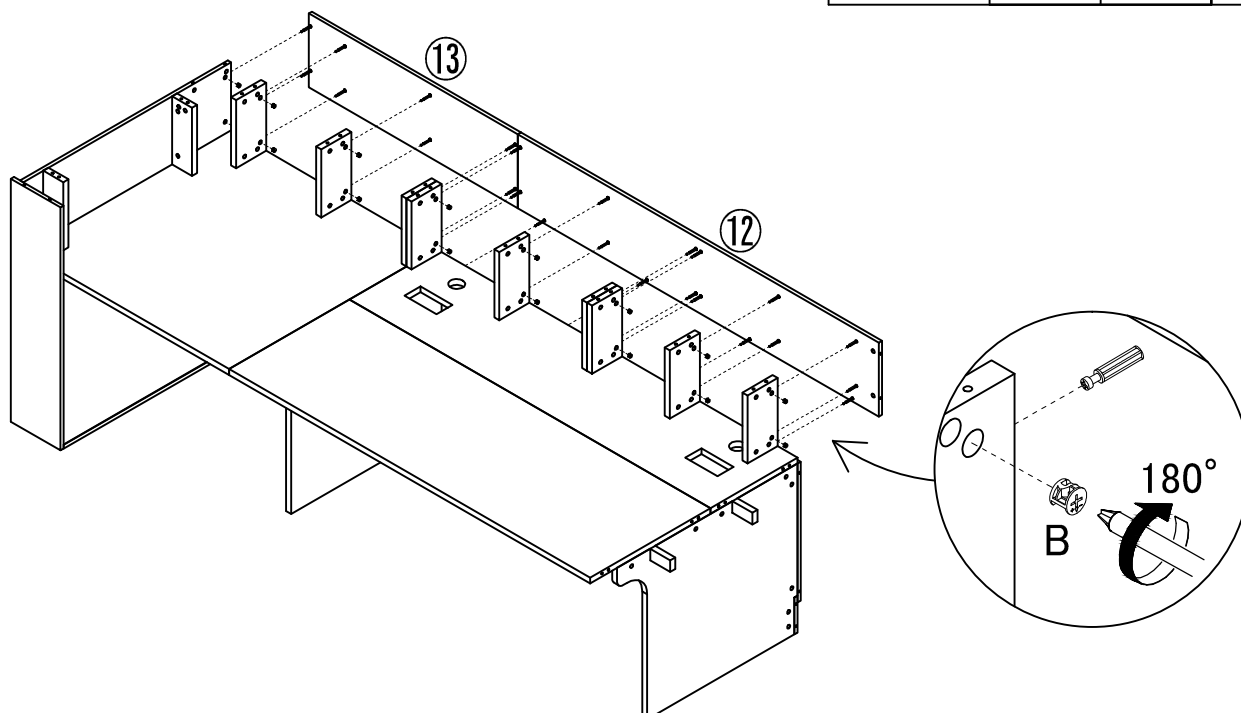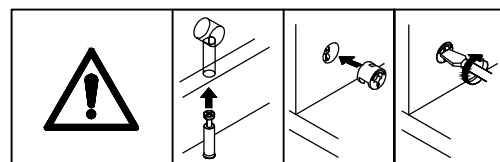

49


A×8






C×4



E×8



Insert the wooden dowels (C) halfway into Panel ②④, ②⑤. Insert the plastic inserts (E) into the panel ②④, ②⑤, ①⑥, ②⑦ holes, and then use a screwdriver to screw the bolts (A) into Panel ②④, ②⑤, ①⑥, ②⑦. Be careful not to use the wrong holes.

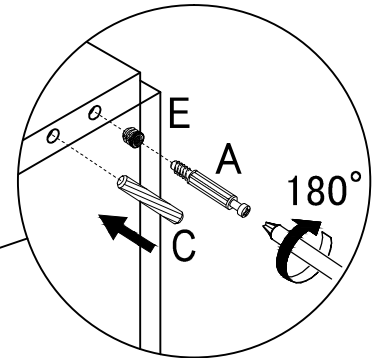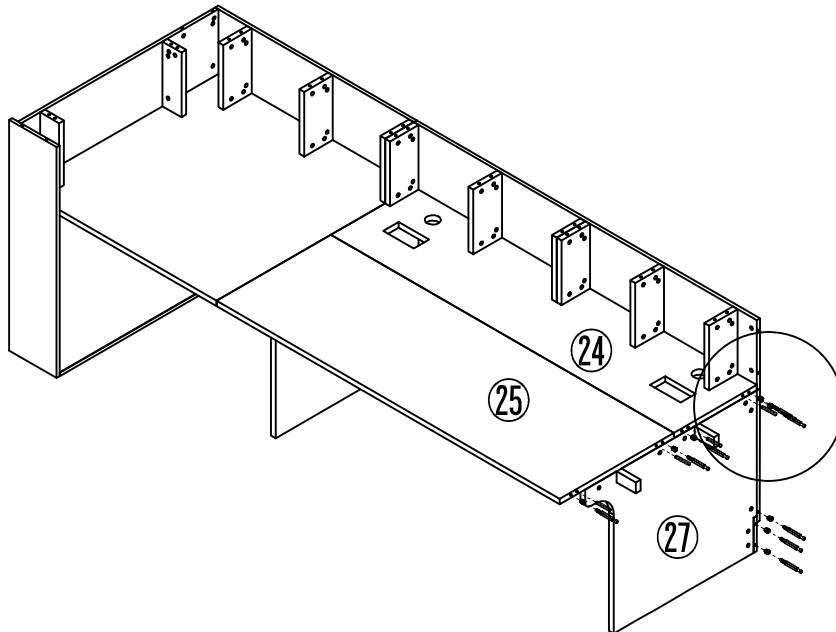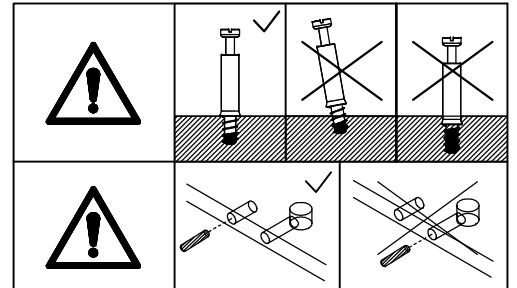


50



A×2



E×2




Insert the plastic inserts (E) into the panel ④ and then use a screwdriver to screw the bolts (A) into Panel ④. Be careful not to use the wrong holes.

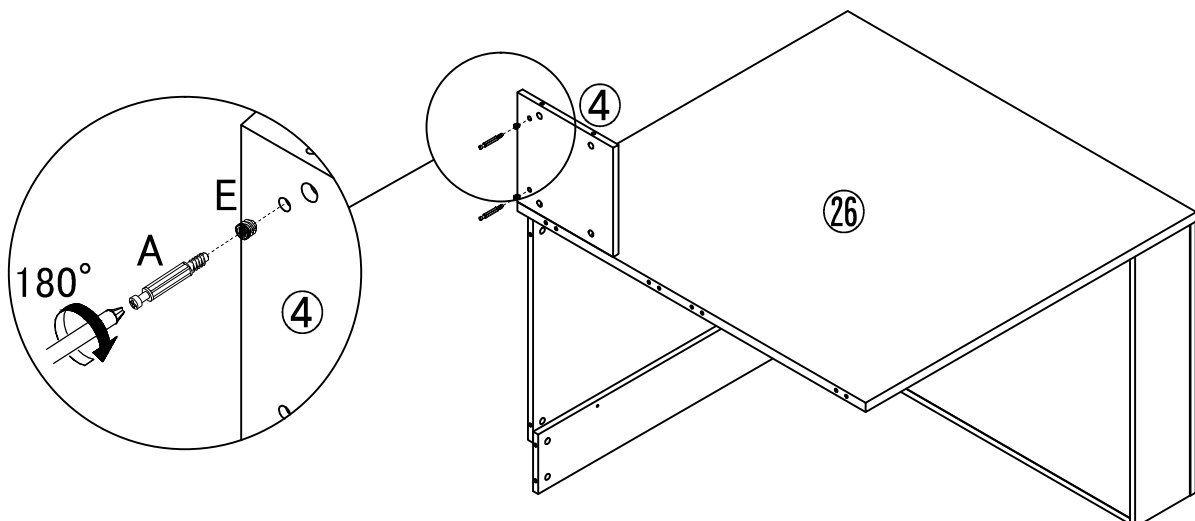
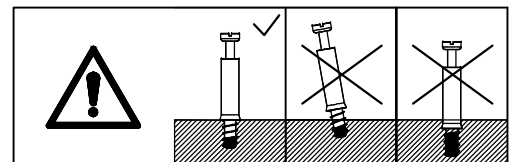


51

B×10

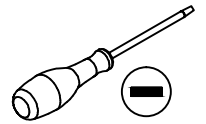

Secure Panels ⑫, ⑬ using screws (B). Insert the cam locks from the three-in-one connectors into the holes and tighten them.

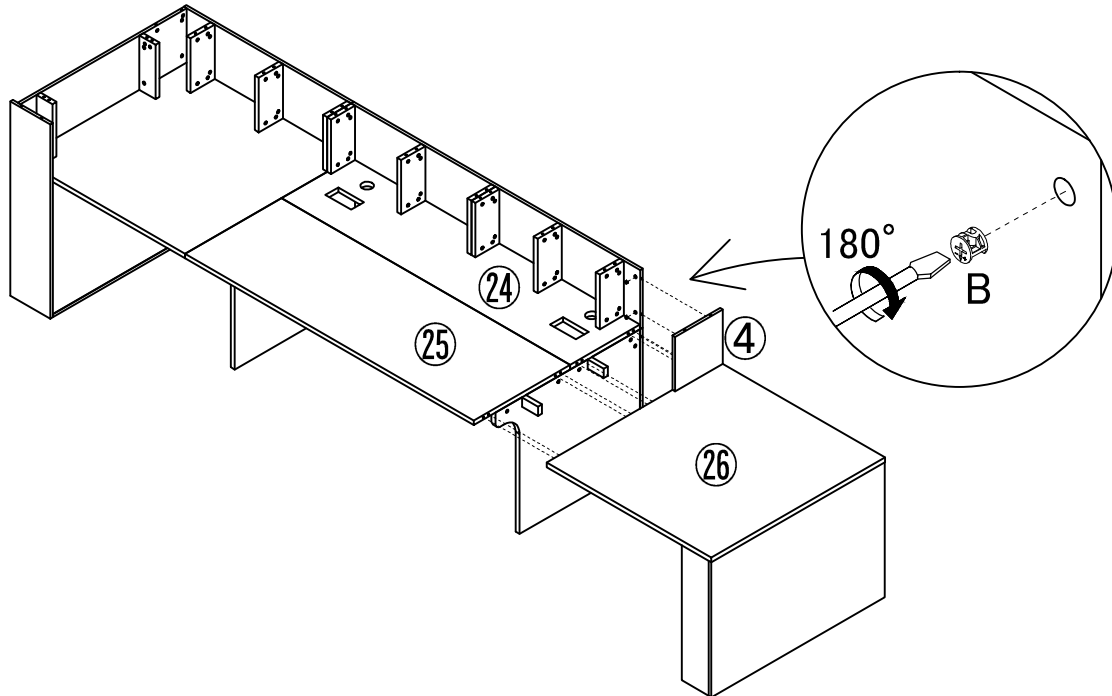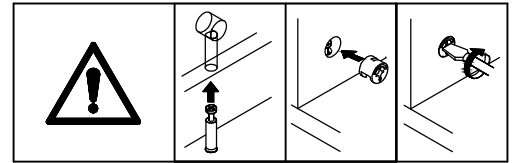


52



A×28



E×28



Insert the plastic inserts (E) into the panel ①,②,③ and then use a screwdriver to screw the bolts (A) into Panel ①, ②,③. Be careful not to use the wrong holes.

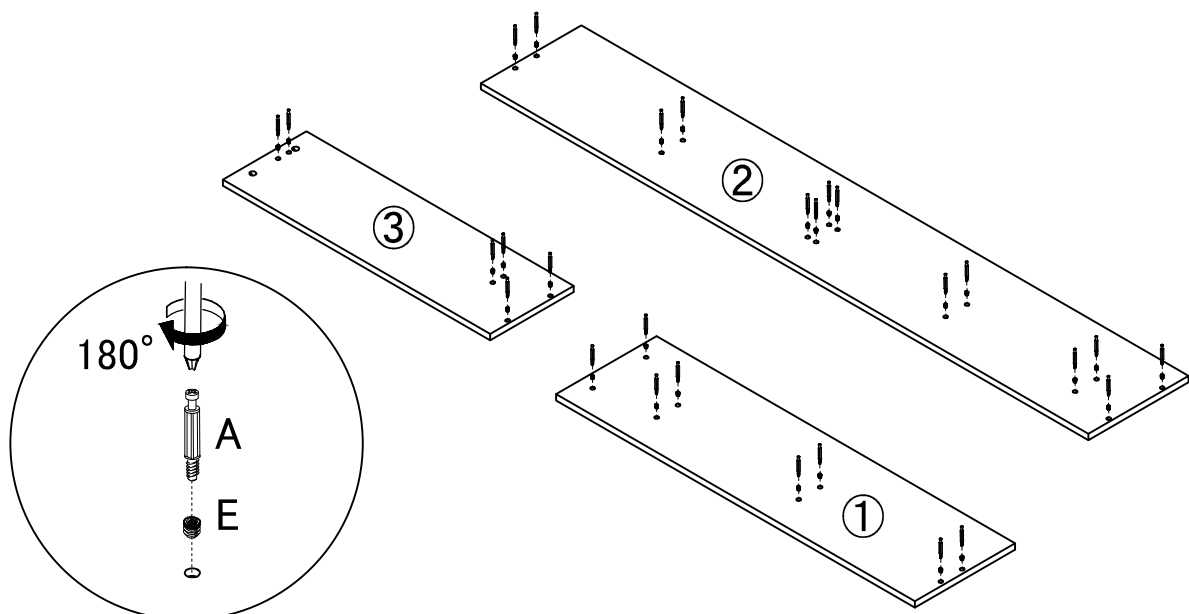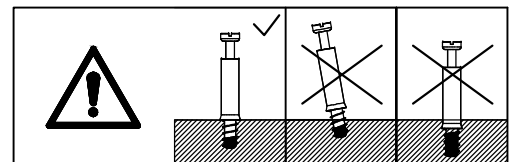


53



A×2



E×2




Insert the plastic inserts (E) into the panel ① and then use a screwdriver to screw the bolts (A) into Panel ①. Be careful not to use the wrong holes.

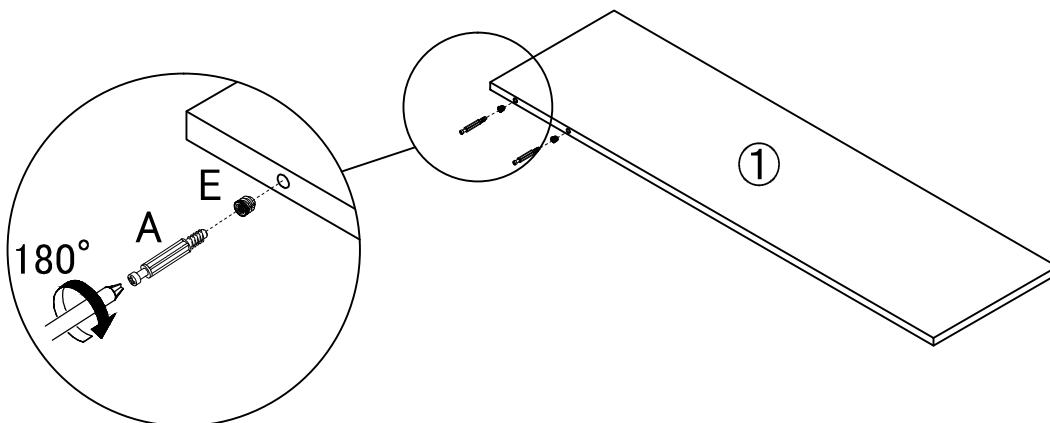
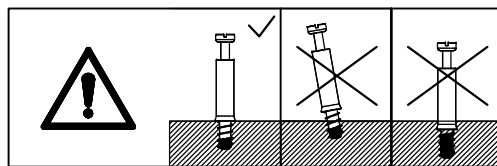


54

B×2

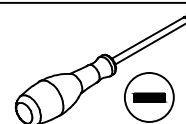


Secure Panels ③ using screws (B). Insert the cam locks from the three-in-one connectors into the holes and tighten them.


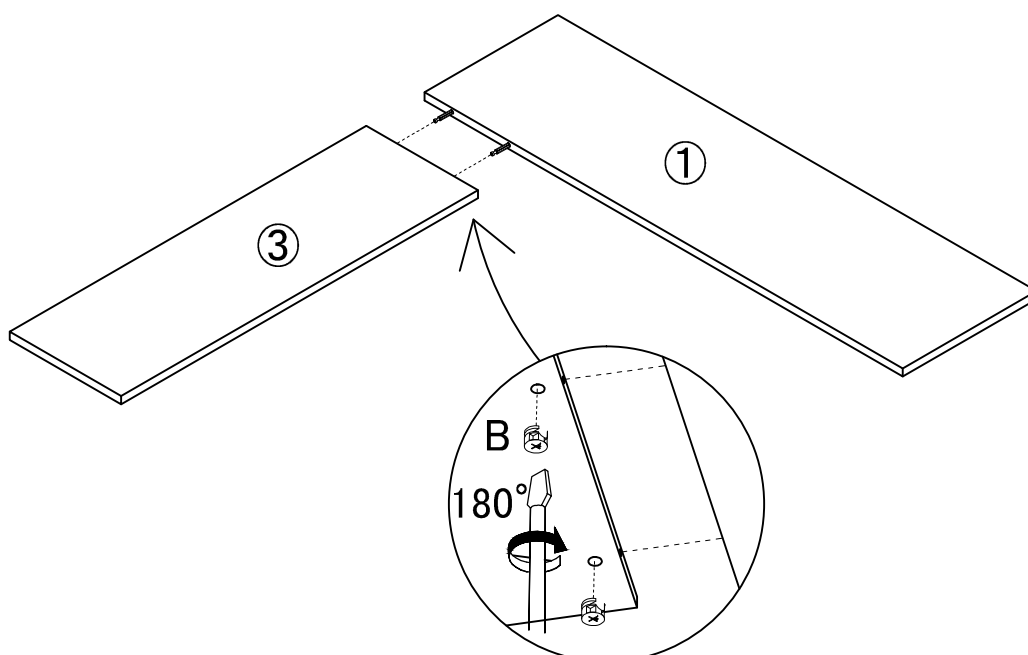
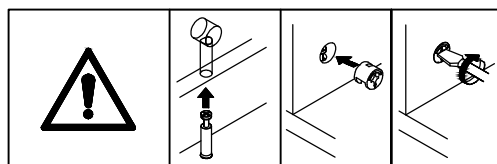


55

B×28

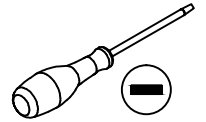


Secure Panels ①, ②, ③ using screws (B). Insert the cam locks from the three-in-one connectors into the holes and tighten them.

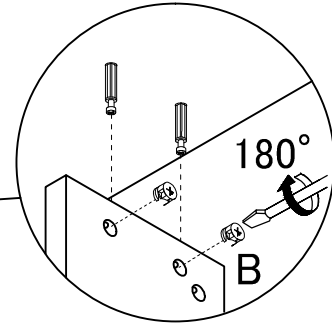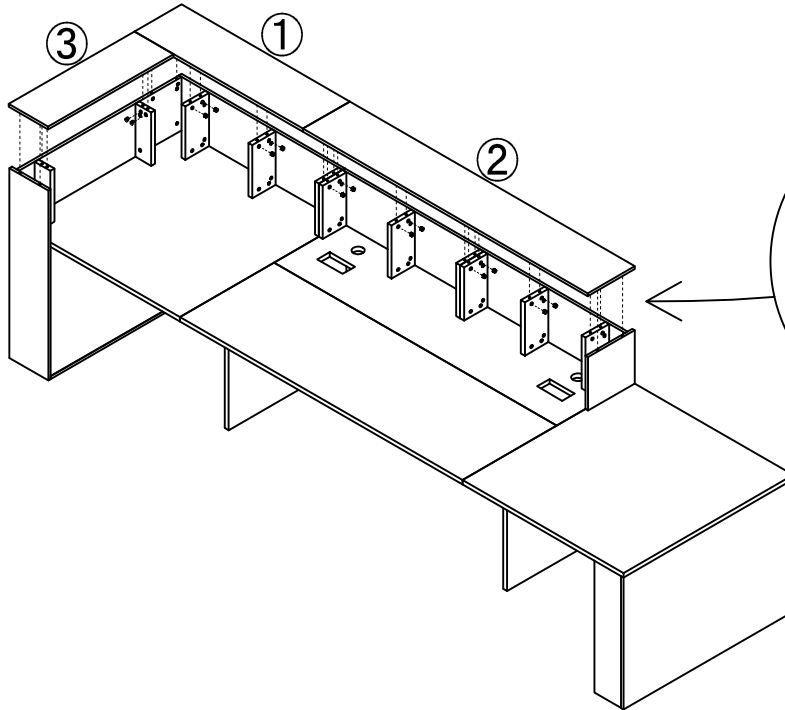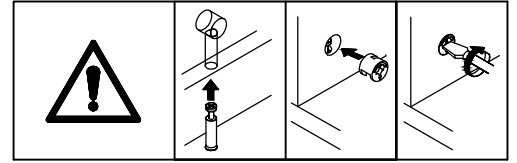


56

Place the plank ⑩ as shown in the picture.

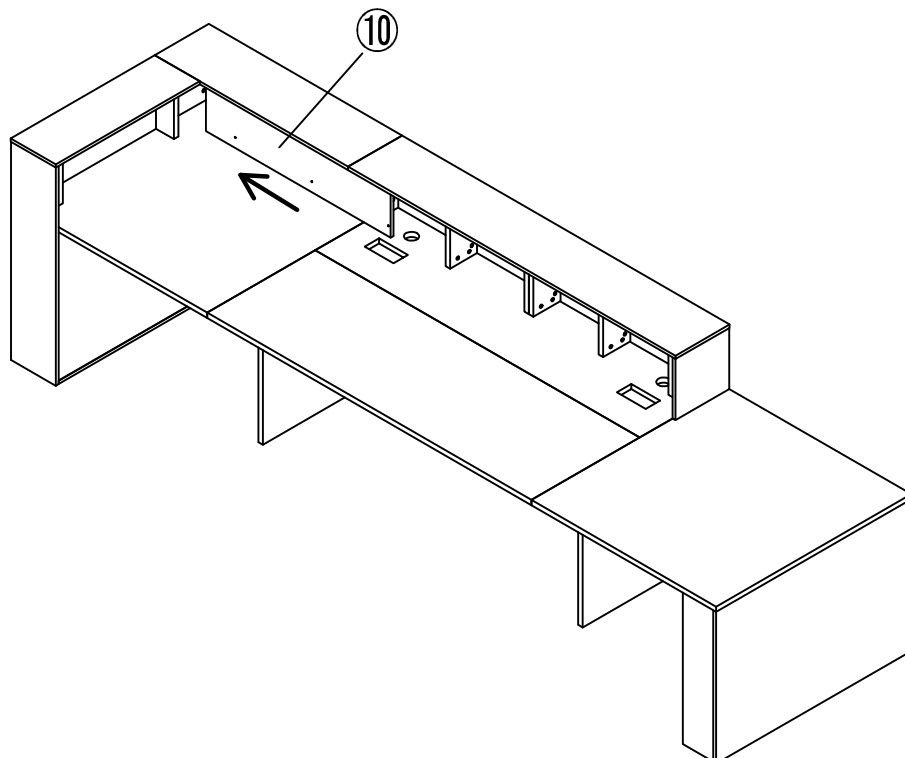


57

Place the plank ⑧,⑨ as shown in the picture.

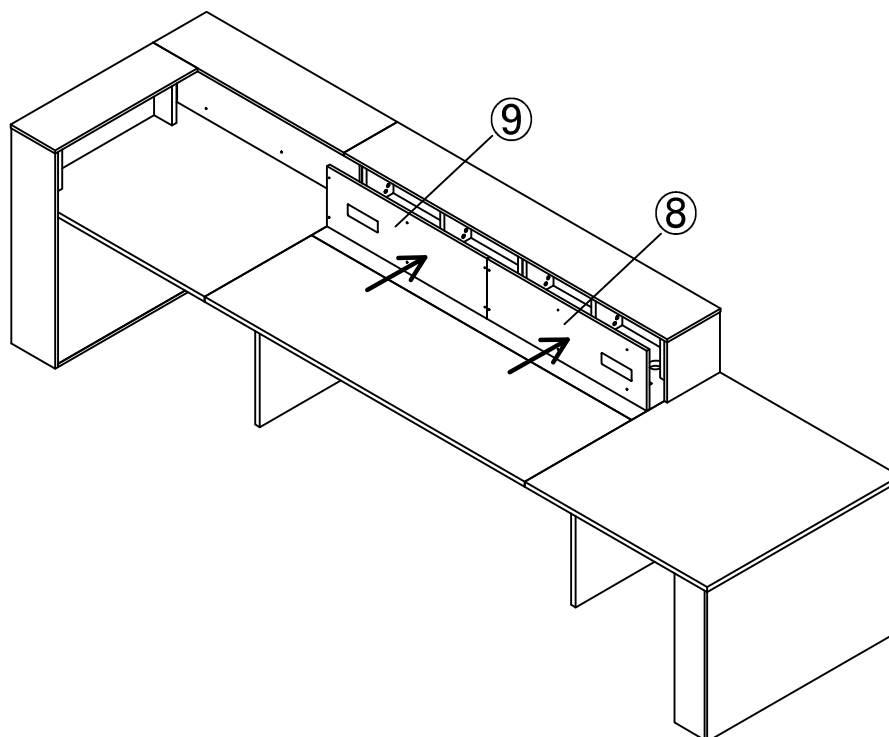



58

Place the plank ⑪ as shown in the picture.

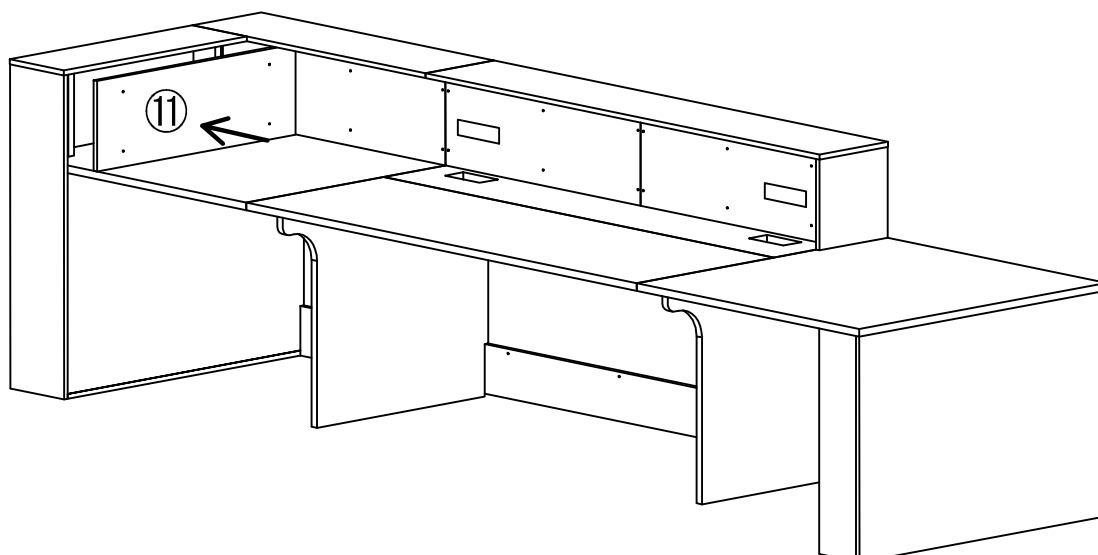


59

D×22



Secure Panels ⑪ and ⑫ using screws (D).

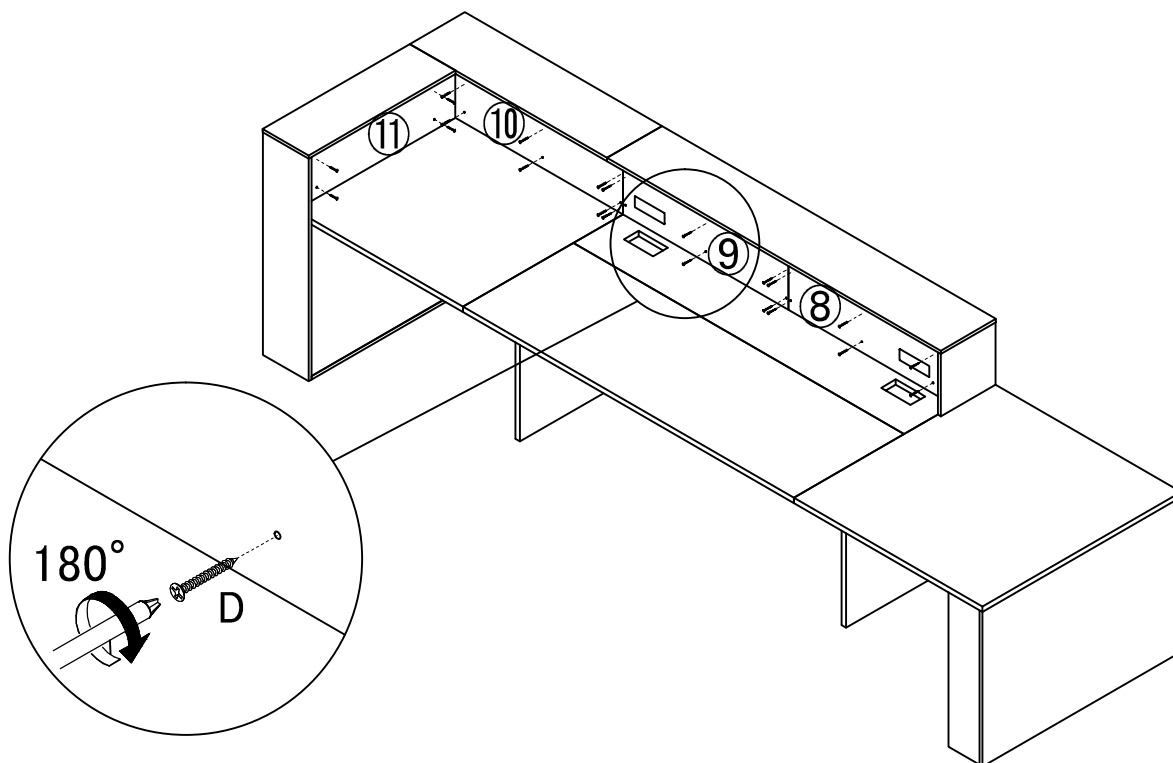

60


H×2




I×2





Tear off the double-sided tape and stick it on.

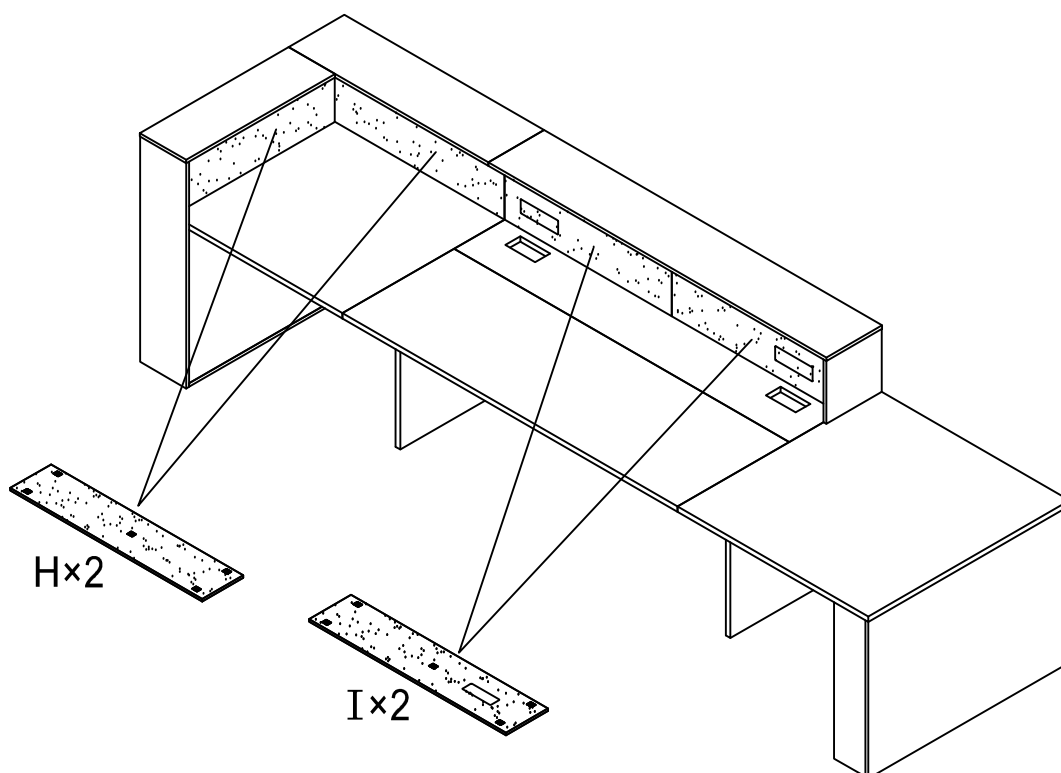

61



Install socket (J).

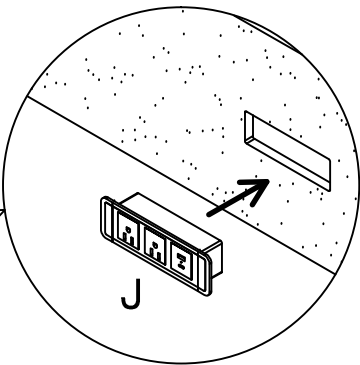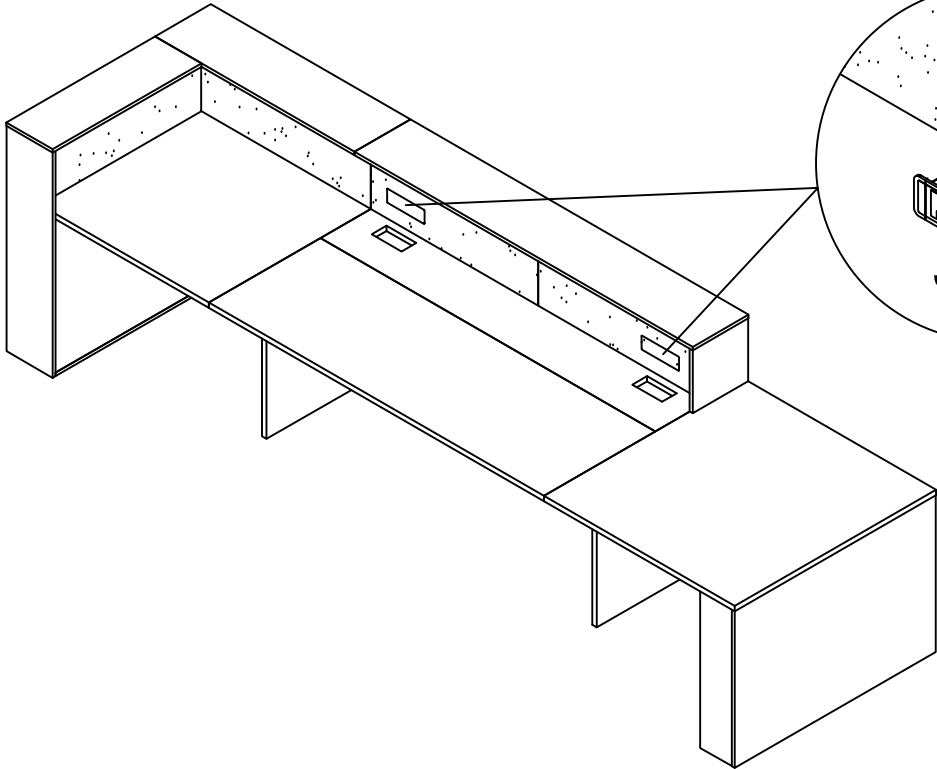

62



Install wiring box (K).

