

ASSEMBLY INSTRUCTION

Version: 1.0

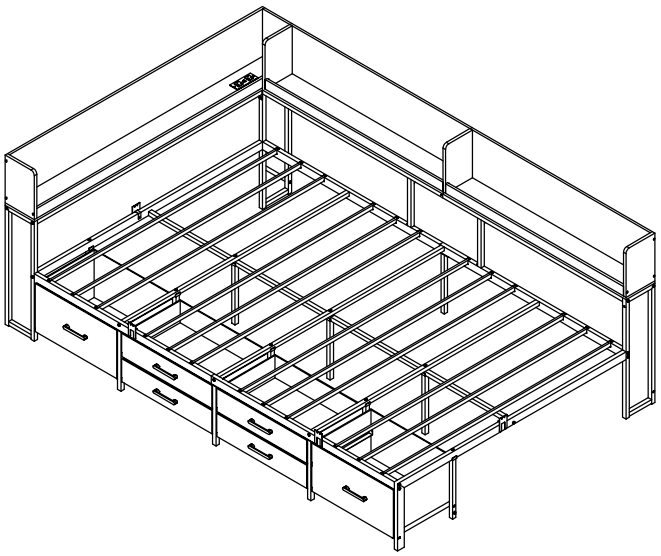

Assembly headboard at left side, please follow the assembly steps on page 6-27

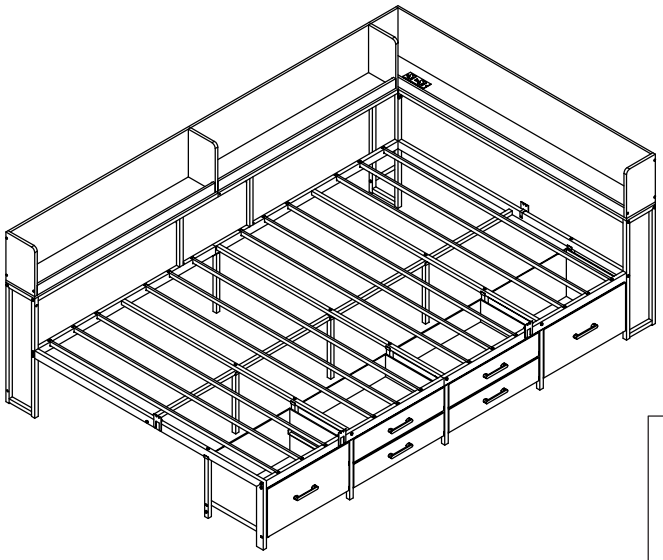



Assembly headboard at right side, please follow the assembly steps on page 28-50































MSWSC100110701A
MSWSC100110702A

Note:
Should be assembled on flat ground to keep balance.
It needs at least two people to install.
Before starting the assembly, you must read the whole manual and follow the instructions.












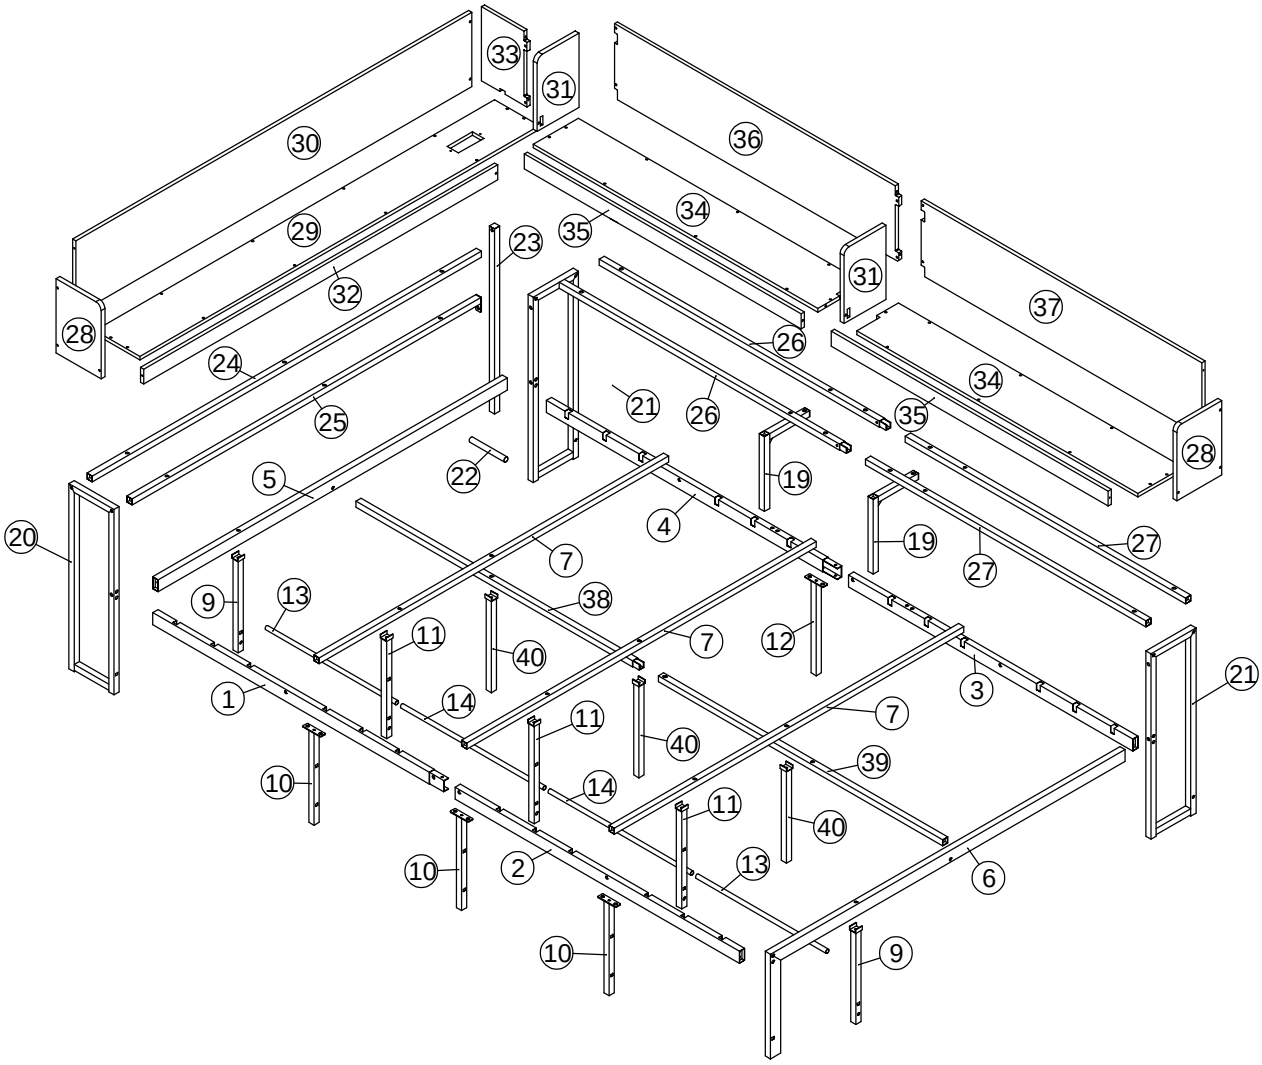

33
31
30
36
34
35
29
23
31
32
37
28
26
24
34
21
26
35
25
28
22
19
5
4
20
19
27
7
27
9
13
38
11
40
7
12
21
1
14
3
7
11
40
39
10
14
11
40
10
2
13
6
10
9

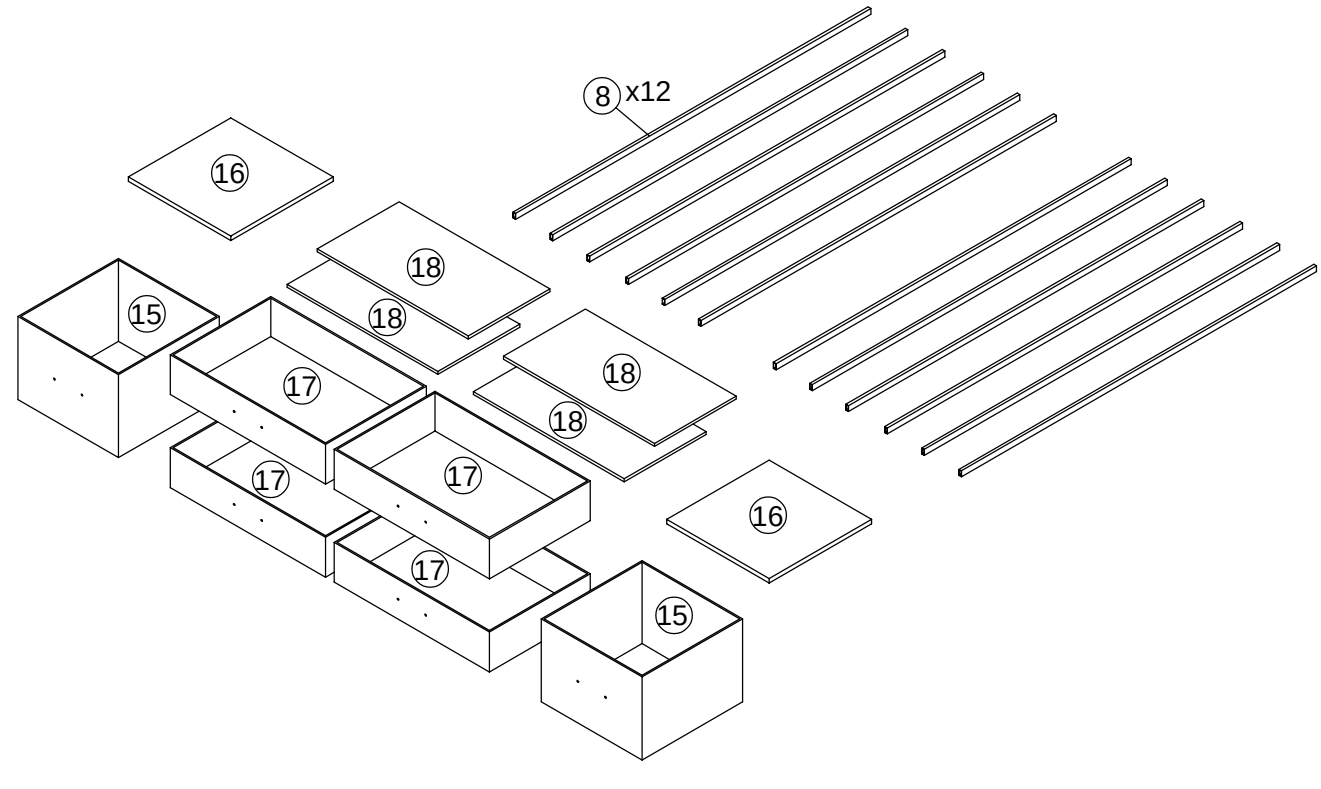
8 x12
16
18
15
18
18
17
18
17
17
16
17
15














PARTS LIST

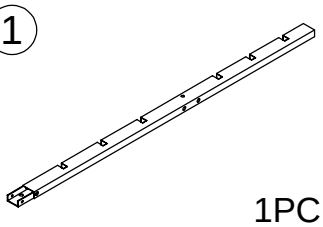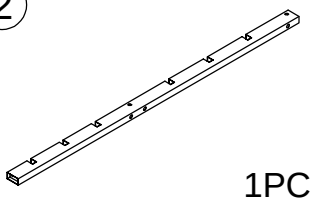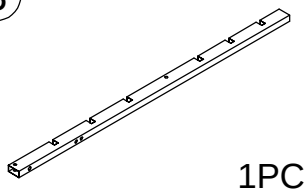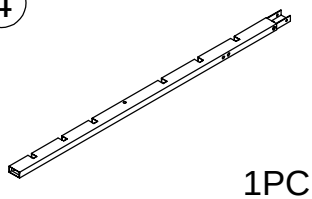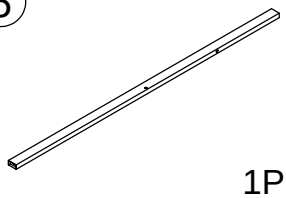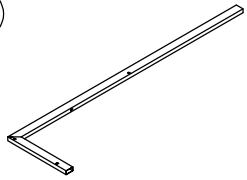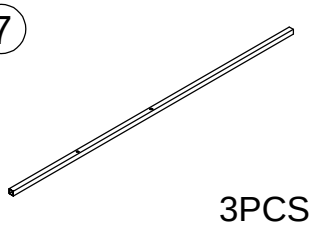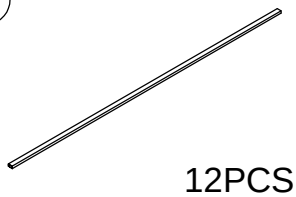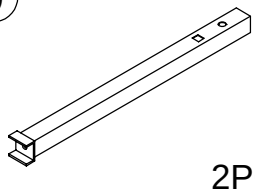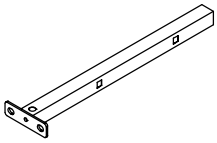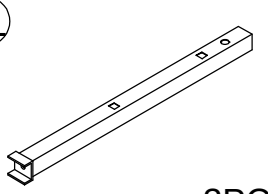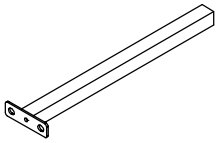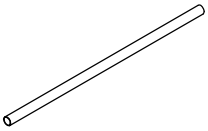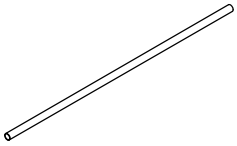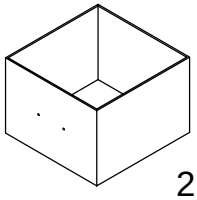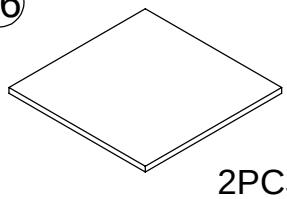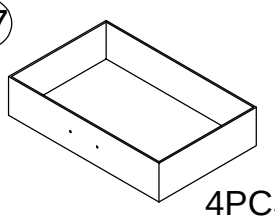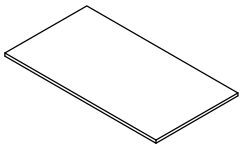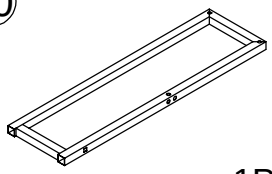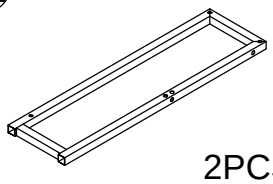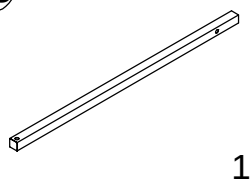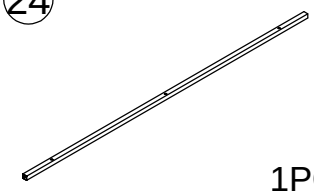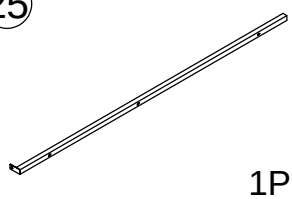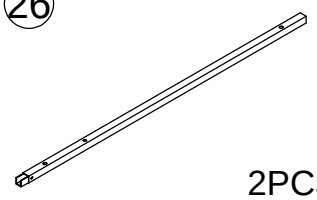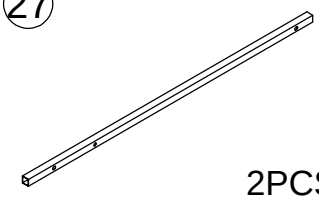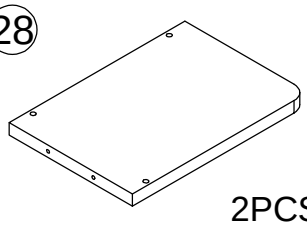1  1PC	2  1PC	3  1PC	4  1PC
5  1PC	6  1PC	7  3PCS	8  12PCS
9  2PCS	10  3PCS	11  3PCS	12  1PC
13  2PCS	14  2PCS	15  2PCS	16  2PCS
17  4PCS	18  4PCS	19  2PCS	20  1PC
21  2PCS	22  1PC	23  1PC	24  1PC
25  1PC	26  2PCS	27  2PCS	28  2PCS



PARTS LIST

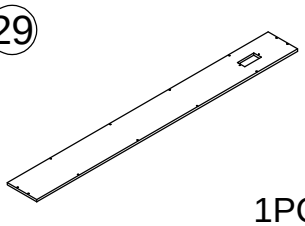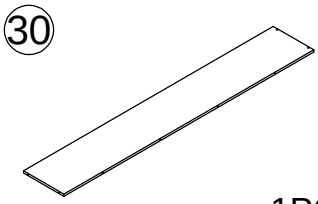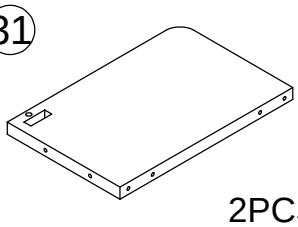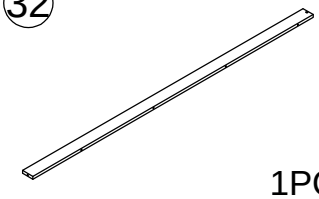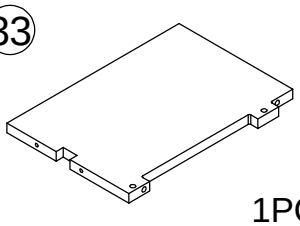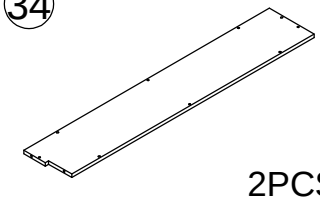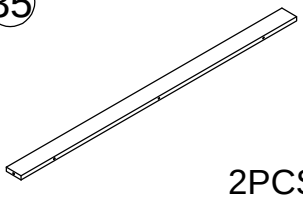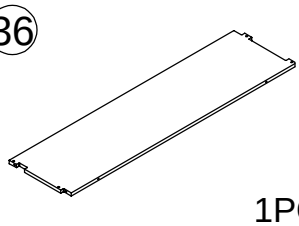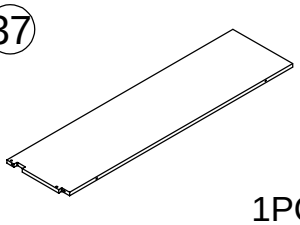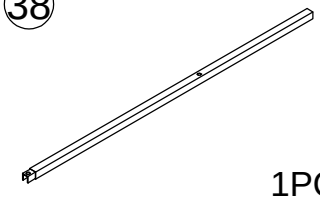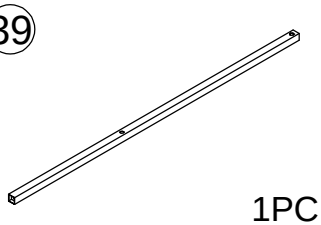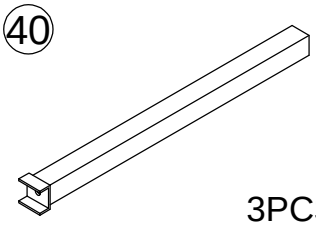29  1PC	30  1PC	31  2PCS	32  1PC
33  1PC	34  2PCS	35  2PCS	36  1PC
37  1PC	38  1PC	39  1PC	40  3PCS

PARTS LIST

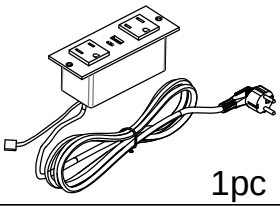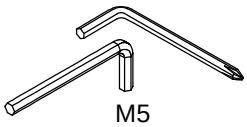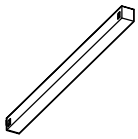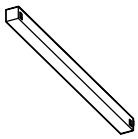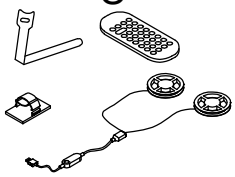
A	B	C	D	E
 M6x12 17pcs+1	 M6x28 14pcs+1	 M6x40 26pcs+2	 M6x60 7pcs+1	 M8x40 11pcs+1
F	**G**	**H**	**I**	**J**
 M6x50 3pcs+1	 M5x38 47pcs+2	 Ø6x30 6pcs+1	 Ø6x60 1pc+1	 3pcs
K	**L**	**M**	**N**	**O**
 Ø3.5x12 2pcs+1	 1pc	 4pcs	 M5 1+1pc	 M4 2pcs
P	**Q**	**R**	**S**	**T**
 6pcs	 M4x10 12pcs+2	 6pcs	 6pcs	 M3 2pcs
U	**V**			
 1pc	 1pc			

Step 1


C	E
	
M6x40	M8x40
2pcs	2pcs

Attention to #5
part hole towards

Step 2

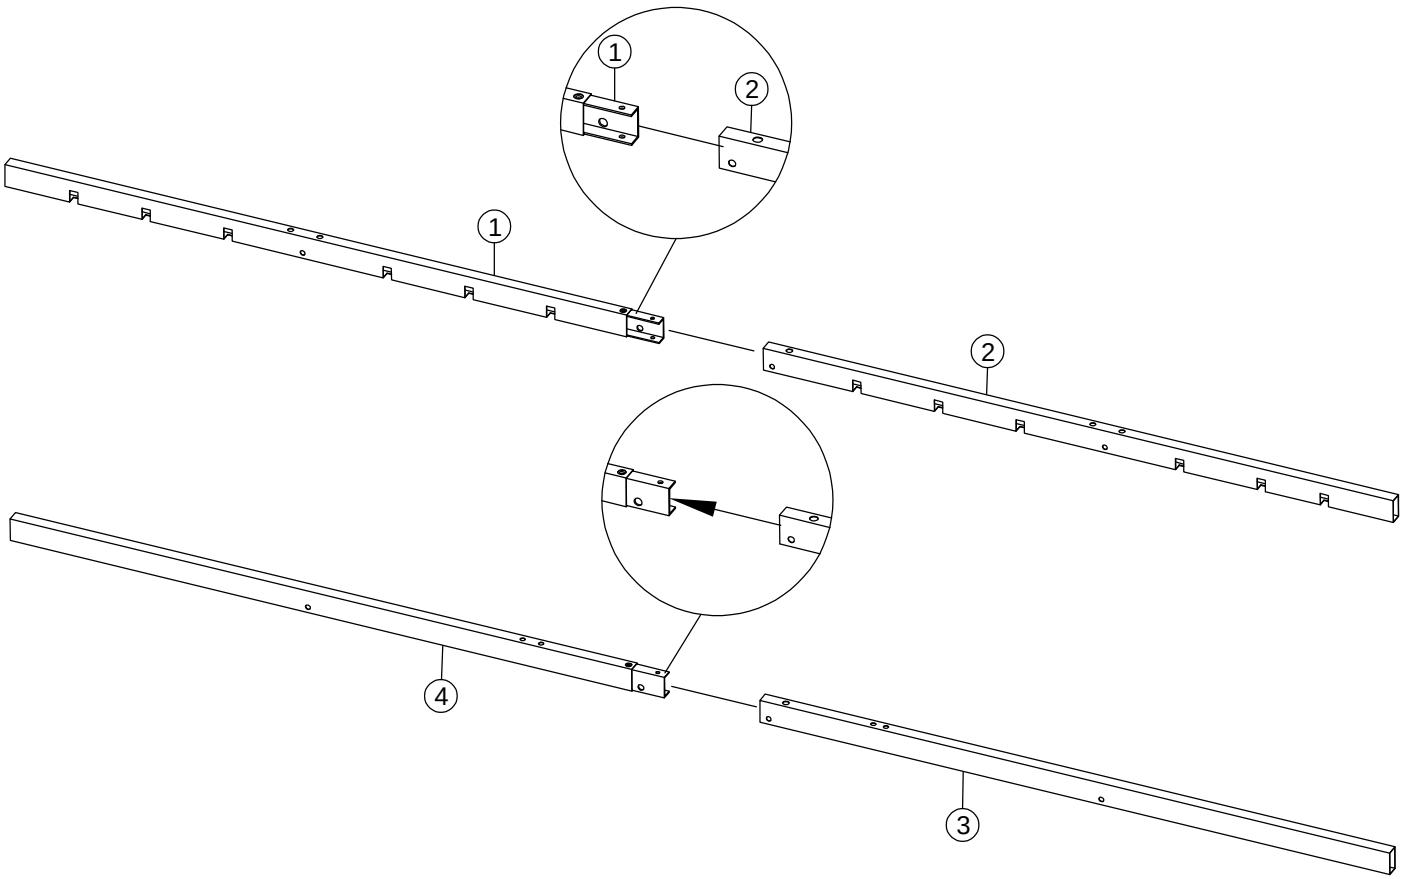

Step 3

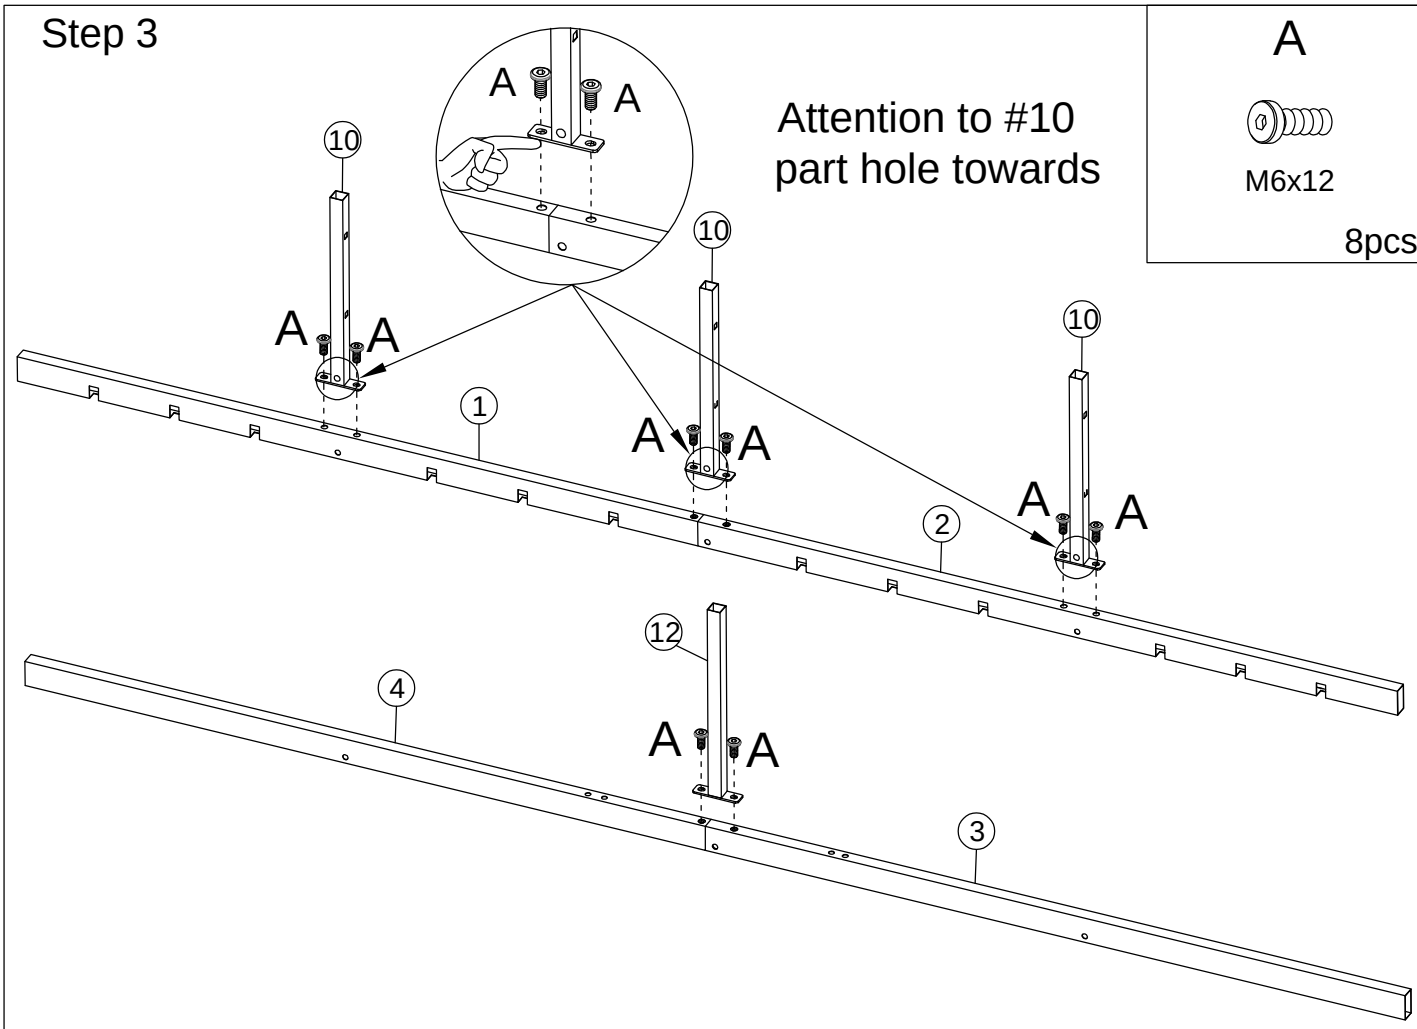


A

M6x12

8pcs

Step 4

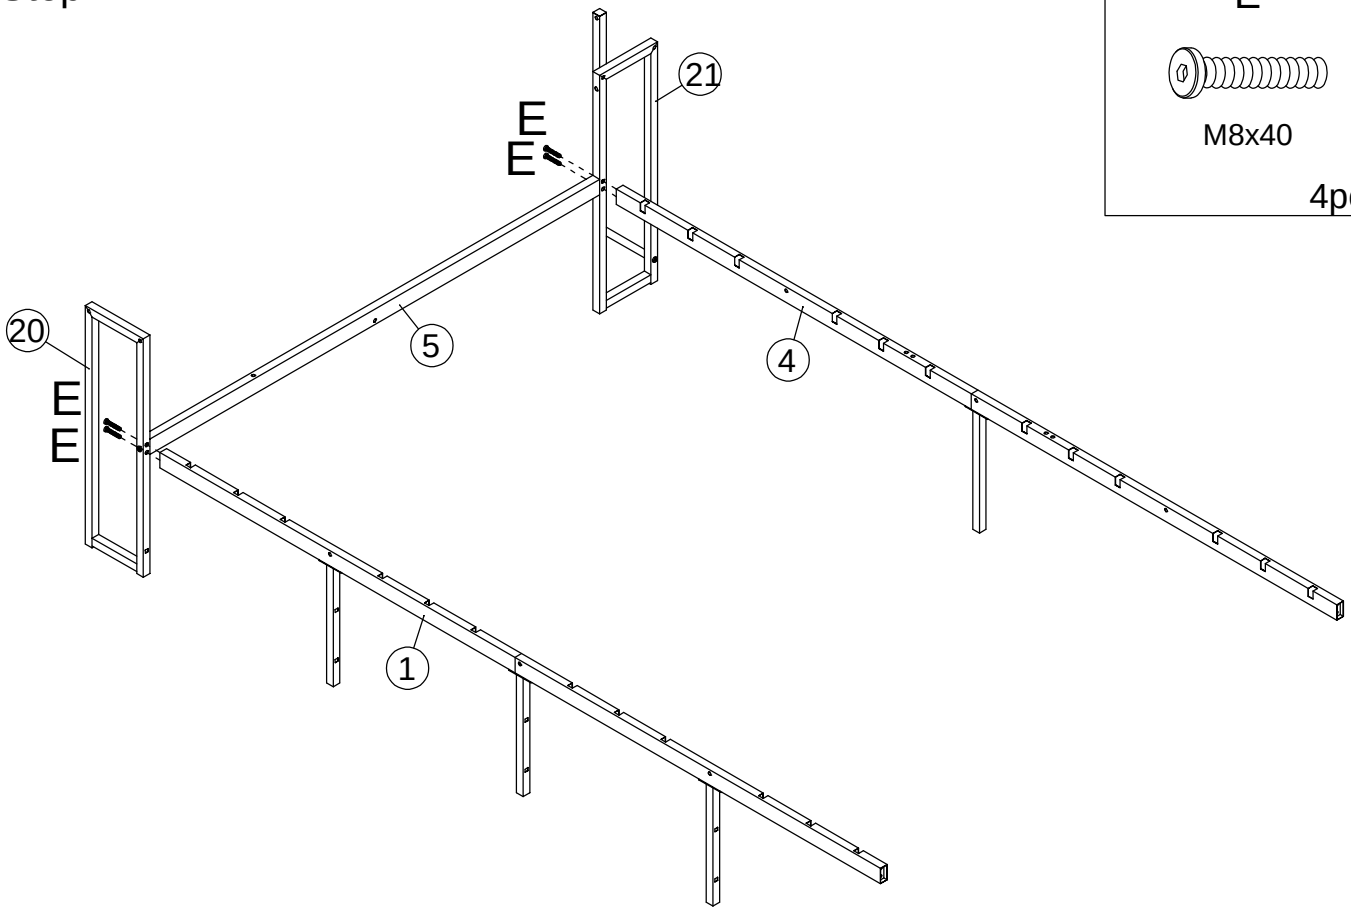


E

M8x40

4pcs


Step 5

E




M8x40

1pc

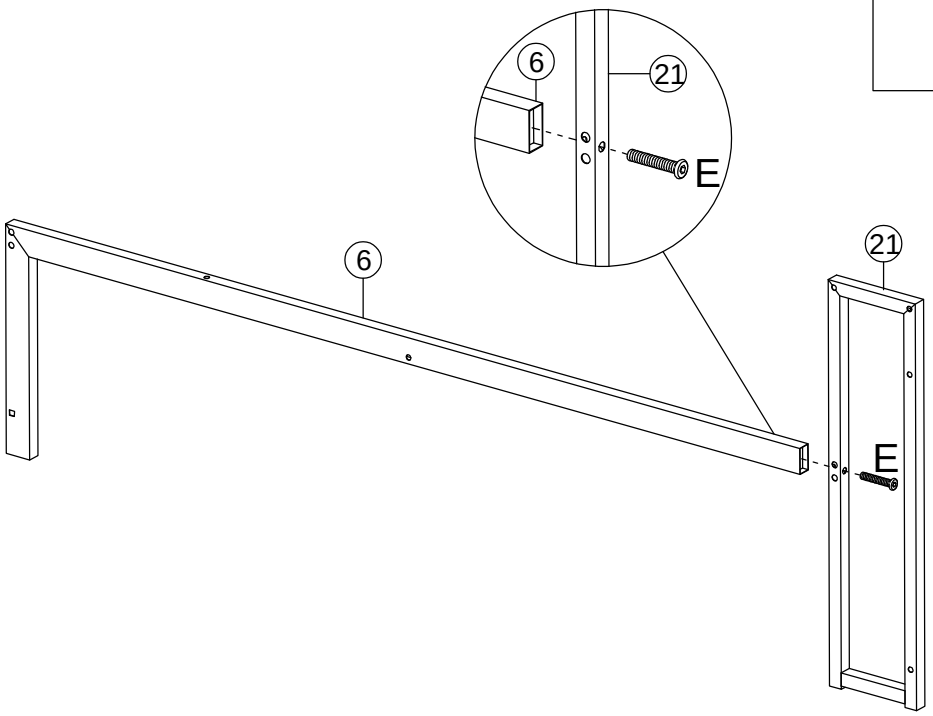

Step 6


E



M8x40


4pcs


Step 7

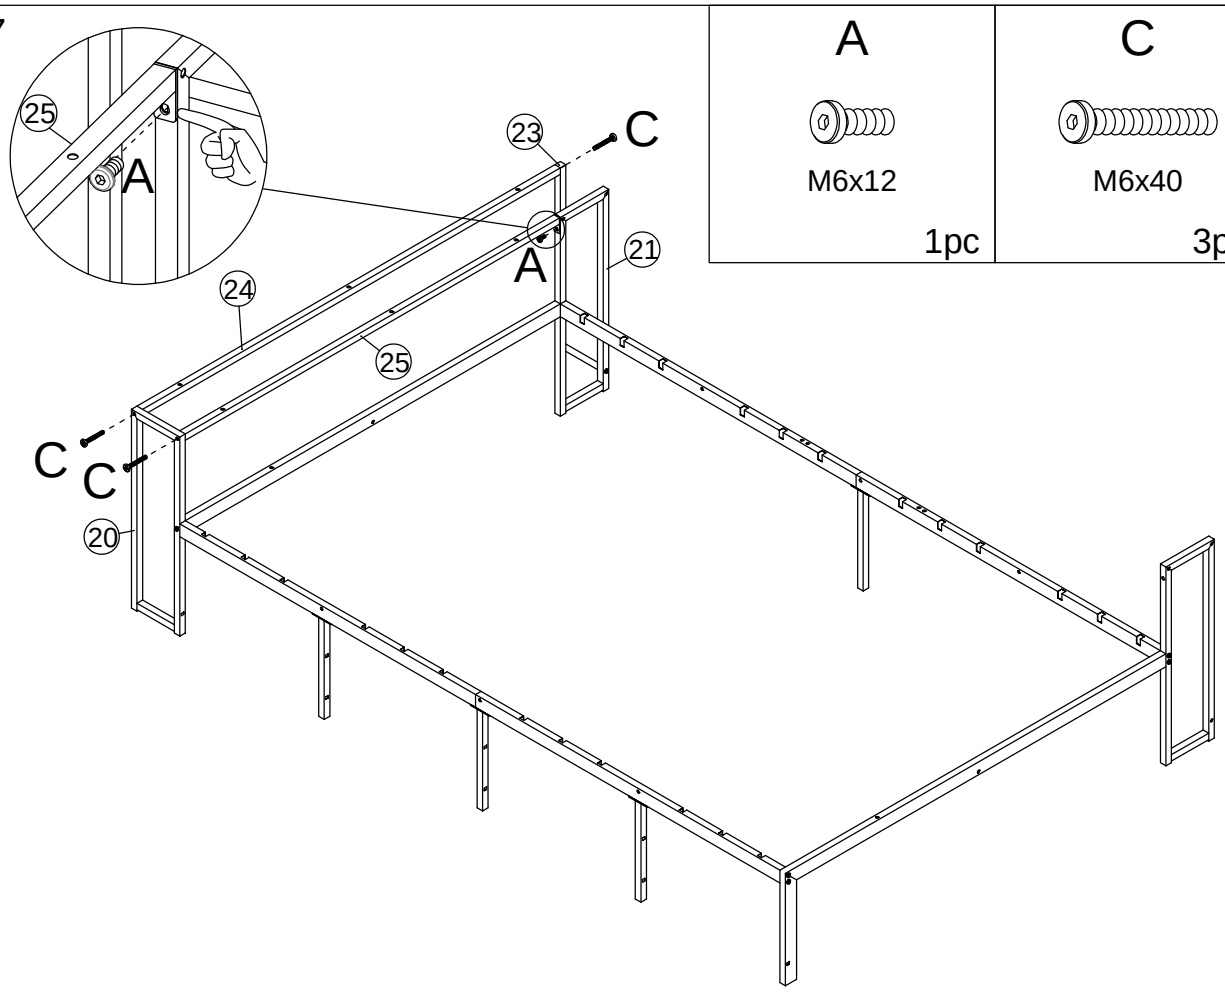

A	C
M6x12	M6x40
1pc	3pcs

Step 8

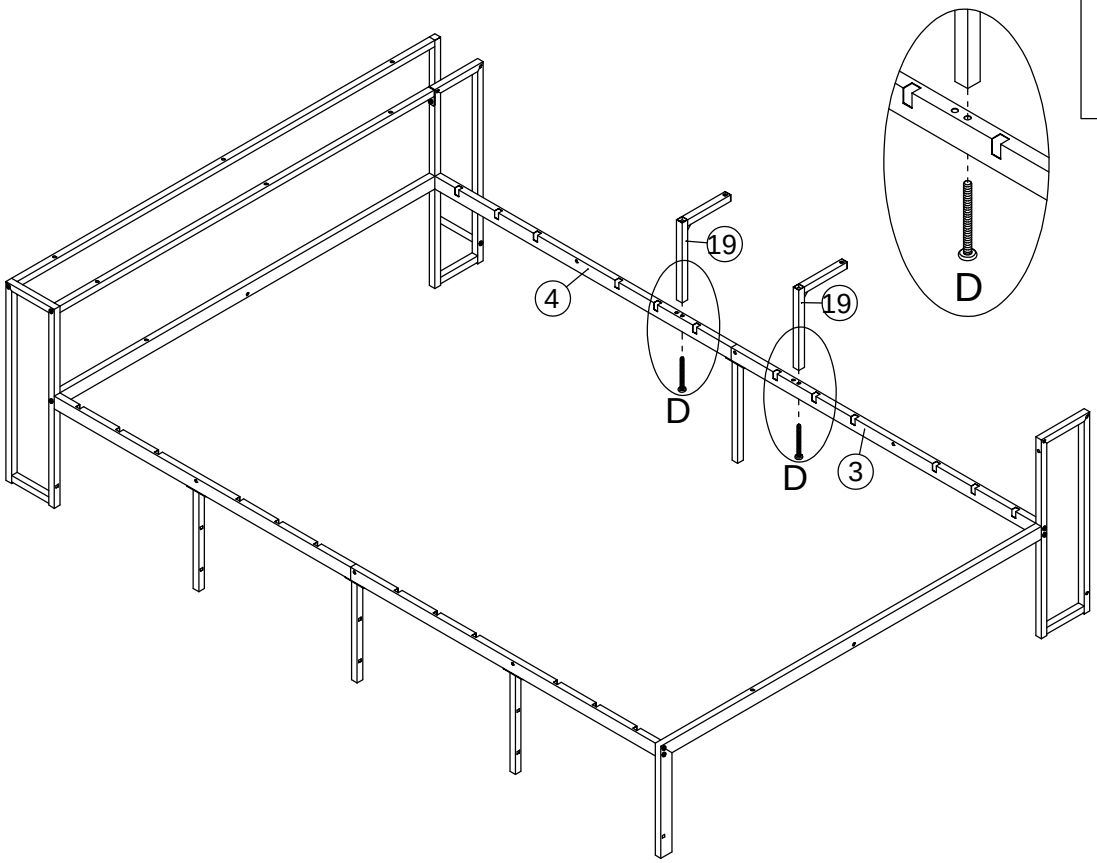

D

M6x60
2pcs

Step 9

A




M6x12

2pcs

x2


Step 10

C




M6x40

8pcs

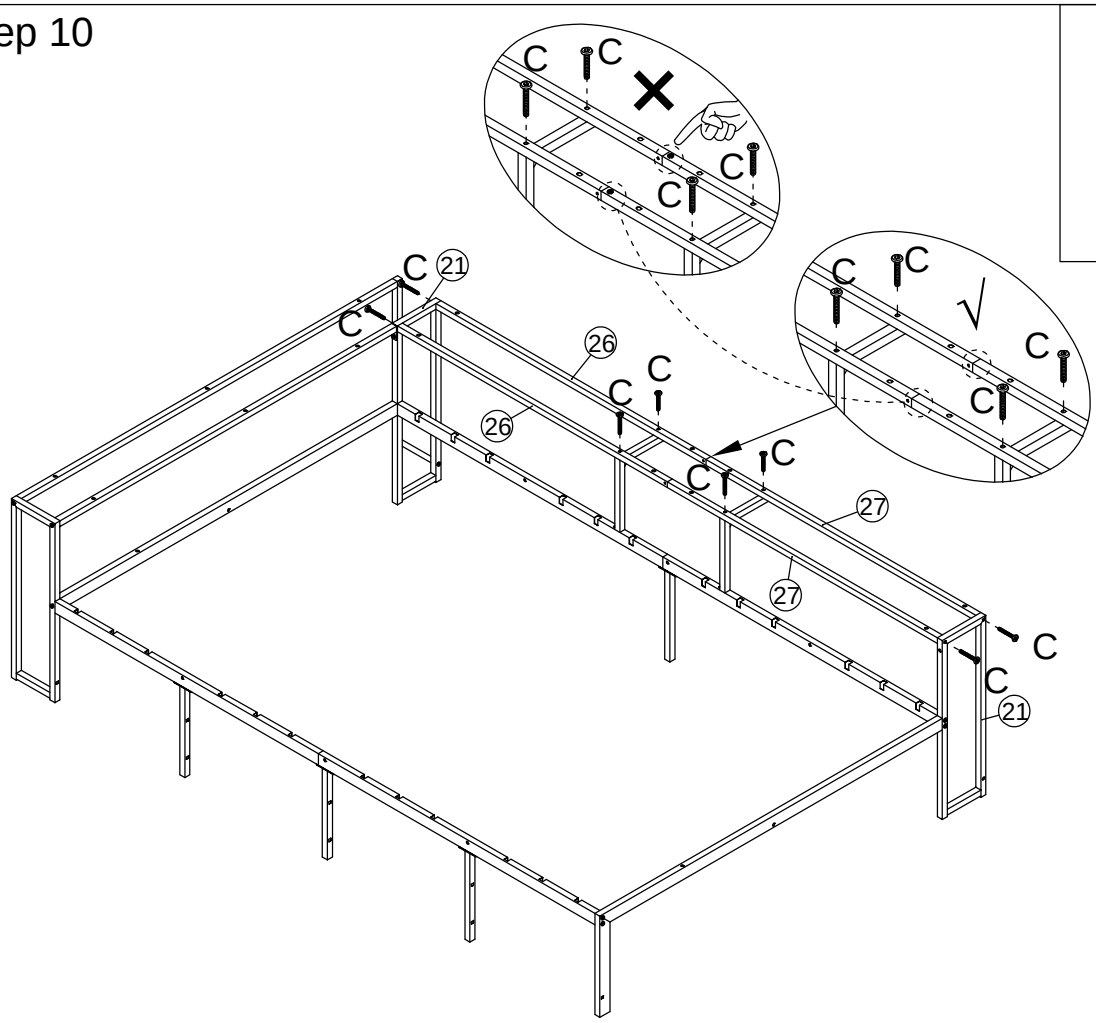


Step 11


J	A
	 M6x12
3pcs	3pcs

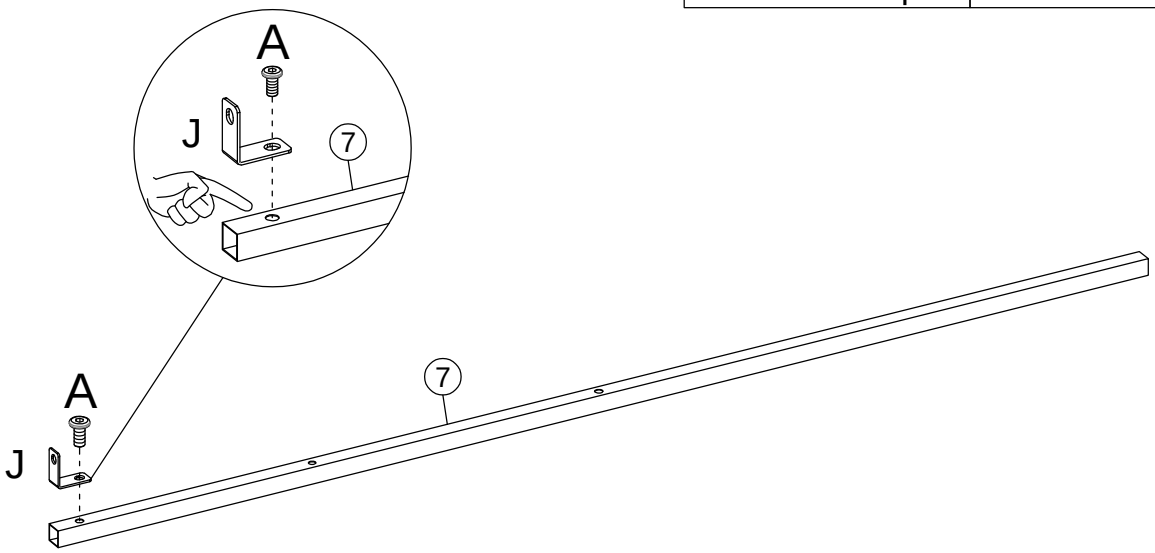


x3

Step 12

A	C
 M6x12	 M6x40
3pcs	6pcs

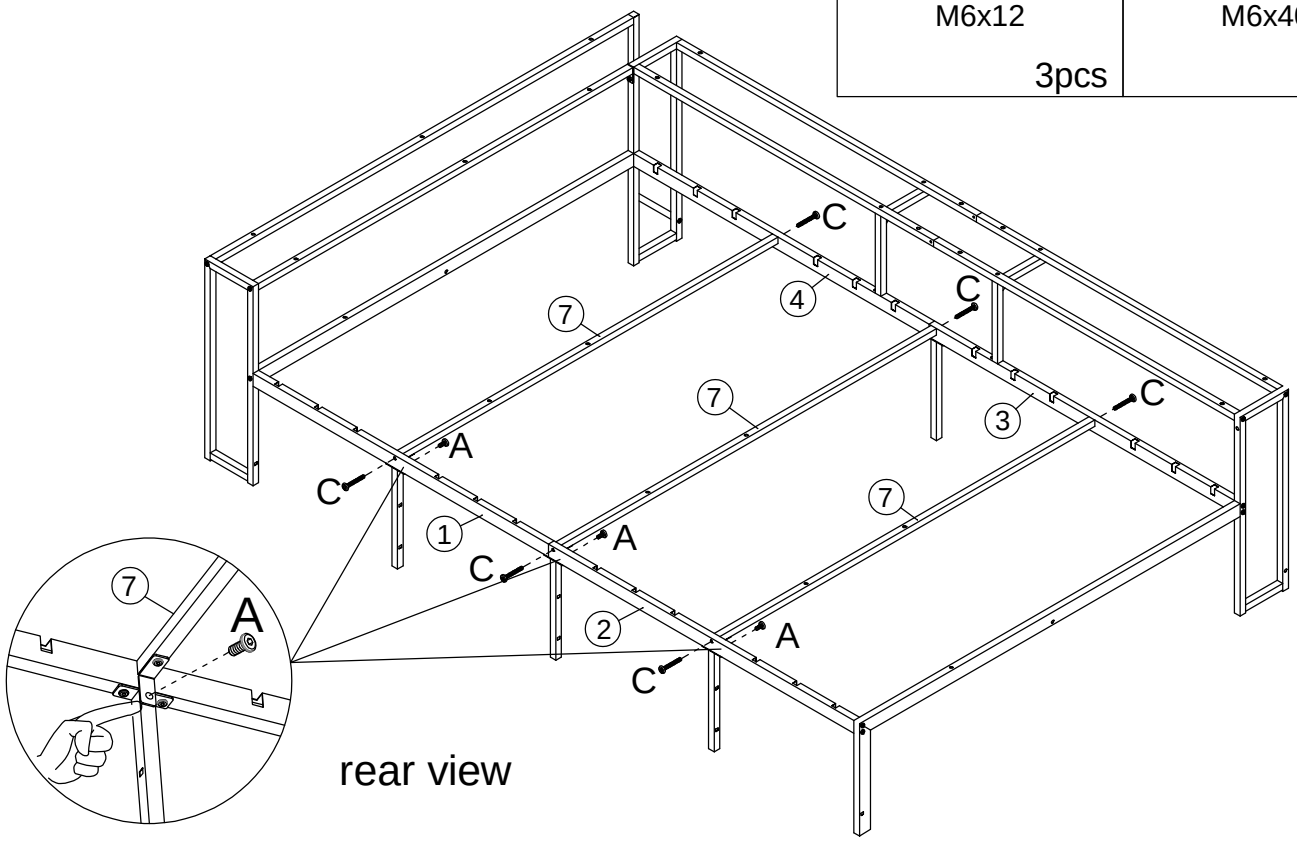

Step 13

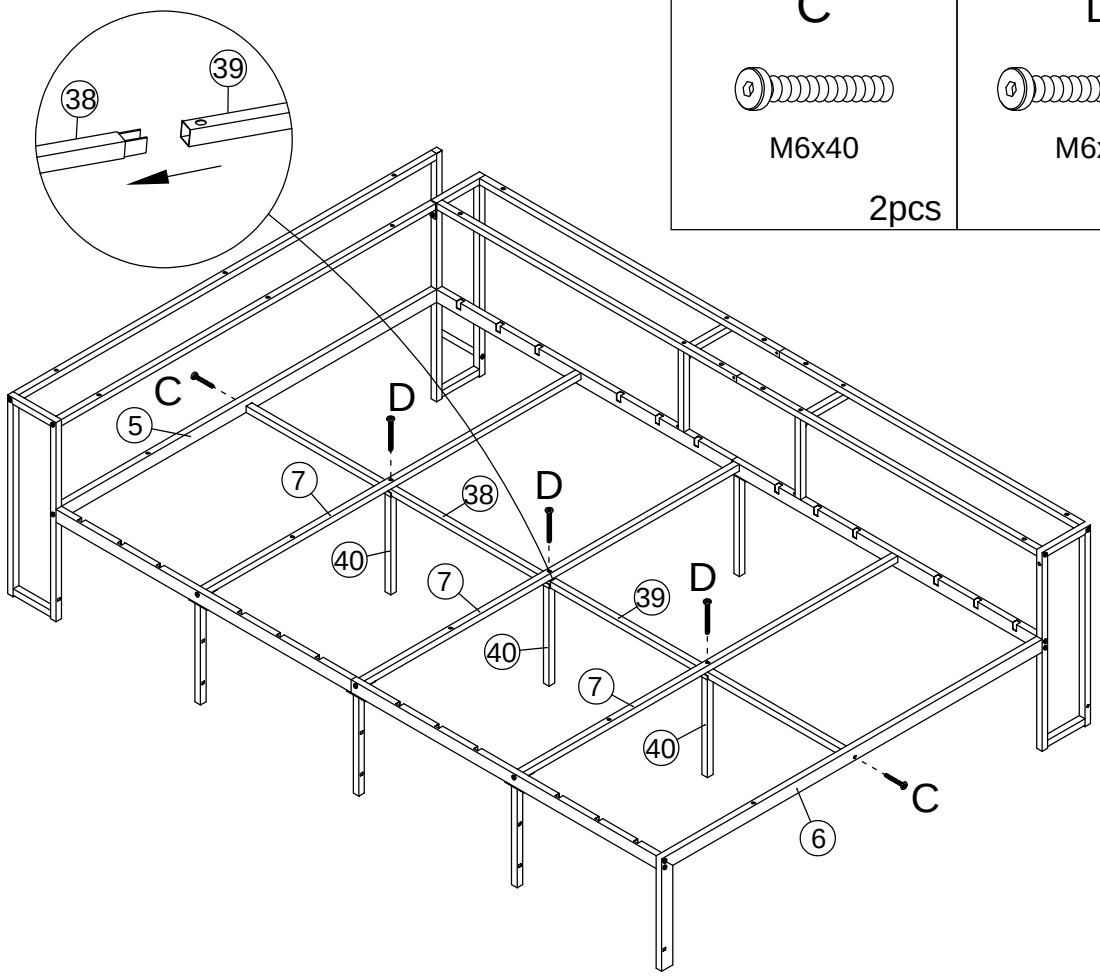


C

M6x40

2pcs

D




M6x60

3pcs


Step 14

F




M6x50

3pcs

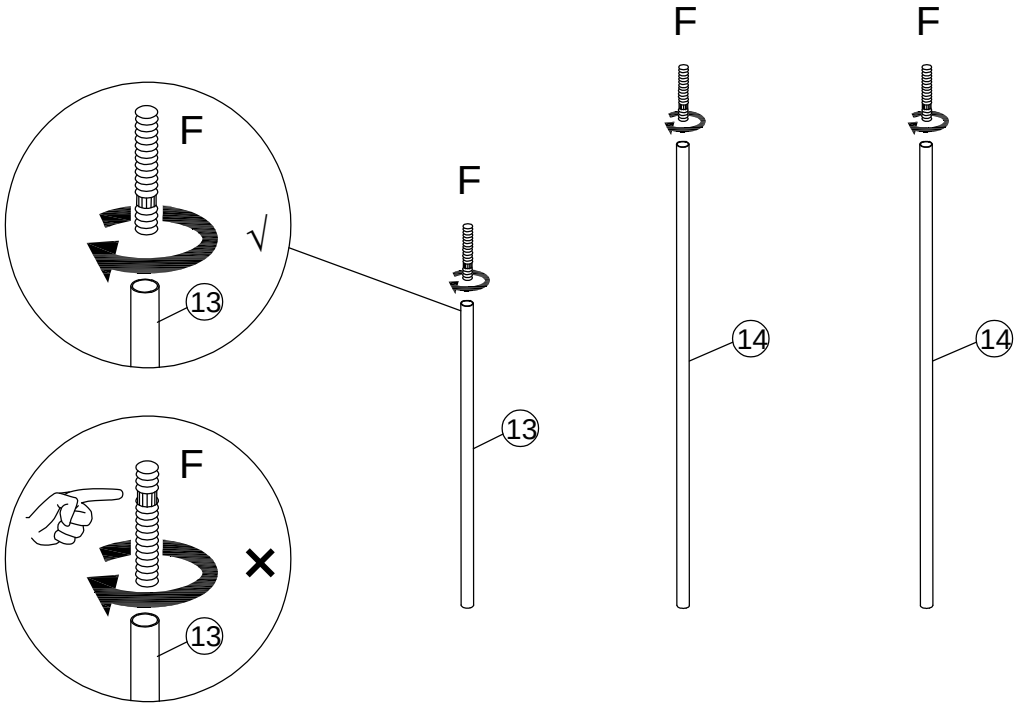


Step 15

C




M6x40


1pc

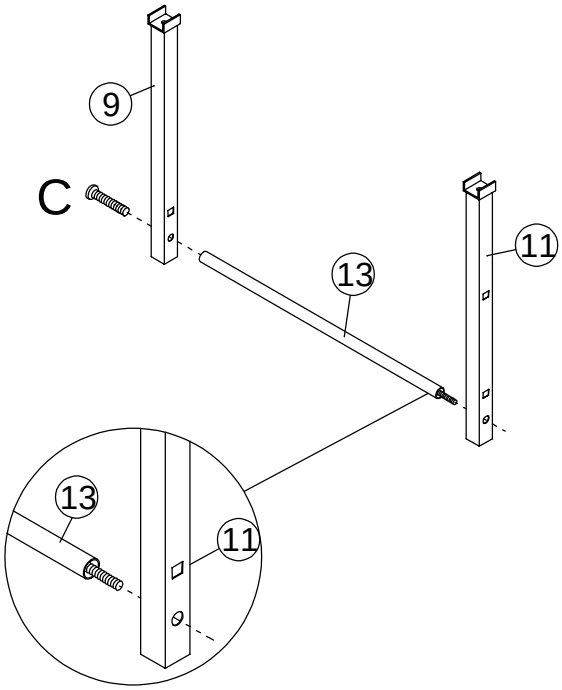

Step 16

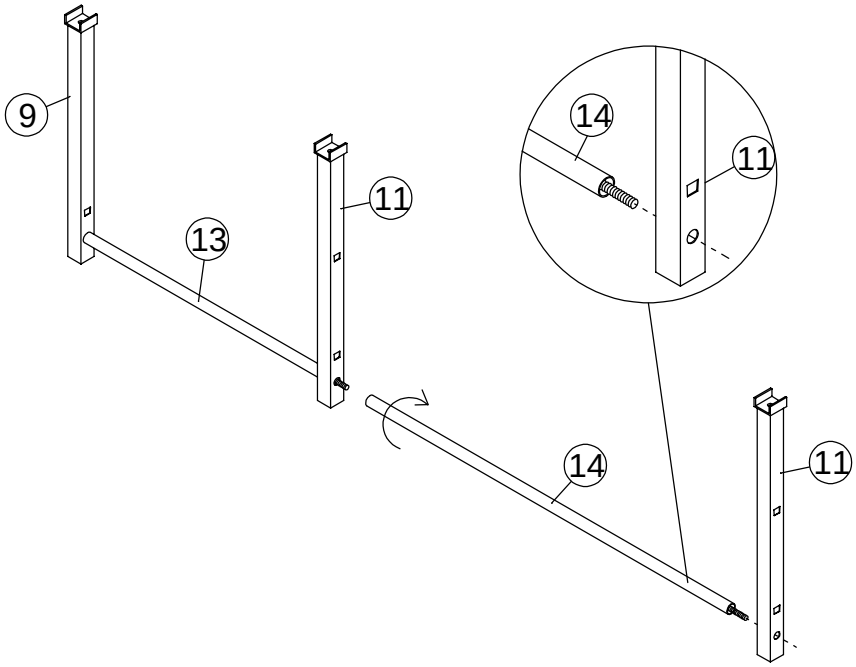


Step 17

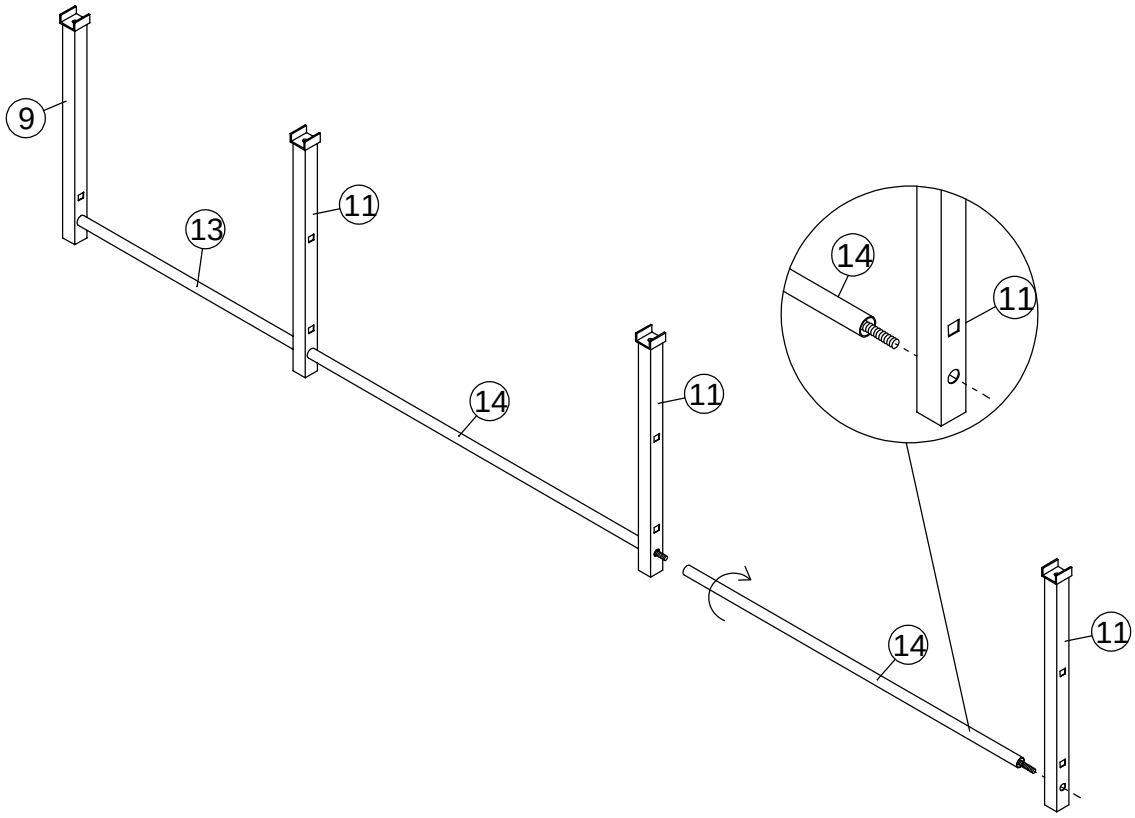


Step 18

C






M6x40

1pc

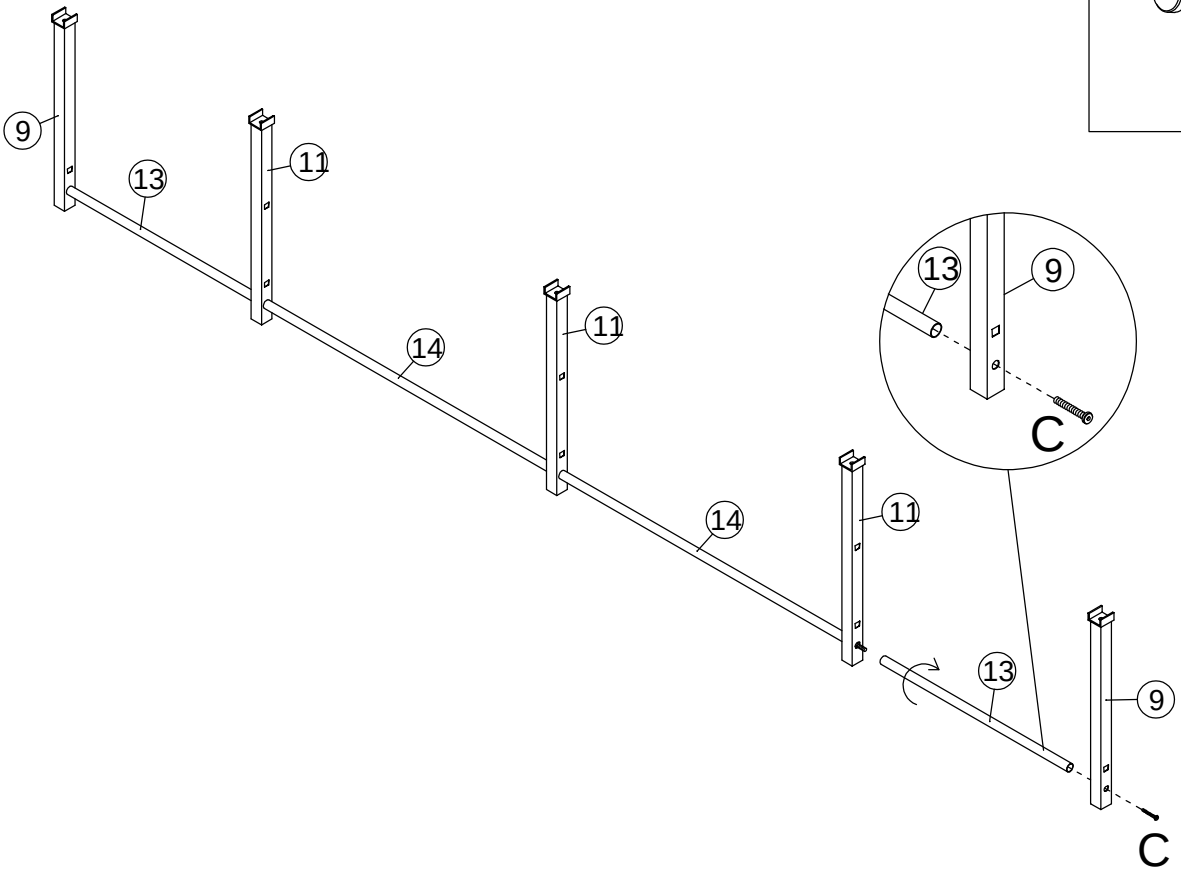

Step 19


C	D
	
M6x40	M6x60
3pcs	2pcs

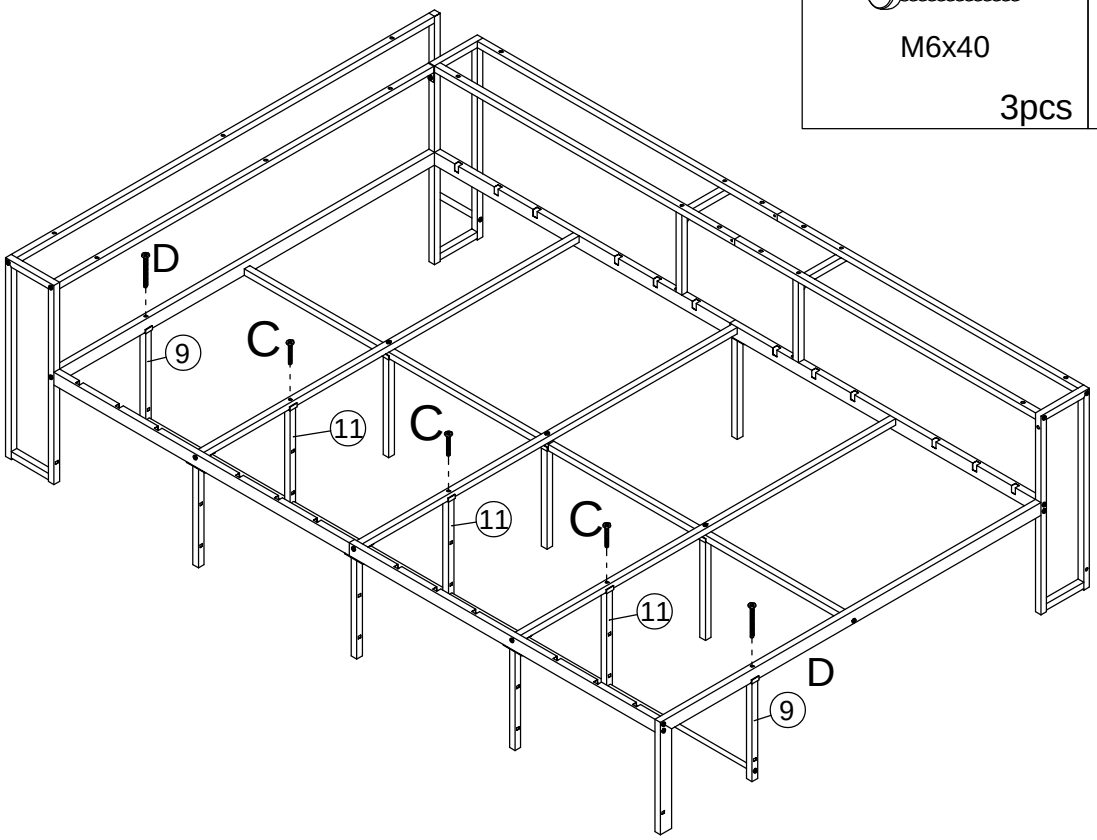

Step 20


V

1pc

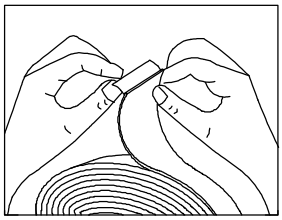


Step 21

Tighten all screws

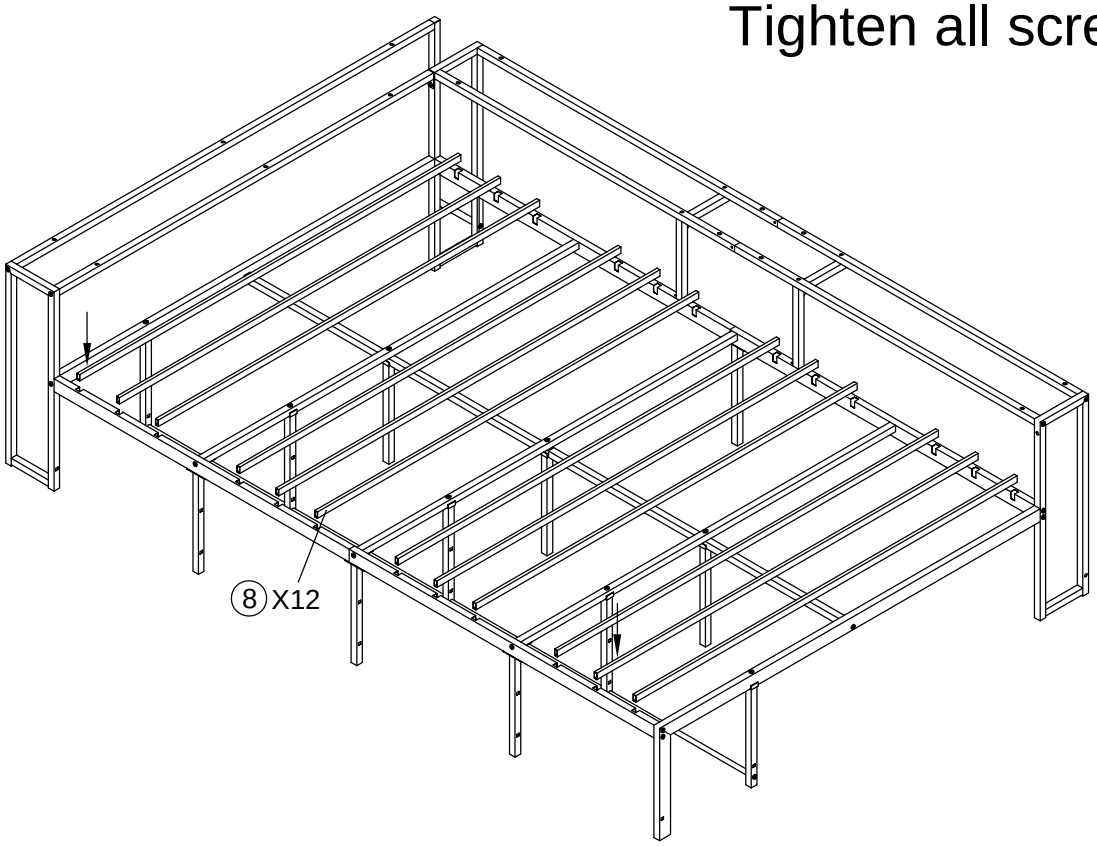


Step 22

G




M5x38

8pcs

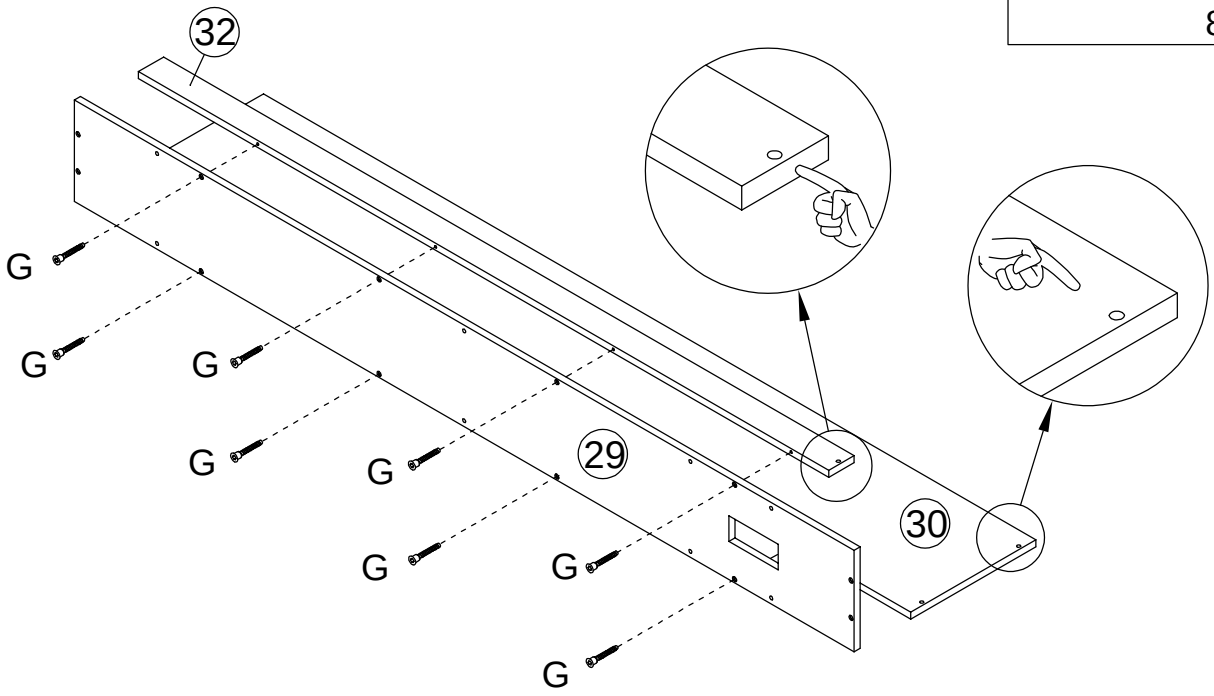


Step 23

G



M5x38

9pcs

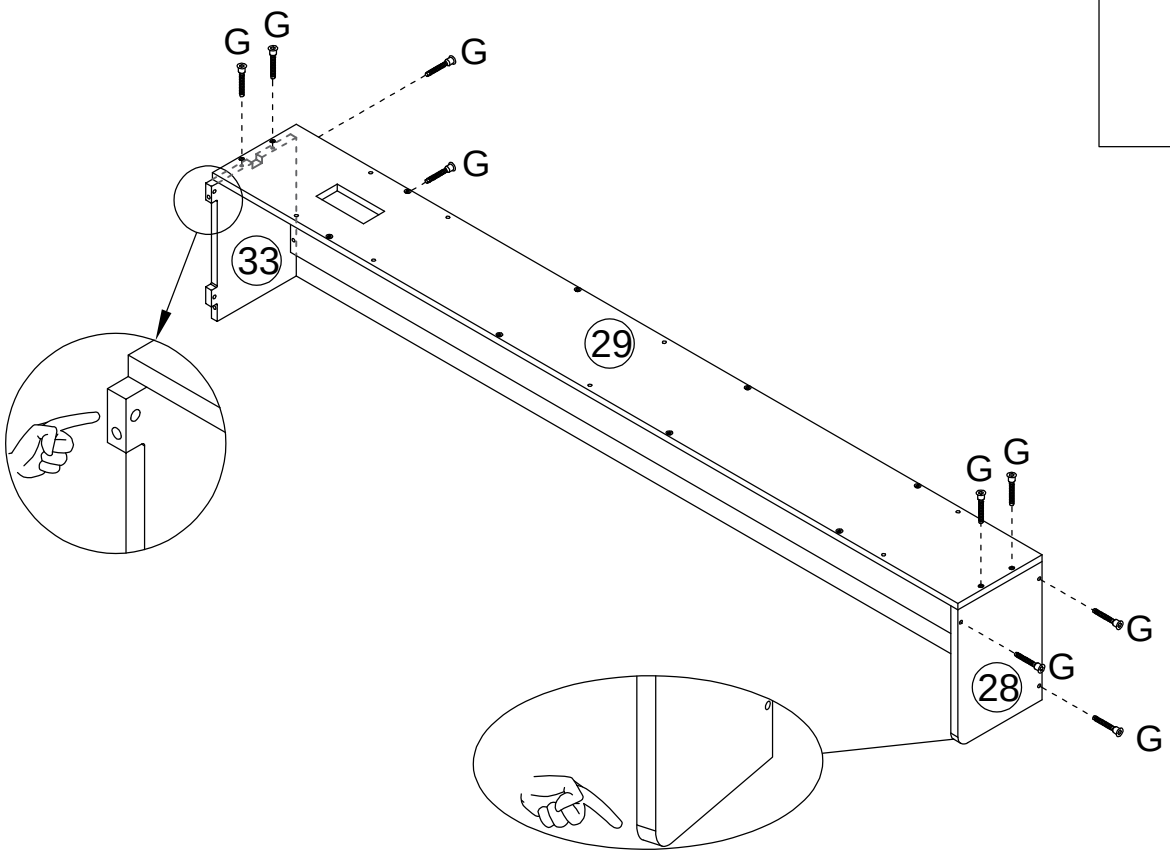

Step 24


H



Ø6x30

2pcs


The hole faces up

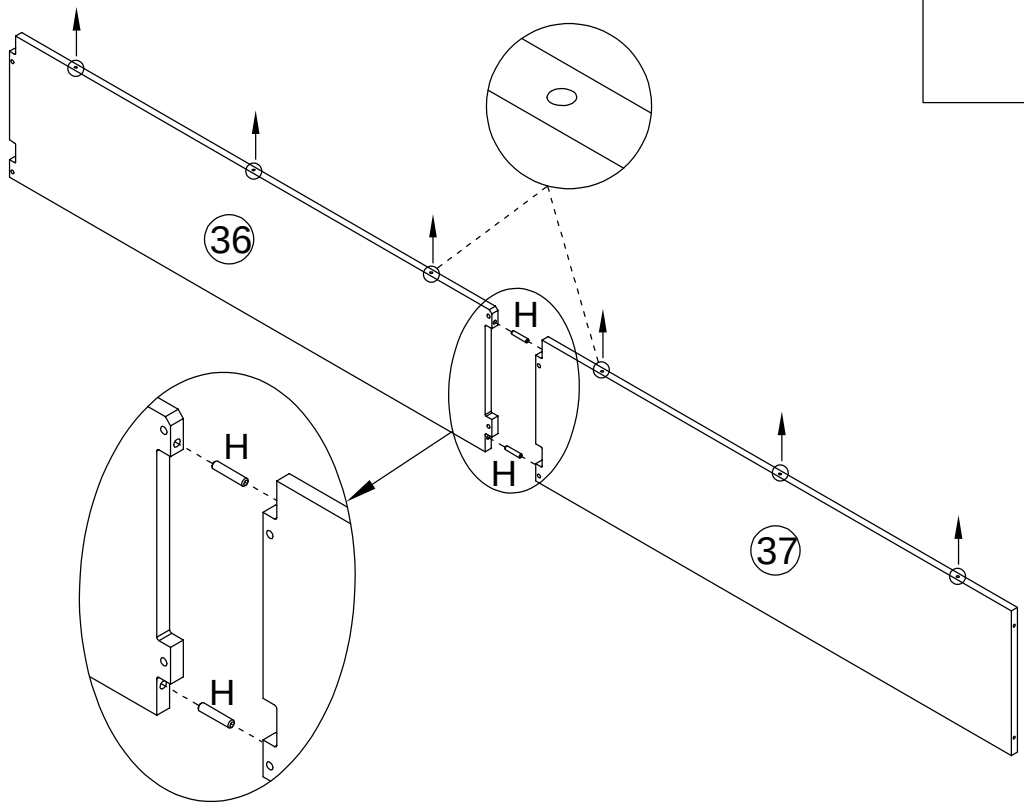

Step 25


The hole faces up

G



M5x38

4pcs

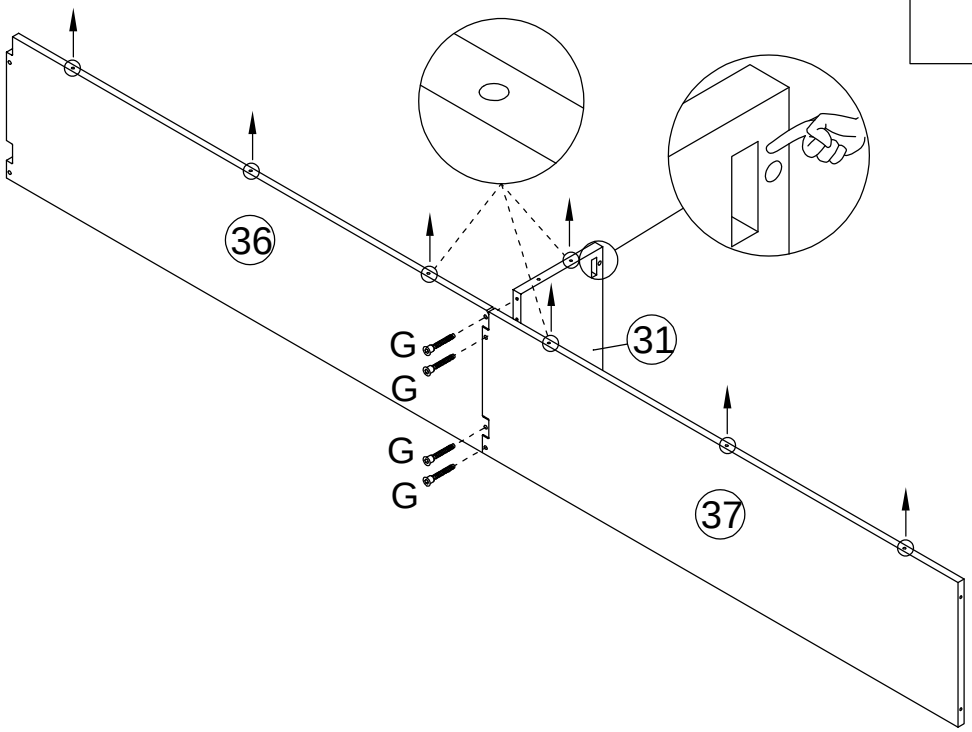


Step 26

H




Ø6x30

2pcs

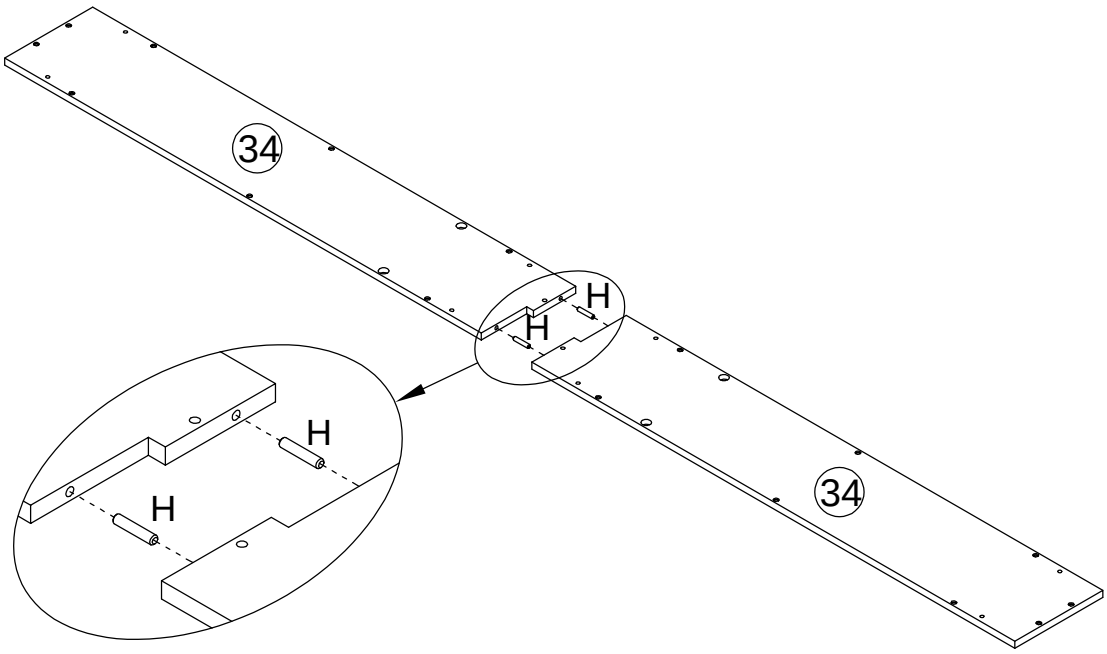


Step 27

G




M5x38

8pcs

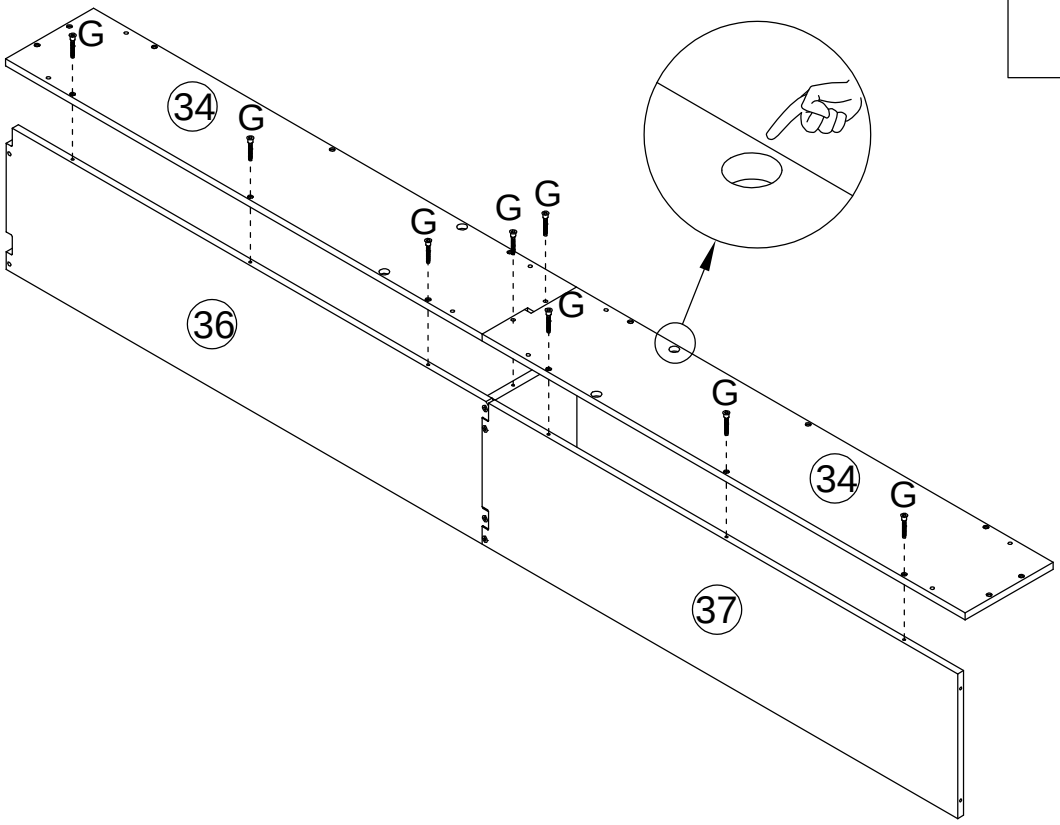

Step 28

I




Ø6x60

1pc


Step 29

G




M5x38

3pcs

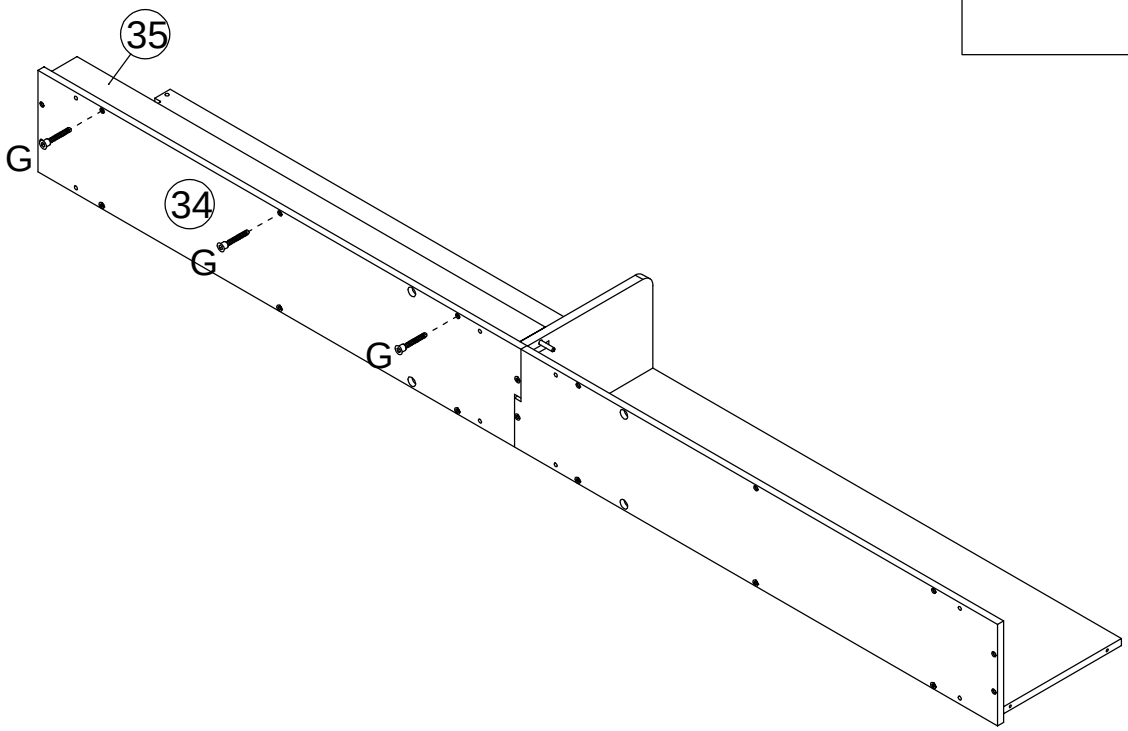


Step 30

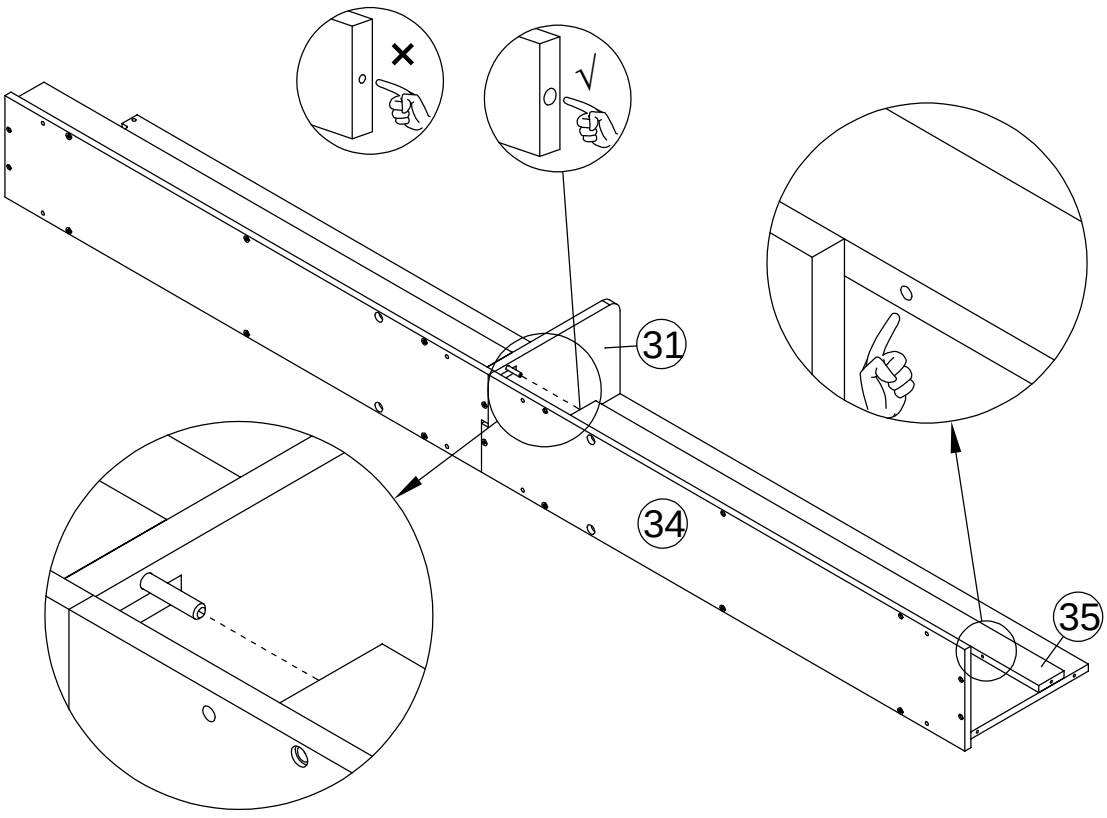


Step 31

G




M5x38

3pcs

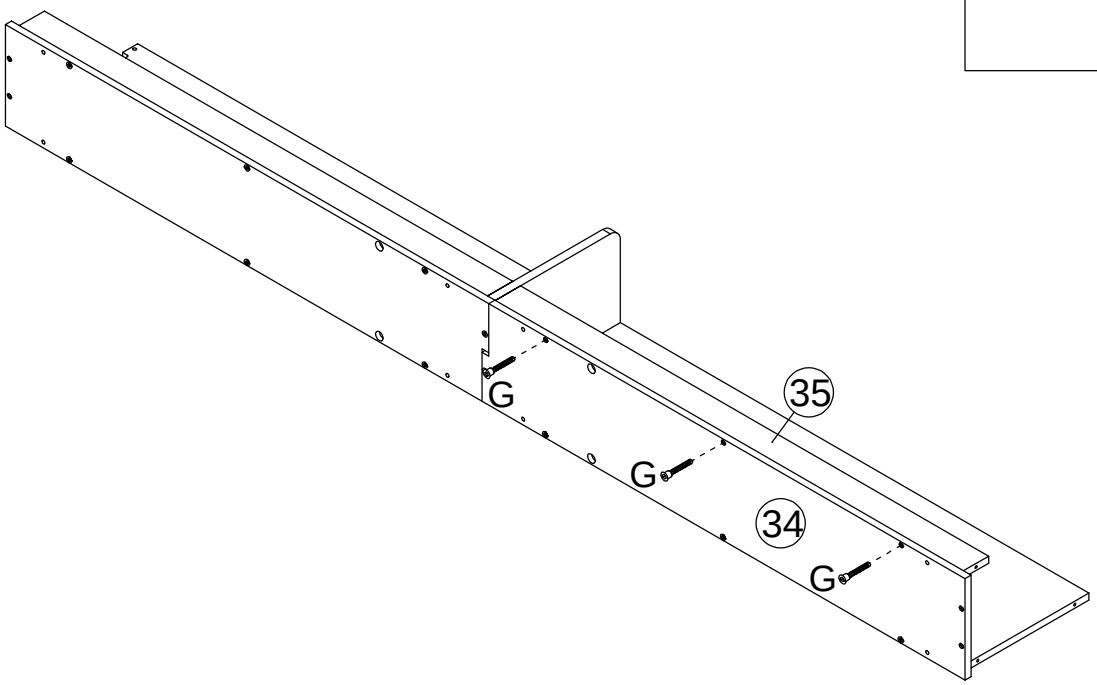


Step 32

G




M5x38

4pcs

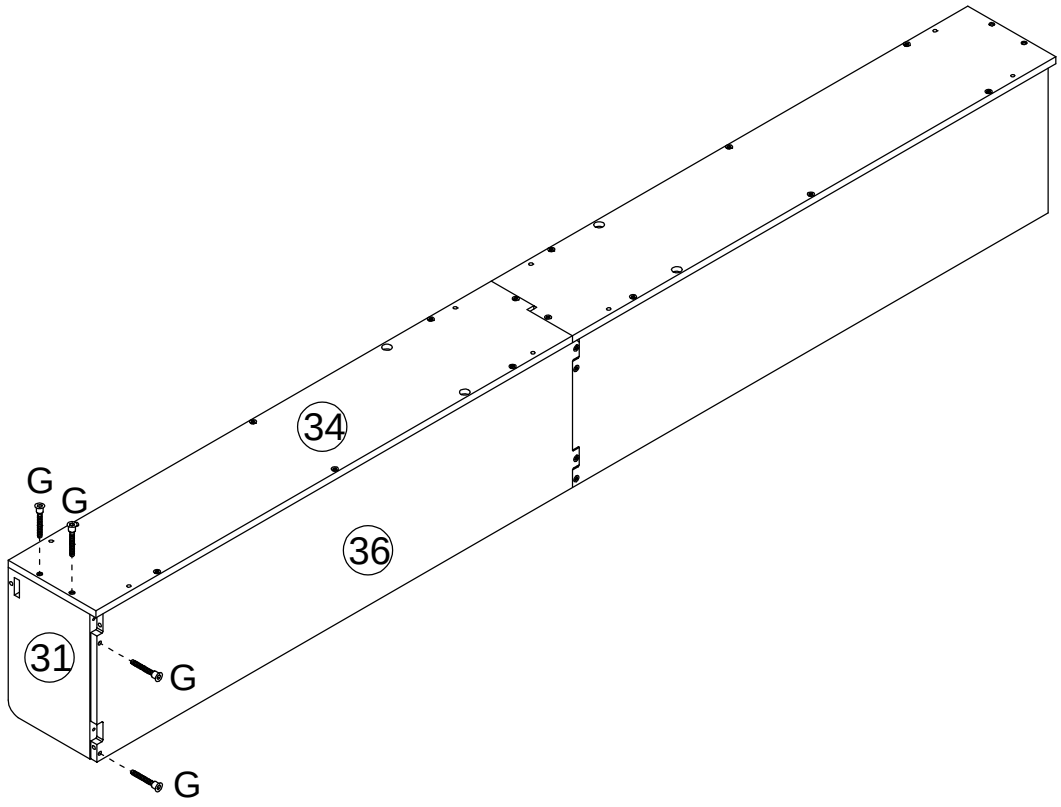


Step 33

G




M5x38

5pcs

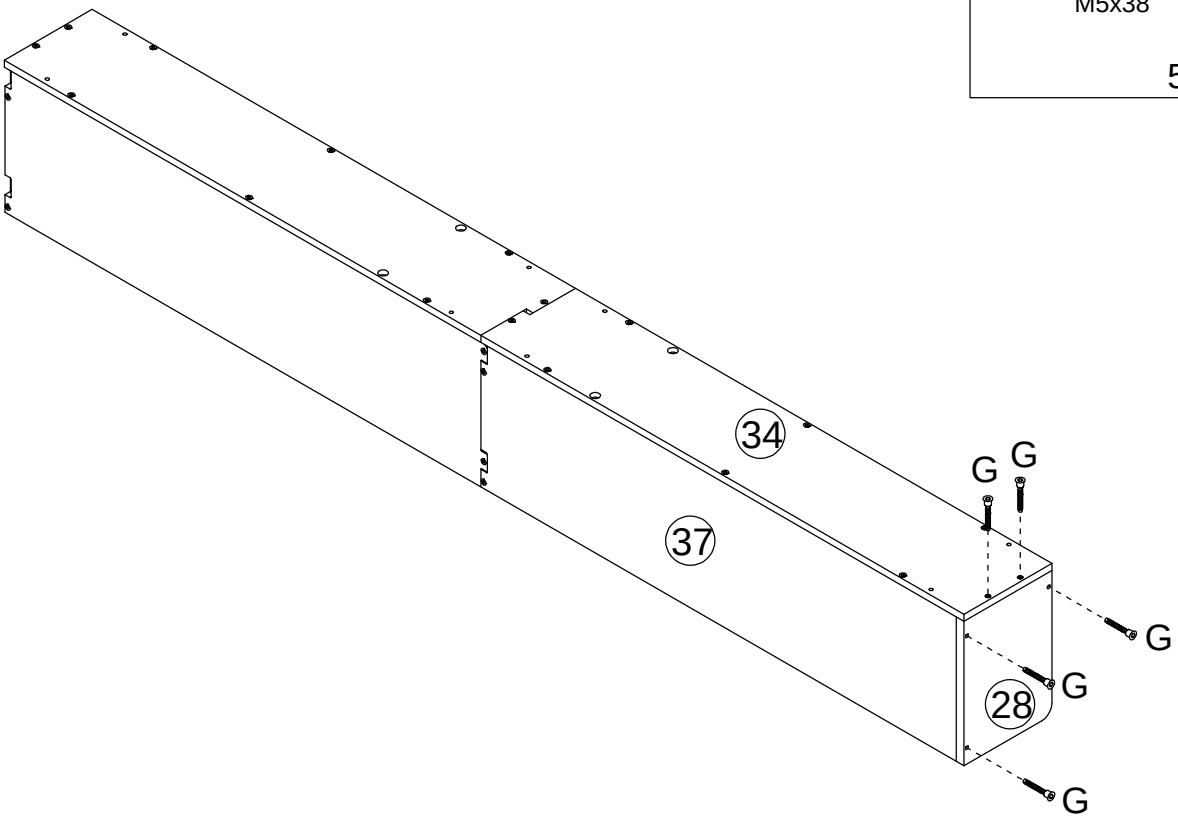

Step 34

B



M6x28

8pcs


Step 35

H




Ø6x30

2pcs

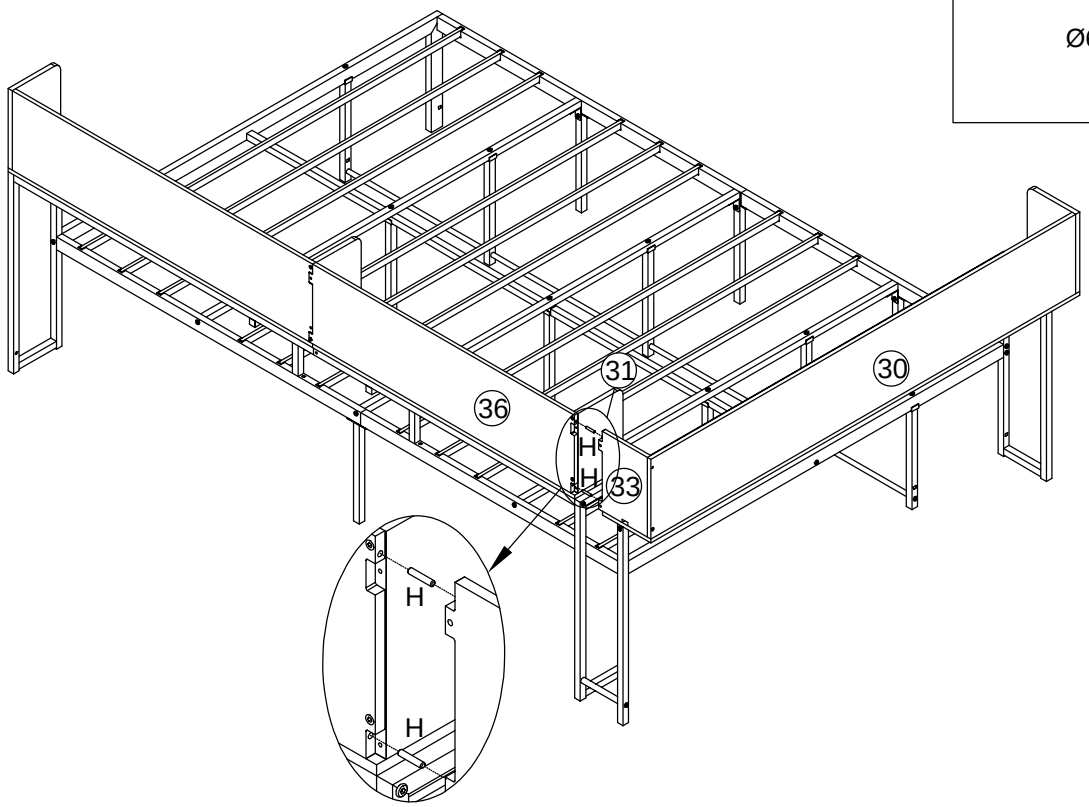


Step 36

G





M5x38



2pcs

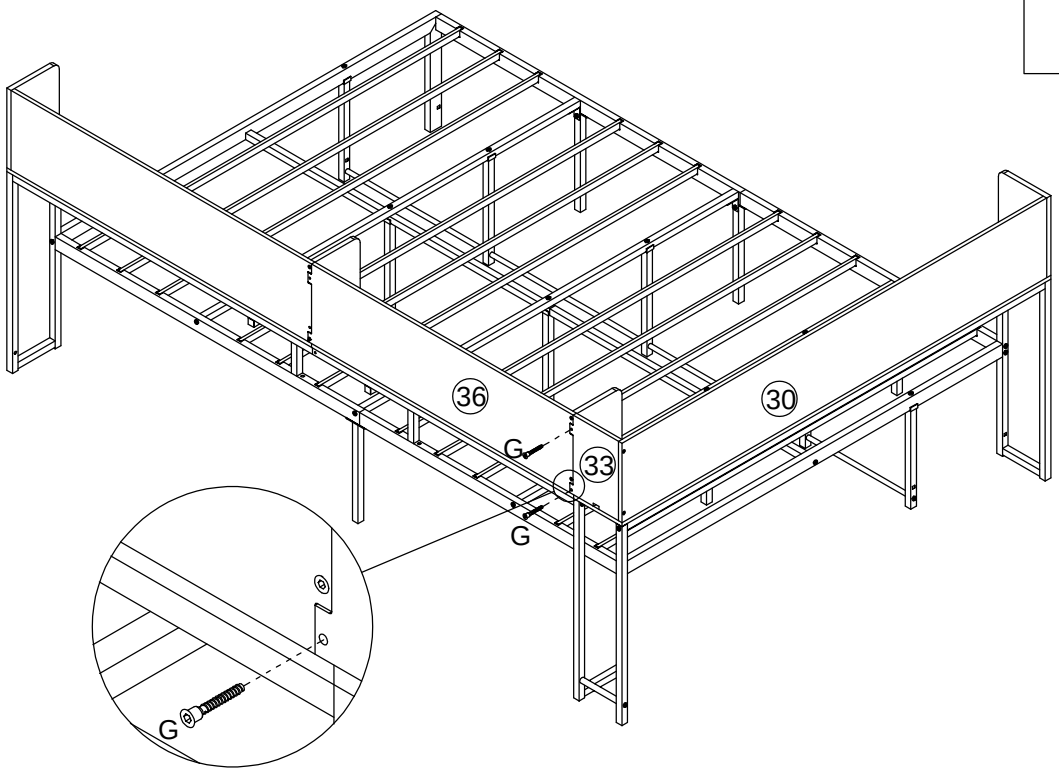


Step 37


B	G
	
M6x28	M5x38
6pcs	1pc


Step 38


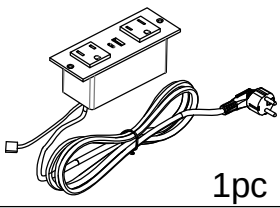
K	L
	
Ø3.5x12	
2pcs	1pc


Step 39

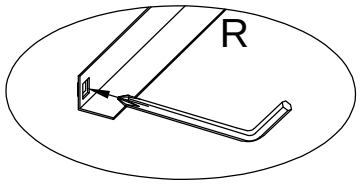

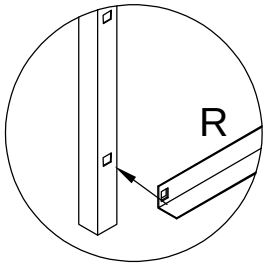

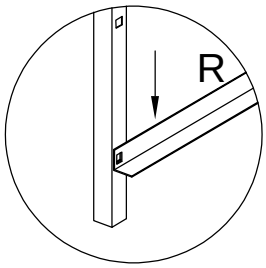


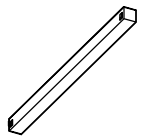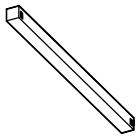
R	S
	
6pcs	6pcs

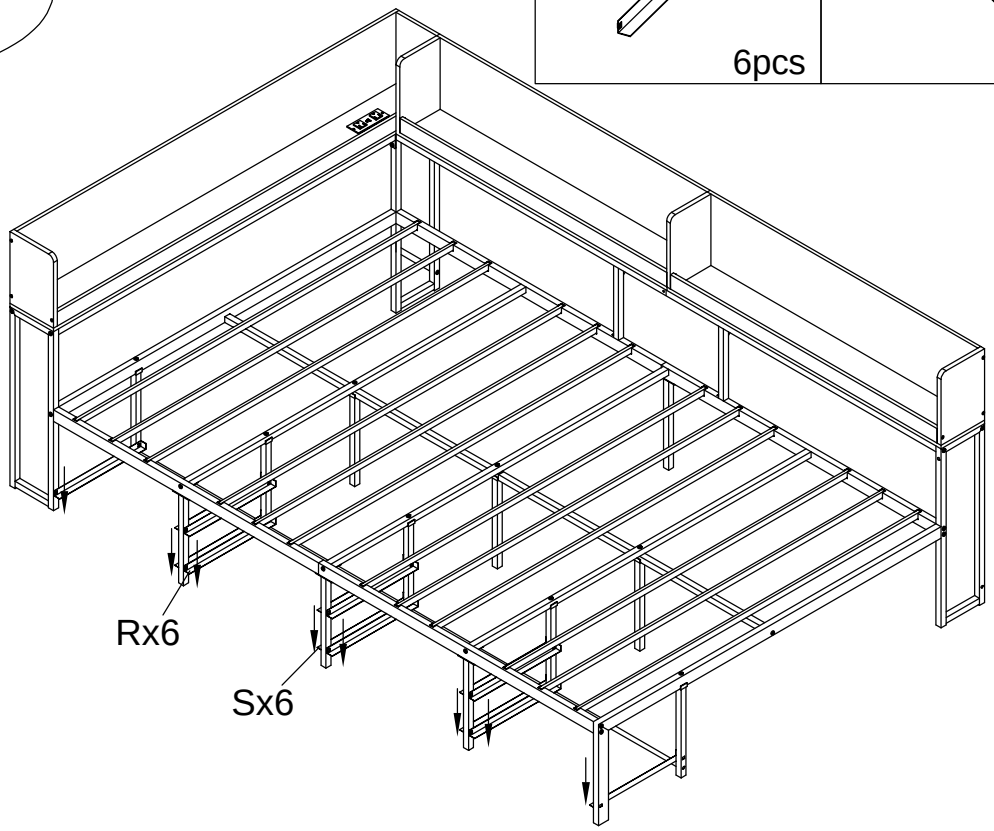


Step 40


Q	P
	
M4x10	
12pcs	6pcs




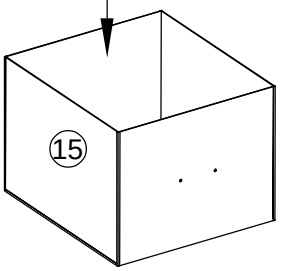


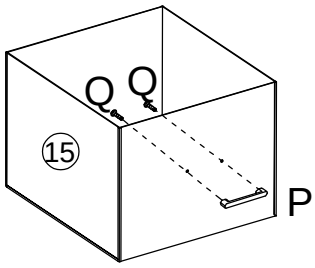

x2

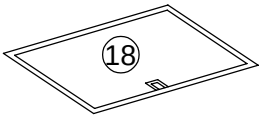


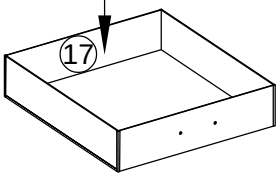

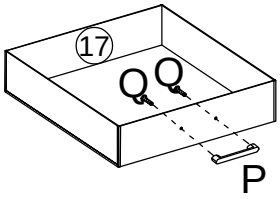


x4


Step 41

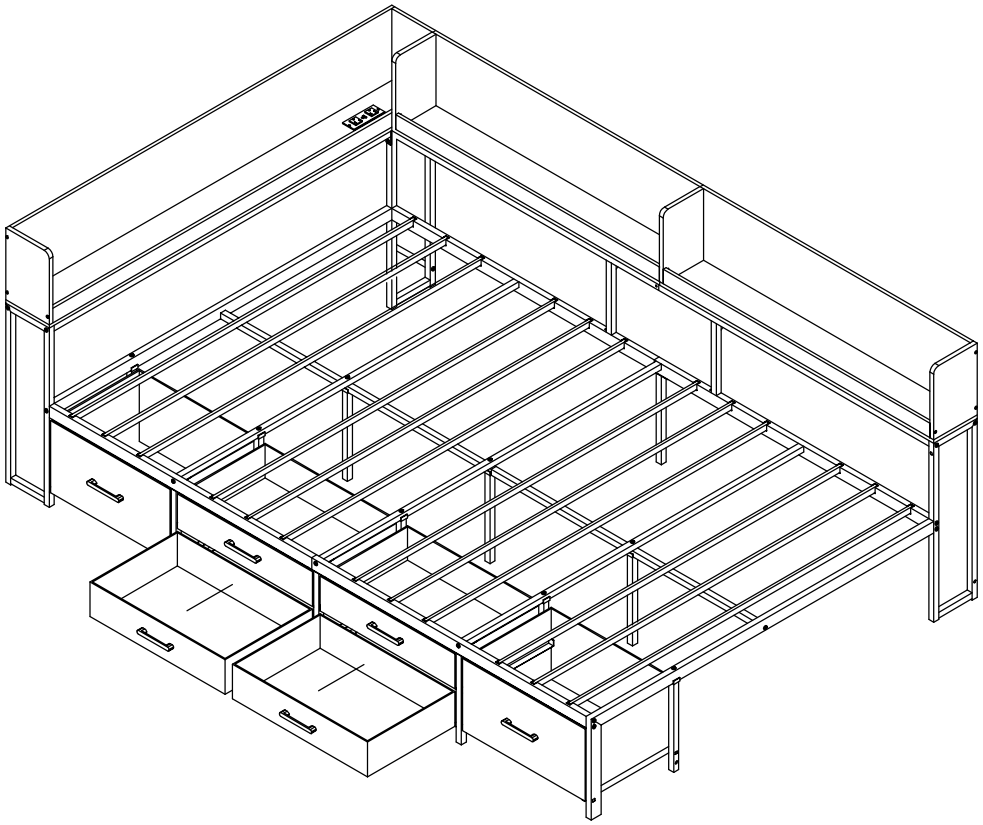

Step 42

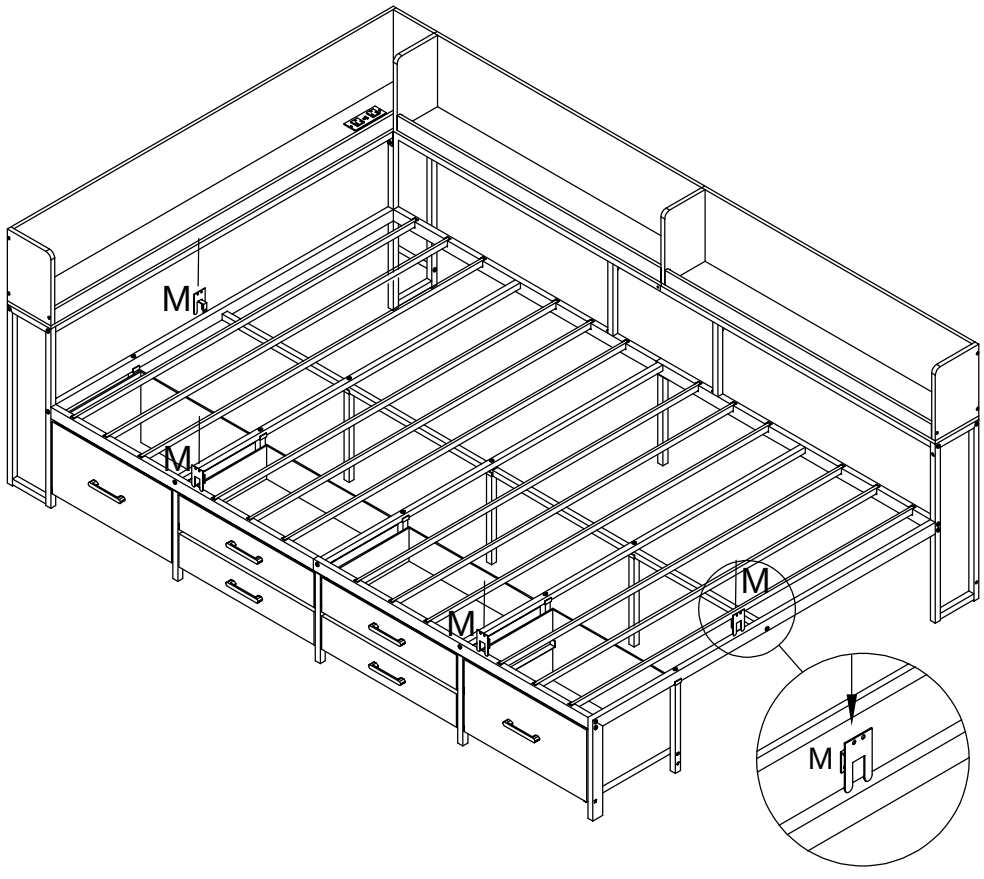


M




4pcs


Step 43

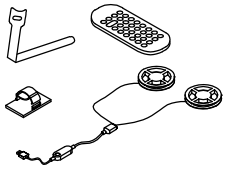


1pc


Feed the long light strip through the slots in the two Panel #31s, all the way to Panel #28. Then peel off its adhesive backing and stick it onto the two Panel #35s. For the short light strip, peel off its adhesive backing and stick it onto Panel #32. Finally, both light strips run through Panel #33.

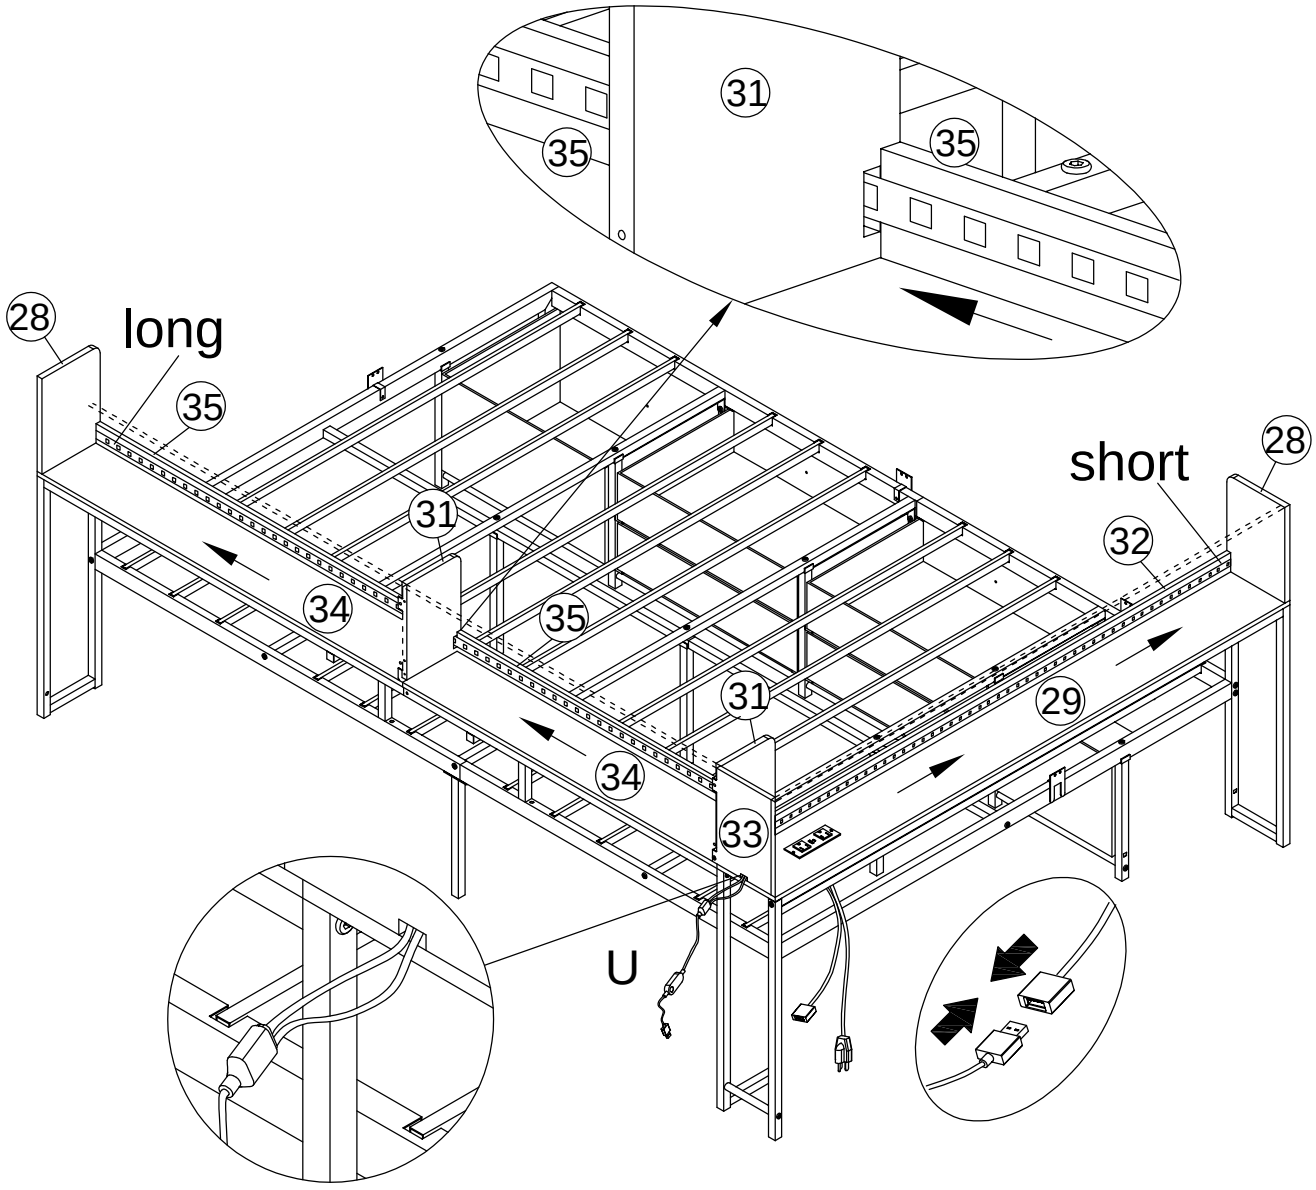


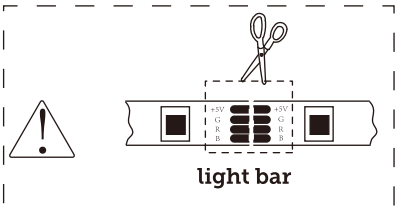



According to the actual length, cut the excess light strip or keep it

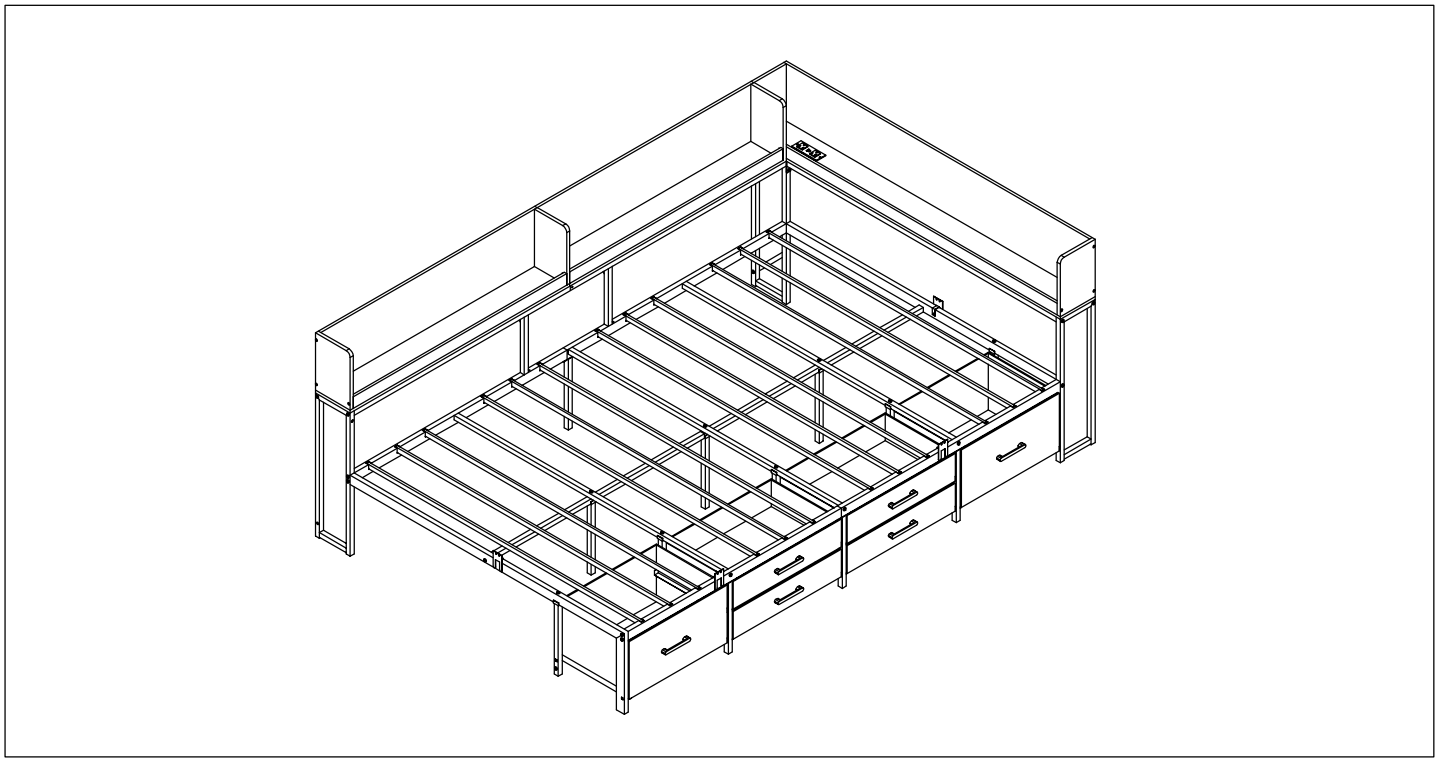

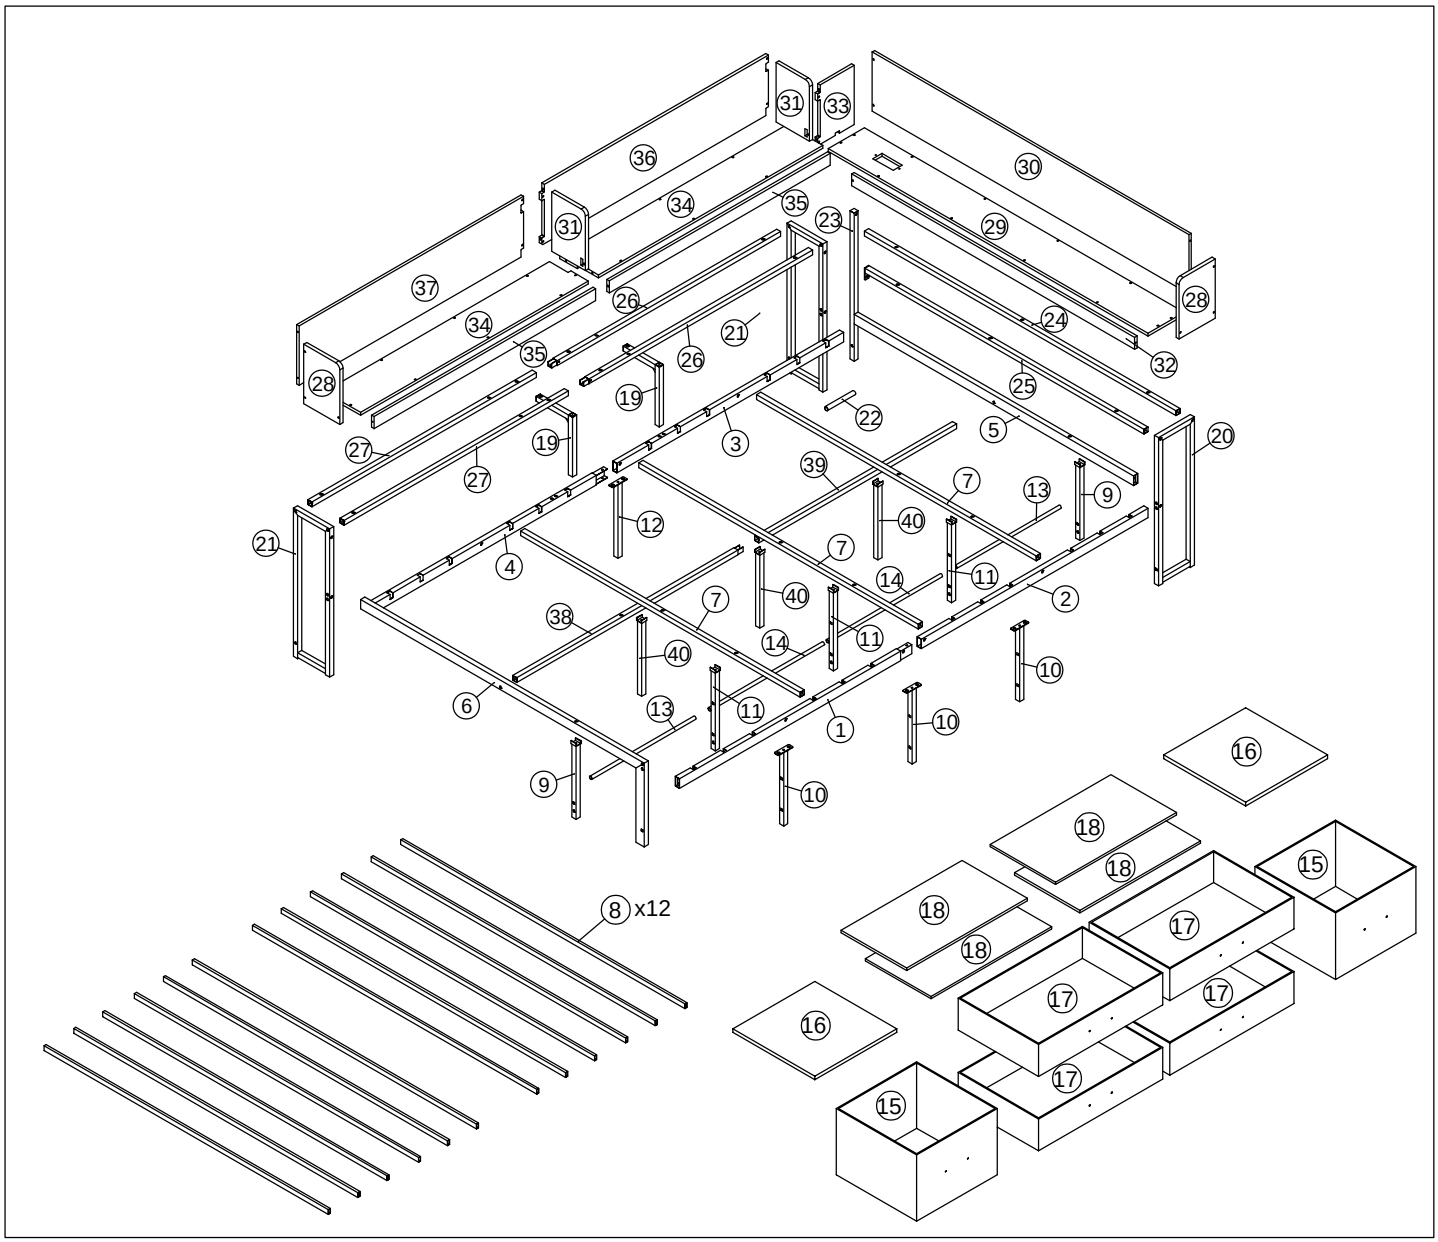
8 x12


Step 1

C	E
	
M6x40	M8x40
2pcs	2pcs

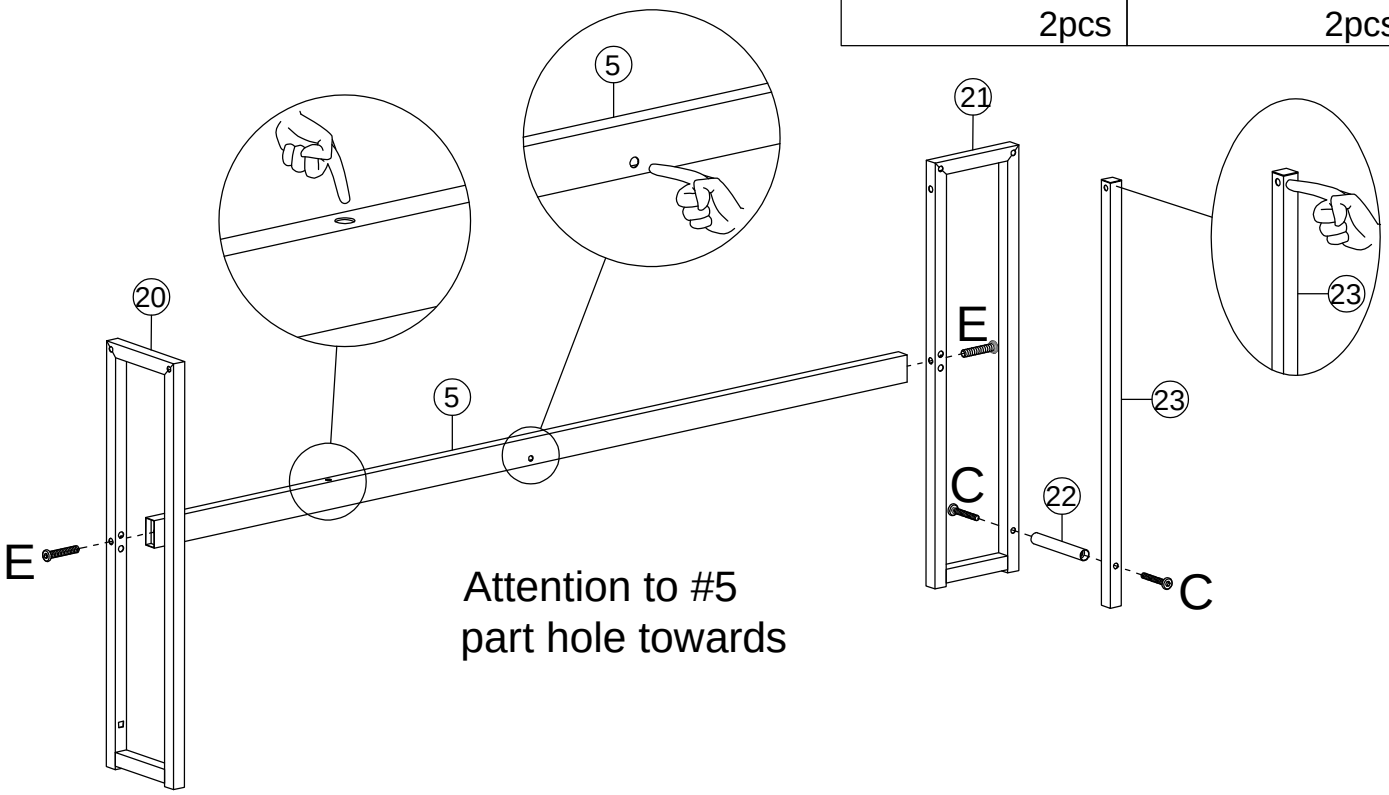


Attention to #5
part hole towards

Step 2

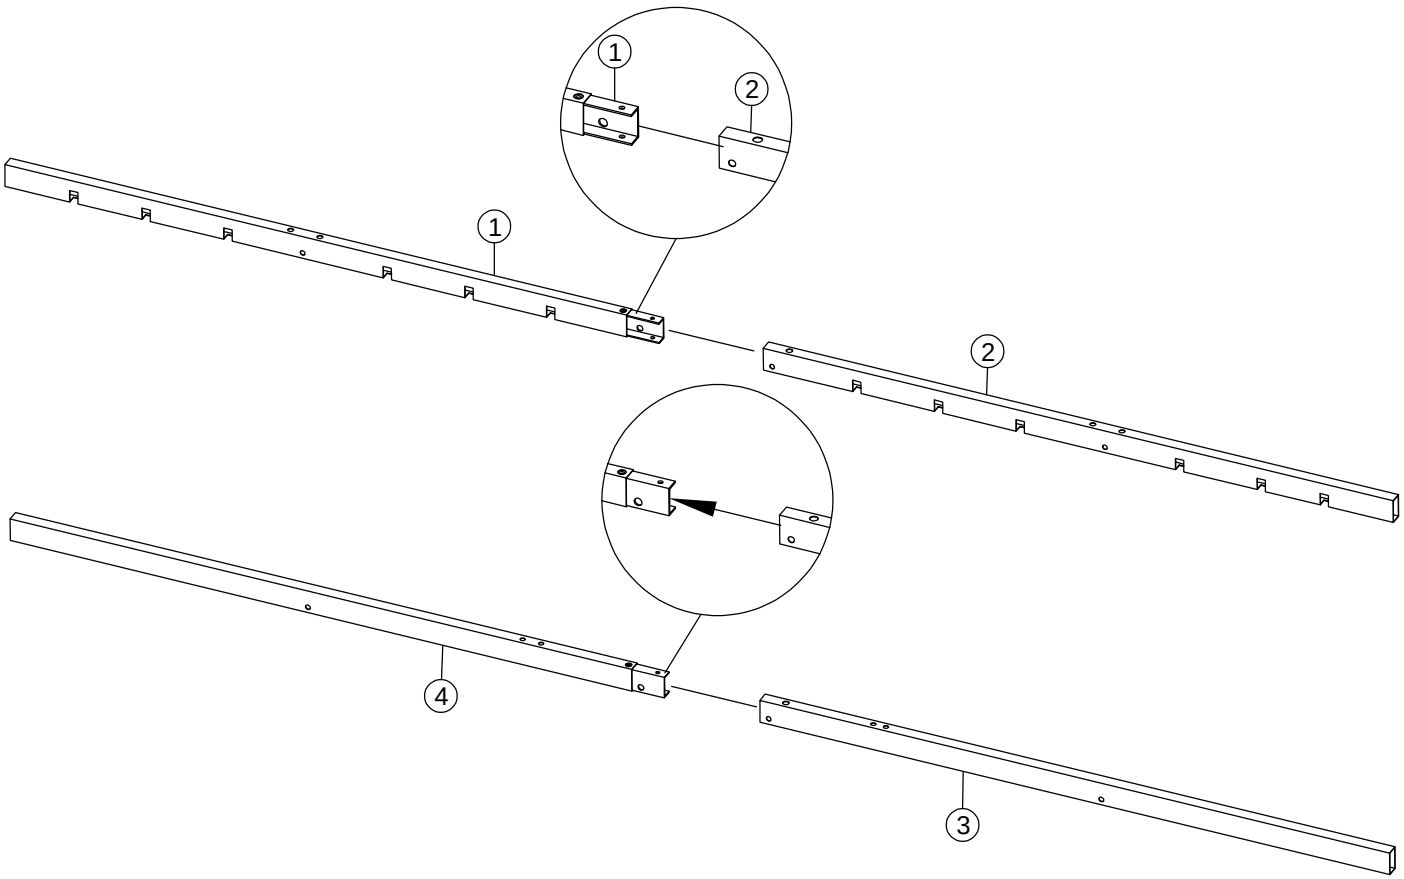

Step 3

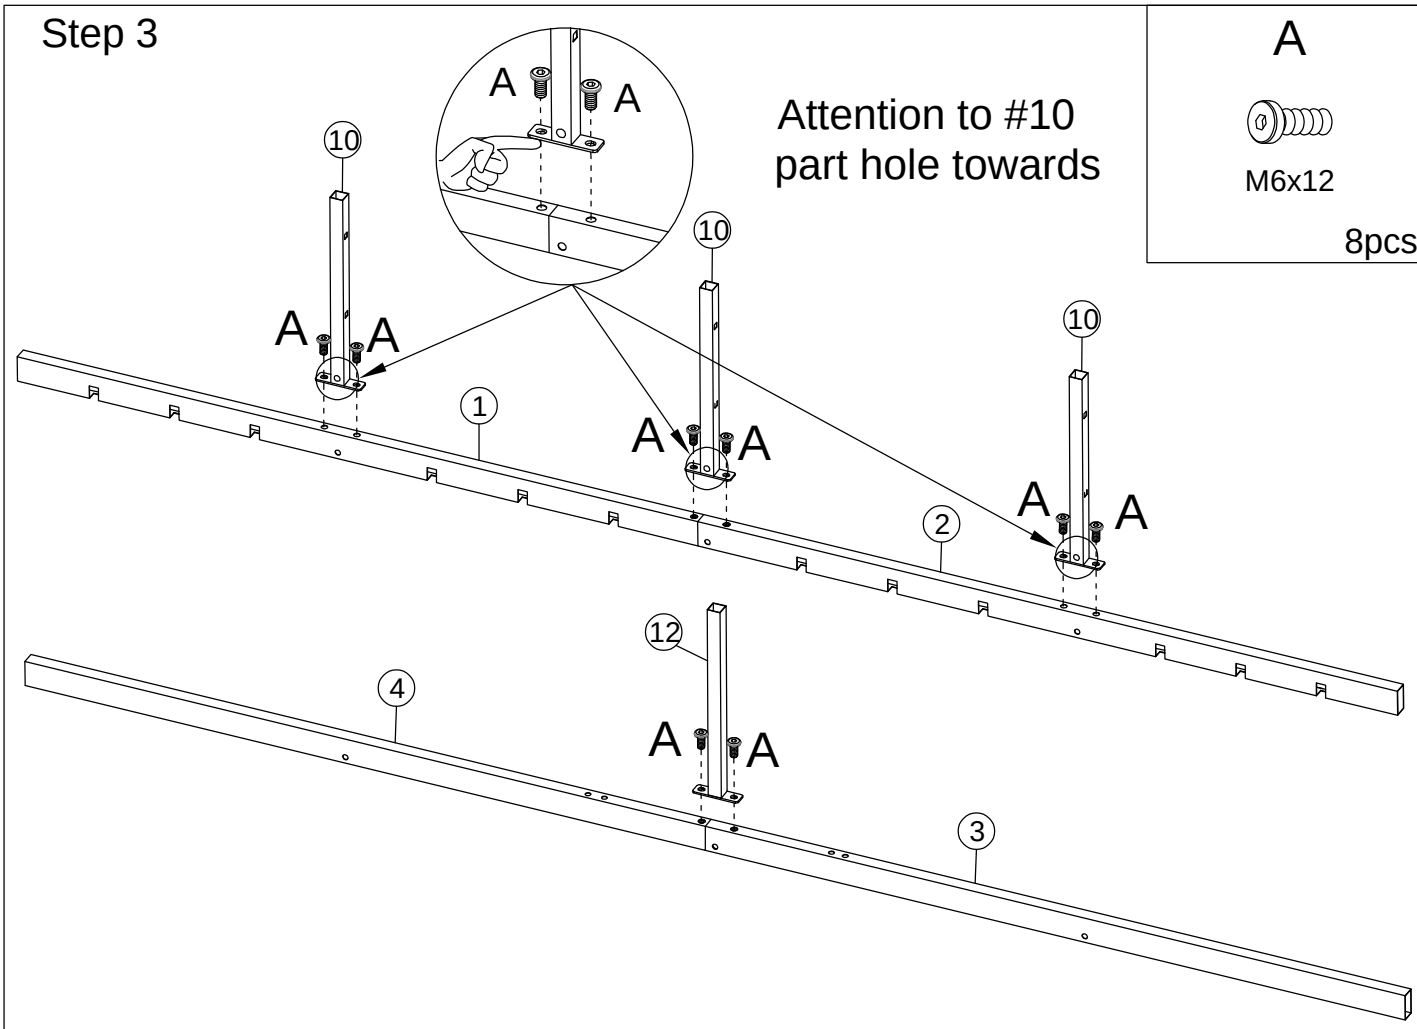


Attention to #10 part hole towards

A

M6x12

8pcs

Step 4

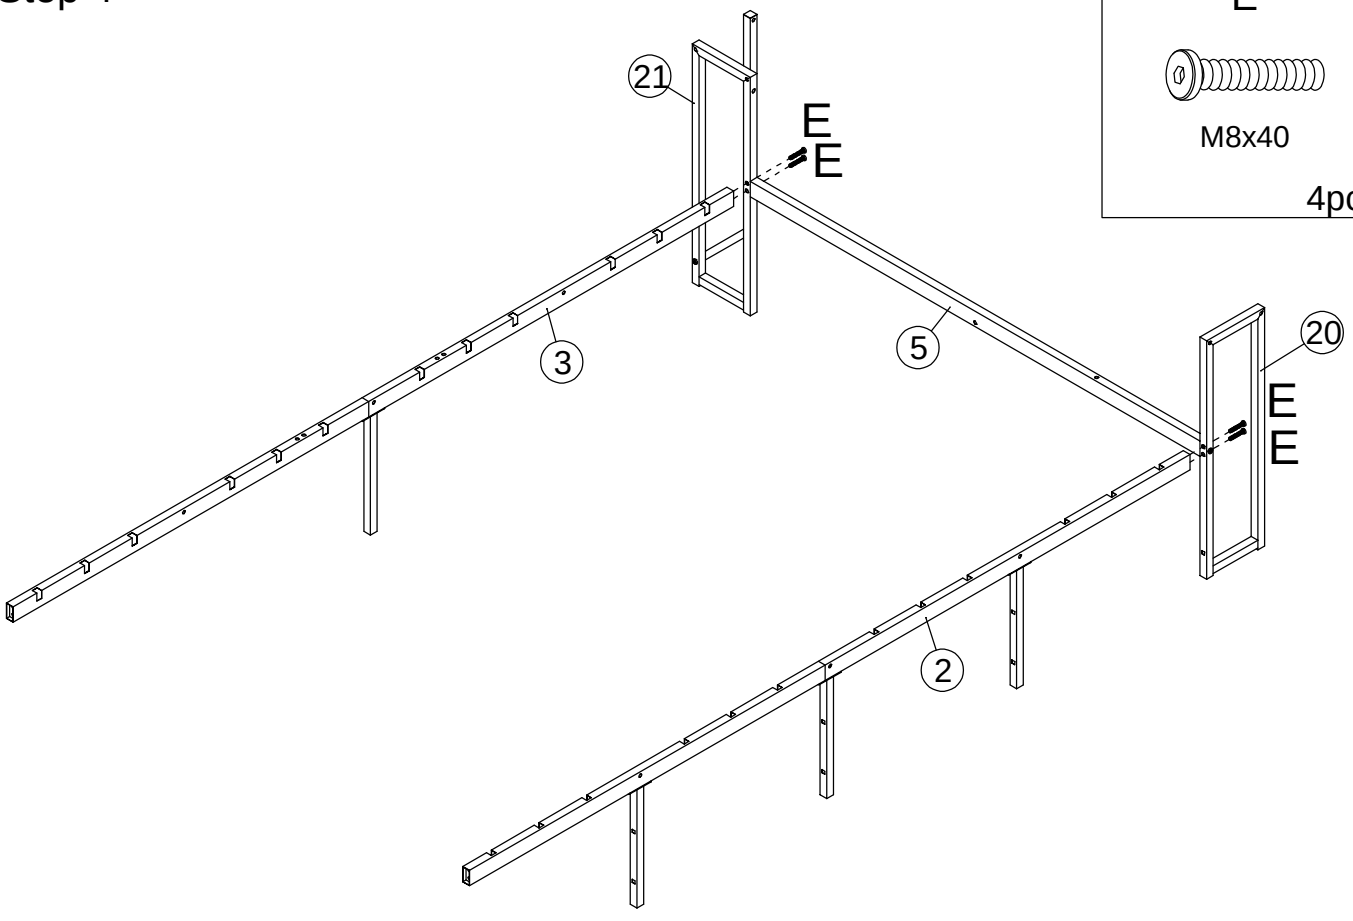


E

M8x40

4pcs


Step 5

E




M8x40

1pc

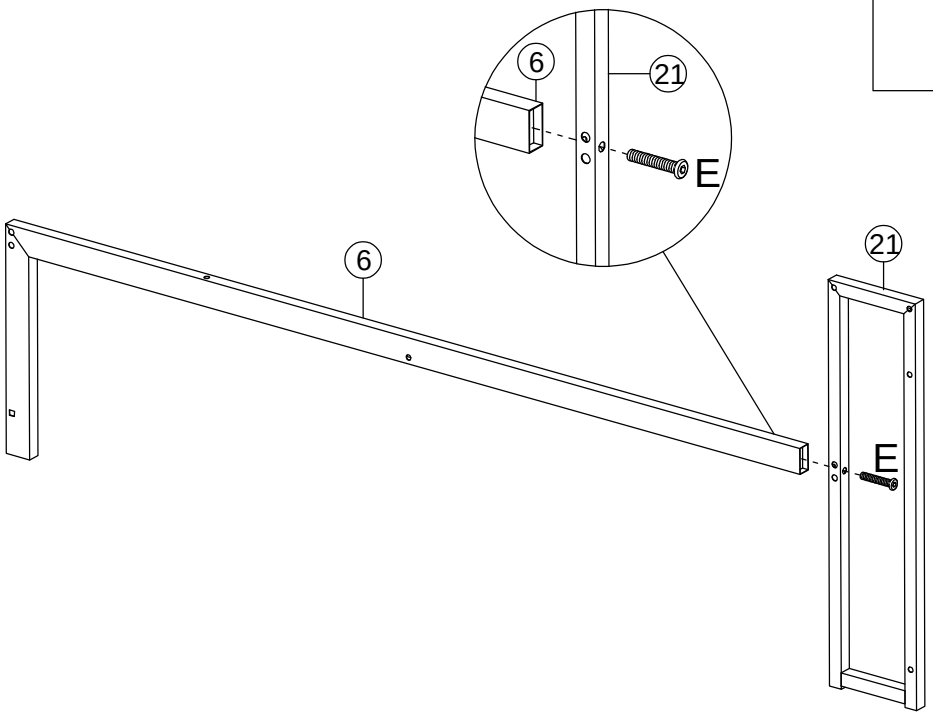


Step 6

E




M8x40


4pcs

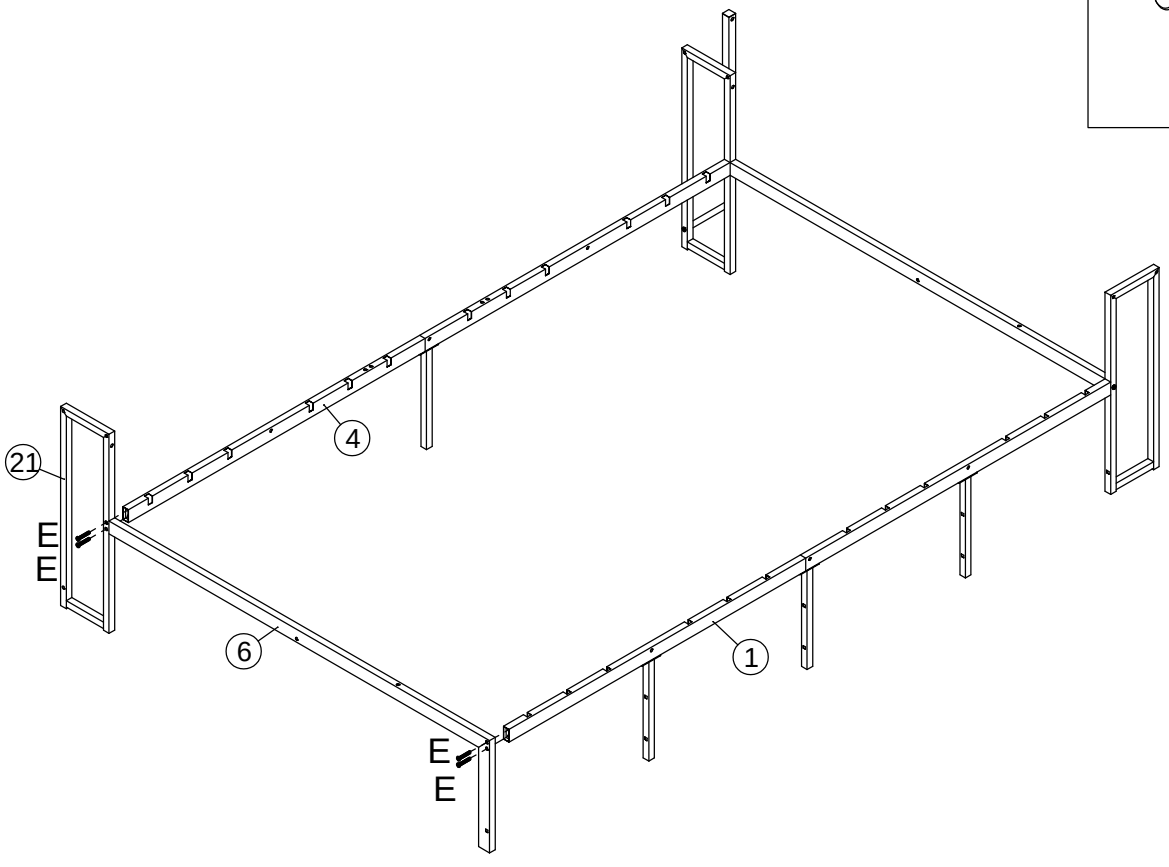


Step 7

A	C
	
M6x12	M6x40
1pc	3pcs

Step 8

D

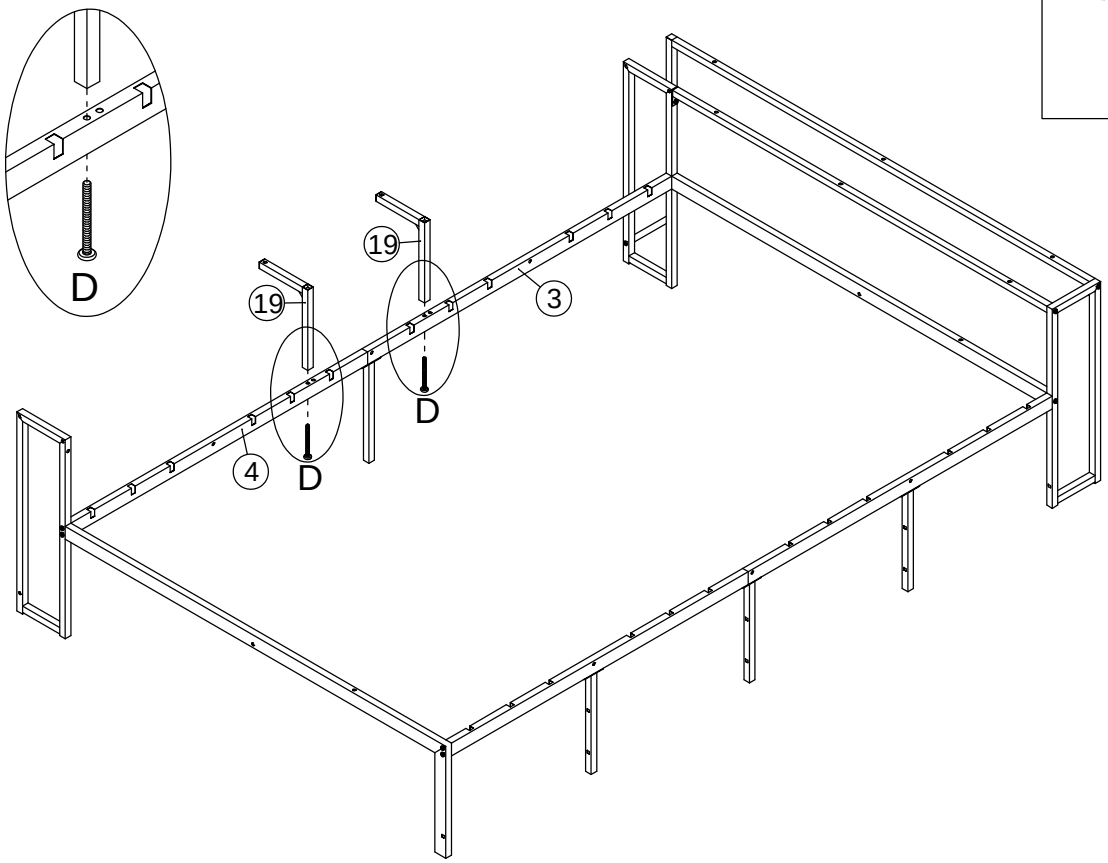M6x60
2pcs



Step 9

A




M6x12

2pcs

x2


Step 10

C




M6x40

8pcs

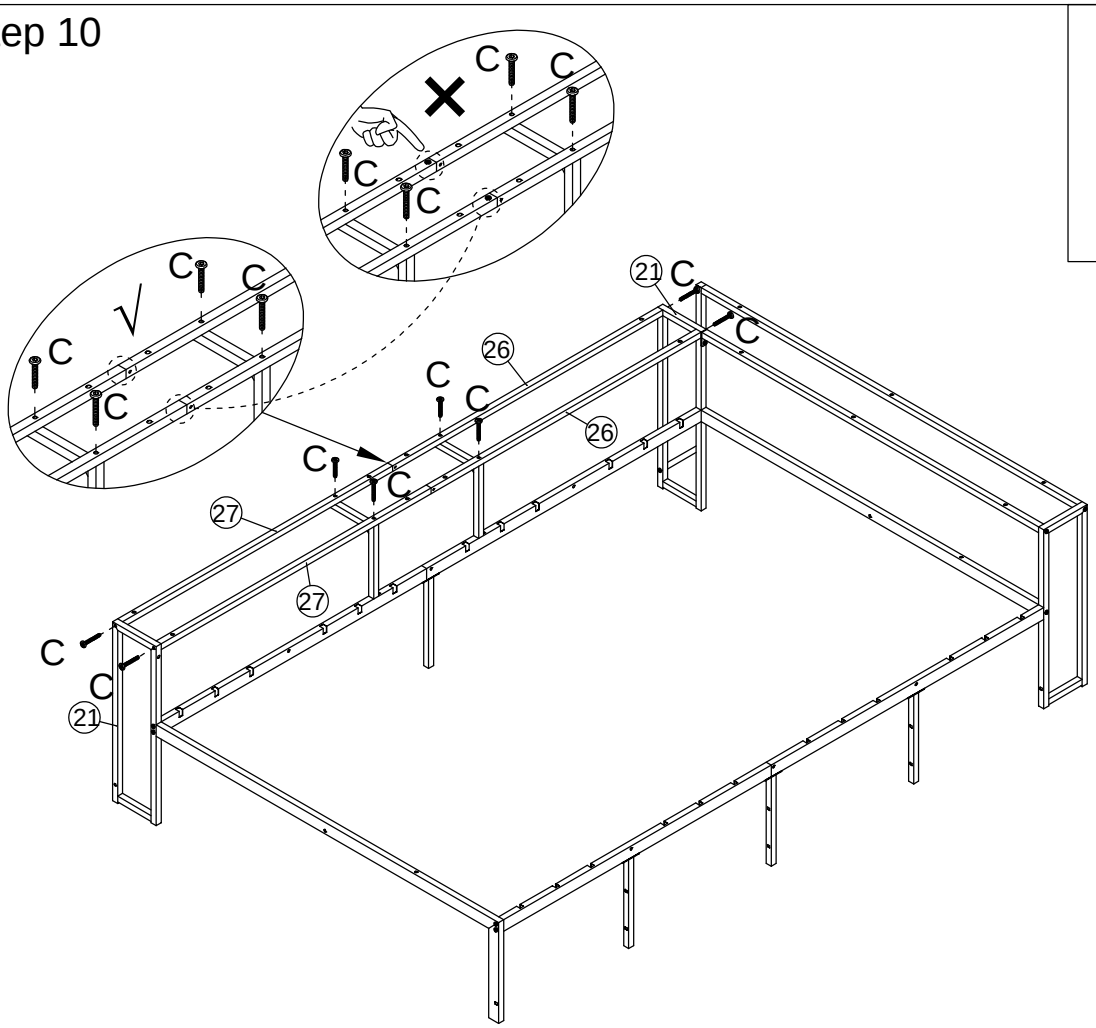


Step 11


J	A
	
3pcs	M6x12 3pcs

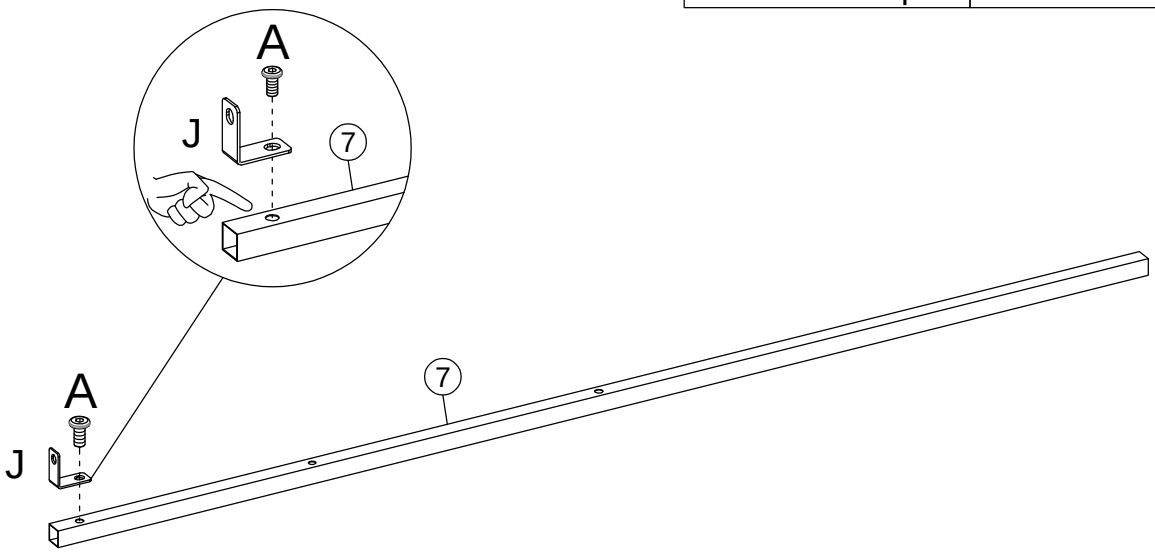



x3

Step 12


A	C
	
M6x12 3pcs	M6x40 6pcs

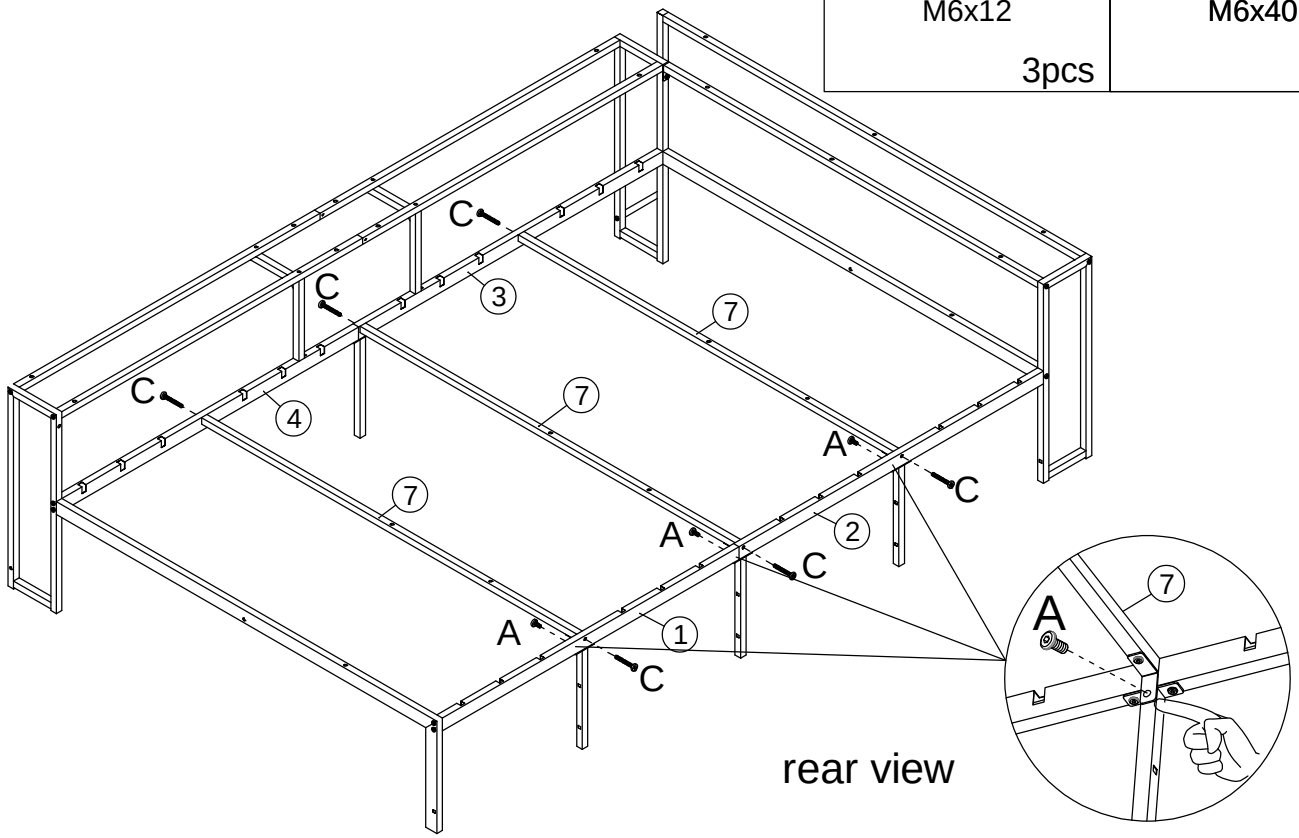


Step 13

C	D
	
M6x40	M6x60
2pcs	3pcs


Step 14

F

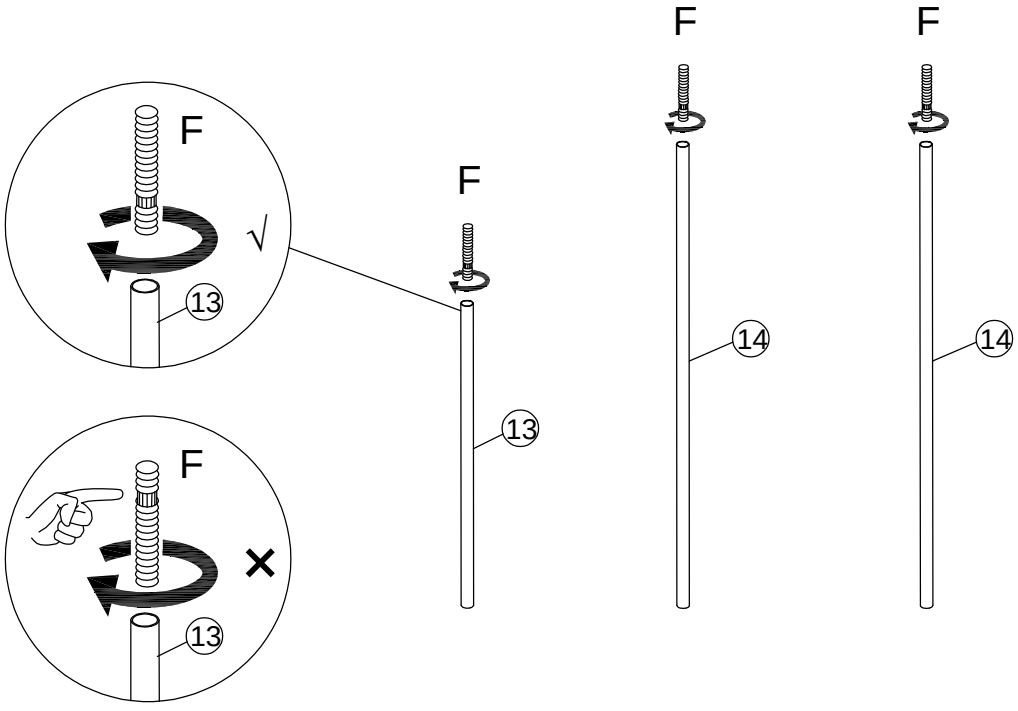M6x50
3pcs




Step 15

C




M6x40


1pc

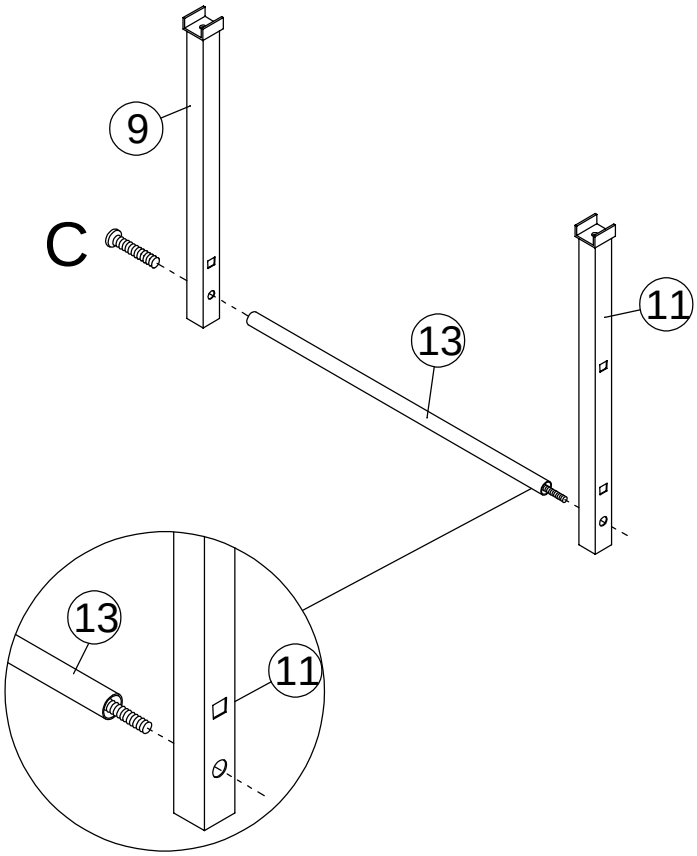

Step 16

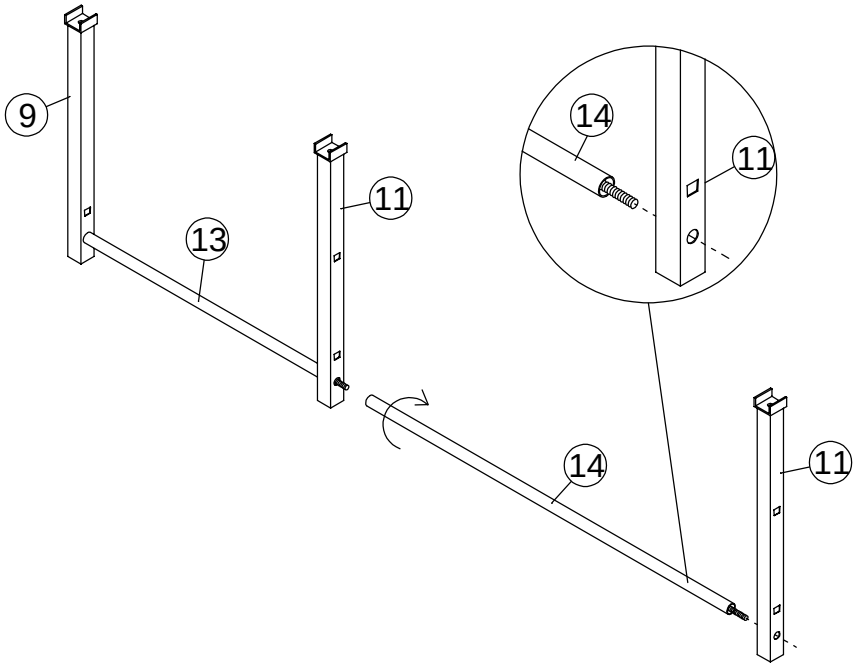


Step 17

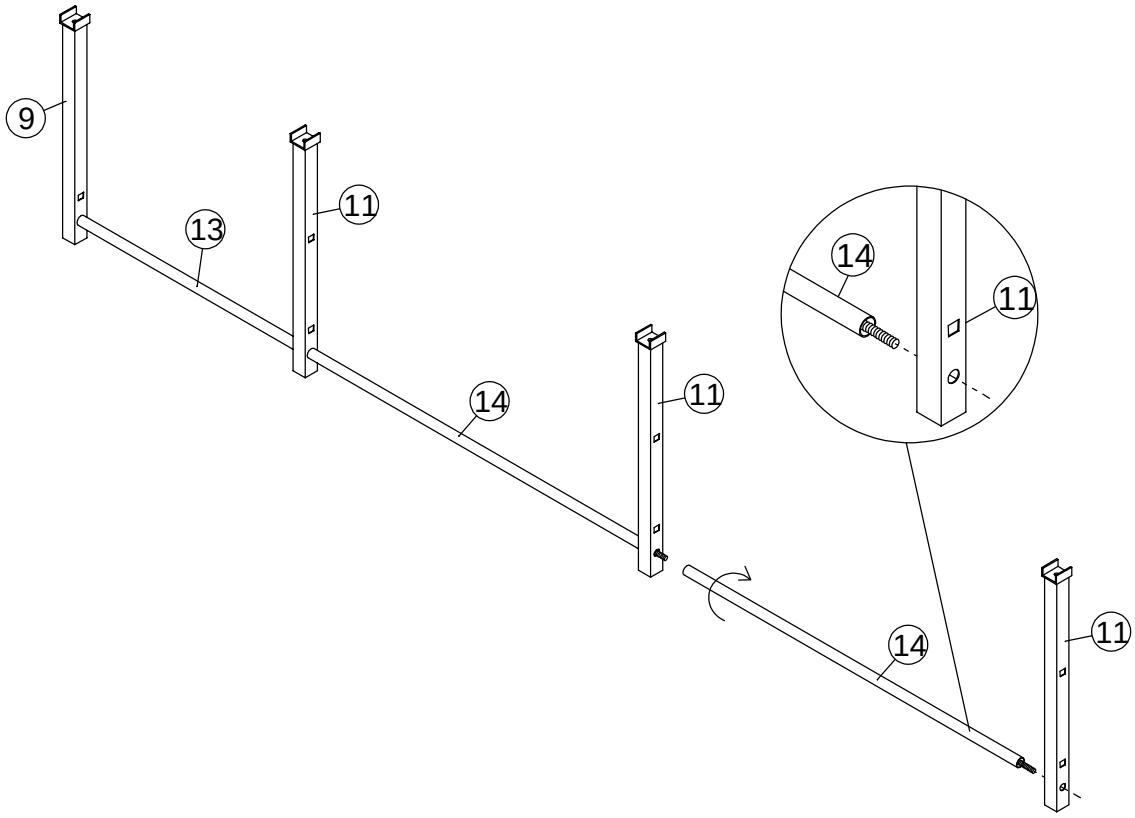


Step 18

C






M6x40

1pc

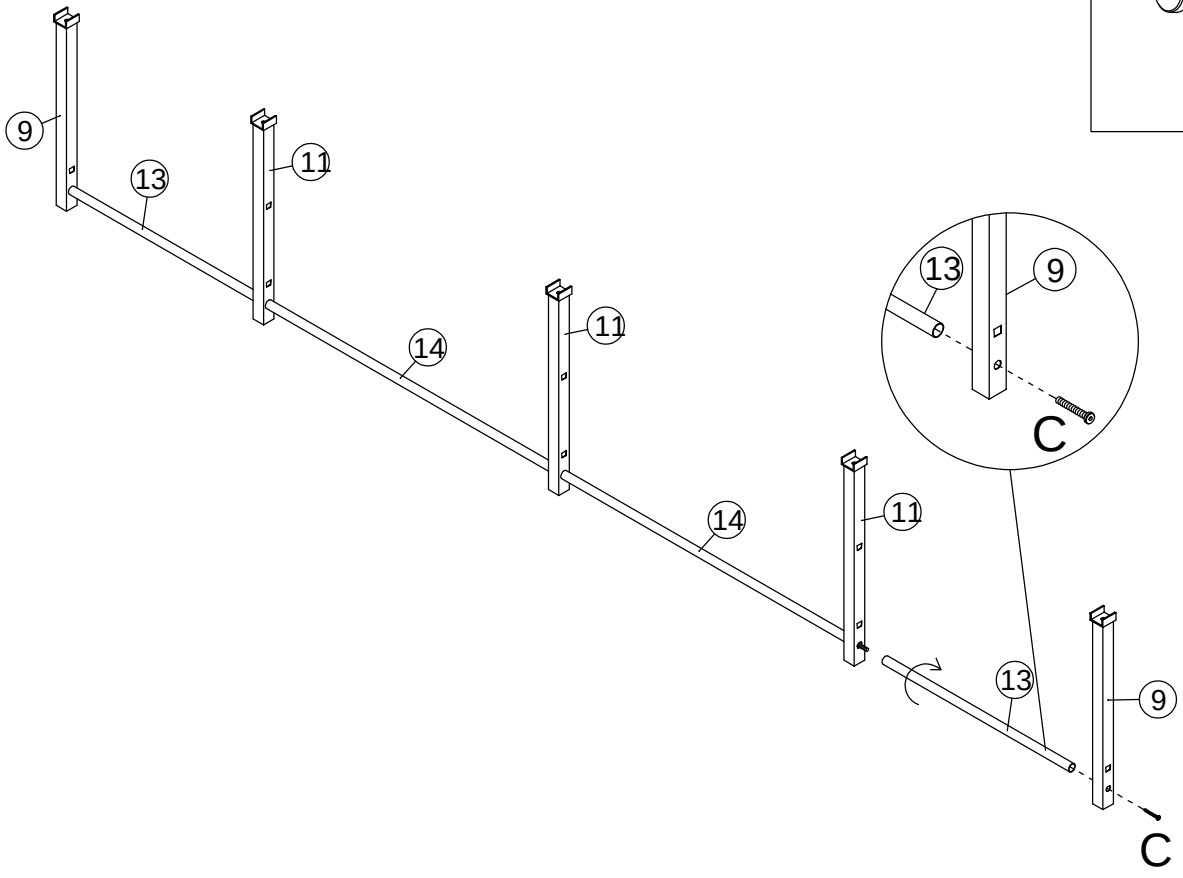

Step 19


C	D
	
M6x40	M6x60
3pcs	2pcs

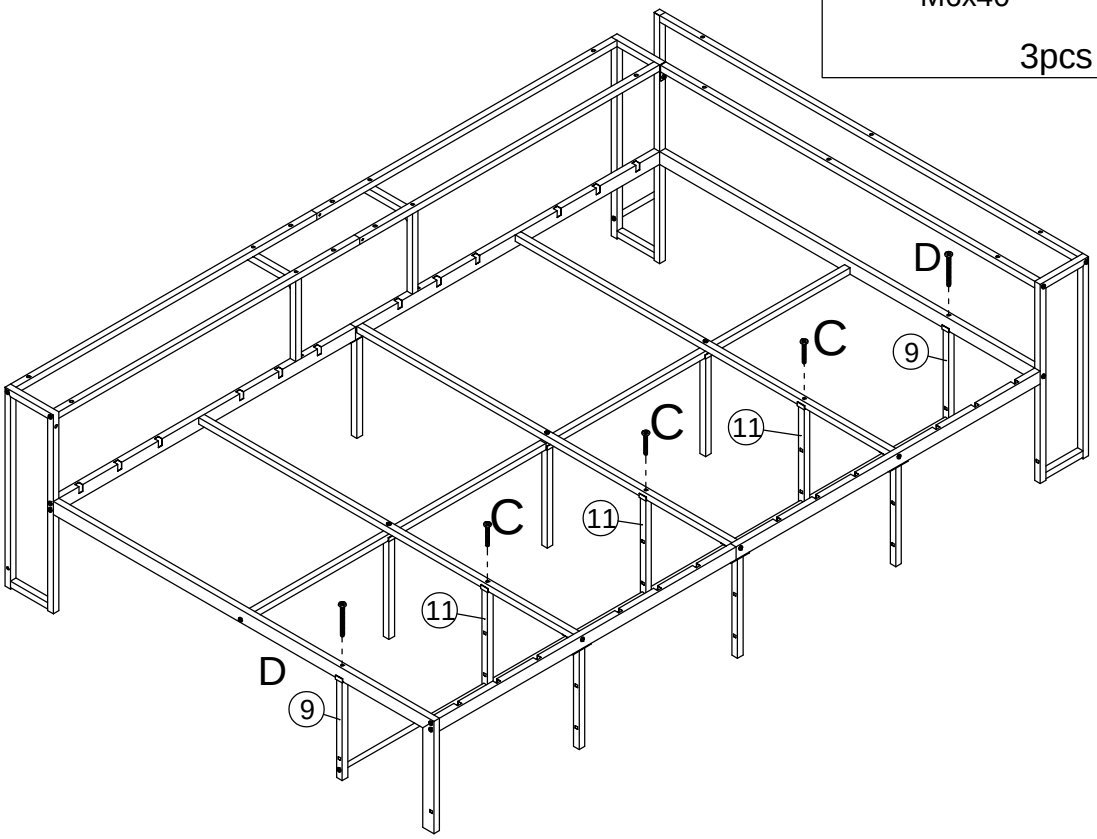


Step 20

V


1pc

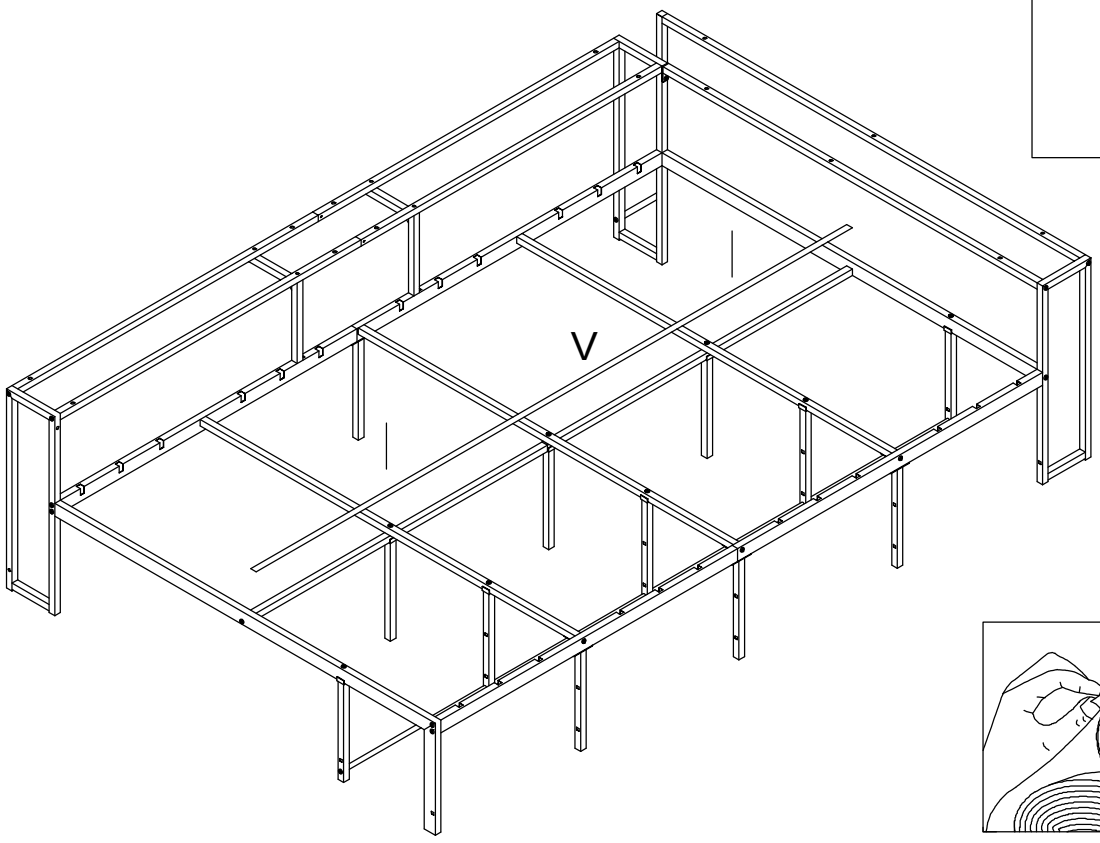

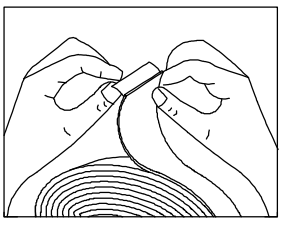


Step 21

Tighten all screws

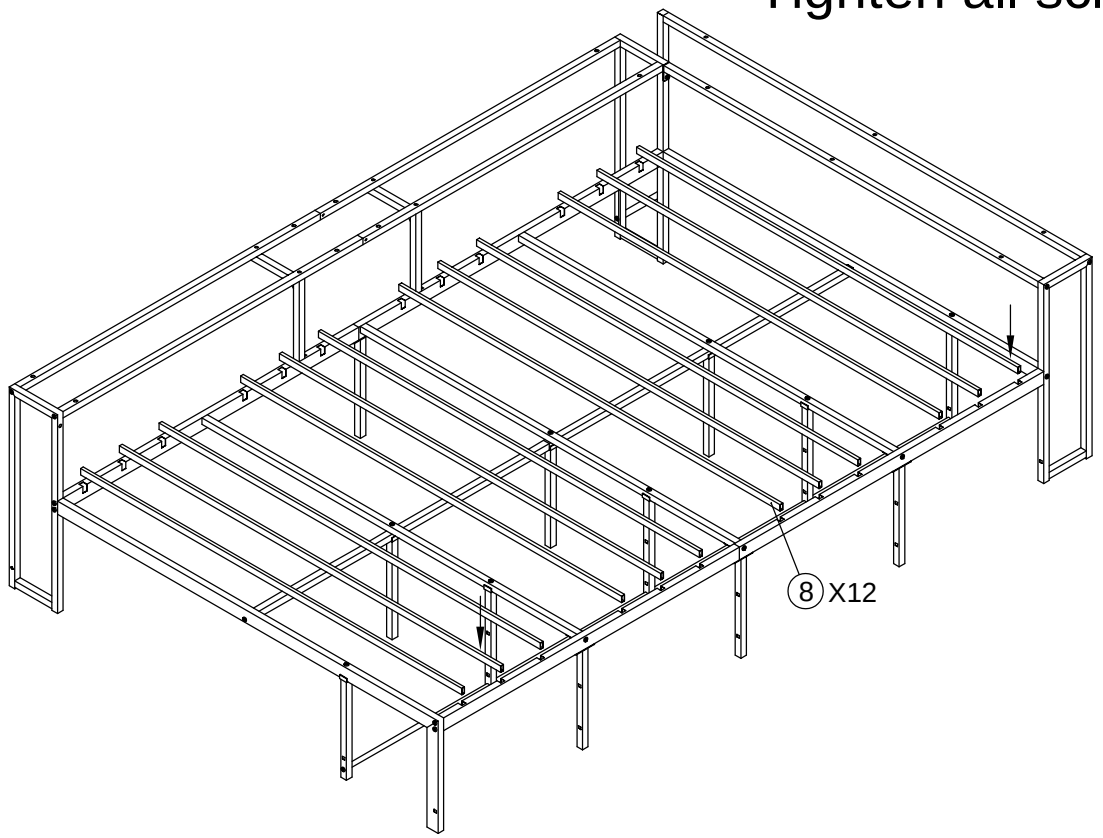


Step 22

G




M5x38

8pcs

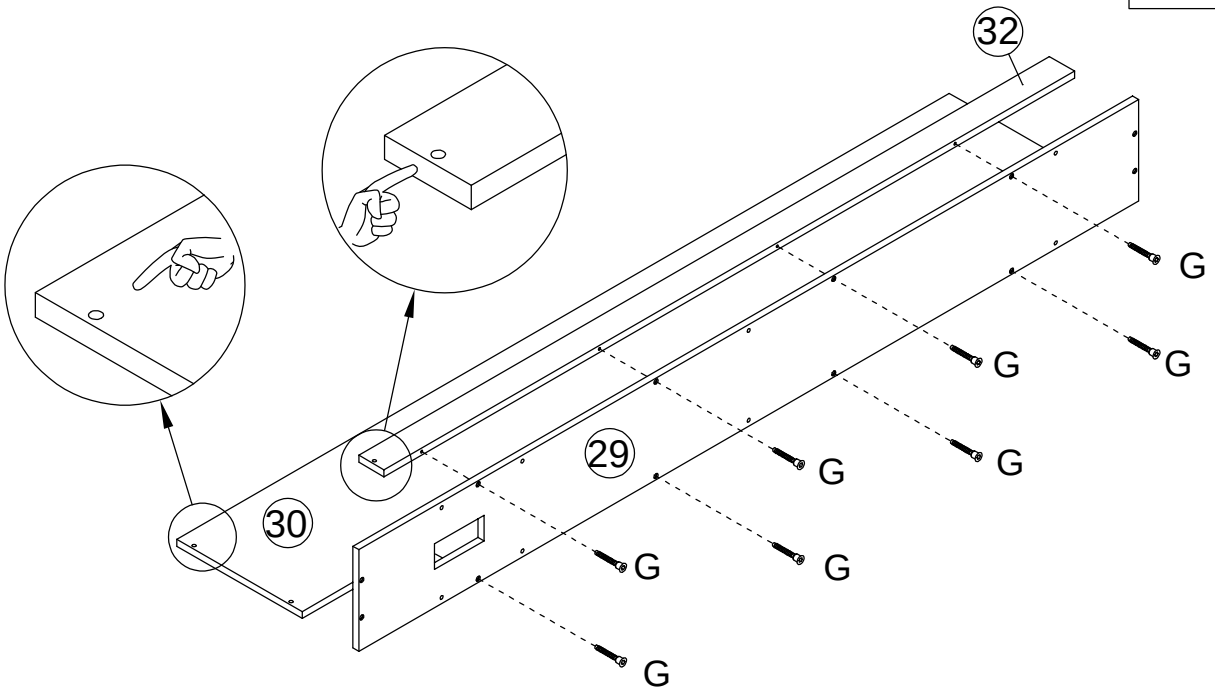


Step 23

G



M5x38

9pcs

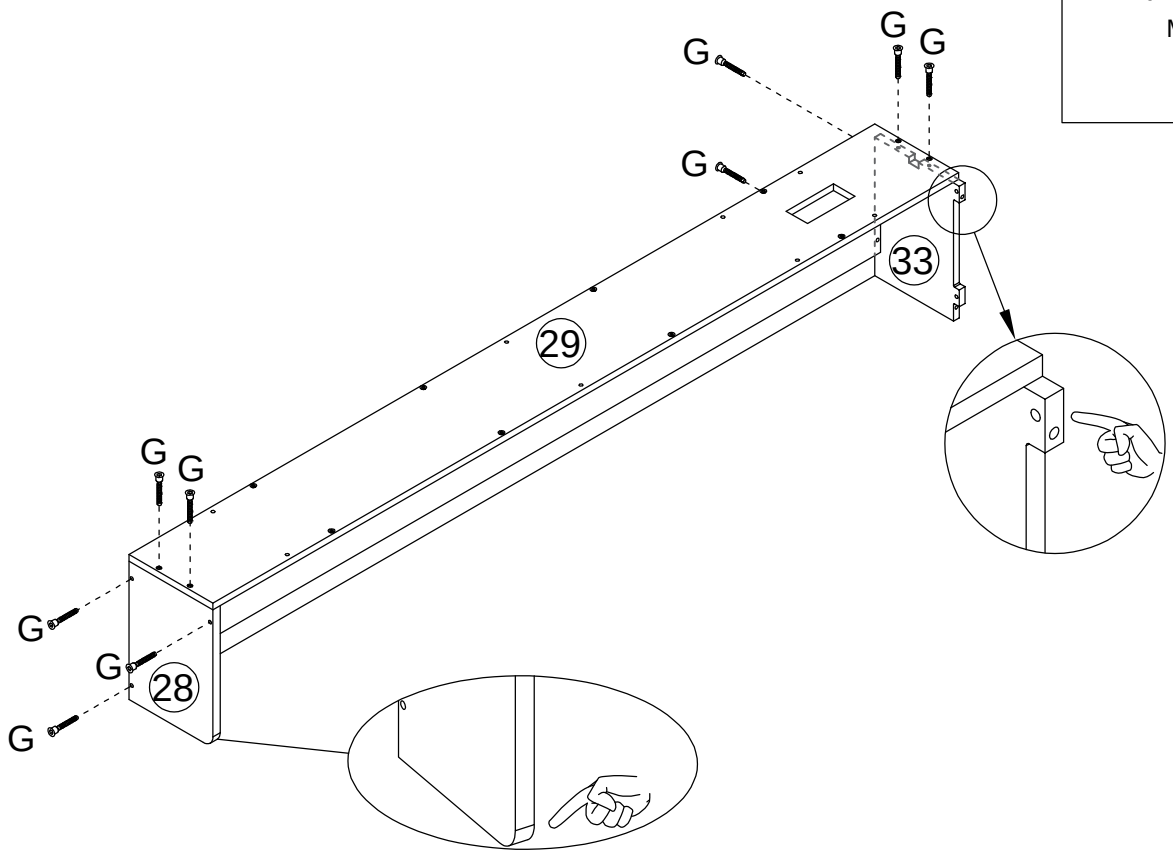

Step 24


H



Ø6x30

2pcs


The hole faces up

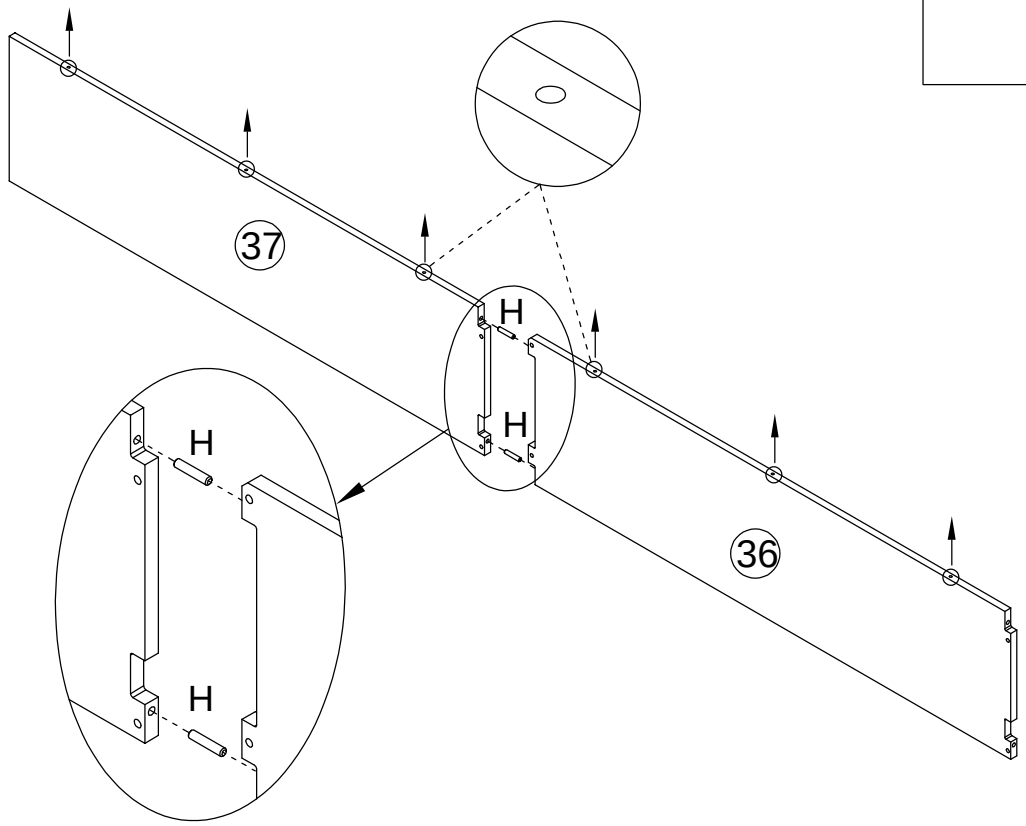

Step 25


The hole faces up

G



M5x38

4pcs

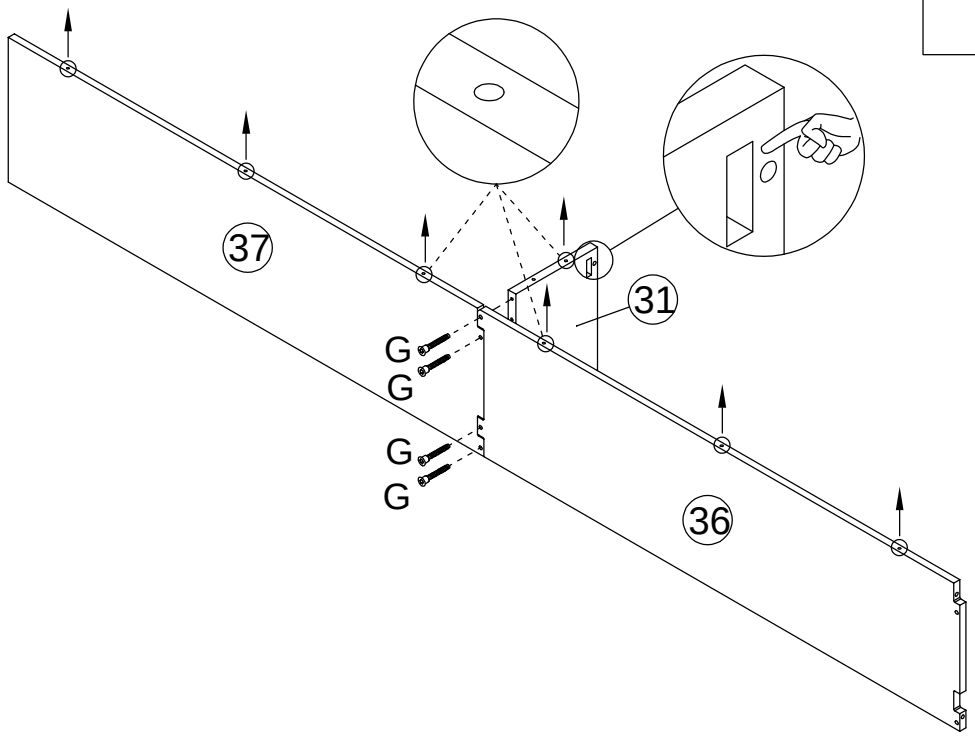


Step 26

H




Ø6x30

2pcs

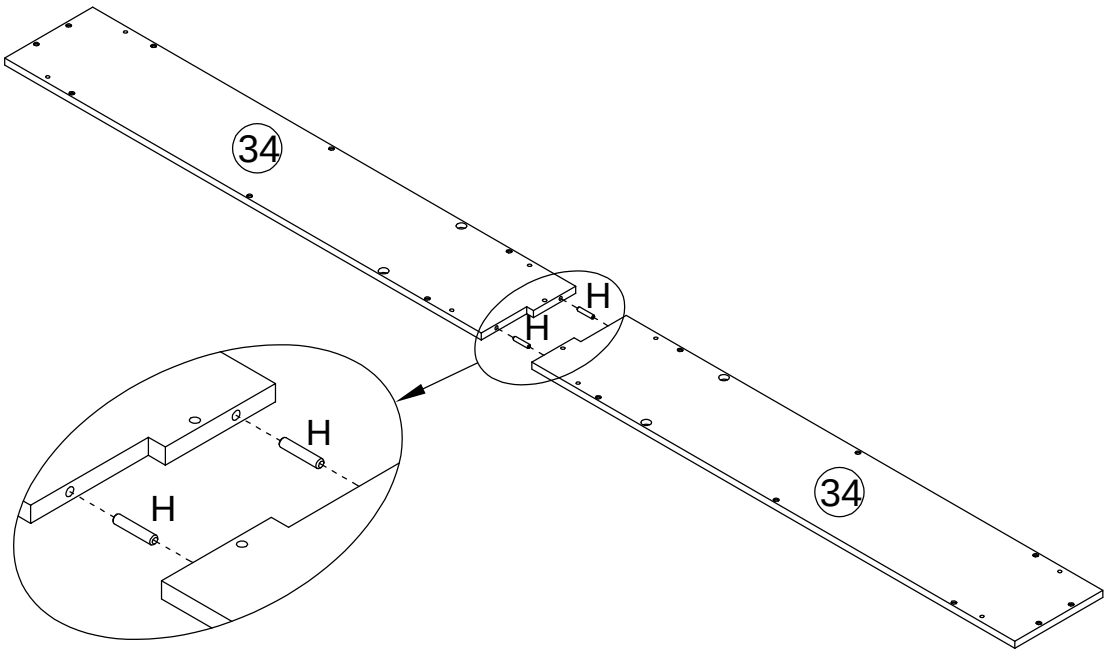


Step 27

G




M5x38

8pcs

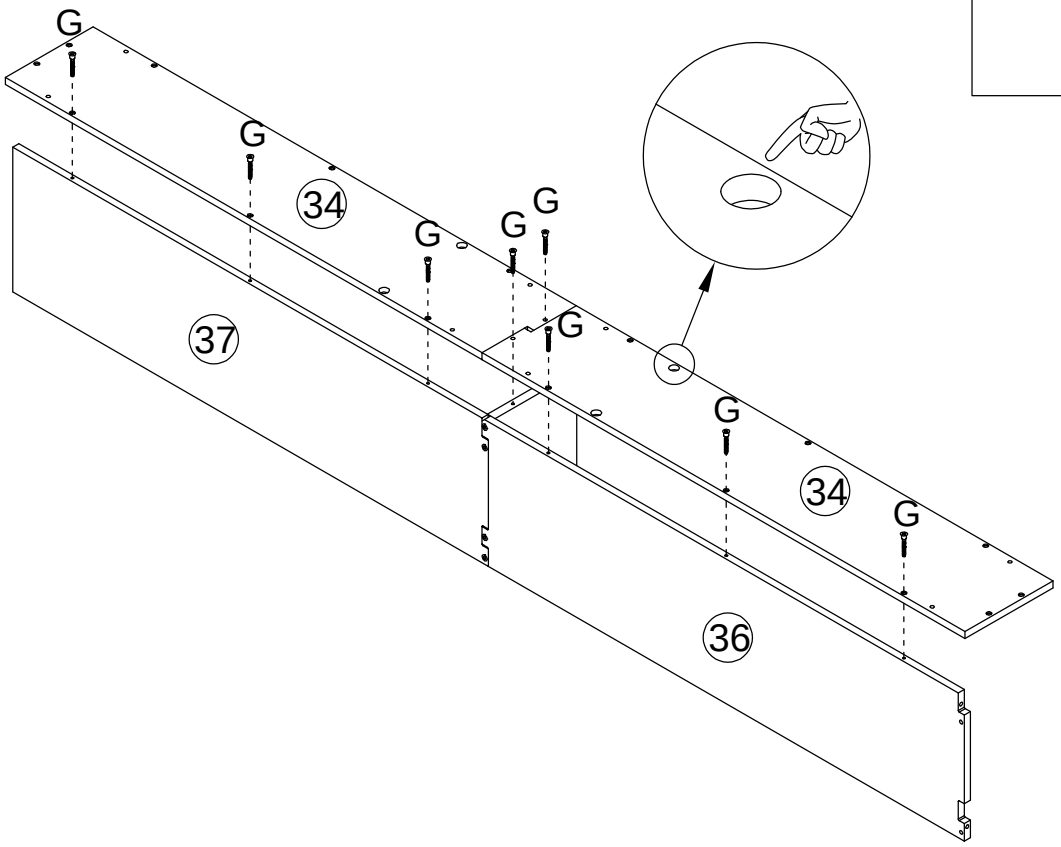

Step 28

I




Ø6x60

1pc


Step 29

G




M5x38

3pcs

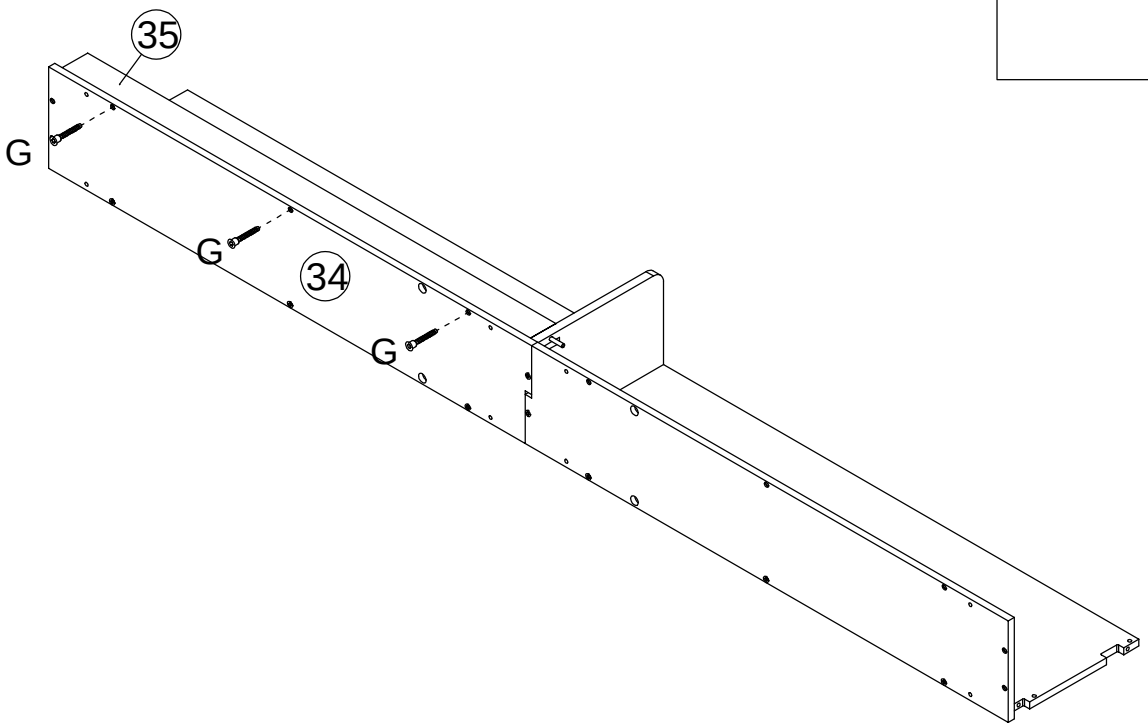


Step 30

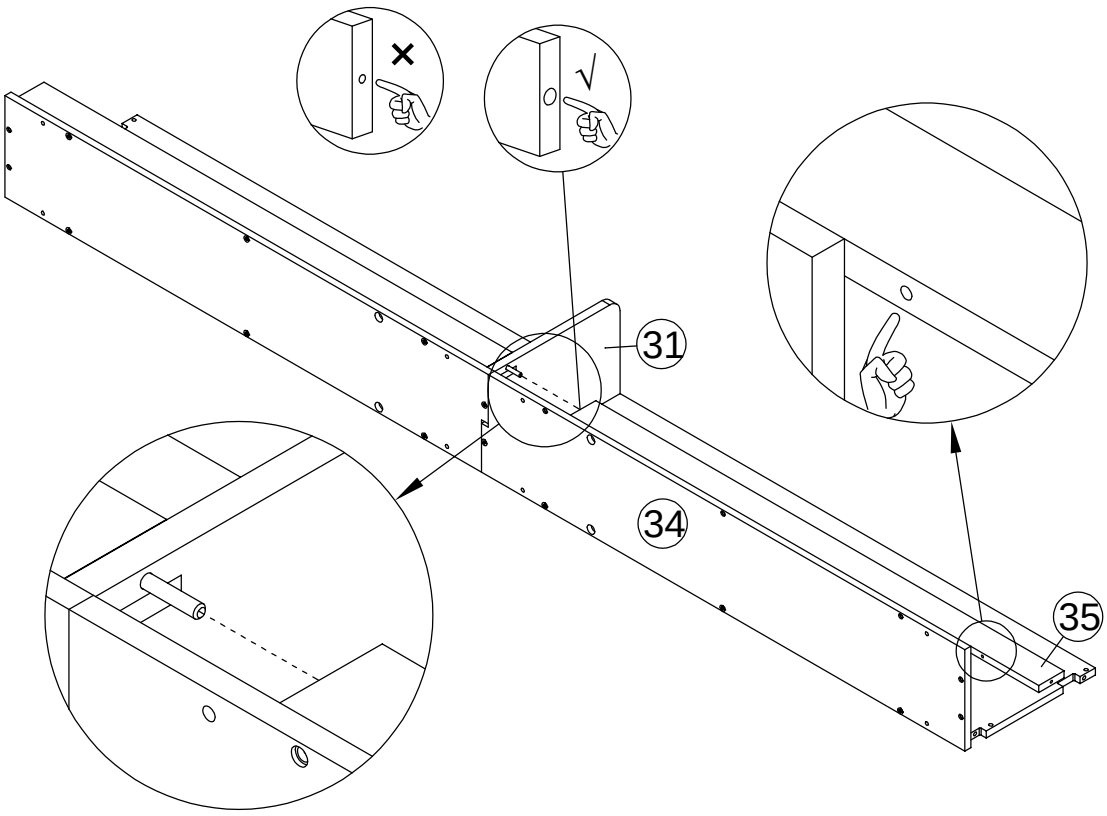


Step 31

G




M5x38

3pcs

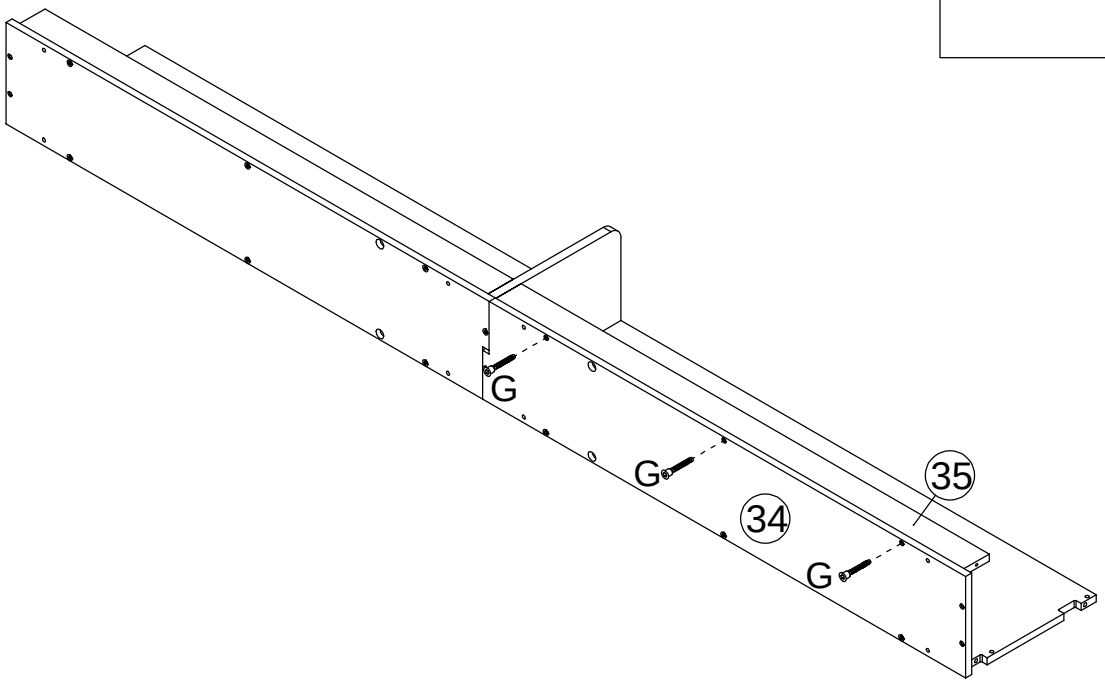


Step 32

G




M5x38

5pcs

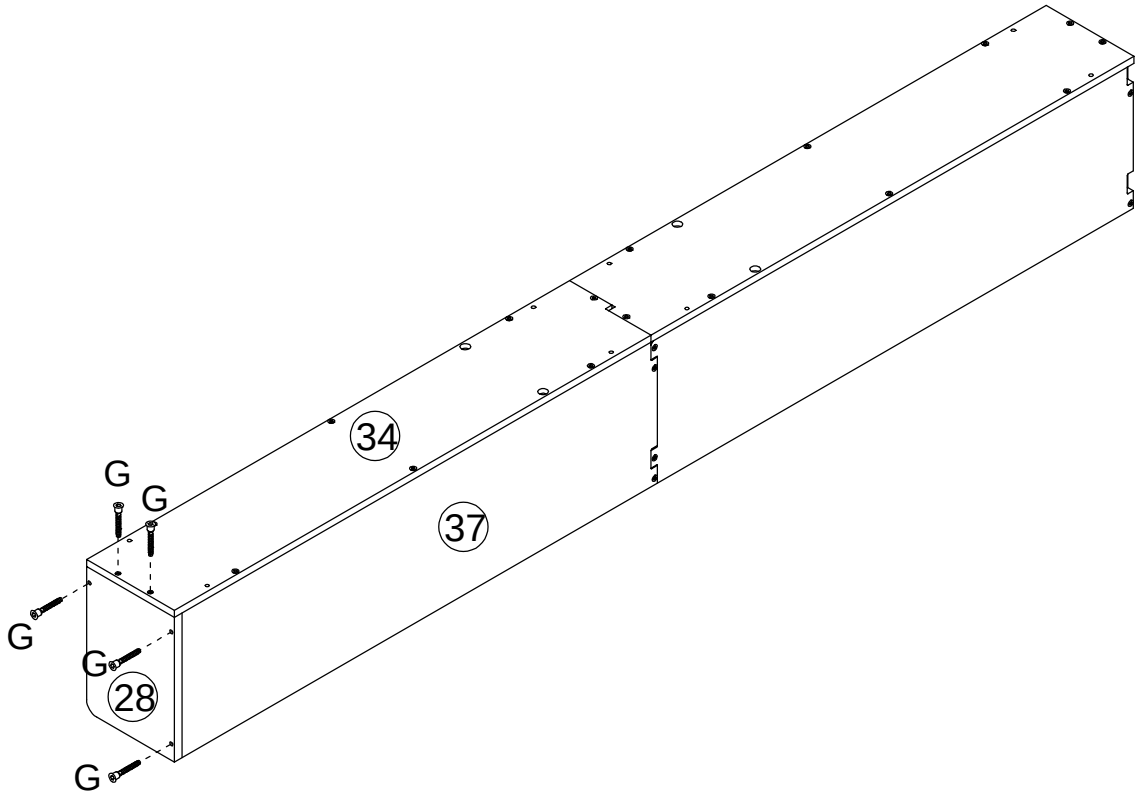


Step 33

G




M5x38

4pcs

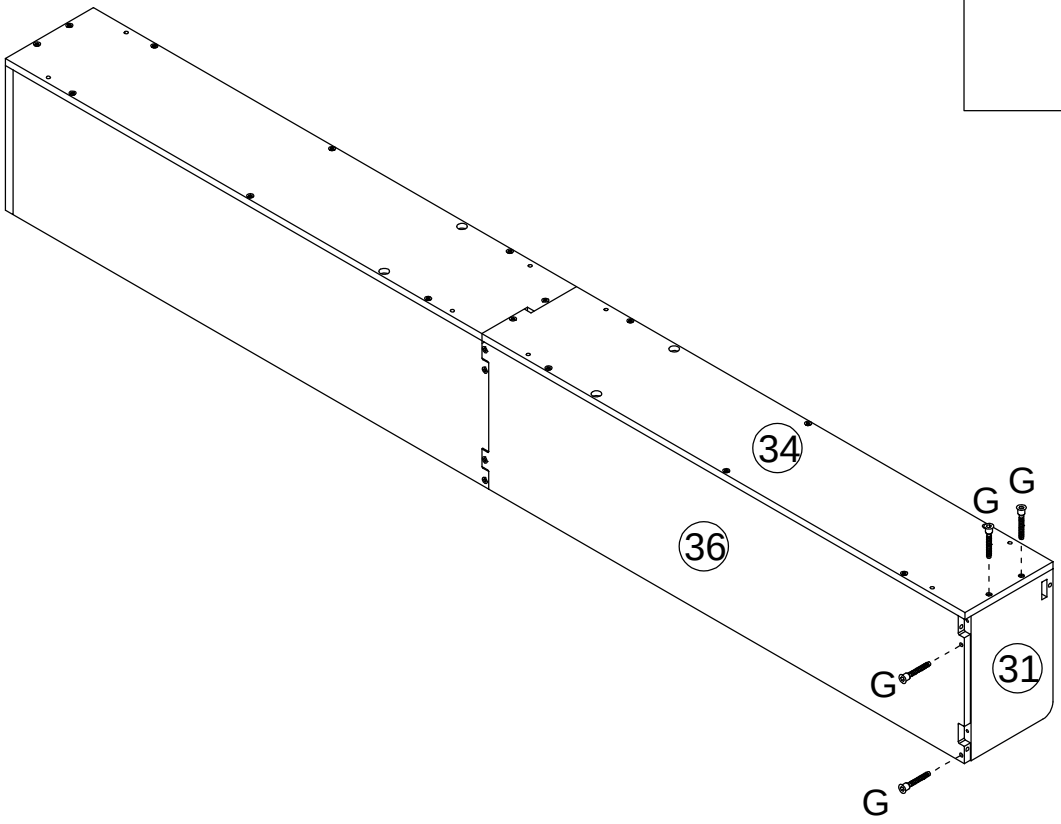


Step 34

B



M6x28

8pcs

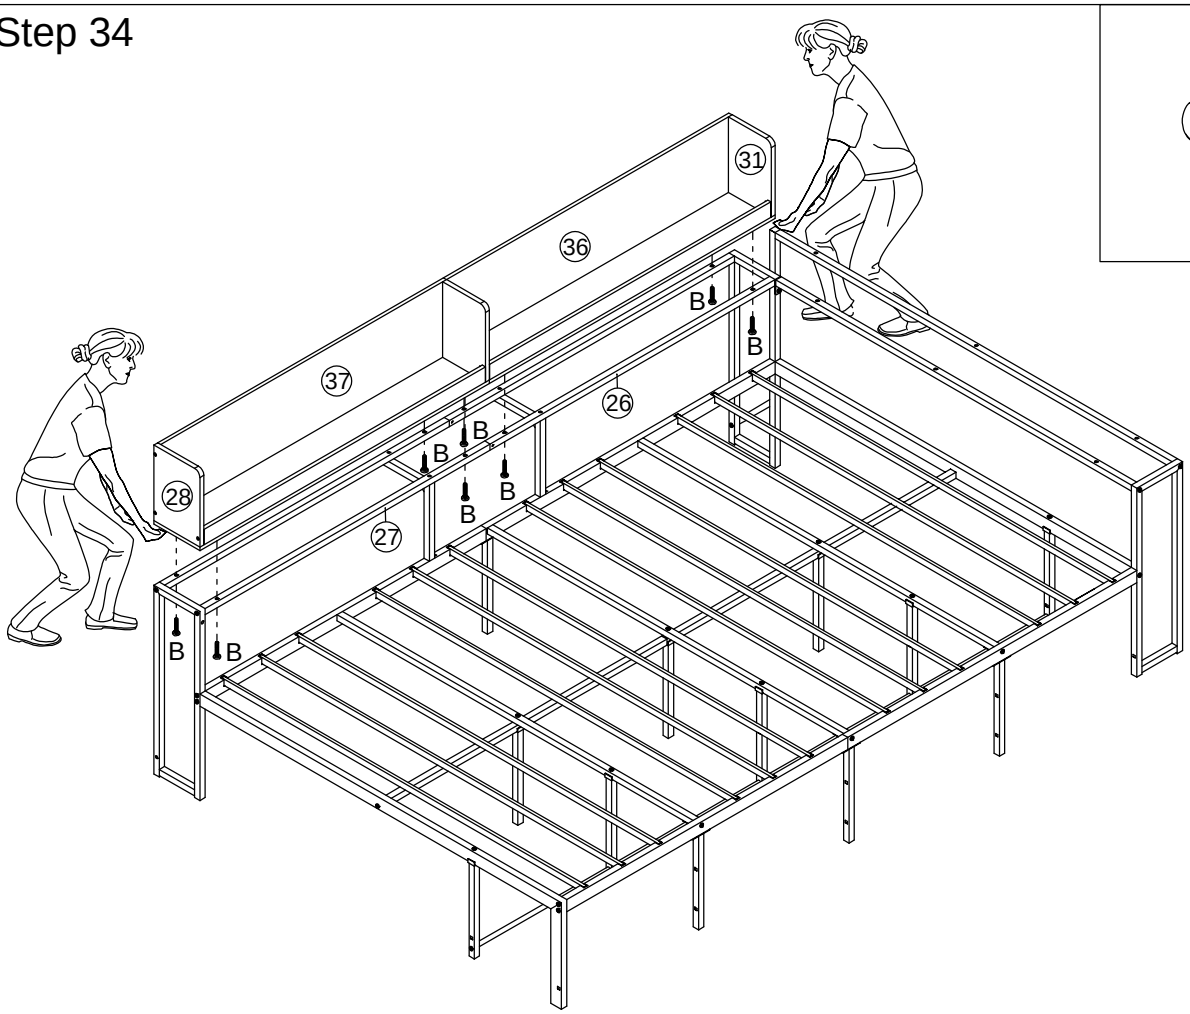


Step 35

H




Ø6x30

2pcs

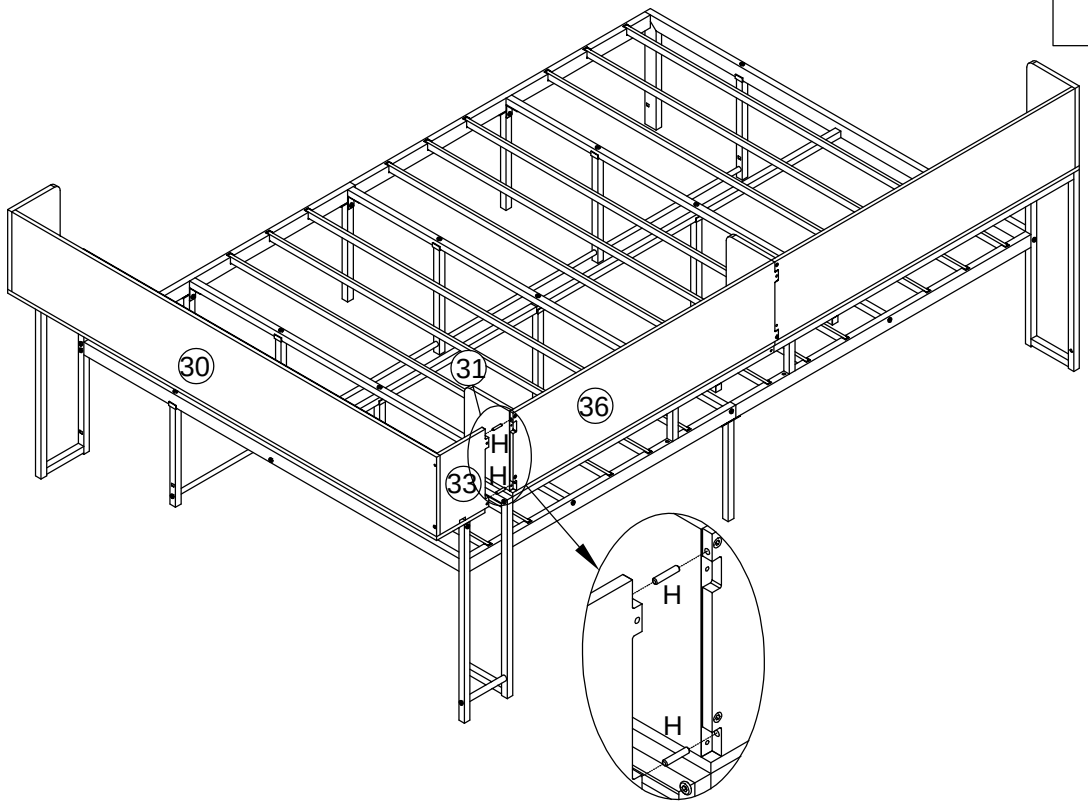


Step 36

G





M5x38


2pcs

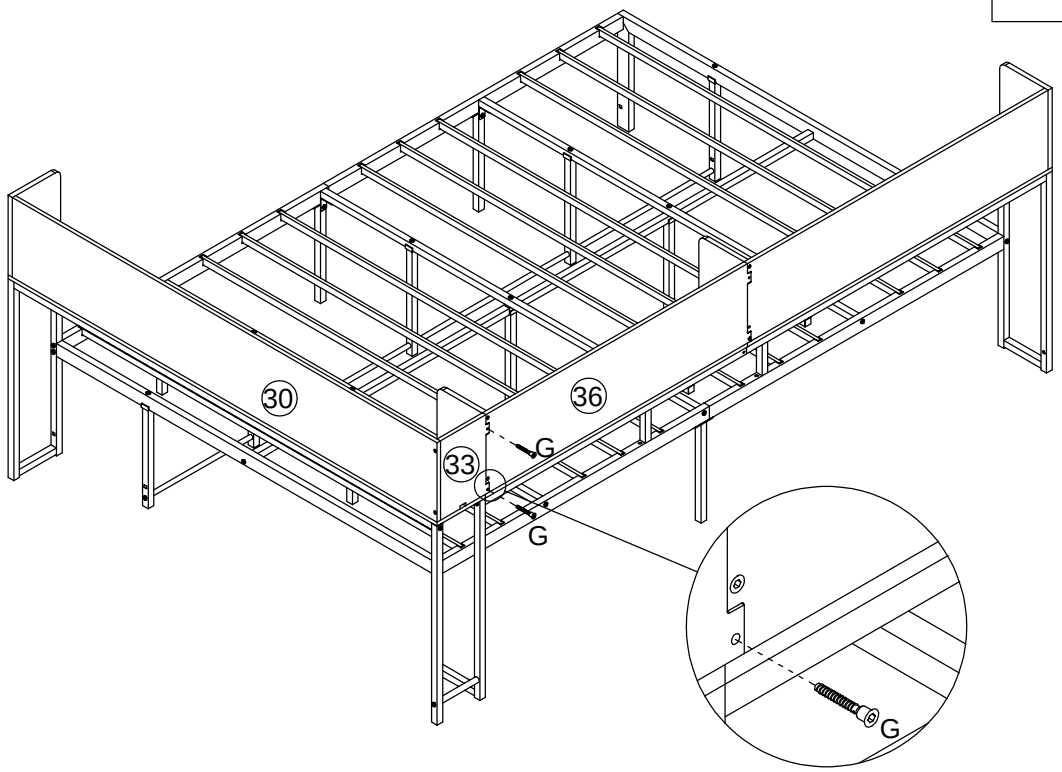


Step 37


B	G
	
M6x28	M5x38
6pcs	1pc



Step 38

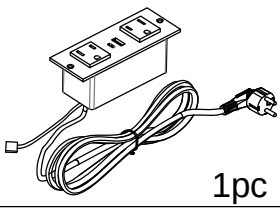
K	L
	
Ø3.5x12	
2pcs	1pc

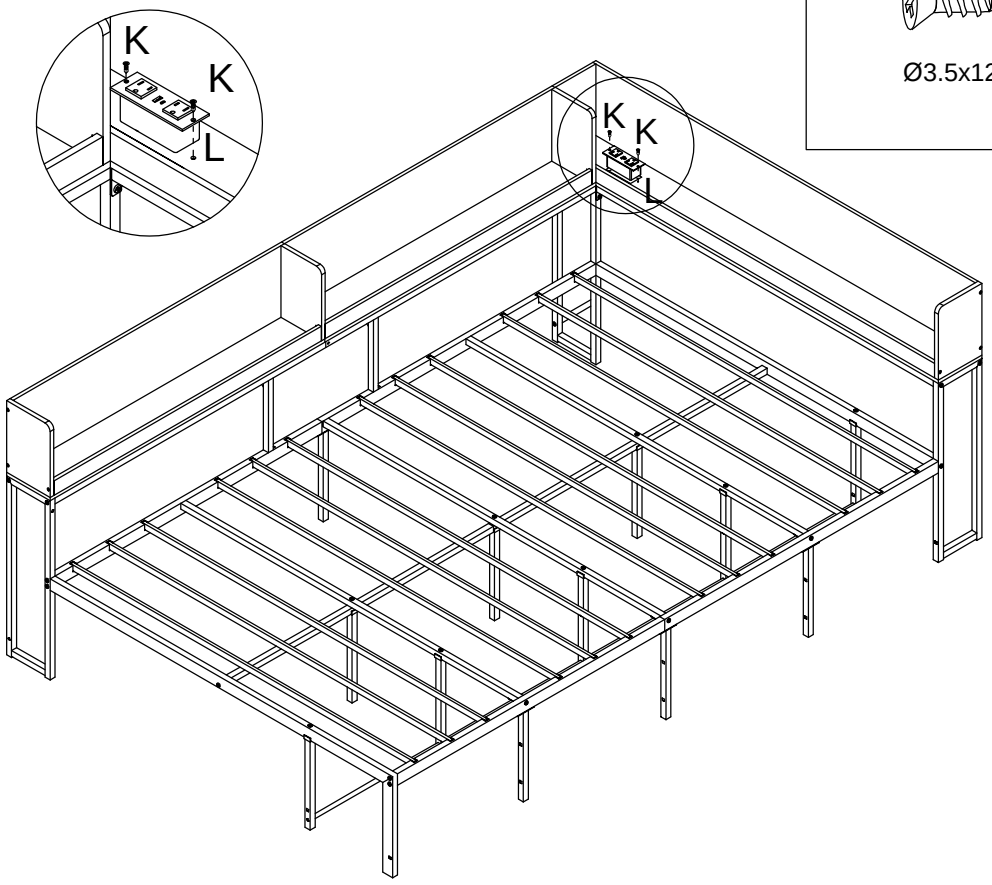


Step 39

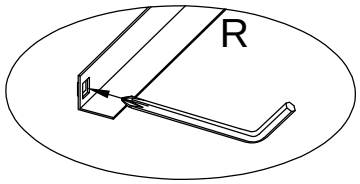

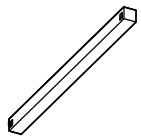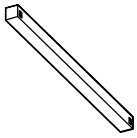
R	S
	
6pcs	6pcs

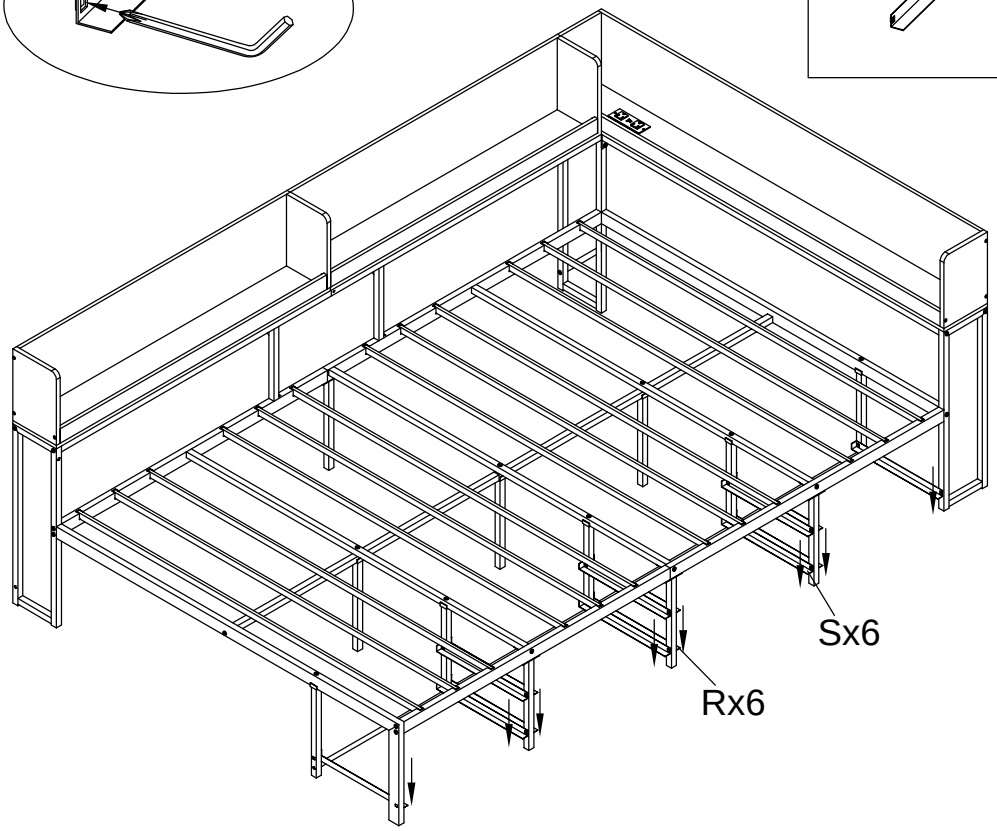


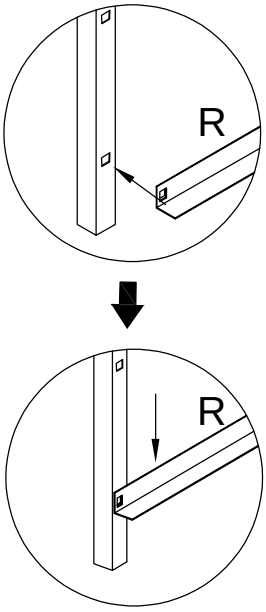


Step 40


Q	P
	
M4x10	
12pcs	6pcs




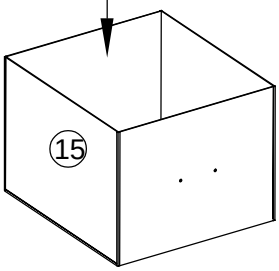


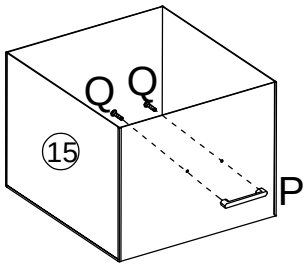

x2

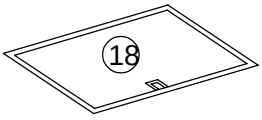


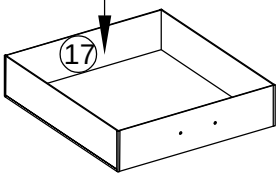

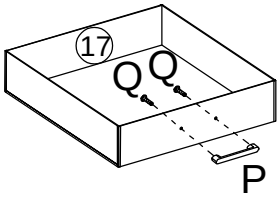


x4


Step 41

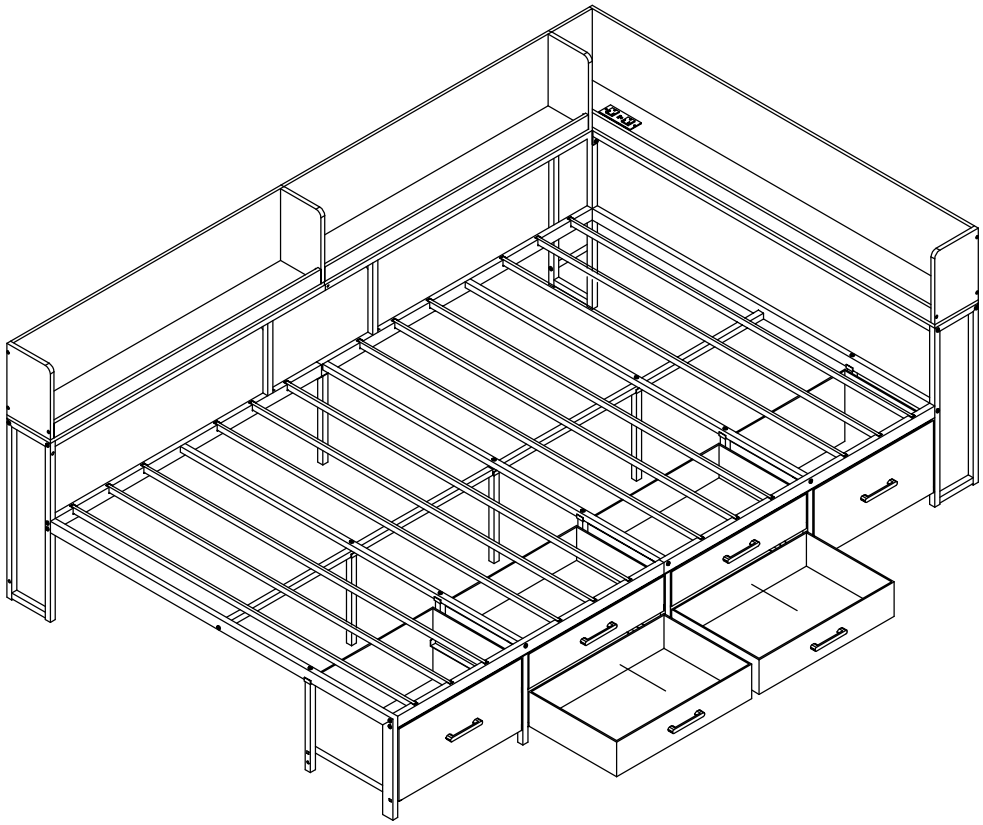

Step 42

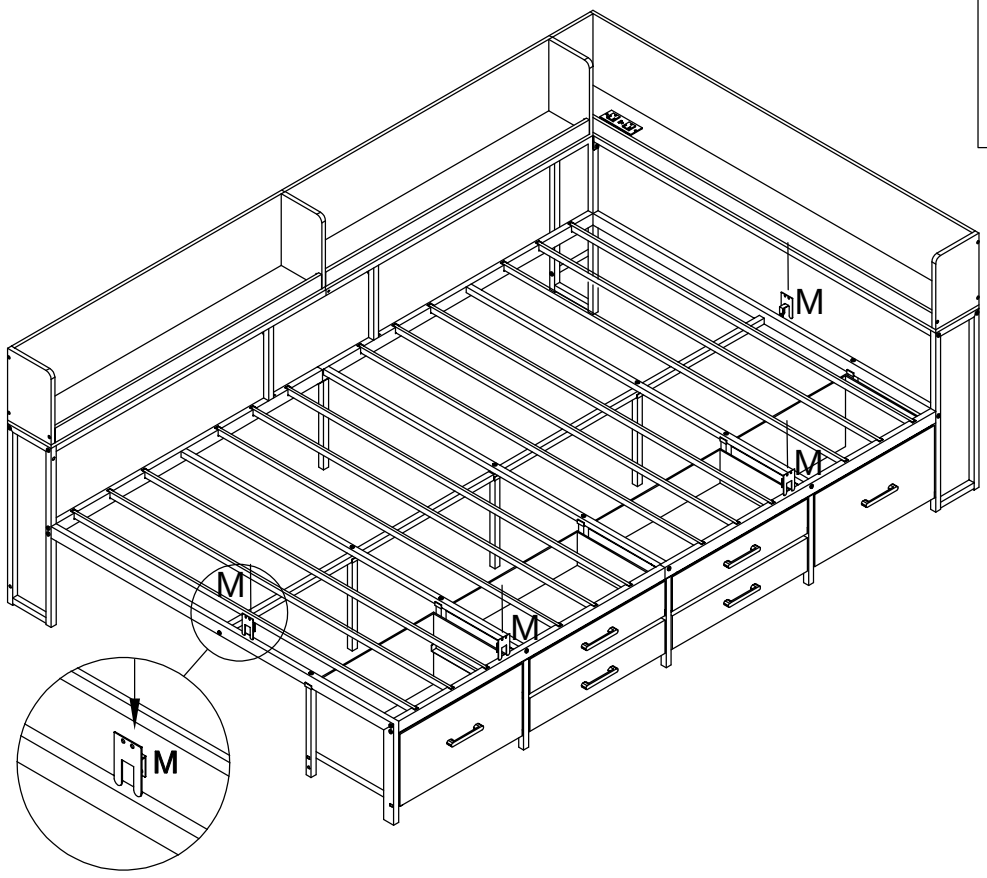


M



4pcs

Step 43

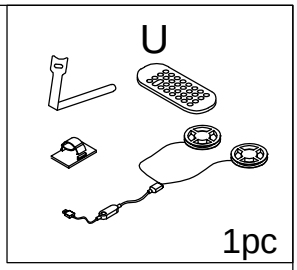

Feed the long light strip through the slots in the two Panel #31s, all the way to Panel #28. Then peel off its adhesive backing and stick it onto the two Panel #35s. For the short light strip, peel off its adhesive backing and stick it onto Panel #32. Finally, both light strips run through Panel #33.

