
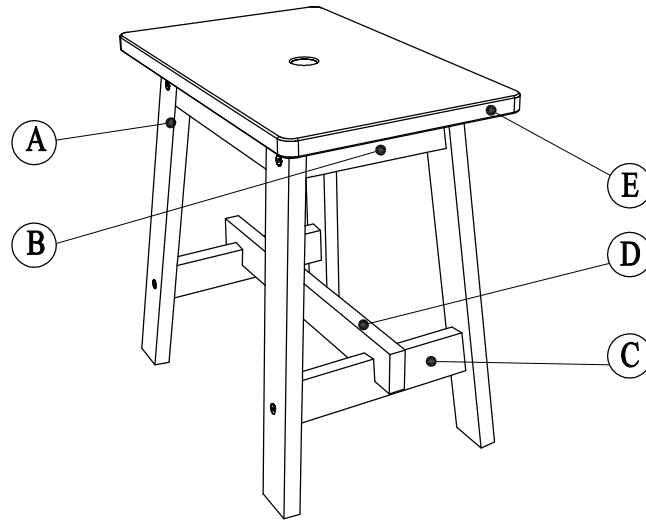




PARTS AND HARDWARE LIST

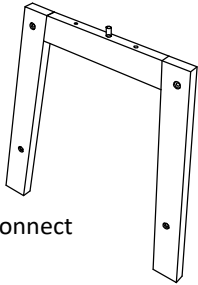


A x 2

Dowel joints to connect
part A to part E


B x 2

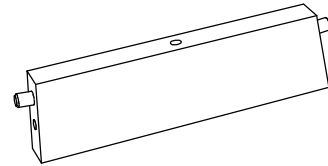


C x 2

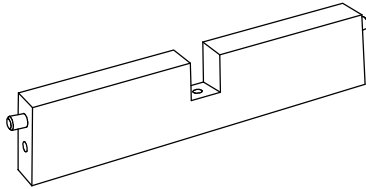

D x 1

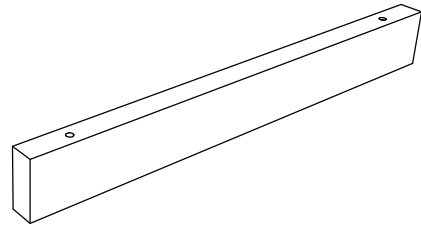


E x 1

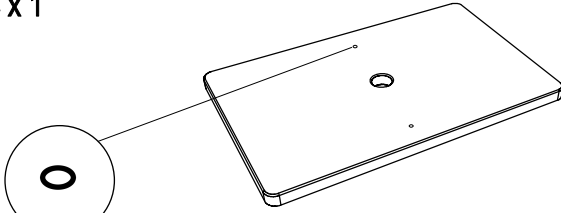


Dowel holes to fix part A to part E

F x 8

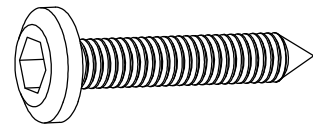


SCREW M6x40

G x 8




SCREW M4x35

H x 1

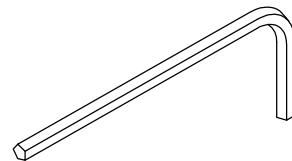

ALLEN KEY 4

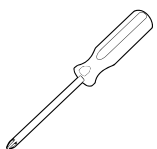

Please **PREPARE**
A PHILLIPS SCREWSDRIVER
to assemble!



*Please check if you have all the parts listed above. Contact Beefurni if you have missing or damaged components.

*Please find the **Accessories Bag** attached to the package's bottom by a **RED STRING**



II - PRODUCT ASSEMBLY:

"DO NOT tighten the screws until all of parts set into correct position"



STEP 1:

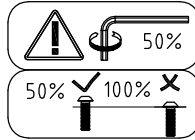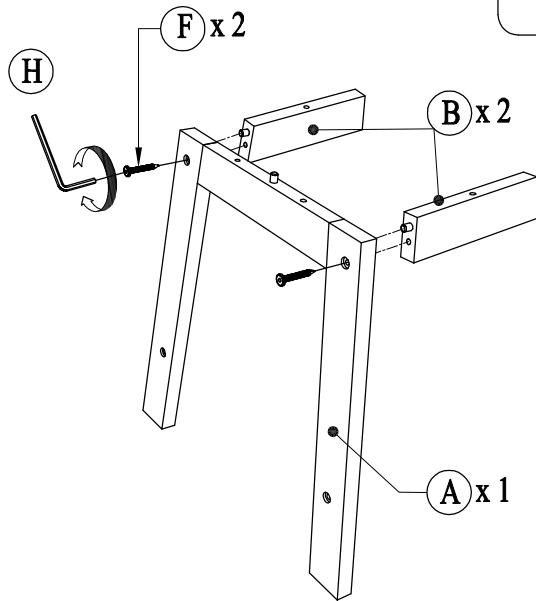



STEP 2:

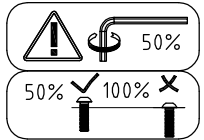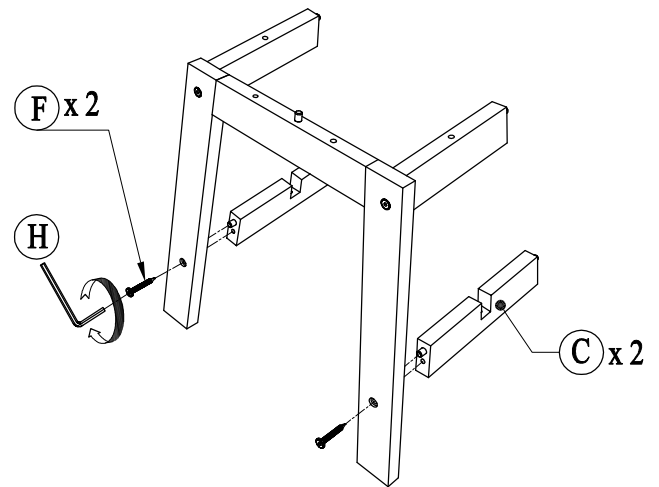

STEP 3:

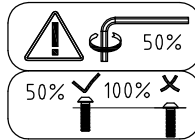
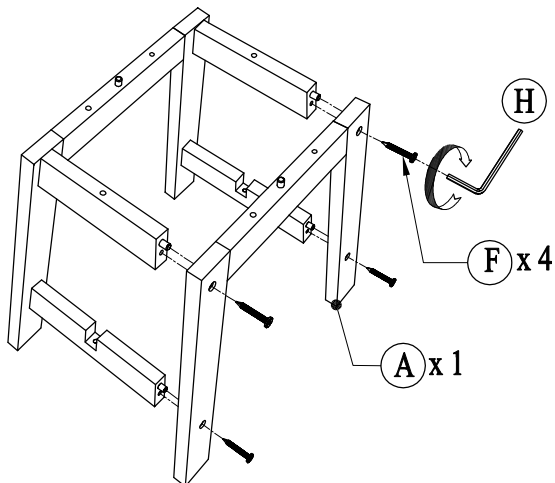


STEP 4:

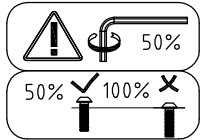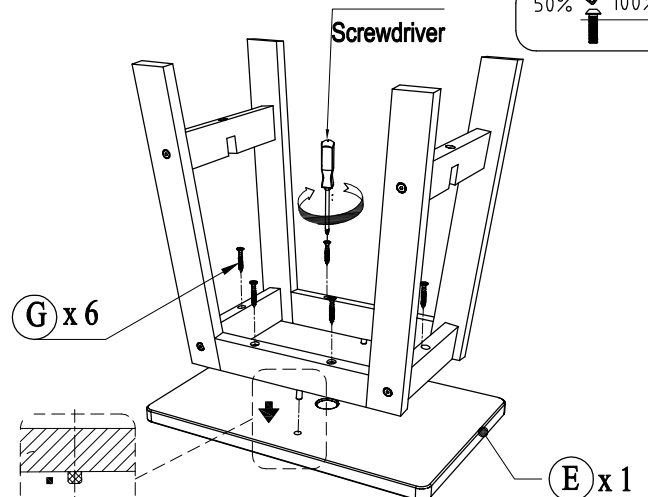

*Please help us note that the back of stool seat (Part E) **DOES NOT** have any pilot holes due to screws (G) are hardwood screws. They can be installed **DIRECTLY** into the seat without splitting the wood.

STEP 5:

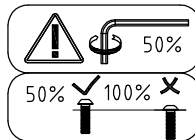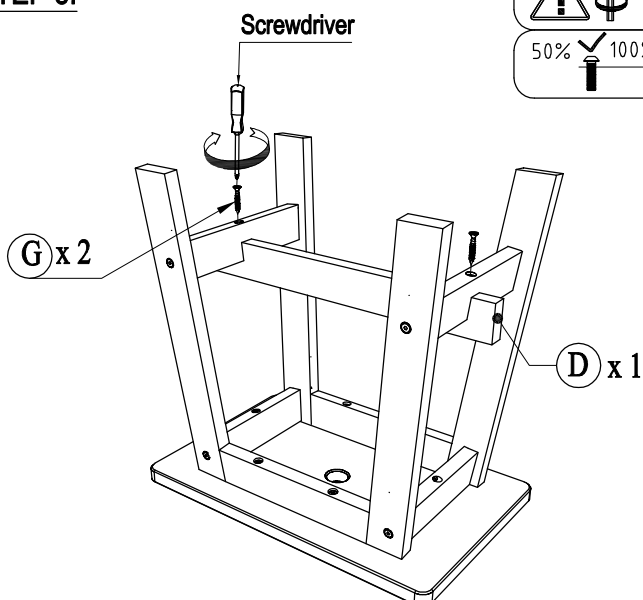

STEP 6: Tighten The Screws

