

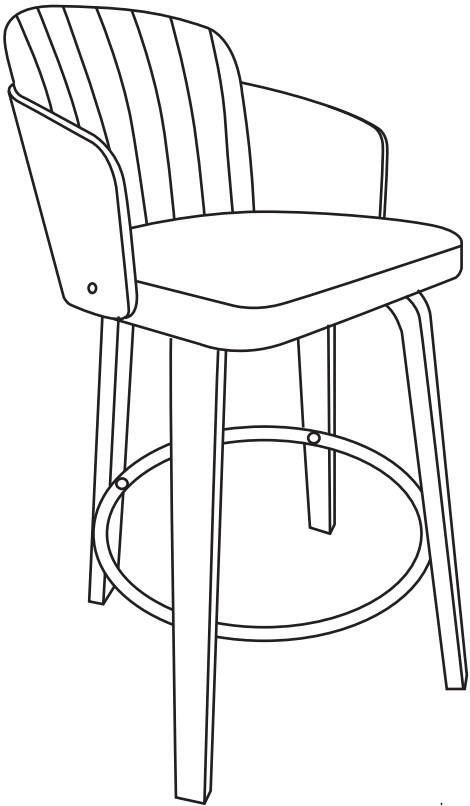
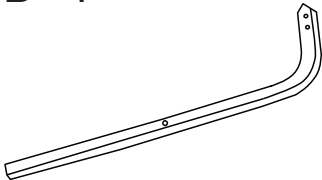

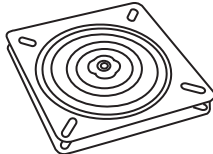




ITEM NO.:V093B




A×1 	B×4 	C×1 	D×1 	E×1 	
F×4+1Ext  M6×30mm	G×10+1Ext  M6×20mm	H×2+1Ext  M6×25mm	I×2  PLASTIC WASHER	J×1  M6	K×1  SPARE FOOTNAIL

1

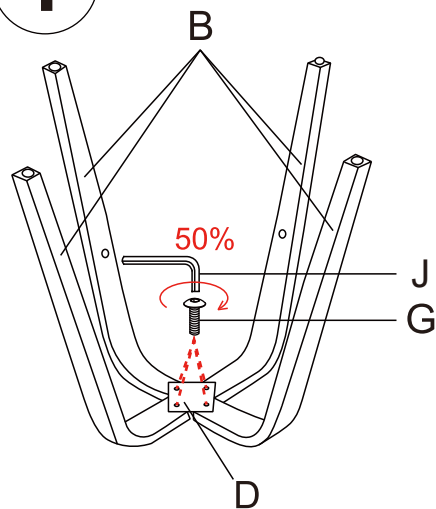


Note:DO NOT tighten the screws(G) in step 1

2

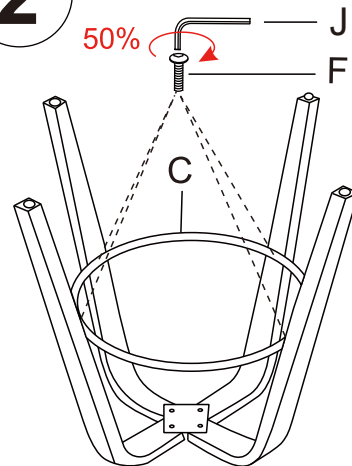


Note:DO NOT tighten the screws(F) in step 2

3

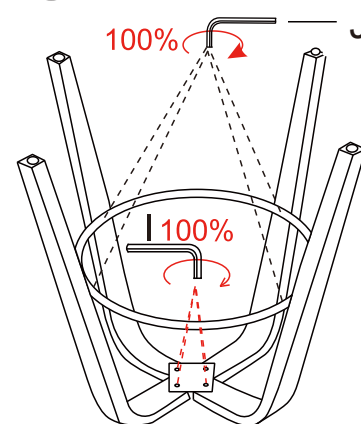


Note:Tighten the screws(G) and screws (F) in step 3


4

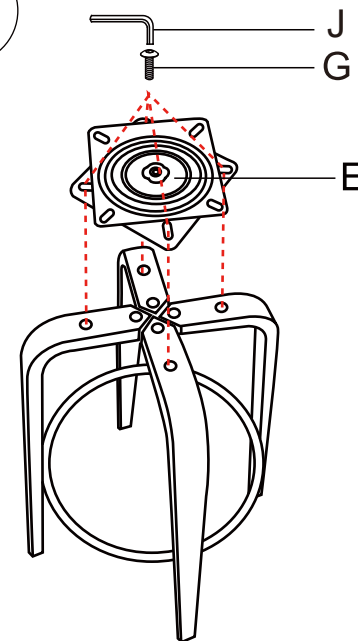


5

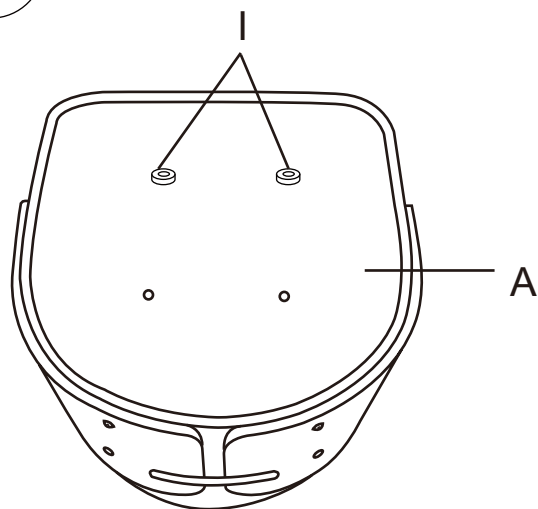

6

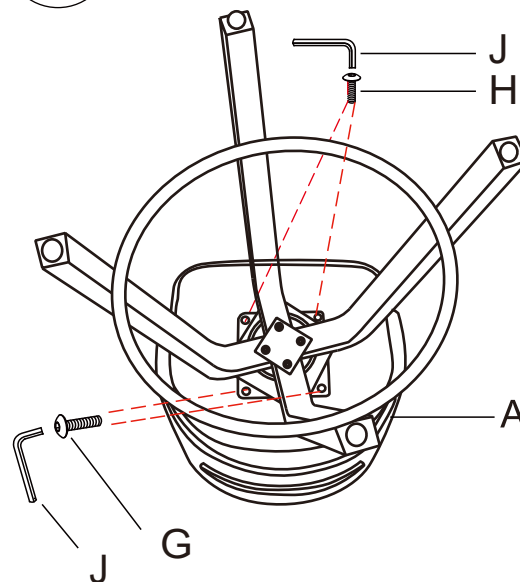

7

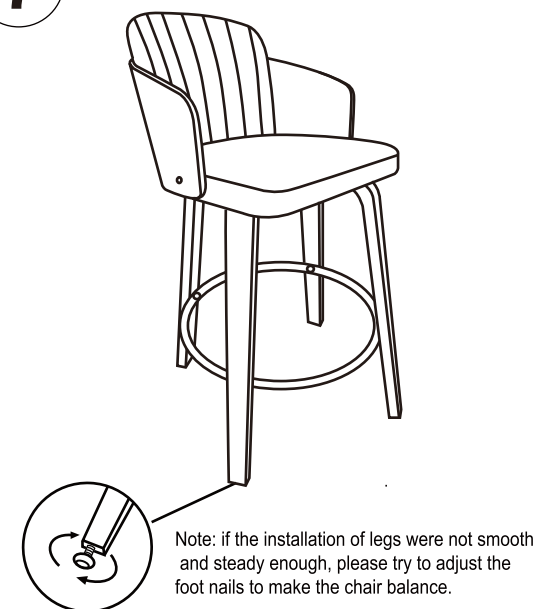

Note: if the installation of legs were not smooth and steady enough, please try to adjust the foot nails to make the chair balance.